



Level



Pressure



Flow



Temperature

Liquid
Analysis

Registration

Systems
Components

Services



Solutions

Technical Information

Proline Promag P 200

Electromagnetic flow measuring system

The device with genuine two-wire technology and for minimized cost of ownership



Application

- Accurate bidirectional measurement of liquids with a minimum conductivity of $\geq 20 \mu\text{S}/\text{cm}$ for chemical applications.
- The electromagnetic measuring principle is unaffected by pressure and temperature. Additionally the flow profile has a minimal effect on the measurement results.

Device properties

- Medium temperature: max. $+150 \text{ }^\circ\text{C}$ ($+302 \text{ }^\circ\text{F}$)
- Nominal diameter: DN 15 to 200 (1/2 to 8")
- Application-specific liner (PFA, PTFE)
- Two-wire aluminium transmitter
- Graphical local display with operation from the outside (Touch Control)
- Communication via 4-20 mA HART
- Ex approvals accepted worldwide: ATEX, IECEx cCSAus (intrinsic safety or flameproof enclosure)

Your benefits

Genuine loop-powered technology for seamless 2-wire integration and robustness in standard process applications

Sizing – correct product selection

Applicator – the reliable, easy-to-use tool for selecting and sizing measuring devices for every application

Installation – simple and efficient

- Compact design
- Suitable for installations in the hazardous area
- Reduced wiring effort due to two-wire technology

Commissioning – reliable and intuitive

Guided parameterization – "Make-it-run" wizards

Operation – increased measurement availability

- Measurement of volume flow
- No pressure loss, no moving parts, immune to vibrations
- Diagnostics; Automatic data restore by HistoROM

Cost-effective Life Cycle Management by W@M







Table of contents

Document information	3	Process	22
Symbols used	3	Medium temperature range	22
Function and system design	4	Conductivity	22
Measuring principle	4	Pressure-temperature ratings	22
Measuring system	5	Pressure tightness	25
Input	5	Flow limit	25
Measured variable	5	Pressure loss	25
Measuring range	5	System pressure	25
Operable flow range	6	Vibrations	26
Output	6	Mechanical construction	27
Output signal	6	Design, dimensions	27
Signal on alarm	7	Weight	29
Load	8	Measuring tube specification	30
Ex connection data	9	Materials	30
Low flow cut off	10	Fitted electrodes	31
Galvanic isolation	10	Process connections	31
Protocol-specific data	10	Surface roughness	31
Power supply	11	Operability	31
Terminal assignment	11	Operating concept	31
Supply voltage	11	Local operation	32
Power consumption	12	Remote operation	33
Current consumption	12	Certificates and approvals	34
Power supply failure	12	CE mark	34
Electrical connection	12	C-Tick symbol	34
Potential equalization	14	Ex approval	34
Terminals	16	Other standards and guidelines	35
Cable entries	16	Ordering information	35
Cable specification	16	Application packages	35
Overvoltage protection	17	Diagnostics functions	35
Performance characteristics	17	Accessories	36
Reference operating conditions	17	Device-specific accessories	36
Maximum measured error	17	Communication-specific accessories	36
Repeatability	18	Service-specific accessories	37
Influence of ambient temperature	18	System components	37
Installation	18	Documentation	38
Mounting location	18	Standard documentation	38
Orientation	19	Supplementary device-dependent documentation	38
Inlet and outlet runs	20	Registered trademarks	38
Adapters	20		
Special mounting instructions	21		
Environment	21		
Ambient temperature range	21		
Storage temperature	21		
Degree of protection	21		
Shock resistance	22		
Vibration resistance	22		
Mechanical load	22		
Electromagnetic compatibility (EMC)	22		








Document information

Symbols used


Electrical symbols



Symbol	Meaning
 A0011197	Direct current A terminal to which DC voltage is applied or through which direct current flows.
 A0011198	Alternating current A terminal to which alternating voltage is applied or through which alternating current flows.
 A0017381	Direct current and alternating current <ul style="list-style-type: none"> ■ A terminal to which alternating voltage or DC voltage is applied. ■ A terminal through which alternating current or direct current flows.
 A0011200	Ground connection A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
 A0011199	Protective ground connection A terminal which must be connected to ground prior to establishing any other connections.
 A0011201	Equipotential connection A connection that has to be connected to the plant grounding system: This may be a potential equalization line or a star grounding system depending on national or company codes of practice.

Symbols for certain types of information

Symbol	Meaning
 A0011182	Allowed Indicates procedures, processes or actions that are allowed.
 A0011183	Preferred Indicates procedures, processes or actions that are preferred.
 A0011184	Forbidden Indicates procedures, processes or actions that are forbidden.
 A0011193	Tip Indicates additional information.
 A0011194	Reference to documentation Refers to the corresponding device documentation.
 A0011195	Reference to page Refers to the corresponding page number.
 A0011196	Reference to graphic Refers to the corresponding graphic number and page number.

Symbols in graphics

Symbol	Meaning
1, 2, 3, ...	Item numbers
1., 2., 3., ...	Series of steps
A, B, C, ...	Views
A-A, B-B, C-C, ...	Sections
 A0013441	Flow direction


Symbol	Meaning
 A0011187	Hazardous area Indicates a hazardous area.
 A0011188	Safe area (non-hazardous area) Indicates a non-hazardous area.

Function and system design

Measuring principle

Following *Faraday's law of magnetic induction*, a voltage is induced in a conductor moving through a magnetic field.

In the electromagnetic measuring principle, the flowing medium is the moving conductor. The voltage induced is proportional to the flow velocity and is supplied to the amplifier by means of two measuring electrodes. The flow volume is calculated via the pipe cross-sectional area. The DC magnetic field is created through a switched direct current of alternating polarity.

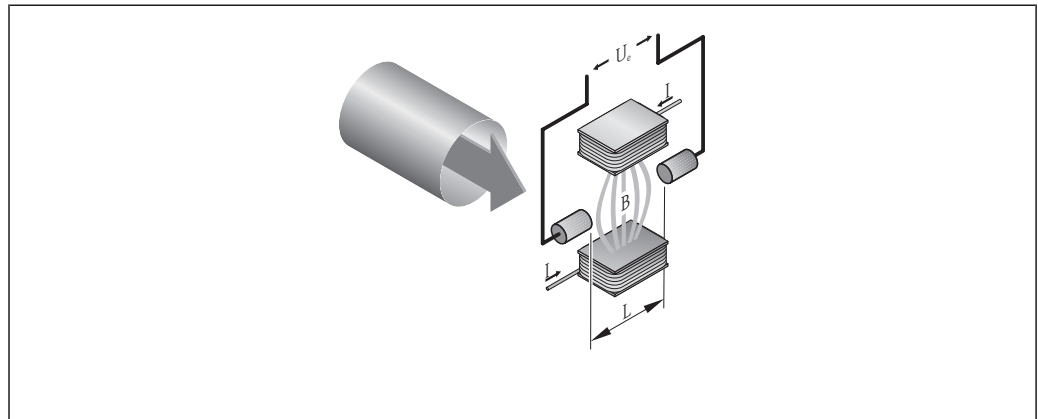


$$U_e = B \cdot L \cdot v \quad ; \quad Q = A \cdot v$$

- U_e Induced voltage
- B Magnetic induction (magnetic field)
- L Electrode spacing
- v Flow velocity
- Q Volume flow
- A Piping cross-section
- I Current


Measuring system

The device consists of a transmitter and a sensor.
 One device version is available: compact version, transmitter and sensor form a mechanical unit.

Transmitter
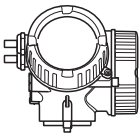
<p>Promag 200</p>  <p style="text-align: right; font-size: small;">A0013471</p>	<p>Materials: Aluminum coating AlSi10Mg</p> <p>Configuration:</p> <ul style="list-style-type: none"> ■ External operation via four-line, illuminated local display with touch control and guided menus ("Make-it-run" wizards) for applications ■ Via operating tools (e.g. FieldCare)
---	--

Sensor
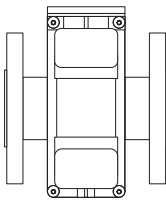
<p>Promag P</p>  <p style="text-align: right; font-size: small;">A0017703</p>	<p>Nominal diameter range: DN 15 to 200 (½ to 8")</p> <p>Materials:</p> <ul style="list-style-type: none"> ■ Sensor housing: aluminum coated AlSi10Mg ■ Measuring tubes: stainless steel 1.4301/304, 1.4306/304L ■ Liner: PFA, PTFE ■ Process connections: 1.0425/316L, 1.4571/316L, A105, C22, F316L, FE 410W B, H11, S235JRG2 ■ Electrodes: 1.4435/316L, Alloy C-22, tantalum, platinum ■ Seals: as per DIN EN 1514-1 ■ Ground disks: 1.4435/316L, Alloy C-22, tantalum
---	--

Input

Measured variable

Direct measured variables

Volume flow (proportional to induced voltage)

Calculated measured variables

Mass flow

Measuring range

Typically $v = 0.01$ to 10 m/s (0.03 to 33 ft/s) with the specified accuracy



Flow characteristic values in SI units

Nominal diameter		Recommended flow min./max. full scale value ($v \sim 0.310$ m/s/ [dm ³ /min])	Factory settings		
			Full scale value current output ($v \sim 2.5$ m/s) [dm ³ /min]	Pulse value (~ 2 pulse/s) [dm ³]	Low flow cut off ($v \sim 0.04$ m/s) [dm ³ /min]
[mm]	[in]				
15	½	4 to 100	25	0.2	0.5
25	1	9 to 300	75	0.5	1
32	–	15 to 500	125	1	2
40	1 ½	25 to 700	200	1.5	3
50	2	35 to 1 100	300	2.5	5
65	–	60 to 2000	500	5	8
80	3	90 to 3000	750	5	12
100	4	145 to 4700	1 200	10	20
125	–	220 to 7 500	1 850	15	30

Nominal diameter		Recommended flow min./max. full scale value (v ~ 0.310 m/s/ [dm ³ /min])	Factory settings		
[mm]	[in]		Full scale value current output (v ~ 2.5 m/s) [dm ³ /min]	Pulse value (~ 2 pulse/s) [dm ³]	Low flow cut off (v ~ 0.04 m/s) [dm ³ /min]
150	6	20 to 600 m ³ /h	150 m ³ /h	0.03 m ³	2.5 m ³ /h
200	8	35 to 1 100 m ³ /h	300 m ³ /h	0.05 m ³	5 m ³ /h

Flow characteristic values in US units

Nominal diameter		Recommended flow min./max. full scale value (v ~ 0.3/10 m/s [gal/min])	Factory settings		
[in]	[mm]		Full scale value current output (v ~ 2.5 m/s) [gal/min]	Pulse value (~ 2 pulse/s) [gal]	Low flow cut off (v ~ 0.04 m/s) [gal/min]
½	15	1.0 to 27	6	0.05	0.10
1	25	2.5 to 80	18	0.2	0.25
–	32	4 to 130	30	0.2	0.5
1 ½	40	7 to 190	50	0.5	0.75
2	50	10 to 300	75	0.5	1.25
–	65	16 to 500	130	1	2
3	80	24 to 800	200	2	2.5
4	100	40 to 1 250	300	2	4
–	125	60 to 1 950	450	5	7
6	150	90 to 2 650	600	5	12
8	200	155 to 4 850	1 200	10	15

 To calculate the measuring range, use the *Applicator* sizing tool (→  37)

Recommended measuring range

"Flow limit" section (→  25)

Operable flow range

Over 1000 : 1


Output

Output signal

Current output

Current output	4-20 mA HART (passive)
Resolution	< 1 µA
Damping	Adjustable:0.0 to 999 s
Assignable measured variables	<ul style="list-style-type: none"> ■ Volume flow ■ Mass flow

Pulse/frequency/switch output

Function	Can be set to pulse, frequency or switch output
Version	Passive, open collector
Maximum input values	<ul style="list-style-type: none"> ■ DC 35 V ■ 50 mA  For information on the Ex connection values (→ 9)
Voltage drop	<ul style="list-style-type: none"> ■ For ≤ 2 mA: 2 V ■ For 10 mA: 8 V
Residual current	≤ 0.05 mA
Pulse output	
Pulse width	Adjustable:5 to 2000 ms
Maximum pulse rate	100 Impulse/s
Pulse value	Adjustable
Assignable measured variables	<ul style="list-style-type: none"> ■ Volume flow ■ Mass flow
Frequency output	
Output frequency	Adjustable:0 to 1000 Hz
Damping	Adjustable:0 to 999 s
Pulse/pause ratio	1:1
Assignable measured variables	<ul style="list-style-type: none"> ■ Volume flow ■ Mass flow
Switch output	
Switching behavior	Binary, conductive or non-conductive
Switching delay	Adjustable:0 to 100 s
Number of switching cycles	Unlimited
Assignable functions	<ul style="list-style-type: none"> ■ Off ■ On ■ Diagnostic behavior ■ Limit value <ul style="list-style-type: none"> - Volume flow - Mass flow ■ Flow direction monitoring ■ Status <ul style="list-style-type: none"> - Empty pipe detection - Low flow cut off

Signal on alarm

Depending on the interface, failure information is displayed as follows:

Current output

4-20 mA

Failure mode	Selectable (as per NAMUR recommendation NE 43): <ul style="list-style-type: none"> ■ Minimum value: 3.6 mA ■ Maximum value: 22 mA ■ Defined value:3.59 to 22.5 mA ■ Actual value ■ Last valid value
---------------------	--

HART

Device diagnostics	Device condition can be read out via HART Command 48
---------------------------	--

Pulse/frequency/switch output

Pulse output	
Failure mode	Choose from: <ul style="list-style-type: none"> ■ Actual value ■ No pulses
Frequency output	
Failure mode	Choose from: <ul style="list-style-type: none"> ■ Actual value ■ Defined value: 0 to 1 250 Hz ■ 0 Hz
Switch output	
Failure mode	Choose from: <ul style="list-style-type: none"> ■ Current status ■ Open ■ Closed

Local display

Plain text display	With information on cause and remedial measures
Backlight	Additionally for device version with SD03 local display: red lighting indicates a device error.



Status signal as per NAMUR recommendation NE 107

Operating tool

- Via digital communication: HART protocol
- Via service interface

Plain text display	With information on cause and remedial measures
---------------------------	---



Additional information on remote operation (→ 33)


Load

Load for current output: 0 to 500 Ω , depending on the external supply voltage of the power supply unit

Calculation of the maximum load

Depending on the supply voltage of the power supply unit (U_S), the maximum load (R_B) including line resistance must be observed to ensure adequate terminal voltage at the device. In doing so, observe the minimum terminal voltage (→ 11)

- For $U_S = 18$ to 18.9 V: $R_B \leq (U_S - 18 \text{ V}) : 0.0036 \text{ A}$
- For $U_S = 18.9$ to 24.5 V: $R_B \leq (U_S - 13.5 \text{ V}) : 0.022 \text{ A}$
- For $U_S = 24.5$ to 30 V: $R_B \leq 500 \Omega$

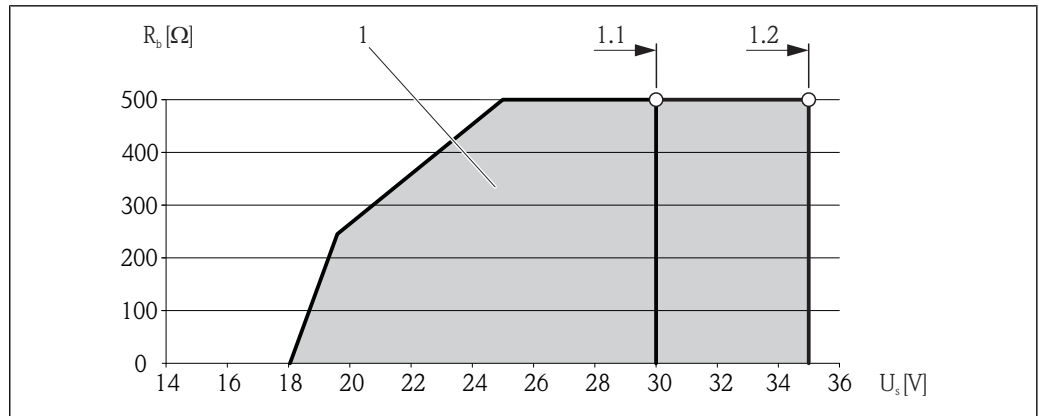

A0013563

1 Operating range

1.1 For order code for "Output", option A "4-20 mA HART" / option B "4-20 mA HART, pulse/frequency/switch output" with Ex i

1.2 For order code for "Output", option A "4-20 mA HART" / option B "4-20 mA HART, pulse/frequency/switch output" with non-Ex and Ex d

Sample calculation

Supply voltage of the power supply unit: $U_S = 19\text{ V}$

Maximum load: $R_B \leq (19\text{ V} - 13.5\text{ V}) : 0.022\text{ A} = 250\ \Omega$

Ex connection data

Safety-related values

Ex d type of protection

Order code for "Output"	Output type	Safety-related values
Option A	4-20 mA HART	$U_{nom} = \text{DC } 35\text{ V}$ $U_{max} = 250\text{ V}$
Option B	4-20 mA HART	$U_{nom} = \text{DC } 35\text{ V}$ $U_{max} = 250\text{ V}$
	Pulse/frequency/switch output	$U_{nom} = \text{DC } 35\text{ V}$ $U_{max} = 250\text{ V}$ $P_{max} = 1\text{ W}^{1)}$

1) Internal circuit limited by $R_i = 760.5\ \Omega$

Ex nA type of protection

Order code for "Output"	Output type	Safety-related values
Option A	4-20 mA HART	$U_{nom} = \text{DC } 35\text{ V}$ $U_{max} = 250\text{ V}$
Option B	4-20 mA HART	$U_{nom} = \text{DC } 35\text{ V}$ $U_{max} = 250\text{ V}$
	Pulse/frequency/switch output	$U_{nom} = \text{DC } 35\text{ V}$ $U_{max} = 250\text{ V}$ $P_{max} = 1\text{ W}^{1)}$

1) Internal circuit limited by $R_i = 760.5\ \Omega$

Intrinsically safe values*Type of protection Ex ia*

Order code for "Output"	Output type	Intrinsically safe values
Option A	4-20 mA HART	U _i = DC 30 V I _i = 300 mA P _i = 1 W L _i = 0 μH C _i = 5 nF
Option B	4-20 mA HART	U _i = DC 30 V I _i = 300 mA P _i = 1 W L _i = 0 μH C _i = 5 nF
	Pulse/frequency/switch output	U _i = DC 30 V I _i = 300 mA P _i = 1 W L _i = 0 μH C _i = 6 nF

IS type of protection

Order code for "Output"	Output type	Intrinsically safe values
Option A	4-20 mA HART	U _i = DC 30 V I _i = 300 mA P _i = 1 W L _i = 0 μH C _i = 5 nF
Option B	4-20 mA HART	U _i = DC 30 V I _i = 300 mA P _i = 1 W L _i = 0 μH C _i = 5 nF
	Pulse/frequency/switch output	U _i = DC 30 V I _i = 300 mA P _i = 1 W L _i = 0 μH C _i = 6 nF

Low flow cut off

The switch points for low flow cut off are user-selectable.

Galvanic isolation

All outputs are galvanically isolated from one another.

Protocol-specific data**HART**

Manufacturer ID	0x11
Device type ID	0x48
HART protocol revision	6.0
Device description files (DTM, DD)	Information and files under: www.endress.com

HART load	<ul style="list-style-type: none"> ■ Min. 250 Ω ■ Max.500 Ω
Dynamic variables	<p>The measured variables can be freely assigned to the dynamic variables.</p> <p>Measured variables for PV (primary dynamic variable)</p> <ul style="list-style-type: none"> ■ Volume flow ■ Mass flow <p>Measured variables for SV, TV, QV (secondary, tertiary and quaternary dynamic variable)</p> <ul style="list-style-type: none"> ■ Volume flow ■ Mass flow ■ Totalizer 1 ■ Totalizer 2 ■ Totalizer 3

Power supply

Terminal assignment

Transmitter

4-20 mA HART connection version with additional outputs

<i>Maximum number of terminals, without integrated overvoltage protection</i>	<i>Maximum number of terminals, with integrated overvoltage protection</i>
<p>1 Output 1 (passive): supply voltage and signal transmission</p> <p>2 Output 2 (passive): supply voltage and signal transmission</p> <p>3 Ground terminal for cable shield</p>	

Order code for "Output"	Terminal numbers			
	Output 1		Output 2	
	1 (+)	2 (-)	3 (+)	4 (-)
Option A	4-20 mA HART (passive)		-	
Option B ¹⁾	4-20 mA HART (passive)		Pulse/frequency/switch output (passive)	

1) Output 1 must always be used; output 2 is optional.

Supply voltage

An external power supply is required for each output. The following supply voltage values apply for the 4-20 mA HART current output:

Order code for "Output"	Minimum terminal voltage ^{1) 2)}	Maximum terminal voltage
<ul style="list-style-type: none"> ■ Option A: 4-20 mA HART ■ Option B: 4-20 mA HART, pulse/frequency/switch output 	<p>For 4 mA: ≥ DC18 V</p> <p>For 20 mA: ≥ DC14 V</p>	DC 35 V

- 1) External supply voltage of the power supply unit with load (→ 8)
- 2) For device versions with local display SD03: The terminal voltage must be increased by DC 2 V if backlighting is used.

i For information on the Ex connection values (→ 9)

i Various power supply units can be ordered from Endress+Hauser: see "Accessories" section (→ 37)

Power consumption

Transmitter

Order code for "Power supply"	Maximum power consumption
Option A: 4-20 mA HART	770 mW
Option B: 4-20 mA HART, pulse/frequency/switch output	<ul style="list-style-type: none"> ■ Operation with output 1: 770 mW ■ Operation with output 1 and 2: 2 770 mW

i For information on the Ex connection values (→ 9)

Current consumption

For 4-20 mA or 4-20 mA HART current output: 3.6 to 22.5 mA


i If the option **Defined value** is selected in the **Failure mode** parameter (→ 7): 3.59 to 22.5 mA

Power supply failure

- Totalizers stop at the last value measured.
- Configuration is retained in the device memory (HistoROM).
- Error messages (incl. total operated hours) are stored.

Electrical connection


Connecting the transmitter

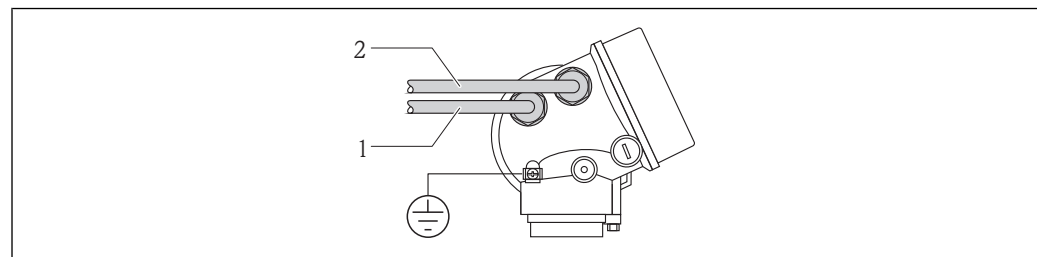

A0015510

- 1 Cable entry for output 1
- 2 Cable entry for output 2


Connection examples

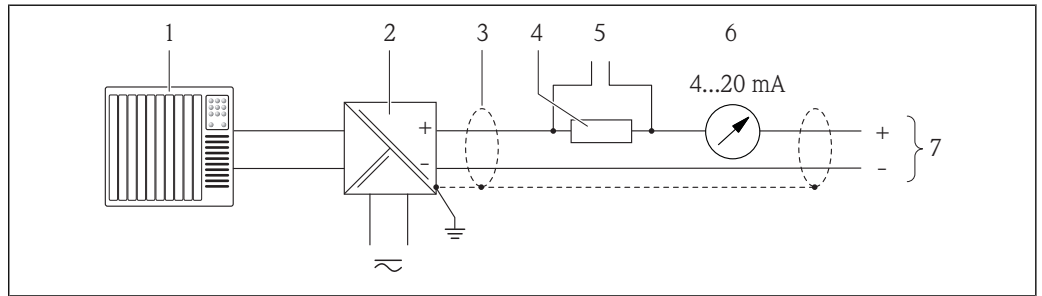

A0015511

2 Connection example for 4-20 mA HART current output (passive)


- 1 Automation system with current input (e.g. PLC)
- 2 Active barrier for power supply (e.g. RN221N) (→ 16)
- 3 Observe cable specification (→ 16)
- 4 Resistor for HART communication ($\geq 250 \Omega$): observe maximum load (→ 8)
- 5 Connection for HART operating devices (→ 33)
- 6 Analog display unit: observe maximum load (→ 8)
- 7 Transmitter

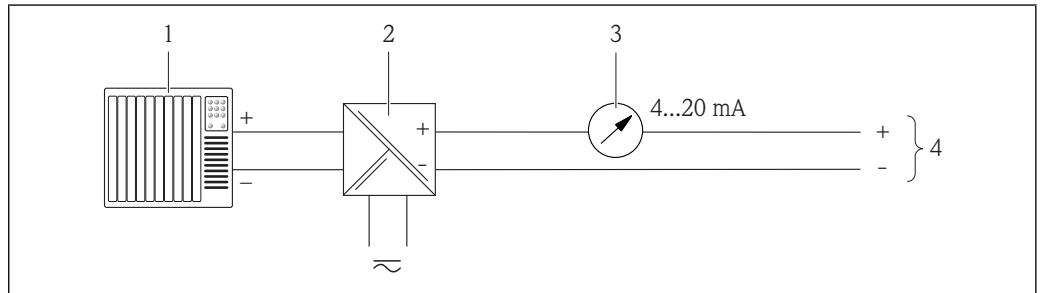

A0015512

3 Connection example for 4-20 mA current output (passive)


- 1 Automation system with current input (e.g. PLC)
- 2 Active barrier for power supply (e.g. RN221N) (→ 11)
- 3 Analog display unit: observe maximum load (→ 8)
- 4 Transmitter

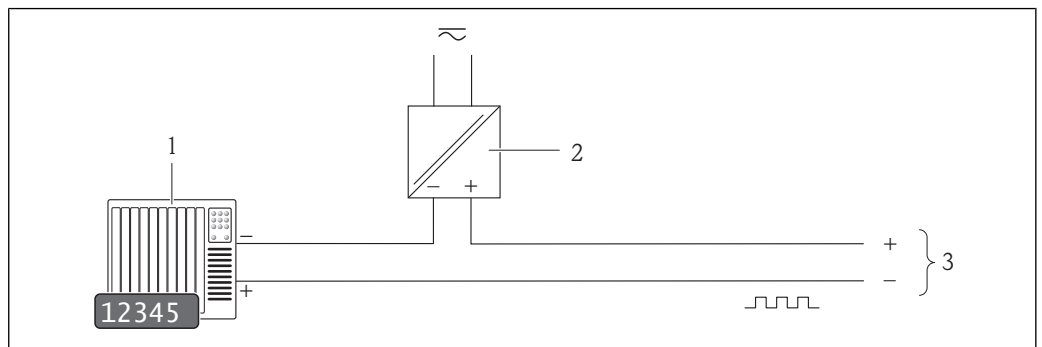

A0016801

4 Connection example for pulse/frequency output (passive)

- 1 Automation system with pulse/frequency input (e.g. PLC)
- 2 Power supply
- 3 Transmitter: Observe input values (→ 7)

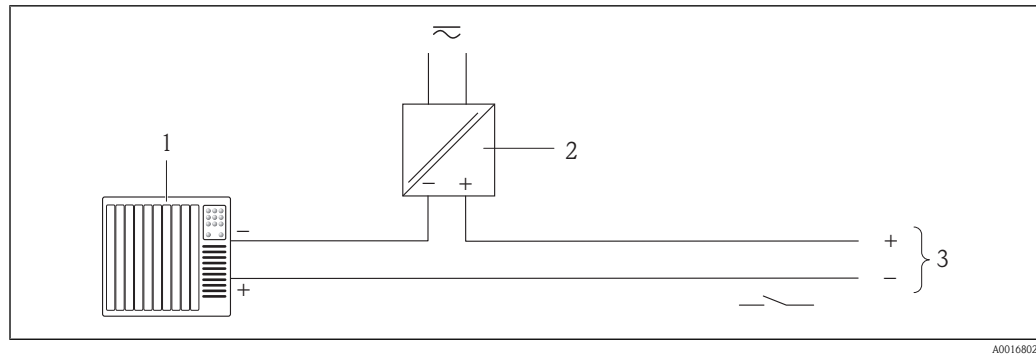

A0016802

5 Connection example for switch output (passive)

- 1 Control system with switch input (e.g. PLC)
 2 Power supply
 3 Transmitter: Observe input values (→ 7)

Potential equalization


Requirements

Please consider the following to ensure correct measurement:

- Same electrical potential for the fluid and sensor
- Company-internal grounding concepts
- Pipe material and grounding

Connection examples for standard situations

Metal, grounded pipe

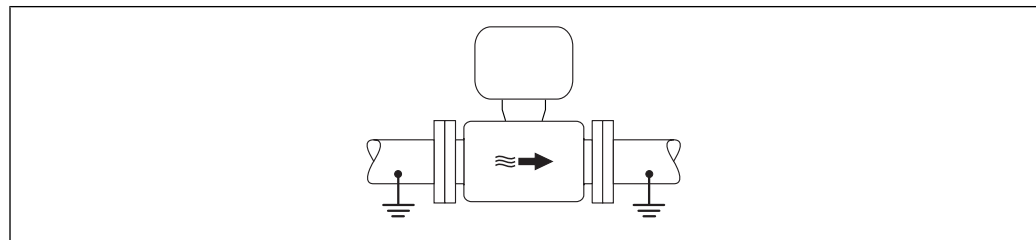

A0016315


6 Potential equalization via measuring tube

Connection example in special situations

Unlined and ungrounded metal pipe

This connection method also applies in situations where:

- The customary potential equalization is not used
- Equalizing currents are present

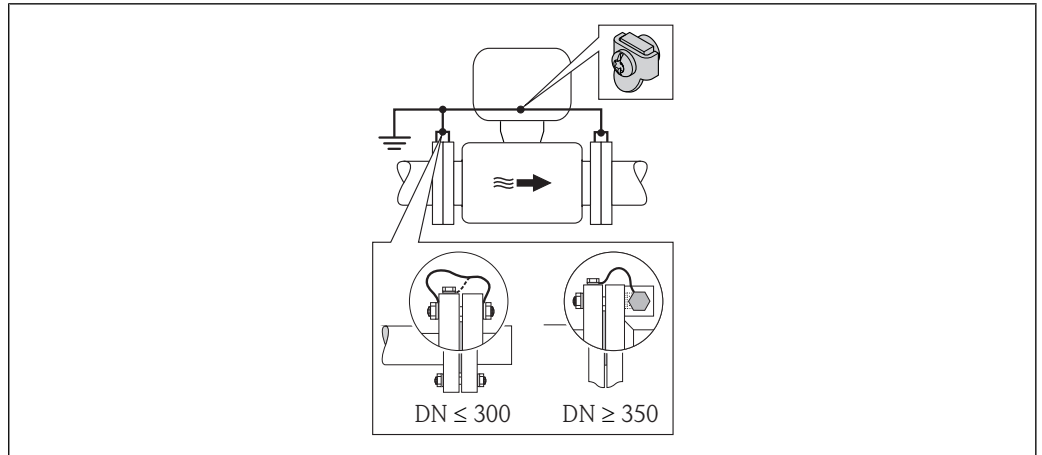

A0016317

7 Potential equalization via ground terminal and pipe flanges

Note the following when installing:

- Connect both sensor flanges to the pipe flange via a ground cable and ground them.
- Connect the connection housing of the transmitter or sensor to ground potential by means of the ground terminal provided for the purpose. To mount the ground cable:
 - If $DN \leq 300$ (12"): Mount the ground cable directly on the conductive flange coating of the sensor with the flange screws.
 - If $DN \geq 350$ (14"): Mount the ground cable directly on the metal transport bracket.


Ground cable	Copper wire, at least 6 mm ² (0.0093 in ²)
---------------------	---

i The necessary ground cable can be ordered from Endress+Hauser (→ 36).

Plastic pipe or pipe with insulating liner

This connection method also applies in situations where:

- The customary potential equalization is not used
- Equalizing currents are present

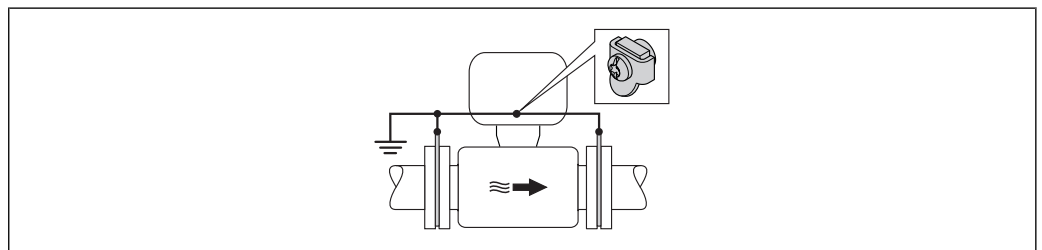

A0016318

8 Potential equalization via ground terminal and ground disks

Note the following when installing:

The ground disks must be connected to the ground terminal via the ground cable and be connected to ground potential.


Ground cable	Copper wire, at least 6 mm ² (0.0093 in ²)
---------------------	---

i The ground cable and ground disks can be ordered from Endress+Hauser (→ 36).


Pipe with a cathodic protection unit

This connection method is only used if the following two conditions are met:

- Metal pipe without liner or pipe with electrically conductive liner
- Cathodic protection is integrated in the personal protection equipment

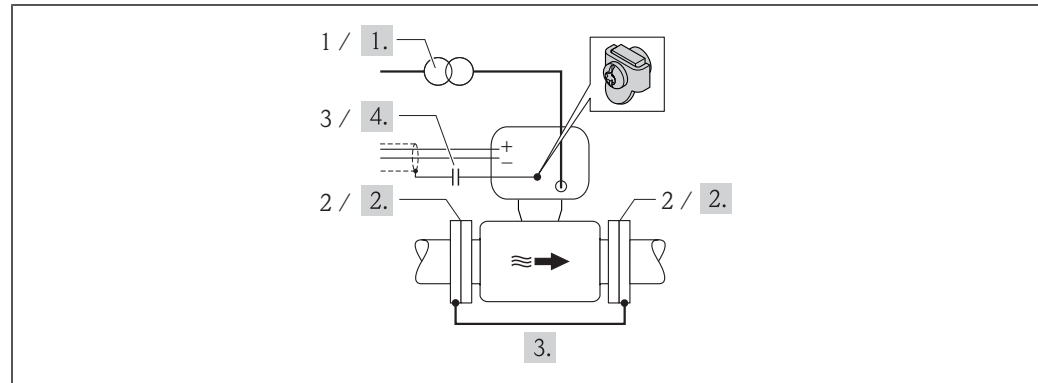



A0016319

 9 *Potential equalization and cathodic protection*

- 1 Isolation transformer power supply
 2 Electrically isolated from the pipe
 3 Capacitor

Ground cable	Copper wire, at least 6 mm ² (0.0093 in ²)
---------------------	---

1. Connect the measuring device to the power supply such that it is floating in relation to the protective ground.
2. Install the sensor in the pipe in a way that provides electrical insulation.
3. Connect the two flanges of the pipe to one another via a ground cable.
4. Guide the shield of the signal lines through a capacitor.

 The necessary ground cable can be ordered from Endress+Hauser (→  36).

Terminals

- For device version without integrated overvoltage protection: plug-in spring terminals for wire cross-sections 0.5 to 2.5 mm² (20 to 14 AWG)
- For device version with integrated overvoltage protection: screw terminals for wire cross-sections 0.2 to 2.5 mm² (24 to 14 AWG)

Cable entries

- Cable gland (not for Ex d): M20 × 1.5 with cable Ø 6 to 12 mm (0.24 to 0.47 in)
- Thread for cable entry:
 - For non-Ex and Ex: NPT ½"
 - For non-Ex and Ex (not for CSA Ex d/XP): G ½"
 - For Ex d: M20 × 1.5

Cable specification**Permitted temperature range**

- -40 °C (-40 °F)...≥ 80 °C (176 °F)
- Minimum requirement: cable temperature range ≥ ambient temperature + 20 K

Signal cable*Current output*

- For 4-20 mA: standard installation cable is sufficient.
- For 4-20 mA HART: Shielded cable recommended. Observe grounding concept of the plant.

Pulse/frequency/switch output

Standard installation cable is sufficient.

Overvoltage protection

The device can be ordered with integrated overvoltage protection for several approvals: Order code for "Accessory mounted", option **NA** "overvoltage protection"

Input voltage range	Values correspond to supply voltage specifications (→ 11) ¹⁾
Resistance per channel	2 · 0.5 Ω max
DC sparkover voltage	400 to 700 V
Trip surge voltage	< 800 V
Capacitance at 1 MHz	< 1.5 pF
Nominal discharge current (8/20 μs)	10 kA
Temperature range	-40 to +85 °C (-40 to +185 °F)

1) The voltage is reduced by the amount of the internal resistance $I_{min} \cdot R_i$

 Depending on the temperature class, restrictions apply to the ambient temperature for device versions with overvoltage protection .

Performance characteristics


Reference operating conditions

To DIN EN 29104

- Fluid temperature: $+28 \pm 2$ °C ($+82 \pm 4$ °F)
- Ambient temperature range: $+22 \pm 2$ °C ($+72 \pm 4$ °F)
- Warm-up period: 30 min

Installation

- Inlet run > 10 × DN
- Outlet run > 5 × DN
- Sensor and transmitter grounded.
- The sensor is centered in the pipe.

 To calculate the measuring range, use the *Applicator* sizing tool (→ 37)

Maximum measured error

Accuracy of outputs

o.r. = of reading; o.f.s. = of full scale value

Current output

Accuracy	±10 μA
-----------------	--------

Pulse/frequency output


Accuracy	Max. ±100 ppm o.r.
-----------------	--------------------


Error limits under reference operating conditions

o.r. = of reading

Pulse output

±0.5 % o.r. ±2 mm/s (0.08 in/s)

 Fluctuations in the supply voltage do not have any effect within the specified range.

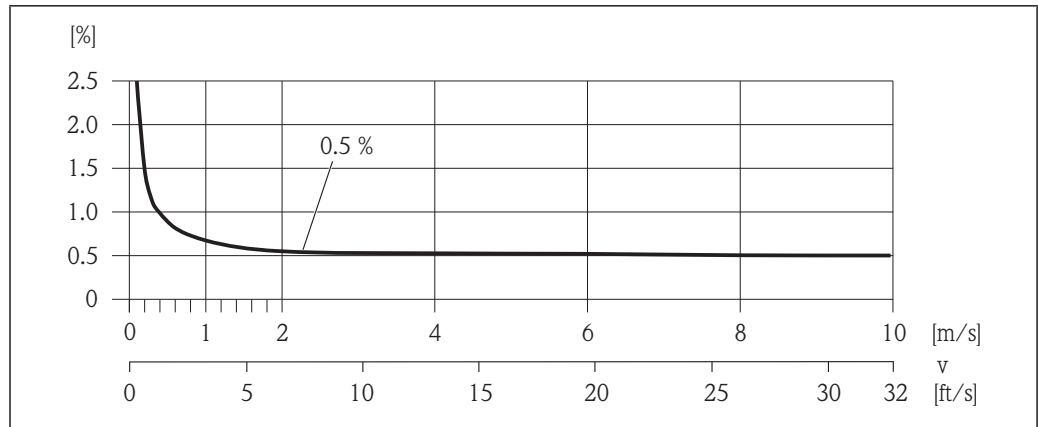

10 Maximum measured error in % o.r.

Repeatability

o.r. = of reading
 max. ±0.2 % o.r. ±2 mm/s (0.08 in/s)

Influence of ambient temperature

o.r. = of reading; o.f.s. = of full scale value

Current output

Additional error, in relation to the span of 16 mA:

Temperature coefficient at zero point (4 mA)	0.02 %/10 K, max. 0.35 % over the entire temperature range -40 to +60 °C (-40 to +140 °F)
Temperature coefficient with span (20 mA)	0.05 %/10 K, max. 0.5 % over the entire temperature range -40 to +60 °C (-40 to +140 °F)

Pulse/frequency output


Temperature coefficient	Max. ±100 ppm o.r.
--------------------------------	--------------------

Installation

No special measures such as supports are necessary. External forces are absorbed by the construction of the device.

Mounting location

Preferably install the sensor in an ascending pipe, and ensure a sufficient distance to the next pipe elbow: $h = \geq 2 \times DN$

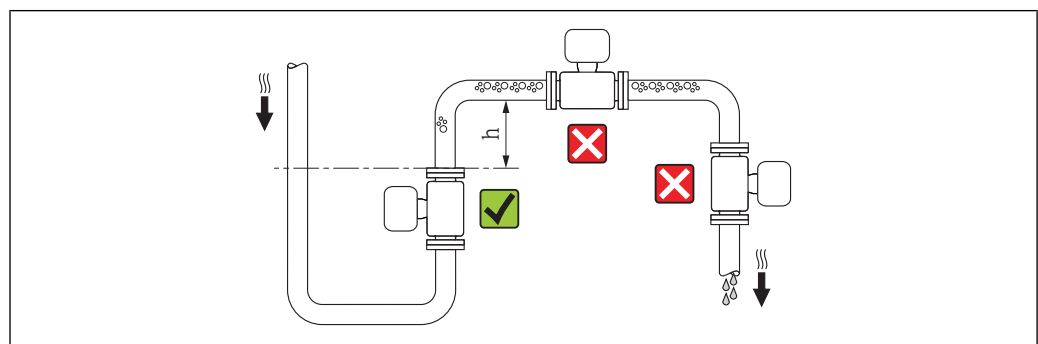


A0017061


To prevent measuring errors arising from accumulation of gas bubbles in the measuring tube, avoid the following mounting locations in the pipe:

- Highest point of a pipeline.
- Directly upstream of a free pipe outlet in a down pipe.

Installation in down pipes

Install a siphon or a vent valve downstream of the sensor in down pipes whose length $h \geq 5 \text{ m}$ (16.4 ft). This precaution is to avoid low pressure and the consequent risk of damage to the measuring tube. This measure also prevents the system losing prime, which could cause air pockets.

 For information on the liner's resistance to partial vacuum (→  25)

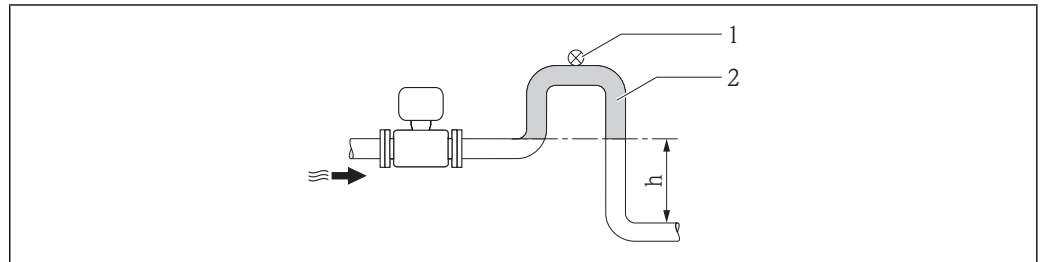


 11 Installation in a down pipe

- 1 Vent valve
- 2 Pipe siphon
- h Length of down pipe

Installation in partially filled pipes

A partially filled pipe with a gradient necessitates a drain-type configuration. The empty pipe detection (EPD) function offers additional protection by detecting empty or partially filled pipes.

- Do not install the sensor at the lowest point in the drain: risk of solids accumulating.
- It is advisable to install a cleaning valve.

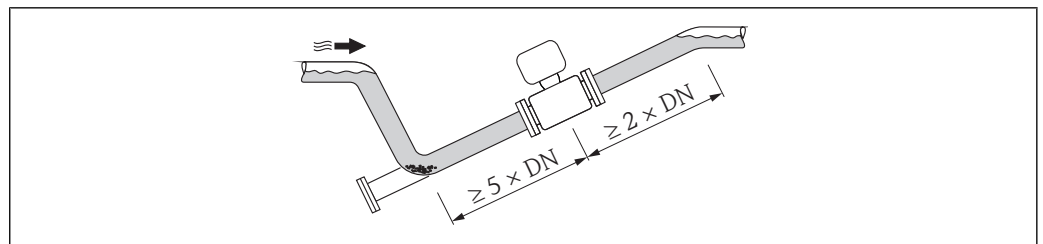

Orientation


The direction of the arrow on the sensor nameplate helps you to install the sensor according to the flow direction (direction of medium flow through the piping).

An optimum orientation position helps avoid gas and air accumulations and deposits in the measuring tube.

The measuring device also offers the empty pipe detection function to detect partially empty measuring pipes at outgassing fluids or applications with variable process pressures.

Vertical


This is the optimum orientation for self-emptying piping systems and for use in conjunction with empty pipe detection.

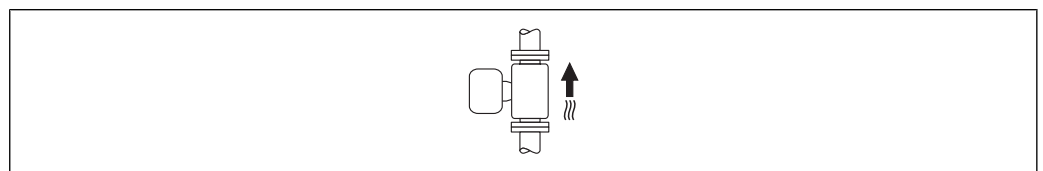

Horizontal

The measuring electrode plane must be horizontal. This prevents brief insulation of the two measuring electrodes by entrained air bubbles.

i With horizontal orientation, empty pipe detection only works if the transmitter housing is pointing upwards as otherwise there is no guarantee that the empty pipe detection function will actually respond to a partially filled or empty measuring tube.

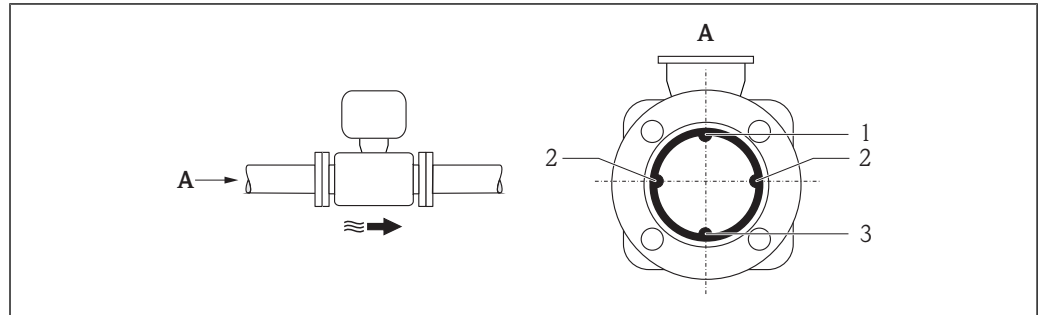

A0016260

12 Horizontal orientation


- 1 EPD electrode for empty pipe detection
- 2 Measuring electrodes for signal detection
- 3 Reference electrode for potential equalization

Inlet and outlet runs

If possible, install the sensor upstream from fittings such as valves, T-pieces or elbows.

Observe the following inlet and outlet runs to comply with accuracy specifications:

- Inlet run $\geq 5 \times \text{DN}$
- Outlet run $\geq 2 \times \text{DN}$

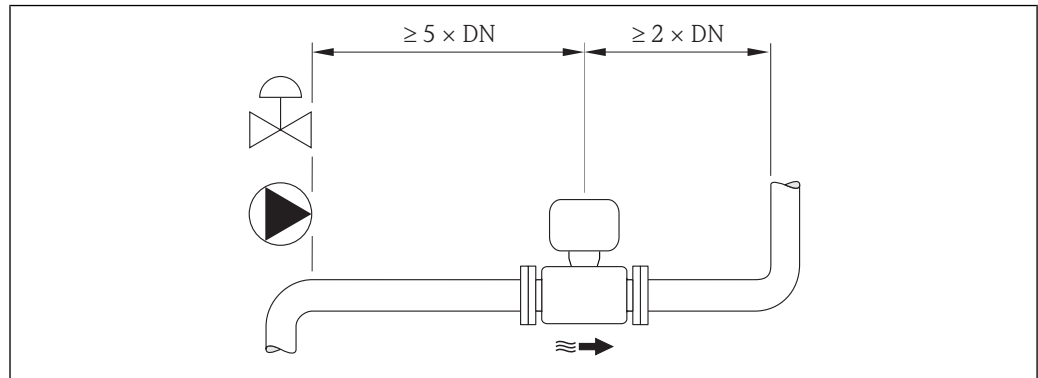

A0016275


Adapters

Suitable adapters to DIN EN 545 (double-flange reducers) can be used to install the sensor in larger-diameter pipes. The resultant increase in the rate of flow improves measuring accuracy with very slow-moving fluids.

The nomogram shown here can be used to calculate the pressure loss caused by reducers and expanders:

- Calculate the ratio of the diameters d/D .
- From the nomogram read off the pressure loss as a function of flow velocity (downstream from the reduction) and the d/D ratio.

i The nomogram only applies to liquids with a viscosity similar to that of water.

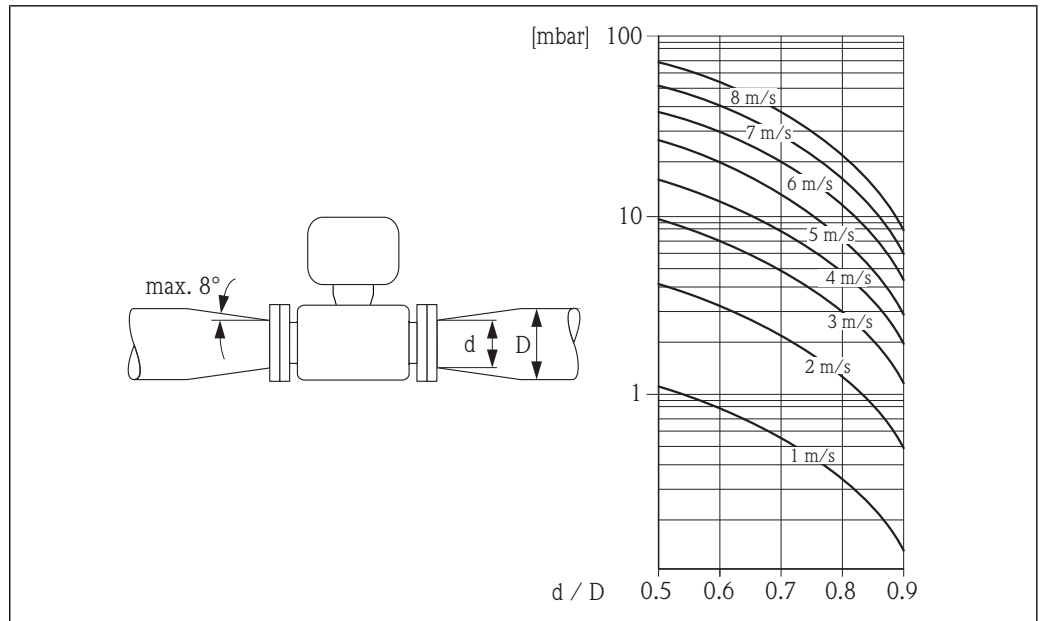

A0016359

Special mounting instructions Weather protection cover

To ensure that the optional weather protection cover can be easily opened, maintain the following minimum head clearance: 350 mm (13.8 in)


Environment

Ambient temperature range

Transmitter	-40 to +60 °C (-40 to +140 °F)
Local display	-20 to +60 °C (-4 to +140 °F), the readability of the display may be impaired at temperatures outside the temperature range.
Sensor	<ul style="list-style-type: none"> ■ Flange material carbon steel: -10 to +60 °C (+14 to +140 °F) ■ Flange material stainless steel: -40 to +60 °C (-40 to +140 °F)
Liner	Do not exceed or fall below the permitted temperature range of the liner (→ 22).

If operating outdoors:

- Install the measuring device in a shady location.
- Avoid direct sunlight, particularly in warm climatic regions.
- Avoid direct exposure to weather conditions.

 Weather protection covers can be ordered from Endress+Hauser: see "Accessories" section (→ 36)

Storage temperature

The storage temperature corresponds to the operating temperature range of the measuring transmitter and the appropriate measuring sensors.

- Protect the measuring device against direct sunlight during storage in order to avoid unacceptably high surface temperatures.
- Select a storage location where moisture cannot collect in the measuring device as fungus or bacteria infestation can damage the liner.
- If protection caps or protective covers are mounted these should never be removed before installing the measuring device.

Degree of protection

Transmitter

- As standard: IP66/67, type 4X enclosure
- When housing is open: IP20, type 1 enclosure
- Display module: IP22, type 1 enclosure

Sensor
IP66/67, type 4X enclosure


Shock resistance As per IEC/EN 60068-2-31

Vibration resistance Acceleration up to 2 g following IEC 60068-2-6

Mechanical load

- Protect the transmitter housing against mechanical effects, such as shock or impact.
- Never use the transmitter housing as a ladder or climbing aid.


Electromagnetic compatibility (EMC) As per IEC/EN 61326 and NAMUR Recommendation 21 (NE 21)

 Details are provided in the Declaration of Conformity.

Process

Medium temperature range

- -20 to +150 °C (-4 to +302 °F) for PFA
- -40 to +130 °C (-40 to +266 °F) for PTFE

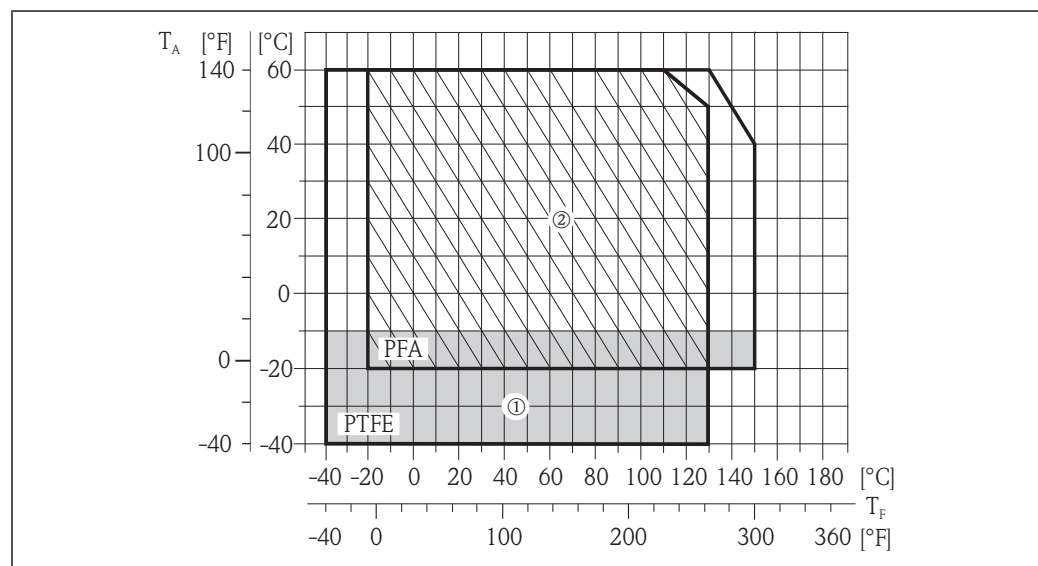

A0017724

T_A Ambient temperature

T_F Medium temperature


① Area shaded in gray: the ambient temperature range of -10 to -40 °C (-14 to -40 °F) applies to stainless flanges only

② Harsh environment and IP68 only to +130 °C (+266 °F)

Conductivity $\geq 20 \mu\text{S}/\text{cm}$ for liquids in general


Pressure-temperature ratings The following material load diagrams refer to the entire device and not just the process connection.

Flange connection according to EN 1092-1 (DIN 2501)

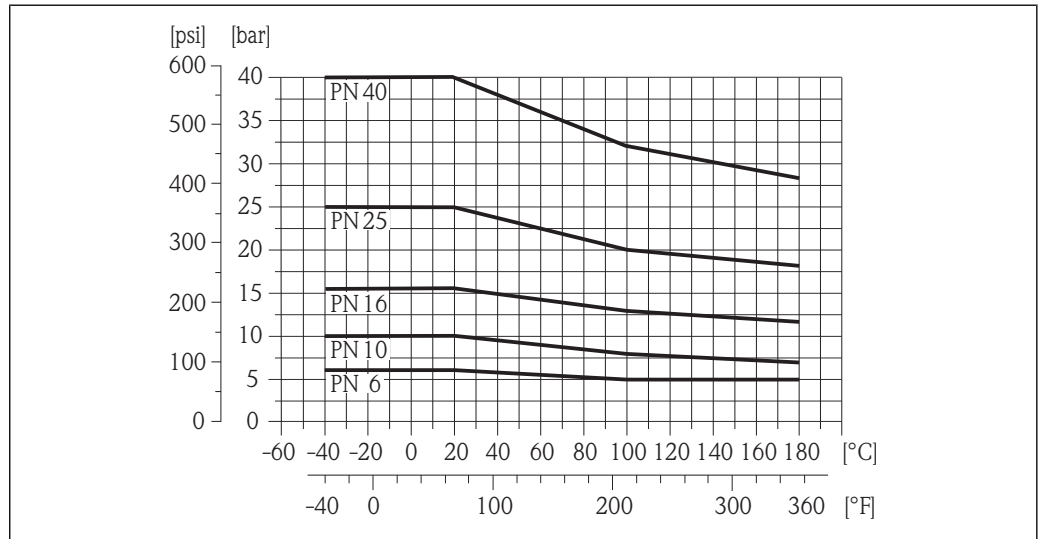


13 Materials C22, FE 410W B and S235JRG2

Flange connection according to EN 1092-1 (DIN 2501)

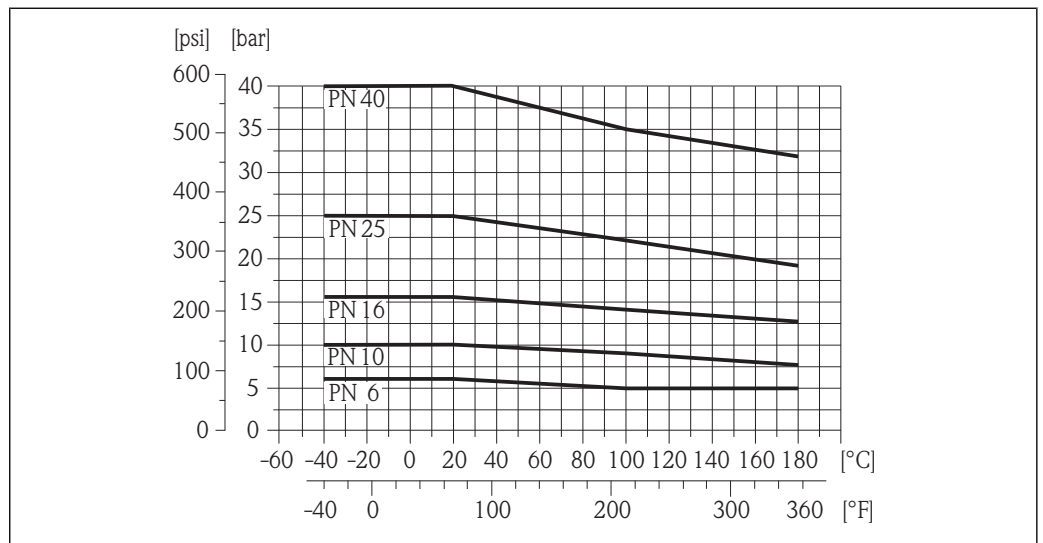

14 Material 1.4571/316L


Flange connection according to ASME B16.5

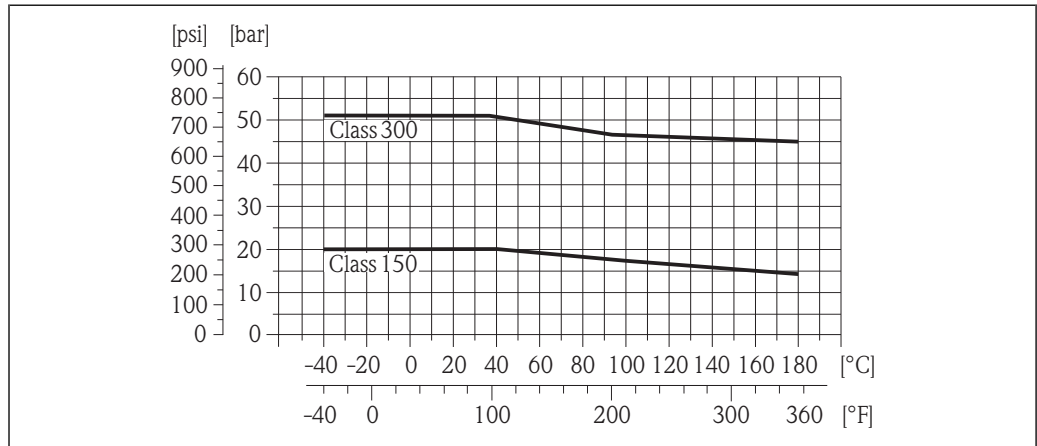

A0003226

15 Material A105


Flange connection according to ASME B16.5

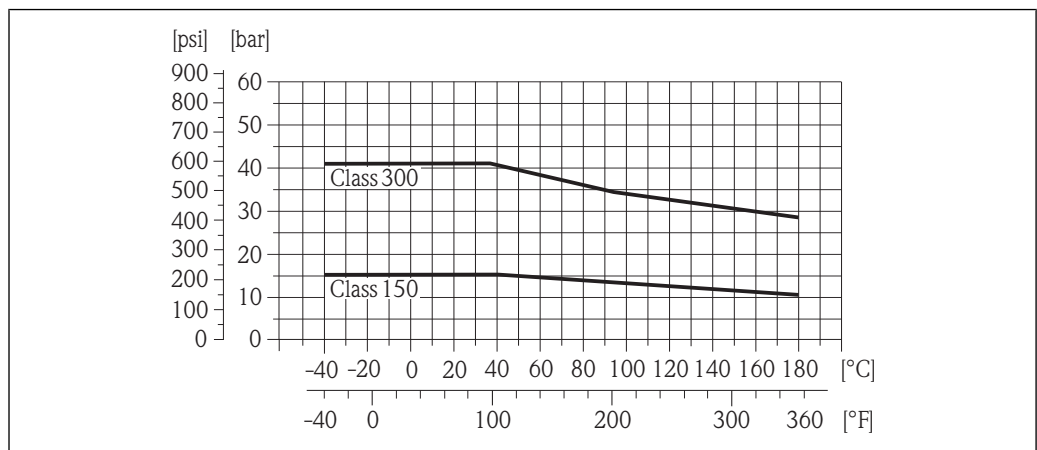

A0005307

16 Material F316L

Flange connection according to JIS B2220

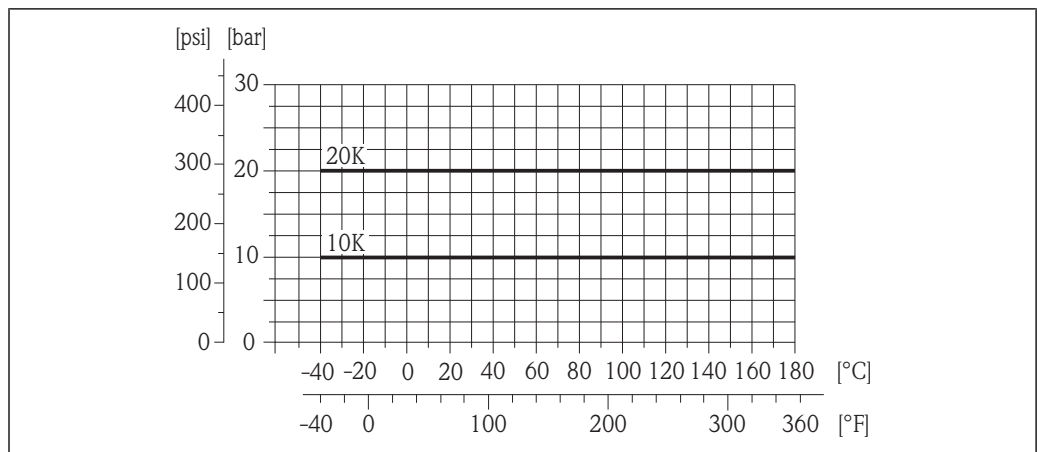

A0003228

17 Materials 1.0425/316L, H11, S235JRG2

Pressure tightness*Liner: PFA*

Nominal diameter		Limit values for absolute pressure in [mbar] ([psi]) for fluid temperatures:		
[mm]	[in]	+25 °C (+77 °F)	+80 °C (+176 °F)	+100 to +180 °C (+212 to +356 °F)
25	1	0 (0)	0 (0)	0 (0)
32	–	0 (0)	0 (0)	0 (0)
40	1 ½	0 (0)	0 (0)	0 (0)
50	2	0 (0)	0 (0)	0 (0)
65	–	0 (0)	– (–)	0 (0)
80	3	0 (0)	– (–)	0 (0)
100	4	0 (0)	– (–)	0 (0)
125	–	0 (0)	– (–)	0 (0)
150	6	0 (0)	– (–)	0 (0)
200	8	0 (0)	– (–)	0 (0)

Liner: PTFE

Nominal diameter		Limit values for absolute pressure in [mbar] ([psi]) for fluid temperatures:			
[mm]	[in]	+25 °C (+77 °F)	+80 °C (+176 °F)	+100 °C (+212 °F)	+130 °C (+266 °F)
15	½	0 (0)	0 (0)	0 (0)	100 (1.45)
25	1	0 (0)	0 (0)	0 (0)	100 (1.45)
32	–	0 (0)	0 (0)	0 (0)	100 (1.45)
40	1 ½	0 (0)	0 (0)	0 (0)	100 (1.45)
50	2	0 (0)	0 (0)	0 (0)	100 (1.45)
65	–	0 (0)	– (–)	40 (0.58)	130 (1.89)
80	3	0 (0)	– (–)	40 (0.58)	130 (1.89)
100	4	0 (0)	– (–)	135 (1.96)	170 (2.47)
125	–	135 (1.96)	– (–)	240 (3.48)	385 (5.58)
150	6	135 (1.96)	– (–)	240 (3.48)	385 (5.58)
200	8	200 (2.90)	– (–)	290 (4.21)	410 (5.95)

Flow limit

The diameter of the pipe and the flow rate determine the nominal diameter of the sensor. The optimum velocity of flow is between 2 to 3 m/s (6.56 to 9.84 ft/s). Also match the velocity of flow (v) to the physical properties of the fluid:

- $v < 2$ m/s (6.56 ft/s): for abrasive fluids (e.g. potter's clay, lime milk, ore slurry)
- $v > 2$ m/s (6.56 ft/s): for fluids producing buildup (e.g. wastewater sludges)



For an overview of the measuring range full scale values, see the "Measuring range" section (→ 5)

Pressure loss

- No pressure loss occurs if the sensor is installed in a pipe with the same nominal diameter.
- Pressure losses for configurations incorporating adapters according to DIN EN 545 (→ 20)


System pressure

- Never install the sensor on the pump suction side in order to avoid the risk of low pressure, and thus damage to the liner.
- Furthermore, install pulse dampers if reciprocating, diaphragm or peristaltic pumps are used.



■ For information on the liner's resistance to partial vacuum (→ 25)

■ For information on the measuring system's resistance to vibration and shock (→ 22), (→ 22)

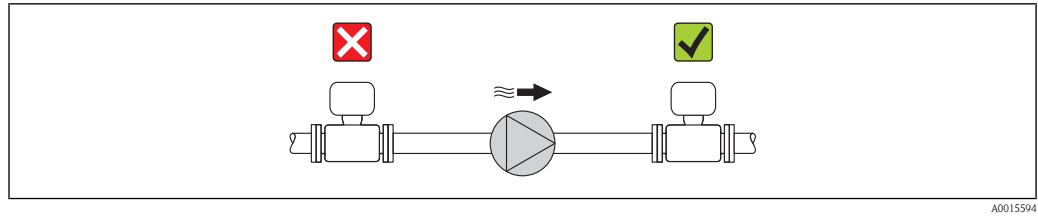


A0015594

Vibrations

In the event of very strong vibrations, the pipe and sensor must be supported and fixed.

i For information on the permitted resistance to vibration and shock (→ 22), (→ 22)

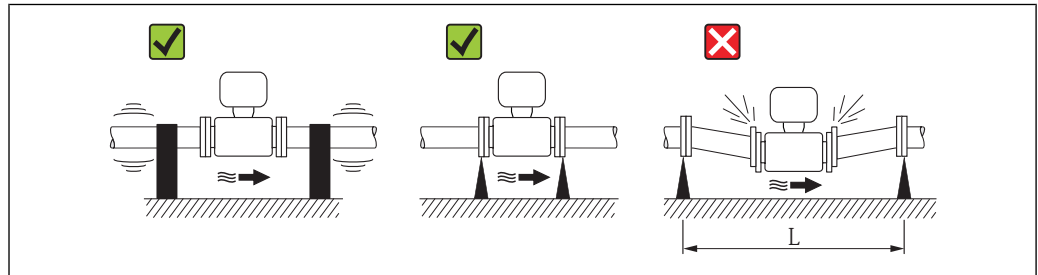

A0016266

18 Measures to prevent vibration of the device


$L > 10 \text{ m (33 ft)}$

Mechanical construction

Design, dimensions

Compact version

Order code for "Housing", option C "GT20 two-chamber, aluminium coating" with DN 25 to 200 (1 to 8")

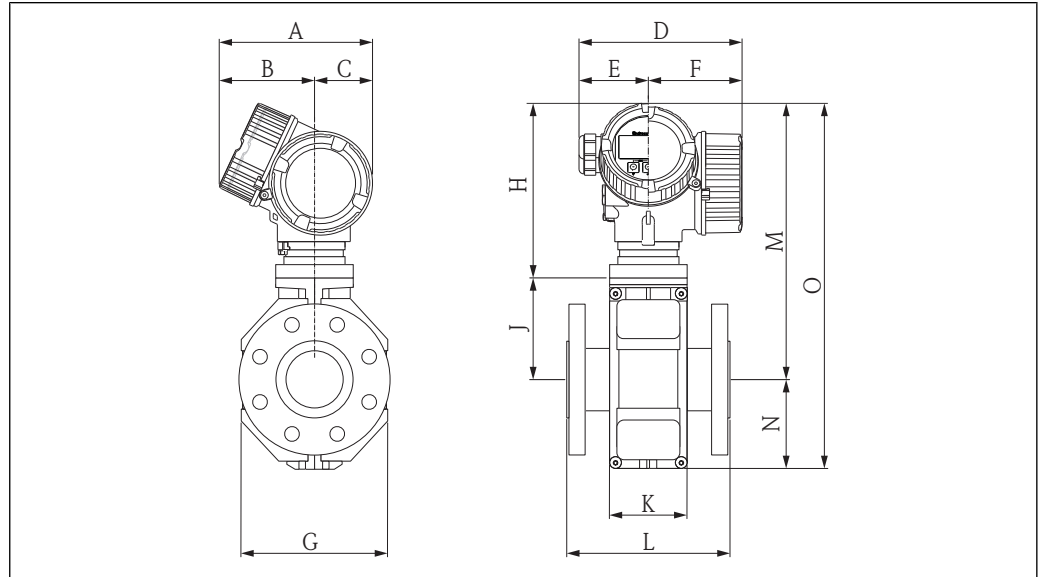

A0017644

Dimensions in SI units

DN	L ¹⁾	A	B ²⁾	C	D ³⁾	E	F ³⁾	G	H	J	K	M ⁴⁾	N	O ⁴⁾
[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]
15	200	162	102	60	165	75	90	120	189.5	90	94	280	84	364
25	200	162	102	60	165	75	90	120	189.5	90	94	280	84	364
32	200	162	102	60	165	75	90	120	189.5	90	94	280	84	364
40	200	162	102	60	165	75	90	120	189.5	90	94	280	84	364
50	200	162	102	60	165	75	90	120	189.5	90	94	280	84	364
65	200	162	102	60	165	75	90	180	189.5	115	94	305	109	414
80	200	162	102	60	165	75	90	180	189.5	115	94	305	109	414
100	250	162	102	60	165	75	90	180	189.5	115	94	305	109	414
125	250	162	102	60	165	75	90	260	189.5	155	140	345	150	495
150	300	162	102	60	165	75	90	260	189.5	155	140	345	150	495
200	350	162	102	60	165	75	90	324	189.5	180	156	370	180	550

1) The length (L) is always the same and is not dependent on the selected pressure rating.

2) For version without local display: values - 7 mm

3) For version with overvoltage protection (OVP): values + 8 mm

4) For version without local display: values - 10 mm

Dimensions in US units


DN	L ¹⁾	A	B ²⁾	C	D ³⁾	E	F ³⁾	G	H	J	K	M ⁴⁾	N	O ⁴⁾
[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]
½	7.87	6.38	4.02	2.36	6.50	2.95	3.54	4.72	7.46	3.54	3.7	11.0	3.31	14.3
1	7.87	6.38	4.02	2.36	6.50	2.95	3.54	4.72	7.46	3.54	3.7	11.0	3.31	14.3

DN	L ¹⁾	A	B ²⁾	C	D ³⁾	E	F ³⁾	G	H	J	K	M ⁴⁾	N	O ⁴⁾
[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]
1 ¼	7.87	6.38	4.02	2.36	6.50	2.95	3.54	4.72	7.46	3.54	3.7	11.0	3.31	14.3
1 ½	7.87	6.38	4.02	2.36	6.50	2.95	3.54	4.72	7.46	3.54	3.7	11.0	3.31	14.3
2	7.87	6.38	4.02	2.36	6.50	2.95	3.54	4.72	7.46	3.54	3.7	11.0	3.31	14.3
2 ½	7.87	6.38	4.02	2.36	6.50	2.95	3.54	7.09	7.46	4.53	3.7	12.0	4.29	16.3
3	7.87	6.38	4.02	2.36	6.50	2.95	3.54	7.09	7.46	4.53	3.7	12.0	4.29	16.3
4	9.84	6.38	4.02	2.36	6.50	2.95	3.54	7.09	7.46	4.53	3.7	12.0	4.29	16.3
5	9.84	6.38	4.02	2.36	6.50	2.95	3.54	10.2	7.46	6.10	5.51	13.6	5.91	19.5
6	11.8	6.38	4.02	2.36	6.50	2.95	3.54	10.2	7.46	6.10	5.51	13.6	5.91	19.5
8	13.8	6.38	4.02	2.36	6.50	2.95	3.54	12.8	7.46	7.09	6.14	14.6	7.09	21.7

- 1) The length (L) is always the same and does not depend on the selected pressure rating.
- 2) For version without local display: values - 0.28 in
- 3) For version with overvoltage protection (OVP): values + 0.31 in
- 4) For version without local display: values - 0.39 in

Accessories

Ground disk for flange connection

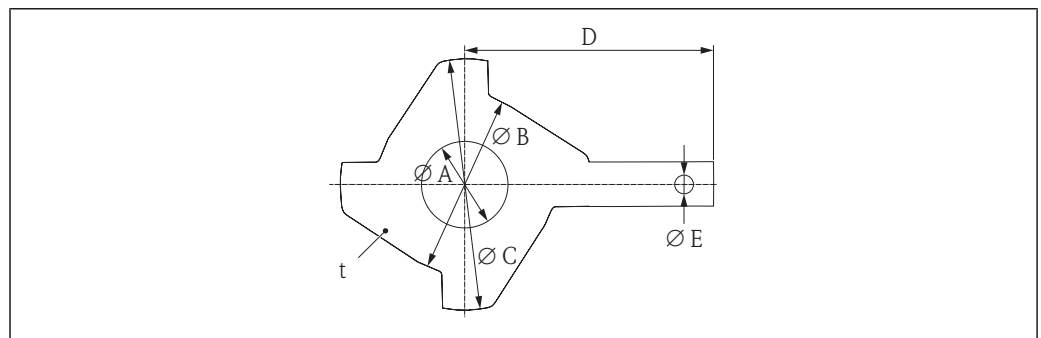

A0017649

Dimensions in SI units

DN	A	B	C	D	E	t
[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]
15	16	43	61.5	73	6.5	2
25	26	62	77.5	87.5	6.5	2
32	35	80	87.5	94.5	6.5	2
40	41	82	101	103	6.5	2
50	52	101	115.5	108	6.5	2
65	68	121	131.5	118	6.5	2
80	80	131	154.5	135	6.5	2
100	104	156	186.5	153	6.5	2
125	130	187	206.5	160	6.5	2
150	158	217	256	184	6.5	2
200	206	267	288	205	6.5	2

Dimensions in US units

DN [in]	A [in]	B [in]	C [in]	D [in]	E [in]	t [in]
½	0.63	1.69	2.42	2.87	0.26	0.08
1	1.02	2.44	3.05	3.44	0.26	0.08
1 ¼	1.38	3.15	3.44	3.72	0.26	0.08
1 ½	1.61	3.23	3.98	4.06	0.26	0.08
2	2.05	3.98	4.55	4.25	0.26	0.08
2 ½	2.68	4.76	5.18	4.65	0.26	0.08
3	3.15	5.16	6.08	5.31	0.26	0.08
4	4.09	6.14	7.34	6.02	0.26	0.08
5	5.12	7.36	8.13	6.30	0.26	0.08
6	6.22	8.54	10.1	7.24	0.26	0.08
8	8.11	10.5	11.3	8.07	0.26	0.08

Weight

Compact version

Weight data:

- Including the transmitter (1.9 kg (4.2 lbs))
- Weight specifications apply to standard pressure ratings and without packaging material.

Weight in SI units

Nominal diameter		EN (DIN), AS ¹⁾		ASME		JIS	
[mm]	[in]	Pressure rating	[kg]	Pressure rating	[kg]	Pressure rating	[kg]
15	½	PN 40	5.0	Class 150	5.0	10K	5.0
25	1	PN 40	5.8	Class 150	5.8	10K	5.8
32	1 ¼	PN 40	6.5	Class 150	–	10K	5.8
40	1 ½	PN 40	7.9	Class 150	7.9	10K	6.8
50	2	PN 40	9.1	Class 150	9.1	10K	7.8
65	2 ½	PN 16	10.5	Class 150	–	10K	9.6
80	3	PN 16	12.5	Class 150	12.5	10K	11.0
100	4	PN 16	14.5	Class 150	14.5	10K	13.2
125	5	PN 16	20.0	Class 150	–	10K	19.5
150	6	PN 16	24.0	Class 150	24.0	10K	23.0
200	8	PN 10	43.5	Class 150	43.5	10K	40.4

1) For flanges to AS, only DN 25 and 50 are available.

Weight in US units

Nominal diameter		ASME	
[mm]	[in]	Pressure rating	[lbs]
15	½	Class 150	11.0
25	1	Class 150	12.8
32	1 ¼	Class 150	–
40	1 ½	Class 150	17.4
50	2	Class 150	20.1

Nominal diameter		ASME	
[mm]	[in]	Pressure rating	[lbs]
65	2 ½	Class 150	–
80	3	Class 150	27.6
100	4	Class 150	32.0
125	5	Class 150	–
150	6	Class 150	52.9
200	8	Class 150	95.9

Measuring tube specification

Nominal diameter		Pressure rating					Process connection internal diameter			
		EN (DIN)	ASME	AS 2129	AS 4087	JIS	PFA		PTFE	
[mm]	[in]	[bar]	[psi]	[bar]	[bar]	[bar]	[mm]	[in]	[mm]	[in]
15	½	PN 40	Class 150	–	–	20K	–	–	15	0.59
25	1	PN 40	Class 150	Table E	–	20K	23	0.91	26	1.02
32	–	PN 40	–	–	–	20K	32	1.26	35	1.38
40	1 ½	PN 40	Class 150	–	–	20K	36	1.42	41	1.61
50	2	PN 40	Class 150	Table E	PN 16	10K	48	1.89	52	2.05
65	–	PN 16	–	–	–	10K	63	2.48	67	2.64
80	3	PN 16	Class 150	–	–	10K	75	2.95	80	3.15
100	4	PN 16	Class 150	–	–	10K	101	3.98	104	4.09
125	–	PN 16	–	–	–	10K	126	4.96	129	5.08
150	6	PN 16	Class 150	–	–	10K	154	6.06	156	6.14
200	8	PN 10	Class 150	–	–	10K	201	7.91	202	7.95

Materials**Transmitter housing**

- Order code for "Housing", option **C**: aluminum coating AlSi10Mg
- Window material: glass

Transmitter cable entries

Order code for "Housing", option **C** "GT20 two-chamber, aluminum coating"

Electrical connection	Type of protection	Material
Cable gland M20 × 1.5	<ul style="list-style-type: none"> ■ Non-Ex ■ Ex ia ■ Ex ic 	Plastic
	<ul style="list-style-type: none"> ■ Ex nA ■ Ex tb 	Nickel-plated brass
Thread G ½" via adapter	For non-Ex and Ex (except for CSA Ex d/XP)	Nickel-plated brass
Thread NPT ½" via adapter	For non-Ex and Ex	

Sensor housing

Aluminum coating AlSi10Mg

Measuring tubes



Stainless steel 1.4301/304 or 1.4306/304L; for flanges made of carbon steel with Al/Zn protective coating

Liner

- PFA
- PTFE

Process connections

EN 1092-1 (DIN 2501)
 1.4571/316L, C22, FE 410W B, S235JRG2; with Al/Zn protective varnish
 ASME B16.5
 A105, F316L; with Al/Zn protective varnish
 JIS
 S235JRG2, HII, 1.0425/316L; with Al/Zn protective varnish

 List of all available process connections (→  31)

Electrodes

1.4435/316L, Alloy C-22, platinum, tantalum

Seals

In accordance with DIN EN 1514-1

Accessories

Weather protection cover

Stainless steel 1.4301

Ground disks

1.4435/316L, Alloy C-22, tantalum

Fitted electrodes

Measuring electrodes, reference electrodes and electrodes for empty pipe detection:
 ■ Standard: 1.4435/316L, Alloy C-22, platinum, tantalum
 ■ Optional: only measuring electrodes made from platinum

Process connections

- EN 1092-1 (DIN 2501); dimensions as per DIN 2501, DN 65 PN 16 only as per EN 1092-1
- ASME B16.5
- JIS B2220
- AS 2129 Table E
- AS 4087 PN 16

 For information on the materials of the process connections (→  31)

Surface roughness

Electrodes with 1.4435/304L, Alloy C-22, platinum, tantalum:
 ≤ 0.3 to 0.5 μm (11.8 to 19.7 μin)
 (All data relate to parts in contact with fluid)
 Liner with PFA:
 ≤ 0.4 μm (15.7 μin)
 (All data relate to parts in contact with fluid)

Operability

Operating concept

Operator-oriented menu structure for user-specific tasks

- Commissioning
- Operation
- Diagnostics
- Expert level

Quick and safe commissioning

- Guided menus ("Make-it-run" wizards) for applications
- Menu guidance with brief explanations of the individual parameter functions



Reliable operation

- Operation in the following languages:
 - Via local display: English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish, Chinese, Japanese, Bahasa (Indonesian), Vietnamese, Czech
 - Via "FieldCare" operating tool: English, German, French, Spanish, Italian, Dutch, Japanese
- Uniform operating philosophy applied to device and operating tools
- If replacing the electronic module, transfer the device configuration via the integrated memory (integrated HistoROM) which contains the process and measuring device data and the event logbook. No need to reconfigure.

Efficient diagnostics increase measurement availability

- Troubleshooting measures can be called up via the device and in the operating tools
- Diverse simulation options, logbook for events that occur and optional line recorder functions

Local operation

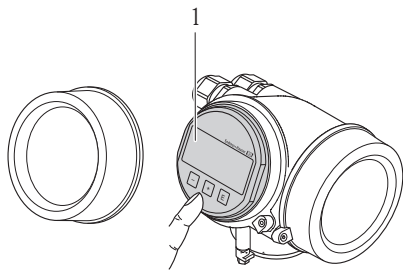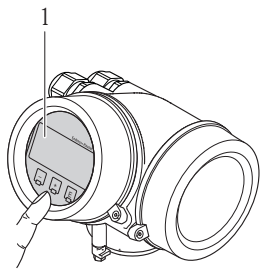Order code for "Display; Operation", option C "SD02"	Order code for "Display; Operation", option E "SD03"
 <p style="text-align: right; font-size: small;">A0015544</p>	 <p style="text-align: right; font-size: small;">A0015546</p>
1 <i>Operation with pushbuttons</i>	1 <i>Operation with touch control</i>

Display elements

- 4-line display
- In the case of order code for "Display; Operation", option **E**: white background lighting; switches to red in event of device errors
- Format for displaying measured variables and status variables can be individually configured
- Permitted ambient temperature for the display: -20 to $+60$ °C (-4 to $+140$ °F)
The readability of the display may be impaired at temperatures outside the temperature range.

Operating elements


- In the case of order code "Display; Operation", Option **C**: local operation with 3 push buttons (⊖, ⊕, ⊞)
- In the case of order code for "Display; Operation", option **E**: external operation via touch control; 3 optical keys: ⊖, ⊕, ⊞
- Operating elements also accessible in various hazardous areas

Additional functionality

- Data backup function
The device configuration can be saved in the display module.
- Data comparison function
The device configuration saved in the display module can be compared to the current device configuration.
- Data transfer function
The transmitter configuration can be transmitted to another device using the display module.

Remote operation

Via HART protocol

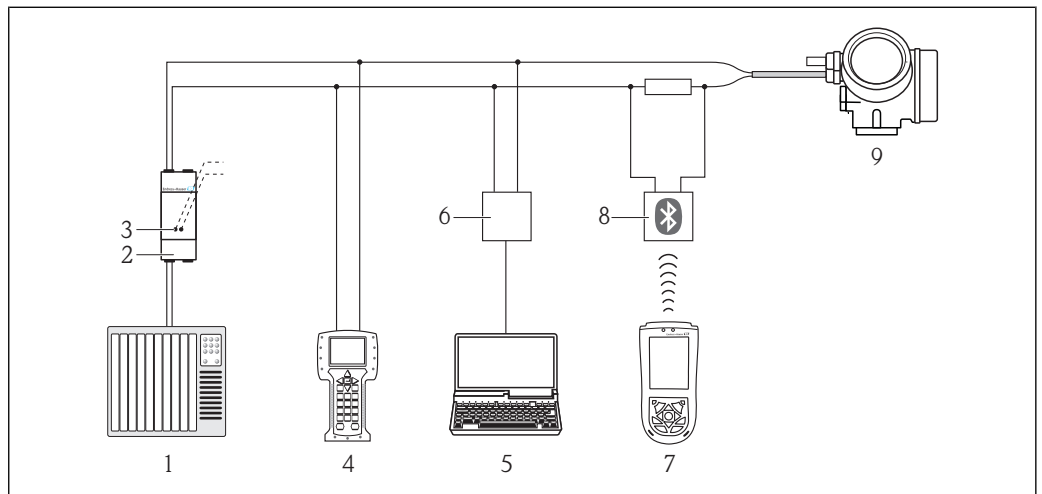


A0013764

19 Options for remote operation via HART protocol

- 1 Control system (e.g. PLC)
- 2 Transmitter power supply unit, e.g. RN221N (with communication resistor)
- 3 Connection for Commubox FXA195 and Field Communicator 475
- 4 Field Communicator 475
- 5 Computer with operating tool (e.g. FieldCare, AMS Device Manager, SIMATIC PDM)
- 6 Commubox FXA195 (USB)
- 7 Field Xpert SFX100
- 8 VIATOR Bluetooth modem with connecting cable
- 9 Transmitter

Via service interface (CDI)

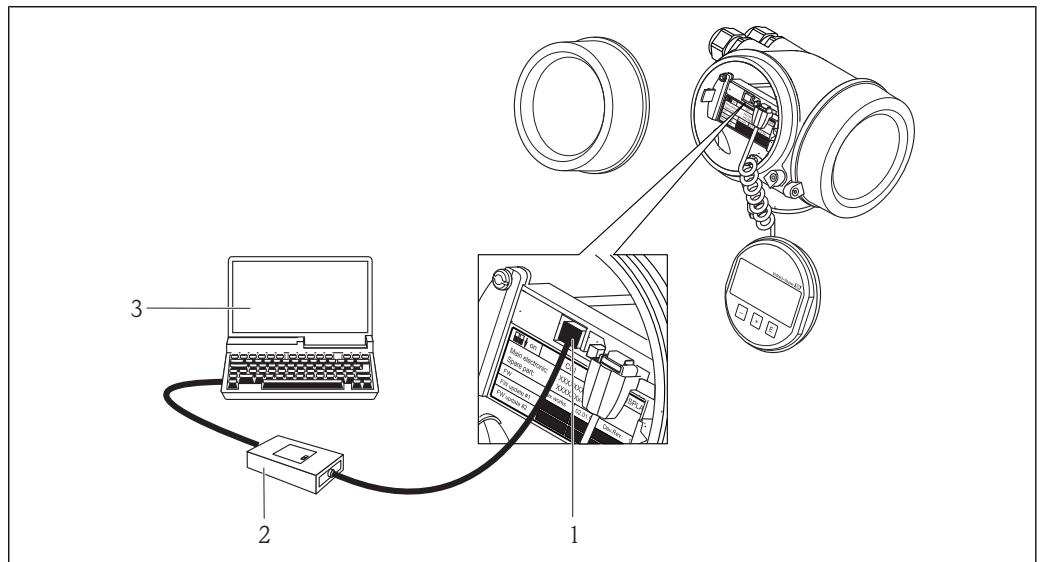

A0014019

- 1 Service interface (CDI = Endress+Hauser Common Data Interface) of the measuring device
- 2 Commubox FXA291
- 3 Computer with "FieldCare" operating tool with COM DTM "CDI Communication FXA291"

Certificates and approvals

CE mark The measuring system is in conformity with the statutory requirements of the applicable EC Directives. These are listed in the corresponding EC Declaration of Conformity along with the standards applied.
Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.

C-Tick symbol The measuring system meets the EMC requirements of the "Australian Communications and Media Authority (ACMA)".

Ex approval The measuring device is certified for use in hazardous areas and the relevant safety instructions are provided in the separate "Safety Instructions" (XA) document. Reference is made to this document on the nameplate.



The separate Ex documentation (XA) containing all the relevant explosion protection data is available from your Endress+Hauser sales center.

ATEX, IECEx

Currently, the following versions for use in hazardous areas are available:

Ex d

Category (ATEX)	Type of protection
II2G	Ex d[ia] IIC T6-T1 Gb
II2D	Ex tb IIIC T** Db

Ex ia

Category (ATEX)	Type of protection
II2G	Ex ia IIC T6-T1 Gb
III2D	Ex tb IIIC T** Db

Ex nA

Category (ATEX)	Type of protection
II3G	Ex nA IIC T6-T1 Gc

Ex ic

Category (ATEX)	Type of protection
II3G	Ex ic IIC T6-T1 Gc

cCSAus

Currently, the following versions for use in hazardous areas are available:

XP (Ex d)

Class I/II/III Division 1 Groups ABCDEFG

IS (Ex i)

Class I/II/III Division 1 Groups ABCDEFG

NI (Ex nA, Ex nL)

Class I Division 2 Groups ABCD; NIFW*

*= NIFW parameter as per Control Drawings

Other standards and guidelines

- EN 60529
Degrees of protection provided by enclosures (IP code)
- EN 61010-1
Protection Measures for Electrical Equipment for Measurement, Control, Regulation and Laboratory Procedures
- IEC/EN 61326
Emission in accordance with Class A requirements. Electromagnetic compatibility (EMC requirements)
- ANSI/ISA-61010-1 (82.02.01): 2004
Safety Requirements for Electrical Equipment for Measurement, Control and Laboratory Use - Part 1 General Requirements
- CAN/CSA-C22.2 No. 61010-1-04
Safety Requirements for Electrical Equipment for Measurement, Control and Laboratory Use - Part 1 General Requirements
- NAMUR NE 21
Electromagnetic compatibility (EMC) of industrial process and laboratory control equipment
- NAMUR NE 32
Data retention in the event of a power failure in field and control instruments with microprocessors
- NAMUR NE 43
Standardization of the signal level for the breakdown information of digital transmitters with analog output signal.
- NAMUR NE 53
Software of field devices and signal-processing devices with digital electronics
- NAMUR NE 105
Specifications for integrating fieldbus devices in engineering tools for field devices
- NAMUR NE 107
Self-monitoring and diagnosis of field devices
- NAMUR NE 131
Requirements for field devices for standard applications

Ordering information

Detailed ordering information is available from the following sources:

- In the Product Configurator on the Endress+Hauser website: www.endress.com → Select country → Instruments → Select device → Product page function: Configure this product
- From your Endress+Hauser Sales Center: www.endress.com/worldwide

**Product Configurator - the tool for individual product configuration**

- Up-to-the-minute configuration data
- Depending on the device: Direct input of measuring point-specific information such as measuring range or operating language
- Automatic verification of exclusion criteria
- Automatic creation of the order code and its breakdown in PDF or Excel output format
- Ability to order directly in the Endress+Hauser Online Shop

Application packages

Many different application packages are available to enhance the functionality of the device. Such packages might be needed to address safety aspects or specific application requirements.

The application packages can be ordered from Endress+Hauser either directly with the device or subsequently. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.

Diagnostics functions

Package	Description
---------	-------------



HistoROM extended function	<p>Comprises extended functions concerning the event log and the activation of the measured value memory (data logger).</p> <p>Event log: Memory volume is extended from 20 message entries (basic version) to up to 100 entries.</p> <p>Data logging (line recorder):</p> <ul style="list-style-type: none"> ■ Memory capacity for up to 1000 measured values is activated. ■ 250 measured values can be output via each of the 4 memory channels. The recording interval can be defined and configured by the user. ■ Data logging is visualized via the local display or FieldCare.
----------------------------	---

Accessories


Various accessories, which can be ordered with the device or subsequently from Endress+Hauser, are available for the device. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.

Device-specific accessories




For the transmitter






Accessories	Description
	<p>Transmitter for replacement or storage. Use the order code to define the following specifications:</p> <ul style="list-style-type: none"> ■ Approvals ■ Output ■ Display / operation ■ Housing ■ Software <p> For details, see Installation Instructions EA00104D</p>
Weather protection cover	<p>Is used to protect the measuring device from the effects of the weather: e.g. rainwater, excess heating from direct sunlight or extreme cold in winter.</p> <p> For details, see Installation Instructions SD00333F</p>
Ground cable	Set, consisting of two ground cables for potential equalization.

For the sensor


Accessories	Description
Ground disks	<p>Are used to ground the fluid in lined measuring tubes to ensure proper measurement.</p> <p> For details, see Installation Instructions EA00070D</p>

Communication-specific accessories

Accessories	Description
Commubox FXA191 HART	<p>For intrinsically safe HART communication with FieldCare via the RS232C interface.</p> <p> For details, see "Technical Information" TI00237F</p>
Commubox FXA195 HART	<p>For intrinsically safe HART communication with FieldCare via the USB interface.</p> <p> For details, see "Technical Information" TI00404F</p>
Commubox FXA291	<p>Connects Endress+Hauser field devices with a CDI interface (= Endress+Hauser Common Data Interface) and the USB port of a computer or laptop.</p> <p> For details, see "Technical Information" TI00405C</p>




HART Loop Converter HMX50	<p>Is used to evaluate and convert dynamic HART process variables to analog current signals or limit values.</p> <p> For details, see "Technical Information" TI00429F and Operating Instructions BA00371F</p>
WirelessHART adapter	<p>Is used for the wireless connection of field devices.</p> <p>The WirelessHART adapter can be easily integrated into field devices and existing infrastructures, offers data protection and transmission safety and can be operated in parallel with other wireless networks with minimum cabling complexity.</p> <p> For details, see Operating Instructions BA00061S</p>
Fieldgate FXA320	<p>Gateway for the remote monitoring of connected 4-20 mA measuring devices via a Web browser.</p> <p> For details, see "Technical Information" TI00025S and Operating Instructions BA00053S</p>
Fieldgate FXA520	<p>Gateway for the remote diagnostics and remote configuration of connected HART measuring devices via a Web browser.</p> <p> For details, see "Technical Information" TI00025S and Operating Instructions BA00051S</p>
Field Xpert SFX100	<p>Compact, flexible and robust industry handheld terminal for remote configuration and for obtaining measured values via the HART current output (4-20 mA).</p> <p> For details, see Operating Instructions BA00060S</p>

Service-specific accessories


Accessories	Description
Applicator	<p>Software for selecting and sizing Endress+Hauser measuring devices:</p> <ul style="list-style-type: none"> ■ Calculation of all the necessary data for identifying the optimum flowmeter: e.g. nominal diameter, pressure loss, accuracy or process connections. ■ Graphic illustration of the calculation results <p>Administration, documentation and access to all project-related data and parameters over the entire life cycle of a project.</p> <p>Applicator is available:</p> <ul style="list-style-type: none"> ■ Via the Internet: https://wapps.endress.com/applicator ■ On CD-ROM for local PC installation.
W@M	<p>Life cycle management for your plant</p> <p>W@M supports you with a wide range of software applications over the entire process: from planning and procurement, to the installation, commissioning and operation of the measuring devices. All the relevant device information, such as the device status, spare parts and device-specific documentation, is available for every device over the entire life cycle. The application already contains the data of your Endress+Hauser device. Endress+Hauser also takes care of maintaining and updating the data records.</p> <p>W@M is available:</p> <ul style="list-style-type: none"> ■ Via the Internet: www.endress.com/lifecyclemanagement ■ On CD-ROM for local PC installation.
FieldCare	<p>FDT-based plant asset management tool from Endress+Hauser.</p> <p>It can configure all smart field units in your system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.</p> <p> For details, see Operating Instructions BA00027S and BA00059S</p>

System components

Accessories	Description
-------------	-------------

Memograph M graphic display recorder	The Memograph M graphic data manager provides information on all the relevant measured variables. Measured values are recorded correctly, limit values are monitored and measuring points analyzed. The data are stored in the 256 MB internal memory and also on a SD card or USB stick.  For details, see "Technical Information" TI00133R and Operating Instructions BA00247R
RN221N	Active barrier with power supply for safe separation of 4-20 mA standard signal circuits. Offers bidirectional HART transmission.  For details, see "Technical Information" TI00073R and Operating Instructions BA00202R
RNS221	Supply unit for powering two 2-wire measuring devices solely in the non-Ex area. Bidirectional communication is possible via the HART communication jacks.  For details, see "Technical Information" TI00081R and Brief Operating Instructions KA00110R


Documentation

-  The following document types are available:
- On the CD-ROM supplied with the device
 - In the Download Area of the Endress+Hauser Internet site: www.endress.com → Download

Standard documentation

Communication	Document type	Documentation code
HART	Operating Instructions	BA01111D
----	Brief Operating Instructions	KA01121D

Supplementary device-dependent documentation

Document type	Approval	Documentation code
Safety Instructions	ATEX/IECEX Ex d[ia], Ex tb	XA01015D
	ATEX/IECEX Ex ia, Ex tb	XA01016D
	ATEX/IECEX Ex nA, Ex ic	XA01017D
	cCSAus XP (Ex d)	XA01018D
	cCSAus IS (Ex i)	XA01019D
Information on the Pressure Equipment Directive		SD01056D
Installation Instructions		Specified for each individual accessory (→  36)

Registered trademarks

HART®

Registered trademark of the HART Communication Foundation, Austin, USA

Applicator®, FieldCare®, Field Xpert™, HistoroM®

Registered or registration-pending trademarks of the Endress+Hauser Group

Instruments International

Endress+Hauser
Instruments International AG
Kaegenstrasse 2
4153 Reinach
Switzerland

Tel.+41 61 715 81 00
Fax+41 61 715 25 00
www.endress.com
info@ii.endress.com

Endress + Hauser 
People for Process Automation