



# Operating Instructions

## Micropilot FMR50

### HART

Free space radar

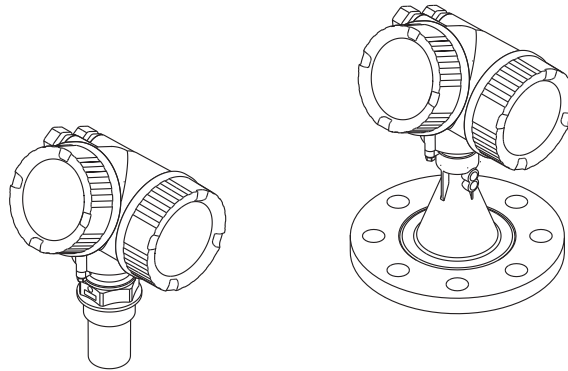

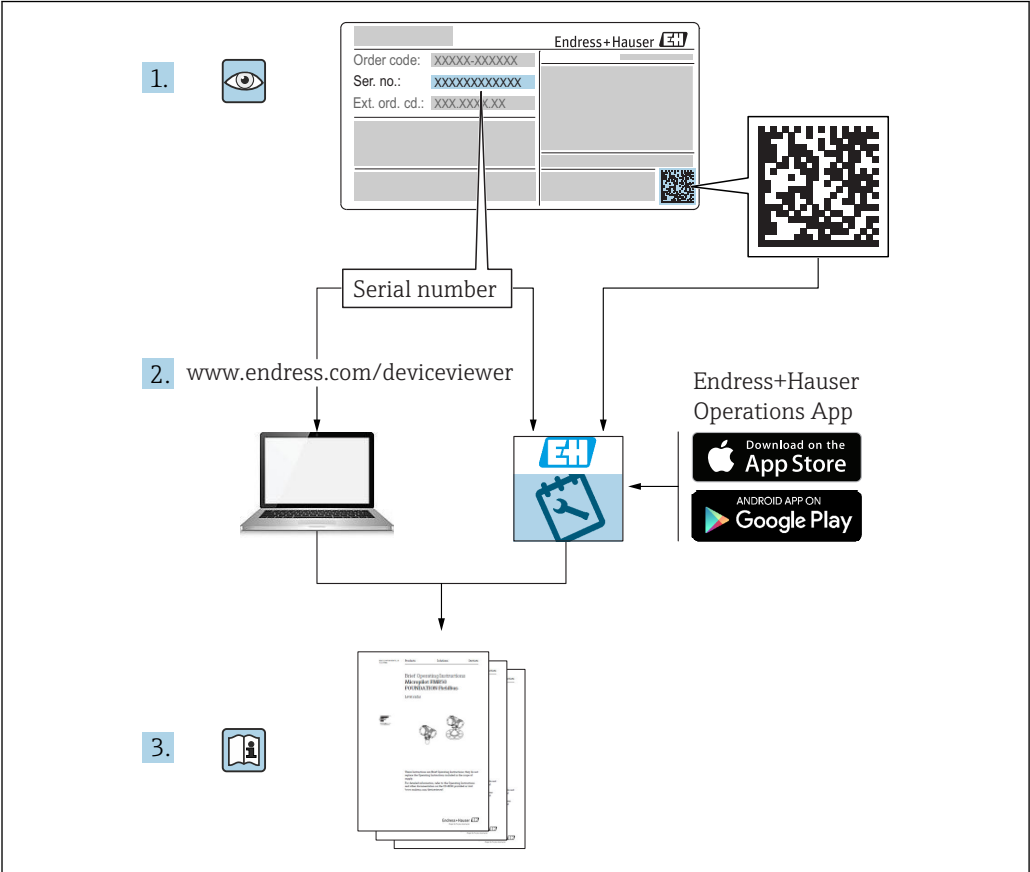

A0023555

## Table of contents

<b>1</b>	<b>Wichtige Hinweise zum Dokument</b> . . . . .	<b>6</b>	6.3	Installation in vessel (free space) . . . . .	25
1.1	Document function . . . . .	6	6.3.1	Horn antenna encapsulated (FMR50) . . . . .	25
1.2	Symbols . . . . .	6	6.3.2	Horn antenna with slip-on flange (FMR50) . . . . .	26
1.2.1	Safety symbols . . . . .	6	6.3.3	Horn antenna with mounting bracket (FMR50) . . . . .	28
1.2.2	Electrical symbols . . . . .	6	6.3.4	Measurement from the outside through plastic walls (FMR50/FMR51) . . . . .	28
1.2.3	Tool symbols . . . . .	6	6.4	Installation in stilling well . . . . .	29
1.2.4	Symbols for certain types of information . . . . .	7	6.4.1	Recommendations for the stilling well . . . . .	29
1.2.5	Symbols in graphics . . . . .	7	6.4.2	Examples for the construction of stilling wells . . . . .	30
1.2.6	Symbols at the device . . . . .	8	6.5	Installation in bypass . . . . .	31
1.3	Additional documentation . . . . .	8	6.5.1	Recommendations for the bypass pipe . . . . .	31
1.4	Terms and abbreviations . . . . .	9	6.5.2	Example for the construction of a bypass . . . . .	32
1.5	Registered trademarks . . . . .	10	6.6	Container with heat insulation . . . . .	33
<b>2</b>	<b>Basic safety instructions</b> . . . . .	<b>11</b>	6.7	Turning the transmitter housing . . . . .	33
2.1	Requirements for the personnel . . . . .	11	6.8	Turning the display . . . . .	34
2.2	Designated use . . . . .	11	6.8.1	Opening cover . . . . .	34
2.3	Workplace safety . . . . .	12	6.8.2	Turning the display module . . . . .	34
2.4	Operational safety . . . . .	12	6.8.3	Closing electronics compartment cover . . . . .	35
2.5	Product safety . . . . .	12	6.9	Post-installation check . . . . .	35
2.5.1	CE mark . . . . .	12	<b>7</b>	<b>Electrical connection</b> . . . . .	<b>36</b>
2.5.2	EAC conformity . . . . .	13	7.1	Connection conditions . . . . .	36
2.6	Safety Instructions (XA) . . . . .	13	7.1.1	Terminal assignment . . . . .	36
<b>3</b>	<b>Product description</b> . . . . .	<b>16</b>	7.1.2	Cable specification . . . . .	42
3.1	Product design . . . . .	16	7.1.3	Device plug connectors . . . . .	43
3.1.1	Micropilot FMR50 . . . . .	16	7.1.4	Supply voltage . . . . .	44
3.1.2	Electronics housing . . . . .	16	7.1.5	Overvoltage protection . . . . .	46
<b>4</b>	<b>Incoming acceptance and product identification</b> . . . . .	<b>17</b>	7.2	Connecting the measuring device . . . . .	46
4.1	Incoming acceptance . . . . .	17	7.2.1	Opening connection compartment cover . . . . .	47
4.2	Product identification . . . . .	17	7.2.2	Connecting . . . . .	47
4.2.1	Nameplate . . . . .	18	7.2.3	Plug-in spring-force terminals . . . . .	48
<b>5</b>	<b>Storage, Transport</b> . . . . .	<b>19</b>	7.2.4	Closing connection compartment cover . . . . .	48
5.1	Storage conditions . . . . .	19	7.3	Post-connection check . . . . .	49
5.2	Transport product to the measuring point . . . . .	19	<b>8</b>	<b>Operation options</b> . . . . .	<b>50</b>
<b>6</b>	<b>Installation</b> . . . . .	<b>20</b>	8.1	Overview . . . . .	50
6.1	Installation conditions . . . . .	20	8.1.1	Local operation . . . . .	50
6.1.1	Mounting position . . . . .	20	8.1.2	Operation with remote display and operating module FHX50 . . . . .	51
6.1.2	Vessel installations . . . . .	21	8.1.3	Operation via Bluetooth® wireless technology . . . . .	52
6.1.3	Reduction of interference echoes . . . . .	21	8.1.4	Remote operation . . . . .	53
6.1.4	Measurement in a plastic vessel . . . . .	22			
6.1.5	Optimization options . . . . .	22			
6.1.6	Beam angle . . . . .	23			
6.2	Measuring conditions . . . . .	24			

8.2	Structure and function of the operating menu .....	54	13.5	Overview of diagnostic events .....	90
8.2.1	Structure of the operating menu ....	54	13.6	Event logbook .....	91
8.2.2	User roles and related access authorization .....	56	13.6.1	Event history .....	91
8.2.3	Data access - Security .....	56	13.6.2	Filtering the event logbook .....	92
8.3	Display and operating module .....	61	13.6.3	Overview of information events .....	92
8.3.1	Display appearance .....	61	13.7	Firmware history .....	93
8.3.2	Operating elements .....	64	<b>14</b>	<b>Maintenance .....</b>	<b>94</b>
8.3.3	Entering numbers and text .....	65	14.1	Exterior cleaning .....	94
8.3.4	Opening the context menu .....	67	14.2	Replacing seals .....	94
8.3.5	Envelope curve on the display and operating module .....	68	<b>15</b>	<b>Repairs .....</b>	<b>95</b>
<b>9</b>	<b>System integration via HART protocol .....</b>	<b>69</b>	15.1	General information on repairs .....	95
9.1	Overview of the Device Description files (DD) .....	69	15.1.1	Repair concept .....	95
9.2	Measured values via HART protocol .....	69	15.1.2	Repairs to Ex-approved devices .....	95
<b>10</b>	<b>Commissioning via SmartBlue (app) .....</b>	<b>70</b>	15.1.3	Replacement of an electronics module .....	95
10.1	Requirements .....	70	15.1.4	Replacement of a device .....	95
10.2	Commissioning .....	70	15.2	Spare parts .....	96
<b>11</b>	<b>Commissioning via wizard .....</b>	<b>74</b>	15.3	Return .....	96
<b>12</b>	<b>Commissioning via operating menu .....</b>	<b>75</b>	15.4	Disposal .....	96
12.1	Installation and function check .....	75	<b>16</b>	<b>Accessories .....</b>	<b>97</b>
12.2	Setting the operating language .....	75	16.1	Device-specific accessories .....	97
12.3	Configuration of a level measurement .....	76	16.1.1	Weather protection cover .....	97
12.4	Recording the reference curve .....	78	16.1.2	Mounting nut G1-1/2 .....	97
12.5	Configuration of the on-site display .....	79	16.1.3	Variable flange seal for FMR50/ FMR56 .....	98
12.5.1	Factory settings of the on-site display .....	79	16.1.4	Mounting bracket for wall or ceiling mounting of FMR50/FMR56 .....	99
12.5.2	Adjustment of the on-site display ...	79	16.1.5	Installation bracket for FMR50 ....	100
12.6	Configuration of the current outputs .....	79	16.1.6	Remote display FHX50 .....	101
12.6.1	Factory setting of the current outputs .....	79	16.1.7	Overvoltage protection .....	102
12.6.2	Adjustment of the current outputs ...	79	16.1.8	Bluetooth module for HART devices	103
12.7	Configuration management .....	80	16.2	Communication-specific accessories .....	104
12.8	Protection of the settings against unauthorized changes .....	81	16.3	Service-specific accessories .....	105
<b>13</b>	<b>Diagnostics and troubleshooting ...</b>	<b>82</b>	16.4	System components .....	106
13.1	General trouble shooting .....	82	<b>17</b>	<b>Operating menu .....</b>	<b>107</b>
13.1.1	General errors .....	82	17.1	Overview of the operating menu (SmartBlue) .....	107
13.1.2	Error - SmartBlue operation .....	83	17.2	Overview of the operating menu (display module) .....	112
13.1.3	Parametrization errors .....	83	17.3	Overview of the operating menu (operating tool) .....	119
13.2	Diagnostic information on local display .....	85	17.4	"Setup" menu .....	125
13.2.1	Diagnostic message .....	85	17.4.1	"Mapping" wizard .....	133
13.2.2	Calling up remedial measures .....	87	17.4.2	"Advanced setup" submenu .....	135
13.3	Diagnostic event in the operating tool .....	88	17.5	"Diagnostics" menu .....	180
13.4	Diagnostic list .....	89	17.5.1	"Diagnostic list" submenu .....	182
			17.5.2	"Event logbook" submenu .....	183
			17.5.3	"Device information" submenu .....	184
			17.5.4	"Measured values" submenu .....	187
			17.5.5	"Data logging" submenu .....	189
			17.5.6	"Simulation" submenu .....	192
			17.5.7	"Device check" submenu .....	197

17.5.8 "Heartbeat" submenu .....	199
<b>Index .....</b>	<b>200</b>





# 1 Wichtige Hinweise zum Dokument

## 1.1 Document function






These Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.

## 1.2 Symbols



### 1.2.1 Safety symbols


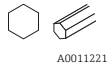

Symbol	Meaning
	<b>DANGER!</b> This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.
	<b>WARNING!</b> This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.
	<b>CAUTION!</b> This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.
	<b>NOTE!</b> This symbol contains information on procedures and other facts which do not result in personal injury.

### 1.2.2 Electrical symbols













Symbol	Meaning
	Direct current
	Alternating current
	Direct current and alternating current
	<b>Ground connection</b> A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
	<b>Protective Earth (PE)</b> A terminal which must be connected to ground prior to establishing any other connections.  The ground terminals are situated inside and outside the device: <ul style="list-style-type: none"> <li>▪ Inner ground terminal: Connects the protective earth to the mains supply.</li> <li>▪ Outer ground terminal: Connects the device to the plant grounding system.</li> </ul>

### 1.2.3 Tool symbols







Symbol	Meaning
 A0013442	Torx screwdriver
 A0011220	Flat blade screwdriver

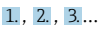Symbol	Meaning
 A0011219	Cross-head screwdriver
 A0011221	Allen key
 A0011222	Hexagon wrench



### 1.2.4 Symbols for certain types of information

Symbol	Meaning
	<b>Permitted</b> Procedures, processes or actions that are permitted.
	<b>Preferred</b> Procedures, processes or actions that are preferred.
	<b>Forbidden</b> Procedures, processes or actions that are forbidden.
	<b>Tip</b> Indicates additional information.
	Reference to documentation.
	Reference to page.
	Reference to graphic.
	Notice or individual step to be observed.
	Series of steps.
	Result of a step.
	Help in the event of a problem.
	Visual inspection.
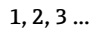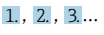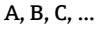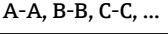
### 1.2.5 Symbols in graphics

Symbol	Meaning
	Item numbers
	Series of steps
	Views
	Sections
	<b>Hazardous area</b> Indicates a hazardous area.
	<b>Safe area (non-hazardous area)</b> Indicates the non-hazardous area.

### 1.2.6 Symbols at the device

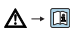Symbol	Meaning
	<b>Safety instructions</b> Observe the safety instructions contained in the associated Operating Instructions.
	<b>Temperature resistance of the connection cables</b> Specifies the minimum value of the temperature resistance of the connection cables.

### 1.3 Additional documentation

Document	Purpose and content of the document
Technical Information TI01039F (FMR50)	<b>Planning aid for your device</b> The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.
Brief Operating Instructions KA01099F (FMR50, HART)	<b>Guide that takes you quickly to the 1st measured value</b> The Brief Operating Instructions contain all the essential information from incoming acceptance to initial commissioning.
Description of Device Parameters GP01014F (FMR5x, HART)	<b>Reference for your parameters</b> The document provides a detailed explanation of each individual parameter in the operating menu. The description is aimed at those who work with the device over the entire life cycle and perform specific configurations.
Special documentation SD01087F	<b>Functional Safety Manual</b> The document is part of the Operating Instructions and serves as a reference for application-specific parameters and notes.
Special documentation SD01870F	<b>Manual for Heartbeat Verification and Heartbeat Monitoring</b> The document contains descriptions of the additional parameters and technical data which are available with the <b>Heartbeat Verification</b> and <b>Heartbeat Monitoring</b> application packages.

 For an overview of the scope of the associated Technical Documentation, refer to the following:

- The *W@M Device Viewer* : Enter the serial number from the nameplate ([www.endress.com/deviceviewer](http://www.endress.com/deviceviewer))
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.



## 1.4 Terms and abbreviations

Term/abbreviation	Explanation
BA	Document type "Operating Instructions"
KA	Document type "Brief Operating Instructions"
TI	Document type "Technical Information"
SD	Document type "Special Documentation"
XA	Document type "Safety Instructions"
PN	Nominal pressure
MWP	Maximum Working Pressure The MWP can also be found on the nameplate.
ToF	Time of Flight
FieldCare	Scalable software tool for device configuration and integrated plant asset management solutions
DeviceCare	Universal configuration software for Endress+Hauser HART, PROFIBUS, FOUNDATION Fieldbus and Ethernet field devices
DTM	Device Type Manager
DD	Device Description for HART communication protocol
$\epsilon_r$ (DC value)	Relative dielectric constant
Operating tool	The term "operating tool" is used in place of the following operating software: <ul style="list-style-type: none"> <li>■ FieldCare / DeviceCare, for operation via HART communication and PC</li> <li>■ SmartBlue (app), for operation using an Android or iOS smartphone or tablet.</li> </ul>
BD	Blocking Distance; no signals are analyzed within the BD.
PLC	Programmable Logic Controller
CDI	Common Data Interface
PFS	Pulse Frequency Status (Switching output)

## 1.5 Registered trademarks

### **HART®**

Registered trademark of the FieldComm Group, Austin, USA

### **Bluetooth®**

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Endress+Hauser is under license. Other trademarks and trade names are those of their respective owners.

### **Apple®**

Apple, the Apple logo, iPhone, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.

### **Android®**

Android, Google Play and the Google Play logo are trademarks of Google Inc.

### **KALREZ®, VITON®**

Registered trademark of DuPont Performance Elastomers L.L.C., Wilmington, USA

### **TEFLON®**

Registered trademark of E.I. DuPont de Nemours & Co., Wilmington, USA

### **TRI CLAMP®**

Registered trademark of Alfa Laval Inc., Kenosha, USA

## 2 Basic safety instructions

### 2.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- ▶ Trained, qualified specialists must have a relevant qualification for this specific function and task.
- ▶ Are authorized by the plant owner/operator.
- ▶ Are familiar with federal/national regulations.
- ▶ Before starting work, read and understand the instructions in the manual and supplementary documentation as well as the certificates (depending on the application).
- ▶ Follow instructions and comply with basic conditions.

The operating personnel must fulfill the following requirements:

- ▶ Are instructed and authorized according to the requirements of the task by the facility's owner-operator.
- ▶ Follow the instructions in this manual.

### 2.2 Designated use

#### Application and measured materials

The measuring device described in these Operating Instructions is intended for the continuous, contactless level measurement of liquids, pastes and sludge. The device can also be freely mounted outside closed metal vessels (e.g. above basins, open channels or open piles) because of its operating frequency of about 26 GHz, a maximum radiated pulsed power of 5.7 mW and an average power output of 0.015 mW (for the version with advanced dynamics: maximum pulse power: 23.3 mW; average power: 0.076 mW). Operation is completely harmless to humans and animals.

Observing the limit values specified in the "Technical data" and listed in the Operating Instructions and supplementary documentation, the measuring device may be used for the following measurements only:

- ▶ Measured process variables: level, distance, signal strength
- ▶ Calculated process variables: Volume or mass in arbitrarily shaped vessels; flow through measuring weirs or flumes (calculated from the level by the linearization functionality)

To ensure that the measuring device remains in proper condition for the operation time:

- ▶ Use the measuring device only for measured materials against which the process-wetted materials are adequately resistant.
- ▶ Observe the limit values in "Technical data".

#### Incorrect use

The manufacturer is not liable for damage caused by improper or non-designated use.

Verification for borderline cases:

- ▶ For special measured materials and cleaning agents, Endress+Hauser is glad to provide assistance in verifying the corrosion resistance of wetted materials, but does not accept any warranty or liability.

#### Residual risk

The electronics housing and its built-in components such as display module, main electronics module and I/O electronics module may heat to 80 °C (176 °F) during operation through heat transfer from the process as well as power dissipation within the electronics. During operation the sensor may assume a temperature near the temperature of the measured material.

Danger of burns due to heated surfaces!

- ▶ For high process temperatures: Install protection against contact in order to prevent burns.

## 2.3 Workplace safety

For work on and with the device:

- ▶ Wear the required personal protective equipment according to federal/national regulations.

## 2.4 Operational safety

Risk of injury.

- ▶ Operate the device in proper technical condition and fail-safe condition only.
- ▶ The operator is responsible for interference-free operation of the device.

### Conversions to the device

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers.

- ▶ If, despite this, modifications are required, consult with the manufacturer.

### Repair

To ensure continued operational safety and reliability,

- ▶ Carry out repairs on the device only if they are expressly permitted.
- ▶ Observe federal/national regulations pertaining to repair of an electrical device.
- ▶ Use original spare parts and accessories from the manufacturer only.

### Hazardous area

To eliminate a danger for persons or for the facility when the device is used in the hazardous area (e.g. explosion protection, pressure vessel safety):

- ▶ Based on the nameplate, check whether the ordered device is permitted for the intended use in the hazardous area.
- ▶ Observe the specifications in the separate supplementary documentation that is an integral part of these Instructions.

## 2.5 Product safety

This measuring device is designed in accordance with good engineering practice to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate. It meets general safety standards and legal requirements.

### NOTICE

#### Loss of degree of protection by opening of the device in humid environments

- ▶ If the device is opened in a humid environment, the degree of protection indicated on the nameplate is no longer valid. This may also impair the safe operation of the device.

### 2.5.1 CE mark

The measuring system meets the legal requirements of the applicable EC guidelines. These are listed in the corresponding EC Declaration of Conformity together with the standards applied.

Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.

## 2.5.2 EAC conformity

The measuring system meets the legal requirements of the applicable EAC guidelines. These are listed in the corresponding EAC Declaration of Conformity together with the standards applied.

Endress+Hauser confirms successful testing of the device by affixing to it the EAC mark.

## 2.6 Safety Instructions (XA)

Depending on the approval, the following Safety Instructions (XA) are supplied with the device. They are an integral part of the Operating Instructions.

Feature 010	Approval	Available for	Feature 020 "Power Supply; Output"				
			A <sup>1)</sup>	B <sup>2)</sup>	C <sup>3)</sup>	E <sup>4)/G<sup>5)</sup></sup>	K <sup>6)/L<sup>7)</sup></sup>
BA	ATEX: II 1/2 G Ex ia IIC T6-T1 Ga	FMR50	XA00677F	XA00677F	XA00677F	XA00685F	-
BB	ATEX: II 1/2 G Ex ia IIC T6-T1 Ga/Gb	FMR50	XA00677F	XA00677F	XA00677F	XA00685F	-
BC	ATEX: II 1/2 G Ex d [ia] IIC T6-T1 Ga/Gb	FMR50	XA00680F	XA00680F	XA00680F	XA00688F	XA00680F
BG	ATEX: II 3 G Ex nA IIC T6-T1 Gc	FMR50	XA00679F	XA00679F	XA00679F	XA00687F	XA00679F
BH	ATEX: II 3 G Ex ic IIC T6-T1 Gc	FMR50	XA00679F	XA00679F	XA00679F	XA00687F	XA00679F
B2	ATEX: II 1/2 G Ex ia IIC T6-T1 Ga/Gb ATEX: II 1/2 D Ex ia IIIC Txx°C Da/Db	FMR50	XA00683F	XA00683F	XA00683F	XA00691F	-
B3	ATEX: II 1/2 G Ex d [ia] IIC T6-T1 Ga/Gb ATEX: II 1/2 D Ex ta IIIC Txx°C Da/Db	FMR50	XA00684F	XA00684F	XA00684F	XA00692F	XA00684F
B4	ATEX: II 1/2 G Ex ia IIC T6-T1 Ga/Gb ATEX: II 1/2 G Ex d [ia] IIC T6-T1 Ga/Gb	FMR50	XA00681F	XA00681F	XA00681F	XA00689F	-
CB	CSA C/US XP Cl.I Div.1 Gr.A-D	FMR50	XA01112F	XA01112F	XA01112F	XA01114F	-
CC	CSA C/US XP Cl.I Div.1 Gr.A-D	FMR50	XA01113F	XA01113F	XA01113F	XA01115F	XA01113F
C2	CSA C/US IS Cl.I,II,III Div.1 Gr.A-G, NI Cl.1 Div.2, Ex ia	FMR50	XA01112F	XA01112F	XA01112F	XA01114F	-
C3	CSA C/US XP Cl.I,II,III Div.1 Gr.A-G, NI Cl.1 Div.2, Ex d	FMR50	XA01113F	XA01113F	XA01113F	XA01115F	XA01113F
FA	FM IS Cl.I Div.1 Gr.A-D	FMR50	XA01116F	XA01116F	XA01116F	XA01118F	-
FB	FM IS Cl.I,II,III Div.1 Gr.A-G, AEx ia, NI Cl.1 Div.2	FMR50	XA01116F	XA01116F	XA01116F	XA01118F	-
FC	FM XP Cl.I Div.1 Gr.A-D	FMR50	XA01117F	XA01117F	XA01117F	XA01119F	XA01117F
FD	FM XP Cl.I,II,III Div.1 Gr.A-G, AEx d, NI Cl.1 Div.2	FMR50	XA01117F	XA01117F	XA01117F	XA01119F	XA01117F
IA	IECEX: Ex ia IIC T6-T1 Ga	FMR50	XA00677F	XA00677F	XA00677F	XA00685F	-
IB	IECEX: Ex ia IIC T6-T1 Ga/Gb	FMR50	XA00677F	XA00677F	XA00677F	XA00685F	-
IC	IECEX: Ex d [ia] IIC T6-T1 Ga/Gb	FMR50	XA00680F	XA00680F	XA00680F	XA00688F	XA00680F
IG	IECEX: Ex nA IIC T6-T1 Gc	FMR50	XA00679F	XA00679F	XA00679F	XA00687F	XA00679F
IH	IECEX: Ex ic IIC T6-T1 Gc	FMR50	XA00679F	XA00679F	XA00679F	XA00687F	XA00679F
I2	IECEX: Ex ia IIC T6-T1 Ga/Gb IECEX: Ex ia IIIC Txx°C Da/Db	FMR50	XA00683F	XA00683F	XA00683F	XA00691F	-
I3	IECEX: Ex d [ia] IIC T6-T1 Ga/Gb IEXEX: Ex ta IIIC Txx°C Da/Db	FMR50	XA00684F	XA00684F	XA00684F	XA00692F	XA00684F
I4	IECEX: Ex ia IIC T6-T1 Ga/Gb IECEX: Ex d [ia] IIC T6-T1 Ga/Gb	FMR50	XA00681F	XA00681F	XA00681F	XA00689F	-
J1	JPN Ex ia IIC T6 Ga/Gb	FMR50	XA01716F	XA01716F	-	-	-
J2	JPN Ex [ia] IIC T6 Ga/Gb	FMR50	XA01717F	XA01717F	-	-	-

Feature 010	Approval	Available for	Feature 020 "Power Supply; Output"				
			A <sup>1)</sup>	B <sup>2)</sup>	C <sup>3)</sup>	E <sup>4)</sup> /G <sup>5)</sup>	K <sup>6)</sup> /L <sup>7)</sup>
KA	KC Ex ia IIC T6 Ga	FMR50	XA01045F	XA01045F	XA01045F	XA01047F	-
KB	KC Ex ia IIC T6 Ga/Gb	FMR50	XA01045F	XA01045F	XA01045F	XA01047F	-
KC	KC Ex d[ia] IIC T6	FMR50	XA01046F	XA01046F	XA01046F	XA01048F	XA01046F
MA	INMETRO: Ex ia IIC T6 Ga	FMR50	XA01286F	XA01287F	XA01288F	XA01296F	-
MC	INMETRO: Ex d[ia] IIC T6 Ga/Gb	FMR50	XA01292F	XA01292F	XA01293F	XA01298F	XA01294F
MH	INMETRO: Ex ic IIC T6 Gc	FMR50	XA01289F	XA01290F	XA01291F	XA01297F	-
NA	NEPSI Ex ia IIC T6 Ga	FMR50	XA01199F	XA01199F	XA01199F	XA01208F	-
NB	NEPSI Ex ia IIC T6 Ga/Gb	FMR50	XA01199F	XA01199F	XA01199F	XA01208F	-
NC	NEPSI Ex d[ia] IIC T6 Ga/Gb	FMR50	XA01202F	XA01202F	XA01202F	XA01211F	XA01202F
NG	NEPSI Ex nA II T6 Gc	FMR50	XA01201F	XA01201F	XA01201F	XA01210F	XA01201F
NH	NEPSI Ex ic IIC T6 Gc	FMR50	XA01201F	XA01201F	XA01201F	XA01210F	XA01201F
N2	NEPSI Ex ia IIC T6 Ga/Gb, Ex iaD 20/21 T85...90oC	FMR50	XA01205F	XA01205F	XA01205F	XA01214F	-
N3	NEPSI Ex d[ia] IIC T6 Ga/Gb, DIP A20/21 T85...90oC IP66	FMR50	XA01206F	XA01206F	XA01206F	XA01215F	XA01206F
8A	FM/CSA IS+XP Cl.I,II,III Div.1 Gr.A-G	FMR50	<ul style="list-style-type: none"> <li>▪ XA01112F</li> <li>▪ XA01113F</li> <li>▪ XA01116F</li> <li>▪ XA01117F</li> </ul>	<ul style="list-style-type: none"> <li>▪ XA01112F</li> <li>▪ XA01113F</li> <li>▪ XA01116F</li> <li>▪ XA01117F</li> </ul>	<ul style="list-style-type: none"> <li>▪ XA01112F</li> <li>▪ XA01113F</li> <li>▪ XA01116F</li> <li>▪ XA01117F</li> </ul>	<ul style="list-style-type: none"> <li>▪ XA01114F</li> <li>▪ XA01115F</li> <li>▪ XA01118F</li> <li>▪ XA01119F</li> </ul>	-

- 1) 2-wire; 4-20mA HART
- 2) 2-wire; 4-20mA HART, switch output
- 3) 2-wire; 4-20mA HART, 4-20mA
- 4) 2-wire; FOUNDATION Fieldbus, switch output
- 5) 2-wire; PROFIBUS PA, switch output
- 6) 4-wire 90-253VAC; 4-20mA HART
- 7) 4-wire 10.4-48VDC; 4-20mA HART

 For certified devices the relevant Safety Instructions (XA) are indicated on the nameplate.

If the device is prepared for the remote display FHX50 (product structure: feature 030: Display, Operation", option L or M), the Ex marking of some certificates changes according to the following table<sup>1)</sup>:

Feature 010 ("Approval")	Feature 030 ("Display, Operation")	Ex marking
BG	L, M or N	ATEX II 3G Ex nA [ia Ga] IIC T6-T1 Gc
BH	L, M or N	ATEX II 3G Ex ic [ia Ga] IIC T6-T1 Gc
B3	L, M or N	ATEX II 1/2G Ex d [ia] IIC T6-T1 Ga/Gb, ATEX II 1/2D Ex ta [ia Db] IIIC Txx°C Da/Db
IG	L, M or N	IECEX Ex nA [ia Ga] IIC T6-T1 Gc
IH	L, M or N	IECEX Ex ic [ia Ga] IIC T6-T1 Gc
I3	L, M or N	IECEX Ex d [ia] IIC T6-T1 Ga/Gb, IECEX Ex ta [ia Db] IIIC Txx°C Da/Db
MH	L, M or N	Ex ic [ia Ga] IIC T6 Gc
NG	L, M or N	NEPSI Ex nA [ia Ga] IIC T6-T1 Gc


1) The marking of certificates not mentioned in this table are not affected by the FHX50.

Feature 010 ("Approval")	Feature 030 ("Display, Operation")	Ex marking
NH	L, M or N	NEPSI Ex ic [ia Ga] IIC T6-T1 Gc
N3	L, M or N	NEPSI Ex d [ia] IIC T6-T1 Ga/Gb, DIP A20/21 [ia D] TA, Txx°C IP6X

## 3 Product description

### 3.1 Product design

#### 3.1.1 Micropilot FMR50

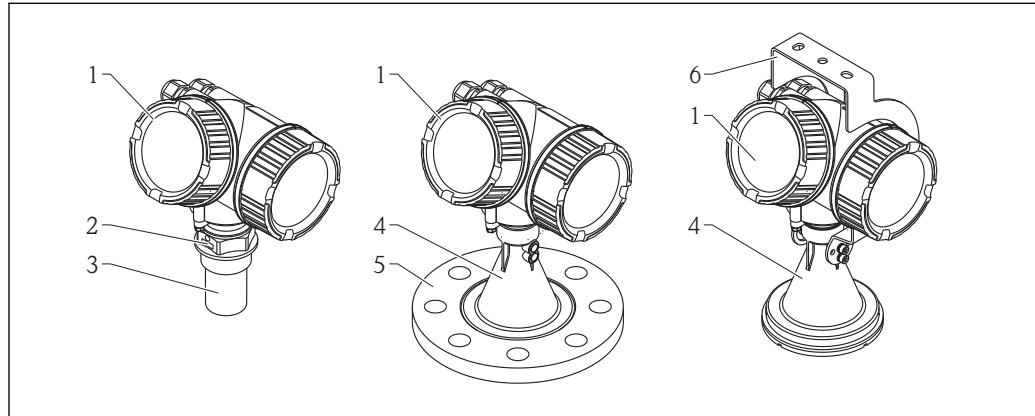


A0016784

 1 Design of the Micropilot FMR50 (26 GHz)

- 1 Electronics housing
- 2 Process connection (Thread)
- 3 Horn antenna 40 mm (1-1/2 in), PVDF encapsulated
- 4 Horn antenna 80mm/100 mm (3in/4 in), PP clad
- 5 Slip-on flange
- 6 Mounting bracket

#### 3.1.2 Electronics housing

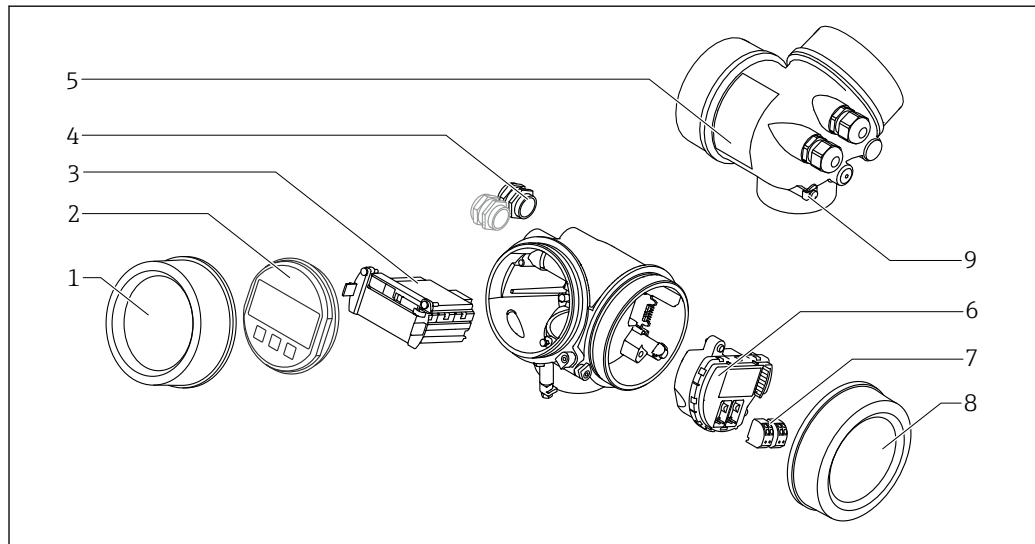

A0012422

 2 Design of the electronics housing

- 1 Electronics compartment cover
- 2 Display module
- 3 Main electronics module
- 4 Cable glands (1 or 2, depending on instrument version)
- 5 Nameplate
- 6 I/O electronics module
- 7 Terminals (pluggable spring terminals)
- 8 Connection compartment cover
- 9 Grounding terminal



## 4 Incoming acceptance and product identification

### 4.1 Incoming acceptance

Upon receipt of the goods check the following:

- Are the order codes on the delivery note and the product sticker identical?
- Are the goods undamaged?
- Do the nameplate data match the ordering information on the delivery note?
- Is the DVD with the operating tool present?  
If required (see nameplate): Are the Safety Instructions (XA) present?



If one of these conditions is not satisfied, contact your Endress+Hauser Sales Center.

### 4.2 Product identification


The following options are available for identification of the measuring device:

- Nameplate specifications
- Extended order code with breakdown of the device features on the delivery note
- Enter serial numbers from nameplates in *W@M Device Viewer* ([www.endress.com/deviceviewer](http://www.endress.com/deviceviewer)): All information about the measuring device is displayed.
- Enter the serial number from the nameplates into the *Endress+Hauser Operations App* or scan the 2-D matrix code (QR code) on the nameplate with the *Endress+Hauser Operations App*: all the information for the measuring device is displayed.

For an overview of the scope of the associated Technical Documentation, refer to the following:

- The *W@M Device Viewer*: Enter the serial number from the nameplate ([www.endress.com/deviceviewer](http://www.endress.com/deviceviewer))
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

### 4.2.1 Nameplate

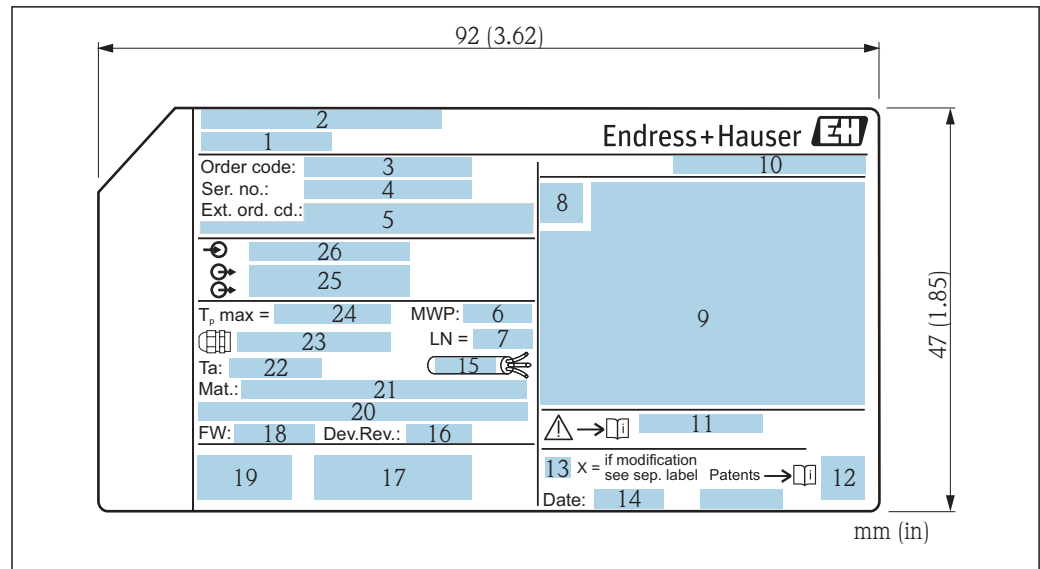

A0019444

**3** Nameplate of the Micropilot

- 1 Device name
- 2 Address of manufacturer
- 3 Order code
- 4 Serial number (Ser. no.)
- 5 Extended order code (Ext. ord. cd.)
- 6 Process pressure
- 7 Antenna length (only for FMR51 with antenna extension)
- 8 Certificate symbol
- 9 Certificate and approval relevant data
- 10 Degree of protection: e.g. IP, NEMA
- 11 Document number of the Safety Instructions: e.g. XA, ZD, ZE
- 12 Data Matrix Code
- 13 Modification mark
- 14 Manufacturing date: year-month
- 15 Temperature resistance of the cable
- 16 Device revision
- 17 Additional information about the device version (certificates, approvals, communication): e.g. SIL, PROFIBUS
- 18 Firmware version (FW)
- 19 CE mark, C-Tick
- 20 Profibus PA: Profil-Version; FOUNDATION Fieldbus: Device ID
- 21 Material in contact with process
- 22 Permitted ambient temperature ( $T_a$ )
- 23 Size of the thread of the cable glands
- 24 Maximum process temperature
- 25 Signal outputs
- 26 Operating voltage

**i** Only 33 digits of the extended order code can be indicated on the nameplate. If the extended order code exceeds 33 digits, the rest will not be shown. However, the complete extended order code can be viewed in the operating menu of the device: **Extended order code 1 to 3** parameter

## 5 Storage, Transport

### 5.1 Storage conditions

- Permitted storage temperature: -40 to +80 °C (-40 to +176 °F)
- Use the original packaging.


### 5.2 Transport product to the measuring point

**NOTICE**

**Housing or antenna horn may be damaged or break away.**

Risk of injury!

- ▶ Transport the measuring device to the measuring point in its original packaging or at the process connection.
- ▶ Do not fasten lifting devices (hoisting slings, lifting eyes etc.) at the housing or the antenna horn but at the process connection. Take into account the mass center of the device in order to avoid unintended tilting.
- ▶ Comply with the safety instructions, transport conditions for devices over 18kg (39.6lbs) (IEC61010).

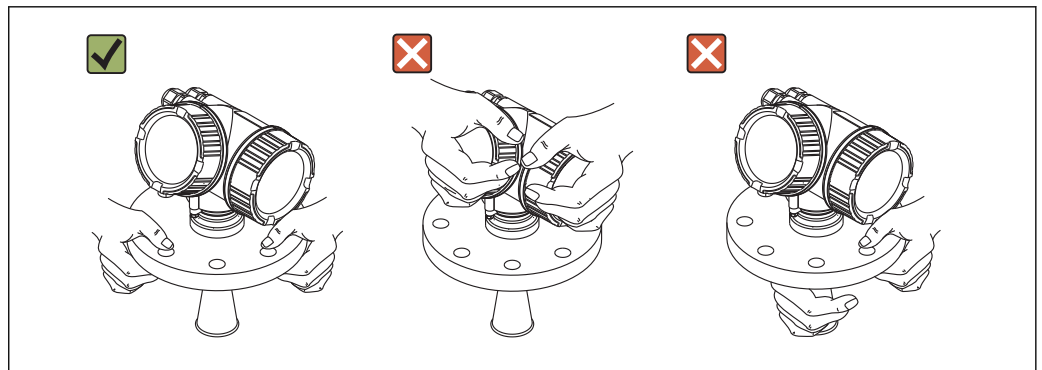


A0016875

## 6 Installation


### 6.1 Installation conditions

#### 6.1.1 Mounting position

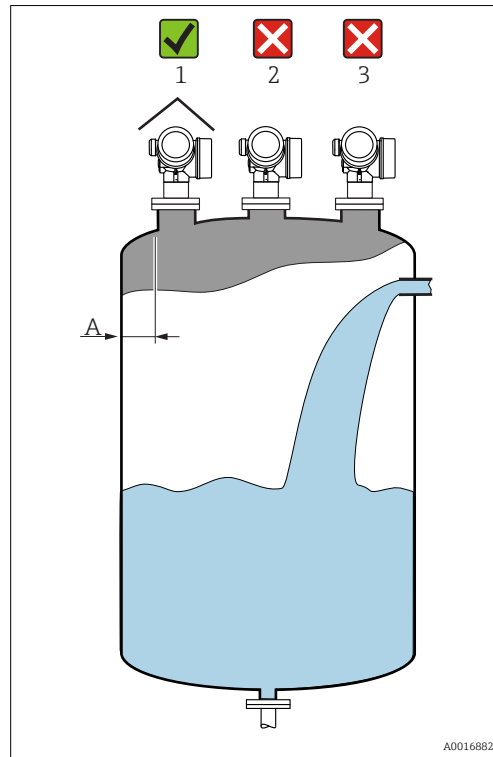


- Recommended distance **A** from wall to outer edge of nozzle:  $\sim 1/6$  of tank diameter. Nevertheless the device should not be installed closer than 15 cm (5.91 in) to the tank wall.
- Not in the center (2), as interference can cause signal loss.
- Not above the fill stream (3).
- It is recommended to use a weather protection cover (1) in order to protect the device from direct sun or rain.

### 6.1.2 Vessel installations

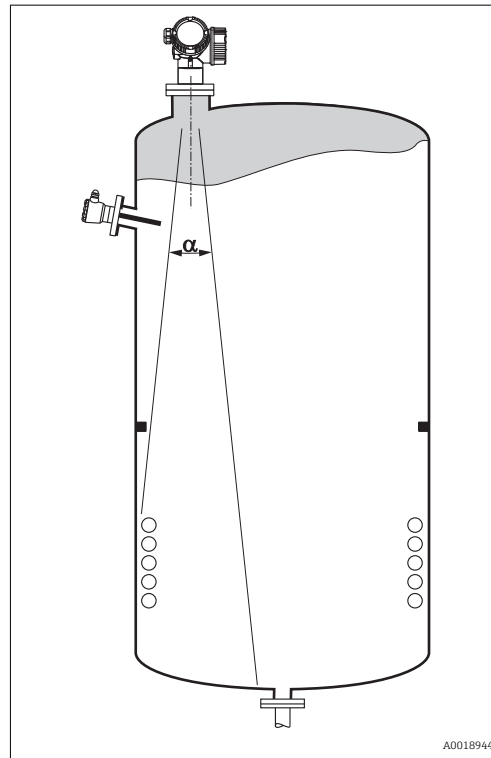

Avoid any installations (point level switches, temperature sensors, braces, vacuum rings, heating coils, baffles etc.) inside the signal beam. Take into account the beam angle  $\rightarrow$  23.


### 6.1.3 Reduction of interference echoes

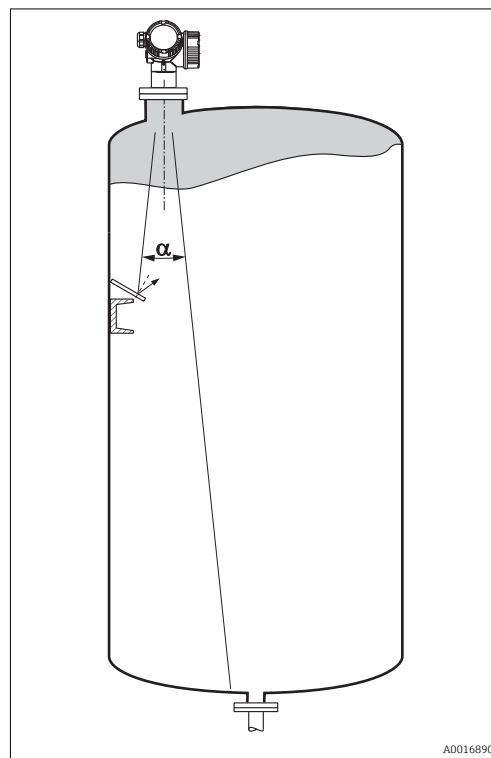

Metallic screens mounted at a slope spread the radar signal and can, therefore, reduce interference echoes.

### 6.1.4 Measurement in a plastic vessel

If the outer wall of the vessel is made of a non-conductive material (e.g. GRP), microwaves can also be reflected off interfering installations outside the vessel (e.g. metallic pipes (1), ladders (2), grates (3), ...). Therefore, there should be no such interfering installations in the signal beam. Please contact Endress+Hauser for further information.

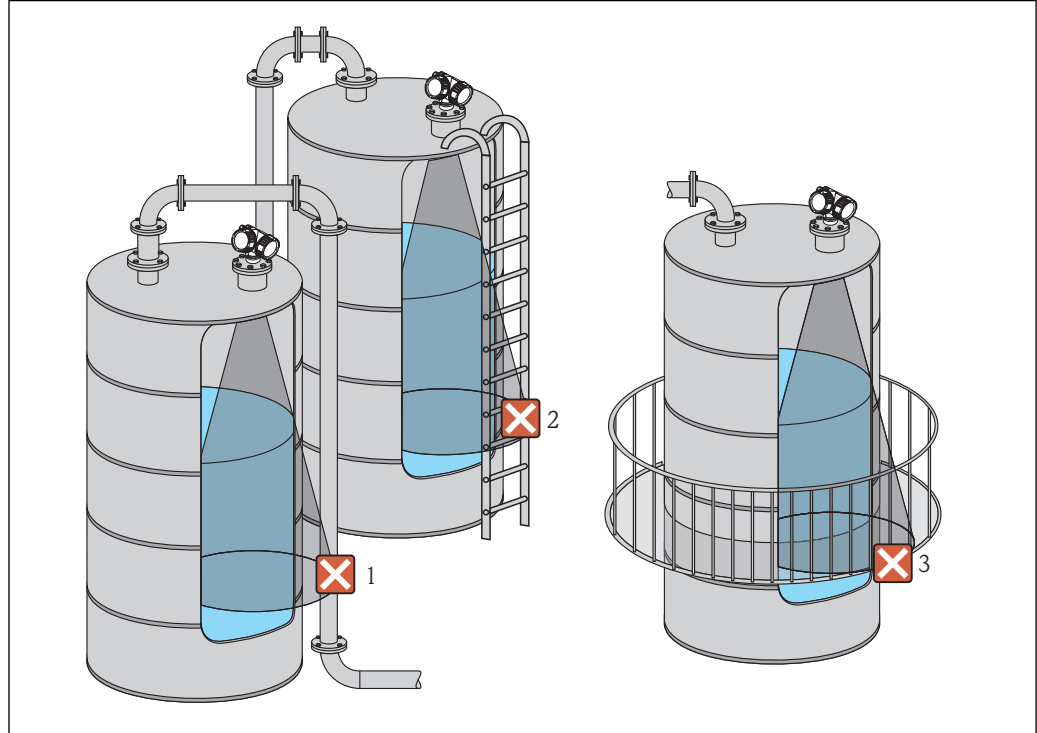


A0017123

### 6.1.5 Optimization options

- Antenna size  
The bigger the antenna, the smaller the beam angle  $\alpha$  and the fewer interference echoes  
→ 23.
- Mapping  
The measurement can be optimized by means of electronic suppression of interference echoes.  
See the **Confirm distance** parameter (→ 129) for details.
- Antenna alignment  
Take into account the marker on the flange or threaded connection → 25  
→ 26.
- Stilling well  
A stilling well can be applied to avoid interferences → 29.
- Metallic screens mounted at a slope  
They spread the radar signals and can, therefore, reduce interference echoes.

### 6.1.6 Beam angle

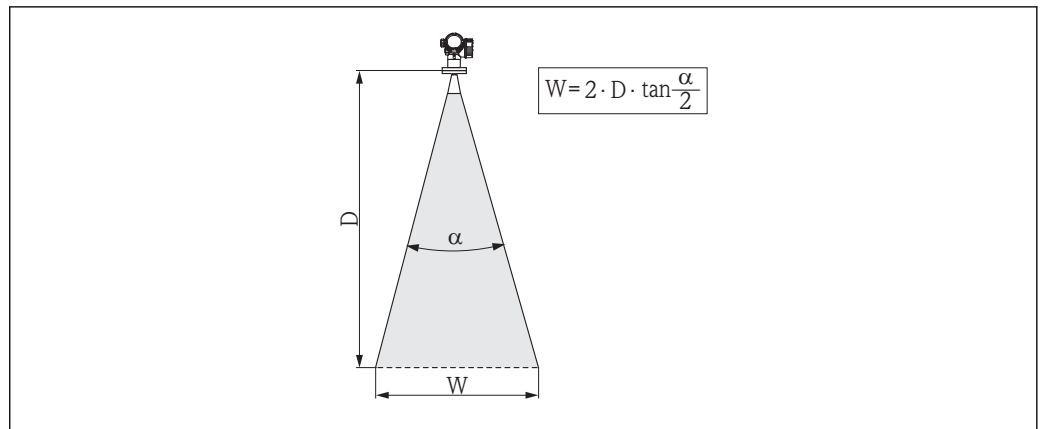

A0016891

4 Relationship between beam angle  $\alpha$ , distance  $D$  and beamwidth diameter  $W$


The beam angle is defined as the angle  $\alpha$  where the energy density of the radar waves reaches half the value of the maximum energy density (3-dB-width). Microwaves are also emitted outside the signal beam and can be reflected off interfering installations.

Beam diameter  $W$  as a function of beam angle  $\alpha$  and measuring distance  $D$ :

FMR50			
Antenna size	40 mm (1½ in)	80 mm (3 in)	100 mm (4 in)
Beam angle $\alpha$	23°	10°	8°
Measuring distance (D)	Beamwidth diameter W		
3 m (9.8 ft)	1.22 m (4 ft)	0.53 m (1.7 ft)	0.42 m (1.4 ft)
6 m (20 ft)	2.44 m (8 ft)	1.05 m (3.4 ft)	0.84 m (2.8 ft)
9 m (30 ft)	3.66 m (12 ft)	1.58 m (5.2 ft)	1.26 m (4.1 ft)
12 m (39 ft)	4.88 m (16 ft)	2.1 m (6.9 ft)	1.68 m (5.5 ft)
15 m (49 ft)	6.1 m (20 ft)	2.63 m (8.6 ft)	2.10 m (6.9 ft)
20 m (66 ft)	8.14 m (27 ft)	3.50 m (11 ft)	2.80 m (9.2 ft)
25 m (82 ft)	10.17 m (33 ft)	4.37 m (14 ft)	3.50 m (11 ft)
30 m (98 ft)	-	5.25 m (17 ft)	4.20 m (14 ft)
35 m (115 ft)	-	6.12 m (20 ft)	4.89 m (16 ft)
40 m (131 ft)	-	7.00 m (23 ft)	5.59 m (18 ft)

## 6.2 Measuring conditions

- In case of **boiling surfaces, bubbling** or tendency for **foaming** use FMR53 or FMR54. Depending on its consistence, foam can either absorb microwaves or reflect them off the foam surface. Measurement is possible under certain conditions. For FMR50, FMR51 and FMR52, the additional option "Advanced dynamics" is recommended in these cases (feature 540: "Application Package", option EM).
- In case of heavy **steam development** or **condensate**, the maximum measuring range of FMR50, FMR51 and FMR52 may decrease depending on density, temperature and composition of the steam → use FMR53 or FMR54.
- For the measurement of absorbing gases such as **ammonia NH<sub>3</sub>** or some **fluorocarbons**<sup>2)</sup>, please use Levelflex or Micropilot FMR54 in a stilling well.
- The measuring range begins, where the beam hits the tank bottom. Particularly with dish bottoms or conical outlets the level cannot be detected below this point.
- In stilling well applications, the electromagnetic waves do not propagate completely outside the tube. It must be taken into account that the accuracy may be reduced in the area **C**. In order to guarantee the required accuracy in these cases, it is recommended to position the zero-point at a distance **C** above the end of the tube (see figure).
- In case of media with a low dielectric constant ( $\epsilon_r = 1.5$  to  $4$ )<sup>3)</sup> the tank bottom can be visible through the medium at low levels (low height **C**). Reduced accuracy has to be expected in this range. If this is not acceptable, we recommend positioning the zero point at a distance **C** (see figure) above the tank bottom in these applications.
- In principle it is possible to measure up to the tip of the antenna with FMR51, FMR53 and FMR54. However, due to considerations regarding corrosion and build-up, the end of the measuring range should not be chosen any closer than **A** (see figure) to the tip of the antenna.
- When using FMR54 with planar antenna, especially for media with low dielectric constants, the end of the measuring range should not be closer than **A: 1 m (3.28 ft)** to the flange.
- The smallest possible measuring range **B** depends on the antenna version (see figure).
- The tank height should be at least **H** (see table).

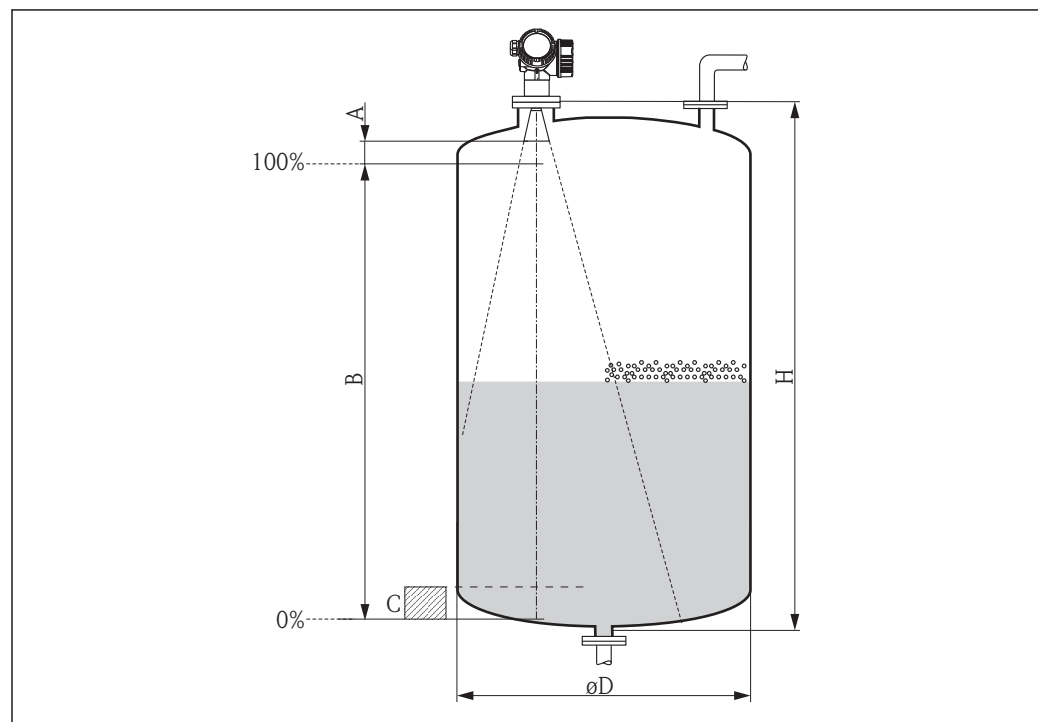

A0018872

2) Affected compounds are e.g. R134a, R227, Dymel 152a.

3) Dielectric constants of important media commonly used in various industries are summarized in the DC manual (CP01076F) and in the Endress+Hauser "DC Values App" (available for Android and iOS).




Device	A [mm (in)]	B [m (ft)]	C [mm (in)]	H [m (ft)]
FMR50	150 ( 5.91)	> 0.2 (0.7)	50 to 250 (1.97 to 9.84)	> 0.3 (1.0)

### 6.3 Installation in vessel (free space)

#### 6.3.1 Horn antenna encapsulated (FMR50)

##### Alignment

- Align the antenna vertically to the product surface.
- A marking at the threaded connection enables alignment of the antenna. This marking must be aligned towards the tank wall as well as possible.

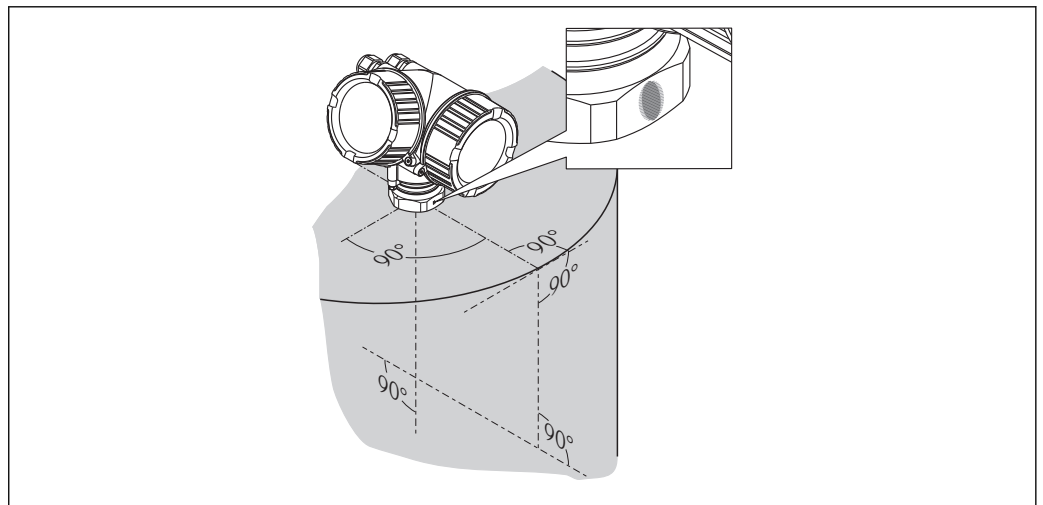


A0019434

**i** Depending on the device version the marking may be a circle or two short parallel lines.

##### Nozzle mounting

For optimum measurement, the tip of the antenna should extend below the nozzle. This is achieved by a nozzle height up to  $H_{max} = 60 \text{ mm (2.36 in)}$ .

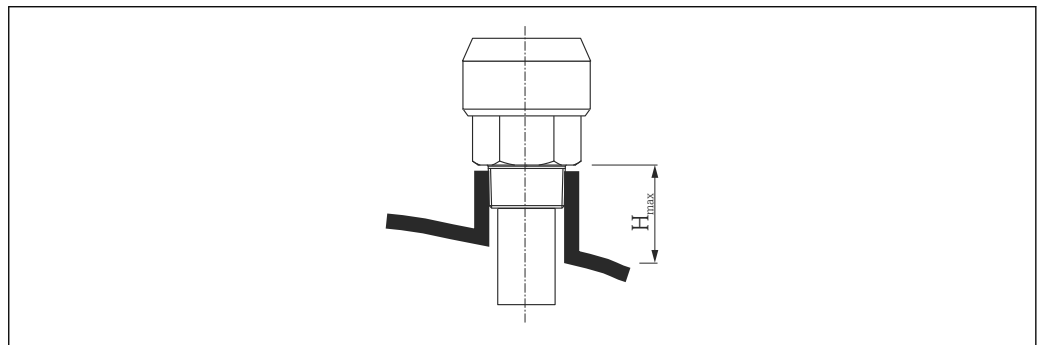


A0016806

**5** Nozzle height for horn antenna, encapsulated (FMR50);  $H_{max} = 60 \text{ mm (2.36 in)}$

##### Conditions for longer nozzles

If the medium has good reflective properties, higher nozzles can be accepted. In this case the maximum nozzle height,  $H_{max}$ , is dependent on the nozzle diameter,  $D$ :

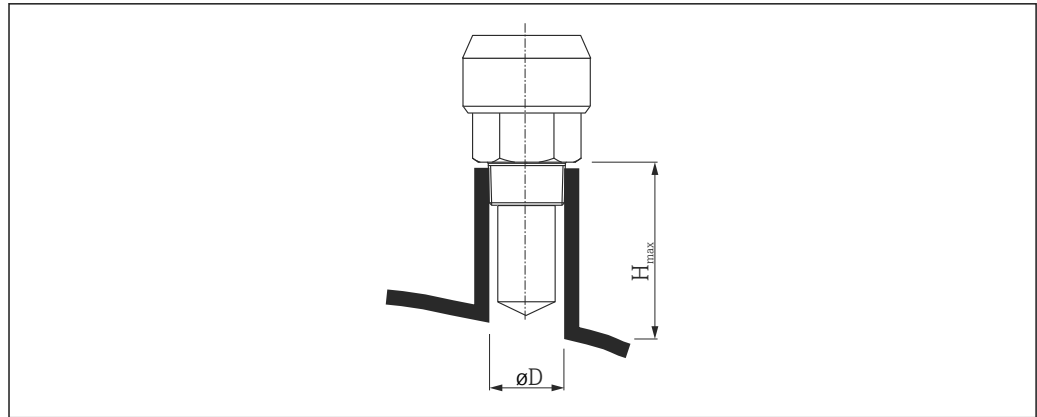

A0023612

Nozzle diameter $D$	Maximum nozzle height $H_{max}$
40 mm (1.5 in)	200 mm (7.9 in)
50 mm (2 in)	250 mm (9.9 in)
80 mm (3 in)	300 mm (11.8 in)
100 mm (4 in)	400 mm (15.8 in)
150 mm (6 in)	500 mm (19.7 in)

- i** If the antenna doesn't extend below the nozzle, observe the following:
- The nozzle end must be smooth and free of burrs. If possible its edge should be rounded.
  - An interference echo suppression must be performed.
  - Please contact Endress+Hauser for applications with higher nozzles than those indicated in the table.


#### Threaded connection

- Tighten with the hexagonal nut only.
- Tool : 50 mm hexagonal wrench
- Maximum permissible torque: 35 Nm (26 lbf ft)

### 6.3.2 Horn antenna with slip-on flange (FMR50)

#### Alignment


- i** When using the Micropilot with a slip-on flange in explosion-hazardous areas, strictly observe all specifications in the relevant Safety Instructions (XA).
- Align the antenna vertically to the product surface.  
Optionally, a variable flange seal, which is available as an accessory, can be used for alignment (see Technical Information BA01048F, chapter "Accessories").
  - A marking at the feedthrough enables alignment of the antenna. This marking must be aligned towards the tank wall as well as possible.

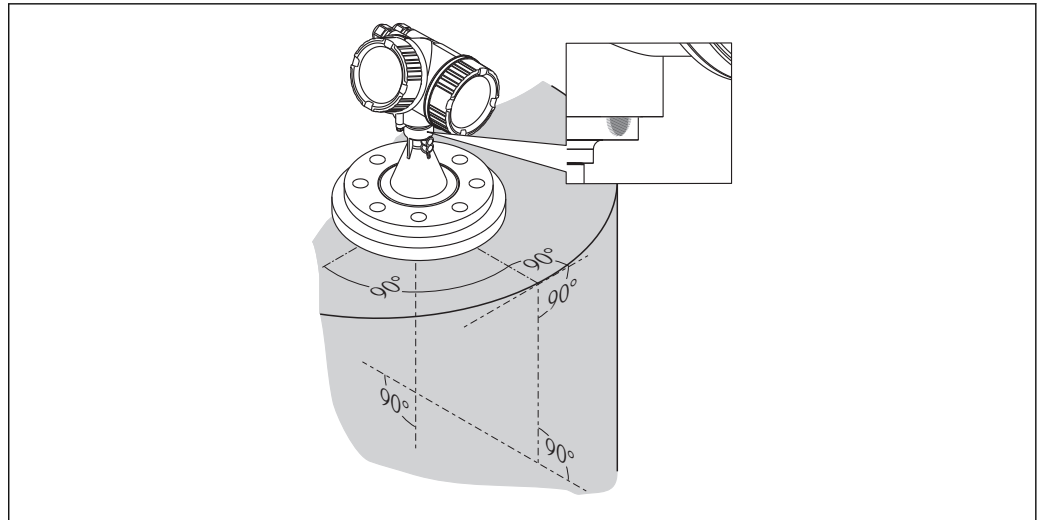

A0019439

**i** Depending on the device version the marking may be a circle or two short parallel lines.

**Nozzle mounting**

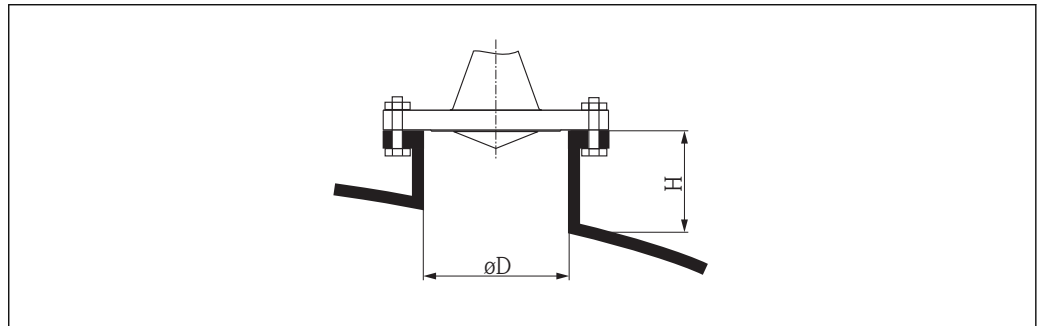


A0016868

**6** Nozzle height and diameter for horn antenna with slip-on flange

Nozzle diameter $D$	Maximum nozzle height $H_{max}$
80 mm (3 in)	300 mm (11.8 in)
100 mm (4 in)	400 mm (15.8 in)
150 mm (6 in)	500 mm (19.7 in)

### 6.3.3 Horn antenna with mounting bracket (FMR50)

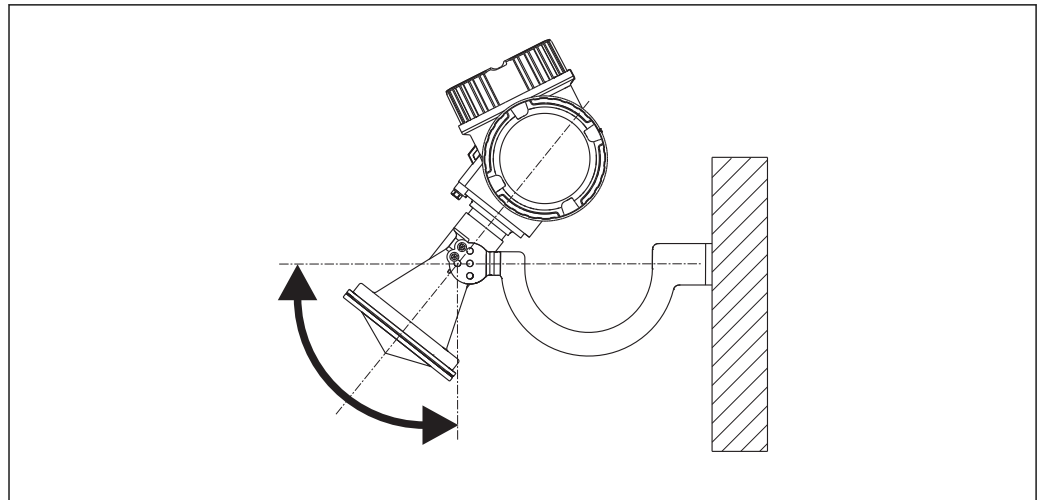

7 Installation of the horn antenna with mounting bracket

Align the antenna vertically to the product surface using the mounting bracket.

#### NOTICE

**The mounting bracket has no conductive connection to the transmitter housing.**

Danger of electrostatic charge

- ▶ Connect the mounting bracket to the local potential equalization system.

### 6.3.4 Measurement from the outside through plastic walls (FMR50/FMR51)


- Dielectric constant of the medium:  $\epsilon_r > 10$
- If possible, use an antenna 100 mm (4 in).
- The distance from the lower edge of the antenna to the tank ceiling should be about 100 mm (4 in).
- If possible, avoid mounting locations where condensation or build-up might occur.
- In case of outdoor mounting, the space between antenna and vessel has to be protected from the elements.
- Do not mount any potential reflectors (e.g. pipes) outside the tank in the signal beam.

*Suitable thickness of the tank ceiling:*

Penetrated material	PE	PTFE	PP	Perspex
DK / $\epsilon_r$	2.3	2.1	2.3	3.1
Optimum thickness <sup>1)</sup>	3.8 mm (0.15 in)	4.0 mm (0.16 in)	3.8 mm (0.15 in)	3.3 mm (0.13 in)

1) Other possible values for the thickness are multiples of the values listed (e.g. for PE: 7,6 mm (0.3 in), 11,4 mm (0.45 in))

## 6.4 Installation in stilling well

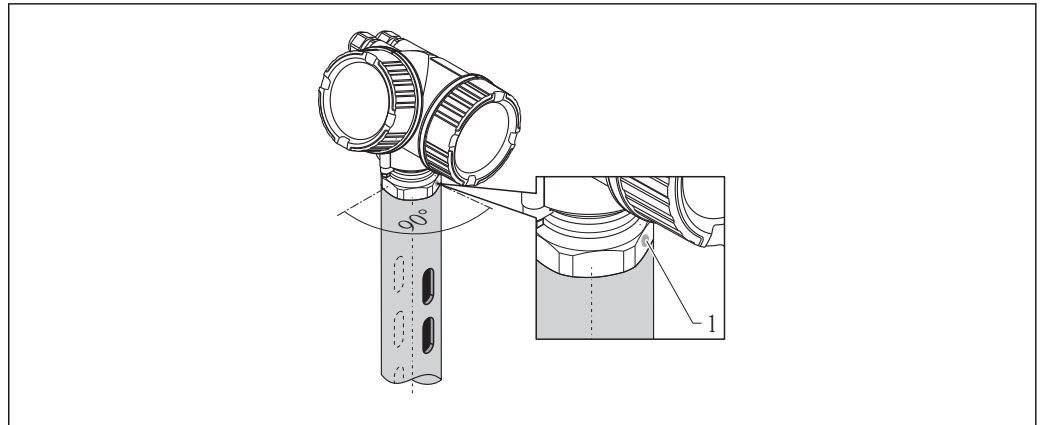

A0016841

8 Installation in stilling well


1 Marking for antenna alignment

- For horn antenna: Align the marking towards the slots of the stilling well.
- Measurements can be performed through an open full bore ball valve without any problems.
- After mounting, the housing can be turned 350° in order to facilitate access to the display and the terminal compartment → 33.

### 6.4.1 Recommendations for the stilling well

- Metal (no enamel coating; plastic on request).
- Constant diameter.
- Diameter of stilling well not larger than antenna diameter.
- Diameter difference between horn antenna and inner diameter of the stilling well as small as possible.
- Weld seam as smooth as possible and on the same axis as the slots.
- Slots offset 180° (not 90°).
- Slot width or diameter of holes max. 1/10 of pipe diameter, de-burred. Length and number do not have any influence on the measurement.
- Select horn antenna as big as possible. For intermediate sizes (e.g. 180 mm (7 in)) select next larger antenna and adapt it mechanically (for horn antennas)
- At any transition (i.e. when using a ball valve or mending pipe segments), no gap may be left exceeding 1 mm (0.04 in).
- The stilling well must be smooth on the inside (average roughness  $R_z \leq 6.3 \mu\text{m}$  (248  $\mu\text{in}$ )). Use extruded or parallel welded metal pipe. An extension of the pipe is possible with welded flanges or pipe sleeves. Flange and pipe have to be properly aligned at the inside.
- Do not weld through the pipe wall. The inside of the stilling well must remain smooth. In case of unintentional welding through the pipe, the weld seam and any unevenness on the inside need to be carefully removed and smoothed. Otherwise, strong interference echoes will be generated and material build-up will be promoted.
- In the case of smaller nominal widths flanges must be welded to the pipe such that they allow for a correct orientation (marker aligned toward slots).


### 6.4.2 Examples for the construction of stilling wells

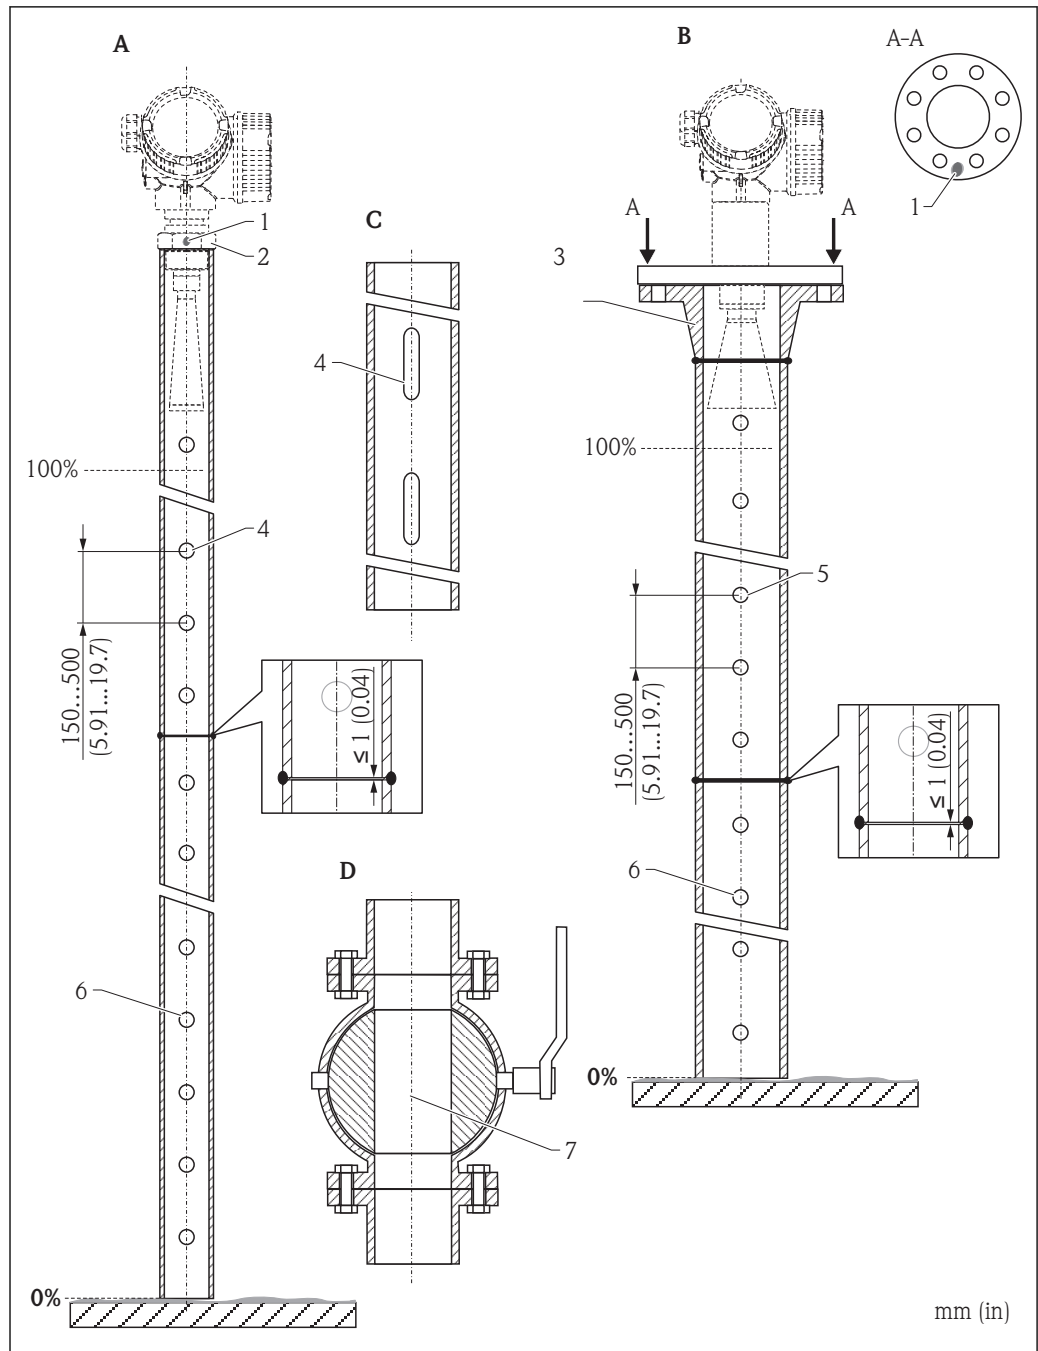

A0019009

- A Micropilot FMR50/FMR51: Horn 40mm(1½")
- B Micropilot FMR50/FMR51/FMR52/FMR54: Horn 80mm(3")
- C Stilling well with slots
- D Full bore ball valve
- 1 Marking for axial alignment
- 2 Threaded connection
- 3 e.g. welding neck flange DIN2633
- 4  $\phi$  hole max. 1/10  $\phi$  stilling well
- 5  $\phi$  hole max. 1/10  $\phi$  stilling well; single sided or drilled through
- 6 Inside of holes deburred
- 7 Diameter of opening of ball valve must always be equivalent to pipe diameter; avoid edges and constrictions.

## 6.5 Installation in bypass

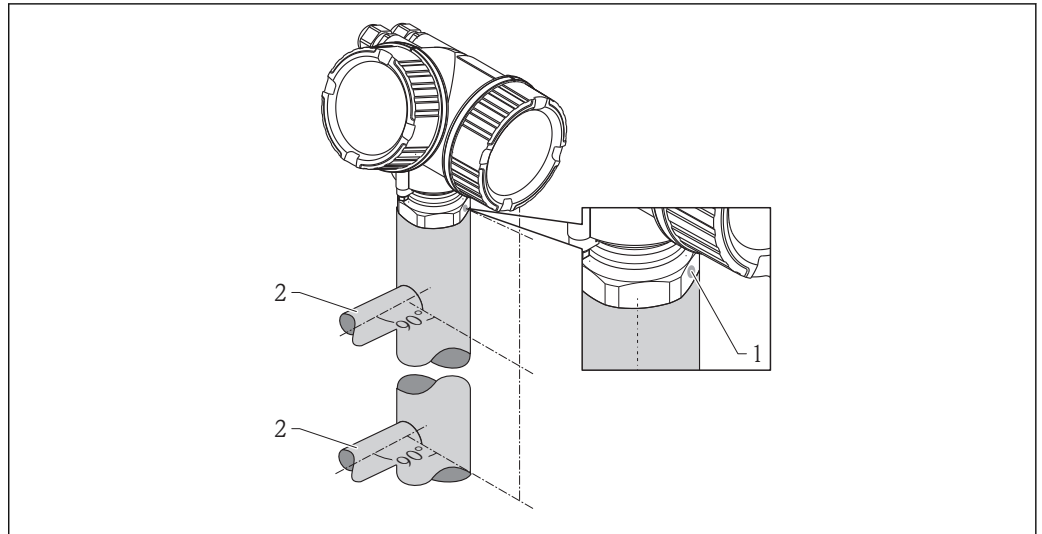

A0019446

### 9 Installation in bypass


- 1 Marking for antenna alignment  
2 Tank connectors

- Align the marker perpendicular (90°) to the tank connectors.
- Measurements can be performed through an open full bore ball valve without any problems.
- After mounting, the housing can be turned 350° in order to facilitate access to the display and the terminal compartment → 33.

### 6.5.1 Recommendations for the bypass pipe

- Metal (no plastic or enamel coating).
- Constant diameter.
- Select horn antenna as big as possible. For intermediate sizes (e.g. 95 mm (3.5 in)) select next larger antenna and adapt it mechanically (for horn antennas).
- Diameter difference between horn antenna and inner diameter of the bypass as small as possible.
- At any transition (i.e. when using a ball valve or mending pipe segments), no gap may be created exceeding 1 mm (0.04 in).
- In the area of the tank connections (~ ±20 cm (7.87 in)) a reduced accuracy of the measurement has to be expected.


### 6.5.2 Example for the construction of a bypass

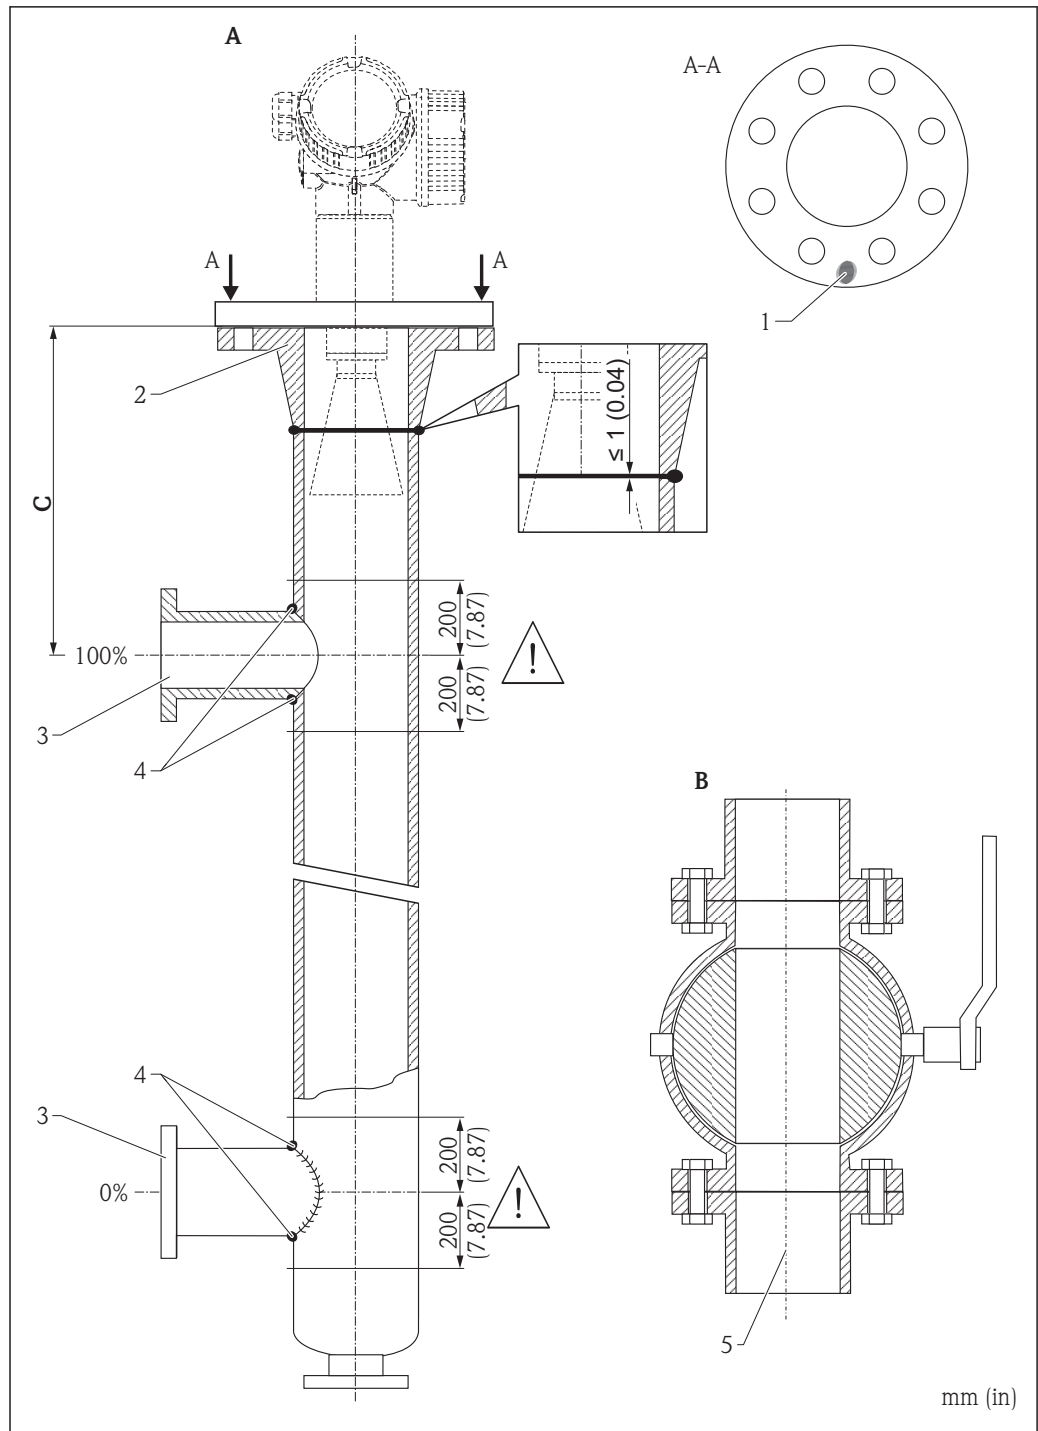

- A Micropilot FMR50/FMR51/FMR52/FMR54: Horn 80mm(3")
- B Full bore ball valve
- C Minimum distance to upper connection pipe: 400 mm (15,7 in)
- 1 Marking for axial alignment
- 2 e.g. welding neck flange DIN2633
- 3 Diameter of the connection pipes as small as possible
- 4 Do not weld through the pipe wall; the inside of the bypass must remain smooth.
- 5 Diameter of opening of ball valve must always be equivalent to pipe diameter. Avoid edges and constrictions.



## 6.6 Container with heat insulation

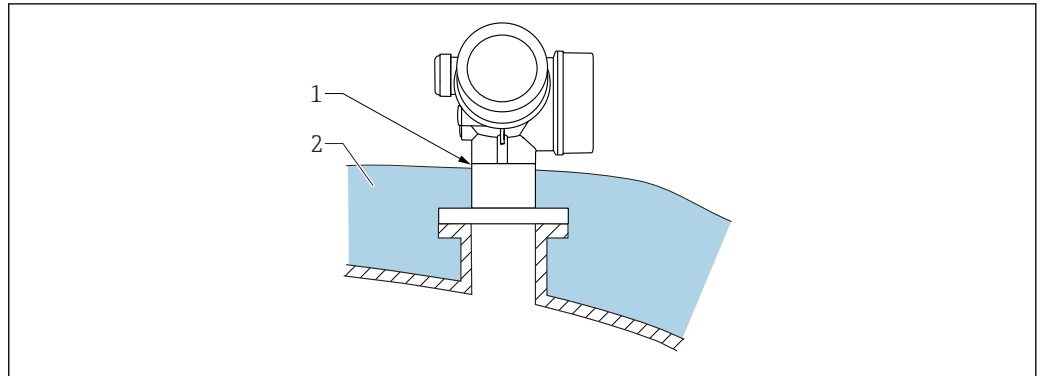


A0032207

If process temperatures are high, the device should be included in the usual container insulation system (2) to prevent the electronics from heating as a result of thermal radiation or convection. The insulation should not be higher than the neck of the device (1).

## 6.7 Turning the transmitter housing

To provide easier access to the connection compartment or display module, the transmitter housing can be turned:

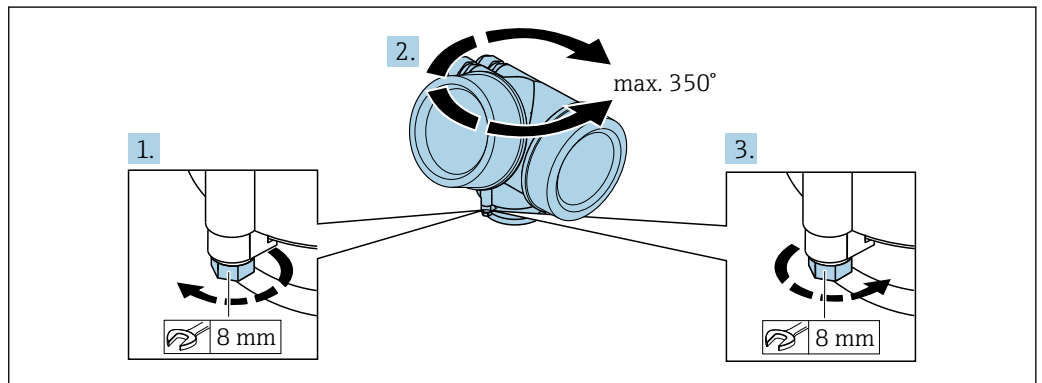


A0032242

1. Unscrew the securing screw using an open-ended wrench.
2. Rotate the housing in the desired direction.
3. Tighten the securing screw (1.5 Nm for plastic housing; 2.5 Nm for aluminum or stainless steel housing).


## 6.8 Turning the display

### 6.8.1 Opening cover

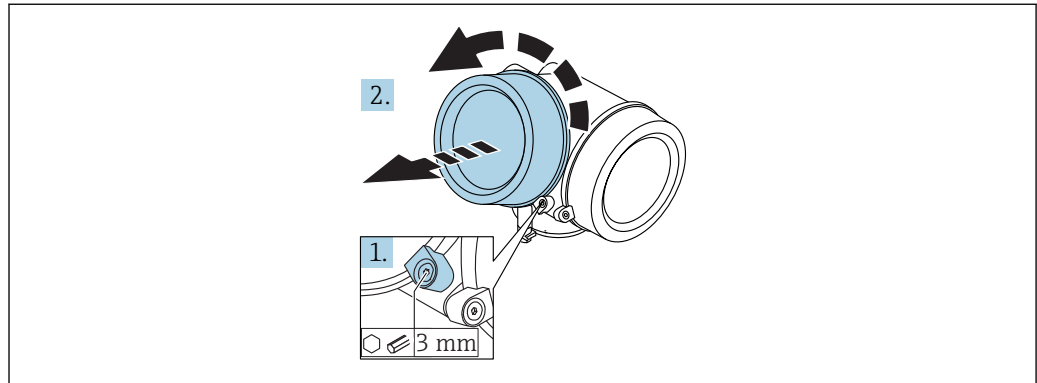


1. Loosen the screw of the securing clamp of the electronics compartment cover using an Allen key (3 mm) and turn the clamp 90 ° counterclockwise.
2. Unscrew cover and check lid gasket, replace if necessary.

### 6.8.2 Turning the display module

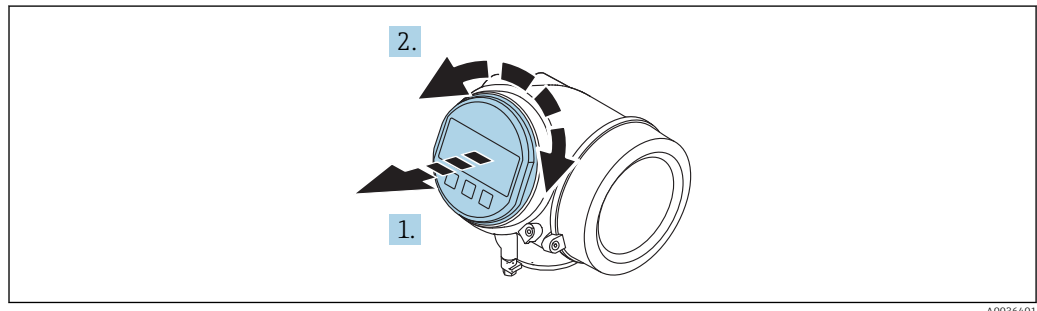

1. Pull out the display module with a gentle rotational movement.
2. Rotate the display module to the desired position: max.  $8 \times 45^\circ$  in each direction.
3. Feed the coiled cable into the gap between the housing and main electronics module and plug the display module into the electronics compartment until it engages.

### 6.8.3 Closing electronics compartment cover

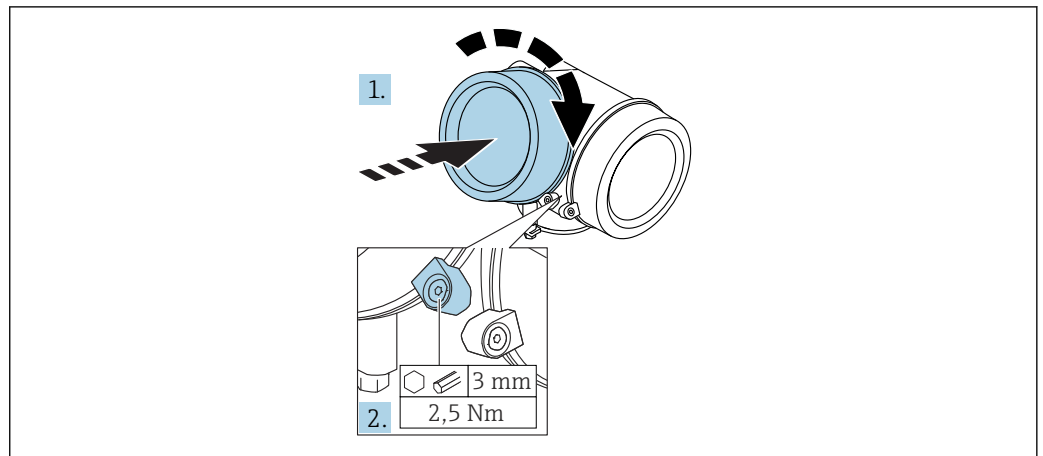

A0021451

1. Screw back firmly electronics compartment cover.
2. Turning securing clamp 90 ° clockwise and tighten the clamp with 2.5 Nm using the Allen key (3 mm).

### 6.9 Post-installation check


<input type="checkbox"/>	Is the device undamaged (visual inspection)?
<input type="checkbox"/>	Does the device conform to the measuring point specifications? For example: <ul style="list-style-type: none"> <li>▪ Process temperature</li> <li>▪ Process pressure (refer to the chapter on "Material load curves" of the "Technical Information" document)</li> <li>▪ Ambient temperature range</li> <li>▪ Measuring range</li> </ul>
<input type="checkbox"/>	Are the measuring point identification and labeling correct (visual inspection)?
<input type="checkbox"/>	Is the device adequately protected from precipitation and direct sunlight?
<input type="checkbox"/>	Are the securing screw and securing clamp tightened securely?

## 7 Electrical connection

### 7.1 Connection conditions

#### 7.1.1 Terminal assignment

##### Terminal assignment 2-wire: 4-20 mA HART

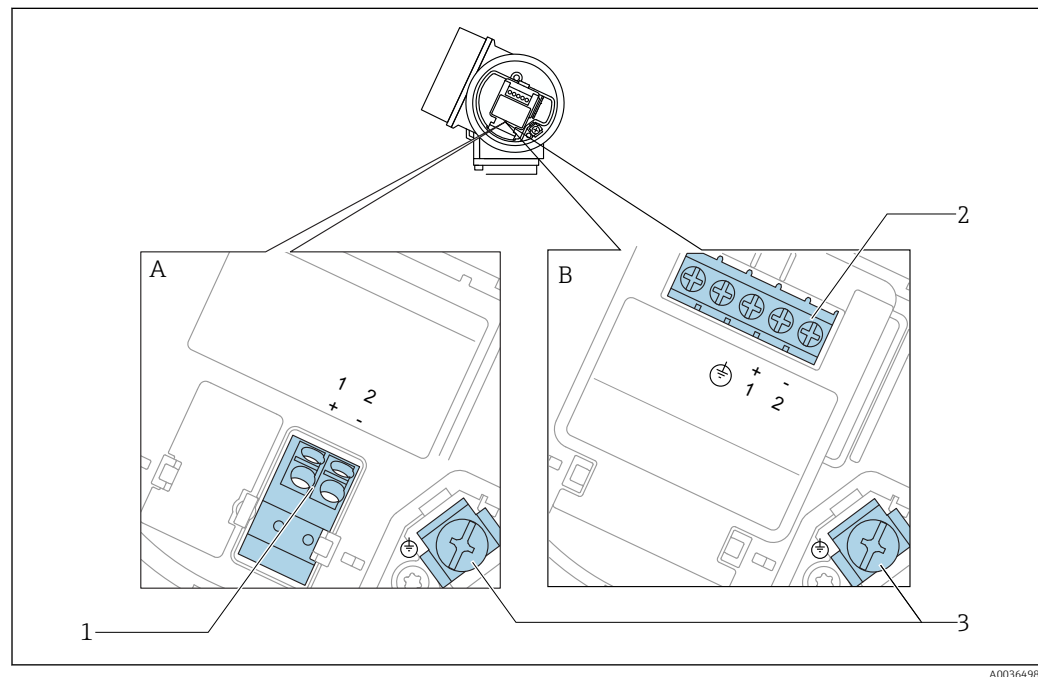

A0036498

10 Terminal assignment 2-wire: 4-20 mA HART

A Without integrated overvoltage protection


B With integrated overvoltage protection

1 Connection 4-20 mA HART passive: terminals 1 and 2, without integrated overvoltage protection

2 Connection 4-20 mA HART passive: terminals 1 and 2, with integrated overvoltage protection

3 Terminal for cable screen

##### Block diagram 2-wire: 4-20 mA HART

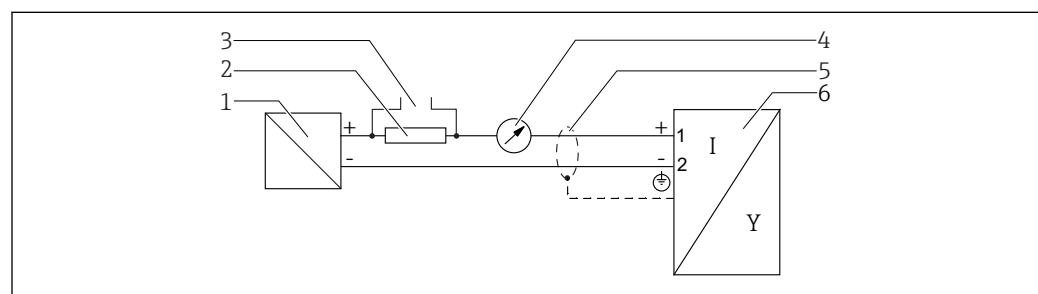

A0036499

11 Block diagram 2-wire: 4-20 mA HART

1 Active barrier with power supply (e.g. RN221N); observe terminal voltage

2 HART communication resistor ( $\geq 250 \Omega$ ); observe maximum load


3 Connection for Commubox FXA195 or FieldXpert SFX350/SFX370 (via VIATOR Bluetooth modem)

4 Analog display device; observe maximum load

5 Cable screen; observe cable specification

6 Measuring device

**Terminal assignment 2-wire: 4-20 mA HART, switch output**

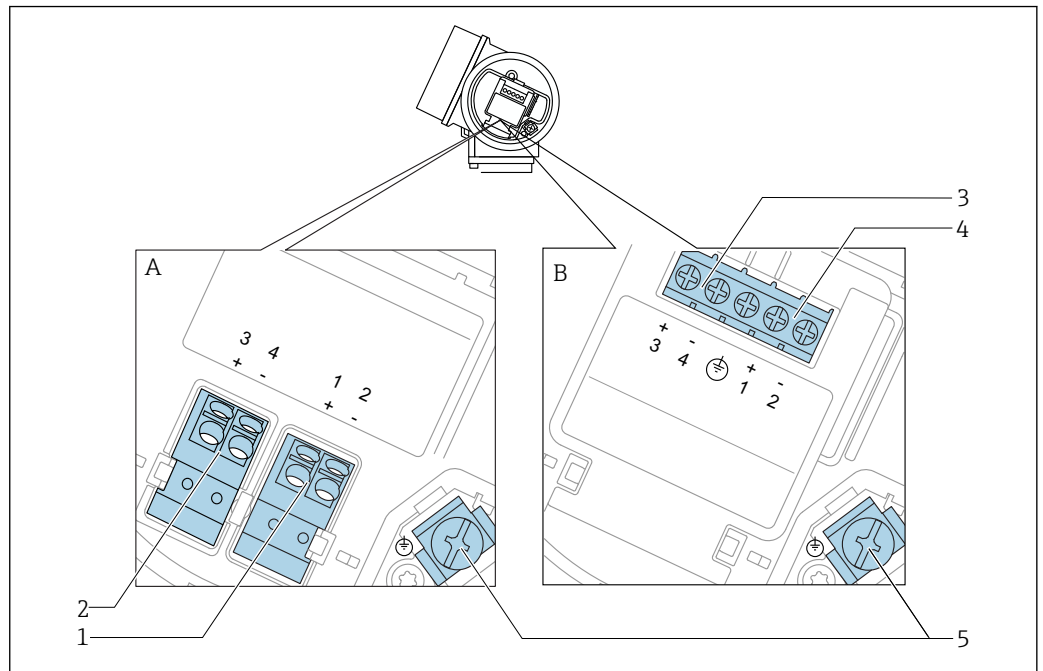

A0036500

12 Terminal assignment 2-wire: 4-20 mA HART, switch output

A Without integrated overvoltage protection

B With integrated overvoltage protection

1 Connection 4-20 mA HART passive: terminals 1 and 2, without integrated overvoltage protection


2 Connection switch output (Open Collector): terminals 3 and 4, without integrated overvoltage protection

3 Connection switch output (Open Collector): terminals 3 and 4, with integrated overvoltage protection

4 Connection 4-20 mA HART passive: terminals 1 and 2, with integrated overvoltage protection

5 Terminal for cable screen

**Block diagram 2-wire: 4-20 mA HART, switch output**

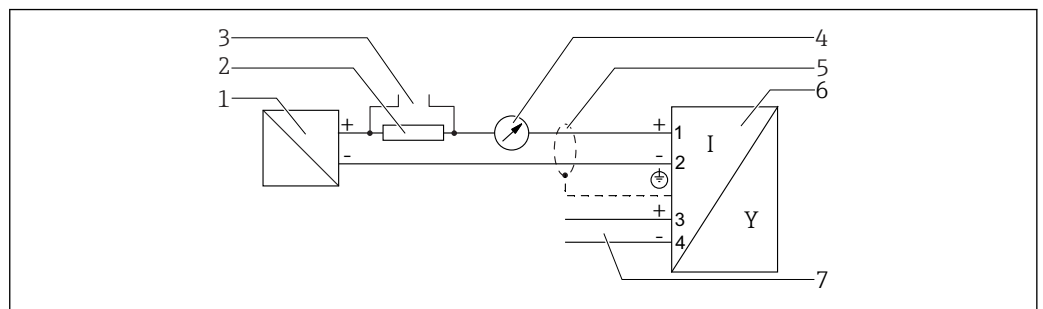

A0036501

13 Block diagram 2-wire: 4-20 mA HART, switch output

1 Active barrier with power supply (e.g. RN221N); observe terminal voltage

2 HART communication resistor ( $\geq 250 \Omega$ ); observe maximum load

3 Connection for Commubox FXA195 or FieldXpert SFX350/SFX370 (via VIATOR Bluetooth modem)


4 Analog display device; observe maximum load

5 Cable screen; observe cable specification

6 Measuring device

7 Switch output (Open Collector)

**Terminal assignment 2-wire: 4-20 mA HART, 4-20 mA**

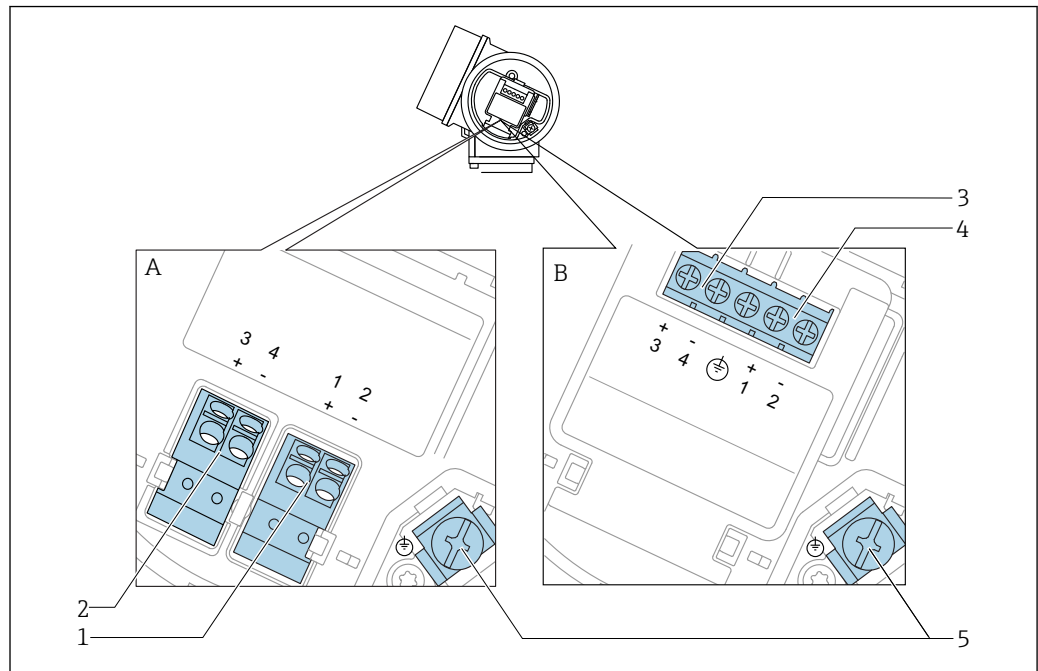


A0036500

14 Terminal assignment 2-wire: 4-20 mA HART, 4-20 mA

- A Without integrated overvoltage protection
- B With integrated overvoltage protection
- 1 Connection current output 1, 4-20 mA HART passive: terminals 1 and 2, without integrated overvoltage protection
- 2 Connection current output 2, 4-20 mA: terminals 3 and 4, without integrated overvoltage protection
- 3 Connection current output 2, 4-20 mA: terminals 3 and 4, with integrated overvoltage protection
- 4 Connection current output 1, 4-20 mA HART passive: terminals 1 and 2, with integrated overvoltage protection
- 5 Terminal for cable screen

**Block diagram 2-wire: 4-20 mA HART, 4-20 mA**

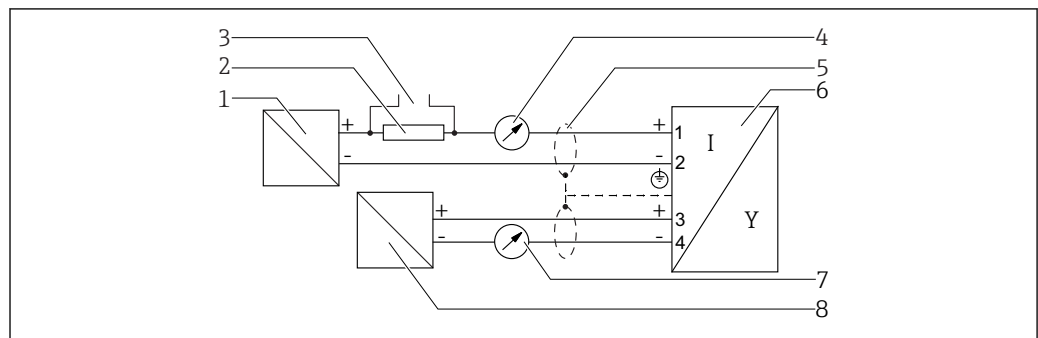


A0036502

15 Block diagram 2-wire: 4-20 mA HART, 4-20 mA

- 1 Active barrier with power supply (e.g. RN221N); observe terminal voltage
- 2 HART communication resistor ( $\geq 250 \Omega$ ); observe maximum load
- 3 Connection for Commubox FXA195 or FieldXpert SFX350/SFX370 (via VIATOR Bluetooth modem)
- 4 Analog display device; observe maximum load
- 5 Cable screen; observe cable specification
- 6 Measuring device
- 7 Analog display device; observe maximum load
- 8 Active barrier with power supply (e.g. RN221N), current output 2; observe terminal voltage

**Terminal assignment 4-wire: 4-20 mA HART (10.4 to 48 V<sub>DC</sub>)**

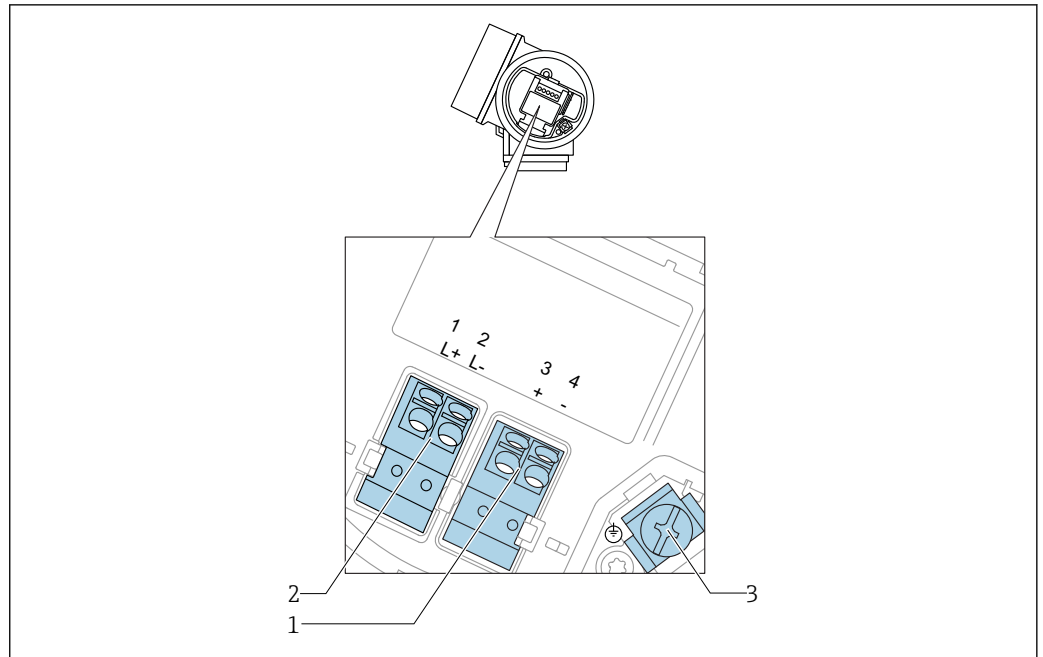


A0036516

16 Terminal assignment 4-wire: 4-20 mA HART (10.4 to 48 V<sub>DC</sub>)

- 1 Connection 4-20 mA HART (active): terminals 3 and 4
- 2 Connection supply voltage: terminals 1 and 2
- 3 Terminal for cable screen


**Block diagram 4-wire: 4-20 mA HART (10.4 to 48 V<sub>DC</sub>)**

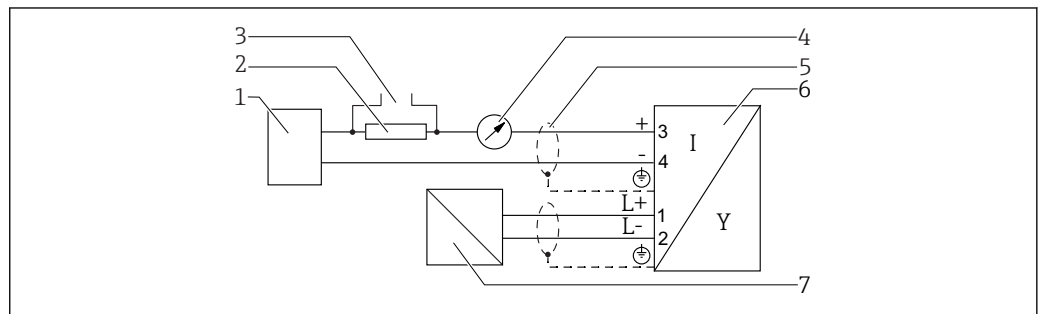

A0036526

17 Block diagram 4-wire: 4-20 mA HART (10.4 to 48 V<sub>DC</sub>)

- 1 Evaluation unit, e.g. PLC
- 2 HART communication resistor ( $\geq 250 \Omega$ ); observe maximum load
- 3 Connection for Commubox FXA195 or FieldXpert SFX350/SFX370 (via VIATOR Bluetooth modem)
- 4 Analog display device; observe maximum load
- 5 Cable screen; observe cable specification
- 6 Measuring device
- 7 Supply voltage; observe terminal voltage, observe cable specification

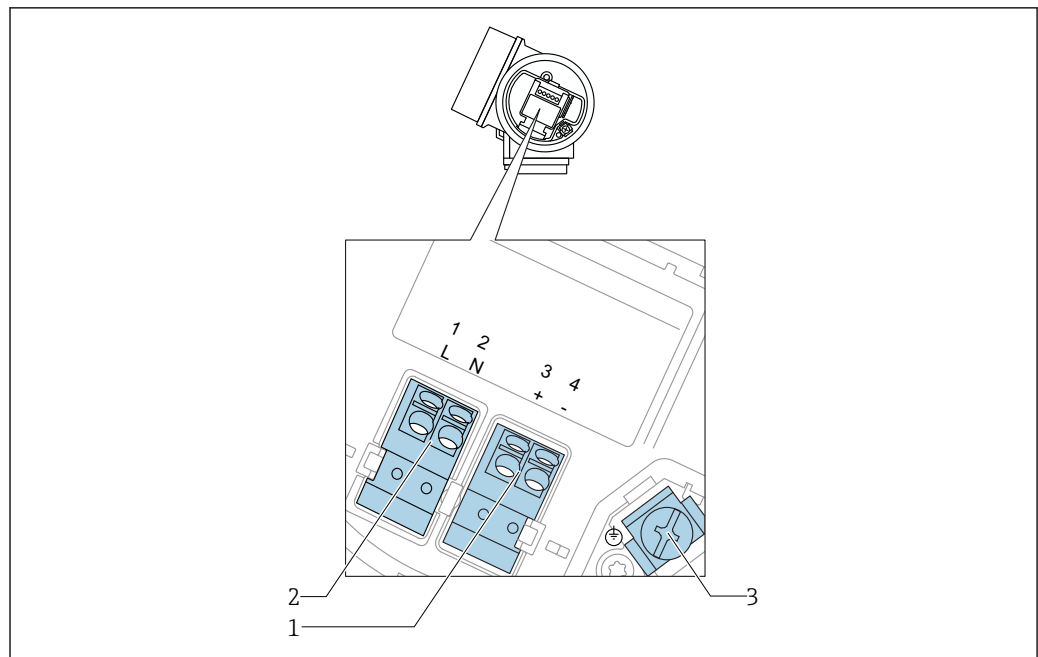**Terminal assignment 4-wire: 4-20 mA HART (90 to 253 V<sub>AC</sub>)**

A0036519

18 Terminal assignment 4-wire: 4-20 mA HART (90 to 253 V<sub>AC</sub>)

- 1 Connection 4-20 mA HART (active): terminals 3 and 4
- 2 Connection supply voltage: terminals 1 and 2
- 3 Terminal for cable screen


**CAUTION****To ensure electrical safety:**

- ▶ Do not disconnect the protective connection.
- ▶ Disconnect the supply voltage before disconnecting the protective earth.

- i** Connect protective earth to the internal ground terminal (3) before connecting the supply voltage. If necessary, connect the potential matching line to the external ground terminal.
- i** In order to ensure electromagnetic compatibility (EMC): Do **not** only ground the device via the protective earth conductor of the supply cable. Instead, the functional grounding must also be connected to the process connection (flange or threaded connection) or to the external ground terminal.
- i** An easily accessible power switch must be installed in the proximity of the device. The power switch must be marked as a disconnector for the device (IEC/EN61010).



**Block diagram 4-wire: 4-20 mA HART (90 to 253 V<sub>AC</sub>)**


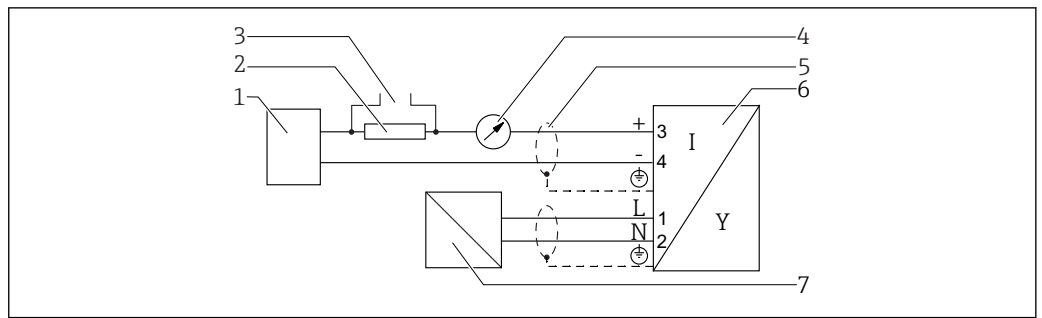


A0036527

19 Block diagram 4-wire: 4-20 mA HART (90 to 253 V<sub>AC</sub>)

- 1 Evaluation unit, e.g. PLC
- 2 HART communication resistor ( $\geq 250 \Omega$ ); observe maximum load
- 3 Connection for Commubox FXA195 or FieldXpert SFX350/SFX370 (via VIATOR Bluetooth modem)
- 4 Analog display device; observe maximum load
- 5 Cable scree; observe cable specification
- 6 Measuring device
- 7 Supply voltage; observe terminal voltage, observe cable specification

### Connection examples for the switch output

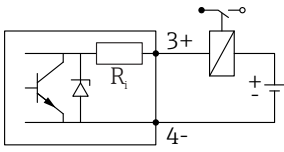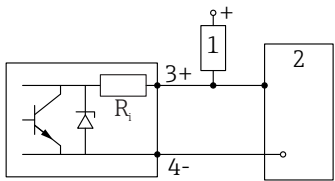 <p><b>20</b> Connection of a relay</p> <p>Suitable relays (examples):</p> <ul style="list-style-type: none"> <li>▪ Solid-state relay: Phoenix Contact OV-24DC/480AC/5 with mounting rail connector UMK-1 OM-R/AMS</li> <li>▪ Electromechanical relay: Phoenix Contact PLC-RSC-12DC/21</li> </ul>	 <p><b>21</b> Connection of a digital input</p> <ol style="list-style-type: none"> <li>1 Pull-up resistor</li> <li>2 Digital input</li> </ol>
--	--

**i** For optimum interference immunity we recommend to connect an external resistor (internal resistance of the relay or Pull-up resistor) of  $< 1\,000\ \Omega$ .

### 7.1.2 Cable specification

#### ▪ Devices without integrated overvoltage protection

Pluggable spring-force terminals for wire cross-sections  $0.5$  to  $2.5\ \text{mm}^2$  (20 to 14 AWG)

#### ▪ Devices with integrated overvoltage protection

Screw terminals for wire cross-sections  $0.2$  to  $2.5\ \text{mm}^2$  (24 to 14 AWG)

- For ambient temperature  $T_U \geq 60\ ^\circ\text{C}$  ( $140\ ^\circ\text{F}$ ): use cable for temperature  $T_U + 20\ \text{K}$ .


#### HART

- A normal device cable suffices if only the analog signal is used.
- A shielded cable is recommended if using the HART protocol. Observe grounding concept of the plant.
- For 4-wire devices: Standard device cable is sufficient for the power line.


### 7.1.3 Device plug connectors

**i** For the versions with fieldbus plug connector (M12 or 7/8"), the signal line can be connected without opening the housing.

*Pin assignment of the M12 plug connector*

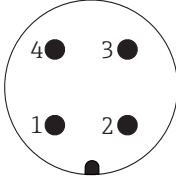 <p style="text-align: right; font-size: small;">A0011175</p>	Pin	Meaning
	1	Signal +
	2	not connected
	3	Signal -
	4	Ground

*Pin assignment of the 7/8" plug connector*

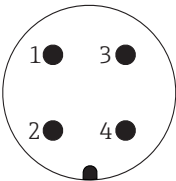 <p style="text-align: right; font-size: small;">A0011176</p>	Pin	Meaning
	1	Signal -
	2	Signal +
	3	Not connected
	4	Screen

## 7.1.4 Supply voltage


### 2-wire, 4-20mA HART, passive

"Power Supply, Output" <sup>1)</sup>	"Approval" <sup>2)</sup>	Terminal voltage U at the device	Maximum load R, depending on the supply voltage U <sub>0</sub> at the supply unit
A: 2-wire; 4-20mA HART	<ul style="list-style-type: none"> <li>■ Non-Ex</li> <li>■ Ex nA</li> <li>■ Ex ic</li> <li>■ CSA GP</li> </ul>	10.4 to 35 V <sup>3) 4) 5)</sup>	<p style="text-align: right; font-size: small;">A0017140</p>
	Ex ia / IS	10.4 to 30 V <sup>3) 4) 5)</sup>	
	<ul style="list-style-type: none"> <li>■ Ex d(ia) / XP</li> <li>■ Ex ic(ia)</li> <li>■ Ex nA(ia)</li> <li>■ Ex ta / DIP</li> </ul>	13 to 35 V <sup>5) 6)</sup>	<p style="text-align: right; font-size: small;">A0034771</p>
Ex ia + Ex d(ia) / IS + XP	13 to 30 V <sup>5) 6)</sup>		

- 1) Feature 020 of the product structure
- 2) Feature 010 of the product structure
- 3) For ambient temperatures  $T_a \leq -20\text{ °C}$  ( $-4\text{ °F}$ ) a minimum voltage of 15 V is required for the startup of the device at the minimum error current (3,6 mA). The startup current can be parametrized. If the device is operated with a fixed current  $I \geq 5,5\text{ mA}$  (HART multidrop mode), a voltage of  $U \geq 10,4\text{ V}$  is sufficient throughout the entire range of ambient temperatures.
- 4) In the current simulation mode a voltage  $U \geq 12,5\text{ V}$  is required.
- 5) If the Bluetooth modem is used, the minimum supply voltage increases by 3 V.
- 6) For ambient temperatures  $T_a \leq -20\text{ °C}$  ( $-4\text{ °F}$ ) a minimum voltage of 16 V is required for the startup of the device at the minimum error current (3.6 mA).

"Power Supply, Output" <sup>1)</sup>	"Approval" <sup>2)</sup>	Terminal voltage U at the device	Maximum load R, depending on the supply voltage U <sub>0</sub> at the supply unit
B: 2-wire; 4-20 mA HART, switch output	<ul style="list-style-type: none"> <li>■ Non-Ex</li> <li>■ Ex nA</li> <li>■ Ex nA(ia)</li> <li>■ Ex ic</li> <li>■ Ex ic(ia)</li> <li>■ Ex d(ia) / XP</li> <li>■ Ex ta / DIP</li> <li>■ CSA GP</li> </ul>	13 to 35 V <sup>3) 4)</sup>	<p style="text-align: right; font-size: small;">A0034771</p>
	<ul style="list-style-type: none"> <li>■ Ex ia / IS</li> <li>■ Ex ia + Ex d(ia) / IS + XP</li> </ul>	13 to 30 V <sup>3) 4)</sup>	

- 1) Feature 020 of the product structure
- 2) Feature 010 of the product structure
- 3) For ambient temperatures  $T_a \leq -30\text{ °C}$  ( $-22\text{ °F}$ ) a minimum voltage of 16 V is required for the startup of the device at the minimum error current (3.6 mA).
- 4) If the Bluetooth modem is used, the minimum supply voltage increases by 3 V.

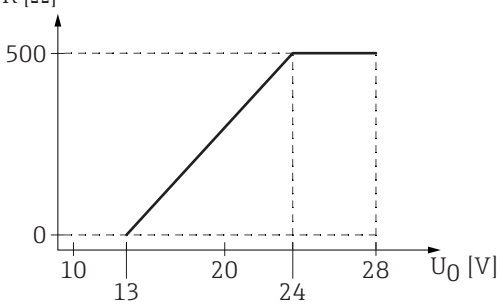"Power Supply, Output" <sup>1)</sup>	"Approval" <sup>2)</sup>	Terminal voltage U at the device	Maximum load R, depending on the supply voltage U <sub>0</sub> at the supply unit
C: 2-wire; 4-20mA HART, 4-20mA	any	13 to 28 V <sup>3) 4)</sup>	 <p>The graph plots Maximum load R [Ω] on the y-axis against supply voltage U<sub>0</sub> [V] on the x-axis. The y-axis has a tick at 0 and 500. The x-axis has ticks at 10, 13, 20, 24, and 28. A solid line starts at (13, 0) and rises linearly to (24, 500). From U<sub>0</sub> = 24 V to U<sub>0</sub> = 28 V, the load R remains constant at 500 Ω. Dashed lines indicate the coordinates of the points (13, 0), (24, 500), and (28, 500).</p>

A0034841

- 1) Feature 020 of the product structure
- 2) Feature 010 of the product structure
- 3) For ambient temperatures  $T_a \leq -30\text{ °C}$  (-22 °F) a minimum voltage of 16 V is required for the startup of the device at the minimum error current (3.6 mA).
- 4) If the Bluetooth modem is used, the minimum supply voltage increases by 3 V.

<b>Polarity reversal protection</b>	Yes
<b>Admissible residual ripple at f = 0 to 100 Hz</b>	$U_{SS} < 1\text{ V}$
<b>Admissible residual ripple at f = 100 to 10000 Hz</b>	$U_{SS} < 10\text{ mV}$

**4-wire, 4-20mA HART, active**

"Power supply; Output" <sup>1)</sup>	Terminal voltage	Maximum load $R_{max}$
<b>K:</b> 4-wire 90-253VAC; 4-20mA HART	90 to 253 V <sub>AC</sub> (50 to 60 Hz), overvoltage category II	500 Ω
<b>L:</b> 4-wire 10,4-48VDC; 4-20mA HART	10.4 to 48 V <sub>DC</sub>	

1) Feature 020 of the product structure

**7.1.5 Overvoltage protection**

If the measuring device is used for level measurement in flammable liquids which requires the use of overvoltage protection according to DIN EN 60079-14, standard for test procedures 60060-1 (10 kA, pulse 8/20 μs), an overvoltage protection module has to be installed.

**Integrated overvoltage protection module**

An integrated overvoltage protection module is available for 2-wire HART as well as PROFIBUS PA and FOUNDATION Fieldbus devices.

Product structure: Feature 610 "Accessory mounted", option NA "Overvoltage protection".

Technical data	
Resistance per channel	2 × 0.5 Ω max.
Threshold DC voltage	400 to 700 V
Threshold impulse voltage	< 800 V
Capacitance at 1 MHz	< 1.5 pF
Nominal arrest impulse voltage (8/20 μs)	10 kA

**External overvoltage protection module**

HAW562 or HAW569 from Endress+Hauser are suited as external overvoltage protection.


**7.2 Connecting the measuring device****⚠ WARNING****Risk of explosion!**

- ▶ Observe applicable national standards.
- ▶ Comply with the specifications in the Safety Instructions (XA).
- ▶ Use specified cable glands only.
- ▶ Check to ensure that the power supply matches the information on the nameplate.
- ▶ Switch off the power supply before connecting the device.
- ▶ Connect the potential matching line to the outer ground terminal before applying the power supply.

**Required tools/accessories:**

- For devices with a cover lock: Allen key AF3
- Wire stripper
- When using stranded cables: One ferrule for every wire to be connected.


### 7.2.1 Opening connection compartment cover

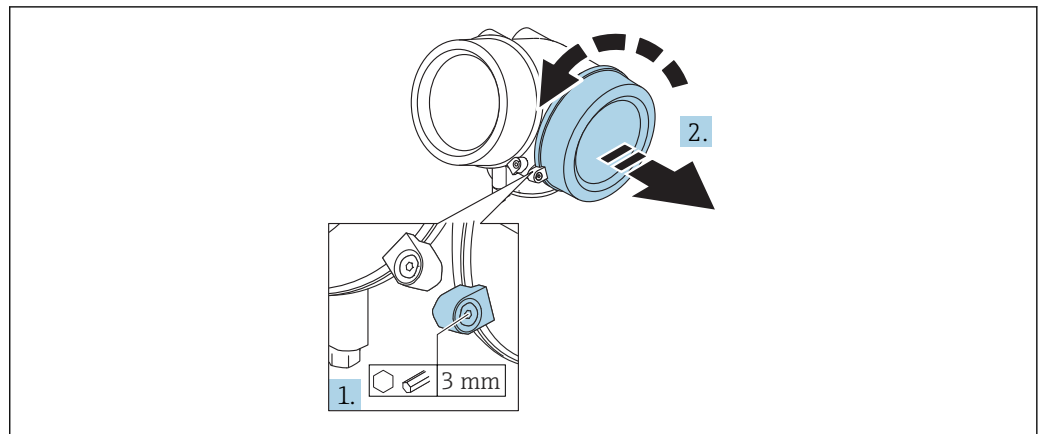

A0021490

1. Loosen the screw of the securing clamp of the connection compartment cover using an Allen key (3 mm) and turn the clamp 90° clockwise.
2. Afterwards unscrew connection compartment cover and check lid gasket, replace if necessary.

### 7.2.2 Connecting

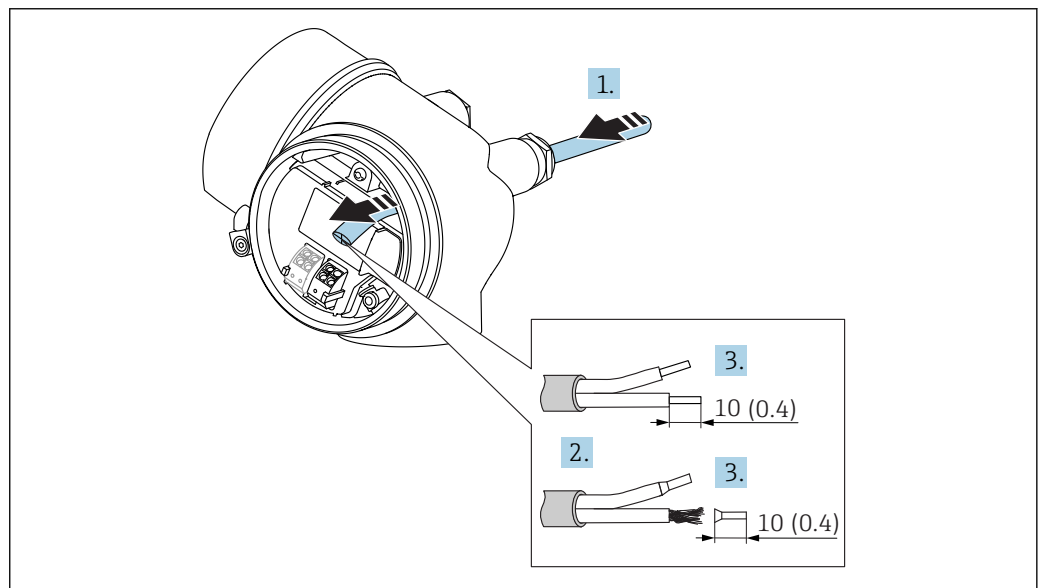


A0036418

22 Dimensions: mm (in)

1. Push the cable through the cable entry . To ensure tight sealing, do not remove the sealing ring from the cable entry.
2. Remove the cable sheath.
3. Strip the cable ends over a length of 10 mm (0.4 in). In the case of stranded cables, also fit ferrules.
4. Firmly tighten the cable glands.

5. Connect the cable in accordance with the terminal assignment.

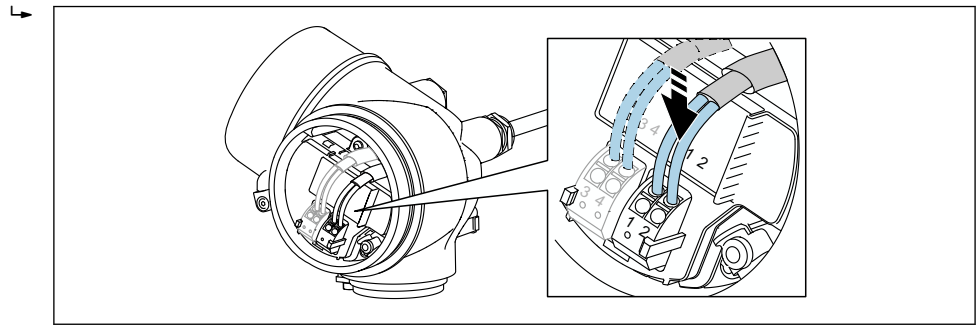


A0034682

6. If using shielded cables: Connect the cable shield to the ground terminal.

### 7.2.3 Plug-in spring-force terminals

In the case of devices without integrated overvoltage protection, electrical connection is via plug-in spring-force terminals. Rigid conductors or flexible conductors with ferrules can be inserted directly into the terminal without using the lever, and create a contact automatically.

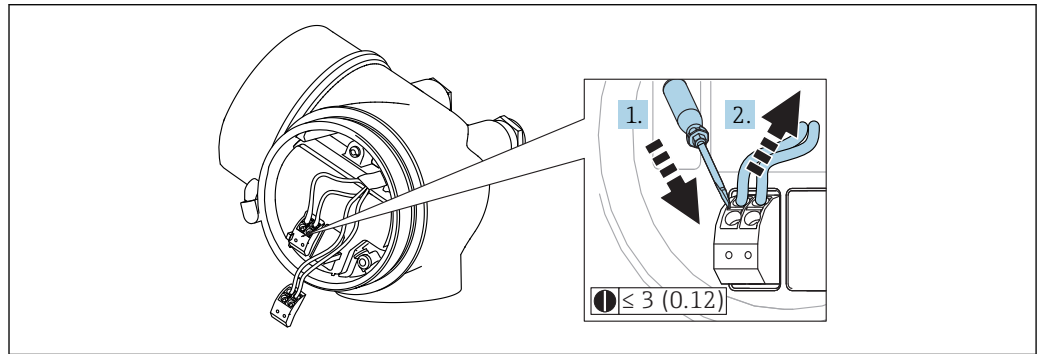


A0013661

23 Dimensions: mm (in)

To remove cables from the terminal:

1. Using a flat-blade screwdriver  $\leq 3$  mm, press down on the slot between the two terminal holes
2. while simultaneously pulling the cable end out of the terminal.

### 7.2.4 Closing connection compartment cover

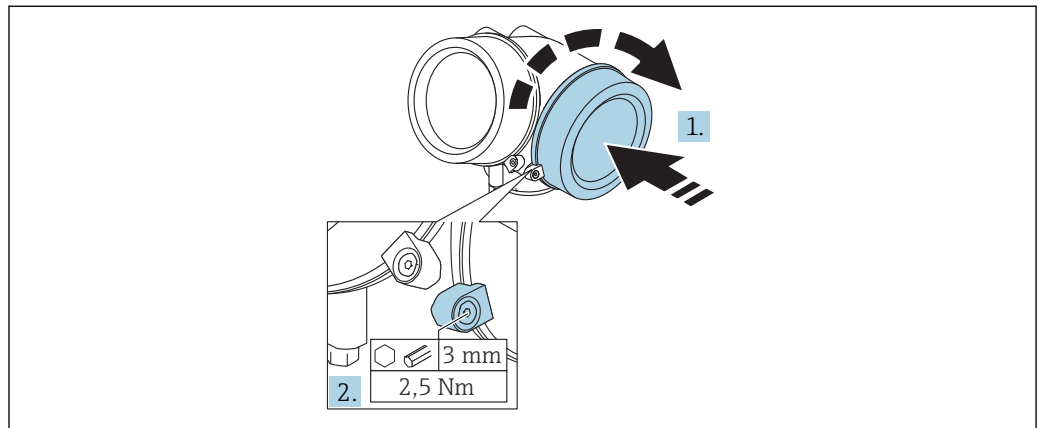

A0021491



1. Screw back firmly connection compartment cover.
2. Turning securing clamp 90 ° counterclockwise and tighten the clamp with 2.5 Nm (1.84 lbf ft) again using the Allen key (3 mm).



### 7.3 Post-connection check

<input type="checkbox"/>	Is the device or cable undamaged (visual check)?
<input type="checkbox"/>	Do the cables comply with the requirements ?
<input type="checkbox"/>	Do the cables have adequate strain relief?
<input type="checkbox"/>	Are all cable glands installed, securely tightened and leak-tight?
<input type="checkbox"/>	Does the supply voltage match the specifications on the nameplate?
<input type="checkbox"/>	Is the terminal assignment correct?
<input type="checkbox"/>	If required: Has protective ground connection been established ?
<input type="checkbox"/>	If supply voltage is present, is the device ready for operation and do values appear on the display module?
<input type="checkbox"/>	Are all housing covers installed and securely tightened?
<input type="checkbox"/>	Is the securing clamp tightened correctly?


## 8 Operation options

### 8.1 Overview

#### 8.1.1 Local operation

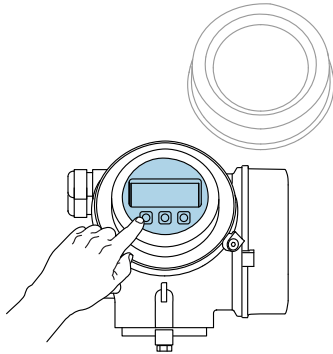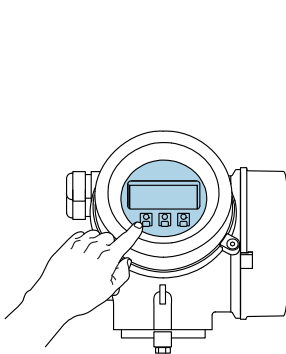Operation with	<i>Pushbuttons</i>	<i>Touch Control</i>
Order code for "Display; Operation"	Option C "SD02"	Option E "SD03"
	 A0036312	 A0036313
<b>Display elements</b>	4-line display	4-line display white background lighting; switches to red in event of device error
	Format for displaying measured variables and status variables can be individually configured	
	Permitted ambient temperature for the display: -20 to +70 °C (-4 to +158 °F) The readability of the display may be impaired at temperatures outside the temperature range.	
<b>Operating elements</b>	local operation with 3 push buttons (⊕, ⊖, ⊞)	external operation via touch control; 3 optical keys: ⊕, ⊖, ⊞
	Operating elements also accessible in various hazardous areas	
<b>Additional functionality</b>	Data backup function The device configuration can be saved in the display module.	
	Data comparison function The device configuration saved in the display module can be compared to the current device configuration.	
	Data transfer function The transmitter configuration can be transmitted to another device using the display module.	

### 8.1.2 Operation with remote display and operating module FHX50

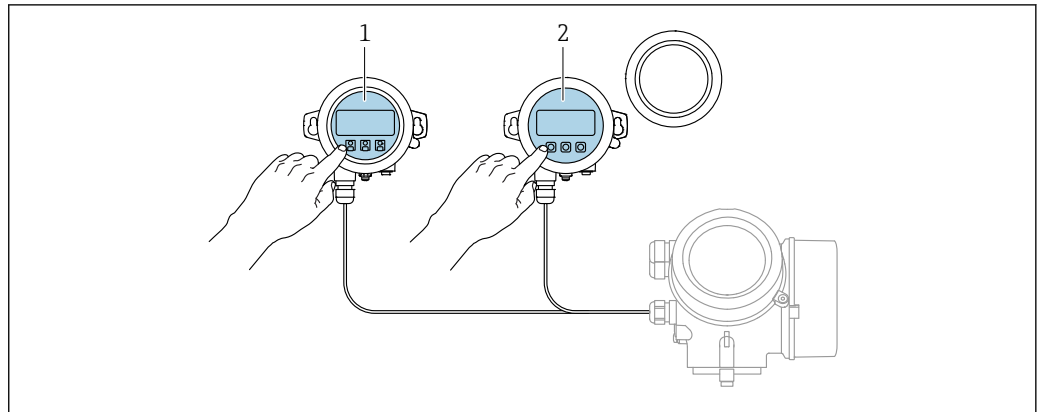


A0036314

24 FHX50 operating options

- 1 Display and operating module SD03, optical keys; can be operated through the glass of the cover
- 2 Display and operating module SD02, push buttons; cover must be removed

### 8.1.3 Operation via Bluetooth® wireless technology

#### Requirements

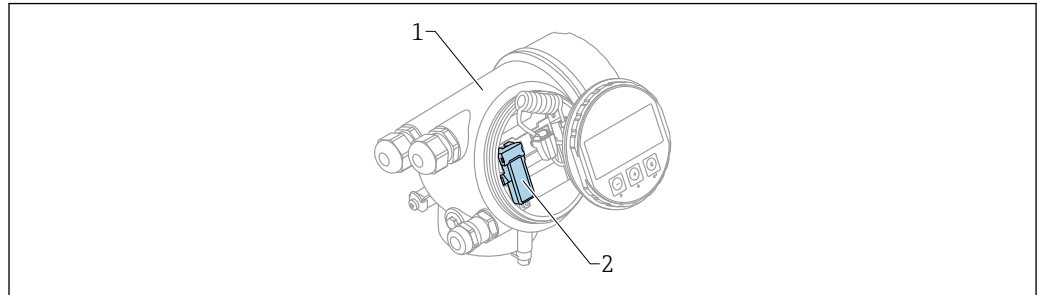

A0036790


25 Device with Bluetooth module

- 1 Electronics housing of the device
- 2 Bluetooth module

This operation option is only available for devices with Bluetooth module. There are the following options:

- The device has been ordered with a Bluetooth module:  
Feature 610 "Accessory Mounted", option NF "Bluetooth"
- The Bluetooth module has been ordered as an accessory (ordering number: 71377355) and has been mounted. See Special Documentation SD02252F.

#### Operation via SmartBlue (app)

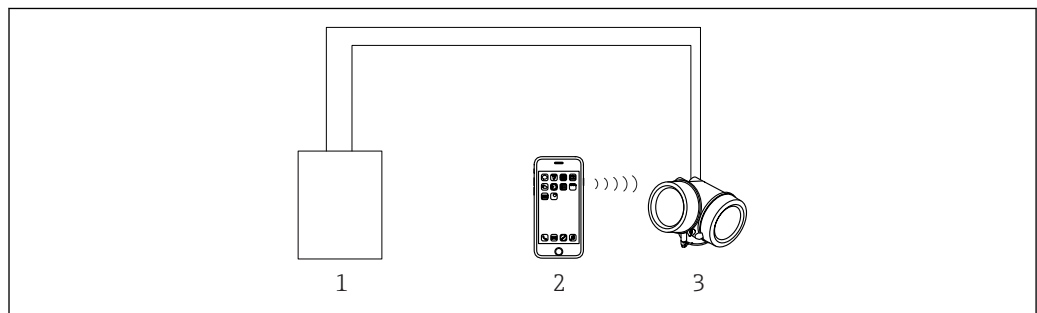


A0034939

26 Operation via SmartBlue (app)

- 1 Transmitter power supply unit
- 2 Smartphone / tablet with SmartBlue (app)
- 3 Transmitter with Bluetooth module

### 8.1.4 Remote operation


#### Via HART protocol

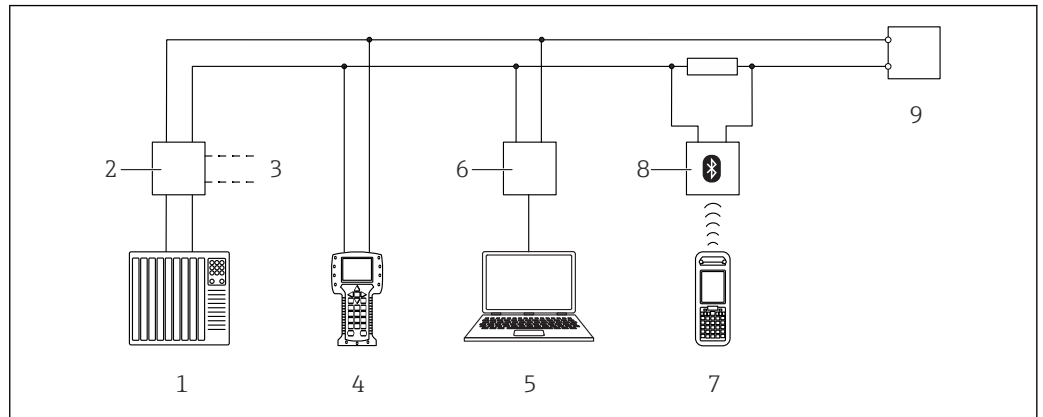

27 Options for remote operation via HART protocol

- 1 PLC (Programmable Logic Controller)
- 2 Transmitter power supply unit, e.g. RN221N (with communication resistor)
- 3 Connection for Commubox FXA191, FXA195 and Field Communicator 375, 475
- 4 Field Communicator 475
- 5 Computer with operating tool (e.g. DeviceCare/FieldCare, AMS Device Manager, SIMATIC PDM)
- 6 Commubox FXA191 (RS232) or FXA195 (USB)
- 7 Field Xpert SFX350/SFX370
- 8 VIATOR Bluetooth modem with connecting cable
- 9 Transmitter

#### DeviceCare/FieldCare via service interface (CDI)

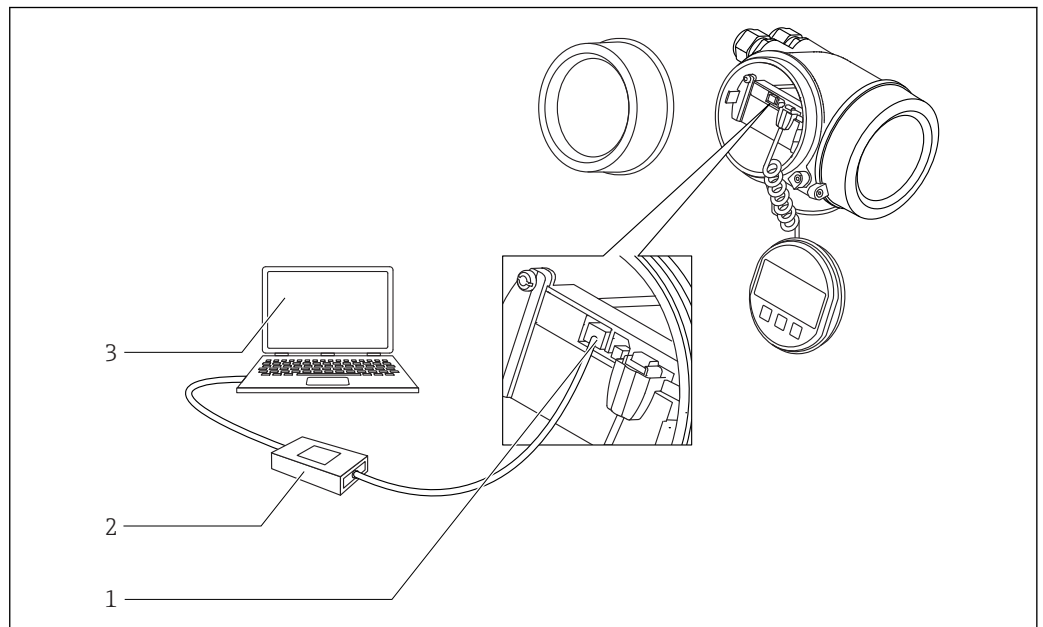

28 DeviceCare/FieldCare via service interface (CDI)

- 1 Service interface (CDI) of the instrument (= Endress+Hauser Common Data Interface)
- 2 Commubox FXA291
- 3 Computer with DeviceCare/FieldCare operating tool

## 8.2 Structure and function of the operating menu


### 8.2.1 Structure of the operating menu

Menu	Submenu / parameter	Meaning
	Language <sup>1)</sup>	Defines the operating language of the on-site display
<b>Commissioning</b> <sup>2)</sup>		Launches the interactive wizard for guided commissioning. Additional settings generally do not need to be made in the other menus when the wizard is finished.
<b>Setup</b>	Parameter 1 ... Parameter N	Once values have been set for these parameters, the measurement should generally be completely configured.
	<b>Advanced setup</b>	Contains additional submenus and parameters: <ul style="list-style-type: none"> <li>▪ to adapt the device to special measuring conditions.</li> <li>▪ to process the measured value (scaling, linearization).</li> <li>▪ to configure the signal output.</li> </ul>
<b>Diagnostics</b>	<b>Diagnostic list</b>	Contains up to 5 currently active error messages.
	<b>Event logbook</b> <sup>3)</sup>	Contains the last 20 messages (which are no longer active).
	<b>Device information</b>	Contains information for identifying the device.
	<b>Measured values</b>	Contains all current measured values.
	<b>Data logging</b>	Contains the history of the individual measuring values.
	<b>Simulation</b>	Is used to simulate measured values or output values.
	<b>Device check</b>	Contains all parameters needed to check the measurement capability of the device.
<b>Expert</b> <sup>5)</sup> Contains all parameters of the device (including those that are already in one of the other menus). This menu is organized according to the function blocks of the device.  The parameters of the Expert menu are described in: GPO1014F (HART)	<b>System</b>	Contains all higher-order device parameters that do not concern the measurement or measured value communication.
	<b>Sensor</b>	Contains all parameters needed to configure the measurement.
	<b>Output</b>	<ul style="list-style-type: none"> <li>▪ Contains all parameters needed to configure the current output.</li> <li>▪ Contains all parameters needed to configure the switch output (PFS).</li> </ul>

Menu	Submenu / parameter	Meaning
	<b>Communication</b>	Contains all parameters needed to configure the digital communication interface.
	<b>Diagnostics</b>	Contains all parameters needed to detect and analyze operational errors.

- 1) If operating via operating tools (e.g. FieldCare), the "Language" parameter is located under "Setup → Advanced setup → Display"
- 2) Only if operating via an FDT/DTM system
- 3) only available with local operation
- 4) only available if operating via DeviceCare or FieldCare
- 5) On entering the "Expert" menu, an access code is always requested. If a customer specific access code has not been defined, "0000" has to be entered.


## 8.2.2 User roles and related access authorization

The two user roles **Operator** and **Maintenance** have different write access to the parameters if a device-specific access code has been defined. This protects the device configuration via the local display from unauthorized access →  56.

*Access authorization to parameters*

User role	Read access		Write access	
	Without access code (from the factory)	With access code	Without access code (from the factory)	With access code
Operator	✓	✓	✓	--
Maintenance	✓	✓	✓	✓

If an incorrect access code is entered, the user obtains the access rights of the **Operator** role.


 The user role with which the user is currently logged on is indicated by the **Access status display** parameter (for display operation) or **Access status tooling** parameter (for tool operation).

## 8.2.3 Data access - Security

### Write protection via access code

Using the device-specific access code, the parameters for the measuring device configuration are write-protected and their values can no longer be changed via local operation.

### Define access code via local display

1. Navigate to: Setup → Advanced setup → Administration → Define access code → Define access code
2. Define a max. 4-digit numeric code as an access code.
3. Repeat the same code in **Confirm access code** parameter.
  - ↳ The -symbol appears in front of all write-protected parameters.




### Define access code via operating tool (e.g. FieldCare)

1. Navigate to: Setup → Advanced setup → Administration → Define access code
2. Define a max. 4-digit numeric code as an access code.
  - ↳ Write protection is active.

### Parameters that can always be changed



The write protection does not include certain parameters that do not affect the measurement. Despite the defined access code, they can always be modified, even if the other parameters are locked.

The device automatically locks the write-protected parameters again if a key is not pressed for 10 minutes in the navigation and editing view. The device locks the write-protected parameters automatically after 60 s if the user skips back to the measured value display mode from the navigation and editing view.


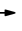
-  If write access is activated via access code, it can be also be deactivated only via the access code →  57.
- In the "Description of Device Parameters" documents, each write-protected parameter is identified with the -symbol.



### Disabling write protection via access code

If the -symbol appears on the local display in front of a parameter, the parameter is write-protected by a device-specific access code and its value cannot be changed at the moment using the local display →  56.

The locking of the write access via local operation can be disabled by entering the device-specific access code.

1. After you press , the input prompt for the access code appears.
2. Enter the access code.
  - ↳ The -symbol in front of the parameters disappears; all previously write-protected parameters are now re-enabled.

### Deactivation of the write protection via access code

#### Via local display

1. Navigate to: Setup → Advanced setup → Administration → Define access code → Define access code
2. Enter **0000**.
3. Repeat **0000** in **Confirm access code** parameter.
  - ↳ The write protection is deactivated. Parameters can be changed without entering an access code.

#### Via an operating tool (e.g. FieldCare)


1. Navigate to: Setup → Advanced setup → Administration → Define access code
2. Enter **0000**.
  - ↳ The write protection is deactivated. Parameters can be changed without entering an access code.

### Write protection via write protection switch

Unlike parameter write protection via a user-specific access code, this allows write access to the entire operating menu - except for the **"Contrast display" parameter** - to be locked.


The parameter values are now read only and cannot be edited any more (exception **"Contrast display" parameter**):

- Via local display
- Via service interface (CDI)
- Via HART protocol

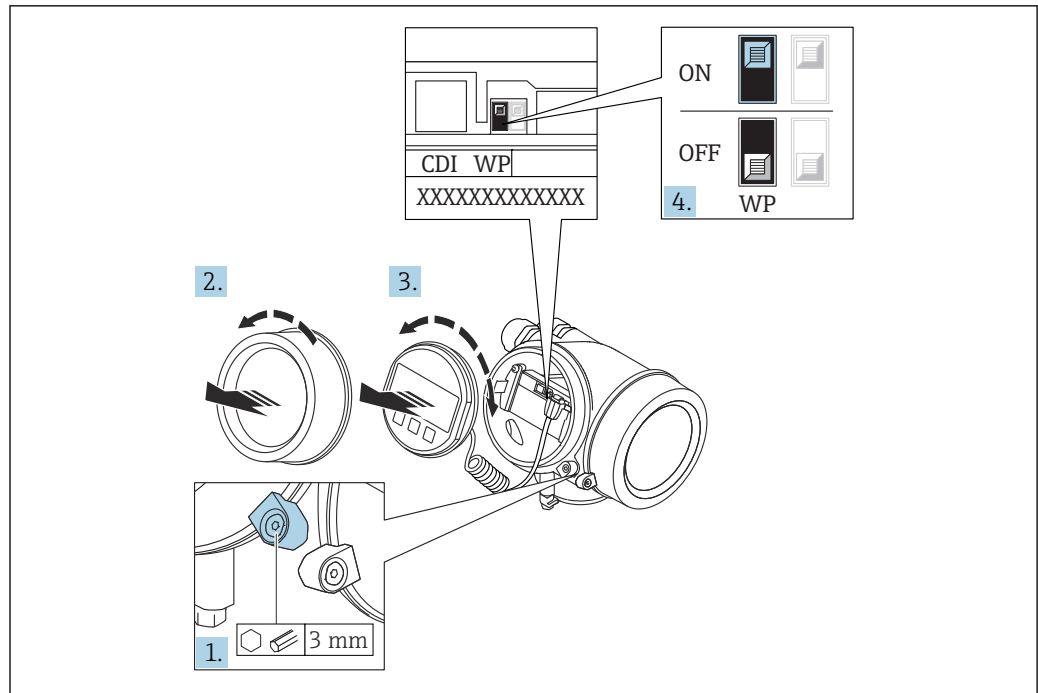


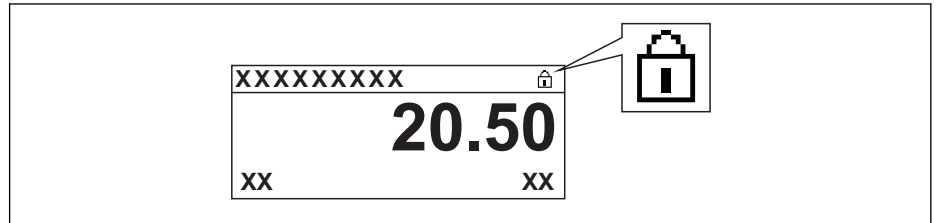
A0026157

1. Loosen the securing clamp.
2. Unscrew the electronics compartment cover.
3. Pull out the display module with a gentle rotational movement. To make it easier to access the lock switch, attach the display module to the edge of the electronics compartment.

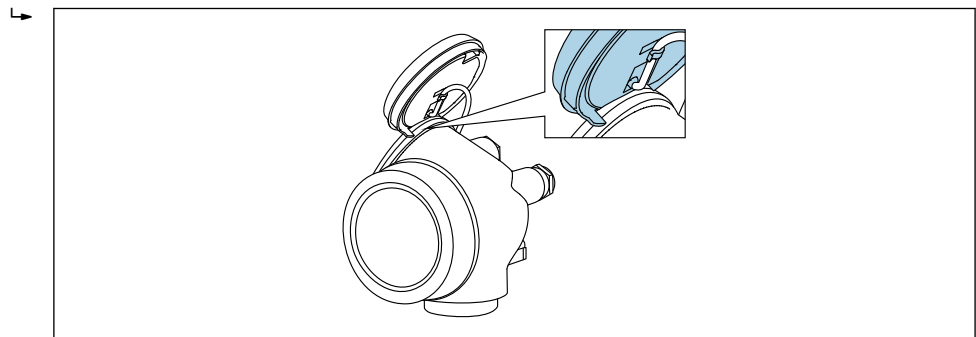


A0036086

4. Setting the write protection switch (WP) on the main electronics module to the **ON** position enables hardware write protection. Setting the write protection switch (WP) on the main electronics module to the **OFF** position (factory setting) disables hardware write protection.
  - ↳ If the hardware write protection is enabled: The **Hardware locked** option is displayed in the **Locking status** parameter. In addition, on the local display the -symbol appears in front of the parameters in the header of the operational display and in the navigation view.



A0015870

If the hardware write protection is disabled: No option is displayed in the **Locking status** parameter. On the local display, the -symbol disappears from in front of the parameters in the header of the operational display and in the navigation view.

5. Feed the cable into the gap between the housing and main electronics module and plug the display module into the electronics compartment in the desired direction until it engages.
6. Reverse the removal procedure to reassemble the transmitter.

### Enabling and disabling the keypad lock

The keypad lock makes it possible to block access to the entire operating menu via local operation. As a result, it is no longer possible to navigate through the operating menu or change the values of individual parameters. Users can only read the measured values on the operational display.

The keypad lock is switched on and off via the context menu.


#### Switching on the keypad lock


##### For the SD03 display only

The keypad lock is switched on automatically:


- If the device has not been operated via the display for > 1 minute.
- Each time the device is restarted.

#### To activate the keylock manually:

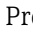1. The device is in the measured value display.  
Press  for at least 2 seconds.  
↳ A context menu appears.
2. In the context menu select the **Keylock on** option.  
↳ The keypad lock is switched on.

 If the user attempts to access the operating menu while the keypad lock is active, the message **Keylock on** appears.

#### Switching off the keypad lock

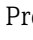1. The keypad lock is switched on.  
Press  for at least 2 seconds.  
↳ A context menu appears.
2. In the context menu select the **Keylock off** option.  
↳ The keypad lock is switched off.


### Bluetooth® wireless technology

#### Signal transmission via Bluetooth® wireless technology uses a cryptographic technique tested by the Fraunhofer Institute

- The device is not visible via *Bluetooth*® wireless technology without the SmartBlue app
- Only one point-to-point connection between **one** sensor and **one** smartphone or tablet is established

## 8.3 Display and operating module

### 8.3.1 Display appearance

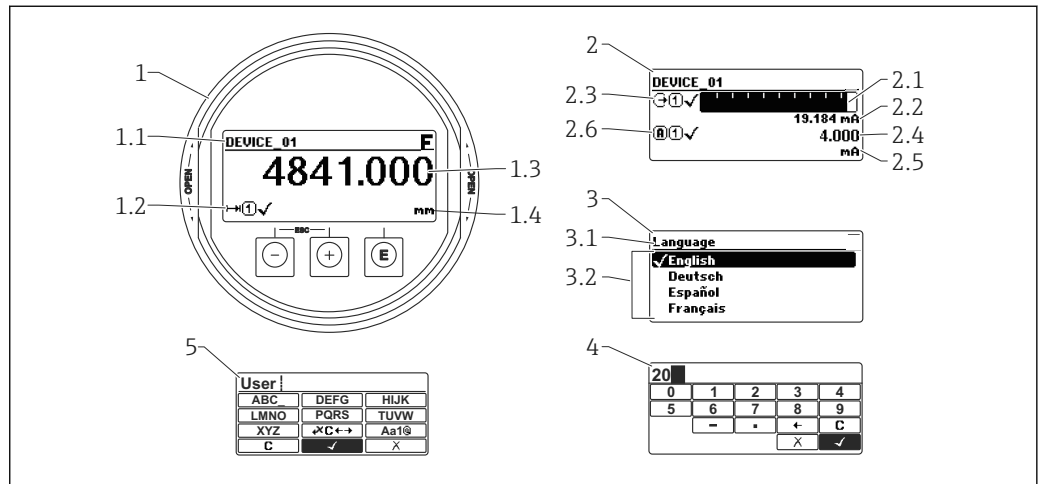





A0012635

29 Appearance of the display and operation module for on-site operation

- 1 Measured value display (1 value max. size)
- 1.1 Header containing tag and error symbol (if an error is active)
- 1.2 Measured value symbols
- 1.3 Measured value
- 1.4 Unit
- 2 Measured value display (1 bargraph + 1 value)
- 2.1 Bargraph for measured value 1
- 2.2 Measured value 1 (including unit)
- 2.3 Measured value symbols for measured value 1
- 2.4 Measured value 2
- 2.5 Unit for measured value 2
- 2.6 Measured value symbols for measured value 2
- 3 Representation of a parameter (here: a parameter with selection list)
- 3.1 Header containing parameter name and error symbol (if an error is active)
- 3.2 Selection list;  marks the current parameter value.
- 4 Input matrix for numbers
- 5 Input matrix for alphanumeric and special characters



### Display symbols for the submenus

Symbol	Meaning
 <small>A0018367</small>	<b>Display/operation</b> Is displayed: <ul style="list-style-type: none"> <li>in the main menu next to the selection "Display/operation"</li> <li>in the header, if you are in the "Display/operation" menu</li> </ul>
 <small>A0018364</small>	<b>Setup</b> Is displayed: <ul style="list-style-type: none"> <li>in the main menu next to the selection "Setup"</li> <li>in the header, if you are in the "Setup" menu</li> </ul>
 <small>A0018365</small>	<b>Expert</b> Is displayed: <ul style="list-style-type: none"> <li>in the main menu next to the selection "Expert"</li> <li>in the header, if you are in the "Expert" menu</li> </ul>
 <small>A0018366</small>	<b>Diagnostics</b> Is displayed: <ul style="list-style-type: none"> <li>in the main menu next to the selection "Diagnostics"</li> <li>in the header, if you are in the "Diagnostics" menu</li> </ul>


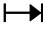








### Status signals

<b>F</b> <small>A0032902</small>	<b>"Failure"</b> A device error is present. The measured value is no longer valid.
<b>C</b> <small>A0032903</small>	<b>"Function check"</b> The device is in service mode (e.g. during a simulation).
<b>S</b> <small>A0032904</small>	<b>"Out of specification"</b> The device is operated: <ul style="list-style-type: none"> <li>Outside of its technical specifications (e.g. during startup or a cleaning)</li> <li>Outside of the configuration carried out by the user (e.g. level outside configured span)</li> </ul>
<b>M</b> <small>A0032905</small>	<b>"Maintenance required"</b> Maintenance is required. The measured value is still valid.







### Display symbols for the locking state

Symbol	Meaning
 <small>A0013148</small>	<b>Display parameter</b> Marks display-only parameters which can not be edited.
 <small>A0013150</small>	<b>Device locked</b> <ul style="list-style-type: none"> <li>In front of a parameter name: The device is locked via software and/or hardware.</li> <li>In the header of the measured value screen: The device is locked via hardware.</li> </ul>

## Measured value symbols


Symbol	Meaning
<b>Measured values</b>	
 A0032892	Level
 A0032893	Distance
 A0032908	Current output
 A0032894	Measured current
 A0032895	Terminal voltage
 A0032896	Temperature of the electronics or the sensor
<b>Measuring channels</b>	
 A0032897	Measuring channel 1
 A0032898	Measuring channel 2
<b>Status of the measured value</b>	
 A0018361	<b>Status "Alarm"</b> The measurement is interrupted. The output assumes the defined alarm value. A diagnostic message is generated.
 A0018360	<b>Status "Warning"</b> The device continues measuring. A diagnostic message is generated.

### 8.3.2 Operating elements

Key	Meaning
 <small>A0018330</small>	<p><b>Minus key</b></p> <p><i>For menu, submenu</i>                      Moves the selection bar upwards in a picklist.</p> <p><i>For text and numeric editor</i>                      In the input mask, moves the selection bar to the left (backwards).</p>
 <small>A0018329</small>	<p><b>Plus key</b></p> <p><i>For menu, submenu</i>                      Moves the selection bar downwards in a picklist.</p> <p><i>For text and numeric editor</i>                      In the input mask, moves the selection bar to the right (forwards).</p>
 <small>A0018328</small>	<p><b>Enter key</b></p> <p><i>For measured value display</i></p> <ul style="list-style-type: none"> <li>▪ Pressing the key briefly opens the operating menu.</li> <li>▪ Pressing the key for 2 s opens the context menu.</li> </ul> <p><i>For menu, submenu</i></p> <ul style="list-style-type: none"> <li>▪ Pressing the key briefly                      Opens the selected menu, submenu or parameter.</li> <li>▪ Pressing the key for 2 s for parameter:                      If present, opens the help text for the function of the parameter.</li> </ul> <p><i>For text and numeric editor</i></p> <ul style="list-style-type: none"> <li>▪ Pressing the key briefly                             <ul style="list-style-type: none"> <li>– Opens the selected group.</li> <li>– Carries out the selected action.</li> </ul> </li> <li>▪ Pressing the key for 2 s confirms the edited parameter value.</li> </ul>
 <small>A0032909</small>	<p><b>Escape key combination (press keys simultaneously)</b></p> <p><i>For menu, submenu</i></p> <ul style="list-style-type: none"> <li>▪ Pressing the key briefly                             <ul style="list-style-type: none"> <li>– Exits the current menu level and takes you to the next higher level.</li> <li>– If help text is open, closes the help text of the parameter.</li> </ul> </li> <li>▪ Pressing the key for 2 s returns you to the measured value display ("home position").</li> </ul> <p><i>For text and numeric editor</i>                      Closes the text or numeric editor without applying changes.</p>
 <small>A0032910</small>	<p><b>Minus/Enter key combination (press and hold down the keys simultaneously)</b></p> <p>Reduces the contrast (brighter setting).</p>
 <small>A0032911</small>	<p><b>Plus/Enter key combination (press and hold down the keys simultaneously)</b></p> <p>Increases the contrast (darker setting).</p>



### 8.3.3 Entering numbers and text

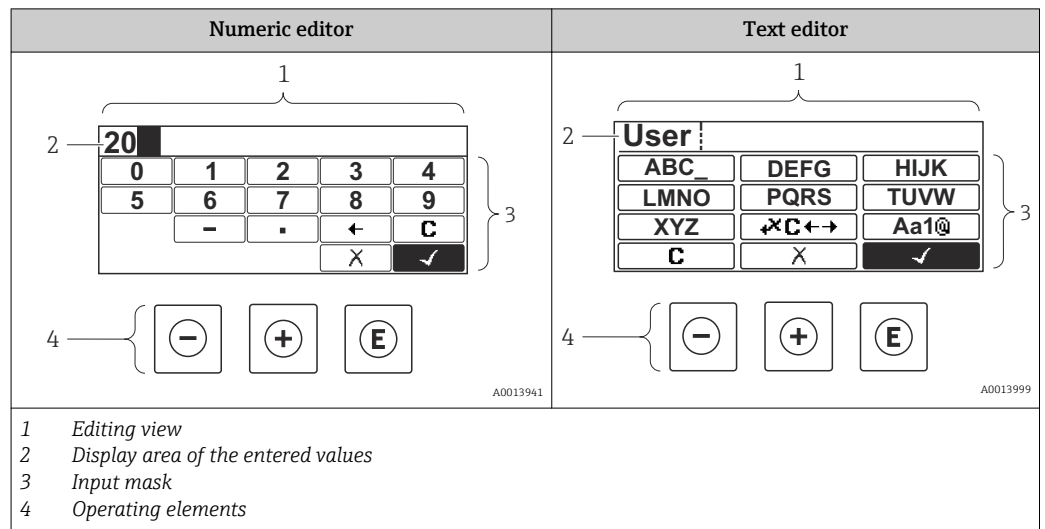

#### Input mask





The following input symbols are available in the input mask of the numeric and text editor:


##### Numeric editor symbols





Symbol	Meaning
 <small>A0013998</small>	Selection of numbers from 0 to 9.
 <small>A0016619</small>	Inserts decimal separator at the input position.
 <small>A0016620</small>	Inserts minus sign at the input position.
 <small>A0013985</small>	Confirms selection.
 <small>A0016621</small>	Moves the input position one position to the left.
 <small>A0013986</small>	Exits the input without applying the changes.
 <small>A0014040</small>	Clears all entered characters.

##### Text editor symbols

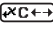Symbol	Meaning
 <small>A0013997</small>	Selection of letters from A to Z
 <small>A0013981</small>	Toggle <ul style="list-style-type: none"> <li>Between upper-case and lower-case letters</li> <li>For entering numbers</li> <li>For entering special characters</li> </ul>

 <small>A0013985</small>	Confirms selection.
 <small>A0013987</small>	Switches to the selection of the correction tools.
 <small>A0013986</small>	Exits the input without applying the changes.
 <small>A0014040</small>	Clears all entered characters.

*Correction symbols under *

Symbol	Meaning
 <small>A0032907</small>	Clears all entered characters.
 <small>A0018324</small>	Moves the input position one position to the right.
 <small>A0018326</small>	Moves the input position one position to the left.
 <small>A0032906</small>	Deletes one character immediately to the left of the input position.


### 8.3.4 Opening the context menu


Using the context menu, the user can call up the following menus quickly and directly from the operational display:

- Setup
- Conf. backup disp.
- Env. curve
- Keylock on



#### Opening and closing the context menu

The user is in the operational display.

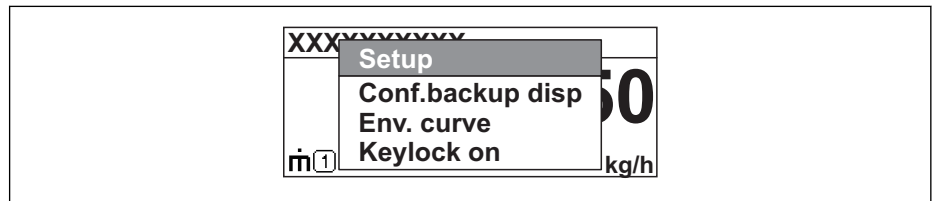

1. Press  for 2 s.
  - ↳ The context menu opens.



A003110-EN


2. Press  +  simultaneously.
  - ↳ The context menu is closed and the operational display appears.

#### Calling up the menu via the context menu

1. Open the context menu.
2. Press  to navigate to the desired menu.
3. Press  to confirm the selection.
  - ↳ The selected menu opens.

### 8.3.5 Envelope curve on the display and operating module

In order to assess the measuring signal, the envelope curve and - if a mapping has been recorded - the mapping curve can be displayed:

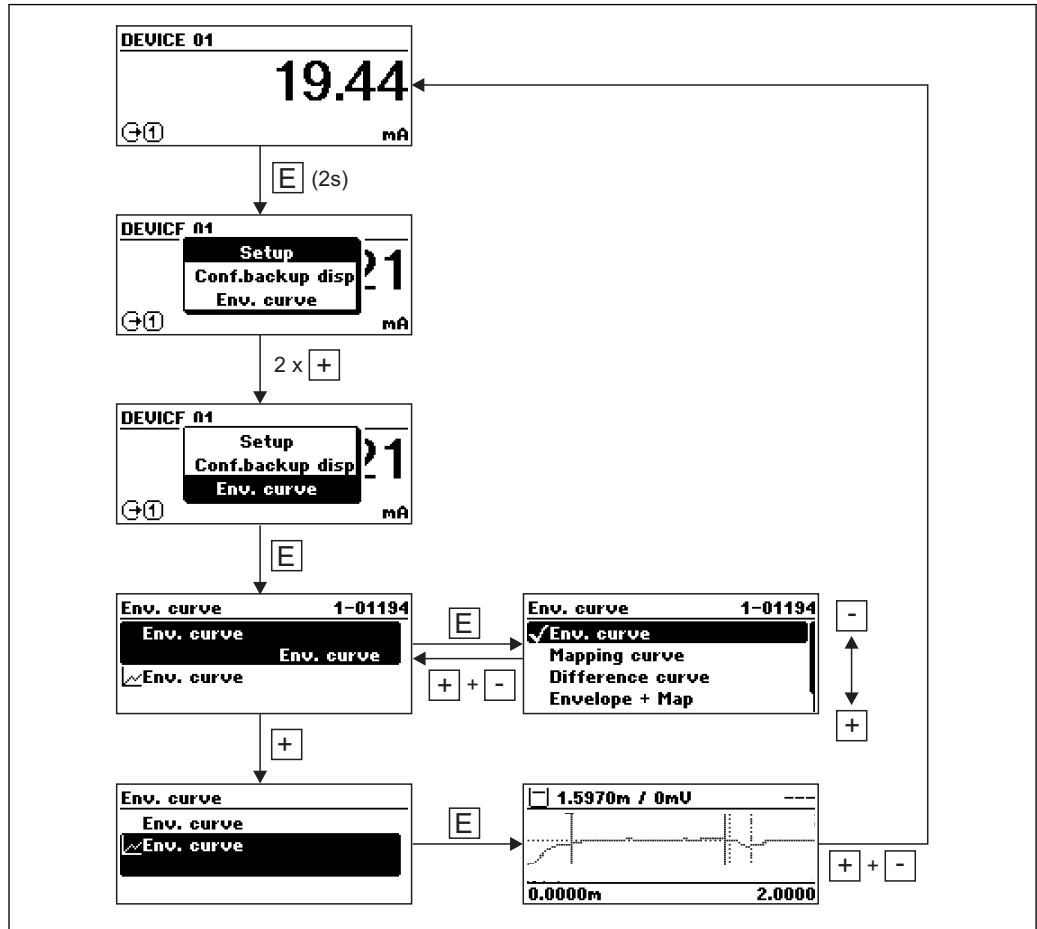

A0014277

## 9 System integration via HART protocol




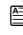
### 9.1 Overview of the Device Description files (DD)

Manufacturer ID	0x11
Device type	0x1128
HART specification	7.0
DD files	For information and files see: <ul style="list-style-type: none"> <li>▪ <a href="http://www.endress.com">www.endress.com</a></li> <li>▪ <a href="http://www.fieldcommgroup.org">www.fieldcommgroup.org</a></li> </ul>

### 9.2 Measured values via HART protocol

On delivery the following measuring values are assigned to the HART device variables:

Device variable	Measuring value
Primary variable (PV)	Level linearized
Secondary variable (SV)	Unfiltered distance
Tertiary variable (TV)	Absolute echo amplitude
Quaternary variable (QV)	Relative echo amplitude

-  The allocation of the device variables can be changed in the operating menu:  
Expert → Communication → Output
-  In a HART multidrop loop only one device may use the output current for signal transmission. For all other devices the following must be set:
  - **Current span** (→  159) = **Fixed current**
  - **Fixed current** (→  159) = **4 mA**

## 10 Commissioning via SmartBlue (app)

### 10.1 Requirements

#### Device requirements

Commissioning via SmartBlue is only possible if the device has a Bluetooth module.

#### System requirements SmartBlue


SmartBlue is available as download for Android devices from the Google Play Store and for iOS devices from the iTunes Store.

- iOS devices:
  - iPhone 4S or higher from iOS9.0; iPad2 or higher from iOS9.0; iPod Touch 5th generation or higher from iOS9.0
- Devices with Android:
  - from Android 4.4 KitKat and *Bluetooth*® 4.0

#### Initial password

The ID of the Bluetooth module serves as the initial password used to establish the first connection to the device. It can be found:

- on the information sheet which is supplied with the device. This serial number specific sheet is also stored in *W@M*.
- on the nameplate of the Bluetooth module.

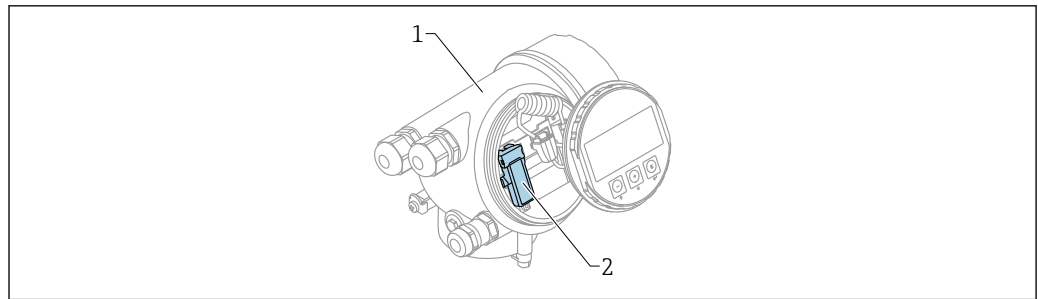

A0036790

30 Device with Bluetooth module

1 Electronics housing of the device


2 Nameplate of the Bluetooth module; the ID on this nameplate serves as initial password.

- i** All login data (including the password changed by the user) are not stored in the device but in the Bluetooth module. This must be taken into account when the module is removed from one device and inserted into a different device.

### 10.2 Commissioning

Download and install SmartBlue

1. To download the app, scan the QR code or enter "SmartBlue" in the search field

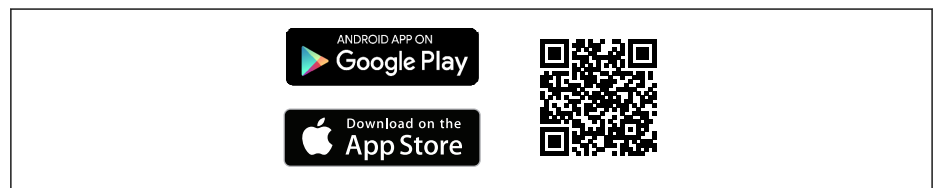

A0033202

31 Download link


2. Start SmartBlue



A0029747

32 SmartBlue pictogram

3. Select device from displayed livelist (available devices only)

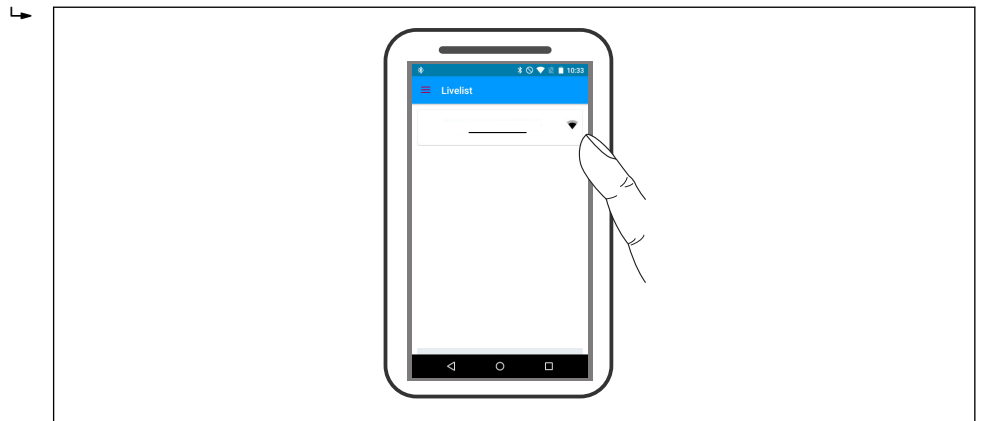


A0029502

33 Livelist

**i** Only one point-to-point connection can be established between **one** sensor and **one** smartphone or tablet.

4. Perform login

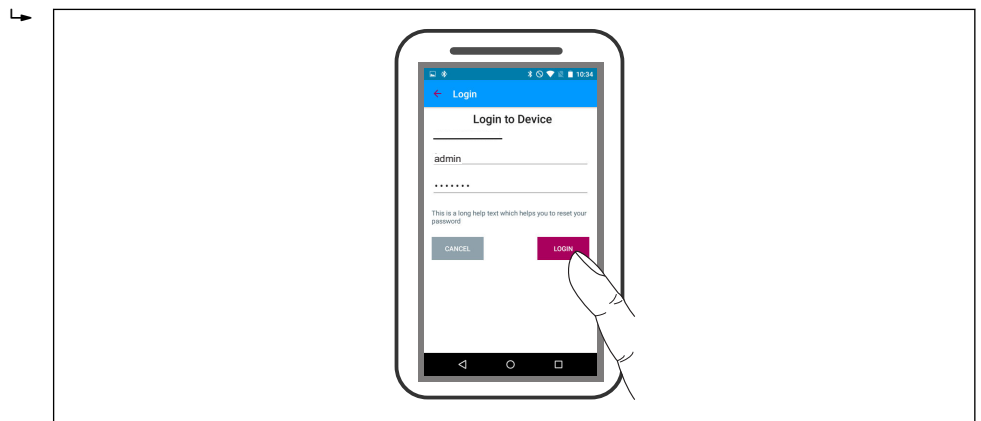


A0029503

34 Login

5. Enter user name -> admin
6. Enter initial password -> ID of the Bluetooth module
7. Change the password after logging in for the first time

8. By wiping from the side, additional information (e.g. main menu) can be dragged into the image

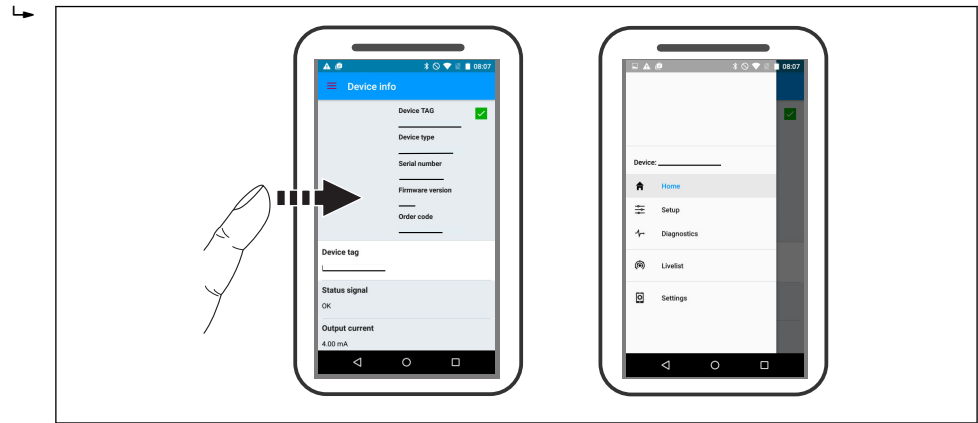

A0029504


35 Main menu

**i** Envelope curves can be displayed and recorded

**Additionally to the envelope curve, the following values are displayed:**

- D = Distance
- L = Level
- A = Absolute amplitude
- In the case of screenshots, the displayed section (zoom function) is saved
- In video sequences, always the whole area without zoom function is saved

It is also possible to send envelope curves (video sequences) using the relevant smartphone or tablet functions.

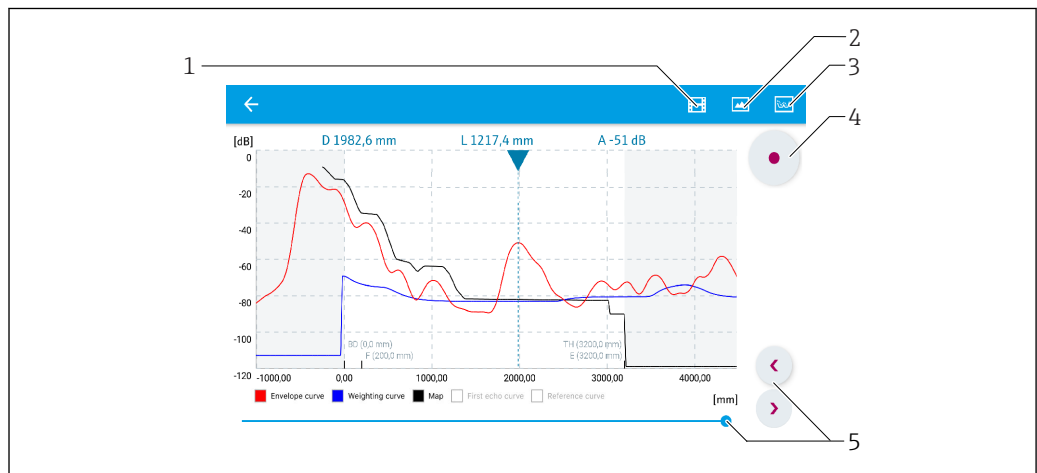


A0029486

36 Envelope curve display (example) in SmartBlue; Android view

- 1 Record video
- 2 Create screenshot
- 3 Navigation to mapping menu
- 4 Start / stop video recording
- 5 Move time on time axis



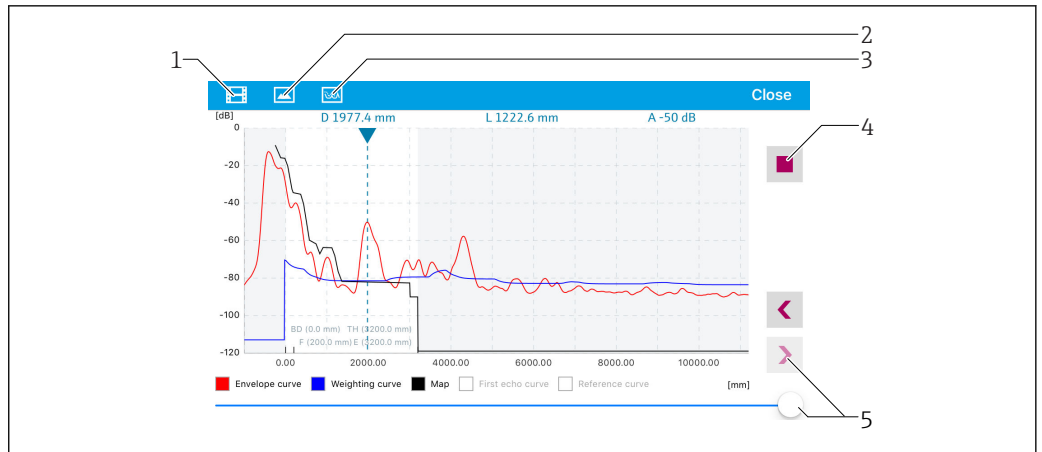


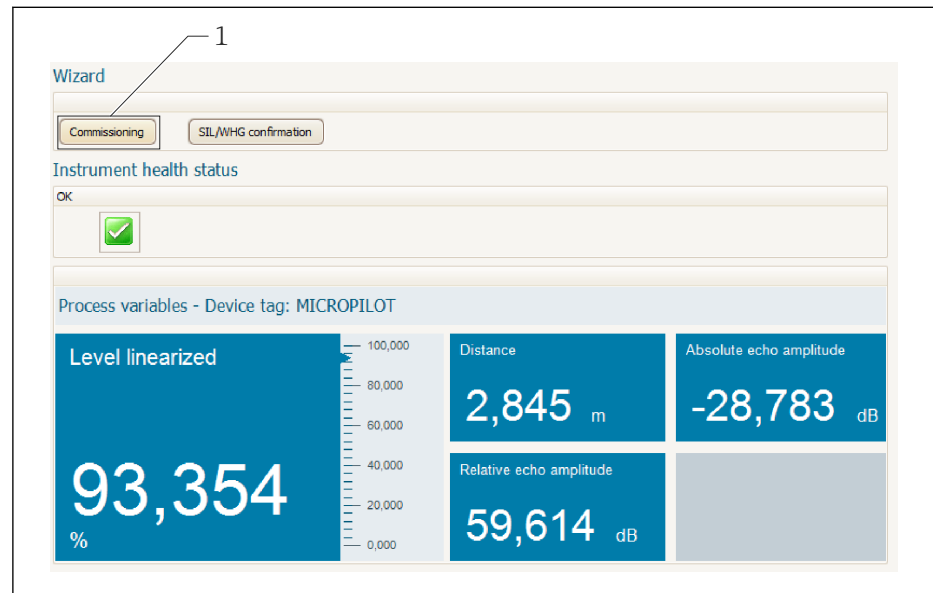
37 Envelope curve display (example) in SmartBlue; IoS view

- 1 Record video
- 2 Create screenshot
- 3 Navigation to mapping menu
- 4 Start / stop video recording
- 5 Move time on time axis

## 11 Commissioning via wizard


A wizard guiding the user through the initial setup is available in FieldCare and DeviceCare <sup>4)</sup>.

1. Connect the device to FieldCare or DeviceCare →  53.
2. Open the device in FieldCare or DeviceCare.
  - ↳ The dashboard (home page) of the device appears:



A0027720

1 "Commissioning" button calls up the wizard.

3. Click on "Commissioning" to call up the wizard.
  4. Enter or select the appropriate value for each parameter. These values are immediately written to the device.
  5. Click "Next" to switch to the next page.
  6. After finishing the last page, click "End of sequence" to close the wizard.
-  If the wizard is cancelled before all necessary parameters have been set, the device may be in an undefined state. A reset to the default settings is recommended in this case.

4) DeviceCare is available for download at [www.software-products.endress.com](http://www.software-products.endress.com). The download requires a registration in the Endress+Hauser software portal.

## 12 Commissioning via operating menu


### 12.1 Installation and function check

Make sure that all final checks have been completed before you start up your measuring point:

- Checklist "Post-installation check" → 35
- Checklist "Post-connection check" → 49

### 12.2 Setting the operating language


Factory setting: English or ordered local language

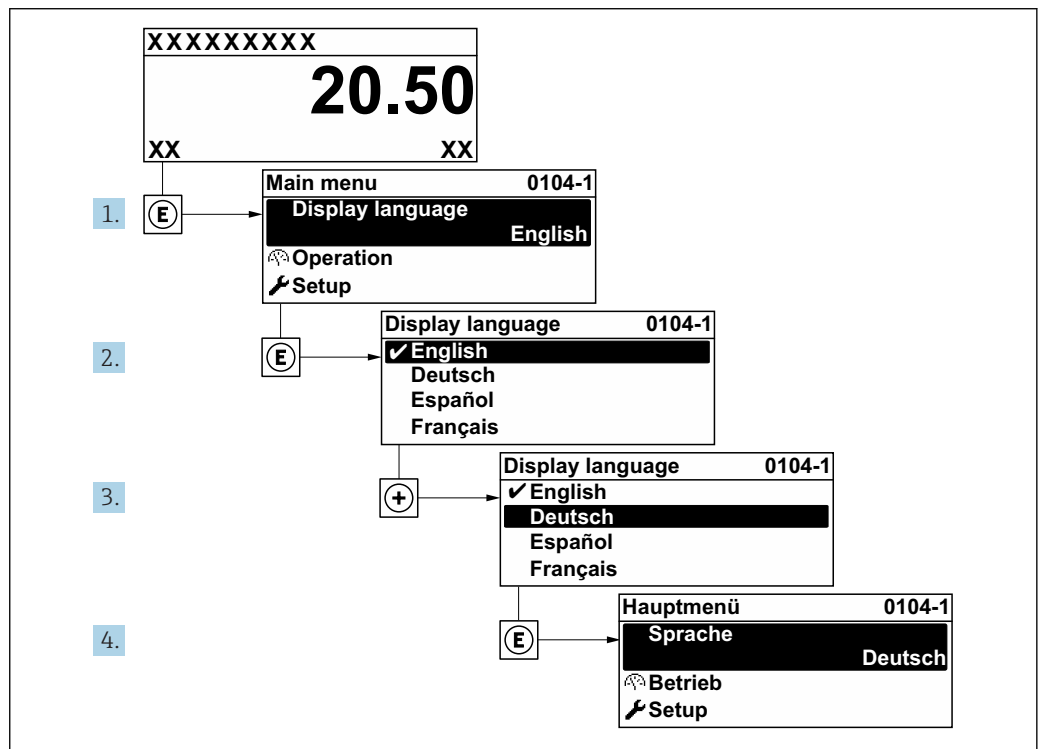

38 Using the example of the local display

A0029420

## 12.3 Configuration of a level measurement

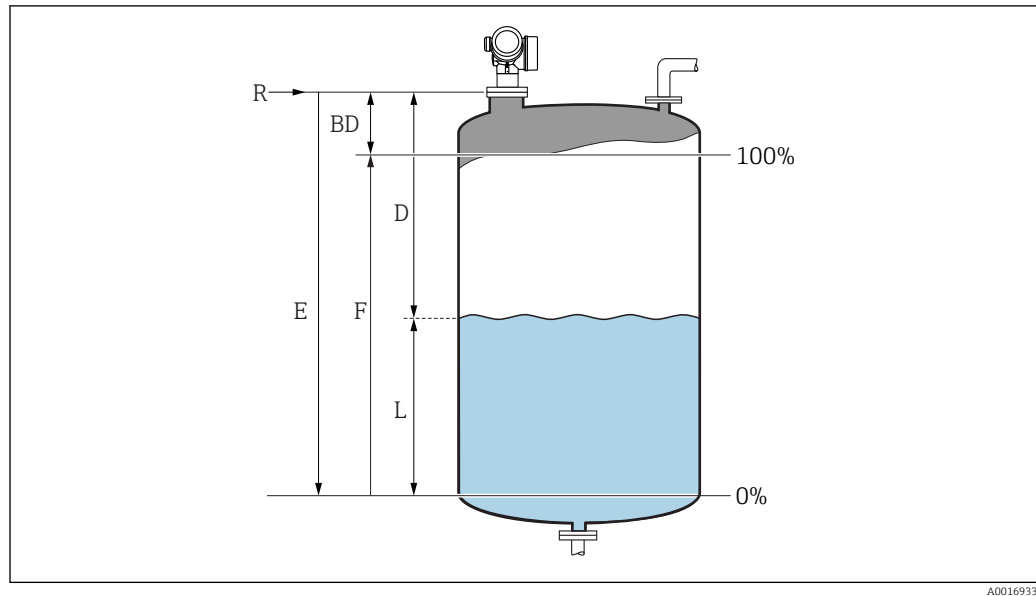



39 Configuration parameters for level measurements in liquids

- R Reference point of the measurement
- D Distance
- L Level
- E Empty calibration (= zero)
- F Full calibration (= span)

1. Navigate to: Setup → Device tag  
↳ Enter device tag.
2. Navigate to: Setup → Distance unit  
↳ Select distance unit.
3. Navigate to: Setup → Tank type  
↳ Select tank type.
4. For **Tank type** parameter = Bypass / pipe:  
Navigate to: Setup → Tube diameter  
↳ Enter the diameter of the stilling well or bypass.
5. Navigate to: Setup → Medium group  
↳ Specify medium group: (**Water based (DC >= 4)** or **Others**)
6. Navigate to: Setup → Empty calibration  
↳ Enter empty distance E (Distance from reference point R to the 0% level)<sup>5)</sup>.
7. Navigate to: Setup → Full calibration  
↳ Enter full distance F (Distance from the 0% to the 100% level).
8. Navigate to: Setup → Level  
↳ Indicates the measured level L.
9. Navigate to: Setup → Distance  
↳ Indicates the measured distance from the reference point R to the level L.
10. Navigate to: Setup → Signal quality  
↳ Indicates the quality of the evaluated level echo.

5) If, for example, the measuring range covers only an upper part of the tank ( $E \ll$  tank height), it is mandatory to enter the actual tank height into the "Setup → Advanced Setup → Level → Tank/silo height" parameter.

11. When operating via local display:  
Navigate to: Setup → Mapping → Confirm distance
    - ↳ Compare distance indicated on the display to real distance in order to start the recording of an interference echo map.
  12. When operating via operating tool:  
Navigate to: Setup → Confirm distance
    - ↳ Compare distance indicated on the display to real distance in order to start the recording of an interference echo map.
  13. Navigate to: Setup → Advanced setup → Level → Level unit
    - ↳ Select level unit: %, m, mm, ft, in (Factory setting: %)
-  The response time of the device is preset by the **Tank type** parameter (→  125). More detailed settings are possible in the **Advanced setup** submenu.

## 12.4 Recording the reference curve

After the configuration of the measurement it is recommended to record the current envelope curve as a reference curve. The reference curve can be used later on in the process for diagnostic purposes. To record the reference curve use the **Save reference curve** parameter.


### Navigation in the menu

Expert → Diagnostics → Envelope diagnostics → Save reference curve

### Meaning of the options

- No  
No action
- Yes  
The current envelope curve is saved as reference curve.

 In devices which have been delivered with software version 01.00.zz, this submenu is only visible for the "Service" user role.

 The reference curve can only be displayed in the envelope curve diagram of FieldCare after it has been loaded from the device into FieldCare. This is performed by the "Load Reference Curve" function in FieldCare.



 40 The "Load Reference Curve" function

## 12.5 Configuration of the on-site display

### 12.5.1 Factory settings of the on-site display

Parameter	Factory setting
Format display	1 value, max. size
Value 1 display	Level linearized
Value 2 display	None
Value 3 display	None
Value 4 display	None

### 12.5.2 Adjustment of the on-site display

The on-site display can be adjusted in the following submenu:  
Setup → Advanced setup → Display

## 12.6 Configuration of the current outputs

### 12.6.1 Factory setting of the current outputs

Current output	Allocated measuring value	4mA value	20mA value
1	Level linearized	0% or the corresponding linearized value	100% or the corresponding linearized value
2 <sup>1)</sup>	Distance	0	Empty calibration

1) for devices with 2 current outputs

### 12.6.2 Adjustment of the current outputs

The current outputs can be adjusted in the following menus:

#### Basic settings

Setup → Advanced setup → Current output 1 to 2

#### Advanced settings

Expert → Output 1 to 2 → Current output 1 to 2

See "Description of Device Parameters", GP01014F

## 12.7 Configuration management

After commissioning, you can save the current device configuration, copy it to another measuring point or restore the previous device configuration. You can do so using the **Configuration management** parameter and its options.

### Navigation path in the operating menu

Setup → Advanced setup → Configuration backup display → Configuration management

### Meaning of the options

- **Cancel**

No action is executed and the user exits the parameter.

- **Execute backup**

A backup copy of the current device configuration in the HistoROM (built-in in the device) is saved to the display module of the device. The backup copy comprises the transmitter and sensor data of the device.

- **Restore**

The last backup copy of the device configuration is copied from the display module to the HistoROM of the device. The backup copy comprises the transmitter and sensor data of the device.

- **Duplicate**

The transmitter configuration is duplicated to another device using the transmitter display module. The following parameters, which characterize the individual measuring point are **not** included in the transmitted configuration:


- HART date code
- HART short tag
- HART message
- HART descriptor
- HART address
- Device tag
- Medium type



- **Compare**

The device configuration saved in the display module is compared to the current device configuration of the HistoROM. The result of this comparison is displayed in the **Comparison result** parameter.

- **Clear backup data**

The backup copy of the device configuration is deleted from the display module of the device.

 While this action is in progress, the configuration cannot be edited via the local display and a message on the processing status appears on the display.



 If an existing backup is restored to a different device using the **Restore** option, it may occur that some device functionalities are no longer available. In some cases even a device reset →  177 will not restore the original status..

In order to transmit a configuration to a different device, the **Duplicate** option should always be used.



## 12.8 Protection of the settings against unauthorized changes

There are two ways to protect the settings against unauthorized changes:

- Via parameter settings (software locking) →  56
- Via locking switch (hardware locking) →  57

## 13 Diagnostics and troubleshooting

### 13.1 General trouble shooting

#### 13.1.1 General errors

Error	Possible cause	Remedial action
Device does not respond.	Supply voltage does not match the value indicated on the nameplate.	Connect the correct voltage.
	The polarity of the supply voltage is wrong.	Correct the polarity.
	The cables do not contact the terminals properly.	Ensure electrical contact between the cable and the terminal.
Values on the display invisible	Contrast setting is too weak or too strong.	<ul style="list-style-type: none"> <li>▪ Increase contrast by pressing <math>\oplus</math> and <math>\boxminus</math> simultaneously.</li> <li>▪ Decrease contrast by pressing <math>\ominus</math> and <math>\boxminus</math> simultaneously.</li> </ul>
	The plug of the display cable is not connected correctly.	Connect the plug correctly.
	Display is defective.	Replace display.
"Communication error" is indicated on the display when starting the device or connecting the display	Electromagnetic interference	Check grounding of the device.
	Broken display cable or display plug.	Replace display.
Duplicating of the parameters from one device to another via the display doesn't work. Only the "Save" and "Abort" options are available.	Display with backup is not recognized if no data backup has been performed at the device before.	Connect display (with the backup) and restart the device.
Output current <3.6 mA	Signal cable connection incorrect.	Check connection.
	Electronics is defective.	Replace electronics.
HART communication does not function.	Communication resistor missing or incorrectly installed.	Install the communication resistor(250 $\Omega$ ) correctly.
	Commubox connected incorrectly.	Connect Commubox correctly.
	Commubox not switched to HART mode.	Set the selection switch of the Commubox to the HART position.
CDI communication does not work.	Wrong setting of the COM port on the computer.	Check the setting of the COM port on the computer and change it if necessary.
Device measures incorrectly.	Parametrization error	Check and adjust parameterization.
Device not accessible via SmartBlue	No Bluetooth connection	Enable Bluetooth function on smartphone or tablet.
	Device already linked to another smartphone / tablet	Disconnect device from smartphone/tablet.
	Bluetooth module not connected.	Connect Bluetooth module (see SD02252F).
Login via SmartBlue not possible	Device is being put into operation for the first time	Enter initial password (ID of the Bluetooth module) and change.
Device cannot be operated via SmartBlue	Incorrect password entered	Enter correct password
	Password forgotten	Contact Endress+Hauser Service ( <a href="http://www.addresses.endress.com">www.addresses.endress.com</a> )

### 13.1.2 Error - SmartBlue operation

Error	Possible cause	Solution
Device is not visible in the live list	No Bluetooth connection	Enable Bluetooth® function on smartphone or tablet
		Bluetooth® function of sensor disabled, perform recovery sequence
Device is not visible in the live list	The device is already connected with another smartphone/tablet	Only <b>one</b> point-to-point connection is established between a sensor and a smartphone or tablet
Device is visible in the live list but cannot be accessed via SmartBlue	Android end device	Is the location function enabled for the app, was it approved the first time?
		GPS or positioning function must be activated for certain Android versions in conjunction with Bluetooth®
		Activate GPS - close the app fully and restart - enable the positioning function for the app
Device is visible in the live list but cannot be accessed via SmartBlue	Apple end device	Log in as standard Enter user name "admin" Enter initial password (ID of the Bluetooth module) paying attention to lower/upper case
Login via SmartBlue not possible	Device is being put into operation for the first time	Enter initial password (ID of the Bluetooth module) and change; paying attention to lower/upper case
Device cannot be operated via SmartBlue	Incorrect password entered	Enter correct password
Device cannot be operated via SmartBlue	Password forgotten	Contact the Endress+Hauser Service department ( <a href="http://www.addresses.endress.com">www.addresses.endress.com</a> )

### 13.1.3 Parametrization errors


Error	Possible cause	Remdy
Measured value incorrect	If measured distance (Setup → Distance) matches the real distance: Calibration error	<ul style="list-style-type: none"> <li>▪ Check and adjust <b>Empty calibration</b> parameter (→ ☰ 127) if necessary.</li> <li>▪ Check and adjust <b>Full calibration</b> parameter (→ ☰ 127) if necessary.</li> <li>▪ Check and adjust linearization if necessary (<b>Linearization</b> submenu (→ ☰ 144)).</li> </ul>
	For measurements in bypasses / stilling well: <ul style="list-style-type: none"> <li>▪ Wrong tank type</li> <li>▪ Wrong tube diameter</li> </ul>	<ul style="list-style-type: none"> <li>▪ Select <b>Tank type</b> (→ ☰ 125) = <b>Bypass / pipe</b>.</li> <li>▪ Enter correct diameter in <b>Tube diameter</b> parameter (→ ☰ 126).</li> </ul>
	Wrong level correction	Enter correct value in <b>Level correction</b> parameter (→ ☰ 141).
	If measured distance (Setup → Distance) does not match the real distance: Interference echo	Carry out tank mapping ( <b>Confirm distance</b> parameter (→ ☰ 129)).
No change of measured value on filling / emptying	Interference echo from installations, nozzle or build-up on the antenna.	<ul style="list-style-type: none"> <li>▪ Carry out tank mapping (<b>Confirm distance</b> parameter (→ ☰ 129)).</li> <li>▪ If necessary, clean antenna</li> <li>▪ If necessary, selet better mopunting position</li> </ul>

Error	Possible cause	Remdy
If the surface is not calm (e.g. filling, emptying, agitator running), the measured value jumps sporadically to a higher level	Signal is weakened by the rough surface - the interference echoes are sometimes stronger.	<ul style="list-style-type: none"> <li>▪ Carry out tank mapping (<b>Confirm distance</b> parameter (→ 129)).</li> <li>▪ Select <b>Tank type</b> (→ 125) = <b>Process vessel with agitator</b>.</li> <li>▪ Increase integration time (Expert → Sensor → Distance → Integration time)</li> <li>▪ Optimize orientation of the antenna</li> <li>▪ If necessary, select a better mounting position and/or larger antenna.</li> </ul>
During filling/emptying the measured value jumps downwards	Multiple echoes	<ul style="list-style-type: none"> <li>▪ Check <b>Tank type</b> parameter (→ 125).</li> <li>▪ If possible, do not select central installation position.</li> <li>▪ If appropriate, use a stilling well.</li> </ul>
Error message F941 or S941 "Echo lost"	Level echo is too weak.	<ul style="list-style-type: none"> <li>▪ Check <b>Medium group</b> parameter (→ 126).</li> <li>▪ If necessary, select a more detailed setting in <b>Medium property</b> parameter (→ 137).</li> <li>▪ Optimize alignment of antenna</li> <li>▪ If necessary, select a better installation position and/or larger antenna.</li> </ul>
	Level echo suppressed.	Delete mapping and record it again.
Device displays a level when the tank is empty.	Interference echo	Carry out mapping over entire measuring range when the tank is empty ( <b>Confirm distance</b> parameter (→ 129)).
Wrong slope of the level in the entire measuring range	Wrong tank type selected.	Set <b>Tank type</b> parameter (→ 125) correctly.

## 13.2 Diagnostic information on local display

### 13.2.1 Diagnostic message

Faults detected by the self-monitoring system of the measuring device are displayed as a diagnostic message in alternation with the measured value display.

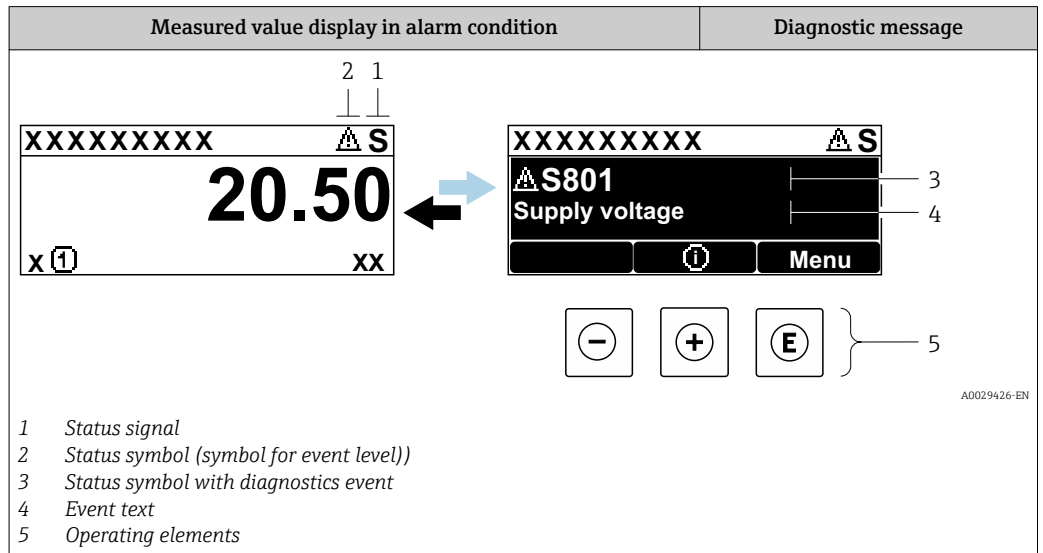

#### Status signals


<b>F</b> <small>A0032902</small>	<b>"Failure (F)" option</b> A device error is present. The measured value is no longer valid.
<b>C</b> <small>A0032903</small>	<b>"Function check (C)" option</b> The device is in service mode (e.g. during a simulation).
<b>S</b> <small>A0032904</small>	<b>"Out of specification (S)" option</b> The device is operated: <ul style="list-style-type: none"> <li>▪ Outside of its technical specifications (e.g. during startup or a cleaning)</li> <li>▪ Outside of the configuration carried out by the user (e.g. level outside configured span)</li> </ul>
<b>M</b> <small>A0032905</small>	<b>"Maintenance required (M)" option</b> Maintenance is required. The measured value is still valid.

#### Status symbol (symbol for event level)


⊗	<b>"Alarm" status</b> The measurement is interrupted. The signal outputs take on the defined alarm condition. A diagnostic message is generated.
⚠	<b>"Warning" status</b> The device continues to measure. A diagnostic message is generated.

### Diagnostics event and event text

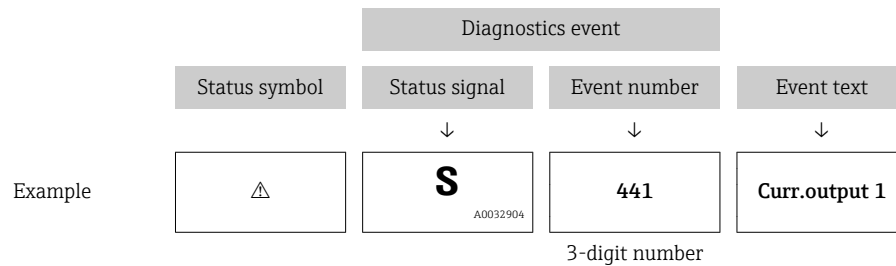

The fault can be identified using the diagnostics event. The event text helps you by providing information about the fault. In addition, the corresponding symbol is displayed before the diagnostics event.




If two or more diagnostic messages are pending simultaneously, only the message with the highest priority is shown. Additional pending diagnostic messages can be shown in the **Diagnostic list** submenu.

-  Past diagnostic messages that are no longer pending are shown as follows:
- On the local display:  
in the **Event logbook** submenu
  - In FieldCare:  
via the "Event List /HistoROM" function.

### Operating elements

Operating functions in menu, submenu	
	<b>Plus key</b> Opens the message about the remedial measures.
	<b>Enter key</b> Opens the operating menu.

### 13.2.2 Calling up remedial measures

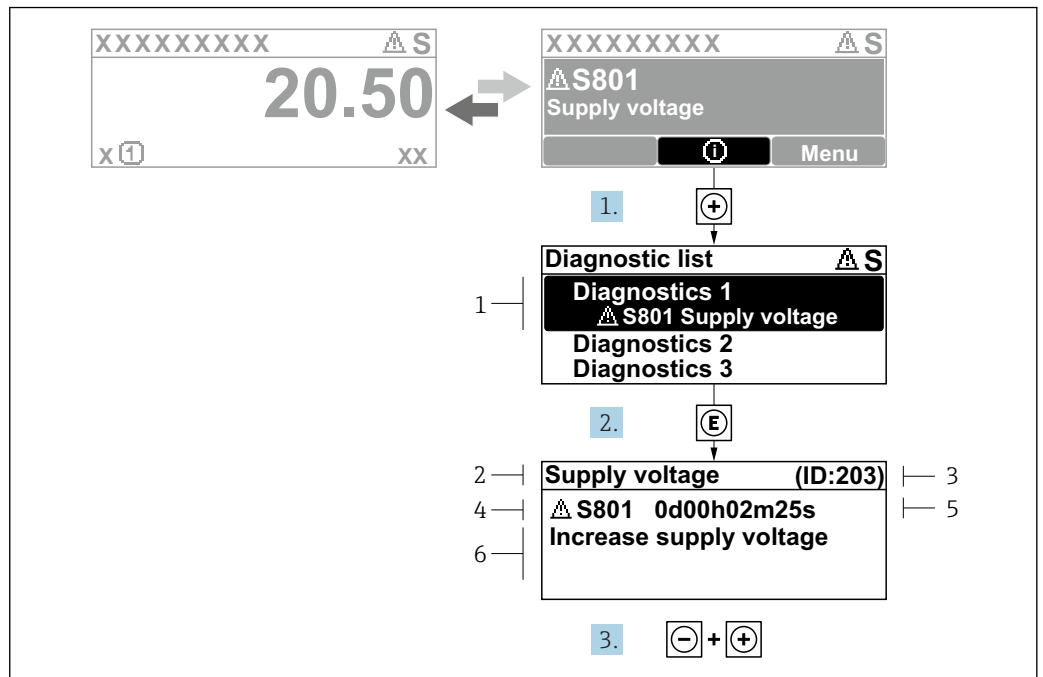

41 Message for remedial measures

- 1 Diagnostic information
- 2 Short text
- 3 Service ID
- 4 Diagnostic behavior with diagnostic code
- 5 Operation time of occurrence
- 6 Remedial measures

The user is in the diagnostic message.

1. Press **Ⓢ** (**Ⓢ**-Symbol).
  - ↳ **Diagnostic list** submenu opens.
2. Select the desired diagnostic event with **+** or **-** and press **E**.
  - ↳ The message for the remedial measures for the selected diagnostic event opens.
3. Press **-** + **+** simultaneously.
  - ↳ The message for the remedial measures closes.

The user is in the **Diagnostics** menu at an entry for a diagnostics event, e.g. in **Diagnostic list** submenu or in **Previous diagnostics**.

1. Press **E**.
  - ↳ The message for the remedial measures for the selected diagnostic event opens.
2. Press **-** + **+** simultaneously.
  - ↳ The message for the remedial measures closes.


### 13.3 Diagnostic event in the operating tool

If a diagnostic event is present in the device, the status signal appears in the top left status in the operating tool along with the corresponding symbol for event level in accordance with NAMUR NE 107:

- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)


#### A: Via the operating menu

1. Navigate to the **Diagnostics** menu.
  - ↳ In the **Actual diagnostics** parameter, the diagnostic event is shown with event text.
2. On the right in the display range, hover the cursor over the **Actual diagnostics** parameter.

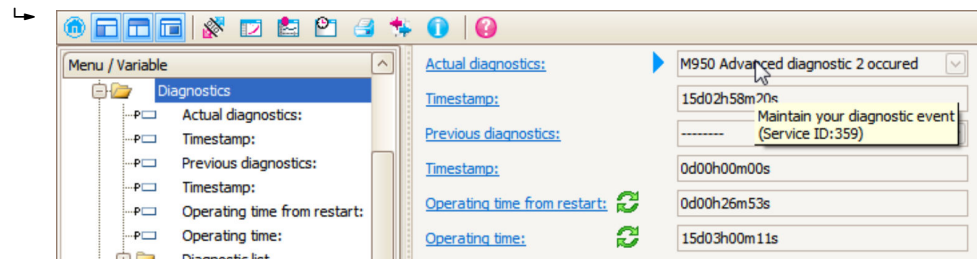


A tool tip with remedial measures for the diagnostic event appears.

#### B: Via the "Create documentation" function

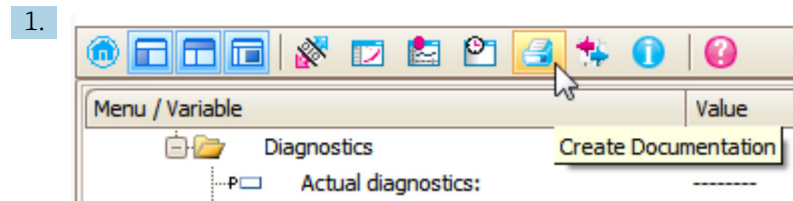

Select the "Create documentation" function.

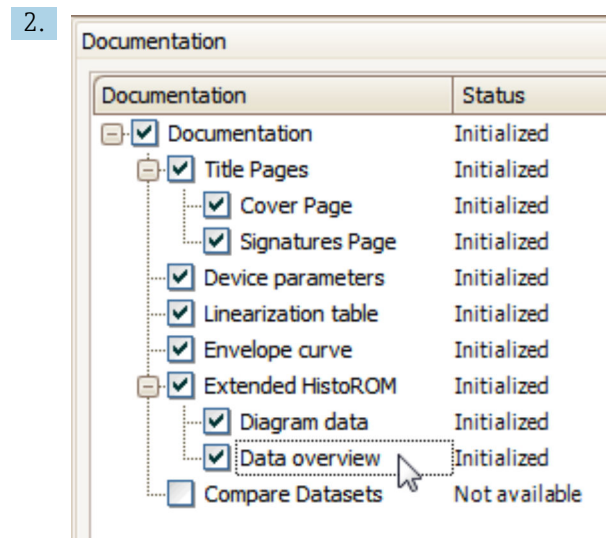


Make sure "Data overview" is marked.



3. Click "Save as ..." and save a PDF of the protocol.
  - ↳ The protocol contains the diagnostic messages and remedy information.

### C: Via the "Eventlist / Extended HistoROM" function

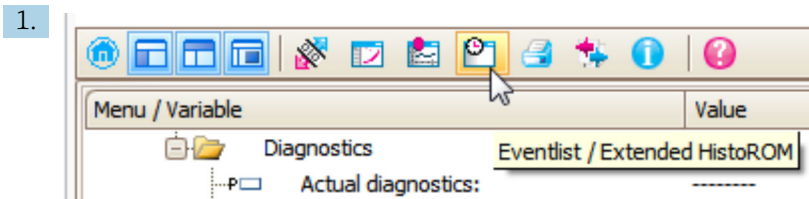

Select the "Eventlist / Extended HistoROM" function.



Select the "Load Eventlist" function.

- ↳ The list of events, including remedy information, is shown in the "Data overview" window.

## 13.4 Diagnostic list

In the **Diagnostic list** submenu submenu, up to 5 currently pending diagnostic messages can be displayed. If more than 5 messages are pending, the messages with the highest priority are shown on the display.

### Navigation path

Diagnostics → Diagnostic list

### Calling up and closing the remedial measures

1. Press  $\square$ .
  - ↳ The message for the remedial measures for the selected diagnostic event opens.
2. Press  $\square$  +  $\boxplus$  simultaneously.
  - ↳ The message about the remedial measures closes.

## 13.5 Overview of diagnostic events

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
<b>Diagnostic of electronic</b>				
242	Software incompatible	1. Check software 2. Flash or change main electronics module	F	Alarm
252	Modules incompatible	1. Check if correct electronic modul is plugged 2. Replace electronic module	F	Alarm
261	Electronic modules	1. Restart device 2. Check electronic modules 3. Change I/O Modul or main electronics	F	Alarm
262	Module connection	1. Check module connections 2. Change electronic modules	F	Alarm
270	Main electronic failure	Change main electronic module	F	Alarm
271	Main electronic failure	1. Restart device 2. Change main electronic module	F	Alarm
272	Main electronic failure	1. Restart device 2. Contact service	F	Alarm
273	Main electronic failure	1. Emergency operation via display 2. Change main electronics	F	Alarm
275	I/O module defective	Change I/O module	F	Alarm
276	I/O module faulty	1. Restart device 2. Change I/O module	F	Alarm
276	I/O module faulty		F	Alarm
282	Data storage	1. Restart device 2. Contact service	F	Alarm
283	Memory content	1. Transfer data or reset device 2. Contact service	F	Alarm
311	Electronic failure	Maintenance required! 1. Do not perform reset 2. Contact service	M	Warning
<b>Diagnostic of configuration</b>				
410	Data transfer	1. Check connection 2. Retry data transfer	F	Alarm
411	Up-/download active	Up-/download active, please wait	C	Warning
412	Processing download	Download active, please wait	C	Warning
431	Trim 1 to 2	Carry out trim	C	Warning
435	Linearization	Check linearization table	F	Alarm
437	Configuration incompatible	1. Restart device 2. Contact service	F	Alarm
438	Dataset	1. Check data set file 2. Check device configuration 3. Up- and download new configuration	M	Warning
441	Current output 1 to 2	1. Check process 2. Check current output settings	S	Warning
484	Failure mode simulation	Deactivate simulation	C	Alarm

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
485	Simulation measured value	Deactivate simulation	C	Warning
491	Current output 1 to 2 simulation	Deactivate simulation	C	Warning
494	Switch output simulation	Deactivate simulation switch output	C	Warning
495	Diagnostic event simulation	Deactivate simulation	C	Warning
585	Simulation distance	Deactivate simulation	C	Warning
586	Record map	Recording of mapping please wait	C	Warning
<b>Diagnostic of process</b>				
801	Energy too low	Increase supply voltage	S	Warning
803	Current loop	1. Check wiring 2. Change I/O module	F	Alarm
825	Operating temperature	1. Check ambient temperature 2. Check process temperature	S	Warning
825	Operating temperature		F	Alarm
921	Change of reference	1. Check reference configuration 2. Check pressure 3. Check sensor	S	Warning
941	Echo lost	Check parameter 'DC value'	F	Alarm <sup>1)</sup>
942	In safety distance	1. Check level 2. Check safety distance 3. Reset self holding	S	Alarm <sup>1)</sup>
943	In blocking distance	Reduced accuracy Check level	S	Warning
950	Advanced diagnostic 1 to 2 occurred	Maintain your diagnostic event	M	Warning <sup>1)</sup>

1) Diagnostic behavior can be changed.

## 13.6 Event logbook

### 13.6.1 Event history

A chronological overview of the event messages that have occurred is provided in the **Event list** submenu <sup>6)</sup>.

#### Navigation path

Diagnostics → Event logbook → Event list

A maximum of 100 event messages can be displayed in chronological order.

Die Ereignishistorie umfasst Einträge zu:


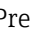

- Diagnostic events
- Information events

6) This submenu is only available for operation via local display. In the case of operation via FieldCare, the event list can be displayed with the "Event List / HistoROM" functionality of FieldCare.

In addition to the operation time of its occurrence, each event is also assigned a symbol that indicates whether the event has occurred or is ended:

- Diagnostic event
  - ☺: Event has occurred
  - ☹: Event has ended
- Information event
  - ☺: Event has occurred

### Calling up and closing the remedial measures

1. Press 
  - ↳ The message for the remedial measures for the selected diagnostic event opens.
2. Press  +  simultaneously.
  - ↳ The message about the remedial measures closes.

### 13.6.2 Filtering the event logbook

Using the **Filter options** parameter, you can define which category of event messages is displayed in the **Event list** submenu.

#### Navigation path

Diagnostics → Event logbook → Filter options

#### Filter categories

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information

### 13.6.3 Overview of information events


Info number	Info name
I1000	----- (Device ok)
I1089	Power on
I1090	Configuration reset
I1091	Configuration changed
I1092	HistoROM backup deleted
I1110	Write protection switch changed
I1137	Electronic changed
I1151	History reset
I1154	Reset terminal voltage min/max
I1155	Reset electronic temperature
I1156	Memory error trend
I1157	Memory error event list
I1184	Display connected
I1185	Display backup done
I1186	Restore via display done
I1187	Settings downloaded with display
I1188	Display data cleared

Info number	Info name
I1189	Backup compared
I1256	Display: access status changed
I1264	Safety sequence aborted
I1335	Firmware changed
I1397	Fieldbus: access status changed
I1398	CDI: access status changed
I1512	Download started
I1513	Download finished
I1514	Upload started
I1515	Upload finished
I1554	Safety sequence started
I1555	Safety sequence confirmed
I1556	Safety mode off

### 13.7 Firmware history

Date	Firmware version	Modifications	Documentation (FMR50, HART)		
			Operating Instructions	Description of Parameters	Technical Information
12.2012	01.00.zz	Original software	BA01045F/00/EN/01.12	GP01014F/00/EN/01.12	TI01039F/00/EN/01.12
02.2015	01.01.zz	<ul style="list-style-type: none"> <li>▪ additional languages</li> <li>▪ HistoROM functionality enhanced</li> <li>▪ Improvements and bugfixes</li> </ul>	BA01045F/00/ENE/03.14	GP01014F/00/EN/04.14	TI01039F/00/EN/05.14
04.2016	01.02.zz	Update to HART 7	BA01045F/00/EN/04.16 BA01045F/00/EN/05.16 <sup>1)</sup> BA01045F/00/EN/07.18 <sup>2)</sup>	GP01014F/00/EN/05.16	TI01039F/00/EN/06.16 TI01039F/00/EN/07.16 <sup>1)</sup> TI01039F/00/EN/09.18 <sup>2)</sup>

- 1) Contains information on the Heartbeat wizards which are available in the latest DTM version for DeviceCare and FieldCare.
- 2) Contains information on the Bluetooth interface.

 The firmware version can explicitly be ordered via the product structure. In this way it is possible to ensure compatibility of the firmware version with an existing or planned system integration.

## **14 Maintenance**

The measuring device requires no special maintenance.

### **14.1 Exterior cleaning**

When exterior-cleaning the device, always use cleaning agents that do not attack the surface of the housing and the seals.

### **14.2 Replacing seals**

The process seals of the sensors (at the process connection) must be replaced periodically, particularly if molded seals (aseptic construction) are used. The period between changes depends on the frequency of cleaning cycles and on the temperature of the measured substance and the cleaning temperature.

## 15 Repairs

### 15.1 General information on repairs

#### 15.1.1 Repair concept

The Endress+Hauser repair concept assumes that the devices have a modular design and that repairs can be done by the Endress+Hauser service or specially trained customers.

Spare parts are contained in suitable kits. They contain the related replacement instructions.

For more information on service and spare parts, contact the Service Department at Endress+Hauser.

#### 15.1.2 Repairs to Ex-approved devices

When carrying out repairs to Ex-approved devices, please note the following:


- Repairs to Ex-approved devices may only be carried out by trained personnel or by the Endress+Hauser Service.
- Comply with the prevailing standards, national Ex-area regulations, safety instructions (XA) and certificates.
- Only use original spare parts from Endress+Hauser.
- When ordering a spare part, please note the device designation on the nameplate. Only replace parts with identical parts.
- Carry out repairs according to the instructions. On completion of repairs, carry out the specified routine test on the device.
- Only Endress+Hauser Service may convert a certified device into a different certified variant.
- Document all repair work and conversions.

#### 15.1.3 Replacement of an electronics module

If an electronics module has been replaced, it is not necessary to perform a new basic setup as the calibration parameters are stored in the HistoROM which is located in the housing. However, after exchanging the main electronics module it may be necessary to record a new mapping (interference echo suppression).

#### 15.1.4 Replacement of a device


After a complete device or electronic module has been replaced, the parameters can be downloaded into the instrument again in one of the following ways:

- Via the display module  
Condition: The configuration of the old device has been saved in the display module  
→  174.
- Via FieldCare  
Condition: The configuration of the old device has been saved to the computer via FieldCare.

You can continue to measure without carrying out a new setup. Only a linearization and a tank map (interference echo suppression) have to be recorded again.

## 15.2 Spare parts

- A few interchangeable measuring device components are identified by a spare part nameplate. This contains information about the spare part.
- The connection compartment cover of the device contains a spare part nameplate that includes the following information:
  - A list of the most important spare parts for the measuring device, including their ordering information.
  - The URL for the *W@M Device Viewer* ([www.endress.com/deviceviewer](http://www.endress.com/deviceviewer)): There, all spare parts for the measuring device are listed, including the order code, and can be ordered. If available, the corresponding Installation Instructions can also be downloaded there.

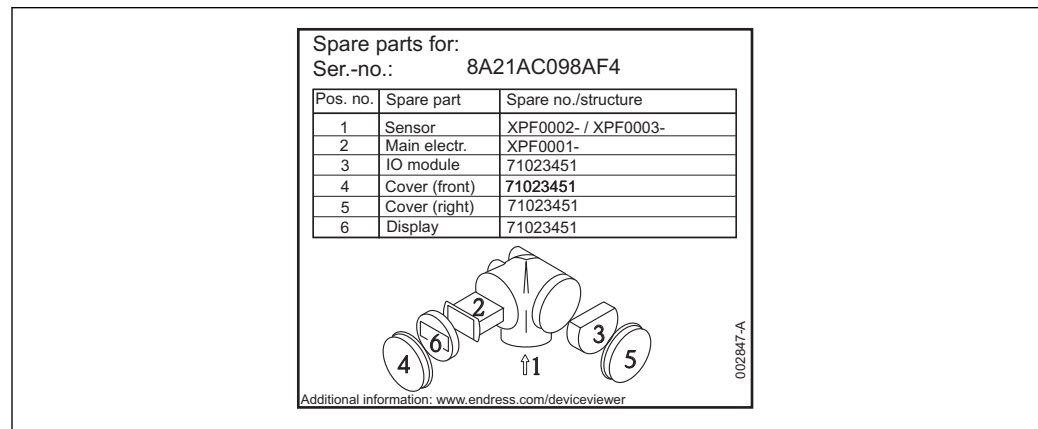

42 Example for spare part nameplate in connection compartment cover

- i** Measuring device serial number:
  - Is located on the device and spare part nameplate.
  - Can be read out via the "Serial number" parameter in the "Device information" submenu.

## 15.3 Return

The measuring device must be returned if it is need of repair or a factory calibration, or if the wrong measuring device has been delivered or ordered. Legal specifications require Endress+Hauser, as an ISO-certified company, to follow certain procedures when handling products that are in contact with the medium.

To ensure safe, swift and professional device returns, please refer to the procedure and conditions for returning devices provided on the Endress+Hauser website at <http://www.endress.com/support/return-material>

## 15.4 Disposal

Observe the following notes during disposal:



- Observe valid federal/national regulations.
- Ensure proper separation and reuse of the device components.



## 16 Accessories

### 16.1 Device-specific accessories



#### 16.1.1 Weather protection cover

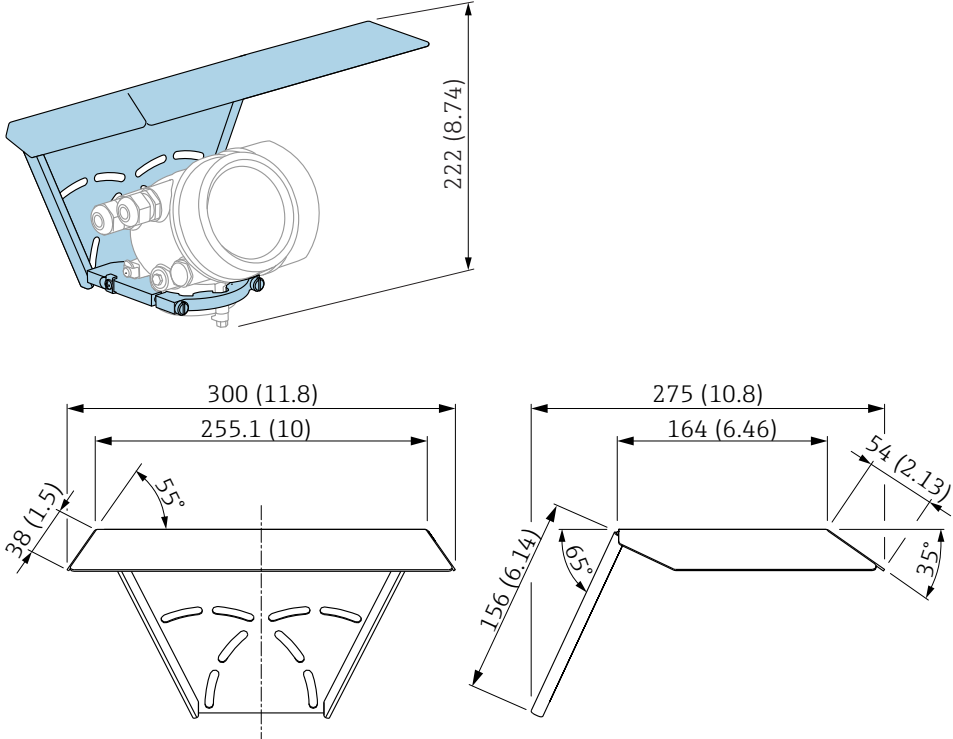Accessory	Description
Weather protection cover	 <p data-bbox="416 1301 925 1330">43 Weather protection cover; Dimensions: mm (in)</p> <p data-bbox="416 1357 1493 1435">  The weather protection cover can be ordered together with the device (product structure, feature 620 "Accessory Enclosed", option PB "Weather Protection Cover"). Alternatively, it can be separately ordered as an accessory; order code 71162242.         </p>

#### 16.1.2 Mounting nut G1-1/2

Accessory	Description
Mounting nut G1-1/2	Drawing in preparation For FMR50 with with 40mm/1-1/2" horn antenna and G1-1/2" thread Material: PC Order code: 52014146

### 16.1.3 Variable flange seal for FMR50/FMR56

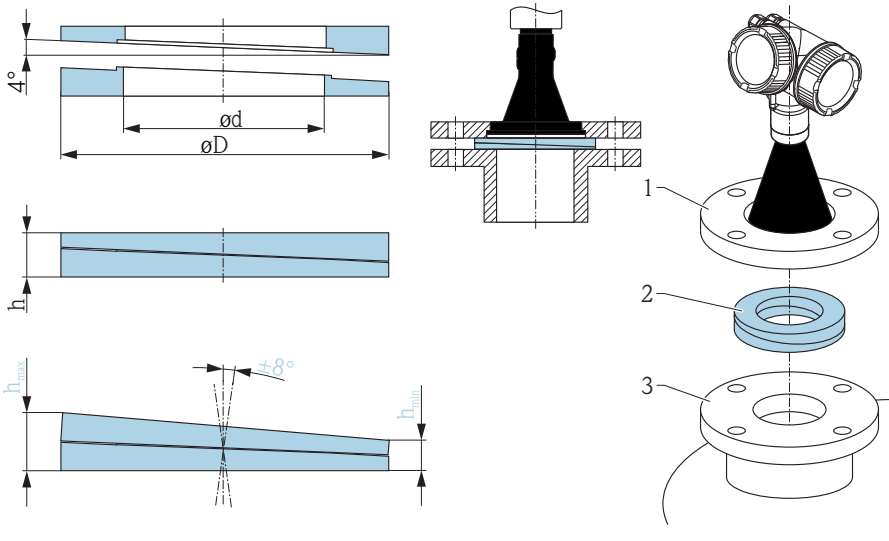Accessory	Description		
Variable flange seal for FMR50/FMR56	 <p data-bbox="327 884 550 963">                         1 UNI slip-on flange                          2 Variable flange seal                          3 Nozzle                     </p> <p data-bbox="327 996 1380 1041">  The material and process conditions of the adjustable flange seal must fit the process properties (temperature, pressure, resistance).                     </p>		
<b>Technical data: DN/JIS version</b>			
Order code	71074263	71074264	71074265
Compatible with	DN80 PN10/40	DN100 PN10/16	<ul style="list-style-type: none"> <li>■ DN150 PN10/16</li> <li>■ JIS 10K 150A</li> </ul>
Length of screws	100 mm (3.9 in)	100 mm (3.9 in)	110 mm (4.3 in)
Size of screws	M14	M14	M18
Material	EPDM		
Process pressure	-0.1 to 0.1 bar (-1.45 to 1.45 psi)		
Process temperature	-40 to +80 °C (-40 to +176 °F)		
D	142 mm (5.59 in)	162 mm (6.38 in)	218 mm (8.58 in)
d	89 mm (3.5 in)	115 mm (4.53 in)	169 mm (6.65 in)
h	22 mm (0.87 in)	23.5 mm (0.93 in)	26.5 mm (1.04 in)
h <sub>min</sub>	14 mm (0.55 in)	14 mm (0.55 in)	14 mm (0.55 in)
h <sub>max</sub>	30 mm (1.18 in)	33 mm (1.3 in)	39 mm (1.45 in)



Accessory	Description			
	<b>Technical data: ASME/JIS version</b>			
Order code	71249070	71249072	71249073	
Compatible with	<ul style="list-style-type: none"> <li>■ ASME 3" 150lbs</li> <li>■ JIS 80A 10K</li> </ul>	ASME 4" 150lbs	ASME 6" 150lbs	
Length of screws	100 mm (3.9 in)	100 mm (3.9 in)	110 mm (4.3 in)	
Recommended screw size	M14	M14	M18	
Material	EPDM			
Process pressure	-0.1 to 0.1 bar (-1.45 to 1.45 psi)			
Process temperature	-40 to +80 °C (-40 to +176 °F)			
D	133 mm (5.2 in)	171 mm (6.7 in)	219 mm (8.6 in)	
d	89 mm (3.5 in)	115 mm (4.53 in)	168 mm (6.6 in)	
h	22 mm (0.87 in)	23.5 mm (0.93 in)	26.5 mm (1.04 in)	
h <sub>min</sub>	14 mm (0.55 in)	14 mm (0.55 in)	14 mm (0.55 in)	
h <sub>max</sub>	30 mm (1.18 in)	33 mm (1.3 in)	39 mm (1.45 in)	

### 16.1.4 Mounting bracket for wall or ceiling mounting of FMR50/FMR56

Accessory	Description
Mounting bracket for wall or ceiling mounting of FMR50/FMR56	<div style="display: flex; align-items: flex-start;"> <div style="margin-right: 20px;"> <p><b>A</b></p> <p><b>B</b></p> </div> <div style="margin-top: 20px;"> <p>☑ 44 Mounting bracket for FMR50/FMR56 with horn antenna</p> <p>A Mounting at ceiling B Mounting at wall</p> <ul style="list-style-type: none"> <li>■ <b>Material:</b> <ul style="list-style-type: none"> <li>- Mounting bracket: 304 (1.4301)</li> <li>- Screws: A2</li> <li>- Nordlock washer: A4</li> </ul> </li> <li>■ <b>Order code:</b> 71162776</li> </ul> </div> </div>

A0017746


### 16.1.5 Installation bracket for FMR50

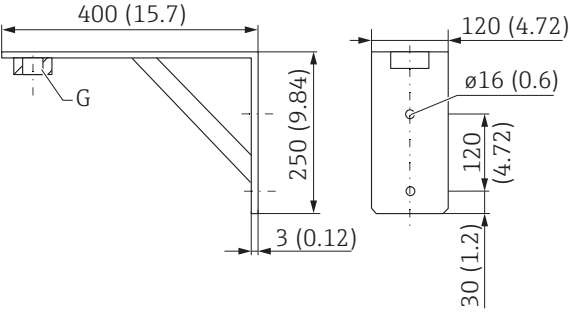Accessory	Description
Installation bracket for FMR50	 <p data-bbox="1380 645 1436 660">A0019346</p> <ul style="list-style-type: none"> <li>▪ <b>Material:</b> 316Ti (1.4571)</li> <li>▪ <b>Suited for antenna version</b> <sup>1)</sup>: BM: Horn 40mm (1½"), PVDF encapsulated, -40...130°C (-40...266°F)</li> <li>▪ <b>Suited for process connection</b> <sup>2)</sup>: <ul style="list-style-type: none"> <li>- GGF: Thread ISO228 G1½, PVDF</li> <li>- RGF: Thread ANSI MNPT1½, PVDF</li> </ul> </li> <li>▪ <b>Order code:</b> 942669-0000</li> </ul> <p> The mounting bracket has no conductive connection to the transmitter housing. Danger of electrostatic charging. Connect the mounting bracket to the local potential equalization system.</p>

1) Feature 070 of the product structure

2) Feature 100 of the product structure

### 16.1.6 Remote display FHX50

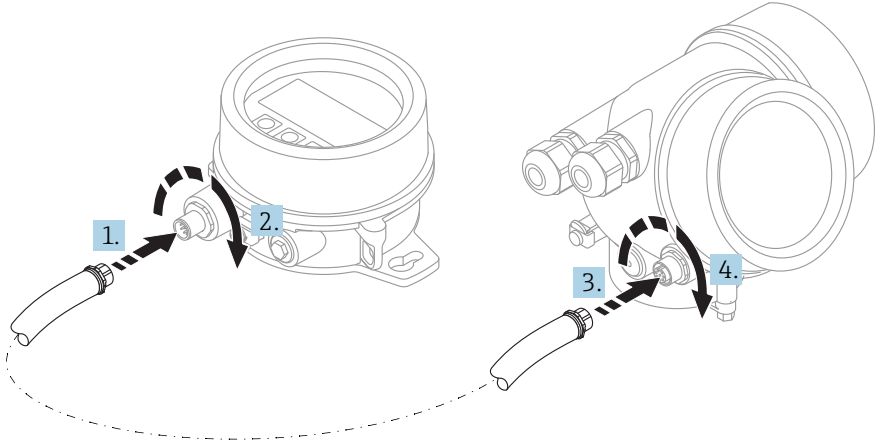Accessories	Description
Remote display FHX50	<div style="text-align: center;">  </div> <p style="text-align: right; font-size: small;">A0019128</p> <ul style="list-style-type: none"> <li>▪ Material:             <ul style="list-style-type: none"> <li>- Plastic PBT</li> <li>- 316L/1.4404</li> <li>- Aluminum</li> </ul> </li> <li>▪ Degree of protection: IP68 / NEMA 6P and IP66 / NEMA 4x</li> <li>▪ Suitable for display modules:             <ul style="list-style-type: none"> <li>- SD02 (push buttons)</li> <li>- SD03 (touch control)</li> </ul> </li> <li>▪ Connecting cable:             <ul style="list-style-type: none"> <li>- Cable supplied with device up to 30 m (98 ft)</li> <li>- Standard cable supplied by customer up to 60 m (196 ft)</li> </ul> </li> <li>▪ Ambient temperature range: -40 to 80 °C (-40 to 176 °F)</li> <li>▪ Ambient temperature range (option): -50 to 80 °C (-58 to 176 °F) <sup>1)</sup></li> </ul> <p> <span style="border: 1px solid black; padding: 2px;">i</span> ▪ If the remote display should be used, order the device version "Prepared for display FHX50" (feature 030, version L, M or N). For the FHX50, you must select option A: "Prepared for display FHX50" under feature 050 "Measuring device version".         </p> <p> <span style="border: 1px solid black; padding: 2px;">i</span> ▪ If the device version "Prepared for display FHX50" was not originally ordered and a FHX50 display is to be retrofitted, you must select version B "Not prepared for display FHX50" under feature 050: "Measuring device version" when ordering the FHX50. In this case, a retrofit kit for the device is supplied with the FHX50. The kit can be used to prepare the device so that the FHX50 can be used.         </p> <p> <span style="border: 1px solid black; padding: 2px;">i</span> Use of the FHX50 may be restricted for transmitters with an approval. A device can only be retrofitted with the FHX50 if the option L, M or N ("Prepared for FHX50") is listed under <i>Basic specifications</i>, item 4 "Display, operation" in the Safety Instructions (XA) for the device.              Also pay attention to the Safety Instructions (XA) of the FHX50.         </p> <p> <span style="border: 1px solid black; padding: 2px;">i</span> Retrofitting is not possible on transmitters with:             <ul style="list-style-type: none"> <li>▪ An approval for use in areas with flammable dust (dust ignition-proof approval)</li> <li>▪ Ex nA type of protection</li> </ul> </p> <p> <span style="border: 1px solid black; padding: 2px;">i</span> For details, see document SD01007F.         </p>

1) This range is valid if option JN "Ambient temperature transmitter -50 °C (-58 °F)" has been selected in ordering feature 580 "Test, Certificate". If the temperature is permanently below -40 °C (-40 °F), failure rates may be increased.


## 16.1.7 Overvoltage protection


Accessory	Description
Overvoltage protection for 2-wire-devices OVP10 (1 channel) OVP20 (2 channel)	<div data-bbox="327 324 715 660" style="text-align: center;"> </div> <div data-bbox="1380 667 1437 683" style="text-align: right; font-size: small;">A0021734</div> <p><b>Technical data</b></p> <ul style="list-style-type: none"> <li>▪ Resistance per channel: <math>2 * 0.5 \Omega_{max}</math></li> <li>▪ Threshold DC voltage: 400 to 700 V</li> <li>▪ Threshold impulse voltage: &lt; 800 V</li> <li>▪ Capacitance at 1 MHz: &lt; 1.5 pF</li> <li>▪ Nominal arrest impulse voltage (8/20 <math>\mu</math>s): 10 kA</li> <li>▪ Suited for wire cross-sections: 0.2 to 2.5 mm<sup>2</sup> (24 to 14 AWG)</li> </ul> <p><b>i Ordering with device</b>            The overvoltage protection module is preferably ordered with the device. See product structure, feature 610 "Accessory mounted", option NA "Overvoltage protection". Separate ordering of the module is only necessary if a device is to be retrofitted with the overvoltage protection.</p> <p><b>i Order code for retrofitting</b></p> <ul style="list-style-type: none"> <li>▪ For 1-channel devices (feature 020, option A)                OVP10: 71128617</li> <li>▪ For 2-channel devices (feature 020, option B, C, E or G)                OVP20 : 71128619</li> </ul> <p><b>Housing lid for retrofitting</b>            In order to keep the necessary safety distances, the housing lid needs to be replaced if the device is retrofitted with the overvoltage protection. Depending on the housing type, the order code of the suitable lid is as follows:</p> <ul style="list-style-type: none"> <li>▪ GT18 housing: Lid 71185516</li> <li>▪ GT19 housing: Lid 71185518</li> <li>▪ GT20 housing: Lid 71185516</li> </ul> <p><b>i Restrictions for retrofitting</b>            Depending on the approval of the transmitter the usage of the OVP module may be restricted. A device may only be retrofitted with an OVP module if the option NA (overvoltage protection) is quoted under <i>Optional Specifications</i> in the Safety Instructions (XA) pertaining to the device.</p> <p><b>i</b> For details refer to SD01090F.</p>


### 16.1.8 Bluetooth module for HART devices


Accessory	Description
Bluetooth module	<div data-bbox="416 324 1066 768" data-label="Image"> </div> <div data-bbox="1476 779 1528 792" data-label="Text">A0036493</div> <ul style="list-style-type: none"> <li>■ Quick and easy commissioning via SmartBlue (app)</li> <li>■ No additional tools or adapters required</li> <li>■ Signal curve via SmartBlue (app)</li> <li>■ Encrypted single point-to-point data transmission (tested by Fraunhofer institute) and password protected communication via Bluetooth® wireless technology</li> <li>■ Range under reference conditions: &gt; 10 m (33 ft)</li> </ul> <p><b>i</b> When using the Bluetooth module the minimum supply voltage increases by up to 3 V.</p> <p><b>i</b> <b>Ordering with device</b> The Bluetooth module is preferably ordered with the device. See product structure, feature 610 "Accessory Mounted", option NF "Bluetooth". A separate order is only necessary in case of retrofitting.</p> <p><b>i</b> <b>Order code for retrofitting</b> Bluetooth module (BT10): 71377355</p> <p><b>i</b> <b>Restrictions in case of retrofitting</b> Depending on the approval of the transmitter, application of the Bluetooth module may be restricted. A device may only be retrofitted with a Bluetooth module if the option <i>NF</i> (Bluetooth) is listed in the associated Safety Instructions (<i>XA</i>) under <i>Optional specifications</i>.</p> <p><b>i</b> For details refer to SD02252F.</p>


## 16.2 Communication-specific accessories


Accessory	Description
Commubox FXA195 HART	For intrinsically safe HART communication with FieldCare via the USB interface.  For details refer to Technical Information TI00404F

Accessory	Description
Commubox FXA291	Connects Endress+Hauser field devices with CDI interface (= Endress+Hauser Common Data Interface) to the USB interface of a computer. Order code: 51516983  For details refer to Technical Information TI00405C


Accessory	Description
HART Loop Converter HMX50	Evaluates the dynamic HART variables and converts them to analog current signals or limit values. Order code: 71063562  For details refer to Technical Information TI00429F and Operating Instructions BA00371F


Accessory	Description
WirelessHART Adapter SWA70	Connects field devices to a WirelessHART network. The WirelessHART adapter can be mounted directly at a HART device and is easily integrated into an existing HART network. It ensures safe data transmission and can be operated in parallel with other wireless networks.  For details refer to Operating Instructions BA00061S


Accessories	Description
Connect Sensor FXA30/FXA30B	Fully integrated, battery-powered gateway for simple applications with SupplyCare Hosting. Up to 4 field devices with 4 to 20 mA communication (FXA30/FXA30B), serial Modbus (FXA30B) or HART (FXA30B) can be connected. With its robust design and ability to run for years on the battery, it is ideal for remote monitoring in isolated locations. Version with LTE (USA, Canada and Mexico only) or 3G mobile transmission for worldwide communication.  For details, see "Technical Information" TI01356S and Operating Instructions BA01710S.


Accessories	Description
Fieldgate FXA42	Fieldgates enable communication between connected 4 to 20 mA, Modbus RS485 and Modbus TCP devices and SupplyCare Hosting or SupplyCare Enterprise. The signals are transmitted either via Ethernet TCP/IP, WLAN or mobile communications (UMTS). Advanced automation capabilities are available, such as an integrated Web-PLC, OpenVPN and other functions.  For details, see "Technical Information" TI01297S and Operating Instructions BA01778S.






Accessories	Description
SupplyCare Enterprise SCE30B	Inventory management software that visualizes levels, volumes, masses, temperatures, pressures, densities or other tank parameters. The parameters are recorded and transmitted by means of gateways of the type Fieldgate FXA42. This Web-based software is installed on a local server and can also be visualized and operated with mobile terminals such as a smartphone or tablet.  For details, see "Technical Information" TI01228S and Operating Instructions BA00055S

Accessories	Description
SupplyCare Hosting SCH30	Inventory management software that visualizes levels, volumes, masses, temperatures, pressures, densities or other tank parameters. The parameters are recorded and transmitted by means of gateways of the type Fieldgate FXA42, FXA30 and FXA30B. SupplyCare Hosting is offered as a hosting service (Software as a Service, SaaS). In the Endress+Hauser portal, the user is provided with the data over the Internet.  For details, see "Technical Information" TI01229S and Operating Instructions BA00050S.




Accessory	Description
Field Xpert SFX350	Field Xpert SFX350 is a mobile computer for commissioning and maintenance. It enables efficient device configuration and diagnostics for HART and FOUNDATION fieldbus devices in the <b>non-Ex area</b> .  For details, see Operating Instructions BA01202S

Accessory	Description
Field Xpert SFX370	Field Xpert SFX370 is a mobile computer for commissioning and maintenance. It enables efficient device configuration and diagnostics for HART and FOUNDATION fieldbus devices in the <b>non-Ex area</b> and the <b>Ex area</b> .  For details, see Operating Instructions BA01202S

### 16.3 Service-specific accessories


Accessory	Description
DeviceCare SFE100	Configuration tool for HART, PROFIBUS and FOUNDATION Fieldbus devices  Technical Information TI01134S  <ul style="list-style-type: none"> <li>DeviceCare is available for download at <a href="http://www.software-products.endress.com">www.software-products.endress.com</a>. The download requires a registration in the Endress+Hauser software portal.</li> <li>Alternatively, a DeviceCare DVD can be ordered with the device. Product structure: Feature 570 "Service", Option IV "Tooling DVD (DeviceCare Setup)".</li> </ul>
FieldCare SFE500	FDT-based Plant Asset Management tool. Helps to configure and maintain all field devices of your plant. By supplying status information it also supports the diagnosis of the devices.  Technical Information TI00028S






















## 16.4 System components


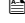
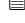
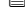
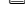




















Accessory	Description
Graphic Data Manager Memograph M	<p>The graphic data manager Memograph M provides information on all the relevant process variables. Measured values are recorded correctly, limit values are monitored and measuring points analyzed. The data are stored in the 256 MB internal memory and also on an SD card or USB stick.</p> <p> For details refer to Technical Information TI00133R and Operating Instructions BA00247R</p>
RN22.1N	<p>Active barrier with power supply for safe separation of 4 to 20 mA current circuits. Provides bi-directional HART transmission.</p> <p> For details refer to Technical Information TI00073R and Operating Instructions BA00202R</p>
RNS221	<p>Transmitter supply for 2-wire sensors or transmitters exclusively for non-Ex areas. Provides bi-directional communication using the HART communication sockets.</p> <p> For details refer to Technical Information TI00081R and Operating Instructions KA00110R</p>

# 17 Operating menu


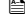
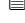
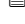
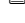






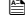











## 17.1 Overview of the operating menu (SmartBlue)

Navigation  SmartBlue

<b>Setup</b>	→  125
Device tag	→  125
Distance unit	→  125
Tank type	→  125
Tube diameter	→  126
Medium group	→  126
Empty calibration	→  127
Full calibration	→  127
Level	→  128
Distance	→  128
Signal quality	→  129
Confirm distance	→  129
Present mapping	→  131
Mapping end point	→  131
Record map	→  131
<b>► Advanced setup</b>	→  135
Locking status	→  135
Access status tooling	→  135
Enter access code	→  136
<b>► Level</b>	→  137
Medium type	→  137

Medium property	→  137
Max. filling speed liquid	→  138
Max. draining speed liquid	→  138
Advanced process conditions	→  139
Level unit	→  140
Blocking distance	→  140
Level correction	→  141
Tank/silo height	→  141
<b>► Linearization</b>	→  144
Linearization type	→  146
Unit after linearization	→  147
Free text	→  148
Level linearized	→  148
Maximum value	→  149
Diameter	→  149
Intermediate height	→  149
Table mode	→  150
Table number	→  151
Level	→  151
Level	→  152
Customer value	→  152
Activate table	→  152
<b>► Safety settings</b>	→  153
Output echo lost	→  153
Value echo lost	→  153

Ramp at echo lost	→ 154
Blocking distance	→ 140
<b>► Current output 1 to 2</b>	→ 158
Assign current output	→ 158
Current span	→ 159
Fixed current	→ 159
Damping output	→ 160
Failure mode	→ 160
Failure current	→ 161
Output current 1 to 2	→ 161
<b>► Switch output</b>	→ 162
Switch output function	→ 162
Assign status	→ 163
Assign limit	→ 163
Assign diagnostic behavior	→ 163
Switch-on value	→ 164
Switch-on delay	→ 165
Switch-off value	→ 165
Switch-off delay	→ 166
Failure mode	→ 166
Switch status	→ 166
Invert output signal	→ 166
<b>🔍 Diagnostics</b>	→ 180
Actual diagnostics	→ 180
Timestamp	→ 180

Previous diagnostics	→  180
Timestamp	→  181
Operating time from restart	→  181
Operating time	→  174
<b>▶ Diagnostic list</b>	→  182
Diagnostics 1 to 5	→  182
Timestamp 1 to 5	→  182
<b>▶ Device information</b>	→  184
Device tag	→  184
Serial number	→  184
Firmware version	→  184
Device name	→  184
Order code	→  185
Extended order code 1 to 3	→  185
Device revision	→  185
Device ID	→  185
Device type	→  186
Manufacturer ID	→  186
<b>▶ Measured values</b>	→  187
Distance	→  128
Level linearized	→  148
Output current 1 to 2	→  161
Measured current 1	→  188

Terminal voltage 1	→ 188
Electronic temperature	→ 188
► Simulation	→ 193
Assign measurement variable	→ 194
Process variable value	→ 194
Current output 1 to 2 simulation	→ 194
Value current output 1 to 2	→ 195
Switch output simulation	→ 195
Switch status	→ 195
Device alarm simulation	→ 196
Diagnostic event simulation	→ 196

## 17.2 Overview of the operating menu (display module)




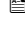
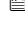













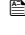
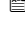
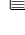



Navigation



Operating menu








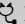


















Language	→	📖	168
<b>Setup</b>	→	📖	125
Device tag	→	📖	125
Distance unit	→	📖	125
Tank type	→	📖	125
Tube diameter	→	📖	126
Medium group	→	📖	126
Empty calibration	→	📖	127
Full calibration	→	📖	127
Level	→	📖	128
Distance	→	📖	128
Signal quality	→	📖	129
<b>Mapping</b>	→	📖	133
Confirm distance	→	📖	133
Mapping end point	→	📖	133
Record map	→	📖	133
Distance	→	📖	133
Prepare recording map	→	📖	133
<b>Advanced setup</b>	→	📖	135
Locking status	→	📖	135
Access status display	→	📖	136
Enter access code	→	📖	136


























▶ Level	→  137
Medium type	→  137
Medium property	→  137
Max. filling speed liquid	→  138
Max. draining speed liquid	→  138
Advanced process conditions	→  139
Level unit	→  140
Blocking distance	→  140
Level correction	→  141
Tank/silo height	→  141
▶ Linearization	→  144
Linearization type	→  146
Unit after linearization	→  147
Free text	→  148
Maximum value	→  149
Diameter	→  149
Intermediate height	→  149
Table mode	→  150
▶ Edit table	
Level	→  151
Customer value	→  152
Activate table	→  152
▶ Safety settings	→  153
Output echo lost	→  153
Value echo lost	→  153

Ramp at echo lost	→ 154
Blocking distance	→ 140
<b>▶ SIL/WHG confirmation</b>	→ 156
<b>▶ Deactivate SIL/WHG</b>	→ 157
Reset write protection	→ 157
Code incorrect	→ 157
<b>▶ Current output 1 to 2</b>	→ 158
Assign current output	→ 158
Current span	→ 159
Fixed current	→ 159
Damping output	→ 160
Failure mode	→ 160
Failure current	→ 161
Output current 1 to 2	→ 161
<b>▶ Switch output</b>	→ 162
Switch output function	→ 162
Assign status	→ 163
Assign limit	→ 163
Assign diagnostic behavior	→ 163
Switch-on value	→ 164
Switch-on delay	→ 165
Switch-off value	→ 165
Switch-off delay	→ 166
Failure mode	→ 166

Switch status	→ 166
Invert output signal	→ 166
<b>► Display</b>	→ 168
Language	→ 168
Format display	→ 168
Value 1 to 4 display	→ 170
Decimal places 1 to 4	→ 170
Display interval	→ 170
Display damping	→ 171
Header	→ 171
Header text	→ 171
Separator	→ 172
Number format	→ 172
Decimal places menu	→ 172
Backlight	→ 173
Contrast display	→ 173
<b>► Configuration backup display</b>	→ 174
Operating time	→ 174
Last backup	→ 174
























Configuration management	→  174
Comparison result	→  175
<b>▶ Administration</b>	→  177
<b>▶ Define access code</b>	→  179
Define access code	→  179
Confirm access code	→  179
Device reset	→  177
<b> Diagnostics</b>	→  180
Actual diagnostics	→  180
Previous diagnostics	→  180
Operating time from restart	→  181
Operating time	→  174
<b>▶ Diagnostic list</b>	→  182
Diagnostics 1 to 5	→  182
<b>▶ Event logbook</b>	→  183
Filter options	→  183
<b>▶ Event list</b>	→  183
<b>▶ Device information</b>	→  184
Device tag	→  184
Serial number	→  184
Firmware version	→  184
Device name	→  184
Order code	→  185
Extended order code 1 to 3	→  185
Device revision	→  185

Device ID	→  185
Device type	→  186
Manufacturer ID	→  186
<b>► Measured values</b>	→  187
Distance	→  128
Level linearized	→  148
Output current 1 to 2	→  161
Measured current 1	→  188
Terminal voltage 1	→  188
Electronic temperature	→  188
<b>► Data logging</b>	→  189
Assign channel 1 to 4	→  189
Logging interval	→  189
Clear logging data	→  190
<b>► Display channel 1 to 4</b>	→  191
<b>► Simulation</b>	→  193
Assign measurement variable	→  194
Process variable value	→  194
Current output 1 to 2 simulation	→  194
Value current output 1 to 2	→  195
Switch output simulation	→  195
Switch status	→  195
Device alarm simulation	→  196

Diagnostic event category	
Diagnostic event simulation	→ 196
▶ Device check	→ 197
Start device check	→ 197
Result device check	→ 197
Last check time	→ 197
Level signal	→ 198

### 17.3 Overview of the operating menu (operating tool)

Navigation  Operating menu

























<b>Setup</b>	→  125
Device tag	→  125
Distance unit	→  125
Tank type	→  125
Tube diameter	→  126
Medium group	→  126
Empty calibration	→  127
Full calibration	→  127
Level	→  128
Distance	→  128
Signal quality	→  129
Confirm distance	→  129
Present mapping	→  131
Mapping end point	→  131
Record map	→  131
<b>▶ Advanced setup</b>	→  135
Locking status	→  135
Access status tooling	→  135
Enter access code	→  136
<b>▶ Level</b>	→  137
Medium type	→  137
Medium property	→  137
Max. filling speed liquid	→  138

Max. draining speed liquid	→ 138
Advanced process conditions	→ 139
Level unit	→ 140
Blocking distance	→ 140
Level correction	→ 141
Tank/silo height	→ 141
<b>► Linearization</b>	→ 144
Linearization type	→ 146
Unit after linearization	→ 147
Free text	→ 148
Level linearized	→ 148
Maximum value	→ 149
Diameter	→ 149
Intermediate height	→ 149
Table mode	→ 150
Table number	→ 151
Level	→ 151
Level	→ 152
Customer value	→ 152
Activate table	→ 152
<b>► Safety settings</b>	→ 153
Output echo lost	→ 153
Value echo lost	→ 153
Ramp at echo lost	→ 154
Blocking distance	→ 140



▶ SIL/WHG confirmation	→ 156
▶ Deactivate SIL/WHG	→ 157
Reset write protection	→ 157
Code incorrect	→ 157
▶ Current output 1 to 2	→ 158
Assign current output	→ 158
Current span	→ 159
Fixed current	→ 159
Damping output	→ 160
Failure mode	→ 160
Failure current	→ 161
Output current 1 to 2	→ 161
▶ Switch output	→ 162
Switch output function	→ 162
Assign status	→ 163
Assign limit	→ 163
Assign diagnostic behavior	→ 163
Switch-on value	→ 164
Switch-on delay	→ 165
Switch-off value	→ 165
Switch-off delay	→ 166
Failure mode	→ 166
Switch status	→ 166
Invert output signal	→ 166

▶ Display	→ 168
Language	→ 168
Format display	→ 168
Value 1 to 4 display	→ 170
Decimal places 1 to 4	→ 170
Display interval	→ 170
Display damping	→ 171
Header	→ 171
Header text	→ 171
Separator	→ 172
Number format	→ 172
Decimal places menu	→ 172
Backlight	→ 173
Contrast display	→ 173
▶ Configuration backup display	→ 174
Operating time	→ 174
Last backup	→ 174
Configuration management	→ 174
Backup state	→ 175
Comparison result	→ 175
▶ Administration	→ 177
Define access code	→ 179
Device reset	→ 177
🔍 Diagnostics	→ 180
Actual diagnostics	→ 180

Timestamp	→  180
Previous diagnostics	→  180
Timestamp	→  181
Operating time from restart	→  181
Operating time	→  174
<b>► Diagnostic list</b>	→  182
Diagnostics 1 to 5	→  182
Timestamp 1 to 5	→  182
<b>► Device information</b>	→  184
Device tag	→  184
Serial number	→  184
Firmware version	→  184
Device name	→  184
Order code	→  185
Extended order code 1 to 3	→  185
Device revision	→  185
Device ID	→  185
Device type	→  186
Manufacturer ID	→  186
<b>► Measured values</b>	→  187
Distance	→  128
Level linearized	→  148
Output current 1 to 2	→  161
Measured current 1	→  188

Terminal voltage 1	→ 188
Electronic temperature	→ 188
<b>► Data logging</b>	→ 189
Assign channel 1 to 4	→ 189
Logging interval	→ 189
Clear logging data	→ 190
<b>► Simulation</b>	→ 193
Assign measurement variable	→ 194
Process variable value	→ 194
Current output 1 to 2 simulation	→ 194
Value current output 1 to 2	→ 195
Switch output simulation	→ 195
Switch status	→ 195
Device alarm simulation	→ 196
Diagnostic event simulation	→ 196
<b>► Device check</b>	→ 197
Start device check	→ 197
Result device check	→ 197
Last check time	→ 197
Level signal	→ 198
<b>► Heartbeat</b>	→ 199

## 17.4 "Setup" menu

- i
  - 🔍 : Marks the navigation path to the parameter via the display and operating module.
  - 🔧 : Marks the navigation path to the parameter via an operating tool (e.g. FieldCare).
  - 🔒 : Marks parameters which can be locked via the software locking.


Navigation 🔍🔧 Setup

<b>Device tag</b>		<span style="font-size: 0.8em; vertical-align: middle;">🔒</span>
<b>Navigation</b>	<span style="font-size: 0.8em; vertical-align: middle;">🔍🔧</span> Setup → Device tag	
<b>Description</b>	Enter a unique name for the measuring point to identify the device quickly within the plant.	
<b>Factory setting</b>	FMR5x	
<b>Distance unit</b>		<span style="font-size: 0.8em; vertical-align: middle;">🔒</span>
<b>Navigation</b>	<span style="font-size: 0.8em; vertical-align: middle;">🔍🔧</span> Setup → Distance unit	
<b>Description</b>	Used for the basic calibration (Empty / Full).	
<b>Selection</b>	<i>SI units</i> <ul style="list-style-type: none"> <li>▪ mm</li> <li>▪ m</li> </ul>	<i>US units</i> <ul style="list-style-type: none"> <li>▪ ft</li> <li>▪ in</li> </ul>
<b>Factory setting</b>	m	
<b>Tank type</b>		<span style="font-size: 0.8em; vertical-align: middle;">🔒</span>
<b>Navigation</b>	<span style="font-size: 0.8em; vertical-align: middle;">🔍🔧</span> Setup → Tank type	
<b>Prerequisite</b>	<b>Medium type</b> (→ <span style="font-size: 0.8em; vertical-align: middle;">📄</span> 137) = <b>Liquid</b>	
<b>Description</b>	Select tank type.	
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Bypass / pipe</li> <li>▪ Stilling well</li> <li>▪ Workbench test</li> <li>▪ Open channel</li> <li>▪ Sphere</li> <li>▪ Storage vessel</li> </ul>	


- Process vessel standard
- Process vessel with agitator
- Wave guide antenna

**Factory setting**                      Depending on the antenna

**Additional information**            Depending on the antenna some of the options mentioned above may not be available or there may be additional options.

**Tube diameter** 


**Navigation**                              Setup → Tube diameter

**Prerequisite**                         **Tank type** (→  125) = **Bypass / pipe**

**Description**                         Specify diameter of bypass or stilling well.

**User entry**                            0 to 9.999 m

**Factory setting**                      0 m

**Medium group** 



**Navigation**                              Setup → Medium group


**Prerequisite**                         **Medium type** (→  137) = **Liquid**


**Description**                         Select medium group.


- Selection**
- Others
  - Water based (DC >= 4)

**Factory setting**                      Others

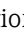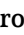**Additional information**            This parameter roughly specifies the dielectric constant (DC) of the medium. For a more detailed definition of the DC use the **Medium property** parameter (→  137).  
The **Medium group** parameter presets the **Medium property** parameter (→  137) as follows:

Medium group	Medium property (→  137)
Others	Unknown
Water based (DC >= 4)	DC 4 ... 7

 The **Medium property** parameter can be changed at a later point of time. However, when doing so, the **Medium group** parameter retains its value. Only the **Medium property** parameter is relevant for the signal evaluation.

 The measuring range may be reduced for small dielectric constants. For details refer to the Technical Information (TI) of the respective device.

---

**Empty calibration**

---




**Navigation**       Setup → Empty calibration


**Description**      Distance between process connection and minimum level (0%).


**User entry**      Depending on the antenna

**Factory setting**      Depending on the antenna

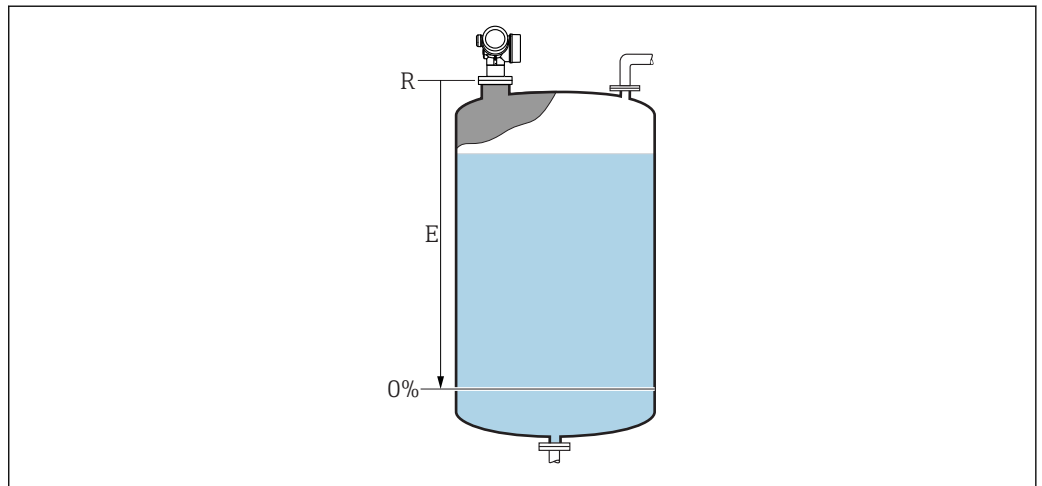**Additional information**

A0019486

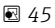 45    Empty calibration (E) for level measurements in liquids

 The measuring range starts at the point at which the radar beam hits the tank or silo bottom. In the case of dished boiler ends or conical outlets levels below this point can not be measured.

---

**Full calibration**

---




**Navigation**       Setup → Full calibration

**Description**      Distance between minimum level (0%) and maximum level (100%).

**User entry**      Depending on the antenna

**Factory setting**      Depending on the antenna

**Additional information**

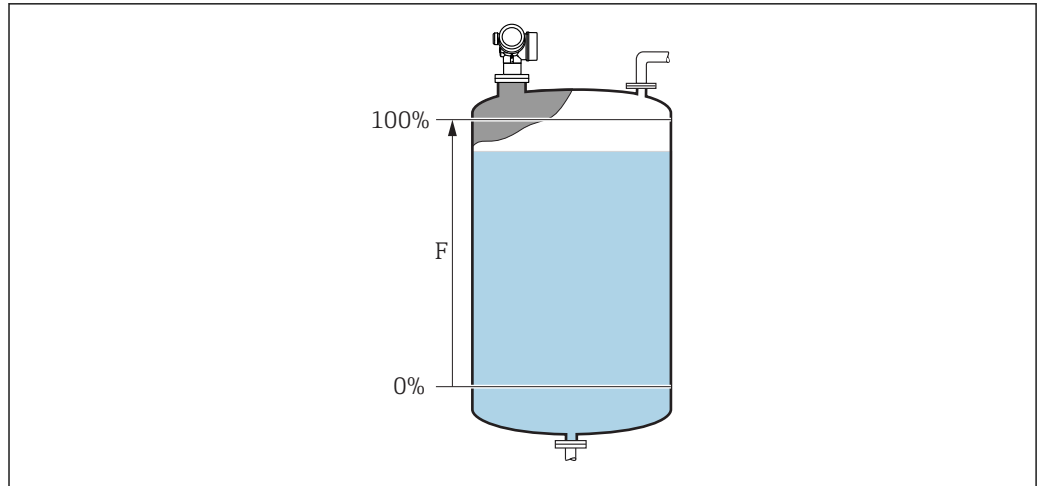

A0019487

46 Full calibration (F) for level measurements in liquids

**Level**


**Navigation**

Setup → Level

**Description**

Displays measured level L (before linearization).

**Additional information**

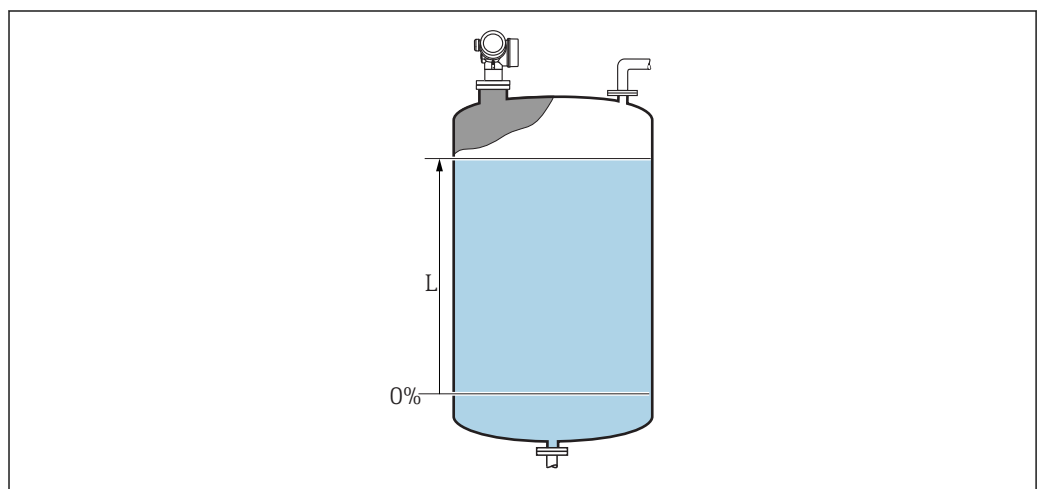

A0019482

47 Level in case of liquid measurements

**i** The unit is defined in the **Level unit** parameter (→ 140).

**Distance**

**Navigation**


Setup → Distance

**Description**

Displays the measured distance D between the reference point (lower edge of the flange or threaded connection) and the level.



## Additional information

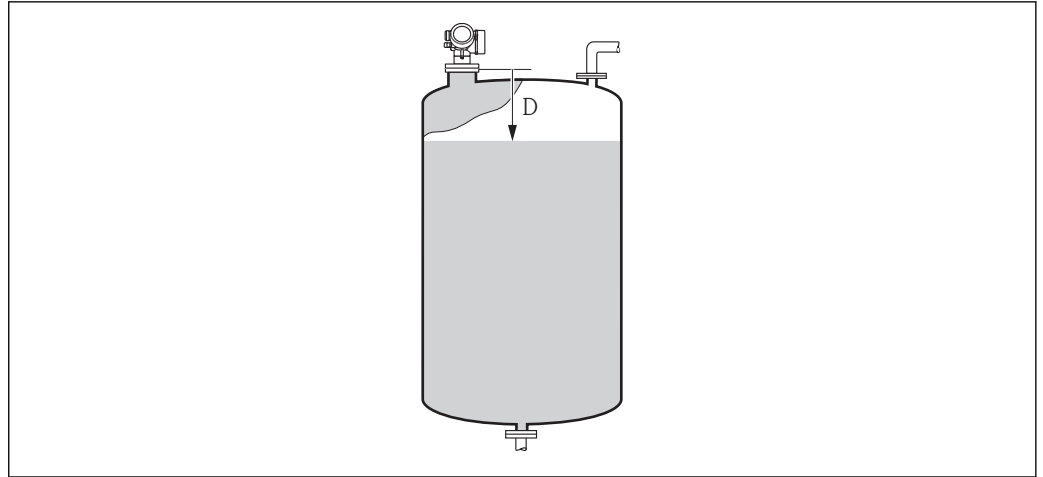

A0019483

48 Distance for liquid measurements

**i** The unit is defined in the **Distance unit** parameter (→ 125).

## Signal quality

## Navigation

Setup → Signal quality

## Description

Displays the signal quality of the level echo.

## Additional information

**Meaning of the display options**

- **Strong**  
The evaluated echo exceeds the threshold by at least 10 dB.
- **Medium**  
The evaluated echo exceeds the threshold by at least 5 dB.
- **Weak**  
The evaluated echo exceeds the threshold by less than 5 dB.
- **No signal**  
The device does not find a usable echo.

The signal quality indicated in this parameter always refers to the currently evaluated echo: either the level echo or the tank bottom echo. To differentiate between these two, the quality of the tank bottom echo is always displayed in brackets.

**i** In case of a lost echo (**Signal quality = No signal**) the device generates the following error message:

- F941, for **Output echo lost** (→ 153) = **Alarm**.
- S941, if another option has been selected in **Output echo lost** (→ 153).

## Confirm distance



## Navigation

Setup → Confirm distance

## Description

Specify, whether the measured distance matches the real distance.

Depending on the selection the device automatically sets the range of mapping.

**Selection**

- Manual map
- Distance ok
- Distance unknown
- Distance too small \*
- Distance too big \*
- Tank empty
- Factory map

**Factory setting**

Distance unknown

**Additional information****Meaning of the options**■ **Manual map**

To be selected if the range of mapping is to be defined manually in the **Mapping end point** parameter (→ ☰ 131). In this case it is not necessary to confirm the distance.

■ **Distance ok**

To be selected if the measured distance matches the actual distance. The device performs a mapping.

■ **Distance unknown**

To be selected if the actual distance is unknown. A mapping can not be performed in this case.

■ **Distance too small**

To be selected if the measured distance is smaller than the actual distance. The device searches for the next echo and returns to the **Confirm distance** parameter. The distance is recalculated and displayed. The comparison must be repeated until the displayed distance matches the actual distance. After this, the recording of the map can be started by selecting **Distance ok**.

■ **Distance too big**<sup>7)</sup>

To be selected if the measured distance exceeds the actual distance. The device adjusts the signal evaluation and returns to the **Confirm distance** parameter. The distance is recalculated and displayed. The comparison must be repeated until the displayed distance matches the actual distance. After this, the recording of the map can be started by selecting **Distance ok**.


■ **Tank empty**


To be selected if the tank is completely empty. The device records a mapping covering the complete measuring range as defined by the **Tank/silo height** parameter (→ ☰ 141). By default, **Tank/silo height** = **Empty calibration**.

Take into account that in case of conical outlets, for example, a measurement is only possible up to the point at which the radar hits the bottom of the tank or silo. If the **Tank empty** option is used, **Empty calibration** (→ ☰ 127) and **Tank/silo height** may not reach below this point as otherwise the empty signal is suppressed.

■ **Factory map**

To be selected if the present mapping curve (if one exists) is to be deleted. The device returns to the **Confirm distance** parameter and a new mapping can be recorded.

 When operating via the display module, the measured distance is displayed together with this parameter for reference purposes.

 If the teaching procedure with the **Distance too small** option or the **Distance too big** option is quit before the distance has been confirmed, a map is **not** recorded and the teaching procedure is reset after 60 s.


\* Visibility depends on order options or device settings

7) Only available for "Expert → Sensor → Echo tracking → **Evaluation mode** parameter" = "Short time history" or "Long time history"

---

**Present mapping**






---

<b>Navigation</b>	 Setup → Present mapping
<b>Description</b>	Indicates up to which distance a mapping has already been recorded.

---

**Mapping end point**




---

<b>Navigation</b>	 Setup → Mapping end point
<b>Prerequisite</b>	<b>Confirm distance</b> (→  129) = <b>Manual map</b> or <b>Distance too small</b>
<b>Description</b>	Specify new end of the mapping.
<b>User entry</b>	0.1 to 999 999.9 m
<b>Factory setting</b>	0.1 m
<b>Additional information</b>	<p>This parameter defines up to which distance the new mapping is to be recorded. The distance is measured from the reference point, i.e. from the lower edge of the mounting flange or the threaded connection.</p> <p> For reference purposes the <b>Present mapping</b> parameter (→  131) is displayed together with this parameter. It indicates up to which distance a mapping has already been recorded.</p>


---

**Record map**





---
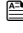
<b>Navigation</b>	 Setup → Record map
<b>Prerequisite</b>	<b>Confirm distance</b> (→  129) = <b>Manual map</b> or <b>Distance too small</b>
<b>Description</b>	Start recording of the map.
<b>Selection</b>	<ul style="list-style-type: none"> <li>■ No</li> <li>■ Record map</li> <li>■ Overlay map</li> <li>■ Factory map</li> <li>■ Delete partial map</li> </ul>
<b>Factory setting</b>	No

**Additional information****Meaning of the options**

- **No**  
The map is not recorded.
- **Record map**  
The map is recorded. After the recording is completed, the new measured distance and the new mapping range appear on the display. When operating via the local display, these values must be confirmed by pressing .
- **Overlay map**  
The new mapping curve is generated by overlaying the old and the current envelope curves.
- **Factory map**  
The factory map stored in the ROM of the device is used.
- **Delete partial map**  
The mapping curve is deleted up to **Mapping end point** (→  131).

### 17.4.1 "Mapping" wizard

-  The **Mapping** wizard is only available when operating via the local display. When operating via an operating tool, all parameters concerning the mapping are located directly in the **Setup** menu (→  125).
-  In the **Mapping** wizard two parameters are displayed simultaneously on the display module at any one time. The upper parameter can be edited, whereas the lower parameter is displayed for reference purposes only.

Navigation  Setup → Mapping

---

#### Confirm distance

Navigation  Setup → Mapping → Confirm distance

Description →  129

---

#### Mapping end point

Navigation  Setup → Mapping → Mapping end point

Description →  131

---

#### Record map

Navigation  Setup → Mapping → Record map

Description →  131

---

#### Distance

Navigation  Setup → Mapping → Distance

Description →  128

---

#### Prepare recording map


Navigation  Setup → Mapping → Prepare recording map

Description Indicates the progress of the recording of the map.

**User interface**

- Init. recording
- In progress
- Finished





## 17.4.2 "Advanced setup" submenu

Navigation  Setup → Advanced setup

---

### Locking status






---

<b>Navigation</b>	  Setup → Advanced setup → Locking status
<b>Description</b>	Indicates the write protection with the highest priority that is currently active.
<b>User interface</b>	<ul style="list-style-type: none"> <li>■ Hardware locked</li> <li>■ SIL locked</li> <li>■ CT active - defined parameters</li> <li>■ WHG locked</li> <li>■ Temporarily locked</li> </ul>
<b>Additional information</b>	<p><b>Meaning and priorities of the types of write protection</b></p> <ul style="list-style-type: none"> <li>■ <b>Hardware locked (priority 1)</b> The DIP switch for hardware locking is activated on the main electronics module. This locks write access to the parameters.</li> <li>■ <b>SIL locked (priority 2)</b> The SIL mode is activated. Writing access to the relevant parameters is denied.</li> <li>■ <b>WHG locked (priority 3)</b> The WHG mode is activated. Writing access to the relevant parameters is denied.</li> <li>■ <b>Temporarily locked (priority 4)</b> Write access to the parameters is temporarily locked on account of internal processes in progress in the device (e.g. data upload/download, reset etc.). The parameters can be modified as soon as the processes are complete.</li> </ul> <p> On the display module, the -symbol appears in front of parameters that cannot be modified since they are write-protected.</p>

---

### Access status tooling

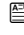




---

<b>Navigation</b>	 Setup → Advanced setup → Access status tooling
<b>Description</b>	Shows the access authorization to the parameters via the operating tool.
<b>Additional information</b>	<p> The access authorization can be changed via the <b>Enter access code</b> parameter (→  136).</p> <p> If additional write protection is active, this restricts the current access authorization even further. The write protection status can be viewed via the <b>Locking status</b> parameter (→  135).</p>

---

**Access status display**


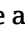




---

<b>Navigation</b>	 Setup → Advanced setup → Access status display
<b>Prerequisite</b>	The device has a local display.
<b>Description</b>	Indicates access authorization to parameters via local display.
<b>Additional information</b>	<p> The access authorization can be changed via the <b>Enter access code</b> parameter (→  136).</p> <p> If additional write protection is active, this restricts the current access authorization even further. The write protection status can be viewed via the <b>Locking status</b> parameter (→  135).</p>

---

**Enter access code**


---




<b>Navigation</b>	 Setup → Advanced setup → Enter access code
<b>Description</b>	Enter access code to disable write protection of parameters.
<b>User entry</b>	0 to 9999
<b>Additional information</b>	<ul style="list-style-type: none"> <li>▪ For local operation, the customer-specific access code, which has been defined in the <b>Define access code</b> parameter (→  177), has to be entered.</li> <li>▪ If an incorrect access code is entered, the user retains his current access authorization.</li> <li>▪ The write protection affects all parameters marked with the -symbol in this document. On the local display, the -symbol in front of a parameter indicates that the parameter is write-protected.</li> <li>▪ If no key is pressed for 10 min, or the user switches from the navigation and editing mode back to the measured value display mode, the device automatically locks the write-protected parameters after another 60 s.</li> </ul> <p> Please contact your Endress+Hauser Sales Center if you lose your access code.</p>







**"Level" submenu**



Navigation  Setup → Advanced setup → Level


---

<b>Medium type</b>	
<hr/>	
<b>Navigation</b>	 Setup → Advanced setup → Level → Medium type
<b>Description</b>	Specify type of medium.
<b>User interface</b>	<ul style="list-style-type: none"> <li>■ Liquid</li> <li>■ Solid</li> </ul>
<b>Factory setting</b>	FMR50, FMR51, FMR52, FMR53, FMR54: <b>Liquid</b>
<b>Additional information</b>	 This parameter determines the value of several other parameters and strongly influences the complete signal evaluation. Therefore, it is strongly recommended <b>not to change</b> the factory setting.

---

<b>Medium property</b>	
<hr/>	
<b>Navigation</b>	 Setup → Advanced setup → Level → Medium property
<b>Description</b>	Specify relative dielectric constant $\epsilon_r$ of the medium.
<b>Selection</b>	<ul style="list-style-type: none"> <li>■ Unknown</li> <li>■ DC 1.4 ... 1.6</li> <li>■ DC 1.6 ... 1.9</li> <li>■ DC 1.9 ... 2.5</li> <li>■ DC 2.5 ... 4</li> <li>■ DC 4 ... 7</li> <li>■ DC 7 ... 15</li> <li>■ DC &gt; 15</li> </ul>
<b>Factory setting</b>	Dependent on <b>Medium type</b> (→  137) and <b>Medium group</b> (→  126).
<b>Additional information</b>	<i>Dependency on "Medium type" and "Medium group"</i>

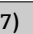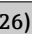Medium type (→  137)	Medium group (→  126)	Medium property
Solid		Unknown
Liquid	Water based (DC >= 4)	DC 4 ... 7
	Others	Unknown

 For dielectric constants (DC values) of many media commonly used in various industries refer to:

- the Endress+Hauser DC manual (CP01076F)
- the Endress+Hauser "DC Values App" (available for Android and iOS)

**Max. filling speed liquid**

<b>Navigation</b>	Setup → Advanced setup → Level → Max. filling speed liquid
<b>Prerequisite</b>	<b>Medium type</b> (→  137) = <b>Liquid</b>
<b>Description</b>	Select expected maximum filling speed.
<b>Selection</b>	<ul style="list-style-type: none"> <li>■ Slow &lt; 1cm (0.4in) /min</li> <li>■ Medium &lt; 10cm (4in) /min</li> <li>■ Standard &lt; 1m (40in) /min</li> <li>■ Fast &lt; 2m (80in) /min</li> <li>■ Very fast &gt; 2m (80in) /min</li> <li>■ No filter / test</li> </ul>
<b>Factory setting</b>	Depending on the <b>Tank type</b> parameter (→  125)
<b>Additional information</b>	The device adjusts the signal evaluation filters and the damping of the output signal to the typical rate of level change defined in this parameter:

Max. filling speed liquid	Step response time / s
Slow < 1cm (0.4in) /min	90
Medium < 10cm (4in) /min	50
Standard < 1m (40in) /min	20
Fast < 2m (80in) /min	8
Very fast > 2m (80in) /min	5
No filter / test	< 1


**Max. filling speed liquid** is preset by **Tank type** (→ 125). It can, however, be adjusted to the process in the vessel at any time. If **Tank type** (→ 125) is changed again at a later point of time, it may be necessary to repeat the fine adjustment.


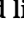
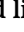
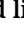
**Max. draining speed liquid**

<b>Navigation</b>	Setup → Advanced setup → Level → Max. draining speed liquid
<b>Prerequisite</b>	<b>Medium type</b> (→  137) = <b>Liquid</b>
<b>Description</b>	Select expected maximum draining speed.
<b>Selection</b>	<ul style="list-style-type: none"> <li>■ Slow &lt; 1cm (0.4in) /min</li> <li>■ Medium &lt; 10cm (4in) /min</li> <li>■ Standard &lt; 1m (40in) /min</li> <li>■ Fast &lt; 2m (80in) /min</li> <li>■ Very fast &gt; 2m (80in) /min</li> <li>■ No filter / test</li> </ul>
<b>Factory setting</b>	Depending on the <b>Tank type</b> parameter (→  125)

**Additional information**

The device adjusts the signal evaluation filters and the damping of the output signal to the typical rate of level change defined in this parameter:

Max. draining speed liquid (→  138)	Step response time / s
Slow < 1cm (0.4in) /min	90
Medium < 10cm (4in) /min	50
Standard < 1m (40in) /min	20
Fast < 2m (80in) /min	8
Very fast > 2m (80in) /min	5
No filter / test	< 1

 **Max. draining speed liquid (→  138)** is preset by **Tank type (→  125)**. It can, however, be adjusted to the process in the vessel at any time. If **Tank type (→  125)** is changed again at a later point of time, it may be necessary to repeat the fine adjustment.

**Advanced process conditions****Navigation**

  Setup → Advanced setup → Level → Advanced process conditions

**Description**

Specify additional process conditions (if required).

**Selection**

- Foam (>5cm/0,16ft)
- Changing DC values
- Small tanks (< 1m/3ft)


**Factory setting**

None

**Additional information**


*"Foam (>5cm/0,16ft)" option*

This option makes sure that no tank history is used which has been recorded while foam was present at the surface and thus is no reliable map of the tank property. To achieve this, the setting **Evaluation mode = Long time history** is deactivated.

 The **Foam (>5cm/0,16ft)** option is only available for liquid applications (FMR50, FMR51, FMR52, FMR53, FMR54).


*"Changing DC values" option*

A tank history which has been recorded with **Evaluation mode = Long time history** is only valid for a fixed dielectric constant. The **Changing DC values** option disables the setting **Evaluation mode = Long time history** and thus avoids wrong measuring values in the case of a changing dielectric constant.

 The **Changing DC values** option is only available for liquid applications (FMR50, FMR51, FMR52, FMR53, FMR54).

*"Small tanks (< 1m/3ft)" option*

This option provides a simple possibility to reduce the echo width of the sensor module. This enables an improved detection of superimposed echos - especially in the near field. Internally, all parameters related to the echo width are adjusted by this option.

 The **Small tanks (< 1m/3ft)** option is only available for liquid measurements with 26 GHz HF module (FMR50, FMR51, FMR52).

---

**Level unit**
**Navigation**

Setup → Advanced setup → Level → Level unit

**Description**

Select level unit.

**Selection***SI units*

- %
- m
- mm

*US units*

- ft
- in

**Factory setting**

%

**Additional information**

The level unit may differ from the distance unit defined in the **Distance unit** parameter (→ 125):

- The unit defined in the **Distance unit** parameter is used for the basic calibration (**Empty calibration** (→ 127) and **Full calibration** (→ 127)).
- The unit defined in the **Level unit** parameter is used to display the (nonlinearized) level.

---

**Blocking distance**
**Navigation**

Setup → Advanced setup → Level → Blocking distance

**Description**

Specify blocking distance BD.

**User entry**

0 to 200 m

**Factory setting**

FMR50, FMR51, FMR53, FMR54: antenna length

**Additional information**

Signals in the blocking distance are only evaluated if they have been outside the blocking distance when the device was switched on and move into the blocking distance due to a level change during operation. Signals which are already in the blocking distance when the device is switched on, are ignored.




This behavior is only valid if the following two conditions are met:

- Expert → Sensor → Echo tracking → Evaluation mode = **Short time history** or **Long time history**
- Expert → Sensor → Gas phase compensation → GPC mode= **On, Without correction** or **External correction**

If one of these conditions is not met, signals in the blocking distance will always be ignored.



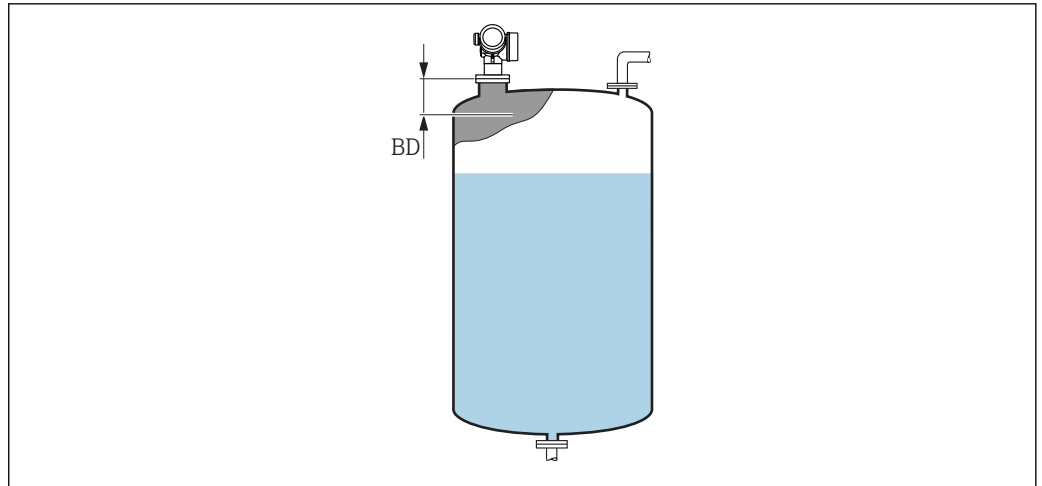

If required, a different behavior for signals in the blocking distance can be defined by the Endress+Hauser service.







A0019492


49 Blocking distance (BD) for liquid measurements

## Level correction

<b>Navigation</b>	  Setup → Advanced setup → Level → Level correction
<b>Description</b>	Specify level correction (if required).
<b>User entry</b>	-200 000.0 to 200 000.0 %
<b>Factory setting</b>	0.0 %
<b>Additional information</b>	The value specified in this parameter is added to the measured level (before linearization).

## Tank/silo height

<b>Navigation</b>	  Setup → Advanced setup → Level → Tank/silo height
<b>Description</b>	Specify total height of the tank or silo as measured from the process connection.
<b>User entry</b>	-999.9999 to 999.9999 m
<b>Factory setting</b>	<b>Empty calibration</b> (→  127)
<b>Additional information</b>	If the parametrized measuring range ( <b>Empty calibration</b> (→  127)) differs significantly from the tank or silo height, it is recommended to enter the tank or silo height. Example: Continuous level monitoring in the upper third of a tank or silo.

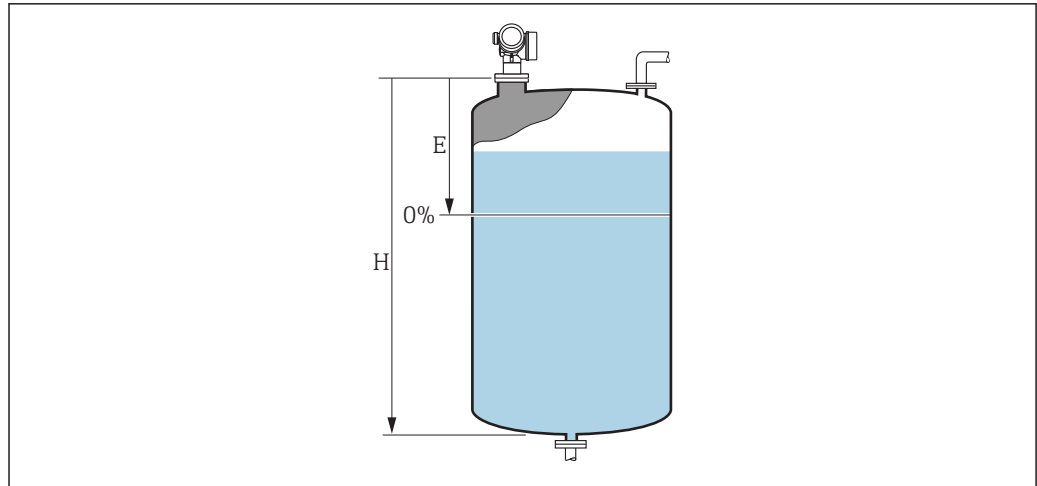

A0019867


50 "Tank/silo height" parameter (→ 141) for measurements in liquids

E Empty calibration (→ 127)

H Tank/silo height (→ 141)

**i** For tanks with conical outlet, **Tank/silo height** should not be changed as in this type of applications **Empty calibration** (→ 127) is usually **not**  $\ll$  the tank or silo height.

"Linearization" submenu

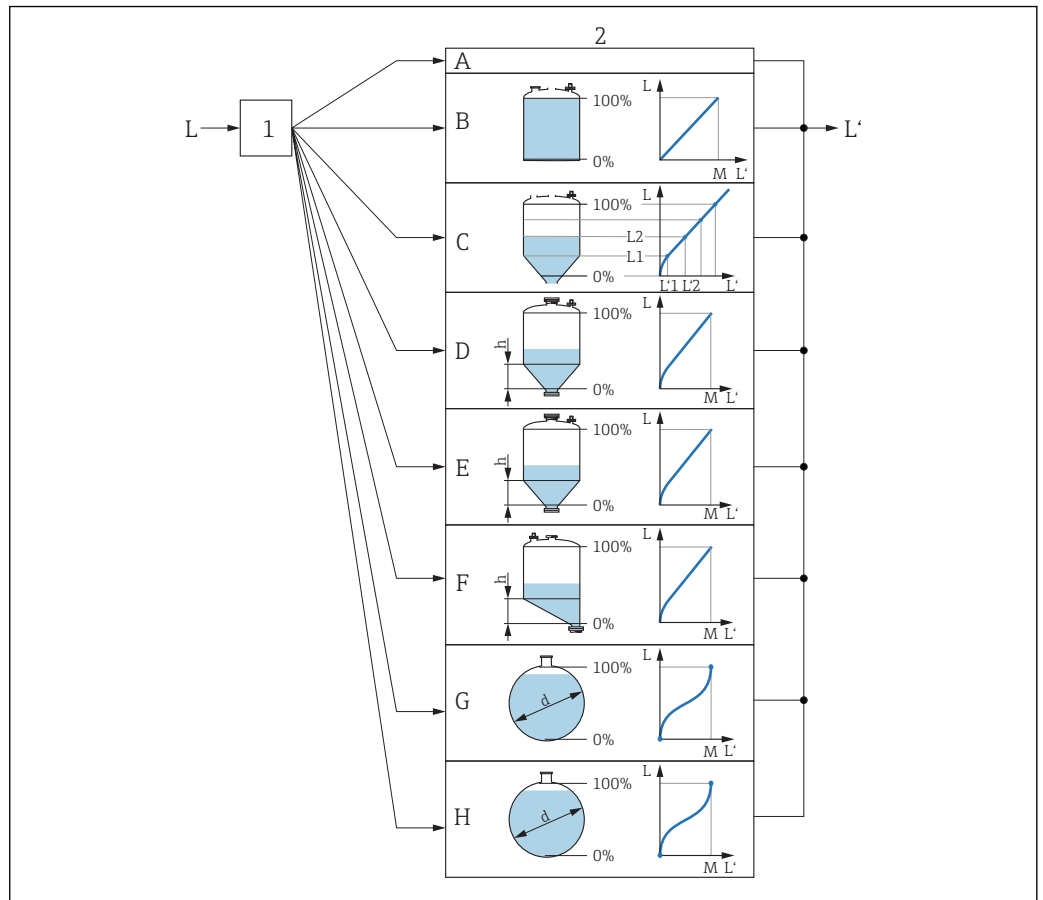












A0019648

51 Linearization: Transformation of the level and (if relevant) the interface height into a volume or weight; the transformation is dependent on the shape of the vessel.

- 1 Selection of linearization type and unit
- 2 Configuration of the linearization
- A Linearization type (→ 146) = None
- B Linearization type (→ 146) = Linear
- C Linearization type (→ 146) = Table
- D Linearization type (→ 146) = Pyramid bottom
- E Linearization type (→ 146) = Conical bottom
- F Linearization type (→ 146) = Angled bottom
- G Linearization type (→ 146) = Horizontal cylinder
- H Linearization type (→ 146) = Sphere
- L Level before linearization (measured in distance units)
- L' Level linearized (→ 148) (corresponds to volume or weight)
- M Maximum value (→ 149)
- d Diameter (→ 149)
- h Intermediate height (→ 149)


Structure of the submenu on the display module














Navigation  Setup → Advanced setup → Linearization

<b>► Linearization</b>		
Linearization type		→  146
Unit after linearization		→  147
Free text		→  148
Maximum value		→  149
Diameter		→  149
Intermediate height		→  149
Table mode		→  150
<b>► Edit table</b>		
	Level	→  151
	Customer value	→  152
	Activate table	→  152





Structure of the submenu in an operating tool (e.g. FieldCare)

Navigation  Setup → Advanced setup → Linearization

<b>► Linearization</b>	
Linearization type	→  146
Unit after linearization	→  147
Free text	→  148
Level linearized	→  148
Maximum value	→  149
Diameter	→  149
Intermediate height	→  149
Table mode	→  150
Table number	→  151
Level	→  151
Level	→  152
Customer value	→  152
Activate table	→  152

*Description of parameters*

Navigation  Setup → Advanced setup → Linearization

**Linearization type** 


**Navigation**  Setup → Advanced setup → Linearization → Linearization type

**Description** Select linearization type.


- Selection**
- None
  - Linear
  - Table
  - Pyramid bottom
  - Conical bottom
  - Angled bottom
  - Horizontal cylinder
  - Sphere

**Factory setting** None

**Additional information**

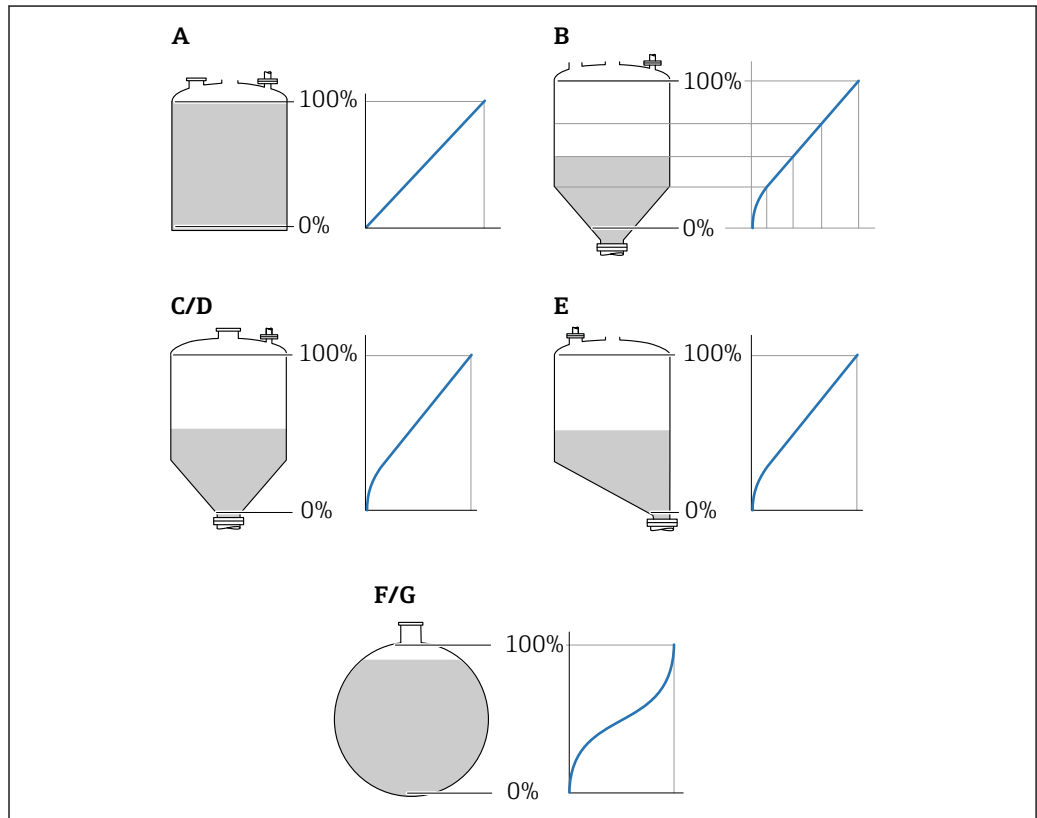

A0021476

 52 *Linearization types*



- A None
- B Table
- C Pyramid bottom
- D Conical bottom
- E Angled bottom
- F Sphere
- G Horizontal cylinder

**Meaning of the options****■ None**

The level is transmitted in the level unit without linearization.






**■ Linear**

The output value (volume/weight) is directly proportional to the level L. This is valid, for example, for vertical cylinders. The following additional parameters have to be specified:

- **Unit after linearization** (→  147)
- **Maximum value** (→  149): Maximum volume or weight

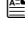


**■ Table**

The relationship between the measured level L and the output value (volume/weight) is given by a linearization table consisting of up to 32 pairs of values "level - volume" or "level - weight", respectively. The following additional parameters have to be specified:

- **Unit after linearization** (→  147)
- **Table mode** (→  150)
- For each table point: **Level** (→  151)
- For each table point: **Customer value** (→  152)
- **Activate table** (→  152)

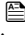


**■ Pyramid bottom**

The output value corresponds to the volume or weight in a silo with pyramid bottom. The following additional parameters have to be specified:

- **Unit after linearization** (→  147)
- **Maximum value** (→  149): Maximum volume or weight
- **Intermediate height** (→  149): The height of the pyramid




**■ Conical bottom**

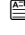The output value corresponds to the volume or weight in a tank with conical bottom. The following additional parameters have to be specified:

- **Unit after linearization** (→  147)
- **Maximum value** (→  149): Maximum volume or weight
- **Intermediate height** (→  149): The height of the conical part of the tank




**■ Angled bottom**

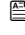The output value corresponds to the volume or weight in a silo with an angled bottom. The following additional parameters have to be specified:

- **Unit after linearization** (→  147)
- **Maximum value** (→  149): Maximum volume or weight
- **Intermediate height** (→  149): Height of the angled bottom




**■ Horizontal cylinder**

The output value corresponds to the volume or weight in a horizontal cylinder. The following additional parameters have to be specified:


- **Unit after linearization** (→  147)
- **Maximum value** (→  149): Maximum volume or weight
- **Diameter** (→  149)

**■ Sphere**


The output value corresponds to the volume or weight in a spherical tank. The following additional parameters have to be specified:

- **Unit after linearization** (→  147)
- **Maximum value** (→  149): Maximum volume or weight
- **Diameter** (→  149)

**Unit after linearization****Navigation**

  Setup → Advanced setup → Linearization → Unit after linearization

**Prerequisite**

**Linearization type** (→  146) ≠ None

**Description**

Select unit of the linearized value.



Selection	<i>SI units</i>	<i>US units</i>	<i>Imperial units</i>
	<ul style="list-style-type: none"> <li>■ STon</li> <li>■ t</li> <li>■ kg</li> <li>■ cm<sup>3</sup></li> <li>■ dm<sup>3</sup></li> <li>■ m<sup>3</sup></li> <li>■ hl</li> <li>■ l</li> <li>■ %</li> <li>■ mm</li> <li>■ m</li> </ul>	<ul style="list-style-type: none"> <li>■ lb</li> <li>■ UsGal</li> <li>■ ft<sup>3</sup></li> <li>■ ft</li> <li>■ in</li> </ul>	<ul style="list-style-type: none"> <li>impGal</li> </ul>

*Custom-specific units*


Free text



**Factory setting** %

**Additional information** The selected unit is only used to be indicated on the display. The measured value is **not** transformed according to the selected unit.

 It is also possible to configure a distance-to-distance linearization, i.e. a transformation from the level unit to a different distance unit. To do so, select the **Linear** linearization mode. In order to define the new level unit, select the **Free text** option in the **Unit after linearization** parameter and enter the required unit into the **Free text** parameter (→  148).

---

**Free text** 

**Navigation**   Setup → Advanced setup → Linearization → Free text

**Prerequisite** **Unit after linearization** (→  147) = **Free text**

**Description** Enter unit symbol.

**User entry** Up to 32 alphanumerical characters (letters, numbers, special characters)



**Factory setting** Free text

---

**Level linearized**

**Navigation**  Setup → Advanced setup → Linearization → Level linearized

**Description** Displays linearized level.


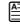
**Additional information**  The unit is defined by the **Unit after linearization** parameter →  147.

---

**Maximum value**

---






<b>Navigation</b>	 Setup → Advanced setup → Linearization → Maximum value
<b>Prerequisite</b>	<b>Linearization type</b> (→  146) has one of the following values: <ul style="list-style-type: none"> <li>■ Linear</li> <li>■ Pyramid bottom</li> <li>■ Conical bottom</li> <li>■ Angled bottom</li> <li>■ Horizontal cylinder</li> <li>■ Sphere</li> </ul>
<b>Description</b>	Linearized value corresponding to a level of 100%.
<b>User entry</b>	-50 000.0 to 50 000.0 %
<b>Factory setting</b>	100.0 %

---

**Diameter**

---



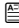

<b>Navigation</b>	 Setup → Advanced setup → Linearization → Diameter
<b>Prerequisite</b>	<b>Linearization type</b> (→  146) has one of the following values: <ul style="list-style-type: none"> <li>■ Horizontal cylinder</li> <li>■ Sphere</li> </ul>
<b>Description</b>	Diameter of the cylindrical or spherical tank.
<b>User entry</b>	0 to 9 999.999 m
<b>Factory setting</b>	2 m
<b>Additional information</b>	The unit is defined in the <b>Distance unit</b> parameter (→  125).

---


**Intermediate height**

---



<b>Navigation</b>	 Setup → Advanced setup → Linearization → Intermediate height
<b>Prerequisite</b>	<b>Linearization type</b> (→  146) has one of the following values: <ul style="list-style-type: none"> <li>■ Pyramid bottom</li> <li>■ Conical bottom</li> <li>■ Angled bottom</li> </ul>
<b>Description</b>	Height of the pyramid, conical or angled bottom.
<b>User entry</b>	0 to 200 m
<b>Factory setting</b>	0 m

## Additional information

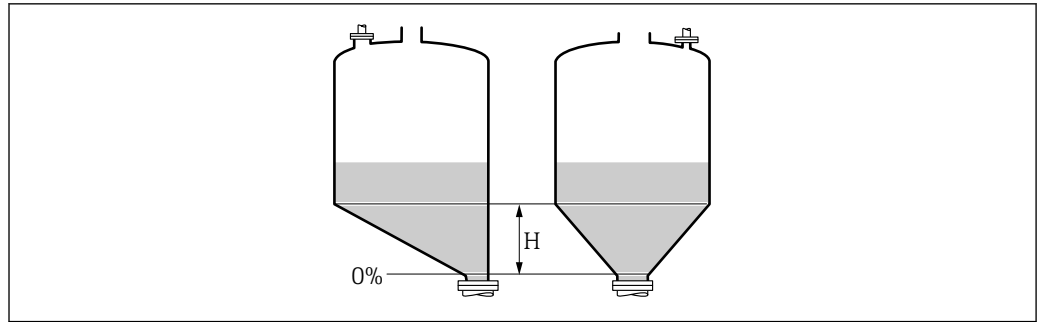

A0013264

$H$  Intermediate height

The unit is defined in the **Distance unit** parameter (→ 125).

## Table mode

## Navigation

Setup → Advanced setup → Linearization → Table mode

## Prerequisite

**Linearization type** (→ 146) = **Table**

## Description

Select editing mode of the linearization table.

## Selection

- Manual
- Semiautomatic
- Clear table
- Sort table

## Factory setting

Manual

## Additional information

**Meaning of the options**

- **Manual**  
The level and the associated linearized value are entered manually for each linearization point.
- **Semiautomatic**  
The level is measured by the device for each linearization point. The associated linearized value is entered manually.
- **Clear table**  
Deletes the existing linearization table.
- **Sort table**  
Rearranges the linearization points into an ascending order.







**Conditions the linearization table must meet:**

- The table may consist of up to 32 pairs of values "Level - Linearized Value".
- The table must be monotonic (monotonically increasing or decreasing).
- The first linearization point must refer to the minimum level.
- The last linearization point must refer to the maximum level.




Before entering a linearization table, the values for **Empty calibration** (→ 127) and **Full calibration** (→ 127) must be set correctly.

If values of the table need to be changed after the full or empty calibration have been changed, a correct evaluation is only ensured if the existing table is deleted and the complete table is entered again. To do so delete the existing table (**Table mode** (→ 150) = **Clear table**). Then enter a new table.





**How to enter the table**

- Via FieldCare  
The table points can be entered via the **Table number** (→ ) **151**), **Level** (→ ) **151**) and **Customer value** (→ ) **152**) parameters. As an alternative, the graphic table editor may be used: Device Operation → Device Functions → Additional Functions → Linearization (Online/Offline)
  - Via local display  
Select the **Edit table** submenu to call up the graphic table editor. The table is displayed and can be edited line by line.
-  The factory setting for the level unit is "%". If you want to enter the linearization table in physical units, you must select the appropriate unit in the **Level unit** parameter (→ ) **140**) beforehand.
-  If a decreasing table is entered, the values for 20 mA and 4 mA of the current output are interchanged. That means: 20 mA refers to the lowest level, whereas 4 mA refers to the highest level.

---

<b>Table number</b>	
<hr/>	
<b>Navigation</b>	 Setup → Advanced setup → Linearization → Table number
<b>Prerequisite</b>	<b>Linearization type</b> (→  ) <b>146</b> ) = Table
<b>Description</b>	Select table point you are going to enter or change.
<b>User entry</b>	1 to 32
<b>Factory setting</b>	1




---

<b>Level (Manual)</b>	
<hr/>	
<b>Navigation</b>	 Setup → Advanced setup → Linearization → Level
<b>Prerequisite</b>	<ul style="list-style-type: none"> <li>▪ <b>Linearization type</b> (→ ) <b>146</b>) = Table</li> <li>▪ <b>Table mode</b> (→ ) <b>150</b>) = Manual</li> </ul>
<b>Description</b>	Enter level value of the table point (value before linearization).
<b>User entry</b>	Signed floating-point number
<b>Factory setting</b>	0 %

---

**Level (Semiautomatic)**


---

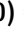

<b>Navigation</b>	 Setup → Advanced setup → Linearization → Level
<b>Prerequisite</b>	<ul style="list-style-type: none"> <li>▪ <b>Linearization type</b> (→  146) = <b>Table</b></li> <li>▪ <b>Table mode</b> (→  150) = <b>Semiautomatic</b></li> </ul>
<b>Description</b>	Displays measured level (value before linearization). This value is transmitted to the table.

---

**Customer value**


---






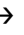

<b>Navigation</b>	 Setup → Advanced setup → Linearization → Customer value
<b>Prerequisite</b>	<b>Linearization type</b> (→  146) = <b>Table</b>
<b>Description</b>	Enter linearized value for the table point.
<b>User entry</b>	Signed floating-point number
<b>Factory setting</b>	0 %

---

**Activate table**



---





<b>Navigation</b>	  Setup → Advanced setup → Linearization → Activate table
<b>Prerequisite</b>	<b>Linearization type</b> (→  146) = <b>Table</b>
<b>Description</b>	Activate (enable) or deactivate (disable) the linearization table.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Disable</li> <li>▪ Enable</li> </ul>
<b>Factory setting</b>	Disable
<b>Additional information</b>	<p><b>Meaning of the options</b></p> <ul style="list-style-type: none"> <li>▪ <b>Disable</b> The measured level is not linearized. If <b>Linearization type</b> (→  146) = <b>Table</b> at the same time, the device issues error message F435.</li> <li>▪ <b>Enable</b> The measured level is linearized according to the table.</li> </ul> <p> When editing the table, the <b>Activate table</b> parameter is automatically reset to <b>Disable</b> and must be reset to <b>Enable</b> after the table has been entered.</p>



**"Safety settings" submenu**

Navigation  Setup → Advanced setup → Safety settings

**Output echo lost** 




**Navigation**  Setup → Advanced setup → Safety settings → Output echo lost


**Description** Output signal in case of a lost echo.

- Selection**
- Last valid value
  - Ramp at echo lost
  - Value echo lost
  - Alarm


**Factory setting** Last valid value

**Additional information** **Meaning of the options**

- **Last valid value**  
The last valid value is kept in the case of a lost echo.
- **Ramp at echo lost**<sup>8)</sup>  
In the case of a lost echo the output value is continuously shifted towards 0% or 100%. The slope of the ramp is defined in the **Ramp at echo lost** parameter (→  154).
- **Value echo lost**<sup>8)</sup>  
In the case of a lost echo the output assumes the value defined in the **Value echo lost** parameter (→  153).
- **Alarm**  
In the case of a lost echo the device generates an alarm; see the **Failure mode** parameter (→  160)

**Value echo lost** 

**Navigation**  Setup → Advanced setup → Safety settings → Value echo lost



**Prerequisite** **Output echo lost** (→  153) = **Value echo lost**

**Description** Output value in case of a lost echo

**User entry** 0 to 200 000.0 %

**Factory setting** 0.0 %

**Additional information** Use the unit which has been defined for the measured value output:

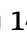- without linearization: **Level unit** (→  140)
- with linearization: **Unit after linearization** (→  147)

8) Only visible if "Linearization type (→  146)" = "None"

**Ramp at echo lost**



**Navigation**                      Setup → Advanced setup → Safety settings → Ramp at echo lost


**Prerequisite**                      **Output echo lost (→ 153) = Ramp at echo lost**

**Description**                      Slope of the ramp in the case of a lost echo

**User entry**                        Signed floating-point number

**Factory setting**                   0.0 %/min

**Additional information**

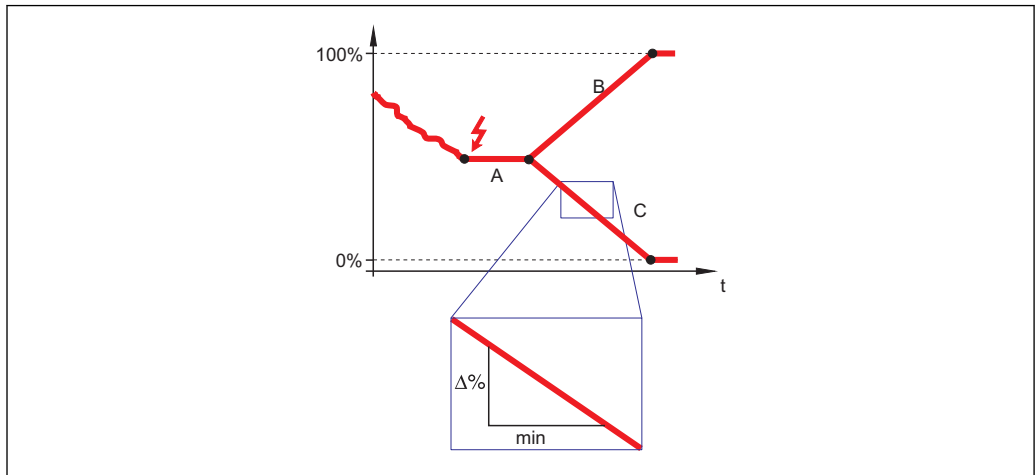

A0013269

- A    Delay time echo lost
- B    Ramp at echo lost (→ 154) (positive value)
- C    Ramp at echo lost (→ 154) (negative value)

- The unit for the slope of the ramp is "percentage of the measuring range per minute" (%/min).
- For a negative slope of the ramp: The measured value is continuously decreased until it reaches 0%.
- For a positive slope of the ramp: The measured value is continuously increased until it reaches 100%.

**Blocking distance**



**Navigation**                      Setup → Advanced setup → Safety settings → Blocking distance

**Description**                      Specify blocking distance BD.

**User entry**                        0 to 200 m

**Factory setting**                   FMR50, FMR51, FMR53, FMR54: antenna length


**Additional information**           Signals in the blocking distance are only evaluated if they have been outside the blocking distance when the device was switched on and move into the blocking distance due to a

level change during operation. Signals which are already in the blocking distance when the device is switched on, are ignored.

- i** This behavior is only valid if the following two conditions are met:
- Expert → Sensor → Echo tracking → Evaluation mode = **Short time history** or **Long time history**
  - Expert → Sensor → Gas phase compensation → GPC mode= **On, Without correction** or **External correction**

If one of these conditions is not met, signals in the blocking distance will always be ignored.


- i** If required, a different behavior for signals in the blocking distance can be defined by the Endress+Hauser service.

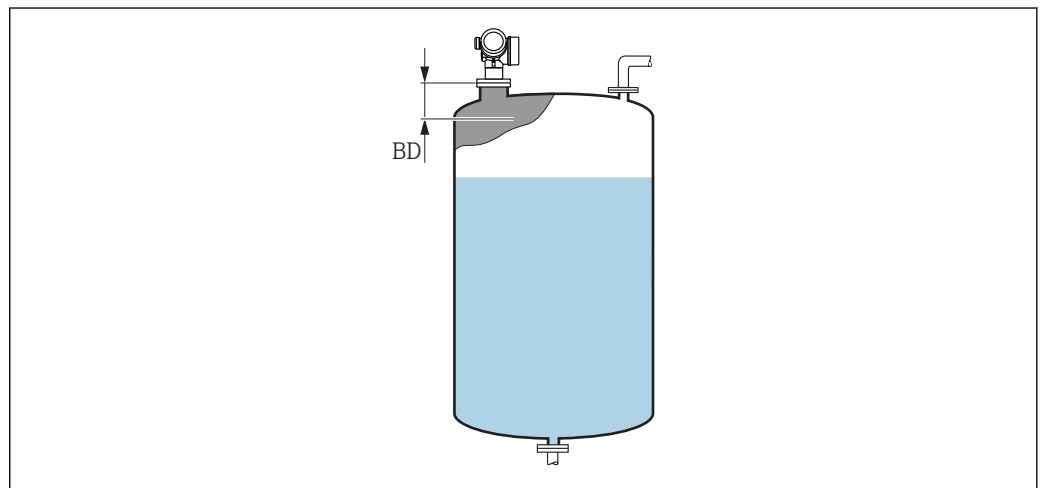

A0019492

**i** 53 Blocking distance (BD) for liquid measurements

**"SIL/WHG confirmation" wizard**

 The **SIL/WHG confirmation** wizard is only available for devices with SIL or WHG approval (Feature 590: "Additional Approval", option LA: "SIL" or LC: "WHG overflow prevention" ) which are currently **not** in the SIL- or WHG-locked state.

The **SIL/WHG confirmation** wizard is required to lock the device according to SIL or WHG. For details refer to the "Functional Safety Manual" of the respective device, which describes the locking procedure and the parameters of the sequence.

*Navigation*

 Setup → Advanced setup → SIL/WHG confirmation

**"Deactivate SIL/WHG" wizard**

The **Deactivate SIL/WHG** wizard (→ 157) is only visible if the device is SIL-locked or WHG-locked. For details refer to the "Functional Safety Manual" of the respective device.

*Navigation*      Setup → Advanced setup → Deactivate SIL/WHG



**Reset write protection**

<b>Navigation</b>	Setup → Advanced setup → Deactivate SIL/WHG → Reset write protection
<b>Description</b>	Enter unlocking code.
<b>User entry</b>	0 to 65 535
<b>Factory setting</b>	0

**Code incorrect**


<b>Navigation</b>	Setup → Advanced setup → Deactivate SIL/WHG → Code incorrect
<b>Description</b>	Indicates that a wrong unlocking code has been entered. Select procedure.
<b>Selection</b>	<ul style="list-style-type: none"> <li>■ Reenter code</li> <li>■ Abort sequence</li> </ul>
<b>Factory setting</b>	Reenter code

**"Current output 1 to 2" submenu**


 The **Current output 2** submenu (→  158) is only available for devices with two current outputs.

*Navigation*       Setup → Advanced setup → Current output 1 to 2

---

**Assign current output 1 to 2** 

---


**Navigation**       Setup → Advanced setup → Current output 1 to 2 → Assign current output



**Description**      Select process variable for current output.


- Selection**
- Level linearized
  - Distance
  - Electronic temperature
  - Relative echo amplitude
  - Analog output adv. diagnostics 1
  - Analog output adv. diagnostics 2
  - Area of incoupling

- Factory setting**
- Current output 1: Level linearized
  - Current output 2 <sup>9)</sup>: Level linearized

**Additional information**      *Definition of the current range for the process variables*

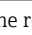Process variable	4 mA value	20 mA value
Level linearized	0 % <sup>1)</sup> or the associated linearized value	100 % <sup>2)</sup> or the associated linearized value
Distance	0 (i.e. level is at the reference point)	<b>Empty calibration</b> (→  127) (i.e. level is at 0 %)
Electronic temperature	-50 °C (-58 °F)	100 °C (212 °F)
Relative echo amplitude	0 dB	150 dB
Analog output adv. diagnostics 1/2	depending on the parametrization of the Advanced Diagnostics	
Area of incoupling	0	100

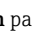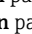- 1) the 0% level is defined by **Empty calibration** parameter (→  127)  
 2) The 100% level is defined by **Full calibration** parameter (→  127)

 It may be necessary to adjust the 4mA and 20mA values to the application (especially in the case of the **Analog output adv. diagnostics 1/2** and **Area of incoupling** options).

This can be done by the following parameters:

- Expert → Output → Current output 1 to 2 → Turn down
- Expert → Output → Current output 1 to 2 → 4 mA value
- Expert → Output → Current output 1 to 2 → 20 mA value

---

9) only for devices with two current outputs

**Current span**



**Navigation**

Setup → Advanced setup → Current output 1 to 2 → Current span

**Description**

Determines the current range used to transmit the measured value. '4...20mA': Measured variable: 4 ...20 mA '4...20mA NAMUR': Measured variable: 3.8 ... 20.5 mA '4...20mA US': Measured variable: 3.9 ... 20.8 mA 'Fixed current': Measured variable transmitted via HART only Note: Currents below 3.6 mA or above 21.95 mA can be used to signal an alarm.

**Selection**

- 4...20 mA
- 4...20 mA NAMUR
- 4...20 mA US
- Fixed current

**Factory setting**

4...20 mA NAMUR

**Additional information**

*Meaning of the options*

Option	Current range for process variable	Lower alarm signal level	Upper alarm signal level
4...20 mA	4 to 20.5 mA	< 3.6 mA	> 21.95 mA
4...20 mA NAMUR	3.8 to 20.5 mA	< 3.6 mA	> 21.95 mA
4...20 mA US	3.9 to 20.8 mA	< 3.6 mA	> 21.95 mA
Fixed current	Constant current, defined in the <b>Fixed current</b> parameter (→  159).		

- In the case of an error, the output current assumes the value defined in the **Failure mode** parameter (→ 160).
- If the measured value is out of the measuring range, diagnostic message **Current output** is issued.
- In a HART multidrop loop only one device can use the analog current to transmit a signal. For all other devices one must set:
  - **Current span = Fixed current**
  - **Fixed current (→ 159) = 4 mA**

**Fixed current**



**Navigation**

Setup → Advanced setup → Current output 1 to 2 → Fixed current

**Prerequisite**

**Current span (→ 159) = Fixed current**

**Description**

Define constant value of the output current.

**User entry**

4 to 22.5 mA

**Factory setting**

4 mA

---

**Damping output**


<b>Navigation</b>	Setup → Advanced setup → Current output 1 to 2 → Damping output
<b>Description</b>	Reaction time of the output signal on fluctuation in the measured value.
<b>User entry</b>	0.0 to 999.9 s
<b>Factory setting</b>	0.0 s
<b>Additional information</b>	Fluctuations of the measured value affect the output current with an exponential delay, the time constant $\tau$ of which is defined in this parameter. With a small time constant the output reacts immediately to changes of the measured value. With a big time constant the reaction of the output is more delayed. For $\tau = 0$ (factory setting) there is no damping.

---

**Failure mode**


<b>Navigation</b>	Setup → Advanced setup → Current output 1 to 2 → Failure mode
<b>Prerequisite</b>	<b>Current span</b> (→  159) ≠ <b>Fixed current</b>
<b>Description</b>	Defines which current the output assumes in the case of an error. 'Min.': < 3.6mA 'Max.': > 21.95mA 'Last valid value': Last valid value before occurrence of the error. 'Actual value': Output current is equal to the measured value; error is ignored. 'Defined value': User defined value.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Min.</li> <li>▪ Max.</li> <li>▪ Last valid value</li> <li>▪ Actual value</li> <li>▪ Defined value</li> </ul>
<b>Factory setting</b>	Max.
<b>Additional information</b>	<p><b>Meaning of the options</b></p> <ul style="list-style-type: none"> <li>▪ <b>Min.</b> The current output adopts the value of the lower alarm level according to the <b>Current span</b> parameter (→  159).</li> <li>▪ <b>Max.</b> The current output adopts the value of the upper alarm level according to the <b>Current span</b> parameter (→  159).</li> <li>▪ <b>Last valid value</b> The current remains constant at the last value it had before the error occurred.</li> <li>▪ <b>Actual value</b> The output current follows the actual measured value; the error is ignored.</li> <li>▪ <b>Defined value</b> The output current assumes the value defined in the <b>Failure current</b> parameter (→  161).</li> </ul> <p> The error behavior of other output channels is not influenced by these settings but is defined in separate parameters.</p>



---

**Failure current**

---



<b>Navigation</b>	Setup → Advanced setup → Current output 1 to 2 → Failure current
<b>Prerequisite</b>	<b>Failure mode (→  160) = Defined value</b>
<b>Description</b>	Defines which current the output assumes in case of an error.
<b>User entry</b>	3.59 to 22.5 mA
<b>Factory setting</b>	22.5 mA



---


**Output current 1 to 2**

---


<b>Navigation</b>	Setup → Advanced setup → Current output 1 to 2 → Output current 1 to 2
<b>Description</b>	Shows the actual calculated value of the output current.

**"Switch output" submenu**

 The **Switch output** submenu (→  162) is only visible for devices with switch output.<sup>10)</sup>

*Navigation*  Setup → Advanced setup → Switch output

**Switch output function****Navigation**

 Setup → Advanced setup → Switch output → Switch output function

**Description**

Defines the function of the switch output. 'Off' The switch output is always open (non-conductive) 'On' The switch output is always closed (conductive). 'Diagnostic behavior' The switch output is normally closed and is only opened if a diagnostic event is present. 'Limit' The switch output is normally closed and is only opened if a measured variable exceeds a defined limit. 'Digital output' The switch output is controlled by one of the digital output blocks of the device.






**Selection**


- Off
- On
- Diagnostic behavior
- Limit
- Digital Output

**Factory setting**

Off

**Additional information****Meaning of the options**

- **Off**  
The output is always open (non-conductive).
- **On**  
The output is always closed (conductive).
- **Diagnostic behavior**  
The output is normally closed and is only opened if a diagnostic event is present. The **Assign diagnostic behavior** parameter (→  163) determines for which type of event the output is opened.
- **Limit**  
The output is normally closed and is only opened if a measured variable exceeds or falls below a defined limit. The limit values are defined by the following parameters:
  - **Assign limit** (→  163)
  - **Switch-on value** (→  164)
  - **Switch-off value** (→  165)
- **Digital Output**  
The switching state of the output tracks the output value of a DI function block. The function block is selected in the **Assign status** parameter (→  163).

 The **Off** and **On** options can be used to simulate the switch output.

<sup>10)</sup> Ordering feature 020 "Power supply; Output", option B, E or G

---

**Assign status**
**Navigation**

Setup → Advanced setup → Switch output → Assign status

**Prerequisite****Switch output function (→ 162) = Digital Output****Selection**

- Off
- Digital output AD 1
- Digital output AD 2

**Factory setting**

Off

**Additional information**

The **Digital output AD 1** and **Digital output AD 2** options refer to the Advanced Diagnostic Blocks. A switch signal generated in these blocks can be transmitted via the switch output.

---

**Assign limit**
**Navigation**

Setup → Advanced setup → Switch output → Assign limit

**Prerequisite****Switch output function (→ 162) = Limit****Selection**

- Off
- Level linearized
- Distance
- Terminal voltage
- Electronic temperature
- Relative echo amplitude
- Area of incoupling

**Factory setting**

Off

---

**Assign diagnostic behavior**
**Navigation**

Setup → Advanced setup → Switch output → Assign diagnostic behavior

**Prerequisite****Switch output function (→ 162) = Diagnostic behavior****Description**

Defines to which behavior of diagnostic events the switch output reacts.

**Selection**

- Alarm
- Alarm or warning
- Warning

**Factory setting**

Alarm

## Switch-on value



## Navigation

Setup → Advanced setup → Switch output → Switch-on value

## Prerequisite

**Switch output function** (→ 162) = **Limit**

## Description

Defines the switch-on point. The output is closed if the assigned process variable rises above this point.

## User entry

Signed floating-point number

## Factory setting


0

## Additional information

The switching behavior depends on the relative position of the **Switch-on value** and **Switch-off value** parameters:

**Switch-on value > Switch-off value**

- The output is closed if the measured value is larger than **Switch-on value**.
- The output is opened if the measured value is smaller than **Switch-off value**.

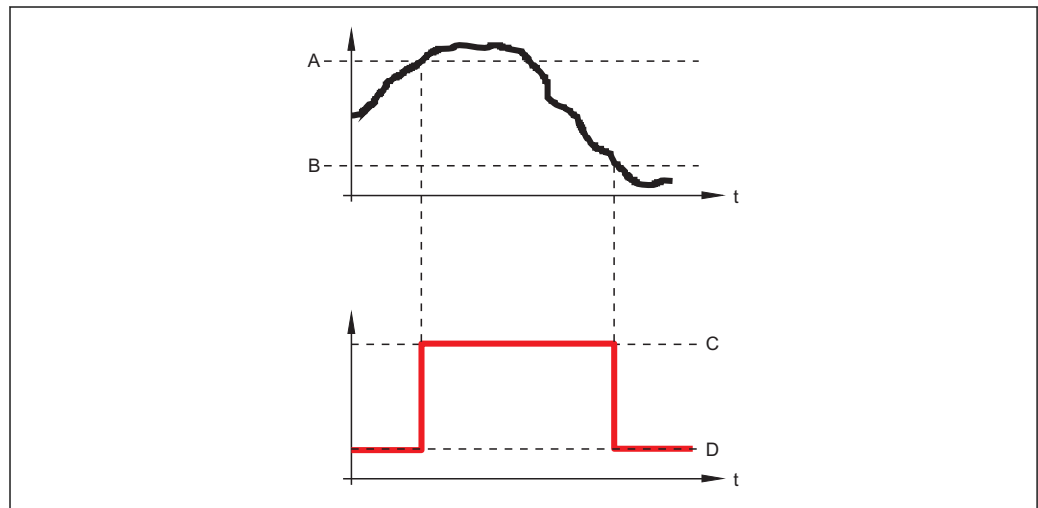


A0015585

- A *Switch-on value*
- B *Switch-off value*
- C *Output closed (conductive)*
- D *Output opened (non-conductive)*

**Switch-on value < Switch-off value**

- The output is closed if the measured value is smaller than **Switch-on value**.
- The output is opened if the measured value is larger than **Switch-off value**.

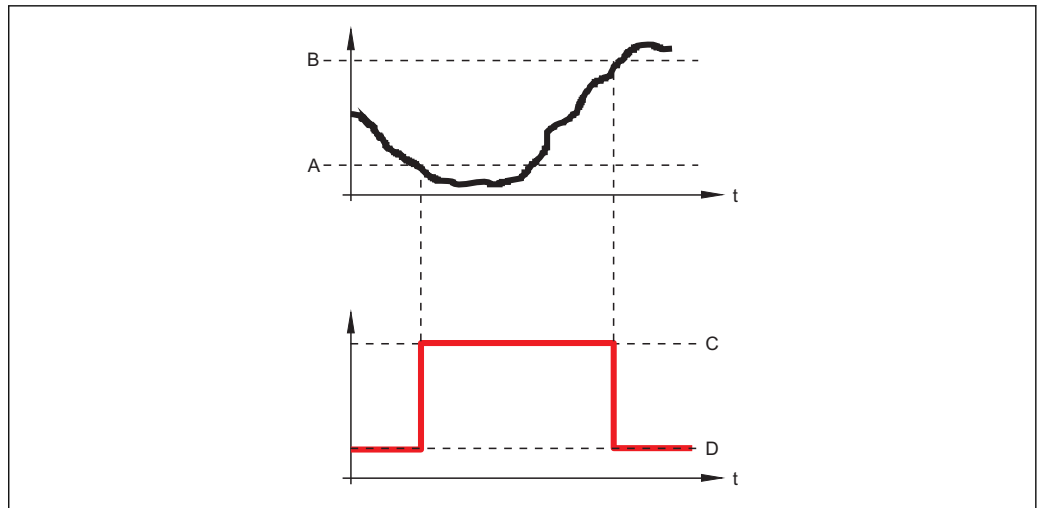

A0015586

- A Switch-on value
- B Switch-off value
- C Output closed (conductive)
- D Output opened (non-conductive)

**Switch-on delay**



**Navigation**      Setup → Advanced setup → Switch output → Switch-on delay

**Prerequisite**      **▪ Switch output function (→ 162) = Limit**  
**▪ Assign limit (→ 163) ≠ Off**

**Description**      Defines the delay applied before the output is switched on.

**User entry**      0.0 to 100.0 s

**Factory setting**      0.0 s

**Switch-off value**



**Navigation**      Setup → Advanced setup → Switch output → Switch-off value

**Prerequisite**      **Switch output function (→ 162) = Limit**

**Description**      Defines the switch-off point. The output is opened if the assigned process variable falls below this point.

**User entry**      Signed floating-point number


**Factory setting**      0





**Additional information**      The switching behavior depends on the relative position of the **Switch-on value** and **Switch-off value** parameters; description: see the **Switch-on value** parameter (→ 164).

---

**Switch-off delay**

---






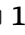
<b>Navigation</b>	  Setup → Advanced setup → Switch output → Switch-off delay
<b>Prerequisite</b>	<ul style="list-style-type: none"> <li>▪ <b>Switch output function</b> (→  162) = <b>Limit</b></li> <li>▪ <b>Assign limit</b> (→  163) ≠ <b>Off</b></li> </ul>
<b>Description</b>	Defines the delay applied before the output is switched off.
<b>User entry</b>	0.0 to 100.0 s
<b>Factory setting</b>	0.0 s

---

**Failure mode**

---





<b>Navigation</b>	  Setup → Advanced setup → Switch output → Failure mode
<b>Prerequisite</b>	<b>Switch output function</b> (→  162) = <b>Limit</b> or <b>Digital Output</b>
<b>Description</b>	Defines the state of the switch output in case of an error.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Actual status</li> <li>▪ Open</li> <li>▪ Closed</li> </ul>
<b>Factory setting</b>	Open

**Additional information**

---

**Switch status**


---



<b>Navigation</b>	  Setup → Advanced setup → Switch output → Switch status
<b>Description</b>	Current status of the switch output.

---

**Invert output signal**

---



<b>Navigation</b>	  Setup → Advanced setup → Switch output → Invert output signal
<b>Description</b>	'No' The switch output behaves as per its parameter setting. 'Yes' The switching behavior is inverted as compared to its parameter setting.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ No</li> <li>▪ Yes</li> </ul>

**Factory setting**


No


**Additional information****Meaning of the options**■ **No**

The behavior of the switch output is as described above.


■ **Yes**The states **Open** and **Closed** are inverted as compared to the description above.

**"Display" submenu**

 The **Display** submenu is only visible if a display module is connected to the device.

*Navigation*       Setup → Advanced setup → Display

**Language****Navigation**

 Setup → Advanced setup → Display → Language

**Description**

Set display language.

**Selection**

- English
- Deutsch \*
- Français \*
- Español \*
- Italiano \*
- Nederlands \*
- Portuguesa \*
- Polski \*
- русский язык (Russian) \*
- Svenska \*
- Türkçe \*
- 中文 (Chinese) \*
- 日本語 (Japanese) \*
- 한국어 (Korean) \*
- Bahasa Indonesia \*
- tiếng Việt (Vietnamese) \*
- čeština (Czech) \*

**Factory setting**

The language selected in feature 500 of the product structure.  
If no language has been selected: **English**

**Additional information****Format display****Navigation**

 Setup → Advanced setup → Display → Format display

**Description**

Select how measured values are shown on the display.

**Selection**

- 1 value, max. size
- 1 bargraph + 1 value
- 2 values
- 1 value large + 2 values
- 4 values


**Factory setting**

1 value, max. size

\* Visibility depends on order options or device settings




Additional information

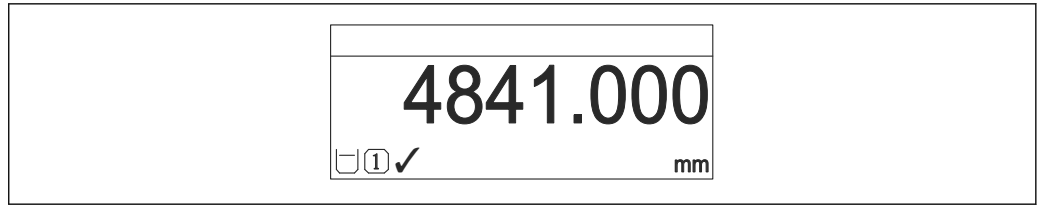


A0019963

54 "Format display" = "1 value, max. size"

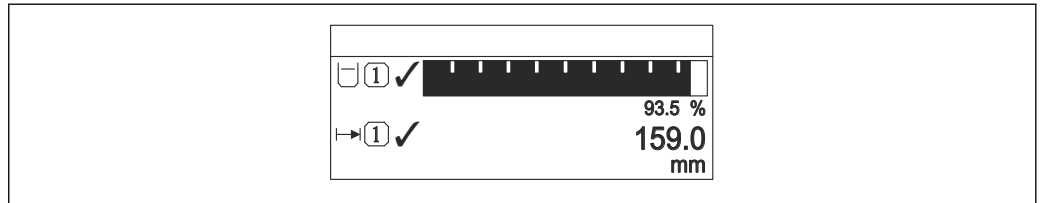


A0019964

55 "Format display" = "1 bargraph + 1 value"

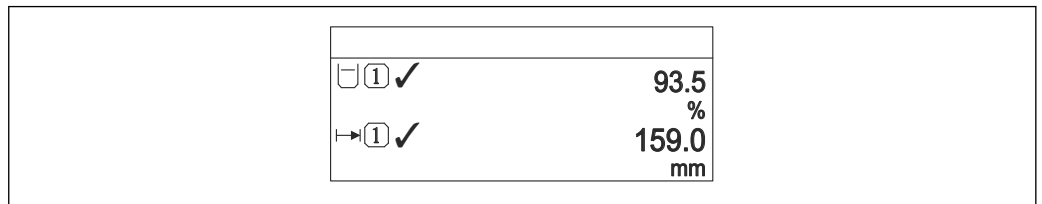


A0019965

56 "Format display" = "2 values"

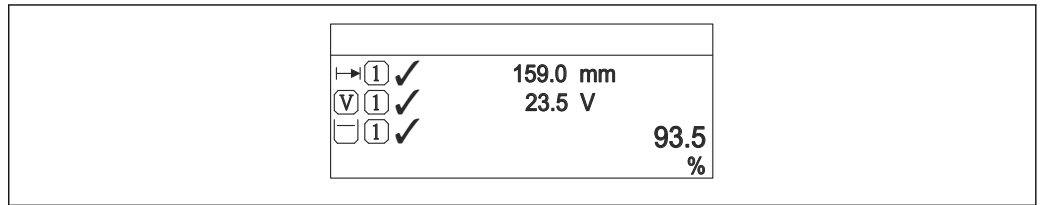

A0019966

57 "Format display" = "1 value large + 2 values"

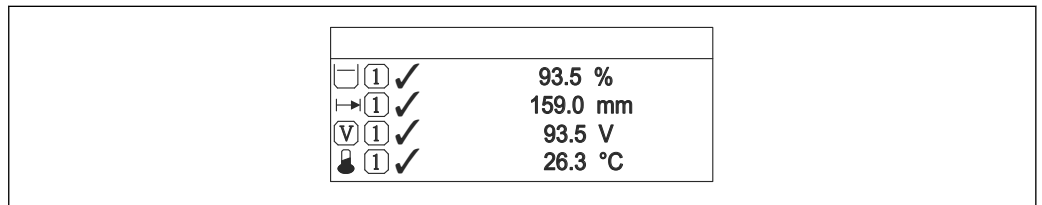

A0019968

58 "Format display" = "4 values"

- i
■
**The Value 1 to 4 display** → 170 parameters specify which measured values are shown on the display and in which order.
- If more measured values are specified than the current display mode permits, the values alternate on the device display. The display time until the next change is configured in the **Display interval** parameter (→ 170).

---

**Value 1 to 4 display**


**Navigation** Setup → Advanced setup → Display → Value 1 display

**Description** Select the measured value that is shown on the local display.

**Selection**

- Level linearized
- Distance
- Current output 1
- Measured current
- Current output 2 \*
- Terminal voltage
- Electronic temperature
- Absolute echo amplitude
- Relative echo amplitude
- Analog output adv. diagnostics 1
- Analog output adv. diagnostics 2
- Area of incoupling

**Factory setting**

- Value 1 display: Level linearized
- Value 2 display: None
- Value 3 display: None
- Value 4 display: None

---

**Decimal places 1 to 4**


**Navigation** Setup → Advanced setup → Display → Decimal places 1

**Description** This selection does not affect the measurement and calculation accuracy of the device.

**Selection**

- x
- x.x
- x.xx
- x.xxx
- x.xxxx

**Factory setting** x.xx

**Additional information** The setting does not affect the measuring or computational accuracy of the device.

---

**Display interval**

**Navigation** Setup → Advanced setup → Display → Display interval

**Description** Set time measured values are shown on display if display alternates between values.


**User entry** 1 to 10 s



---

\* Visibility depends on order options or device settings

**Factory setting** 5 s

**Additional information** This parameter is only relevant if the number of selected measuring values exceeds the number of values the selected display format can display simultaneously.

**Display damping** 

**Navigation**   Setup → Advanced setup → Display → Display damping

**Description** Set display reaction time to fluctuations in the measured value.

**User entry** 0.0 to 999.9 s

**Factory setting** 0.0 s

**Header** 

**Navigation**   Setup → Advanced setup → Display → Header


**Description** Select header contents on local display.

**Selection**

- Device tag
- Free text

**Factory setting** Device tag

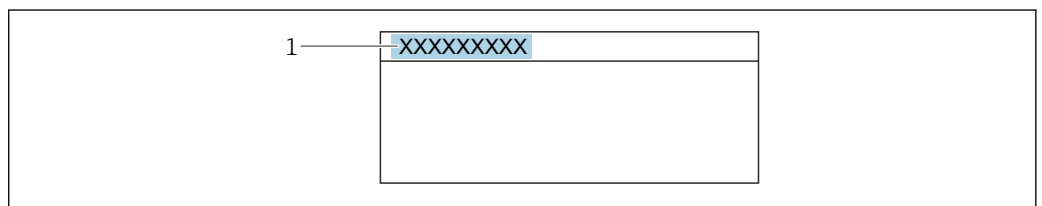

**Additional information**






A0029422

1 Position of the header text on the display

*Meaning of the options*

- **Device tag**  
Is defined in the **Device tag** parameter (→  125)
- **Free text**  
Is defined in the **Header text** parameter (→  171)

**Header text** 

**Navigation**   Setup → Advanced setup → Display → Header text

**Prerequisite** **Header** (→  171) = **Free text**

<b>Description</b>	Enter display header text.
<b>Factory setting</b>	-----
<b>Additional information</b>	The number of characters which can be displayed depends on the characters used.

---

**Separator**


<b>Navigation</b>	Setup → Advanced setup → Display → Separator
<b>Description</b>	Select decimal separator for displaying numerical values.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ .</li> <li>▪ ,</li> </ul>
<b>Factory setting</b>	.

---


**Number format**


<b>Navigation</b>	Setup → Advanced setup → Display → Number format
<b>Description</b>	Choose number format for the display.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Decimal</li> <li>▪ ft-in-1/16"</li> </ul>
<b>Factory setting</b>	Decimal
<b>Additional information</b>	The <b>ft-in-1/16"</b> option is only valid for distance units.

---

**Decimal places menu**





<b>Navigation</b>	Setup → Advanced setup → Display → Decimal places menu
<b>Description</b>	Select number of decimal places for the representation of numbers within the operating menu.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ x</li> <li>▪ x.x</li> <li>▪ x.xx</li> <li>▪ x.xxx</li> <li>▪ x.xxxx</li> </ul>
<b>Factory setting</b>	x.xxxx

- Additional information**
- Is only valid for numbers in the operating menu (e.g. **Empty calibration**, **Full calibration**), but not for the measured value display. The number of decimal places for the measured value display is defined in the **Decimal places 1 to 4** →  170 parameters.
  - The setting does not affect the accuracy of the measurement or the calculations.

---

## Backlight








---

- Navigation**   Setup → Advanced setup → Display → Backlight
- Prerequisite** The device has the SD03 local display (with optical keys).
- Description** Switch the local display backlight on and off.
- Selection**
- Disable
  - Enable
- Factory setting** Disable
- Additional information**
- Meaning of the options**
- **Disable**  
Switches the backlight off.
  - **Enable**  
Switches the backlight on.
-  Regardless of the setting in this parameter the backlight may be automatically switched off by the device if the supply voltage is too low.


---

## Contrast display


---

- Navigation**   Setup → Advanced setup → Display → Contrast display
- Description** Adjust local display contrast setting to ambient conditions (e.g. lighting or reading angle).
- User entry** 20 to 80 %
- Factory setting** Dependent on the display.
- Additional information**
-  Setting the contrast via push-buttons:
- Darker: press the   buttons simultaneously.
  - Brighter: press the   buttons simultaneously.


**"Configuration backup display" submenu**

 This submenu is only visible if a display module is connected to the device.


The configuration of the device can be saved to the display module at a certain point of time (backup). The saved configuration can be restored to the device if required, e.g. in order to bring the device back into a defined state. The configuration can also be transferred to a different device of the same type using the display module.

*Navigation*       Setup → Advanced setup → Configuration backup display


**Operating time**

<b>Navigation</b>	 Setup → Advanced setup → Configuration backup display → Operating time
<b>Description</b>	Indicates how long the device has been in operation.
<b>Additional information</b>	<i>Maximum time</i> 9999 d ( ≈ 27 years)

**Last backup**

<b>Navigation</b>	 Setup → Advanced setup → Configuration backup display → Last backup
<b>Description</b>	Indicates when the last data backup was saved to the display module.

**Configuration management**

<b>Navigation</b>	 Setup → Advanced setup → Configuration backup display → Configuration management
<b>Description</b>	Select action for managing the device data in the display module.
<b>Selection</b>	<ul style="list-style-type: none"> <li>■ Cancel</li> <li>■ Execute backup</li> <li>■ Restore</li> <li>■ Duplicate</li> <li>■ Compare</li> <li>■ Clear backup data</li> </ul>
<b>Factory setting</b>	Cancel

**Additional information****Meaning of the options**■ **Cancel**

No action is executed and the user exits the parameter.

■ **Execute backup**

A backup copy of the current device configuration in the HistoROM (built-in in the device) is saved to the display module of the device.

■ **Restore**


The last backup copy of the device configuration is copied from the display module to the HistoROM of the device.

■ **Duplicate**

The transmitter configuration is duplicated to another device using the transmitter display module. The following parameters, which characterize the individual measuring point are **not** included in the transmitted configuration:

- HART date code
- HART short tag
- HART message
- HART descriptor
- HART address
- Device tag
- Medium type

■ **Compare**

The device configuration saved in the display module is compared to the current device configuration of the HistoROM. The result of this comparison is displayed in the **Comparison result** parameter (→  175).

■ **Clear backup data**

The backup copy of the device configuration is deleted from the display module of the device.



While this action is in progress, the configuration cannot be edited via the local display and a message on the processing status appears on the display.



If an existing backup is restored to a different device using the **Restore** option, it may occur that some device functionalities are no longer available. In some cases even a device reset will not restore the original status.


In order to transmit a configuration to a different device, the **Duplicate** option should always be used.

---

**Backup state**

---

**Navigation**

 Setup → Advanced setup → Configuration backup display → Backup state

**Description**

Displays which backup action is currently in progress.

---

**Comparison result**

---

**Navigation**

  Setup → Advanced setup → Configuration backup display → Comparison result

**Description**

Comparison between present device data and display backup.

**Additional information****Meaning of the display options****■ Settings identical**

The current device configuration of the HistoROM is identical to the backup copy in the display module.

**■ Settings not identical**

The current device configuration of the HistoROM is not identical to the backup copy in the display module.

**■ No backup available**

There is no backup copy of the device configuration of the HistoROM in the display module.

**■ Backup settings corrupt**

The current configuration of the HistoROM is corrupt or not compatible with the backup copy in the display module.


**■ Check not done**

The device configuration of the HistoROM has not yet been compared to the backup copy in the display module.


**■ Dataset incompatible**

The data sets are incompatible and can not be compared.




To start the comparison, set **Configuration management** (→  174) = **Compare**.




If the transmitter configuration has been duplicated from a different device by **Configuration management** (→  174) = **Duplicate**, the new device configuration in the HistoROM is only partially identical to the configuration stored in the display module: Sensor specific properties (e.g. the mapping curve) are not duplicated. Thus, the result of the comparison will be **Settings not identical**.



**"Administration" submenu**

Navigation  Setup → Advanced setup → Administration

**Define access code** 




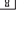





**Navigation**  Setup → Advanced setup → Administration → Define access code

**Description** Define release code for write access to parameters.

**User entry** 0 to 9999

**Factory setting** 0

**Additional information**

-  If the factory setting is not changed or 0 is defined as the access code, the parameters are not write-protected and the configuration data of the device can then always be modified. The user is logged on in the *Maintenance* role.
-  The write protection affects all parameters marked with the  symbol in this document. On the local display, the  symbol in front of a parameter indicates that the parameter is write-protected.
-  Once the access code has been defined, write-protected parameters can only be modified if the access code is entered in the **Enter access code** parameter (→  136).
-  Please contact your Endress+Hauser Sales Center if you lose your access code.
-  For display operation: The new access code is only valid after it has been confirmed in the **Confirm access code** parameter (→  179).

**Device reset** 

**Navigation**   Setup → Advanced setup → Administration → Device reset

**Description** Reset the device configuration - either entirely or in part - to a defined state.

**Selection**

- Cancel
- To factory defaults
- To delivery settings
- Of customer settings
- To transducer defaults
- Restart device

**Factory setting** Cancel

**Additional information****Meaning of the options****■ Cancel**

No action

**■ To factory defaults**

All parameters are reset to the order-code specific factory setting.

**■ To delivery settings**

All parameters are reset to the delivery setting. The delivery setting may differ from the factory default if customer specific settings have been ordered.

This option is only visible if customer specific settings have been ordered.

**■ Of customer settings**

All customer parameters are reset to their factory setting. Service parameters, however, remain unchanged.


**■ To transducer defaults**

Every measurement-related parameter is reset to its factory setting. Service parameters and communication-related parameters, however, remain unchanged.

**■ Restart device**

The restart resets every parameter which is stored in the volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.


*"Define access code" wizard*

 The **Define access code** wizard is only available when operating via the local display. When operating via an operating tool, the **Define access code** parameter is located directly in the **Administration** submenu. The **Confirm access code** parameter is not available for operation via operating tool.

*Navigation*  Setup → Advanced setup → Administration → Define access code


---

**Define access code** 

**Navigation**  Setup → Advanced setup → Administration → Define access code → Define access code

**Description** →  177

---

**Confirm access code** 

**Navigation**  Setup → Advanced setup → Administration → Define access code → Confirm access code

**Description** Confirm the entered access code.

**User entry** 0 to 9999

**Factory setting** 0

## 17.5 "Diagnostics" menu

Navigation  Diagnostics

---

### Actual diagnostics


---


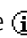
**Navigation**  Diagnostics → Actual diagnostics

**Description** Displays current diagnostic message.

**Additional information** The display consists of:

- Symbol for event behavior
- Code for diagnostic behavior
- Operating time of occurrence
- Event text

 If several messages are active at the same time, the messages with the highest priority is displayed.

 Information on what is causing the message, and remedy measures, can be viewed via the  symbol on the display.

---

### Timestamp

---

**Navigation**  Diagnostics → Timestamp

**Description** Displays the timestamp for the currently active diagnostic message.

---

### Previous diagnostics


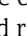
---

**Navigation**  Diagnostics → Previous diagnostics

**Description** Displays the last diagnostic message which has been active before the current message.

**Additional information** The display consists of:

- Symbol for event behavior
- Code for diagnostic behavior
- Operating time of occurrence
- Event text

 The condition displayed may still apply. Information on what is causing the message, and remedy measures, can be viewed via the  symbol on the display.

---

**Timestamp**

---

**Navigation**  Diagnostics → Timestamp

**Description** Shows the timestamp of the previous diagnostic message.

---

**Operating time from restart**

---

**Navigation**   Diagnostics → Operating time from restart

**Description** Displays the time the device has been in operation since the last device restart.

---

**Operating time**

---

**Navigation**   Diagnostics → Operating time

**Description** Indicates how long the device has been in operation.

**Additional information** *Maximum time*  
9999 d ( ≈ 27 years)


### 17.5.1 "Diagnostic list" submenu

*Navigation*       Diagnostics → Diagnostic list

---

#### Diagnostics 1 to 5


---

<b>Navigation</b>	 Diagnostics → Diagnostic list → Diagnostics 1
<b>Description</b>	Display the current diagnostics messages with the highest to fifth-highest priority.
<b>Additional information</b>	The display consists of: <ul style="list-style-type: none"><li>■ Symbol for event behavior</li><li>■ Code for diagnostic behavior</li><li>■ Operating time of occurrence</li><li>■ Event text</li></ul>


---

#### Timestamp 1 to 5

---

<b>Navigation</b>	 Diagnostics → Diagnostic list → Timestamp
<b>Description</b>	Timestamp of the diagnostic message.



### 17.5.2 "Event logbook" submenu

 The **Event logbook** submenu is only available when operating via the local display. When operating via FieldCare, the event list can be displayed in the FieldCare function "Event List / HistoROM".


*Navigation*  Diagnostics → Event logbook

---



#### Filter options



<b>Navigation</b>	 Diagnostics → Event logbook → Filter options
<b>Description</b>	Define which category of event messages is shown in the Events list submenu.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ All</li> <li>▪ Failure (F)</li> <li>▪ Function check (C)</li> <li>▪ Out of specification (S)</li> <li>▪ Maintenance required (M)</li> <li>▪ Information (I)</li> </ul>
<b>Factory setting</b>	All
<b>Additional information</b>	 <ul style="list-style-type: none"> <li>▪ This parameter is only used for operation via the local display.</li> <li>▪ The status signals are categorized according to NAMUR NE 107.</li> </ul>

#### "Event list" submenu

The **Event list** submenu displays the history of past events of the category selected in the **Filter options** parameter (→  183). A maximum of 100 events are displayed in chronological order.

The following symbols indicate whether an event has occurred or has ended:

- : Event has occurred
- : Event has ended

 Information on what is causing the message, and remedy instructions, can be viewed via the -button.

#### Display format

- For event messages in category I: information event, event text, "recording event" symbol and time the event occurred
- For event messages in category F, M, C, S (status signal): diagnostics event, event text, "recording event" symbol and time the event occurred

*Navigation*  Diagnostics → Event logbook → Event list

### 17.5.3 "Device information" submenu

Navigation  Diagnostics → Device information

---

#### Device tag

---

**Navigation**  Diagnostics → Device information → Device tag


**Description** Enter the name for the measuring point.

**Factory setting** FMR5x


---

#### Serial number


---

**Navigation**  Diagnostics → Device information → Serial number

**Description** Shows the serial number of the measuring device.

**Additional information**  **Uses of the serial number**

- To identify the device quickly, e.g. when contacting Endress+Hauser.
- To obtain specific information on the device using the Device Viewer:  
[www.endress.com/deviceviewer](http://www.endress.com/deviceviewer)

 The serial number is also indicated on the nameplate.

---


#### Firmware version

---

**Navigation**  Diagnostics → Device information → Firmware version

**Description** Shows the device firmware version installed.


**User interface** xx.yy.zz

**Additional information**  For firmware versions differing only in the last two digits ("zz") there is no difference concerning functionality or operation.

---

#### Device name

---

**Navigation**  Diagnostics → Device information → Device name

**Description** Shows the name of the transmitter.



---

**Order code**


---

**Navigation**

Diagnostics → Device information → Order code

**Description**

Shows the device order code.

**Additional information**

The order code is generated from the extended order code, which defines all device features of the product structure. In contrast, the device features can not be read directly from the order code.

---

**Extended order code 1 to 3**


---

**Navigation**

Diagnostics → Device information → Extended order code 1

**Description**

Display the three parts of the extended order code.

**Additional information**

The extended order code indicates the version of all the features of the product structure and thus uniquely identifies the device.

---

**Device revision**


---

**Navigation**

Diagnostics → Device information → Device revision

**Description**

Shows the device revision with which the device is registered with the HART Communication Foundation.

**Additional information**

The device revision is used to allocate the correct Device Description file (DD) to the device.

---

**Device ID**


---

**Navigation**

Diagnostics → Device information → Device ID

**Description**

Shows the device ID for identifying the device in a HART network.


**Additional information**

In addition to the Device type and Manufacturer ID, the Device ID is part of the unique device identification (Unique ID) which characterizes each HART device unambiguously.

---

**Device type**


---

<b>Navigation</b>	 Diagnostics → Device information → Device type
<b>Description</b>	Shows the device type with which the measuring device is registered with the HART Communication Foundation.
<b>Additional information</b>	The device type is needed to allocate the suitable Device Description (DD) to the device.

---

**Manufacturer ID**

---

<b>Navigation</b>	 Diagnostics → Device information → Manufacturer ID
<b>Description</b>	Use this function to view the manufacturer ID with which the measuring device is registered with the HART Communication Foundation.
<b>User interface</b>	2-digit hexadecimal number
<b>Factory setting</b>	0x11 (for Endress+Hauser)


## 17.5.4 "Measured values" submenu

*Navigation*       Diagnostics → Measured values

---


### Distance


---

**Navigation**       Diagnostics → Measured values → Distance

**Description**      Displays the measured distance D between the reference point (lower edge of the flange or threaded connection) and the level.

**Additional information**

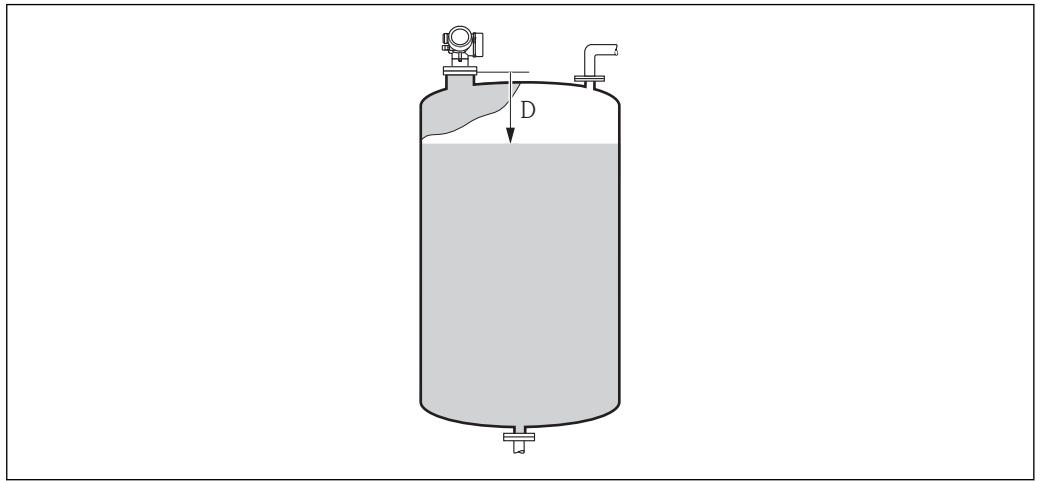

 59      *Distance for liquid measurements*


A0019483

 The unit is defined in the **Distance unit** parameter (→  125).

---

### Level linearized

---

**Navigation**       Diagnostics → Measured values → Level linearized


**Description**      Displays linearized level.

**Additional information**       The unit is defined by the **Unit after linearization** parameter →  147.

---

### Output current 1 to 2

---


**Navigation**       Diagnostics → Measured values → Output current 1 to 2

**Description**      Shows the actual calculated value of the output current.

---

**Measured current 1**


---

<b>Navigation</b>	 Diagnostics → Measured values → Measured current 1
<b>Prerequisite</b>	Only available for current output 1
<b>Description</b>	Shows the current value of the current output which is currently measured.

---

**Terminal voltage 1**


---

<b>Navigation</b>	 Diagnostics → Measured values → Terminal voltage 1
<b>Description</b>	Shows the current terminal voltage that is applied at the output.

---

**Electronic temperature**

---

<b>Navigation</b>	 Diagnostics → Measured values → Electronic temperature
<b>Description</b>	Displays the current temperature of the electronics.
<b>Additional information</b>	The unit is defined in the <b>Temperature unit</b> parameter.


## 17.5.5 "Data logging" submenu

Navigation  Diagnostics → Data logging

---

### Assign channel 1 to 4

---

**Navigation**  Diagnostics → Data logging → Assign channel 1 to 4

**Description** Assign a process variable to logging channel.

**Selection**

- Off
- Level linearized
- Distance
- Current output 1
- Measured current
- Current output 2 \*
- Terminal voltage
- Electronic temperature
- Absolute echo amplitude
- Relative echo amplitude
- Area of incoupling
- Analog output adv. diagnostics 1
- Analog output adv. diagnostics 2

**Factory setting** Off

**Additional information** A total of 1000 measured values can be logged. This means:

- 1000 data points if 1 logging channel is used
- 500 data points if 2 logging channels are used
- 333 data points if 3 logging channels are used
- 250 data points if 4 logging channels are used

If the maximum number of data points is reached, the oldest data points in the data log are cyclically overwritten in such a way that the last 1000, 500, 333 or 250 measured values are always in the log (ring memory principle).


 The logged data are deleted if a new option is selected in this parameter.

---

### Logging interval

---

**Navigation**  Diagnostics → Data logging → Logging interval

 Diagnostics → Data logging → Logging interval

**Description** Define the logging interval tlog for data logging. This value defines the time interval between the individual data points in the memory.

**User entry** 1.0 to 3 600.0 s

---

\* Visibility depends on order options or device settings

**Factory setting** 30.0 s

**Additional information** This parameter defines the interval between the individual data points in the data log, and thus the maximum loggable process time  $T_{\log}$  :

- If 1 logging channel is used:  $T_{\log} = 1000 \cdot t_{\log}$
- If 2 logging channels are used:  $T_{\log} = 500 \cdot t_{\log}$
- If 3 logging channels are used:  $T_{\log} = 333 \cdot t_{\log}$
- If 4 logging channels are used:  $T_{\log} = 250 \cdot t_{\log}$

Once this time elapses, the oldest data points in the data log are cyclically overwritten such that a time of  $T_{\log}$  always remains in the memory (ring memory principle).

 The logged data are deleted if this parameter is changed.

*Example*

**When using 1 logging channel**



- $T_{\log} = 1000 \cdot 1 \text{ s} = 1000 \text{ s} \approx 16.5 \text{ min}$
- $T_{\log} = 1000 \cdot 10 \text{ s} = 10000 \text{ s} \approx 2.75 \text{ h}$
- $T_{\log} = 1000 \cdot 80 \text{ s} = 80000 \text{ s} \approx 22 \text{ h}$
- $T_{\log} = 1000 \cdot 3600 \text{ s} = 3600000 \text{ s} \approx 41 \text{ d}$

---

## Clear logging data

---

**Navigation**

-  Diagnostics → Data logging → Clear logging data
-  Diagnostics → Data logging → Clear logging data

**Description** Clear the entire logging data.

**Selection**


- Cancel
- Clear data

**Factory setting** Cancel

**"Display channel 1 to 4" submenu**



**i** The **Display channel 1 to 4** submenus are only available for operation via the local display. When operating via FieldCare, the logging diagram can be displayed in the FieldCare function "Event List / HistoROM" .

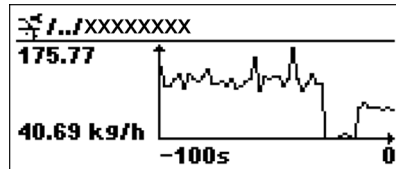The **Display channel 1 to 4** submenus invoke a diagram of the logging history of the respective channel.



- x-axis: depending on the number of selected channels, 250 to 1000 measured values of a process variable are displayed.
- y-axis: covers the approximate measured value span and constantly adapts this to the measurement.



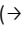
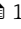
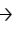


**i** To return to the operating menu, press  $\oplus$  and  $\ominus$  simultaneously.

*Navigation*        Diagnostics → Data logging → Display channel 1 to 4

### 17.5.6 "Simulation" submenu

The **Simulation** submenu is used to simulate specific measuring values or other conditions. This helps to check the correct configuration of the device and connected control units.

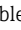






*Conditions which can be simulated*

Condition to be simulated	Associated parameters
Specific value of a process variable	<ul style="list-style-type: none"> <li>■ Assign measurement variable (→  194)</li> <li>■ Process variable value (→  194)</li> </ul>
Specific value of the output current	<ul style="list-style-type: none"> <li>■ Current output simulation (→  194)</li> <li>■ Value current output (→  195)</li> </ul>
Specific state of the switch output	<ul style="list-style-type: none"> <li>■ Switch output simulation (→  195)</li> <li>■ Switch status (→  195)</li> </ul>
Existence of an alarm	Device alarm simulation (→  196)



**Structure of the submenu**

*Navigation*            Expert → Diagnostics → Simulation

► Simulation	
Assign measurement variable	→  194
Process variable value	→  194
Current output 1 to 2 simulation	→  194
Value current output 1 to 2	→  195
Switch output simulation	→  195
Switch status	→  195
Device alarm simulation	→  196


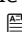
### Description of parameters

*Navigation*  Expert → Diagnostics → Simulation

---

#### Assign measurement variable



---

<b>Navigation</b>	 Expert → Diagnostics → Simulation → Assign measurement variable
<b>Selection</b>	<ul style="list-style-type: none"> <li>■ Off</li> <li>■ Level</li> <li>■ Level linearized</li> </ul>
<b>Factory setting</b>	Off
<b>Additional information</b>	<ul style="list-style-type: none"> <li>■ The value of the variable to be simulated is defined in the <b>Process variable value</b> parameter (→  194).</li> <li>■ If <b>Assign measurement variable</b> ≠ <b>Off</b>, a simulation is active. This is indicated by a diagnostic message of the <i>Function check (C)</i> category.</li> </ul>

---

#### Process variable value


---

<b>Navigation</b>	 Expert → Diagnostics → Simulation → Process variable value
<b>Prerequisite</b>	<b>Assign measurement variable</b> (→  194) ≠ <b>Off</b>
<b>User entry</b>	Signed floating-point number
<b>Factory setting</b>	0
<b>Additional information</b>	Downstream measured value processing and the signal output use this simulation value. In this way, users can verify whether the measuring device has been configured correctly.

---

#### Current output 1 to 2 simulation

---

<b>Navigation</b>	 Expert → Diagnostics → Simulation → Current output 1 to 2 simulation
<b>Description</b>	Switch the simulation of the current output on and off.
<b>Selection</b>	<ul style="list-style-type: none"> <li>■ Off</li> <li>■ On</li> </ul>
<b>Factory setting</b>	Off
<b>Additional information</b>	An active simulation is indicated by a diagnostic message of the <i>Function check (C)</i> category.

---

**Value current output 1 to 2**


<b>Navigation</b>	Expert → Diagnostics → Simulation → Value current output 1 to 2
<b>Prerequisite</b>	<b>Current output simulation (→  194) = On</b>
<b>Description</b>	Defines the value of the simulated output current.
<b>User entry</b>	3.59 to 22.5 mA
<b>Factory setting</b>	3.59 mA
<b>Additional information</b>	The current output assumes the value specified in this parameter. In this way, users can verify the correct adjustment of the current output and the correct function of connected control units.

---

**Switch output simulation**


<b>Navigation</b>	Expert → Diagnostics → Simulation → Switch output simulation
<b>Description</b>	Switch the simulation of the switch output on and off.
<b>Selection</b>	<ul style="list-style-type: none"> <li>■ Off</li> <li>■ On</li> </ul>
<b>Factory setting</b>	Off

---

**Switch status**


<b>Navigation</b>	Expert → Diagnostics → Simulation → Switch status
<b>Prerequisite</b>	<b>Switch output simulation (→  195) = On</b>
<b>Description</b>	Current status of the switch output.
<b>Selection</b>	<ul style="list-style-type: none"> <li>■ Open</li> <li>■ Closed</li> </ul>
<b>Factory setting</b>	Open
<b>Additional information</b>	The switch status assumes the value defined in this parameter. This helps to check correct operation of connected control units.

---

**Device alarm simulation**

---

**Navigation**

Expert → Diagnostics → Simulation → Device alarm simulation

**Description**

Switch the device alarm on and off.

**Selection**

- Off
- On

**Factory setting**

Off

**Additional information**

When selecting the **On** option, the device generates an alarm. This helps to check the correct output behavior of the device in the case of an alarm.

An active simulation is indicated by the diagnostic message **C484 Failure mode simulation**.

---

**Diagnostic event simulation**

---

**Navigation**

Expert → Diagnostics → Simulation → Diagnostic event simulation

**Description**

Select the diagnostic event to be simulated. Note: To terminate the simulation, select 'Off'.

**Factory setting**

Off

**Additional information**

When operated via the local display, the selection list can be filtered according to the event categories (**Diagnostic event category** parameter).


## 17.5.7 "Device check" submenu

Navigation  Diagnostics → Device check

---

### Start device check


---

<b>Navigation</b>	 Diagnostics → Device check → Start device check
<b>Description</b>	Start a device check.
<b>Selection</b>	<ul style="list-style-type: none"> <li>■ No</li> <li>■ Yes</li> </ul>
<b>Factory setting</b>	No
<b>Additional information</b>	In the case of a lost echo a device check can not be performed.

---

### Result device check


---

<b>Navigation</b>	 Diagnostics → Device check → Result device check
<b>Description</b>	Displays the result of the device check.
<b>Additional information</b>	<p><b>Meaning of the display options</b></p> <ul style="list-style-type: none"> <li>■ <b>Installation ok</b> Measurement possible without restrictions.</li> <li>■ <b>Accuracy reduced</b> A measurement is possible. However, the measuring accuracy may be reduced due to the signal amplitudes.</li> <li>■ <b>Measurement capability reduced</b> A measurement is currently possible. However, there is the risk of an echo loss. Check the mounting position of the device and the dielectric constant of the medium.</li> <li>■ <b>Check not done</b> No device check has been performed.</li> </ul>

---

### Last check time

---

<b>Navigation</b>	 Diagnostics → Device check → Last check time
<b>Description</b>	Displays the operating time at which the last device check has been performed.

---

**Level signal**

---

**Navigation** Diagnostics → Device check → Level signal**Prerequisite**

Device check has been performed.

**Description**


Displays result of the device check for the level signal.

**User interface**

- Check not done
- Check not OK
- Check OK

**Additional information**For **Level signal = Check not OK**: Check the mounting position of the device and the dielectric constant of the medium.

### 17.5.8 "Heartbeat" submenu

 The **Heartbeat** submenu is only available via **FieldCare** or **DeviceCare**. It contains the wizards which are part of the **Heartbeat Verification** and **Heartbeat Monitoring** application packages.

#### Detailed description

SD01871F

*Navigation*       Diagnostics → Heartbeat

# Index

## A

Access authorization to parameters	
Read access	56
Write access	56
Access code	56
Incorrect input	56
Access status display (Parameter)	136
Access status tooling (Parameter)	135
Accessories	
Communication specific	104
Service specific	105
Activate table (Parameter)	152
Actual diagnostics (Parameter)	180
Administration (Submenu)	177
Advanced process conditions (Parameter)	139
Advanced setup (Submenu)	135
Application	11
Residual risk	11
Assign channel 1 to 4 (Parameter)	189
Assign current output (Parameter)	158
Assign diagnostic behavior (Parameter)	163
Assign limit (Parameter)	163
Assign measurement variable (Parameter)	194
Assign status (Parameter)	163

## B

Backlight (Parameter)	173
Backup state (Parameter)	175
Blocking distance (Parameter)	140, 154
Bluetooth® wireless technology	52

## C

CE mark	12
Cleaning	94
Clear logging data (Parameter)	190
Code incorrect (Parameter)	157
Comparison result (Parameter)	175
Configuration backup display (Submenu)	174
Configuration management (Parameter)	174
Configuration of a level measurement	76
Confirm access code (Parameter)	179
Confirm distance (Parameter)	129, 133
Context menu	67
Contrast display (Parameter)	173
Current output 1 to 2 (Submenu)	158
Current output 1 to 2 simulation (Parameter)	194
Current span (Parameter)	159
Customer value (Parameter)	152

## D

Damping output (Parameter)	160
Data logging (Submenu)	189
DD	69
Deactivate SIL/WHG (Wizard)	157
Decimal places 1 (Parameter)	170
Decimal places menu (Parameter)	172

Declaration of Conformity	12
Define access code	56
Define access code (Parameter)	177, 179
Define access code (Wizard)	179
Designated use	11
Device alarm simulation (Parameter)	196
Device check (Submenu)	197
Device Descriptions	69
Device ID (Parameter)	185
Device information (Submenu)	184
Device name (Parameter)	184
Device replacement	95
Device reset (Parameter)	177
Device revision (Parameter)	185
Device tag (Parameter)	125, 184
Device type (Parameter)	186
Diagnostic event	
In the operating tool	88
Diagnostic event simulation (Parameter)	196
Diagnostic events	85
Diagnostic list	89
Diagnostic list (Submenu)	182
Diagnostic message	85
Diagnostics	
Symbols	85
Diagnostics (Menu)	180
Diagnostics 1 (Parameter)	182
Diagnostics event	86
Diameter (Parameter)	149
DIP switch	
see Write protection switch	
Display (Submenu)	168
Display and operating module FHX50	51
Display channel 1 to 4 (Submenu)	191
Display damping (Parameter)	171
Display interval (Parameter)	170
Display module	61
Display symbols for submenus	62
Display symbols for the locking state	62
Disposal	96
Distance (Parameter)	128, 133, 187
Distance unit (Parameter)	125
Document	
Function	6
Document function	6

## E

Electronic temperature (Parameter)	188
Electronics housing	
Design	16
Empty calibration (Parameter)	127
Enter access code (Parameter)	136
Envelope curve display	68
Event history	91
Event level	
Explanation	85



- Symbols . . . . . 85
  - Event list (Submenu) . . . . . 183
  - Event logbook (Submenu) . . . . . 183
  - Event text . . . . . 86
  - Events list . . . . . 91
  - Extended order code 1 (Parameter) . . . . . 185
  - Exterior cleaning . . . . . 94
- F**
- Failure current (Parameter) . . . . . 161
  - Failure mode (Parameter) . . . . . 160, 166
  - FHX50 . . . . . 51
  - Filter options (Parameter) . . . . . 183
  - Filtering the event logbook . . . . . 92
  - Firmware version (Parameter) . . . . . 184
  - Fixed current (Parameter) . . . . . 159
  - Format display (Parameter) . . . . . 168
  - Free text (Parameter) . . . . . 148
  - Full calibration (Parameter) . . . . . 127
  - FV (HART device variable) . . . . . 69
- H**
- Hardware write protection . . . . . 57
  - HART device variables . . . . . 69
  - HART integration . . . . . 69
  - HART protocol . . . . . 53
  - Header (Parameter) . . . . . 171
  - Header text (Parameter) . . . . . 171
  - Heartbeat (Submenu) . . . . . 199
  - Housing
    - Design . . . . . 16
    - Turning . . . . . 33
- I**
- Input mask . . . . . 65
  - Intermediate height (Parameter) . . . . . 149
  - Invert output signal (Parameter) . . . . . 166
- K**
- Keypad lock
    - Disabling . . . . . 60
    - Switching on . . . . . 60
- L**
- Language (Parameter) . . . . . 168
  - Last backup (Parameter) . . . . . 174
  - Last check time (Parameter) . . . . . 197
  - Level (Parameter) . . . . . 128, 151, 152
  - Level (Submenu) . . . . . 137
  - Level correction (Parameter) . . . . . 141
  - Level linearized (Parameter) . . . . . 148, 187
  - Level measurement configuration . . . . . 76
  - Level signal (Parameter) . . . . . 198
  - Level unit (Parameter) . . . . . 140
  - Linearization (Submenu) . . . . . 144, 145, 146
  - Linearization type (Parameter) . . . . . 146
  - Local display . . . . . 50
    - see Diagnostics message
    - see In alarm condition
  - Locking status (Parameter) . . . . . 135
- Logging interval (Parameter) . . . . . 189
- M**
- Maintenance . . . . . 94
  - Manage device configuration . . . . . 80
  - Manufacturer ID (Parameter) . . . . . 186
  - Mapping (Wizard) . . . . . 133
  - Mapping end point (Parameter) . . . . . 131, 133
  - Max. draining speed liquid (Parameter) . . . . . 138
  - Max. filling speed liquid (Parameter) . . . . . 138
  - Maximum value (Parameter) . . . . . 149
  - Measured current 1 (Parameter) . . . . . 188
  - Measured materials . . . . . 11
  - Measured value symbols . . . . . 63
  - Measured values (Submenu) . . . . . 187
  - Medium group (Parameter) . . . . . 126
  - Medium property (Parameter) . . . . . 137
  - Medium type (Parameter) . . . . . 137
  - Menu
    - Diagnostics . . . . . 180
    - Setup . . . . . 125
- N**
- Number format (Parameter) . . . . . 172
- O**
- Operating elements
    - Diagnostics message . . . . . 86
  - Operating module . . . . . 61
  - Operating time (Parameter) . . . . . 174, 181
  - Operating time from restart (Parameter) . . . . . 181
  - Operational safety . . . . . 12
  - Order code (Parameter) . . . . . 185
  - Output current 1 to 2 (Parameter) . . . . . 161, 187
  - Output echo lost (Parameter) . . . . . 153
  - Overvoltage protection
    - General information . . . . . 46
- P**
- Prepare recording map (Parameter) . . . . . 133
  - Present mapping (Parameter) . . . . . 131
  - Previous diagnostics (Parameter) . . . . . 180
  - Process variable value (Parameter) . . . . . 194
  - Product safety . . . . . 12
  - PV (HART device variable) . . . . . 69
- R**
- Ramp at echo lost (Parameter) . . . . . 154
  - Read access . . . . . 56
  - Record map (Parameter) . . . . . 131, 133
  - Registered trademarks . . . . . 10
  - Remedial measures
    - Calling up . . . . . 87
    - Closing . . . . . 87
  - Remote operation . . . . . 53
  - Repair concept . . . . . 95
  - Replacing a device . . . . . 95
  - Requirements for personnel . . . . . 11
  - Reset write protection (Parameter) . . . . . 157
  - Result device check (Parameter) . . . . . 197

- Return . . . . . 96
- S**
- Safety instructions
  - Basic . . . . . 11
- Safety Instructions (XA) . . . . . 13
- Safety settings (Submenu) . . . . . 153
- Separator (Parameter) . . . . . 172
- Serial number (Parameter) . . . . . 184
- Service interface (CDI) . . . . . 53
- Setting the operating language . . . . . 75
- Settings
  - Manage device configuration . . . . . 80
  - Operating language . . . . . 75
- Setup (Menu) . . . . . 125
- Signal quality (Parameter) . . . . . 129
- SIL/WHG confirmation (Wizard) . . . . . 156
- Simulation (Submenu) . . . . . 193, 194
- Spare parts . . . . . 96
  - Nameplate . . . . . 96
- Start device check (Parameter) . . . . . 197
- Status signals . . . . . 62, 85
- Submenu
  - Administration . . . . . 177
  - Advanced setup . . . . . 135
  - Configuration backup display . . . . . 174
  - Current output 1 to 2 . . . . . 158
  - Data logging . . . . . 189
  - Device check . . . . . 197
  - Device information . . . . . 184
  - Diagnostic list . . . . . 182
  - Display . . . . . 168
  - Display channel 1 to 4 . . . . . 191
  - Event list . . . . . 183
  - Event logbook . . . . . 183
  - Events list . . . . . 91
  - Heartbeat . . . . . 199
  - Level . . . . . 137
  - Linearization . . . . . 144, 145, 146
  - Measured values . . . . . 187
  - Safety settings . . . . . 153
  - Simulation . . . . . 193, 194
  - Switch output . . . . . 162
- SV (HART device variable) . . . . . 69
- Switch output (Submenu) . . . . . 162
- Switch output function (Parameter) . . . . . 162
- Switch output simulation (Parameter) . . . . . 195
- Switch status (Parameter) . . . . . 166, 195
- Switch-off delay (Parameter) . . . . . 166
- Switch-off value (Parameter) . . . . . 165
- Switch-on delay (Parameter) . . . . . 165
- Switch-on value (Parameter) . . . . . 164
- Symbols
  - For correction . . . . . 65
  - In the text and numeric editor . . . . . 65
- System components . . . . . 106
- T**
- Table mode (Parameter) . . . . . 150
- Table number (Parameter) . . . . . 151
- Tank type (Parameter) . . . . . 125
- Tank/silo height (Parameter) . . . . . 141
- Terminal voltage 1 (Parameter) . . . . . 188
- Timestamp (Parameter) . . . . . 180, 181, 182
- Transmitter
  - Turning the display . . . . . 34
  - Turning the display module . . . . . 34
- Transmitter housing
  - Turning . . . . . 33
- Trouble shooting . . . . . 82
- Tube diameter (Parameter) . . . . . 126
- Turning the display . . . . . 34
- Turning the display module . . . . . 34
- TV (HART device variable) . . . . . 69
- U**
- Unit after linearization (Parameter) . . . . . 147
- V**
- Value 1 display (Parameter) . . . . . 170
- Value current output 1 to 2 (Parameter) . . . . . 195
- Value echo lost (Parameter) . . . . . 153
- W**
- W@M Device Viewer . . . . . 96
- Wizard
  - Deactivate SIL/WHG . . . . . 157
  - Define access code . . . . . 179
  - Mapping . . . . . 133
  - SIL/WHG confirmation . . . . . 156
- Workplace safety . . . . . 12
- Write access . . . . . 56
- Write protection
  - Via access code . . . . . 56
  - Via write protection switch . . . . . 57
- Write protection switch . . . . . 57
- Z**
- Zubehör
  - Gerätespezifisch . . . . . 97





71394691

[www.addresses.endress.com](http://www.addresses.endress.com)

---