


Operating Instructions Proline Promag P 300 HART

Electromagnetic flowmeter

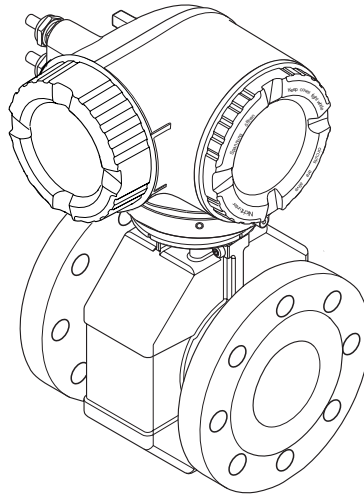

- Make sure the document is stored in a safe place such that it is always available when working on or with the device.
- To avoid danger to individuals or the facility, read the "Basic safety instructions" section carefully, as well as all other safety instructions in the document that are specific to working procedures.
- The manufacturer reserves the right to modify technical data without prior notice. Your Endress+Hauser Sales Center will supply you with current information and updates to these instructions.

Table of contents

| | | | | | |
|----------|---|-----------|----------|--|-----------|
| 1 | About this document | 6 | 6 | Installation | 21 |
| 1.1 | Document function | 6 | 6.1 | Installation conditions | 21 |
| 1.2 | Symbols used | 6 | 6.1.1 | Mounting position | 21 |
| 1.2.1 | Safety symbols | 6 | 6.1.2 | Requirements from environment and process | 23 |
| 1.2.2 | Electrical symbols | 6 | 6.1.3 | Special mounting instructions | 26 |
| 1.2.3 | Communication symbols | 6 | 6.2 | Mounting the measuring device | 26 |
| 1.2.4 | Tool symbols | 7 | 6.2.1 | Required tools | 26 |
| 1.2.5 | Symbols for certain types of information | 7 | 6.2.2 | Preparing the measuring device | 26 |
| 1.2.6 | Symbols in graphics | 7 | 6.2.3 | Mounting the sensor | 26 |
| 1.3 | Documentation | 8 | 6.2.4 | Turning the transmitter housing | 31 |
| 1.3.1 | Standard documentation | 8 | 6.2.5 | Turning the display module | 31 |
| 1.3.2 | Supplementary device-dependent documentation | 8 | 6.3 | Post-installation check | 32 |
| 1.4 | Registered trademarks | 8 | 7 | Electrical connection | 33 |
| 2 | Basic safety instructions | 9 | 7.1 | Connection conditions | 33 |
| 2.1 | Requirements for the personnel | 9 | 7.1.1 | Required tools | 33 |
| 2.2 | Designated use | 9 | 7.1.2 | Requirements for connecting cable | 33 |
| 2.3 | Workplace safety | 10 | 7.1.3 | Terminal assignment | 36 |
| 2.4 | Operational safety | 10 | 7.1.4 | Preparing the measuring device | 36 |
| 2.5 | Product safety | 10 | 7.2 | Connecting the measuring device | 36 |
| 2.6 | IT security | 11 | 7.2.1 | Connecting the transmitter | 36 |
| 2.7 | Device-specific IT security | 11 | 7.2.2 | Connecting the remote display and operating module DKX001 | 39 |
| 2.7.1 | Protecting access via hardware write protection | 11 | 7.3 | Ensure potential equalization | 39 |
| 2.7.2 | Protecting access via a password | 11 | 7.3.1 | Requirements | 39 |
| 2.7.3 | Access via fieldbus | 12 | 7.3.2 | Connection example, standard scenario | 39 |
| 2.7.4 | Access via Web server | 12 | 7.3.3 | Connection example in special situations | 40 |
| 2.7.5 | Access via CDI-RJ45 service interface | 12 | 7.4 | Special connection instructions | 41 |
| 3 | Product description | 14 | 7.4.1 | Connection examples | 41 |
| 3.1 | Product design | 14 | 7.5 | Ensuring the degree of protection | 45 |
| 4 | Incoming acceptance and product identification | 15 | 7.6 | Post-connection check | 46 |
| 4.1 | Incoming acceptance | 15 | 8 | Operation options | 47 |
| 4.2 | Product identification | 15 | 8.1 | Overview of operation options | 47 |
| 4.2.1 | Transmitter nameplate | 16 | 8.2 | Structure and function of the operating menu | 48 |
| 4.2.2 | Sensor nameplate | 17 | 8.2.1 | Structure of the operating menu | 48 |
| 4.2.3 | Symbols on measuring device | 18 | 8.2.2 | Operating philosophy | 49 |
| 5 | Storage and transport | 19 | 8.3 | Access to the operating menu via the local display | 50 |
| 5.1 | Storage conditions | 19 | 8.3.1 | Operational display | 50 |
| 5.2 | Transporting the product | 19 | 8.3.2 | Navigation view | 51 |
| 5.2.1 | Measuring devices without lifting lugs | 19 | 8.3.3 | Editing view | 53 |
| 5.2.2 | Measuring devices with lifting lugs | 20 | 8.3.4 | Operating elements | 55 |
| 5.2.3 | Transporting with a fork lift | 20 | 8.3.5 | Opening the context menu | 55 |
| 5.3 | Packaging disposal | 20 | 8.3.6 | Navigating and selecting from list | 57 |
| | | | 8.3.7 | Calling the parameter directly | 57 |
| | | | 8.3.8 | Calling up help text | 58 |
| | | | 8.3.9 | Changing the parameters | 58 |
| | | | 8.3.10 | User roles and related access authorization | 59 |

| | | | | | |
|-----------|---|-----------|-----------|---|------------|
| 8.3.11 | Disabling write protection via access code | 59 | 10.5.7 | Configuration management | 110 |
| 8.3.12 | Enabling and disabling the keypad lock | 60 | 10.5.8 | Using parameters for device administration | 111 |
| 8.4 | Access to the operating menu via the Web browser | 60 | 10.6 | Simulation | 113 |
| 8.4.1 | Function range | 60 | 10.7 | Protecting settings from unauthorized access | 116 |
| 8.4.2 | Prerequisites | 61 | 10.7.1 | Write protection via access code ... | 116 |
| 8.4.3 | Establishing a connection | 62 | 10.7.2 | Write protection via write protection switch | 118 |
| 8.4.4 | Logging on | 64 | 11 | Operation | 119 |
| 8.4.5 | User interface | 65 | 11.1 | Reading the device locking status | 119 |
| 8.4.6 | Disabling the Web server | 66 | 11.2 | Adjusting the operating language | 119 |
| 8.4.7 | Logging out | 66 | 11.3 | Configuring the display | 119 |
| 8.5 | Access to the operating menu via the operating tool | 66 | 11.4 | Reading measured values | 119 |
| 8.5.1 | Connecting the operating tool | 67 | 11.4.1 | "Process variables" submenu | 119 |
| 8.5.2 | Field Xpert SFX350, SFX370 | 70 | 11.4.2 | "Totalizer" submenu | 121 |
| 8.5.3 | FieldCare | 70 | 11.4.3 | "Input values" submenu | 121 |
| 8.5.4 | DeviceCare | 72 | 11.4.4 | Output values | 122 |
| 8.5.5 | AMS Device Manager | 72 | 11.5 | Adapting the measuring device to the process conditions | 125 |
| 8.5.6 | SIMATIC PDM | 73 | 11.6 | Performing a totalizer reset | 125 |
| 8.5.7 | Field Communicator 475 | 73 | 11.6.1 | Function scope of the "Control Totalizer" parameter | 125 |
| 9 | System integration | 74 | 11.6.2 | Function scope of the "Reset all totalizers" parameter | 126 |
| 9.1 | Overview of device description files | 74 | 11.7 | Showing data logging | 126 |
| 9.1.1 | Current version data for the device ... | 74 | 12 | Diagnostics and troubleshooting .. | 129 |
| 9.1.2 | Operating tools | 74 | 12.1 | General troubleshooting | 129 |
| 9.2 | Measured variables via HART protocol | 74 | 12.2 | Diagnostic information via light emitting diodes | 131 |
| 9.3 | Other settings | 76 | 12.2.1 | Transmitter | 131 |
| 10 | Commissioning | 78 | 12.3 | Diagnostic information on local display | 133 |
| 10.1 | Function check | 78 | 12.3.1 | Diagnostic message | 133 |
| 10.2 | Switching on the measuring device | 78 | 12.3.2 | Calling up remedial measures | 135 |
| 10.3 | Setting the operating language | 78 | 12.4 | Diagnostic information in the Web browser . | 135 |
| 10.4 | Configuring the measuring device | 78 | 12.4.1 | Diagnostic options | 135 |
| 10.4.1 | Defining the tag name | 80 | 12.4.2 | Calling up remedy information | 136 |
| 10.4.2 | Setting the system units | 80 | 12.5 | Diagnostic information in DeviceCare or FieldCare | 137 |
| 10.4.3 | Displaying the I/O configuration ... | 82 | 12.5.1 | Diagnostic options | 137 |
| 10.4.4 | Configuring the status input | 82 | 12.5.2 | Calling up remedy information | 138 |
| 10.4.5 | Configuring the current input | 83 | 12.6 | Adapting the diagnostic information | 138 |
| 10.4.6 | Configuring the current output | 84 | 12.6.1 | Adapting the diagnostic behavior ... | 138 |
| 10.4.7 | Configuring the pulse/frequency/switch output | 87 | 12.6.2 | Adapting the status signal | 138 |
| 10.4.8 | Configuring the local display | 93 | 12.7 | Overview of diagnostic information | 139 |
| 10.4.9 | Configuring the low flow cut off | 95 | 12.8 | Pending diagnostic events | 143 |
| 10.4.10 | Configuring empty pipe detection ... | 96 | 12.9 | Diagnostic list | 144 |
| 10.4.11 | Configuring the HART input | 96 | 12.10 | Event logbook | 144 |
| 10.4.12 | Configuring the relay output | 98 | 12.10.1 | Reading out the event logbook | 144 |
| 10.4.13 | Configuring the double pulse output | 100 | 12.10.2 | Filtering the event logbook | 145 |
| 10.5 | Advanced settings | 102 | 12.10.3 | Overview of information events ... | 145 |
| 10.5.1 | Using the parameter to enter the access code | 103 | 12.11 | Resetting the measuring device | 147 |
| 10.5.2 | Carrying out a sensor adjustment ... | 103 | 12.11.1 | Function scope of the "Device reset" parameter | 147 |
| 10.5.3 | Configuring the totalizer | 103 | 12.12 | Device information | 147 |
| 10.5.4 | Carrying out additional display configurations | 105 | 12.13 | Firmware history | 150 |
| 10.5.5 | Performing electrode cleaning | 108 | | | |
| 10.5.6 | WLAN configuration | 109 | | | |

| | | |
|--------------------|--|------------|
| 13 | Maintenance | 151 |
| 13.1 | Maintenance tasks | 151 |
| 13.1.1 | Exterior cleaning | 151 |
| 13.1.2 | Interior cleaning | 151 |
| 13.1.3 | Replacing seals | 151 |
| 13.2 | Measuring and test equipment | 151 |
| 13.3 | Endress+Hauser services | 151 |
| 14 | Repairs | 152 |
| 14.1 | General notes | 152 |
| 14.1.1 | Repair and conversion concept | 152 |
| 14.1.2 | Notes for repair and conversion | 152 |
| 14.2 | Spare parts | 152 |
| 14.3 | Endress+Hauser services | 152 |
| 14.4 | Return | 152 |
| 14.5 | Disposal | 153 |
| 14.5.1 | Removing the measuring device | 153 |
| 14.5.2 | Disposing of the measuring device | 153 |
| 15 | Accessories | 154 |
| 15.1 | Device-specific accessories | 154 |
| 15.1.1 | For the transmitter | 154 |
| 15.1.2 | For the sensor | 155 |
| 15.2 | Communication-specific accessories | 155 |
| 15.3 | Service-specific accessories | 155 |
| 15.4 | System components | 156 |
| 16 | Technical data | 157 |
| 16.1 | Application | 157 |
| 16.2 | Function and system design | 157 |
| 16.3 | Input | 157 |
| 16.4 | Output | 160 |
| 16.5 | Power supply | 165 |
| 16.6 | Performance characteristics | 166 |
| 16.7 | Installation | 167 |
| 16.8 | Environment | 167 |
| 16.9 | Process | 168 |
| 16.10 | Mechanical construction | 171 |
| 16.11 | Operability | 175 |
| 16.12 | Certificates and approvals | 180 |
| 16.13 | Application packages | 182 |
| 16.14 | Accessories | 183 |
| 16.15 | Supplementary documentation | 183 |
| Index | 185 | |





1 About this document

1.1 Document function






These Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.

1.2 Symbols used



1.2.1 Safety symbols



| Symbol | Meaning |
|---|--|
|  | DANGER! This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury. |
|  | WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury. |
|  | CAUTION! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury. |
|  | NOTE! This symbol contains information on procedures and other facts which do not result in personal injury. |

1.2.2 Electrical symbols


 

| Symbol | Meaning |
|---|--|
|  | Direct current |
|  | Alternating current |
|  | Direct current and alternating current |
|  | Ground connection A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system. |
|  | Protective Earth (PE) A terminal which must be connected to ground prior to establishing any other connections. The ground terminals are situated inside and outside the device: <ul style="list-style-type: none"> ▪ Inner ground terminal: Connects the protective earth to the mains supply. ▪ Outer ground terminal: Connects the device to the plant grounding system. |

1.2.3 Communication symbols













| Symbol | Meaning |
|---|---|
|  | Wireless Local Area Network (WLAN) Communication via a wireless, local network. |
|  | LED Light emitting diode is off. |

| Symbol | Meaning |
|---|---|
|  | LED Light emitting diode is on. |
|  | LED Light emitting diode is flashing. |



1.2.4 Tool symbols



| Symbol | Meaning |
|---|------------------------|
|  | Flat blade screwdriver |
|  | Allen key |
|  | Open-ended wrench |

1.2.5 Symbols for certain types of information


| Symbol | Meaning |
|---|--|
|  | Permitted Procedures, processes or actions that are permitted. |
|  | Preferred Procedures, processes or actions that are preferred. |
|  | Forbidden Procedures, processes or actions that are forbidden. |
|  | Tip Indicates additional information. |
|  | Reference to documentation. |
|  | Reference to page. |
|  | Reference to graphic. |
|  | Notice or individual step to be observed. |
|  | Series of steps. |
|  | Result of a step. |
|  | Help in the event of a problem. |
|  | Visual inspection. |

1.2.6 Symbols in graphics



| Symbol | Meaning |
|---|-----------------|
| 1, 2, 3, ... | Item numbers |
|  | Series of steps |
| A, B, C, ... | Views |
| A-A, B-B, C-C, ... | Sections |
|  | Hazardous area |

| Symbol | Meaning |
|---|--------------------------------|
|  | Safe area (non-hazardous area) |
|  | Flow direction |

1.3 Documentation

 For an overview of the scope of the associated Technical Documentation, refer to the following:

- The *W@M Device Viewer* : Enter the serial number from the nameplate (www.endress.com/deviceviewer)
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

 For a detailed list of the individual documents along with the documentation code
→  183

1.3.1 Standard documentation

| Document type | Purpose and content of the document |
|--|---|
| Technical Information | Planning aid for your device The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device. |
| Sensor Brief Operating Instructions | Guides you quickly to the 1st measured value - Part 1 The Sensor Brief Operating Instructions are aimed at specialists with responsibility for installing the measuring device. <ul style="list-style-type: none"> ▪ Incoming acceptance and product identification ▪ Storage and transport ▪ Installation |
| Transmitter Brief Operating Instructions | Guides you quickly to the 1st measured value - Part 2 The Transmitter Brief Operating Instructions are aimed at specialists with responsibility for commissioning, configuring and parameterizing the measuring device (until the first measured value). <ul style="list-style-type: none"> ▪ Product description ▪ Installation ▪ Electrical connection ▪ Operation options ▪ System integration ▪ Commissioning ▪ Diagnostic information |
| Description of Device Parameters | Reference for your parameters The document provides a detailed explanation of each individual parameter in the Expert operating menu. The description is aimed at those who work with the device over the entire life cycle and perform specific configurations. |

1.3.2 Supplementary device-dependent documentation

Additional documents are supplied depending on the device version ordered: Always comply strictly with the instructions in the supplementary documentation. The supplementary documentation is an integral part of the device documentation.

1.4 Registered trademarks

HART®

Registered trademark of the FieldComm Group, Austin, Texas, USA

2 Basic safety instructions

2.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- ▶ Trained, qualified specialists must have a relevant qualification for this specific function and task.
- ▶ Are authorized by the plant owner/operator.
- ▶ Are familiar with federal/national regulations.
- ▶ Before starting work, read and understand the instructions in the manual and supplementary documentation as well as the certificates (depending on the application).
- ▶ Follow instructions and comply with basic conditions.

The operating personnel must fulfill the following requirements:

- ▶ Are instructed and authorized according to the requirements of the task by the facility's owner-operator.
- ▶ Follow the instructions in this manual.

2.2 Designated use


Application and media

The measuring device described in these Brief Operating Instructions is intended only for flow measurement of liquids with a minimum conductivity of 5 $\mu\text{S}/\text{cm}$.

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

Measuring devices for use in hazardous areas, in hygienic applications or where there is an increased risk due to process pressure, are labeled accordingly on the nameplate.

To ensure that the measuring device remains in proper condition for the operation time:

- ▶ Keep within the specified pressure and temperature range.
- ▶ Only use the measuring device in full compliance with the data on the nameplate and the general conditions listed in the Operating Instructions and supplementary documentation.
- ▶ Based on the nameplate, check whether the ordered device is permitted for the intended use in the hazardous area (e.g. explosion protection, pressure vessel safety).
- ▶ Use the measuring device only for media to which the process-wetted materials are sufficiently resistant.
- ▶ If the measuring device is not operated at atmospheric temperature, compliance with the relevant basic conditions specified in the associated device documentation is absolutely essential: "Documentation" section →  8.
- ▶ Protect the measuring device permanently against corrosion from environmental influences.

Incorrect use

Non-designated use can compromise safety. The manufacturer is not liable for damage caused by improper or non-designated use.

WARNING

Danger of breakage due to corrosive or abrasive fluids!

- ▶ Verify the compatibility of the process fluid with the sensor material.
- ▶ Ensure the resistance of all fluid-wetted materials in the process.
- ▶ Keep within the specified pressure and temperature range.

NOTICE**Verification for borderline cases:**

- ▶ For special fluids and fluids for cleaning, Endress+Hauser is glad to provide assistance in verifying the corrosion resistance of fluid-wetted materials, but does not accept any warranty or liability as minute changes in the temperature, concentration or level of contamination in the process can alter the corrosion resistance properties.

Residual risks**⚠ WARNING**

The electronics and the medium may cause the surfaces to heat up. This presents a burn hazard!

- ▶ For elevated fluid temperatures, ensure protection against contact to prevent burns.

2.3 Workplace safety

For work on and with the device:

- ▶ Wear the required personal protective equipment according to federal/national regulations.

For welding work on the piping:

- ▶ Do not ground the welding unit via the measuring device.

If working on and with the device with wet hands:

- ▶ Due to the increased risk of electric shock, gloves must be worn.

2.4 Operational safety

Risk of injury.

- ▶ Operate the device in proper technical condition and fail-safe condition only.
- ▶ The operator is responsible for interference-free operation of the device.

Conversions to the device

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers.

- ▶ If, despite this, modifications are required, consult with Endress+Hauser.

Repair

To ensure continued operational safety and reliability,

- ▶ Carry out repairs on the device only if they are expressly permitted.
- ▶ Observe federal/national regulations pertaining to repair of an electrical device.
- ▶ Use original spare parts and accessories from Endress+Hauser only.

2.5 Product safety

This measuring device is designed in accordance with good engineering practice to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate.

It meets general safety standards and legal requirements. It also complies with the EU directives listed in the device-specific EU Declaration of Conformity. Endress+Hauser confirms this by affixing the CE mark to the device.

 
 
 


2.6 IT security

We only provide a warranty if the device is installed and used as described in the Operating Instructions. The device is equipped with security mechanisms to protect it against any inadvertent changes to the device settings.

IT security measures in line with operators' security standards and designed to provide additional protection for the device and device data transfer must be implemented by the operators themselves.


2.7 Device-specific IT security

The device offers a range of specific functions to support protective measures on the operator's side. These functions can be configured by the user and guarantee greater in-operation safety if used correctly. An overview of the most important functions is provided in the following section.

| Function/interface | Factory setting | Recommendation |
|--|---------------------|--|
| Write protection via hardware write protection switch →  11 | Not enabled. | Individually following risk assessment. |
| Access code (also applies for Web server login or FieldCare connection) →  12 | Not enabled (0000). | Assign an individual access code during commissioning. |
| WLAN (order option in display module) | Enabled. | Individually following risk assessment. |
| WLAN security mode | Enabled (WPA2-PSK) | Do not change. |
| WLAN passphrase (password) →  12 | Serial number | Assign an individual access code during commissioning. |
| WLAN mode | Access Point | Individually following risk assessment. |
| Web server →  12 | Enabled. | Individually following risk assessment. |
| CDI-RJ45 service interface →  12 | – | Individually following risk assessment. |

2.7.1 Protecting access via hardware write protection

Write access to the device parameters via the local display, Web browser or operating tool (e.g. FieldCare, DeviceCare) can be disabled via a write protection switch (DIP switch on the motherboard). When hardware write protection is enabled, only read access to the parameters is possible.


Hardware write protection is disabled when the device is delivered →  118.

2.7.2 Protecting access via a password

Different passwords are available to protect write access to the device parameters or access to the device via the WLAN interface.


- **User-specific access code**
Protect write access to the device parameters via the local display, Web browser or operating tool (e.g. FieldCare, DeviceCare). Access authorization is clearly regulated through the use of a user-specific access code.
- **WLAN passphrase**
The network key protects a connection between an operating unit (e.g. notebook or tablet) and the device via the WLAN interface which can be ordered as an option.


User-specific access code

Write access to the device parameters via the local display, Web browser or operating tool (e.g. FieldCare, DeviceCare) can be protected by the modifiable, user-specific access code (→  116).


When the device is delivered, the device does not have an access code and is equivalent to 0000 (open).

WLAN passphrase

A connection between an operating unit (e.g. notebook or tablet) and the device via the WLAN interface (→  68) which can be ordered as an option is protected by the network key. The WLAN authentication of the network key complies with the IEEE 802.11 standard.

When the device is delivered, the network key is pre-defined depending on the device. It can be changed via the **WLAN settings** submenu in the **WLAN passphrase** parameter (→  110).

General notes on the use of passwords

- The access code and network key supplied with the device should be changed during commissioning.
- Follow the general rules for generating a secure password when defining and managing the access code or network key.
- The user is responsible for the management and careful handling of the access code and network key.
- For information on configuring the access code or on what to do if you lose the password, see the "Write protection via access code" section →  116


2.7.3 Access via fieldbus

When communicating via fieldbus, access to the device parameters can be restricted to "Read only" access. The option can be changed in the **Fieldbus writing access** parameter.

This does not affect cyclic measured value transmission to the higher-order system, which is always guaranteed.

 For detailed information, see the "Description of Device Parameters" document pertaining to the device →  183

2.7.4 Access via Web server

The device can be operated and configured via a Web browser with the integrated Web server (→  60). The connection is via the service interface (CDI-RJ45) or the WLAN interface.

The Web server is enabled when the device is delivered. The Web server can be disabled if necessary (e.g. after commissioning) via the **Web server functionality** parameter.

The device and status information can be hidden on the login page. This prevents unauthorized access to the information.

 For detailed information, see the "Description of Device Parameters" document pertaining to the device →  183

2.7.5 Access via CDI-RJ45 service interface

The device can be connected to a network via the CDI-RJ45 service interface. Device-specific functions guarantee the secure operation of the device in a network.

It is advisable to take relevant security concepts into consideration, such as those issued by the Federal Office for Information Security. This includes organizational security measures

such as the assignment of access authorization as well as technical measures such as network segmentation.


3 Product description

The device consists of a transmitter and a sensor.

The device is available as a compact version:

The transmitter and sensor form a mechanical unit.

3.1 Product design

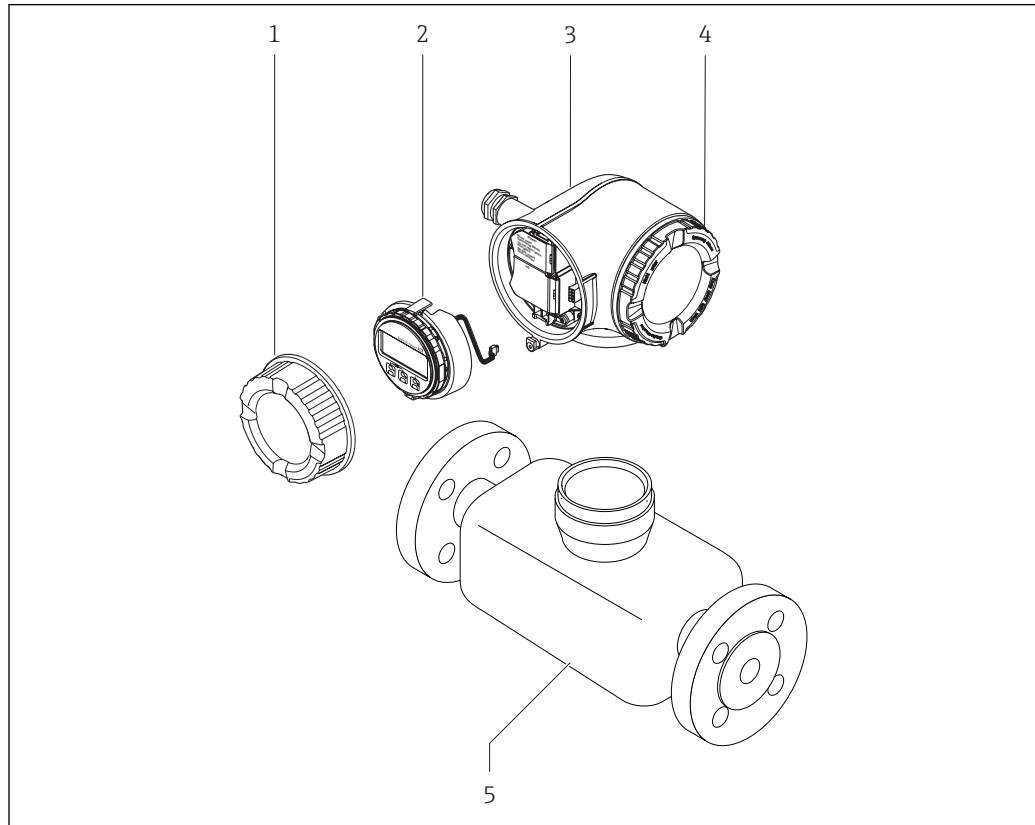


A0029586

☐ 1 *Important components of a measuring device*



- 1 *Connection compartment cover*
- 2 *Display module*
- 3 *Transmitter housing*
- 4 *Electronics compartment cover*
- 5 *Sensor*

4 Incoming acceptance and product identification


4.1 Incoming acceptance

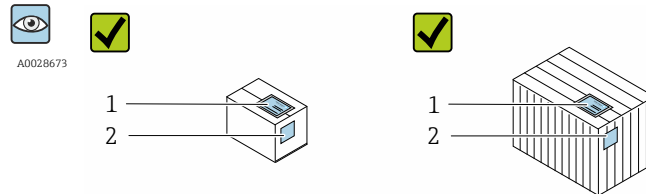


Are the order codes on the delivery note (1) and the product sticker (2) identical?

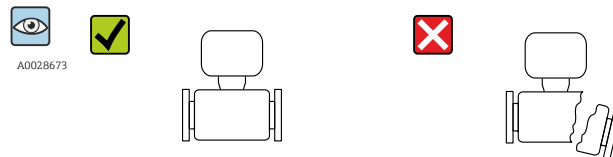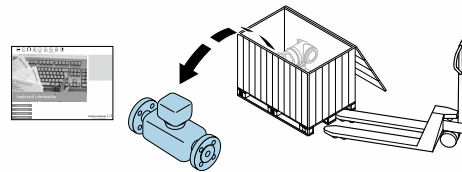

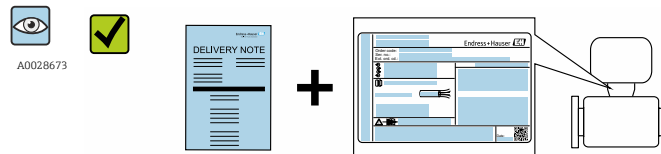

Are the goods undamaged?

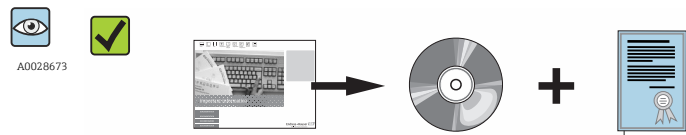

Do the nameplate data match the ordering information on the delivery note?



Is the CD-ROM with the Technical Documentation (depends on device version) and documents present?



-  If one of the conditions is not satisfied, contact your Endress+Hauser Sales Center.
- Depending on the device version, the CD-ROM might not be part of the delivery! The Technical Documentation is available via the Internet or via the *Endress+Hauser Operations App*, see the "Product identification" section →  16.

4.2 Product identification


The following options are available for identification of the measuring device:


- Nameplate specifications
- Order code with breakdown of the device features on the delivery note
- Enter serial numbers from nameplates in *W@M Device Viewer* (www.endress.com/deviceviewer): All information about the measuring device is displayed.
- Enter the serial number from the nameplates into the *Endress+Hauser Operations App* or scan the 2-D matrix code (QR code) on the nameplate with the *Endress+Hauser Operations App*: all the information for the measuring device is displayed.

For an overview of the scope of the associated Technical Documentation, refer to the following:

- The chapters "Additional standard documentation on the device" →  8 and "Supplementary device-dependent documentation" →  8
- The *W@M Device Viewer*: Enter the serial number from the nameplate (www.endress.com/deviceviewer)
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.


4.2.1 Transmitter nameplate

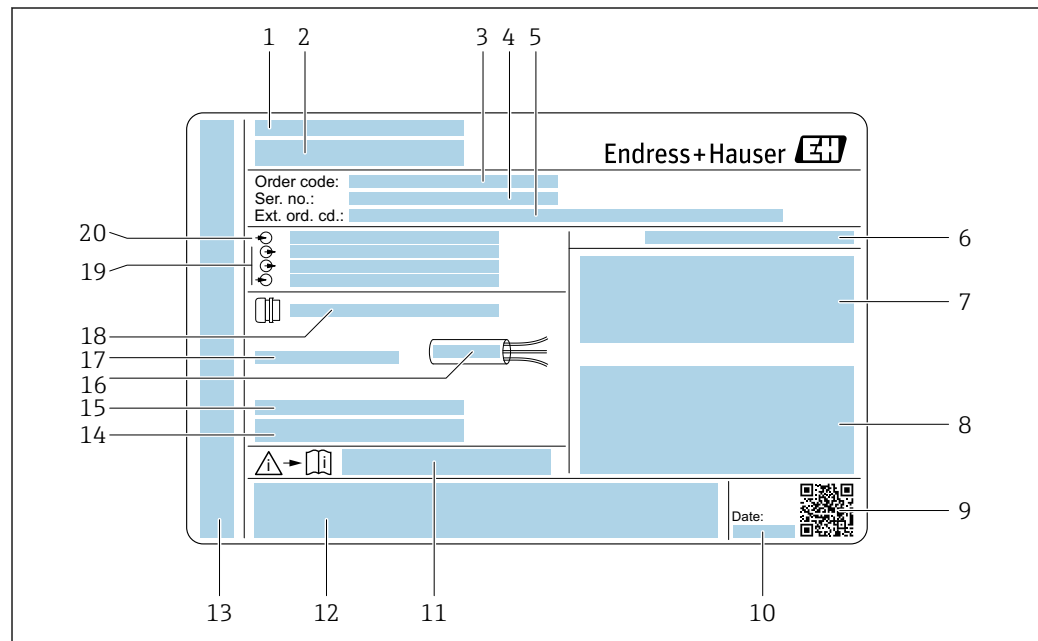

 2 Example of a transmitter nameplate

- 1 Manufacturing location
- 2 Name of the transmitter
- 3 Order code
- 4 Serial number (ser. no.)
- 5 Extended order code (Ext. ord. cd.)
- 6 Degree of protection
- 7 Space for approvals: use in hazardous areas
- 8 Electrical connection data: available inputs and outputs
- 9 2-D matrix code
- 10 Manufacturing date: year-month
- 11 Document number of safety-related supplementary documentation
- 12 Space for approvals and certificates: e.g. CE mark, C-Tick
- 13 Space for degree of protection of connection and electronics compartment when used in hazardous areas
- 14 Firmware version (FW) and device revision (Dev.Rev.) from the factory
- 15 Space for additional information in the case of special products
- 16 Permitted temperature range for cable
- 17 Permitted ambient temperature (T_a)
- 18 Information on cable gland
- 19 Available inputs and outputs, supply voltage
- 20 Electrical connection data: supply voltage

4.2.2 Sensor nameplate

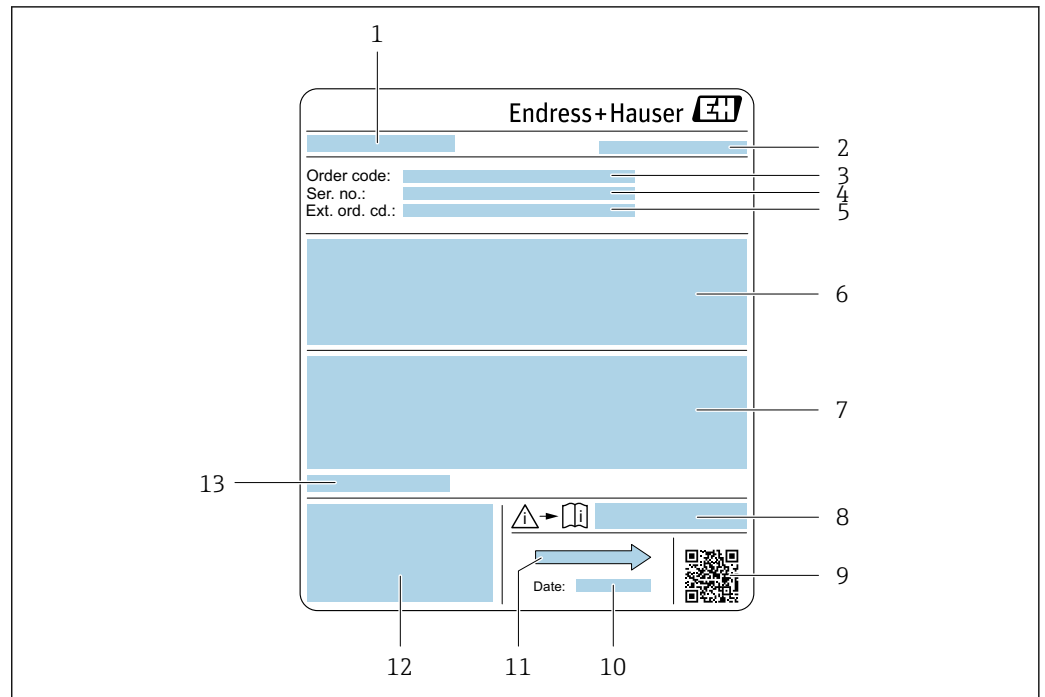

A0029205

3 Example of sensor nameplate

- 1 Name of the sensor
- 2 Manufacturing location
- 3 Order code
- 4 Serial number (ser. no.)
- 5 Extended order code (Ext. ord. cd.)
- 6 Flow; nominal diameter of the sensor; pressure rating; nominal pressure; system pressure; fluid temperature range; material of liner and electrodes
- 7 Approval information for explosion protection, Pressure Equipment Directive and degree of protection
- 8 Document number of safety-related supplementary documentation → 184
- 9 2-D matrix code
- 10 Manufacturing date: year-month
- 11 Flow direction
- 12 CE mark, C-Tick
- 13 Permitted ambient temperature (T_a)




Order code

The measuring device is reordered using the order code.

Extended order code

- The device type (product root) and basic specifications (mandatory features) are always listed.
- Of the optional specifications (optional features), only the safety and approval-related specifications are listed (e.g. LA). If other optional specifications are also ordered, these are indicated collectively using the # placeholder symbol (e.g. #LA#).
- If the ordered optional specifications do not include any safety and approval-related specifications, they are indicated by the + placeholder symbol (e.g. XXXXXX-ABCDE+).

4.2.3 Symbols on measuring device

| Symbol | Meaning |
|---|--|
|  | WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury. |
|  | Reference to documentation Refers to the corresponding device documentation. |
|  | Protective ground connection A terminal which must be connected to ground prior to establishing any other connections. |

5 Storage and transport

5.1 Storage conditions


Observe the following notes for storage:

- ▶ Store in the original packaging to ensure protection from shock.
- ▶ Do not remove protective covers or protective caps installed on process connections. They prevent mechanical damage to the sealing surfaces and contamination in the measuring tube.
- ▶ Protect from direct sunlight to avoid unacceptably high surface temperatures.
- ▶ Select a storage location where moisture cannot collect in the measuring device as fungus and bacteria infestation can damage the lining.
- ▶ Store in a dry and dust-free place.
- ▶ Do not store outdoors.


Storage temperature →  167

5.2 Transporting the product

Transport the measuring device to the measuring point in the original packaging.

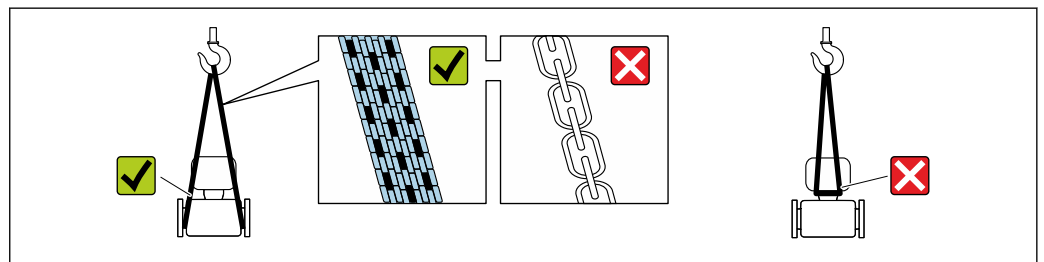

A0029252

-  Do not remove protective covers or caps installed on process connections. They prevent mechanical damage to the sealing surfaces and contamination in the measuring tube.


5.2.1 Measuring devices without lifting lugs

WARNING

Center of gravity of the measuring device is higher than the suspension points of the webbing slings.

Risk of injury if the measuring device slips.

- ▶ Secure the measuring device against slipping or turning.
- ▶ Observe the weight specified on the packaging (stick-on label).

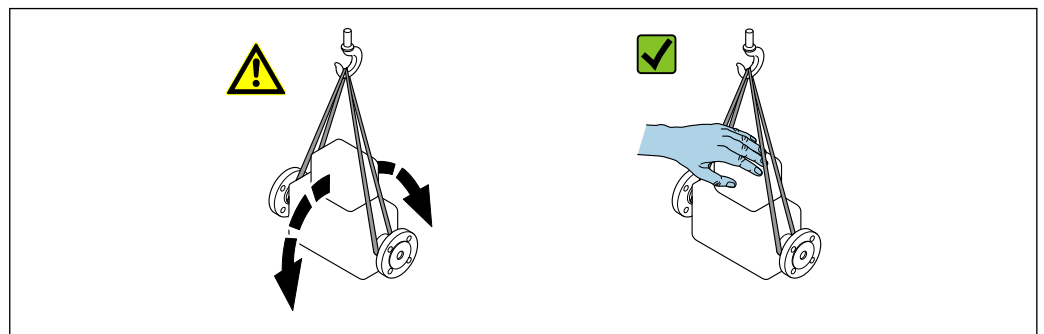

A0029214

5.2.2 Measuring devices with lifting lugs

⚠ CAUTION

Special transportation instructions for devices with lifting lugs

- ▶ Only use the lifting lugs fitted on the device or flanges to transport the device.
- ▶ The device must always be secured at two lifting lugs at least.


5.2.3 Transporting with a fork lift

If transporting in wood crates, the floor structure enables the crates to be lifted lengthwise or at both sides using a forklift.

⚠ CAUTION

Risk of damaging the magnetic coil

- ▶ If transporting by forklift, do not lift the sensor by the metal casing.
- ▶ This would buckle the casing and damage the internal magnetic coils.

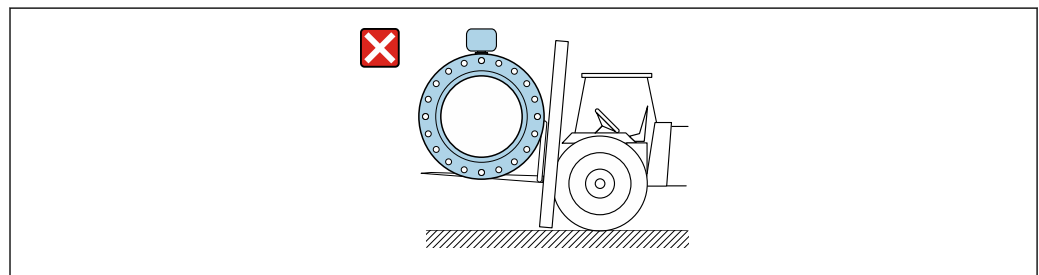

A0029319

5.3 Packaging disposal

All packaging materials are environmentally friendly and 100% recyclable:


- Measuring device secondary packaging: polymer stretch film that conforms to EC Directive 2002/95/EC (RoHS).
- Packaging:
 - Wood crate, treated in accordance with ISPM 15 standard, which is confirmed by the affixed IPPC logo.
 - or
 - Carton in accordance with European Packaging Directive 94/62EC; recyclability is confirmed by the affixed RESY symbol.
- Seaworthy packaging (optional): Wood crate, treated in accordance with ISPM 15 standard, which is confirmed by the affixed IPPC logo.
- Carrying and mounting hardware:
 - Disposable plastic pallet
 - Plastic straps
 - Plastic adhesive strips
- Dunnage: Paper cushion

6 Installation

6.1 Installation conditions

6.1.1 Mounting position

Mounting location

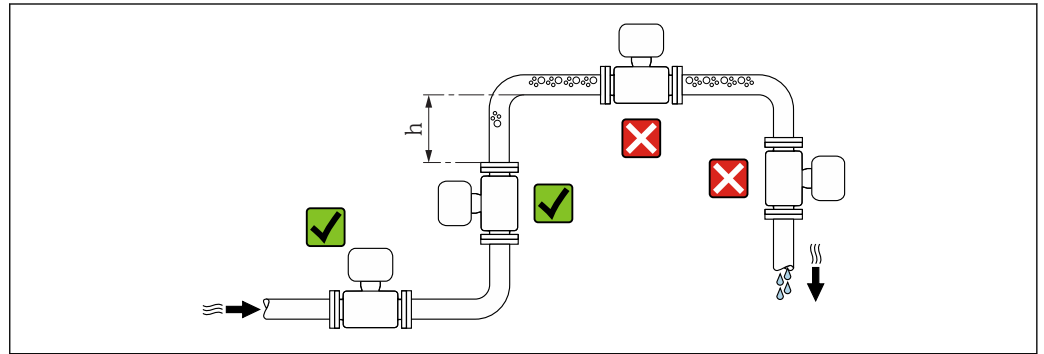


A0029343

Preferably install the sensor in an ascending pipe, and ensure a sufficient distance to the next pipe elbow: $h \geq 2 \times DN$

Installation in down pipes

Install a siphon with a vent valve downstream of the sensor in down pipes whose length $h \geq 5 \text{ m}$ (16.4 ft). This precaution is to avoid low pressure and the consequent risk of damage to the measuring tube. This measure also prevents the system losing prime.

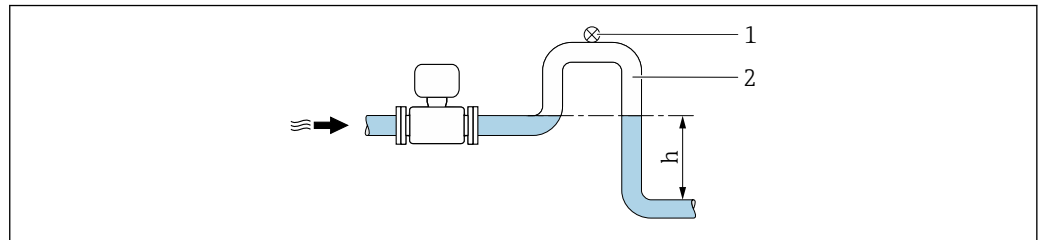


A0028981

4 Installation in a down pipe

- 1 Vent valve
- 2 Pipe siphon
- h Length of down pipe


Installation in partially filled pipes

A partially filled pipe with a gradient necessitates a drain-type configuration.

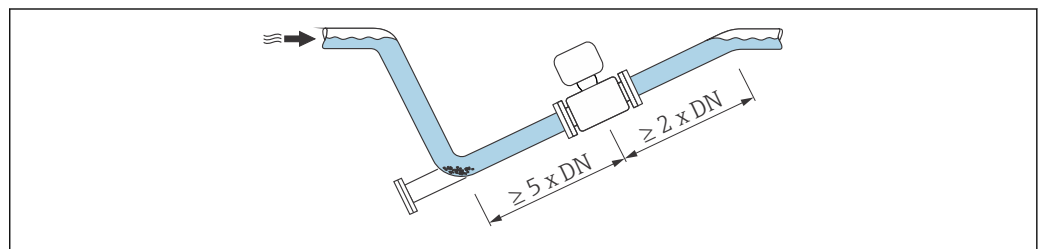

A0029257





For heavy sensors DN ≥ 350 (14")

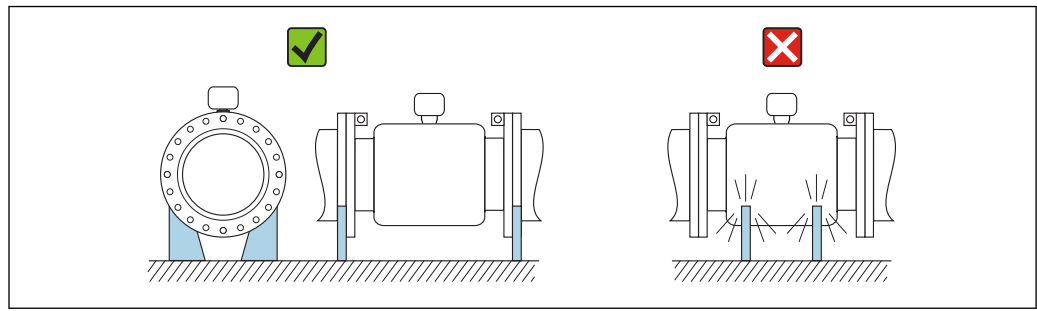

A0016276

Orientation


The direction of the arrow on the sensor nameplate helps you to install the sensor according to the flow direction (direction of medium flow through the piping).
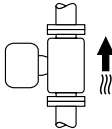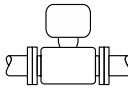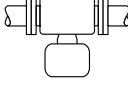
| Orientation | | Recommendation | |
|-------------|---|--|---------------------|
| A | Vertical orientation |  A0015591 | ✓✓ |
| B | Horizontal orientation, transmitter at top |  A0015589 | ✓✓ ¹⁾ |
| C | Horizontal orientation, transmitter at bottom |  A0015590 | ✓✓ ^{2) 3)} |
| D | Horizontal orientation, transmitter at side |  A0015592 | ✗ |

- 1) Applications with low process temperatures may decrease the ambient temperature. To maintain the minimum ambient temperature for the transmitter, this orientation is recommended.
- 2) Applications with high process temperatures may increase the ambient temperature. To maintain the maximum ambient temperature for the transmitter, this orientation is recommended.
- 3) To prevent the electronics module from overheating in the case of a sharp rise in temperature (e.g. CIP- or SIP processes), install the device with the transmitter component pointing downwards.

Horizontal

- Ideally, the measuring electrode plane should be horizontal. This prevents brief insulation of the two measuring electrodes by entrained air bubbles.
- Empty pipe detection only works if the transmitter housing is pointing upwards as otherwise there is no guarantee that the empty pipe detection function will actually respond to a partially filled or empty measuring tube.

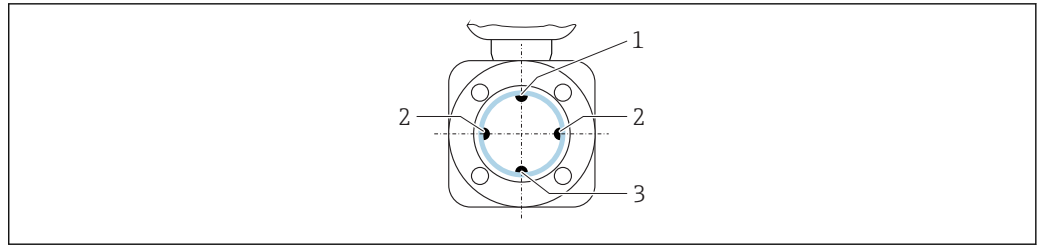


A0029344

- 1 EPD electrode for empty pipe detection
- 2 Measuring electrodes for signal detection
- 3 Reference electrode for potential equalization

i Measuring devices with tantalum or platinum electrodes can be ordered without an EPD electrode. In this case, empty pipe detection is performed via the measuring electrodes.


Inlet and outlet runs

If possible, install the sensor upstream from fittings such as valves, T-pieces or elbows. Observe the following inlet and outlet runs to comply with accuracy specifications:

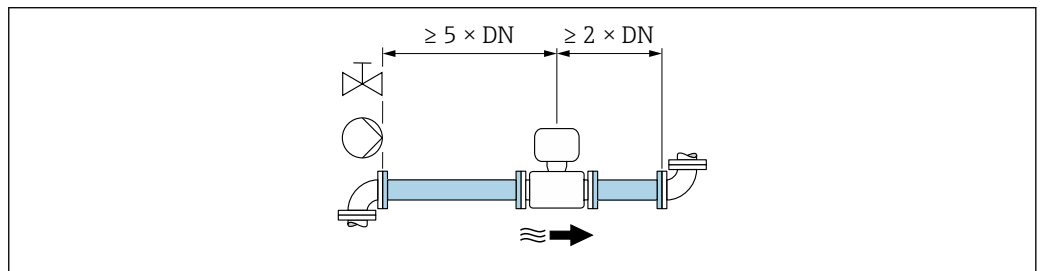

A0028997

- 5 Order code for "Design", option A "Insertion length short, ISO/DVGW until DN400, DN450-2000 1:1" and order code for "Design", option B "Insertion length long, ISO/DVGW until DN400, DN450-2000 1:1.3"

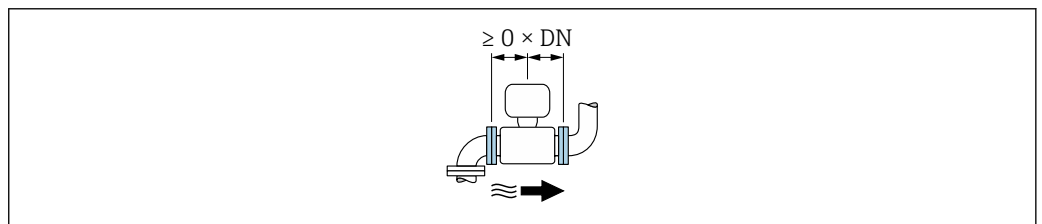

A0032859

- 6 Order code for "Design", option C "Insertion length short ISO/DVGW until DN300, w/o inlet and outlet runs, constricted meas.tube"

Installation dimensions

i For the dimensions and installation lengths of the device, see the "Technical Information" document, "Mechanical construction" section.

6.1.2 Requirements from environment and process

Ambient temperature range


| | |
|---------------|--|
| Transmitter | Standard: -40 to +60 °C (-40 to +140 °F) |
| Local display | -20 to +60 °C (-4 to +140 °F), the readability of the display may be impaired at temperatures outside the temperature range. |

| | |
|--------|---|
| Sensor | <ul style="list-style-type: none"> ▪ Process connection material, carbon steel: -10 to +60 °C (+14 to +140 °F) ▪ Process connection material, stainless steel: -40 to +60 °C (-40 to +140 °F) |
| Liner | Do not exceed or fall below the permitted temperature range of the liner . |

If operating outdoors:

- Install the measuring device in a shady location.
- Avoid direct sunlight, particularly in warm climatic regions.
- Avoid direct exposure to weather conditions.

System pressure

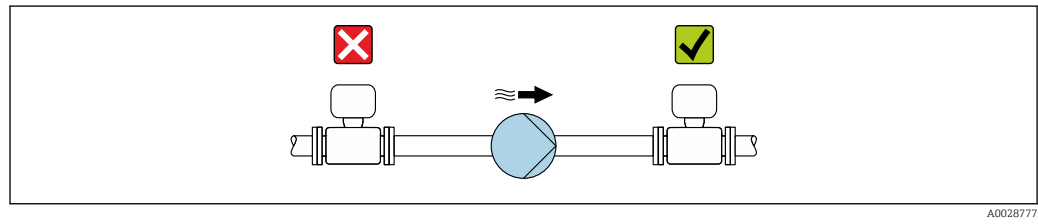


A0028777

Never install the sensor on the pump suction side in order to avoid the risk of low pressure, and thus damage to the liner.

i Furthermore, install pulse dampers if reciprocating, diaphragm or peristaltic pumps are used.

- i** ▪ Information on the liner's resistance to partial vacuum → 169
- Information on the shock resistance of the measuring system → 168
- Information on the vibration resistance of the measuring system → 167

Vibrations

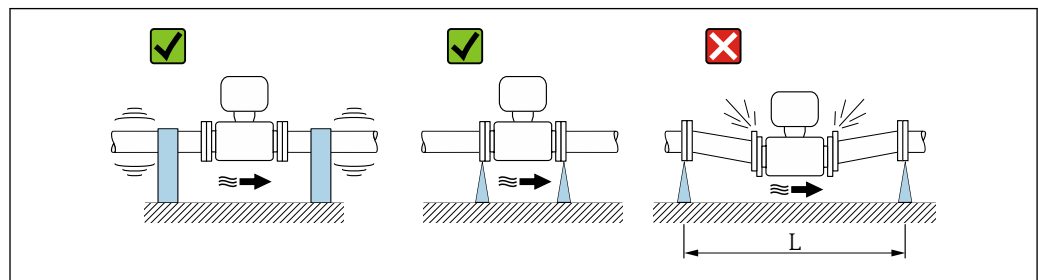

A0029004

7 Measures to avoid device vibrations (L > 10 m (33 ft))

In the event of very strong vibrations, the pipe and sensor must be supported and fixed.

- i** ▪ Information on the shock resistance of the measuring system → 168
- Information on the vibration resistance of the measuring system → 167


Thermal insulation

Pipes generally have to be insulated if they carry very hot fluids to avoid energy losses and prevent accidental contact with pipes at temperatures that could cause injury. Guidelines regulating the insulation of pipes have to be taken into account.

⚠ WARNING

Electronics overheating on account of thermal insulation!

- ▶ The housing support dissipates heat and its entire surface area must remain uncovered. Make sure that the sensor insulation does not extend past the top of the two sensor half-shells.

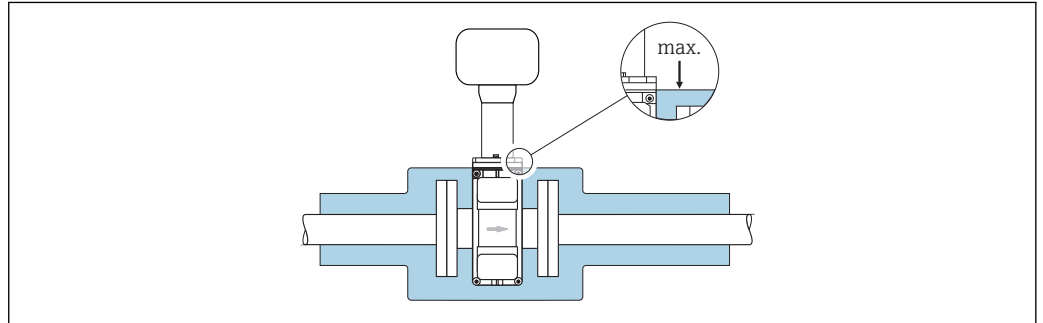


A0031216

Adapters

Suitable adapters to DIN EN 545 (double-flange reducers) can be used to install the sensor in larger-diameter pipes. The resultant increase in the rate of flow improves measuring accuracy with very slow-moving fluids. The nomogram shown here can be used to calculate the pressure loss caused by reducers and expanders.

i The nomogram only applies to liquids with a viscosity similar to that of water.


1. Calculate the ratio of the diameters d/D .
2. From the nomogram read off the pressure loss as a function of flow velocity (downstream from the reduction) and the d/D ratio.

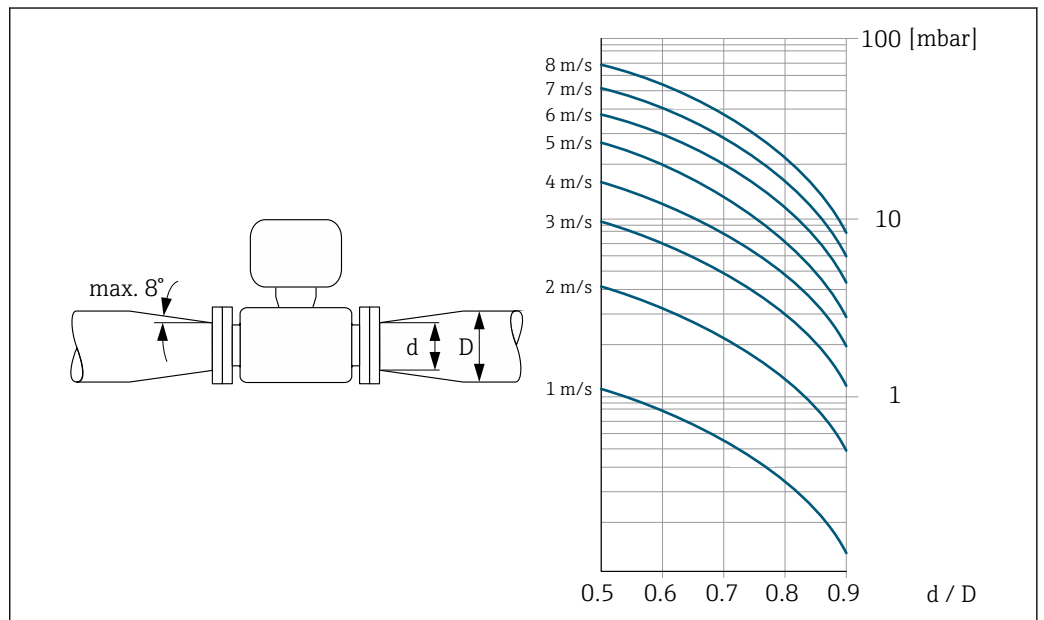

A0029002

6.1.3 Special mounting instructions

Protective cover

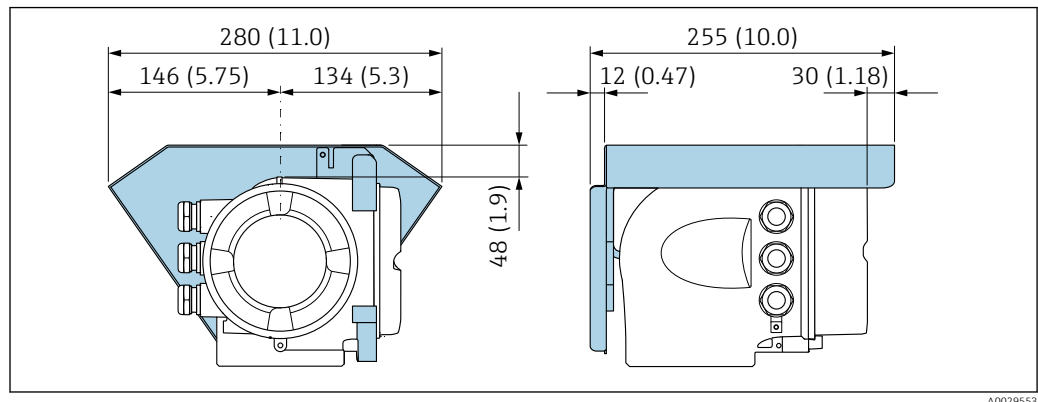

A0029553

6.2 Mounting the measuring device

6.2.1 Required tools

For sensor

For flanges and other process connections: Corresponding mounting tools

6.2.2 Preparing the measuring device

1. Remove all remaining transport packaging.
2. Remove any protective covers or protective caps present from the sensor.
3. Remove stick-on label on the electronics compartment cover.


6.2.3 Mounting the sensor

⚠ WARNING

Danger due to improper process sealing!

- ▶ Ensure that the inside diameters of the gaskets are greater than or equal to that of the process connections and piping.
 - ▶ Ensure that the gaskets are clean and undamaged.
 - ▶ Install the gaskets correctly.
1. Ensure that the direction of the arrow on the sensor matches the flow direction of the medium.
 2. To ensure compliance with device specifications, install the measuring device between the pipe flanges in a way that it is centered in the measurement section.
 3. If using ground disks, comply with the Installation Instructions provided.
 4. Observe required screw tightening torques → 27.

5. Install the measuring device or turn the transmitter housing so that the cable entries do not point upwards.

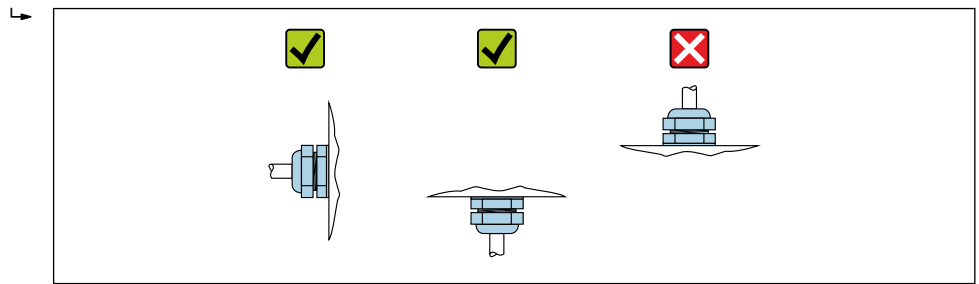

A0029263

Mounting the seals

⚠ CAUTION

An electrically conductive layer could form on the inside of the measuring tube!

Risk of measuring signal short circuit.

- ▶ Do not use electrically conductive sealing compounds such as graphite.

Comply with the following instructions when installing seals:

1. For DIN flanges: only use seals according to DIN EN 1514-1.
2. For "PFA" lining: generally additional seals are **not** required.
3. For "PTFE" lining: generally additional seals are **not** required.

Mounting the ground cable/ground disks

Comply with the information on potential equalization and detailed mounting instructions for the use of ground cables/ground disks .

Screw tightening torques

Please note the following:

- The screw tightening torques listed below apply only to lubricated threads and to pipes not subjected to tensile stress.
- Tighten the screws uniformly and in diagonally opposite sequence.
- Overtightening the screws will deform the sealing faces or damage the seals.

Screw tightening torques for EN 1092-1 (DIN 2501), PN 10/16/25/40

| Nominal diameter [mm] | Pressure rating [bar] | Screws [mm] | Flange thickness [mm] | Max. screw tightening torque [Nm] | |
|--------------------------|--------------------------|----------------|--------------------------|--------------------------------------|-----|
| | | | | PTFE | PFA |
| 15 | PN 40 | 4 × M12 | 16 | 11 | – |
| 25 | PN 40 | 4 × M12 | 18 | 26 | 20 |
| 32 | PN 40 | 4 × M16 | 18 | 41 | 35 |
| 40 | PN 40 | 4 × M16 | 18 | 52 | 47 |
| 50 | PN 40 | 4 × M16 | 20 | 65 | 59 |
| 65 ¹⁾ | PN 16 | 8 × M16 | 18 | 43 | 40 |
| 65 | PN 40 | 8 × M16 | 22 | 43 | 40 |
| 80 | PN 16 | 8 × M16 | 20 | 53 | 48 |
| 80 | PN 40 | 8 × M16 | 24 | 53 | 48 |
| 100 | PN 16 | 8 × M16 | 20 | 57 | 51 |
| 100 | PN 40 | 8 × M20 | 24 | 78 | 70 |
| 125 | PN 16 | 8 × M16 | 22 | 75 | 67 |

| Nominal diameter [mm] | Pressure rating [bar] | Screws [mm] | Flange thickness [mm] | Max. screw tightening torque [Nm] | |
|--------------------------|--------------------------|----------------|--------------------------|--------------------------------------|-----|
| | | | | PTFE | PFA |
| 125 | PN 40 | 8 × M24 | 26 | 111 | 99 |
| 150 | PN 16 | 8 × M20 | 22 | 99 | 85 |
| 150 | PN 40 | 8 × M24 | 28 | 136 | 120 |
| 200 | PN 10 | 8 × M20 | 24 | 141 | 101 |
| 200 | PN 16 | 12 × M20 | 24 | 94 | 67 |
| 200 | PN 25 | 12 × M24 | 30 | 138 | 105 |
| 250 | PN 10 | 12 × M20 | 26 | 110 | - |
| 250 | PN 16 | 12 × M24 | 26 | 131 | - |
| 250 | PN 25 | 12 × M27 | 32 | 200 | - |
| 300 | PN 10 | 12 × M20 | 26 | 125 | - |
| 300 | PN 16 | 12 × M24 | 28 | 179 | - |
| 300 | PN 25 | 16 × M27 | 34 | 204 | - |
| 350 | PN 10 | 16 × M20 | 26 | 188 | - |
| 350 | PN 16 | 16 × M24 | 30 | 254 | - |
| 350 | PN 25 | 16 × M30 | 38 | 380 | - |
| 400 | PN 10 | 16 × M24 | 26 | 260 | - |
| 400 | PN 16 | 16 × M27 | 32 | 330 | - |
| 400 | PN 25 | 16 × M33 | 40 | 488 | - |
| 450 | PN 10 | 20 × M24 | 28 | 235 | - |
| 450 | PN 16 | 20 × M27 | 40 | 300 | - |
| 450 | PN 25 | 20 × M33 | 46 | 385 | - |
| 500 | PN 10 | 20 × M24 | 28 | 265 | - |
| 500 | PN 16 | 20 × M30 | 34 | 448 | - |
| 500 | PN 25 | 20 × M33 | 48 | 533 | - |
| 600 | PN 10 | 20 × M27 | 28 | 345 | - |
| 600 ¹⁾ | PN 16 | 20 × M33 | 36 | 658 | - |
| 600 | PN 25 | 20 × M36 | 58 | 731 | - |

1) Designed acc. to EN 1092-1 (not to DIN 2501)

Screw tightening torques for EN 1092-1 (DIN 2501), PN 10/16/25, P245GH/stainless; calculated according to EN 1591-1:2014 for flanges as per EN 1092-1:2013

| Nominal diameter [mm] | Pressure rating [bar] | Screws [mm] | Flange thickness [mm] | Nom. screw tightening torque [Nm] |
|--------------------------|--------------------------|----------------|--------------------------|--------------------------------------|
| | | | | PTFE |
| 350 | PN 10 | 16 × M20 | 26 | 60 |
| 350 | PN 16 | 16 × M24 | 30 | 115 |
| 350 | PN 25 | 16 × M30 | 38 | 220 |
| 400 | PN 10 | 16 × M24 | 26 | 90 |
| 400 | PN 16 | 16 × M27 | 32 | 155 |
| 400 | PN 25 | 16 × M33 | 40 | 290 |
| 450 | PN 10 | 20 × M24 | 28 | 90 |

| Nominal diameter | Pressure rating | Screws | Flange thickness | Nom. screw tightening torque [Nm] |
|------------------|-----------------|----------|------------------|-----------------------------------|
| [mm] | [bar] | [mm] | [mm] | PTFE |
| 450 | PN 16 | 20 × M27 | 34 | 155 |
| 450 | PN 25 | 20 × M33 | 46 | 290 |
| 500 | PN 10 | 20 × M24 | 28 | 100 |
| 500 | PN 16 | 20 × M30 | 36 | 205 |
| 500 | PN 25 | 20 × M33 | 48 | 345 |
| 600 | PN 10 | 20 × M27 | 30 | 150 |
| 600 | PN 16 | 20 × M33 | 40 | 310 |
| 600 | PN 25 | 20 × M36 | 48 | 500 |

Screw tightening torques for ASME B16.5, Class 150/300

| Nominal diameter | | Pressure rating | Screws | Max. screw tightening torque [Nm] ([lbf · ft]) | |
|------------------|------|-----------------|------------|---|----------|
| [mm] | [in] | [psi] | [in] | PTFE | PFA |
| 15 | ½ | Class 150 | 4 × ½ | 6 (4) | - (-) |
| 15 | ½ | Class 300 | 4 × ½ | 6 (4) | - (-) |
| 25 | 1 | Class 150 | 4 × ½ | 11 (8) | 10 (7) |
| 25 | 1 | Class 300 | 4 × 5/8 | 14 (10) | 12 (9) |
| 40 | 1 ½ | Class 150 | 4 × ½ | 24 (18) | 21 (15) |
| 40 | 1 ½ | Class 300 | 4 × ¾ | 34 (25) | 31 (23) |
| 50 | 2 | Class 150 | 4 × 5/8 | 47 (35) | 44 (32) |
| 50 | 2 | Class 300 | 8 × 5/8 | 23 (17) | 22 (16) |
| 80 | 3 | Class 150 | 4 × 5/8 | 79 (58) | 67 (49) |
| 80 | 3 | Class 300 | 8 × ¾ | 47 (35) | 42 (31) |
| 100 | 4 | Class 150 | 8 × 5/8 | 56 (41) | 50 (37) |
| 100 | 4 | Class 300 | 8 × ¾ | 67 (49) | 59 (44) |
| 150 | 6 | Class 150 | 8 × ¾ | 106 (78) | 86 (63) |
| 150 | 6 | Class 300 | 12 × ¾ | 73 (54) | 67 (49) |
| 200 | 8 | Class 150 | 8 × ¾ | 143 (105) | 109 (80) |
| 250 | 10 | Class 150 | 12 × 7/8 | 135 (100) | - (-) |
| 300 | 12 | Class 150 | 12 × 7/8 | 178 (131) | - (-) |
| 350 | 14 | Class 150 | 12 × 1 | 260 (192) | - (-) |
| 400 | 16 | Class 150 | 16 × 1 | 246 (181) | - (-) |
| 450 | 18 | Class 150 | 16 × 1 1/8 | 371 (274) | - (-) |
| 500 | 20 | Class 150 | 20 × 1 1/8 | 341 (252) | - (-) |
| 600 | 24 | Class 150 | 20 × 1 ¼ | 477 (352) | - (-) |

Screw tightening torques for JIS B2220, 10/20K

| Nominal diameter [mm] | Pressure rating [bar] | Screws [mm] | Max. screw tightening torque [Nm] | |
|--------------------------|--------------------------|----------------|-----------------------------------|-----|
| | | | PTFE | PFA |
| 25 | 10K | 4 × M16 | 32 | 27 |
| 25 | 20K | 4 × M16 | 32 | 27 |
| 32 | 10K | 4 × M16 | 38 | – |
| 32 | 20K | 4 × M16 | 38 | – |
| 40 | 10K | 4 × M16 | 41 | 37 |
| 40 | 20K | 4 × M16 | 41 | 37 |
| 50 | 10K | 4 × M16 | 54 | 46 |
| 50 | 20K | 8 × M16 | 27 | 23 |
| 65 | 10K | 4 × M16 | 74 | 63 |
| 65 | 20K | 8 × M16 | 37 | 31 |
| 80 | 10K | 8 × M16 | 38 | 32 |
| 80 | 20K | 8 × M20 | 57 | 46 |
| 100 | 10K | 8 × M16 | 47 | 38 |
| 100 | 20K | 8 × M20 | 75 | 58 |
| 125 | 10K | 8 × M20 | 80 | 66 |
| 125 | 20K | 8 × M22 | 121 | 103 |
| 150 | 10K | 8 × M20 | 99 | 81 |
| 150 | 20K | 12 × M22 | 108 | 72 |
| 200 | 10K | 12 × M20 | 82 | 54 |
| 200 | 20K | 12 × M22 | 121 | 88 |
| 250 | 10K | 12 × M22 | 133 | – |
| 250 | 20K | 12 × M24 | 212 | – |
| 300 | 10K | 16 × M22 | 99 | – |
| 300 | 20K | 16 × M24 | 183 | – |

Screw tightening torques for JIS B2220, 10/20K

| Nominal diameter [mm] | Pressure rating [bar] | Screws [mm] | Nom. screw tightening torque [Nm] | |
|--------------------------|--------------------------|----------------|-----------------------------------|-----|
| | | | PUR | HG |
| 350 | 10K | 16 × M22 | 109 | 109 |
| 350 | 20K | 16 × M30×3 | 217 | 217 |
| 400 | 10K | 16 × M24 | 163 | 163 |
| 400 | 20K | 16 × M30×3 | 258 | 258 |
| 450 | 10K | 16 × M24 | 155 | 155 |
| 450 | 20K | 16 × M30×3 | 272 | 272 |
| 500 | 10K | 16 × M24 | 183 | 183 |
| 500 | 20K | 16 × M30×3 | 315 | 315 |
| 600 | 10K | 16 × M30 | 235 | 235 |
| 600 | 20K | 16 × M36×3 | 381 | 381 |
| 700 | 10K | 16 × M30 | 300 | 300 |
| 750 | 10K | 16 × M30 | 339 | 339 |

Screw tightening torques for AS 2129, Table E


| Nominal diameter [mm] | Screws [mm] | Max. screw tightening torque [Nm] PTFE |
|--------------------------|----------------|--|
| 25 | 4 × M12 | 21 |
| 50 | 4 × M16 | 42 |

Screw tightening torques for AS 4087, PN 16

| Nominal diameter [mm] | Screws [mm] | Max. screw tightening torque [Nm] PTFE |
|--------------------------|----------------|--|
| 50 | 4 × M16 | 42 |

6.2.4 Turning the transmitter housing


To provide easier access to the connection compartment or display module, the transmitter housing can be turned.

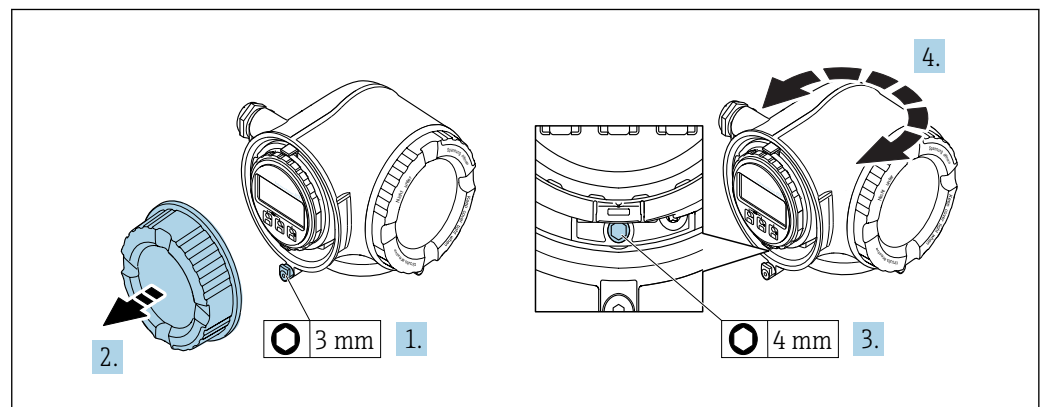

1. Depending on the device version: Loosen the securing clamp of the connection compartment cover.
2. Unscrew the connection compartment cover.
3. Release the fixing screw.
4. Turn the housing to the desired position.
5. Firmly tighten the securing screw.
6. Screw on the connection compartment cover
7. Depending on the device version: Attach the securing clamp of the connection compartment cover.

6.2.5 Turning the display module

The display module can be turned to optimize display readability and operability.

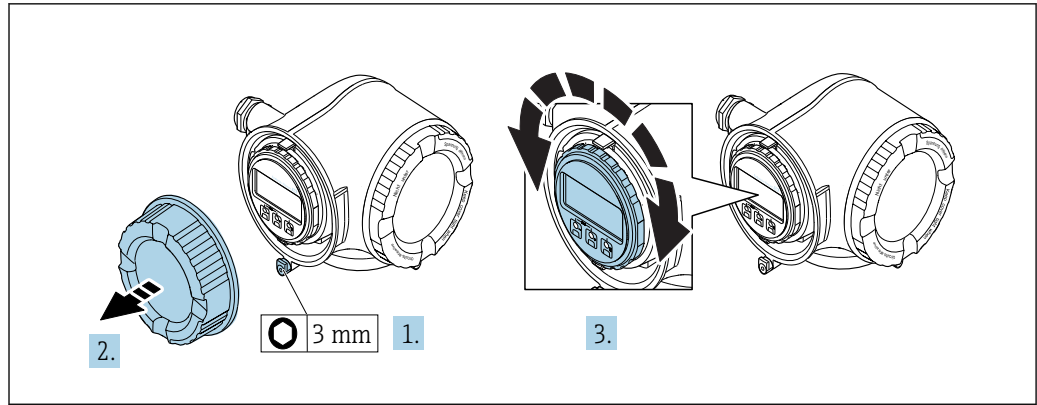

1. Depending on the device version: Loosen the securing clamp of the connection compartment cover.
2. Unscrew the connection compartment cover.
3. Turn the display module to the desired position: max. $8 \times 45^\circ$ in each direction.
4. Screw on the connection compartment cover.
5. Depending on the device version: Attach the securing clamp of the connection compartment cover.

6.3 Post-installation check

| | |
|---|--------------------------|
| Is the device undamaged (visual inspection)? | <input type="checkbox"/> |
| Does the measuring device conform to the measuring point specifications? For example: <ul style="list-style-type: none"> ▪ Process temperature ▪ Process pressure (refer to the section on "Pressure-temperature ratings" in the "Technical Information" document) ▪ Ambient temperature ▪ Measuring range | <input type="checkbox"/> |
| Has the correct orientation for the sensor been selected ? <ul style="list-style-type: none"> ▪ According to sensor type ▪ According to medium temperature ▪ According to medium properties (outgassing, with entrained solids) | <input type="checkbox"/> |
| Does the arrow on the sensor nameplate match the direction of flow of the fluid through the piping ? | <input type="checkbox"/> |
| Are the measuring point identification and labeling correct (visual inspection)? | <input type="checkbox"/> |
| Is the device adequately protected from precipitation and direct sunlight? | <input type="checkbox"/> |
| Have the fixing screws been tightened with the correct tightening torque? | <input type="checkbox"/> |

7 Electrical connection

NOTICE

The measuring device does not have an internal circuit breaker.

- ▶ For this reason, assign the measuring device a switch or power-circuit breaker so that the power supply line can be easily disconnected from the mains.
- ▶ Although the measuring device is equipped with a fuse, additional overcurrent protection (maximum 10 A) should be integrated into the system installation.

7.1 Connection conditions

7.1.1 Required tools

- For cable entries: Use corresponding tools
- For securing clamp: Allen key 3 mm
- Wire stripper
- When using stranded cables: Crimper for wire end ferrule
- For removing cables from terminal: Flat blade screwdriver ≤ 3 mm (0.12 in)

7.1.2 Requirements for connecting cable

The connecting cables provided by the customer must fulfill the following requirements.

Electrical safety

In accordance with applicable federal/national regulations.

Protective ground cable

Cable: 2.1 mm² (14 AWG)

The grounding impedance must be less than 1 Ω .

Permitted temperature range

- The installation guidelines that apply in the country of installation must be observed.
- The cables must be suitable for the minimum and maximum temperatures to be expected.

Power supply cable

Standard installation cable is sufficient.

Signal cable

Current output 4 to 20 mA HART

A shielded cable is recommended. Observe grounding concept of the plant.

Current output 0/4 to 20 mA

Standard installation cable is sufficient.

Pulse/frequency/switch output

Standard installation cable is sufficient.

Double pulse output

Standard installation cable is sufficient.

Relay output

Standard installation cable is sufficient.

Current input 0/4 to 20 mA

Standard installation cable is sufficient.

Status input

Standard installation cable is sufficient.

Cable diameter

- Cable glands supplied:
M20 × 1.5 with cable \varnothing 6 to 12 mm (0.24 to 0.47 in)
- Spring-loaded terminals: Suitable for strands and strands with ferrules.
Conductor cross-section 0.2 to 2.5 mm² (24 to 12 AWG).

Requirements for the connecting cable*Optionally available connecting cable*

A cable is supplied depending on the order option

- Order code for measuring device: order code **030** for "Display; operation", option **O** or
- Order code for measuring device: order code **030** for "Display; operation", option **M** and
- Order code for DKX001: order code **040** for "Cable", option **A, B, D, E**

| | |
|---------------------------------|--|
| Standard cable | 2 × 2 × 0.34 mm ² (22 AWG) PVC cable with common shield (2 pairs, pair-stranded) |
| Flame resistance | According to DIN EN 60332-1-2 |
| Oil-resistance | According to DIN EN 60811-2-1 |
| Shielding | Tin-plated copper-braid, optical cover ≥ 85 % |
| Capacitance: core/shield | ≤200 pF/m |
| L/R | ≤24 μH/Ω |
| Available cable length | 5 m (15 ft)/10 m (35 ft)/20 m (65 ft)/30 m (100 ft) |
| Operating temperature | When mounted in a fixed position: -50 to +105 °C (-58 to +221 °F); when cable can move freely: -25 to +105 °C (-13 to +221 °F) |

Standard cable - customer-specific cable

No cable is supplied, and it must be provided by the customer (up to max.

300 m (1 000 ft)) for the following order option:

Order code for DKX001: Order code **040** for "Cable", option **1** "None, provided by customer, max 300 m"

A standard cable can be used as the connecting cable.

| | |
|---------------------------------|---|
| Standard cable | 4 cores (2 pairs); pair-stranded with common shield |
| Shielding | Tin-plated copper-braid, optical cover ≥ 85 % |
| Capacitance: core/shield | Maximum 1 000 nF for Zone 1, Class I, Division 1 |
| L/R | Maximum 24 μH/Ω for Zone 1, Class I, Division 1 |
| Cable length | Maximum 300 m (1 000 ft), see the following table |


| Cross-section | Max. cable length for use in Non-hazardous area, Ex Zone 2, Class I, Division 2 Ex Zone 1, Class I, Division 1 |
|-------------------------------|---|
| 0.34 mm ² (22 AWG) | 80 m (270 ft) |
| 0.50 mm ² (20 AWG) | 120 m (400 ft) |
| 0.75 mm ² (18 AWG) | 180 m (600 ft) |
| 1.00 mm ² (17 AWG) | 240 m (800 ft) |
| 1.50 mm ² (15 AWG) | 300 m (1 000 ft) |

7.1.3 Terminal assignment

Transmitter: supply voltage, input/outputs

The terminal assignment of the inputs and outputs depends on the individual order version of the device. The device-specific terminal assignment is documented on an adhesive label in the terminal cover.

| Supply voltage | | Input/output 1 | | Input/output 2 | | Input/output 3 | |
|--|-------|----------------|--------|----------------|--------|----------------|--------|
| 1 (+) | 2 (-) | 26 (+) | 27 (-) | 24 (+) | 25 (-) | 22 (+) | 23 (-) |
| Device-specific terminal assignment: adhesive label in terminal cover. | | | | | | | |

i Terminal assignment of the remote display and operating module →  39.


7.1.4 Preparing the measuring device

NOTICE

Insufficient sealing of the housing!

Operational reliability of the measuring device could be compromised.


► Use suitable cable glands corresponding to the degree of protection.

1. Remove dummy plug if present.
2. If the measuring device is supplied without cable glands:
Provide suitable cable gland for corresponding connecting cable.
3. If the measuring device is supplied with cable glands:
Observe requirements for connecting cables →  33.


7.2 Connecting the measuring device

NOTICE

Limitation of electrical safety due to incorrect connection!


- Have electrical connection work carried out by appropriately trained specialists only.
- Observe applicable federal/national installation codes and regulations.
- Comply with local workplace safety regulations.
- Always connect the protective ground cable  before connecting additional cables.
- For use in potentially explosive atmospheres, observe the information in the device-specific Ex documentation.

7.2.1 Connecting the transmitter

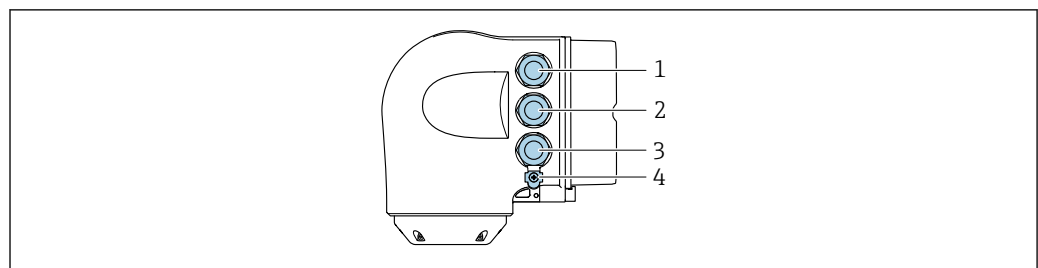


A0026781

- 1 Terminal connection for supply voltage
- 2 Terminal connection for signal transmission, input/output
- 3 Terminal connection for signal transmission, input/output or terminal connection for network connection via service interface (CDI-RJ45); optional: connection for external WLAN antenna or remote display and operating module DKX001
- 4 Protective earth (PE)

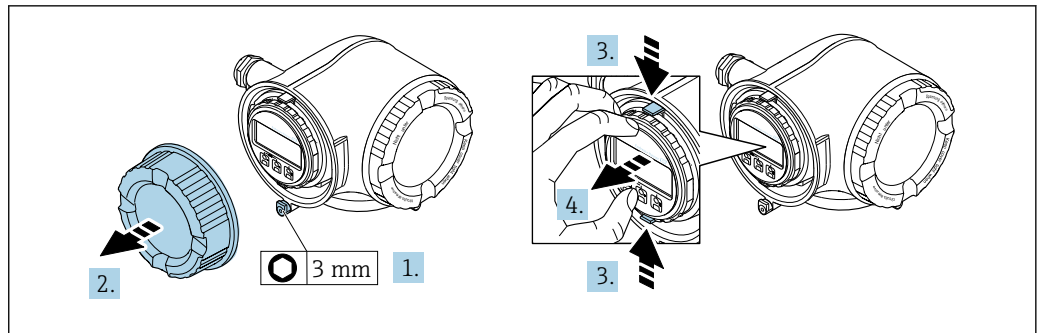


A0029813

1. Loosen the securing clamp of the connection compartment cover.
2. Unscrew the connection compartment cover.
3. Squeeze the tabs of the display module holder together.
4. Remove the display module holder.

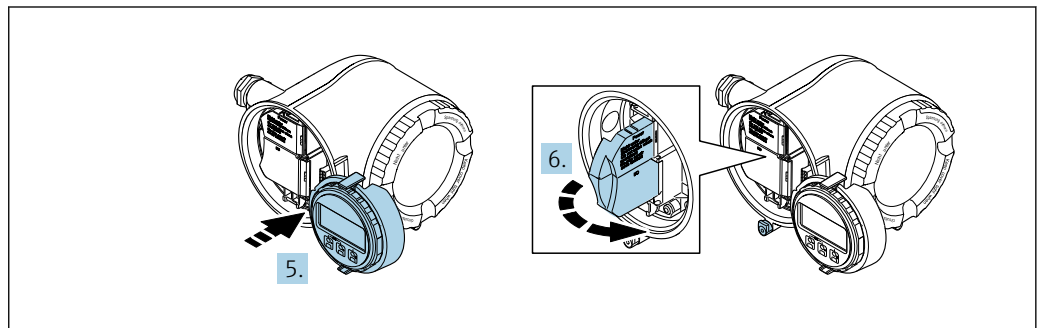


A0029814

5. Attach the holder to the edge of the electronics compartment.
6. Open the terminal cover.

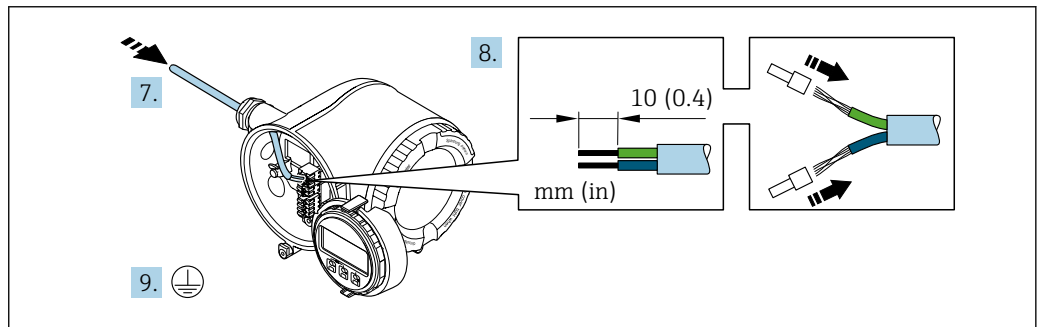

A0029815


7. Push the cable through the cable entry . To ensure tight sealing, do not remove the sealing ring from the cable entry.
8. Strip the cable and cable ends. In the case of stranded cables, also fit ferrules.
9. Connect the protective ground.

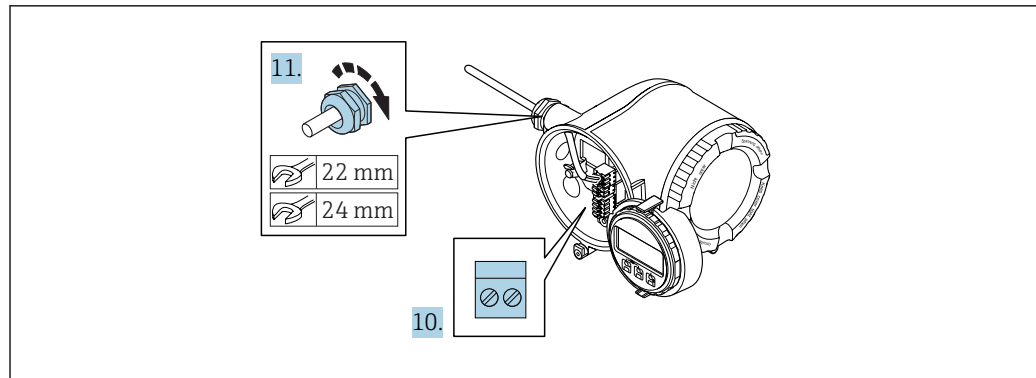

A0029816

10. Connect the cable in accordance with the terminal assignment .
 - ↳ **Signal cable terminal assignment:** The device-specific terminal assignment is documented on an adhesive label in the terminal cover.
 - Supply voltage terminal assignment:** Adhesive label in the terminal cover or → 36.
11. Firmly tighten the cable glands.
 - ↳ This concludes the cable connection process.
12. Close the terminal cover.
13. Fit the display module holder in the electronics compartment.
14. Screw on the connection compartment cover.
15. Secure the securing clamp of the connection compartment cover.

Removing a cable

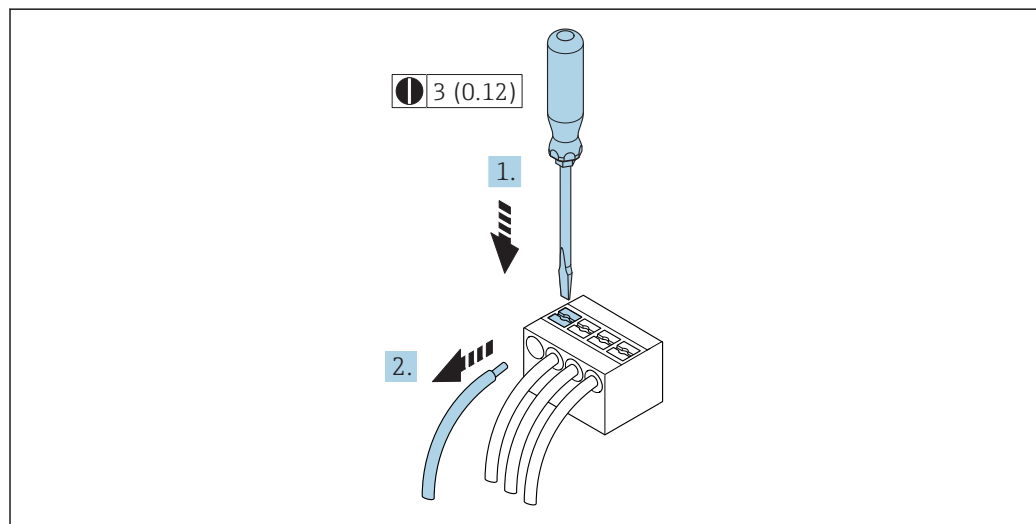

A0029598


8 Engineering unit mm (in)

1. To remove a cable from the terminal, use a flat-blade screwdriver to push the slot between the two terminal holes
2. while simultaneously pulling the cable end out of the terminal.

7.2.2 Connecting the remote display and operating module DKX001

i The remote display and operating module DKX001 is available as an optional extra → 154.

- The measuring device is always supplied with a dummy cover when the remote display and operating module DKX001 is ordered directly with the measuring device. Display or operation at the transmitter is not possible in this case.
- If ordered subsequently, the remote display and operating module DKX001 may not be connected at the same time as the existing measuring device display module. Only one display or operation unit may be connected to the transmitter at any one time.

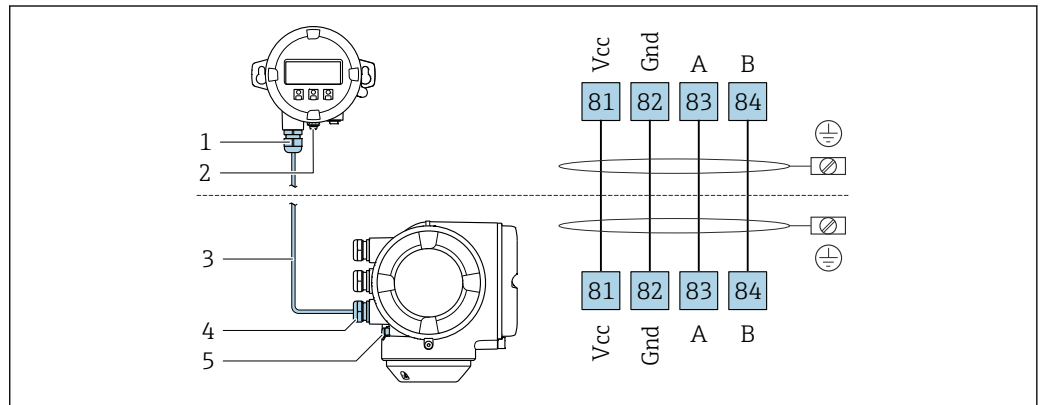

- 1 Remote display and operating module DKX001
- 2 Protective earth (PE)
- 3 Connecting cable
- 4 Measuring device
- 5 Protective earth (PE)

7.3 Ensure potential equalization

7.3.1 Requirements


CAUTION

Electrode damage can result in the complete failure of the device!

- ▶ Same electrical potential for the medium and sensor
- ▶ Company-internal grounding concepts
- ▶ Pipe material and grounding

7.3.2 Connection example, standard scenario

Metal, grounded pipe

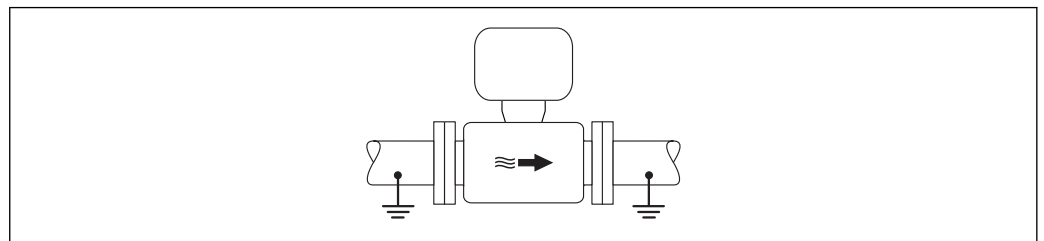

9 Potential equalization via measuring tube


7.3.3 Connection example in special situations

Unlined and ungrounded metal pipe

This connection method also applies in situations where:

- The customary potential equalization is not used
- Equalizing currents are present

| | |
|--------------|---|
| Ground cable | Copper wire, at least 6 mm ² (0.0093 in ²) |
|--------------|---|

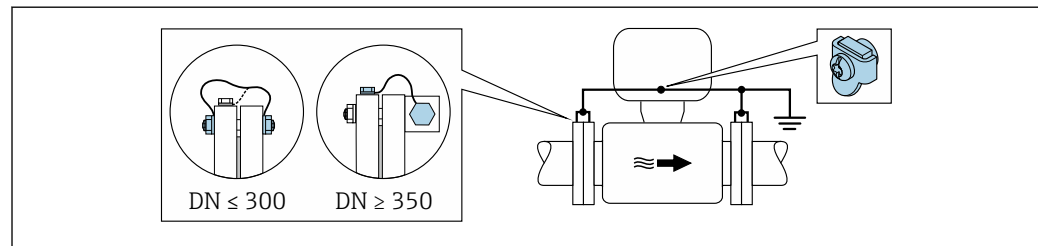

10 Potential equalization via ground terminal and pipe flanges


1. Connect both sensor flanges to the pipe flange via a ground cable and ground them.
2. If DN ≤ 300 (12"): Mount the ground cable directly on the conductive flange coating of the sensor with the flange screws.
3. If DN ≥ 350 (14"): Mount the ground cable directly on the metal transport bracket. Observe screw tightening torques: see the Sensor Brief Operating Instructions.
4. Connect the connection housing of the transmitter or sensor to ground potential by means of the ground terminal provided for the purpose.

Plastic pipe or pipe with insulating liner

This connection method also applies in situations where:

- The customary potential equalization is not used
- Equalizing currents are present

| | |
|--------------|---|
| Ground cable | Copper wire, at least 6 mm ² (0.0093 in ²) |
|--------------|---|

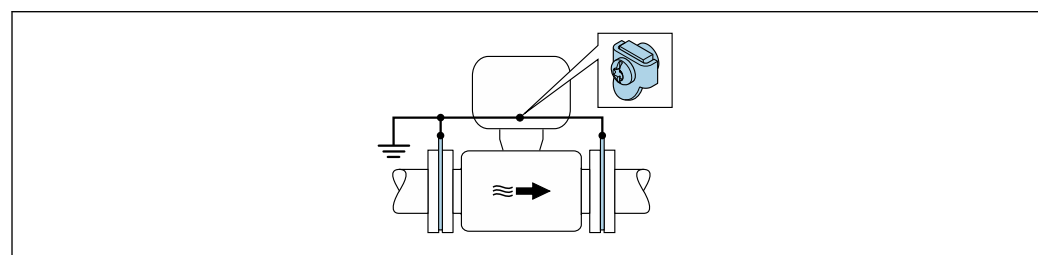

11 Potential equalization via ground terminal and ground disks


1. Connect the ground disks to the ground terminal via the ground cable.
2. Connect the ground disks to ground potential.

Pipe with a cathodic protection unit

This connection method is only used if the following two conditions are met:

- Metal pipe without liner or pipe with electrically conductive liner
- Cathodic protection is integrated in the personal protection equipment

| | |
|---------------------|---|
| Ground cable | Copper wire, at least 6 mm ² (0.0093 in ²) |
|---------------------|---|

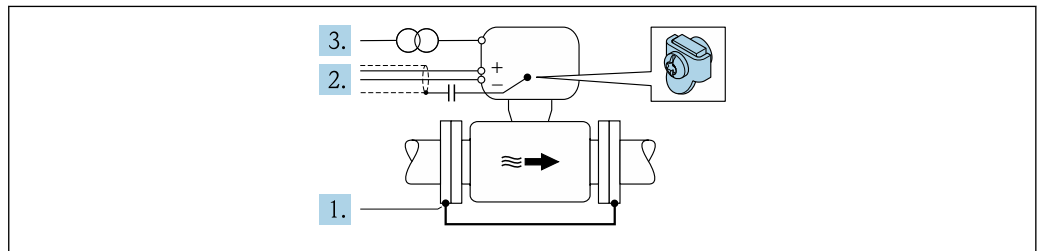

A0029340


Prerequisite: The sensor is installed in the pipe in a way that provides electrical insulation.

1. Connect the two flanges of the pipe to one another via a ground cable.
2. Guide the shield of the signal lines through a capacitor.
3. Connect the measuring device to the power supply such that it is floating in relation to the protective ground (isolation transformer).

7.4 Special connection instructions

7.4.1 Connection examples


Current output 4 to 20 mA HART

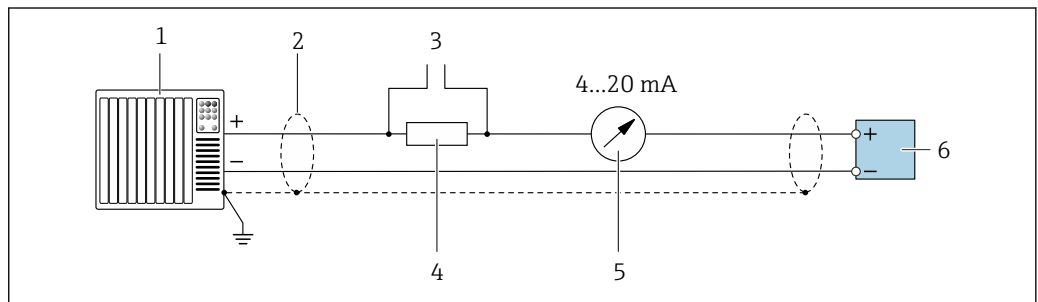

A0029055

12 Connection example for 4 to 20 mA HART current output (active)

- 1 Automation system with current input (e.g. PLC)
- 2 Cable shield: the cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- 3 Connection for HART operating devices → 67
- 4 Resistor for HART communication ($\geq 250 \Omega$): observe maximum load → 160
- 5 Analog display unit: observe maximum load → 160
- 6 Transmitter

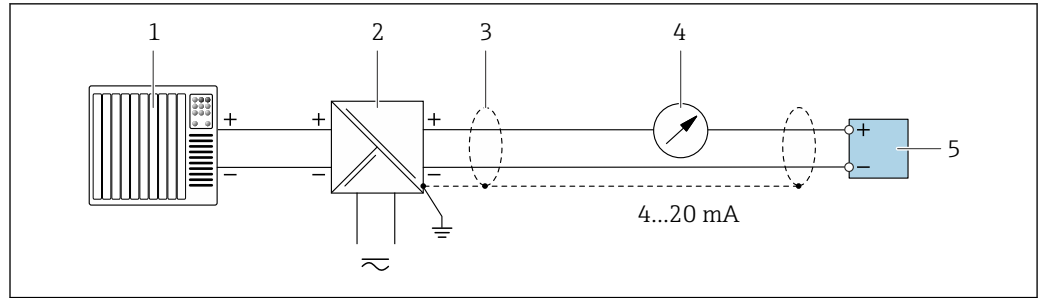


A0028762

13 Connection example for 4 to 20 mA HART current output (passive)

- 1 Automation system with current input (e.g. PLC)
- 2 Power supply
- 3 Cable shield: the cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- 4 Analog display unit: observe maximum load → 160
- 5 Transmitter

HART input

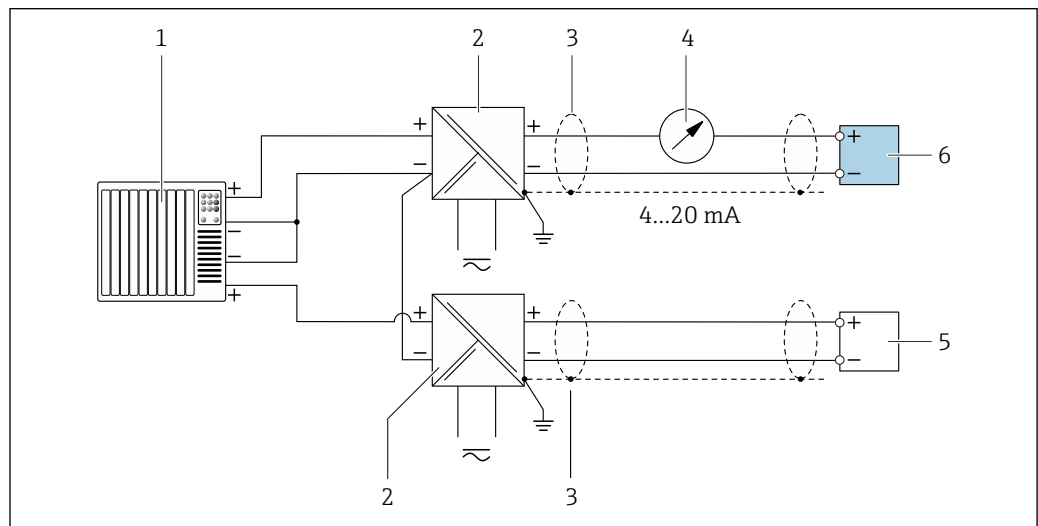


A0028763

14 Connection example for HART input with a common negative (passive)

- 1 Automation system with HART output (e.g. PLC)
- 2 Active barrier for power supply (e.g. RN221N)
- 3 Cable shield: the cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- 4 Analog display unit: observe maximum load
- 5 Pressure transmitter (e.g. Cerabar M, Cerabar S): see requirements
- 6 Transmitter


Current output 4-20 mA

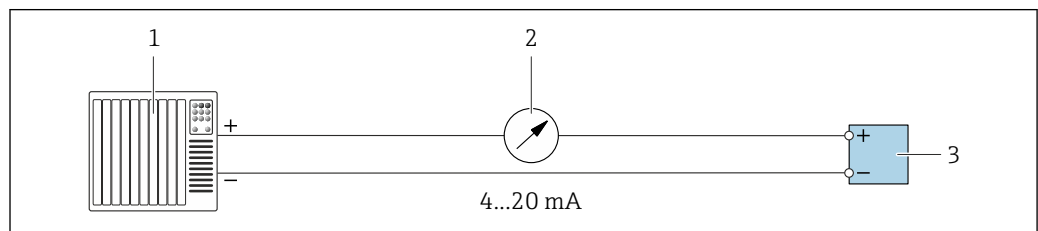

A0028758

15 Connection example for 4-20 mA current output (active)

- 1 Automation system with current input (e.g. PLC)
- 2 Analog display unit: observe maximum load
- 3 Transmitter

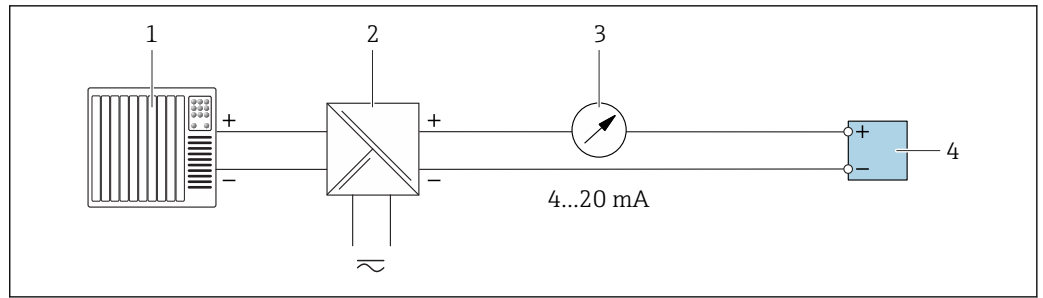


A0028759

16 Connection example for 4-20 mA current output (passive)

- 1 Automation system with current input (e.g. PLC)
- 2 Active barrier for power supply (e.g. RN221N)
- 3 Analog display unit: observe maximum load
- 4 Transmitter

Pulse/frequency output

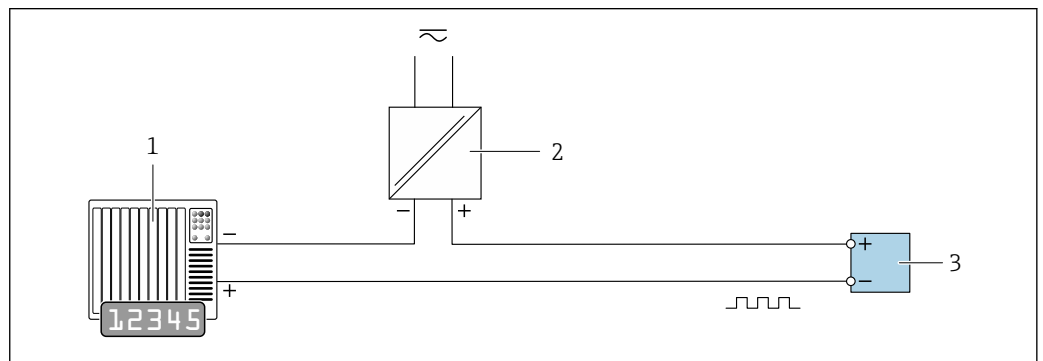


A0028761

17 Connection example for pulse/frequency output (passive)

- 1 Automation system with pulse/frequency input (e.g. PLC)
- 2 Power supply
- 3 Transmitter: Observe input values → 161

Switch output

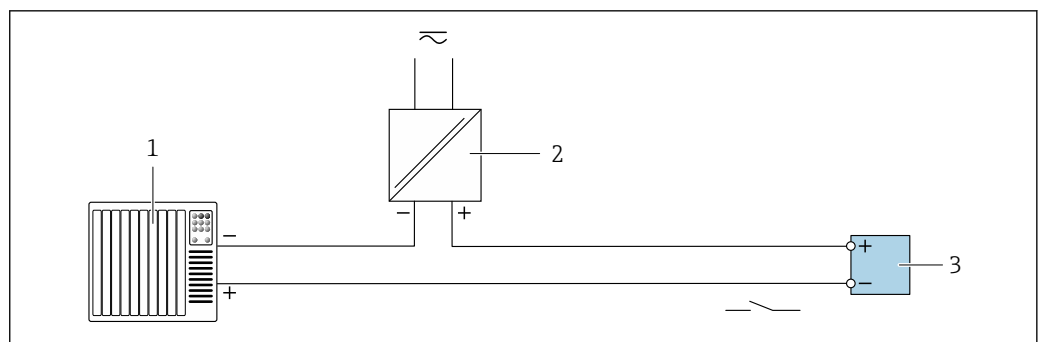


A0028760

18 Connection example for switch output (passive)

- 1 Automation system with switch input (e.g. PLC)
- 2 Power supply
- 3 Transmitter: Observe input values → 161


Double pulse output

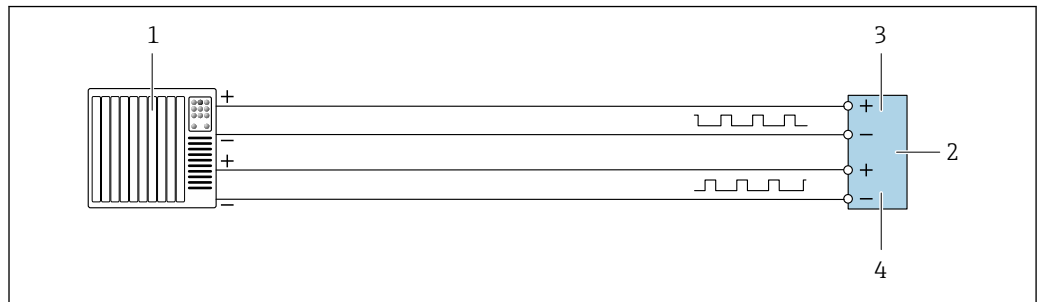

A0029280

19 Connection example for double pulse output (active)

- 1 Automation system with double pulse input (e.g. PLC)
- 2 Transmitter: Observe input values → 162
- 3 Double pulse output
- 4 Double pulse output (slave), phase-shifted

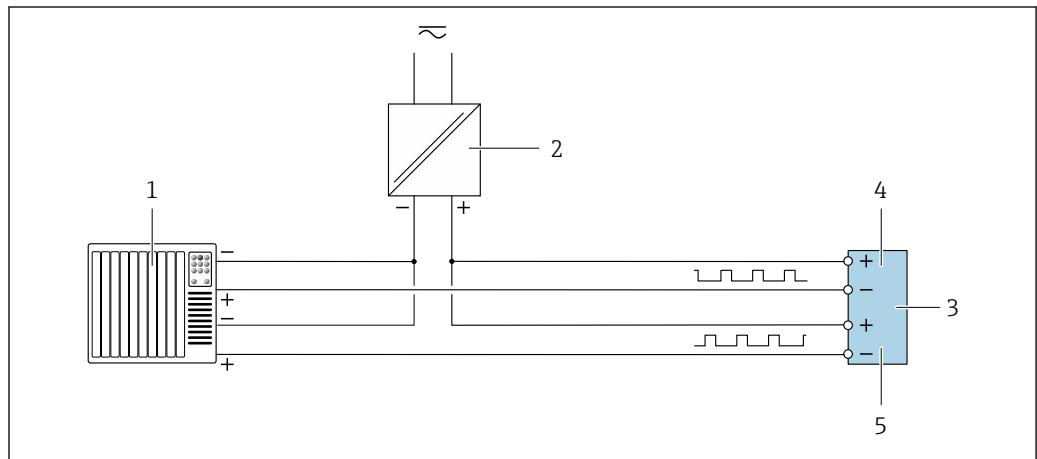


A0029279

20 Connection example for double pulse output (passive)

- 1 Automation system with double pulse input (e.g. PLC)
- 2 Power supply
- 3 Transmitter: Observe input values → 162
- 4 Double pulse output
- 5 Double pulse output (slave), phase-shifted

Relay output

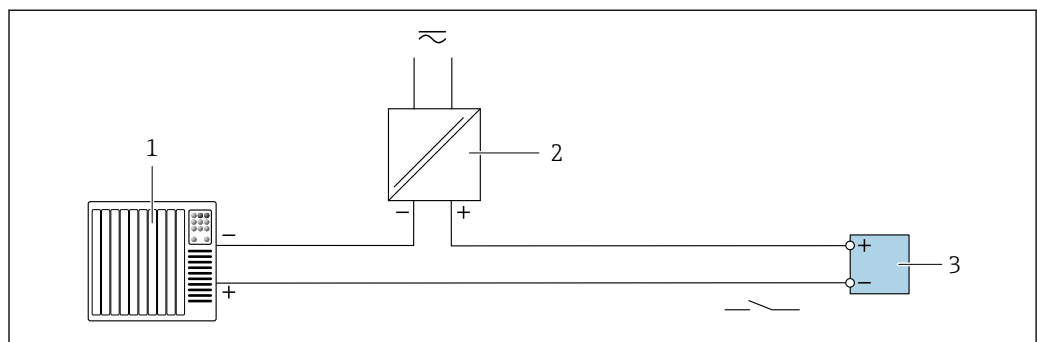


A0028760

21 Connection example for relay output (passive)

- 1 Automation system with relay input (e.g. PLC)
- 2 Power supply
- 3 Transmitter: Observe input values → 162

Current input

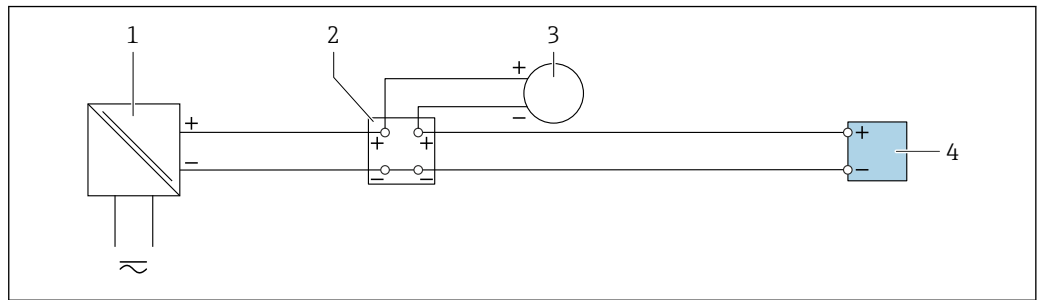


A0028915

22 Connection example for 4 to 20 mA current input

- 1 Power supply
- 2 External measuring device (for reading in pressure or temperature, for instance)
- 3 Transmitter: Observe input values

Status input

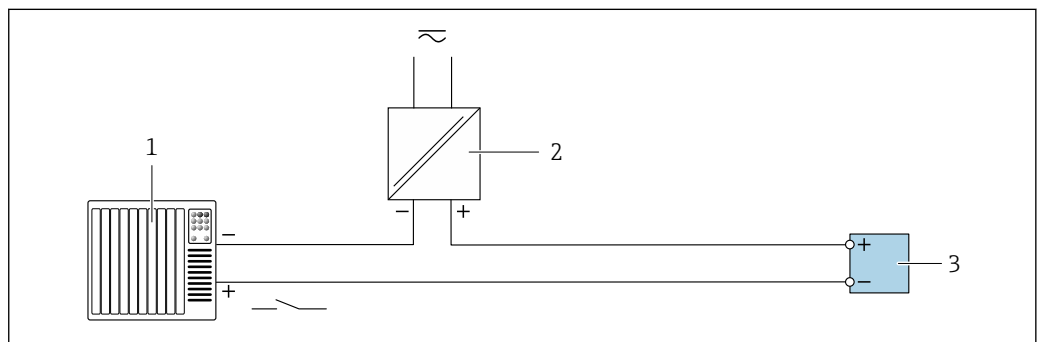

A0028764

23 Connection example for status input

- 1 Automation system with status output (e.g. PLC)
- 2 Power supply
- 3 Transmitter: Observe input values


7.5 Ensuring the degree of protection

The measuring device fulfills all the requirements for the IP66/67 degree of protection, Type 4X enclosure.

To guarantee IP66/67 degree of protection, Type 4X enclosure, carry out the following steps after the electrical connection:

1. Check that the housing seals are clean and fitted correctly.
2. Dry, clean or replace the seals if necessary.
3. Tighten all housing screws and screw covers.
4. Firmly tighten the cable glands.

5. To ensure that moisture does not enter the cable entry:
Route the cable so that it loops down before the cable entry ("water trap").

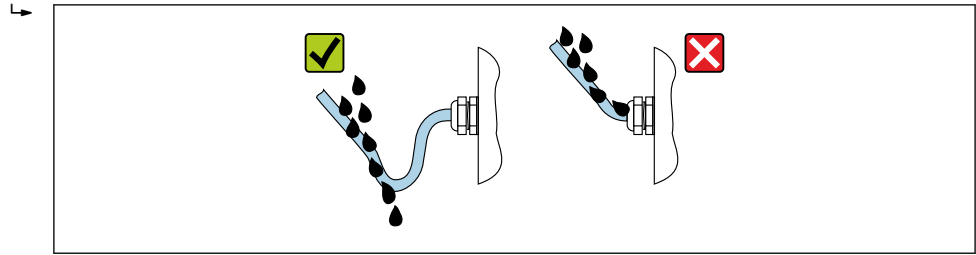

A0029278


6. Insert dummy plugs into unused cable entries.

7.6 Post-connection check

| | |
|--|--------------------------|
| Are cables or the device undamaged (visual inspection)? | <input type="checkbox"/> |
| Do the cables used meet the requirements? | <input type="checkbox"/> |
| Do the cables have adequate strain relief? | <input type="checkbox"/> |
| Are all the cable glands installed, firmly tightened and leak-tight? Cable run with "water trap" → 45 ? | <input type="checkbox"/> |
| If supply voltage is present, do values appear on the display module? | <input type="checkbox"/> |
| Is the potential equalization established correctly ? | <input type="checkbox"/> |

8 Operation options

8.1 Overview of operation options

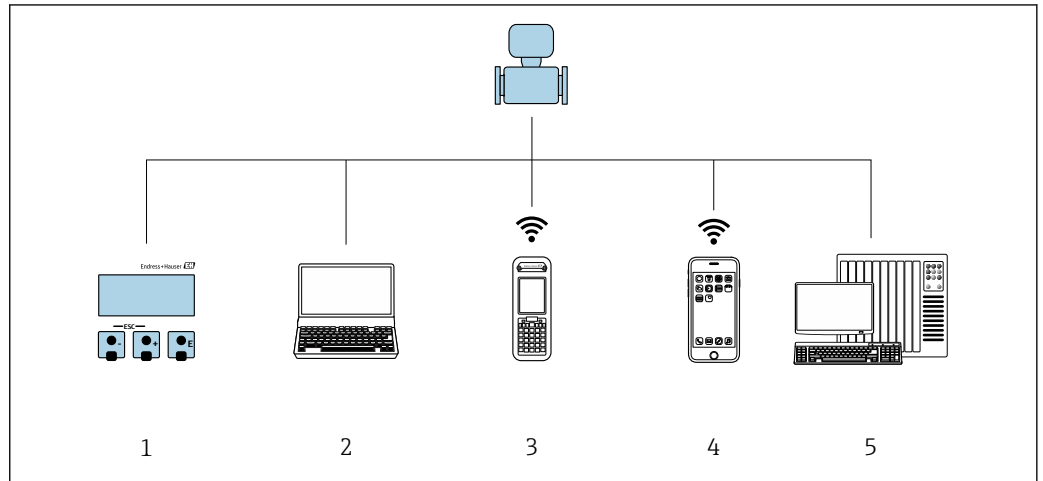
 



A0034513


- 1 Local operation via display module
- 2 Computer with Web browser (e.g. Internet Explorer) or with operating tool (e.g. FieldCare, DeviceCare, AMS Device Manager, SIMATIC PDM)
- 3 Field Xpert SFX350 or SFX370
- 5 Mobile handheld terminal
- 6 Control system (e.g. PLC)

8.2 Structure and function of the operating menu

8.2.1 Structure of the operating menu

 For an overview of the operating menu for experts: "Description of Device Parameters" document supplied with the device →  183

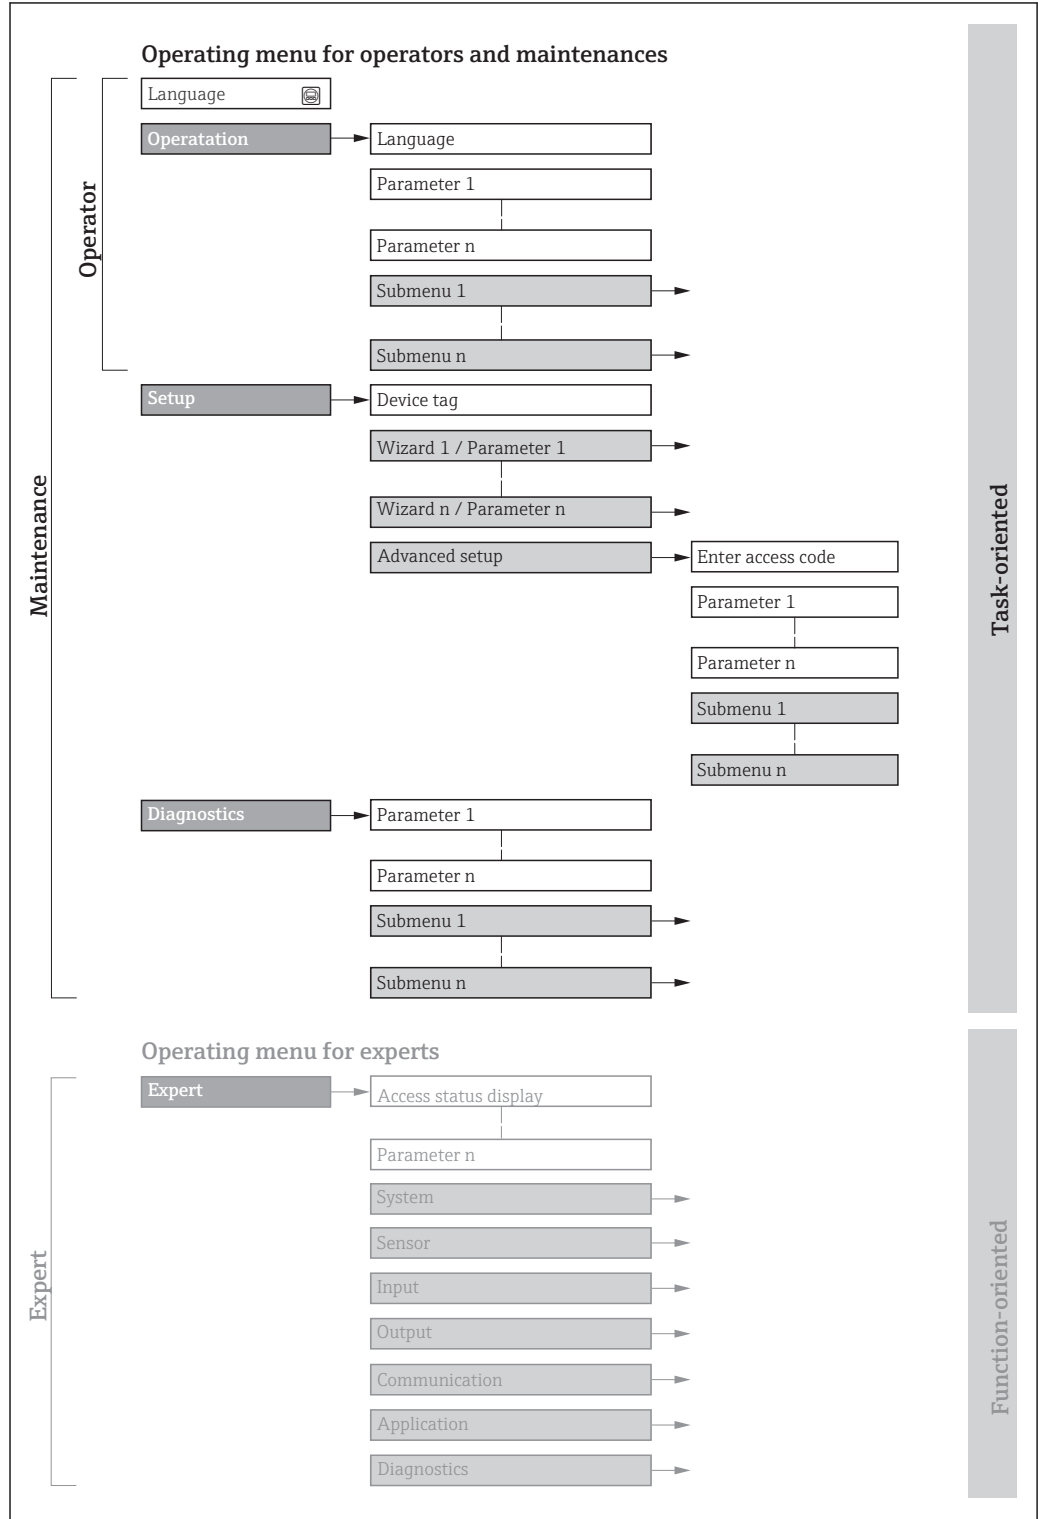

 24 Schematic structure of the operating menu

A0018237-EN


8.2.2 Operating philosophy

The individual parts of the operating menu are assigned to certain user roles (operator, maintenance etc.). Each user role contains typical tasks within the device lifecycle.

| Menu/parameter | | User role and tasks | Content/meaning |
|----------------|---|---|--|
| Language | task-oriented | Role "Operator", "Maintenance" Tasks during operation: <ul style="list-style-type: none"> Configuring the operational display Reading measured values | <ul style="list-style-type: none"> Defining the operating language Defining the Web server operating language Resetting and controlling totalizers |
| Operation | | | <ul style="list-style-type: none"> Configuring the operational display (e.g. display format, display contrast) Resetting and controlling totalizers |
| Setup | | "Maintenance" role Commissioning: <ul style="list-style-type: none"> Configuration of the measurement Configuration of the inputs and outputs Configuration of the communication interface | Wizards for fast commissioning: <ul style="list-style-type: none"> Set the system units Display I/O/configuration Configure the inputs Configure the outputs Configuring the operational display Define the output conditioning Set the low flow cut off Configure empty pipe detection Advanced setup <ul style="list-style-type: none"> For more customized configuration of the measurement (adaptation to special measuring conditions) Configuration of totalizers Configuration of electrode cleaning (optional) Configure the WLAN settings Administration (define access code, reset measuring device) |
| Diagnosics | "Maintenance" role Fault elimination: <ul style="list-style-type: none"> Diagnostics and elimination of process and device errors Measured value simulation | Contains all parameters for error detection and analyzing process and device errors: <ul style="list-style-type: none"> Diagnostics list Contains up to 5 currently pending diagnostic messages. Event logbook Contains event messages that have occurred. Device information Contains information for identifying the device. Measured values Contains all current measured values. Data logging submenu with "Extended HistoROM" order option Storage and visualization of measured values Heartbeat The functionality of the device is checked on demand and the verification results are documented. Simulation Is used to simulate measured values or output values. | |
| Expert | function-oriented | Tasks that require detailed knowledge of the function of the device: <ul style="list-style-type: none"> Commissioning measurements under difficult conditions Optimal adaptation of the measurement to difficult conditions Detailed configuration of the communication interface Error diagnostics in difficult cases | Contains all the parameters of the device and makes it possible to access these parameters directly using an access code. The structure of this menu is based on the function blocks of the device: <ul style="list-style-type: none"> System Contains all higher-order device parameters which do not concern the measurement or the communication interface. Sensor Configuration of the measurement. Input Configuring the status input. Output Configuring of the analog current outputs as well as the pulse/frequency and switch output. Communication Configuration of the digital communication interface and the Web server. Application Configure the functions that go beyond the actual measurement (e.g. totalizer). Diagnostics Error detection and analysis of process and device errors and for device simulation and Heartbeat Technology. |

8.3 Access to the operating menu via the local display

8.3.1 Operational display

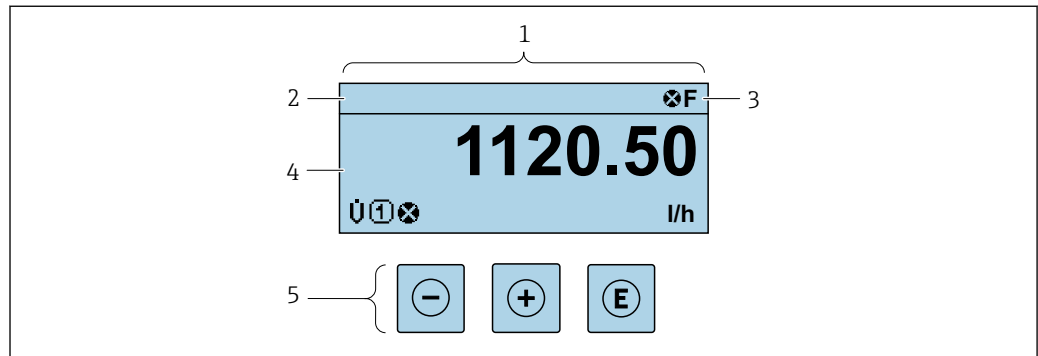

A0029346

- 1 Operational display
- 2 Device tag → 80
- 3 Status area
- 4 Display area for measured values (4-line)
- 5 Operating elements → 55


Status area

The following symbols appear in the status area of the operational display at the top right:

- Status signals → 133
 - **F**: Failure
 - **C**: Function check
 - **S**: Out of specification
 - **M**: Maintenance required
- Diagnostic behavior → 134
 - : Alarm
 - : Warning
- : Locking (the device is locked via the hardware)
- : Communication (communication via remote operation is active)

Display area

In the display area, each measured value is prefaced by certain symbol types for further description:

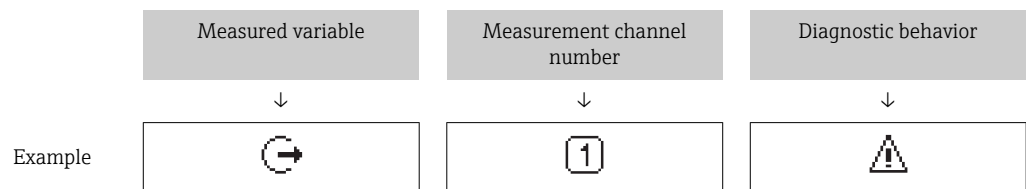

Appears only if a diagnostics event is present for this measured variable.

Measured values

| Symbol | Meaning |
|----------|--------------|
| U | Volume flow |
| G | Conductivity |

| | |
|--|---|
| | Mass flow |
| | Totalizer The measurement channel number indicates which of the three totalizers is displayed. |
| | Output The measurement channel number indicates which of the outputs is displayed. |
| | Status input |

Measurement channel numbers

| Symbol | Meaning |
|---|----------------------------|
| | Measurement channel 1 to 4 |
| The measurement channel number is displayed only if more than one channel is present for the same measured variable type (e.g. Totalizer 1 to 3). | |

Diagnostic behavior

The diagnostic behavior pertains to a diagnostic event that is relevant to the displayed measured variable. For information on the symbols → 134

The number and display format of the measured values can be configured via the **Format display** parameter (→ 94).


8.3.2 Navigation view



| In the submenu | In the wizard |
|---|---|
| <p>Diagram showing a submenu with a navigation path (1) at the top, a status area (3) with '0091-1', a display area (4) with 'Access stat.disp' and 'Operator', and operating elements (5) at the bottom: minus, plus, and E buttons.</p> | <p>Diagram showing a wizard with a navigation path (1) at the top, a status area (3) with 'S', a display area (4) with 'Curr. output 1' and 'Assign curr.', and operating elements (5) at the bottom: minus, plus, and E buttons.</p> |
| <p>1 Navigation view 2 Navigation path to current position 3 Status area 4 Display area for navigation 5 Operating elements → 55</p> | |

Navigation path

 The navigation path - displayed at the top left in the navigation view - consists of the following elements:

| | | | |
|----------|---|--|---|
| | <ul style="list-style-type: none"> In the submenu: Display symbol for menu In the wizard: Display symbol for wizard | Omission symbol for operating menu levels in between | Name of current <ul style="list-style-type: none"> Submenu Wizard Parameters |
| | ↓ | ↓ | ↓ |
| Examples | | / .. / | Display |






 For more information about the icons in the menu, refer to the "Display area" section →  52

Status area





The following appears in the status area of the navigation view in the top right corner:

- In the submenu
 - The direct access code for the parameter you are navigating to (e.g. 0022-1)
 - If a diagnostic event is present, the diagnostic behavior and status signal
- In the wizard
 - If a diagnostic event is present, the diagnostic behavior and status signal





-  ▪ For information on the diagnostic behavior and status signal →  133
- For information on the function and entry of the direct access code →  57

Display area


Menus

| Symbol | Meaning |
|---|---|
|  | Operation Appears: <ul style="list-style-type: none"> ▪ In the menu next to the "Operation" selection ▪ At the left in the navigation path in the Operation menu |
|  | Setup Appears: <ul style="list-style-type: none"> ▪ In the menu next to the "Setup" selection ▪ At the left in the navigation path in the Setup menu |
|  | Diagnostics Appears: <ul style="list-style-type: none"> ▪ In the menu next to the "Diagnostics" selection ▪ At the left in the navigation path in the Diagnostics menu |
|  | Expert Appears: <ul style="list-style-type: none"> ▪ In the menu next to the "Expert" selection ▪ At the left in the navigation path in the Expert menu |




Submenus, wizards, parameters

| Symbol | Meaning |
|---|--|
|  | Submenu |
|  | Wizard |
|  | Parameters within a wizard  No display symbol exists for parameters in submenus. |

Locking


| Symbol | Meaning |
|---|---|
|  | Parameter locked When displayed in front of a parameter name, indicates that the parameter is locked. <ul style="list-style-type: none"> ▪ By a user-specific access code ▪ By the hardware write protection switch |

Wizard operation

| Symbol | Meaning |
|---|--|
|  | Switches to the previous parameter. |
|  | Confirms the parameter value and switches to the next parameter. |
|  | Opens the editing view of the parameter. |

8.3.3 Editing view

Numeric editor

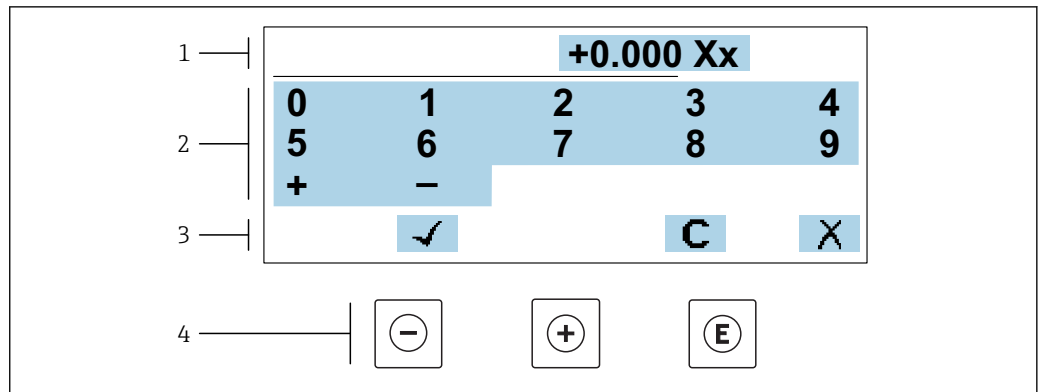


A0034250

25 For entering values in parameters (e.g. limit values)

- 1 Entry display area
- 2 Input screen
- 3 Confirm, delete or reject entry
- 4 Operating elements

Text editor

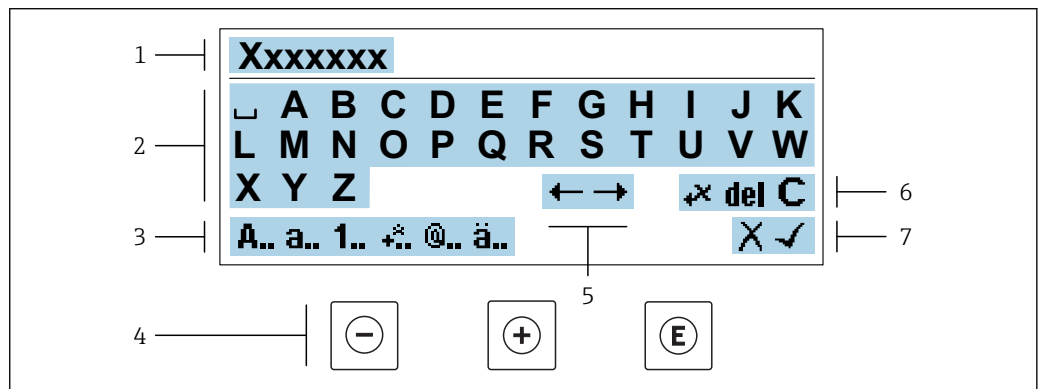

A0034114

26 For entering text in parameters (e.g. tag name)

- 1 Entry display area
- 2 Current input screen
- 3 Change input screen
- 4 Operating elements
- 5 Move entry position
- 6 Delete entry
- 7 Reject or confirm entry

Using the operating elements in the editing view

| Operating key(s) | Meaning |
|------------------|--|
| | Minus key Move the entry position to the left. |
| | Plus key Move the entry position to the right. |
| | Enter key <ul style="list-style-type: none"> ▪ Press the key briefly: confirm your selection. ▪ Press the key for 2 s: confirm the entry. |
| | Escape key combination (press keys simultaneously) Close the editing view without accepting the changes. |






Input screens

| Symbol | Meaning |
|------------|---|
| A.. | Upper case |
| a.. | Lower case |
| 1.. | Numbers |
| | Punctuation marks and special characters: = + - * / ² ³ ¼ ½ ¾ () [] < > { } |
| | Punctuation marks and special characters: " ^ . , ; : ? ! % μ ° € \$ £ ¥ \$ @ # / \ ~ & _ |
| ä.. | Umlauts and accents |

Controlling data entries

| Symbol | Meaning |
|------------|---|
| | Move entry position |
| | Reject entry |
| | Confirm entry |
| | Delete character immediately to the left of the entry position |
| del | Delete character immediately to the right of the entry position |
| C | Clear all the characters entered |

8.3.4 Operating elements

| Operating key(s) | Meaning |
|---|--|
|  | <p>Minus key</p> <p><i>In a menu, submenu</i> Moves the selection bar upwards in a choose list.</p> <p><i>With a Wizard</i> Confirms the parameter value and goes to the previous parameter.</p> <p><i>With a text and numeric editor</i> Move the entry position to the left.</p> |
|  | <p>Plus key</p> <p><i>In a menu, submenu</i> Moves the selection bar downwards in a choose list.</p> <p><i>With a Wizard</i> Confirms the parameter value and goes to the next parameter.</p> <p><i>With a text and numeric editor</i> Move the entry position to the right.</p> |
|  | <p>Enter key</p> <p><i>For operational display</i></p> <ul style="list-style-type: none"> ▪ Pressing the key briefly opens the operating menu. ▪ Pressing the key for 2 s opens the context menu including the option for activating the keypad lock. <p><i>In a menu, submenu</i></p> <ul style="list-style-type: none"> ▪ Pressing the key briefly: <ul style="list-style-type: none"> - Opens the selected menu, submenu or parameter. - Starts the wizard. - If help text is open, closes the help text of the parameter. ▪ Pressing the key for 2 s for parameter: <ul style="list-style-type: none"> - If present, opens the help text for the function of the parameter. <p><i>With a Wizard</i> Opens the editing view of the parameter.</p> <p><i>With a text and numeric editor</i></p> <ul style="list-style-type: none"> ▪ Press the key briefly: confirm your selection. ▪ Press the key for 2 s: confirm the entry. |
|  | <p>Escape key combination (press keys simultaneously)</p> <p><i>In a menu, submenu</i></p> <ul style="list-style-type: none"> ▪ Pressing the key briefly: <ul style="list-style-type: none"> - Exits the current menu level and takes you to the next higher level. - If help text is open, closes the help text of the parameter. ▪ Pressing the key for 2 s returns you to the operational display ("home position"). <p><i>With a Wizard</i> Exits the wizard and takes you to the next higher level.</p> <p><i>With a text and numeric editor</i> Close the editing view without accepting the changes.</p> |
|  | <p>Minus/Enter key combination (press the keys simultaneously)</p> <p>Press the key for 3 s: deactivate the keypad lock.</p> |

8.3.5 Opening the context menu


Using the context menu, the user can call up the following menus quickly and directly from the operational display:

- Setup
- Data backup
- Simulation

Calling up and closing the context menu

The user is in the operational display.

1. Press \square for 2 s.
↳ The context menu opens.

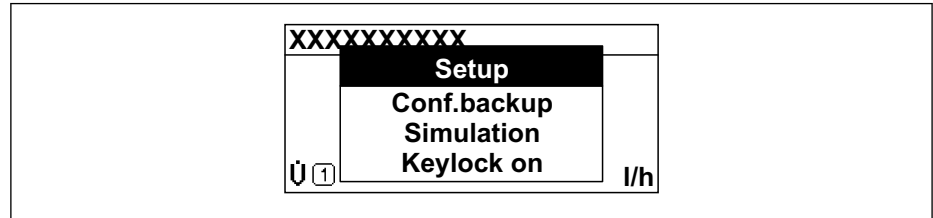

A0034608-EN

2. Press \square + \oplus simultaneously.
↳ The context menu is closed and the operational display appears.

Calling up the menu via the context menu


1. Open the context menu.
2. Press \oplus to navigate to the desired menu.
3. Press \square to confirm the selection.
↳ The selected menu opens.

8.3.6 Navigating and selecting from list

Different operating elements are used to navigate through the operating menu. The navigation path is displayed on the left in the header. Icons are displayed in front of the individual menus. These icons are also shown in the header during navigation.

i For an explanation of the navigation view with symbols and operating elements → 51

Example: Setting the number of displayed measured values to "2 values"

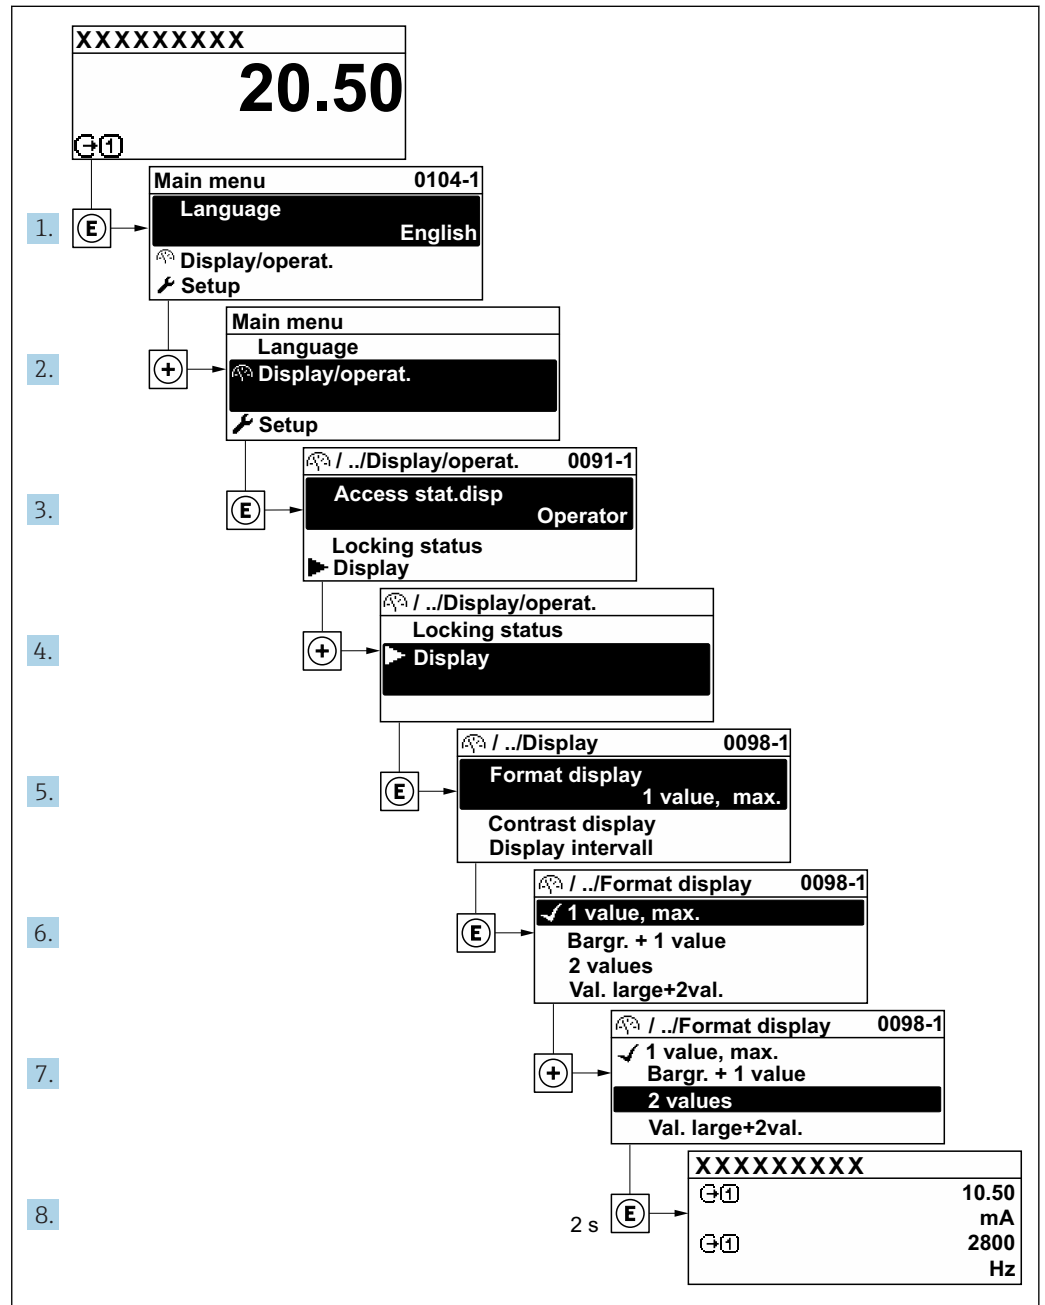

A0029562-EN


8.3.7 Calling the parameter directly

A parameter number is assigned to every parameter to be able to access a parameter directly via the onsite display. Entering this access code in the **Direct access** parameter calls up the desired parameter directly.

Navigation path

Expert → Direct access


The direct access code consists of a 5-digit number (at maximum) and the channel number, which identifies the channel of a process variable: e.g. 00914-2. In the navigation view, this appears on the right-hand side in the header of the selected parameter.

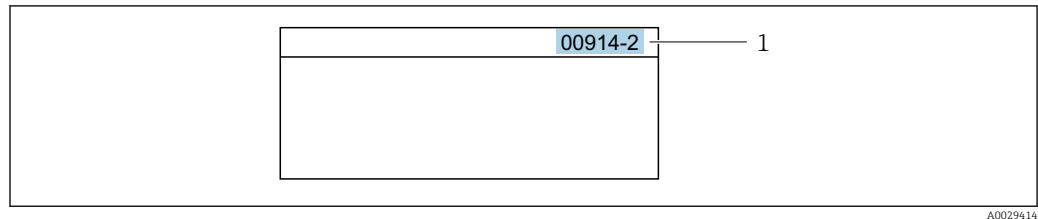

1 Direct access code

Note the following when entering the direct access code:

- The leading zeros in the direct access code do not have to be entered.
Example: Enter "914" instead of "00914"
- If no channel number is entered, channel 1 is accessed automatically.
Example: Enter 00914 → **Assign process variable** parameter
- If a different channel is accessed: Enter the direct access code with the corresponding channel number.
Example: Enter 00914-2 → **Assign process variable** parameter

 For the direct access codes of the individual parameters, see the "Description of Device Parameters" document for the device


8.3.8 Calling up help text


Help text is available for some parameters and can be called up from the navigation view. The help text provides a brief explanation of the parameter function and thereby supports swift and safe commissioning.



Calling up and closing the help text

The user is in the navigation view and the selection bar is on a parameter.

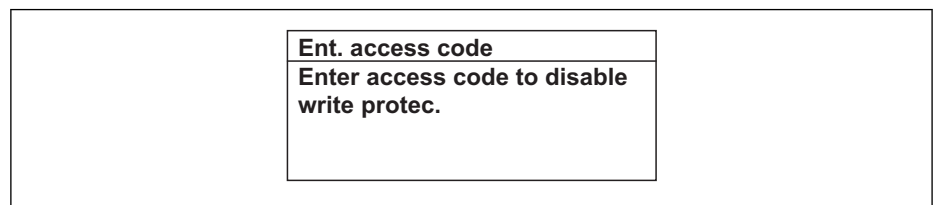1. Press  for 2 s.
↳ The help text for the selected parameter opens.



 27 Example: Help text for parameter "Enter access code"


2. Press  +  simultaneously.
↳ The help text is closed.

8.3.9 Changing the parameters

Parameters can be changed via the numeric editor or text editor.

- Numeric editor: Change values in a parameter, e.g. specifications for limit values.
- Text editor: Enter text in a parameter, e.g. tag name.

A message is displayed if the value entered is outside the permitted value range.

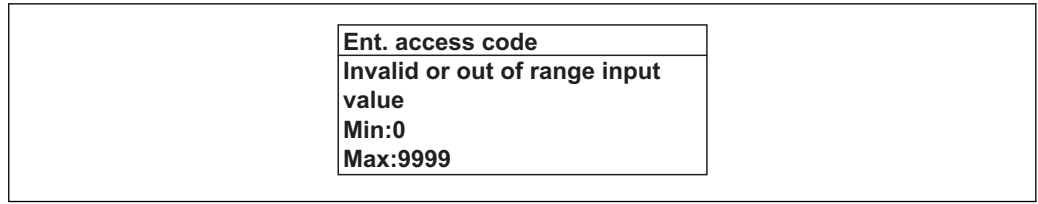

A0014049-EN

For a description of the editing view - consisting of the text editor and numeric editor - with symbols → 53, for a description of the operating elements → 55

8.3.10 User roles and related access authorization

The two user roles "Operator" and "Maintenance" have different write access to the parameters if the customer defines a user-specific access code. This protects the device configuration via the local display from unauthorized access → 116.

Defining access authorization for user roles

An access code is not yet defined when the device is delivered from the factory. Access authorization (read and write access) to the device is not restricted and corresponds to the "Maintenance" user role.

- ▶ Define the access code.
 - ↳ The "Operator" user role is redefined in addition to the "Maintenance" user role. Access authorization differs for the two user roles.

Access authorization to parameters: "Maintenance" user role

| Access code status | Read access | Write access |
|--|-------------|-----------------|
| An access code has not yet been defined (factory setting). | ✓ | ✓ |
| After an access code has been defined. | ✓ | ✓ ¹⁾ |

1) The user only has write access after entering the access code.

Access authorization to parameters: "Operator" user role

| Access code status | Read access | Write access |
|--|-------------|------------------|
| After an access code has been defined. | ✓ | -- ¹⁾ |

1) Despite the defined access code, certain parameters can always be modified and thus are exempted from the write protection, as they do not affect the measurement. Refer to the "Write protection via access code" section


The user role with which the user is currently logged on is indicated by the **Access status** parameter. Navigation path: Operation → Access status

8.3.11 Disabling write protection via access code

If the -symbol appears on the local display in front of a parameter, the parameter is write-protected by a user-specific access code and its value cannot be changed at the moment using local operation → 116.

Parameter write protection via local operation can be disabled by entering the user-specific access code in the **Enter access code** parameter (→ 103) via the respective access option.

1. After you press , the input prompt for the access code appears.


2. Enter the access code.
 - ↳ The -symbol in front of the parameters disappears; all previously write-protected parameters are now re-enabled.

8.3.12 Enabling and disabling the keypad lock


The keypad lock makes it possible to block access to the entire operating menu via local operation. As a result, it is no longer possible to navigate through the operating menu or change the values of individual parameters. Users can only read the measured values on the operational display.


The keypad lock is switched on and off via the context menu.

Switching on the keypad lock


-  The keypad lock is switched on automatically:
- If the device has not been operated via the display for > 1 minute.
 - Each time the device is restarted.

To activate the keylock manually:

1. The device is in the measured value display.
Press  for at least 2 seconds.
↳ A context menu appears.
2. In the context menu select the **Keylock on** option.
↳ The keypad lock is switched on.

-  If the user attempts to access the operating menu while the keypad lock is active, the **Keylock on** message appears.

Switching off the keypad lock


1. The keypad lock is switched on.
Press  for at least 2 seconds.
↳ A context menu appears.
2. In the context menu select the **Keylock off** option.
↳ The keypad lock is switched off.

8.4 Access to the operating menu via the Web browser

8.4.1 Function range

Thanks to the integrated Web server, the device can be operated and configured via a Web browser and via a service interface (CDI-RJ45) or via a WLAN interface. The structure of the operating menu is the same as for the local display. In addition to the measured values, status information on the device is also displayed and allows the user to monitor the status of the device. Furthermore the device data can be managed and the network parameters can be configured.

A device that has a WLAN interface (can be ordered as an option) is required for the WLAN connection: order code for "Display; operation", option **G** "4-line, illuminated; touch control + WLAN". The device acts as an Access Point and enables communication by computer or a mobile handheld terminal.


-  For additional information on the Web server, refer to the Special Documentation for the device

8.4.2 Prerequisites



Computer hardware

| Hardware | Interface | |
|------------|--|--|
| | CDI-RJ45 | WLAN |
| Interface | The computer must have an RJ45 interface. | The operating unit must have a WLAN interface. |
| Connection | Standard Ethernet cable with RJ45 connector. | Connection via Wireless LAN. |
| Screen | Recommended size: ≥ 12" (depends on the screen resolution) | |

Computer software


| Software | Interface | |
|-------------------------------|---|------|
| | CDI-RJ45 | WLAN |
| Recommended operating systems | <ul style="list-style-type: none"> ▪ Microsoft Windows 7 or higher. ▪ Mobile operating systems: <ul style="list-style-type: none"> - iOS - Android <p> Microsoft Windows XP is supported.</p> | |
| Web browsers supported | <ul style="list-style-type: none"> ▪ Microsoft Internet Explorer 8 or higher ▪ Microsoft Edge ▪ Mozilla Firefox ▪ Google Chrome ▪ Safari | |

Computer settings


| Settings | Interface | |
|--|--|---|
| | CDI-RJ45 | WLAN |
| User rights | Appropriate user rights (e.g. administrator rights) for TCP/IP and proxy server settings are necessary (for adjusting the IP address, subnet mask etc.). | |
| Proxy server settings of the Web browser | The Web browser setting <i>Use a Proxy Server for Your LAN</i> must be deselected . | |
| JavaScript | <p>JavaScript must be enabled.</p> <p> If JavaScript cannot be enabled: enter <code>http://192.168.1.212/basic.html</code> in the address line of the Web browser. A fully functional but simplified version of the operating menu structure starts in the Web browser.</p> <p> When installing a new firmware version: To enable correct data display, clear the temporary memory (cache) of the Web browser under Internet options.</p> | |
| Network connections | Only the active network connections to the measuring device should be used. | |
| | Switch off all other network connections such as WLAN. | Switch off all other network connections. |

 In the event of connection problems: →  130

Measuring device: Via CDI-RJ45 service interface

| Device | CDI-RJ45 service interface |
|------------------|--|
| Measuring device | The measuring device has an RJ45 interface. |
| Web server | Web server must be enabled; factory setting: ON  For information on enabling the Web server → 66 |

Measuring device: via WLAN interface

| Device | WLAN interface |
|------------------|---|
| Measuring device | The measuring device has a WLAN antenna: <ul style="list-style-type: none"> ▪ Transmitter with integrated WLAN antenna ▪ Transmitter with external WLAN antenna |
| Web server | Web server and WLAN must be enabled; factory setting: ON  For information on enabling the Web server → 66 |

8.4.3 Establishing a connection

Via service interface (CDI-RJ45)

Preparing the measuring device

1. Depending on the housing version:
Release the securing clamp or securing screw of the housing cover.
2. Depending on the housing version:
Unscrew or open the housing cover.
3. The location of the connection socket depends on the measuring device and the communication protocol:
Connect the computer to the RJ45 connector via the standard Ethernet connecting cable .

Configuring the Internet protocol of the computer

The following information refers to the default Ethernet settings of the device.

IP address of the device: 192.168.1.212 (factory setting)

1. Switch on the measuring device.
2. Connect to the computer using a cable → 68.
3. If a 2nd network card is not used, close all the applications on the notebook.
 - ↳ Applications requiring Internet or a network, such as e-mail, SAP applications, Internet or Windows Explorer.
4. Close any open Internet browsers.
5. Configure the properties of the Internet protocol (TCP/IP) as defined in the table:

| | |
|-----------------|--|
| IP address | 192.168.1.XXX; for XXX all numerical sequences except: 0, 212 and 255 → e.g. 192.168.1.213 |
| Subnet mask | 255.255.255.0 |
| Default gateway | 192.168.1.212 or leave cells empty |

Via WLAN interface

Configuring the Internet protocol of the mobile terminal

NOTICE

If the WLAN connection is lost during the configuration, settings made may be lost.

- ▶ Make sure that the WLAN connection is not disconnected while configuring the device.

NOTICE

In principle, avoid simultaneous access to the measuring device via the service interface (CDI-RJ45) and the WLAN interface from the same mobile terminal. This could cause a network conflict.

- ▶ Only activate one service interface (CDI-RJ45 service interface or WLAN interface).
- ▶ If simultaneous communication is necessary: configure different IP address ranges, e.g. 192.168.0.1 (WLAN interface) and 192.168.1.212 (CDI-RJ45 service interface).

Preparing the mobile terminal

- ▶ Enable WLAN reception on the mobile terminal.

Establishing a connection from the mobile terminal to the measuring device

1. In the WLAN settings of the mobile terminal:
Select the measuring device using the SSID (e.g. EH_Promag_300_A802000).
2. If necessary, select the WPA2 encryption method.
3. Enter the password: serial number of the measuring device ex-works (e.g. L100A802000).
 - ↳ LED on display module flashes: it is now possible to operate the measuring device with the Web browser, FieldCare or DeviceCare.



The serial number can be found on the nameplate.



To ensure the safe and swift assignment of the WLAN network to the measuring point, it is advisable to change the SSID name. It should be possible to clearly assign the new SSID name to the measuring point (e.g. tag name) because it is displayed as the WLAN network.


Disconnecting

- ▶ After configuring the device:
Terminate the WLAN connection between the operating unit and measuring device.

Starting the Web browser

1. Start the Web browser on the computer.

2. Enter the IP address of the Web server in the address line of the Web browser:
192.168.1.212
↳ The login page appears.

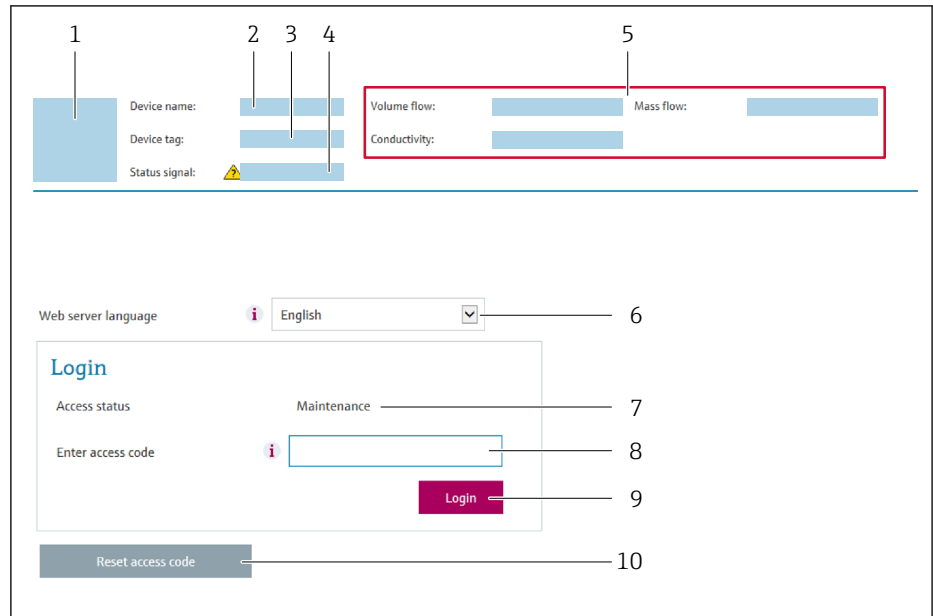

A0029417

- 1 Picture of device
- 2 Device name
- 3 Device tag (→ 80)
- 4 Status signal
- 5 Current measured values
- 6 Operating language
- 7 User role
- 8 Access code
- 9 Login
- 10 Reset access code (→ 113)

i If a login page does not appear, or if the page is incomplete → 130


8.4.4 Logging on

1. Select the preferred operating language for the Web browser.
2. Enter the user-specific access code.
3. Press **OK** to confirm your entry.

| | |
|-------------|--|
| Access code | 0000 (factory setting); can be changed by customer |
|-------------|--|

i If no action is performed for 10 minutes, the Web browser automatically returns to the login page.

8.4.5 User interface

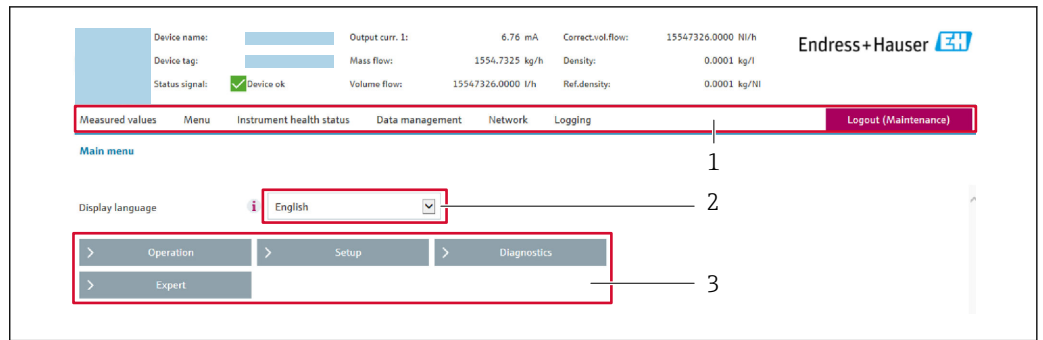

A0029418

- 1 Function row
- 2 Local display language
- 3 Navigation area

Header

The following information appears in the header:

- Device tag
- Device status with status signal → 136
- Current measured values

Function row

| Functions | Meaning |
|-----------------------|---|
| Measured values | Displays the measured values of the measuring device |
| Menu | <ul style="list-style-type: none"> ■ Access to the operating menu from the measuring device ■ The structure of the operating menu is the same as for the local display For detailed information on the structure of the operating menu, see the Operating Instructions for the measuring device |
| Device status | Displays the diagnostic messages currently pending, listed in order of priority |
| Data management | Data exchange between PC and measuring device: <ul style="list-style-type: none"> ■ Device configuration: <ul style="list-style-type: none"> - Load settings from the device (XML format, save configuration) - Save settings to the device (XML format, restore configuration) ■ Logbook - Export Event logbook (.csv file) ■ Documents - Export documents: <ul style="list-style-type: none"> - Export backup data record (.csv file, create documentation of the measuring point configuration) - Verification report (PDF file, only available with the "Heartbeat Verification" application package) ■ Firmware update - Flashing a firmware version |
| Network configuration | Configuration and checking of all the parameters required for establishing the connection to the measuring device: <ul style="list-style-type: none"> ■ Network settings (e.g. IP address, MAC address) ■ Device information (e.g. serial number, firmware version) |
| Logout | End the operation and call up the login page |

Navigation area

If a function is selected in the function bar, the submenus of the function open in the navigation area. The user can now navigate through the menu structure.

Working area

Depending on the selected function and the related submenus, various actions can be performed in this area:

- Configuring parameters
- Reading measured values
- Calling up help text
- Starting an upload/download

8.4.6 Disabling the Web server

The Web server of the measuring device can be switched on and off as required using the **Web server functionality** parameter.

Navigation

"Expert" menu → Communication → Web server

Parameter overview with brief description

| Parameter | Description | Selection | Factory setting |
|--------------------------|-----------------------------------|---|-----------------|
| Web server functionality | Switch the Web server on and off. | <ul style="list-style-type: none"> ▪ Off ▪ On | On |

Function scope of the "Web server functionality" parameter


| Option | Description |
|--------|--|
| Off | <ul style="list-style-type: none"> ▪ The web server is completely disabled. ▪ Port 80 is locked. |
| On | <ul style="list-style-type: none"> ▪ The complete functionality of the web server is available. ▪ JavaScript is used. ▪ The password is transferred in an encrypted state. ▪ Any change to the password is also transferred in an encrypted state. |


Enabling the Web server

If the Web server is disabled it can only be re-enabled with the **Web server functionality** parameter via the following operating options:

- Via local display
- Via Bedientool "FieldCare"
- Via "DeviceCare" operating tool

8.4.7 Logging out

 Before logging out, perform a data backup via the **Data management** function (upload configuration from device) if necessary.

1. Select the **Logout** entry in the function row.
 - ↳ The home page with the Login box appears.
2. Close the Web browser.
3. If no longer needed:
 - Reset modified properties of the Internet protocol (TCP/IP) →  62.


8.5 Access to the operating menu via the operating tool

The structure of the operating menu in the operating tools is the same as for operation via the local display.

8.5.1 Connecting the operating tool

Via HART protocol


This communication interface is available in device versions with a HART output.

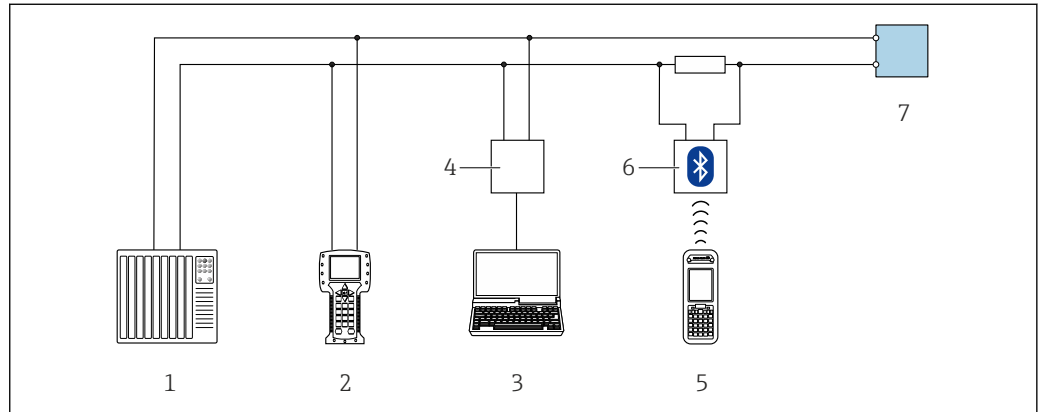

A0028747

28 Options for remote operation via HART protocol (active)

- 1 Control system (e.g. PLC)
- 2 Field Communicator 475
- 3 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated device Web server or computer with operating tool (e.g. FieldCare, DeviceCare, AMS Device Manager, SIMATIC PDM) with COM DTM "CDI Communication TCP/IP"
- 4 Commubox FXA195 (USB)
- 5 Field Xpert SFX350 or SFX370
- 6 VIATOR Bluetooth modem with connecting cable
- 7 Transmitter

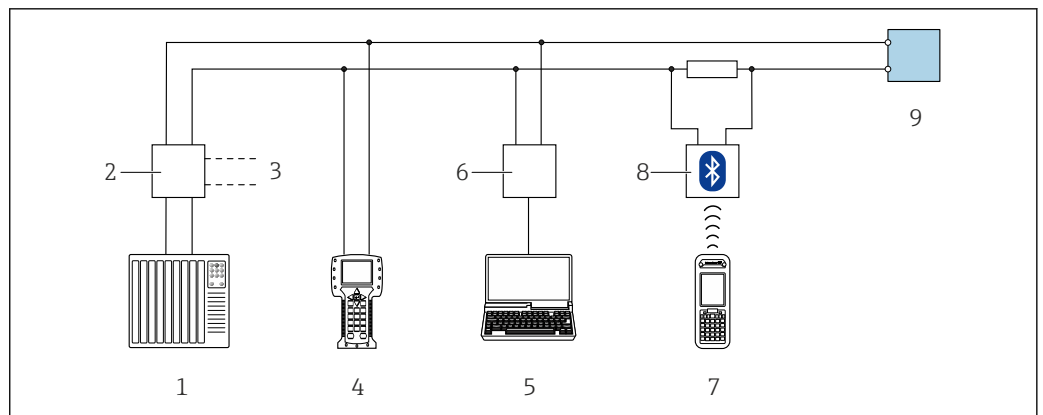

A0028746


29 Options for remote operation via HART protocol (passive)

- 1 Control system (e.g. PLC)
- 2 Transmitter power supply unit, e.g. RN221N (with communication resistor)
- 3 Connection for Commubox FXA195 and Field Communicator 475
- 4 Field Communicator 475
- 5 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated device Web server or computer with operating tool (e.g. FieldCare, DeviceCare, AMS Device Manager, SIMATIC PDM) with COM DTM "CDI Communication TCP/IP"
- 6 Commubox FXA195 (USB)
- 7 Field Xpert SFX350 or SFX370
- 8 VIATOR Bluetooth modem with connecting cable
- 9 Transmitter


Service interface

Via service interface (CDI-RJ45)

A point-to-point connection can be established to configure the device onsite. With the housing open, the connection is established directly via the service interface (CDI-RJ45) of the device.

 An adapter for RJ45 and the M12 connector is optionally available:
Order code for "Accessories", option **NB**: "Adapter RJ45 M12 (service interface)"

The adapter connects the service interface (CDI-RJ45) to an M12 connector mounted in the cable entry. Therefore the connection to the service interface can be established via an M12 connector without opening the device.

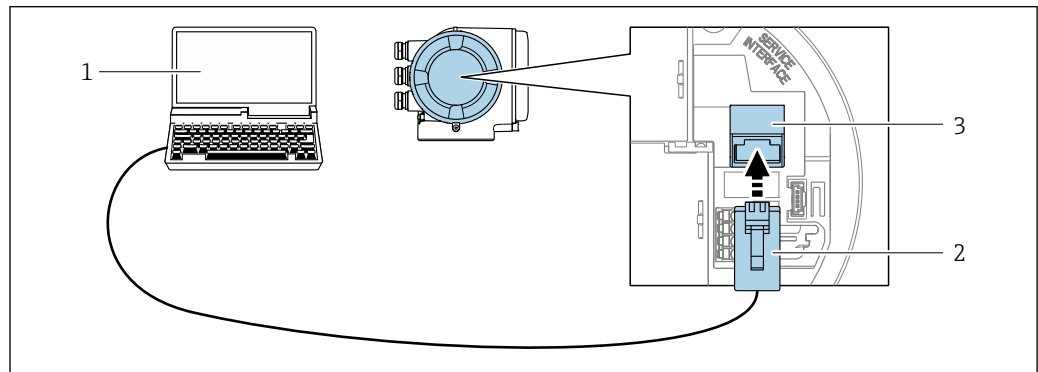


30 Connection via service interface (CDI-RJ45)

- 1 Computer with Web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device Web server or with "FieldCare", "DeviceCare" operating tool with COM DTM "CDI Communication TCP/IP"
- 2 Standard Ethernet connecting cable with RJ45 connector
- 3 Service interface (CDI-RJ45) of the measuring device with access to the integrated Web server


Via WLAN interface

The optional WLAN interface is available on the following device version:
Order code for "Display; operation", option **G** "4-line, illuminated, graphic display; touch control + WLAN"

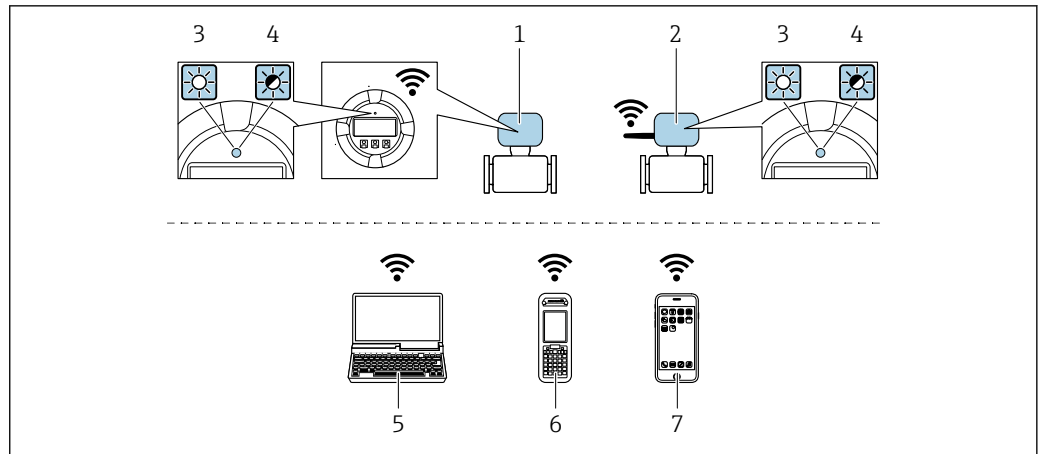

A0034570

- 1 Transmitter with integrated WLAN antenna
- 2 Transmitter with external WLAN antenna
- 3 LED lit constantly: WLAN reception is enabled on measuring device
- 4 LED flashing: WLAN connection established between operating unit and measuring device
- 5 Computer with WLAN interface and Web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device Web server or with operating tool (e.g. FieldCare, DeviceCare)
- 6 Mobile handheld terminal with WLAN interface and Web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device Web server or operating tool (e.g. FieldCare, DeviceCare)
- 7 Smartphone or tablet

| | |
|-------------------------------------|---|
| Function | WLAN: IEEE 802.11 b/g (2.4 GHz) |
| Encryption | WPA2-PSK/AES 128 bit |
| Configurable WLAN channels | 1 to 11 |
| Degree of protection | IP67 |
| Available antennas | <ul style="list-style-type: none"> ▪ Internal antenna ▪ External antenna (optional) In the event of poor transmission/reception conditions at the place of installation.  Only one antenna active in each case! |
| Max. range | 50 m (164 ft) |
| Materials: External WLAN antenna | <ul style="list-style-type: none"> ▪ Antenna: ASA plastic (acrylic ester-styrene-acrylonitrile) and nickel-plated brass ▪ Adapter: Stainless steel and nickel-plated brass ▪ Cable: Polyethylene ▪ Connector: Nickel-plated brass ▪ Angle bracket: Stainless steel |

Configuring the Internet protocol of the mobile terminal

NOTICE

If the WLAN connection is lost during the configuration, settings made may be lost.
 ► Make sure that the WLAN connection is not disconnected while configuring the device.

NOTICE

In principle, avoid simultaneous access to the measuring device via the service interface (CDI-RJ45) and the WLAN interface from the same mobile terminal. This could cause a network conflict.

- Only activate one service interface (CDI-RJ45 service interface or WLAN interface).
- If simultaneous communication is necessary: configure different IP address ranges, e.g. 192.168.0.1 (WLAN interface) and 192.168.1.212 (CDI-RJ45 service interface).

Preparing the mobile terminal

- ▶ Enable WLAN reception on the mobile terminal.

Establishing a connection from the mobile terminal to the measuring device

1. In the WLAN settings of the mobile terminal:
Select the measuring device using the SSID (e.g. EH_Promag_300_A802000).
2. If necessary, select the WPA2 encryption method.
3. Enter the password: serial number of the measuring device ex-works (e.g. L100A802000).
 - ↳ LED on display module flashes: it is now possible to operate the measuring device with the Web browser, FieldCare or DeviceCare.



The serial number can be found on the nameplate.



To ensure the safe and swift assignment of the WLAN network to the measuring point, it is advisable to change the SSID name. It should be possible to clearly assign the new SSID name to the measuring point (e.g. tag name) because it is displayed as the WLAN network.

Disconnecting

- ▶ After configuring the device:
Terminate the WLAN connection between the operating unit and measuring device.

8.5.2 Field Xpert SFX350, SFX370**Function range**

Field Xpert SFX350 and Field Xpert SFX370 are mobile computers for commissioning and maintenance. They enable efficient device configuration and diagnostics for HART and FOUNDATION Fieldbus devices in the **non-hazardous area** (SFX350, SFX370) and **hazardous area** (SFX370).



For details, see Operating Instructions BA01202S

Source for device description files

See information → 74

8.5.3 FieldCare**Function scope**

FDT-based plant asset management tool from Endress+Hauser. It can configure all smart field devices in a system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.

Access is via:

- HART protocol
- CDI-RJ45 service interface → 68
- WLAN interface → 68

Typical functions:

- Configuring parameters of transmitters
- Loading and saving device data (upload/download)
- Documentation of the measuring point
- Visualization of the measured value memory (line recorder) and event logbook



For additional information about FieldCare, see Operating Instructions BA00027S and BA00059S

Source for device description files

See information →  74


Establishing a connection

1. Start FieldCare and launch the project.
2. In the network: Add a device.
 - ↳ The **Add device** window opens.
3. Select the **CDI Communication TCP/IP** option from the list and press **OK** to confirm.
4. Right-click **CDI Communication TCP/IP** and select the **Add device** option in the context menu that opens.
5. Select the desired device from the list and press **OK** to confirm.
 - ↳ The **CDI Communication TCP/IP (Configuration)** window opens.
6. Enter the device address in the **IP address** field: 192.168.1.212 and press **Enter** to confirm.
7. Establish the online connection to the device.



For additional information, see Operating Instructions BA00027S and BA00059S

User interface

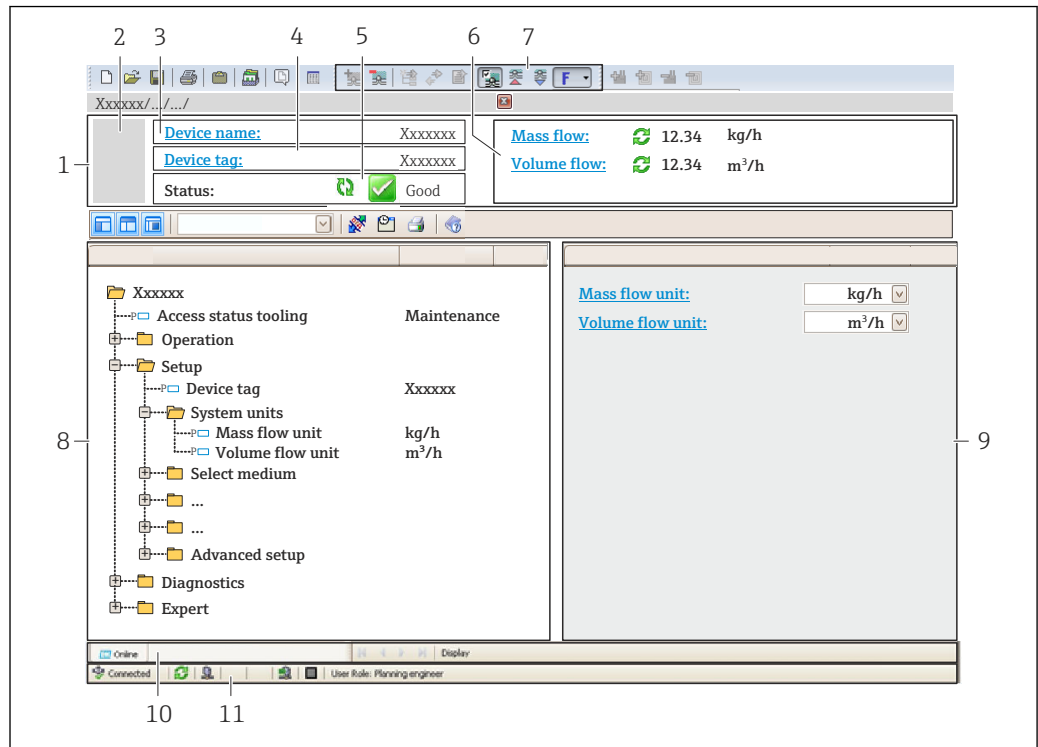

A0021051-EN


- 1 Header
- 2 Picture of device
- 3 Device name
- 4 Tag name
- 5 Status area with status signal → 136
- 6 Display area for current measured values
- 7 Edit toolbar with additional functions such as save/restore, event list and create documentation
- 8 Navigation area with operating menu structure
- 9 Working area
- 10 Range of action
- 11 Status area

8.5.4 DeviceCare

Function scope

Tool to connect and configure Endress+Hauser field devices.

The fastest way to configure Endress+Hauser field devices is with the dedicated "DeviceCare" tool. Together with the device type managers (DTMs) it presents a convenient, comprehensive solution.

 For details, see Innovation Brochure IN01047S

Source for device description files


See information → 74

8.5.5 AMS Device Manager

Function scope

Program from Emerson Process Management for operating and configuring measuring devices via HART protocol.


Source for device description files

See data →  74

8.5.6 SIMATIC PDM**Function scope**

SIMATIC PDM is a standardized, manufacturer-independent program from Siemens for the operation, configuration, maintenance and diagnosis of intelligent field devices via HART protocol.


Source for device description files

See data →  74

8.5.7 Field Communicator 475**Function scope**

Industrial handheld terminal from Emerson Process Management for remote configuration and measured value display via HART protocol.

Source for device description files

See data →  74

9 System integration

9.1 Overview of device description files

9.1.1 Current version data for the device

| | | |
|----------------------------------|----------|---|
| Firmware version | 01.01.zz | <ul style="list-style-type: none"> ▪ On the title page of the Operating Instructions ▪ On the transmitter nameplate ▪ Firmware version Diagnostics → Device information → Firmware version |
| Release date of firmware version | 10.2017 | --- |
| Manufacturer ID | 0x11 | Manufacturer ID Diagnostics → Device information → Manufacturer ID |
| Device type ID | 0x3C | Device type Diagnostics → Device information → Device type |
| HART protocol revision | 7 | --- |
| Device revision | 1 | <ul style="list-style-type: none"> ▪ On the transmitter nameplate ▪ Device revision Diagnostics → Device information → Device revision |



For an overview of the different firmware versions for the device → 150

9.1.2 Operating tools

The suitable device description file for the individual operating tools is listed in the table below, along with information on where the file can be acquired.

| Operating tool via HART protocol | Sources for obtaining device descriptions |
|--|---|
| FieldCare | <ul style="list-style-type: none"> ▪ www.endress.com → Download Area ▪ CD-ROM (contact Endress+Hauser) ▪ DVD (contact Endress+Hauser) |
| DeviceCare | <ul style="list-style-type: none"> ▪ www.endress.com → Download Area ▪ CD-ROM (contact Endress+Hauser) ▪ DVD (contact Endress+Hauser) |
| <ul style="list-style-type: none"> ▪ Field Xpert SFX350 ▪ Field Xpert SFX370 | Use update function of handheld terminal |
| AMS Device Manager (Emerson Process Management) | www.endress.com → Download Area |
| SIMATIC PDM (Siemens) | www.endress.com → Download Area |
| Field Communicator 475 (Emerson Process Management) | Use update function of handheld terminal |

9.2 Measured variables via HART protocol

The following measured variables (HART device variables) are assigned to the dynamic variables at the factory:

| Dynamic variables | Measured values (HART device variables) |
|----------------------------------|--|
| Primary dynamic variable (PV) | Volume flow |
| Secondary dynamic variable (SV) | Totalizer 1 |
| Tertiary dynamic variable (TV) | Totalizer 2 |
| Quaternary dynamic variable (QV) | Totalizer 3 |

The assignment of the measured variables to the dynamic variables can be modified and assigned as desired via local operation and the operating tool using the following parameters:

- Expert → Communication → HART output → Output → Assign PV
- Expert → Communication → HART output → Output → Assign SV
- Expert → Communication → HART output → Output → Assign TV
- Expert → Communication → HART output → Output → Assign QV

The following measured variables can be assigned to the dynamic variables:

Measured variables for PV (primary dynamic variable)

- Off
- Volume flow
- Mass flow
- Corrected volume flow
- Flow velocity
- Conductivity ¹⁾
- Electronic temperature

Measured variables for SV, TV, QV (secondary, tertiary and quaternary dynamic variable)

- Volume flow
- Mass flow
- Corrected volume flow
- Flow velocity
- Conductivity ²⁾
- Electronic temperature
- Totalizer 1
- Totalizer 2
- Totalizer 3



The range of options increases if the measuring device has one or more application packages.

Device variables

The device variables are permanently assigned. A maximum of 8 device variables can be transmitted:

- 0 = volume flow
- 1 = mass flow
- 2 = corrected volume flow
- 3 = flow velocity
- 4 = conductivity
- 7 = electronic temperature
- 8 = totalizer 1
- 9 = totalizer 2
- 10 = totalizer 3

1) Visibility depends on order options or device settings

2) Visibility depends on order options or device settings

9.3 Other settings

Burst mode functionality in accordance with HART 7 Specification:

Navigation

"Expert" menu → Communication → HART output → Burst configuration → Burst configuration 1 to n

| | |
|------------------------------|------|
| ▶ Burst configuration | |
| ▶ Burst configuration 1 to n | |
| Burst mode 1 to n | → 76 |
| Burst command 1 to n | → 76 |
| Burst variable 0 | → 77 |
| Burst variable 1 | → 77 |
| Burst variable 2 | → 77 |
| Burst variable 3 | → 77 |
| Burst variable 4 | → 77 |
| Burst variable 5 | → 77 |
| Burst variable 6 | → 77 |
| Burst variable 7 | → 77 |
| Burst trigger mode | → 77 |
| Burst trigger level | → 77 |
| Min. update period | → 77 |
| Max. update period | → 77 |

Parameter overview with brief description

| Parameter | Description | Selection / User entry | Factory setting |
|----------------------|--|--|-----------------|
| Burst mode 1 to n | Activate the HART burst mode for burst message X. | <ul style="list-style-type: none"> ▪ Off ▪ On | Off |
| Burst command 1 to n | Select the HART command that is sent to the HART master. | <ul style="list-style-type: none"> ▪ Command 1 ▪ Command 2 ▪ Command 3 ▪ Command 9 ▪ Command 33 ▪ Command 48 | Command 2 |

| Parameter | Description | Selection / User entry | Factory setting |
|---------------------|--|---|-----------------|
| Burst variable 0 | For HART command 9 and 33: select the HART device variable or the process variable. | <ul style="list-style-type: none"> ■ Volume flow ■ Mass flow ■ Corrected volume flow ■ Flow velocity ■ Conductivity* ■ Electronic temperature ■ Totalizer 1 ■ Totalizer 2 ■ Totalizer 3 ■ Density ■ HART input ■ Percent of range ■ Measured current ■ Primary variable (PV) ■ Secondary variable (SV) ■ Tertiary variable (TV) ■ Quaternary variable (QV) ■ Not used | Volume flow |
| Burst variable 1 | For HART command 9 and 33: select the HART device variable or the process variable. | See the Burst variable 0 parameter. | Not used |
| Burst variable 2 | For HART command 9 and 33: select the HART device variable or the process variable. | See the Burst variable 0 parameter. | Not used |
| Burst variable 3 | For HART command 9 and 33: select the HART device variable or the process variable. | See the Burst variable 0 parameter. | Not used |
| Burst variable 4 | For HART command 9: select the HART device variable or the process variable. | See the Burst variable 0 parameter. | Not used |
| Burst variable 5 | For HART command 9: select the HART device variable or the process variable. | See the Burst variable 0 parameter. | Not used |
| Burst variable 6 | For HART command 9: select the HART device variable or the process variable. | See the Burst variable 0 parameter. | Not used |
| Burst variable 7 | For HART command 9: select the HART device variable or the process variable. | See the Burst variable 0 parameter. | Not used |
| Burst trigger mode | Select the event that triggers burst message X. | <ul style="list-style-type: none"> ■ Continuous ■ Window ■ Rising ■ Falling ■ On change | Continuous |
| Burst trigger level | Enter the burst trigger value. Together with the option selected in the Burst trigger mode parameter the burst trigger value determines the time of burst message X. | Signed floating-point number | – |
| Min. update period | Enter the minimum time span between two burst commands of burst message X. | Positive integer | 1 000 ms |
| Max. update period | Enter the maximum time span between two burst commands of burst message X. | Positive integer | 2 000 ms |

* Visibility depends on order options or device settings

10 Commissioning

10.1 Function check

Before commissioning the measuring device:

- ▶ Make sure that the post-installation and post-connection checks have been performed.
 - "Post-installation check" checklist → 32
 - "Post-connection check" checklist → 46


10.2 Switching on the measuring device

- ▶ After a successful function check, switch on the measuring device.
 - ↳ After a successful startup, the local display switches automatically from the startup display to the operational display.

i If nothing appears on the local display or a diagnostic message is displayed, refer to the section on "Diagnostics and troubleshooting" → 129.

10.3 Setting the operating language

Factory setting: English or ordered local language

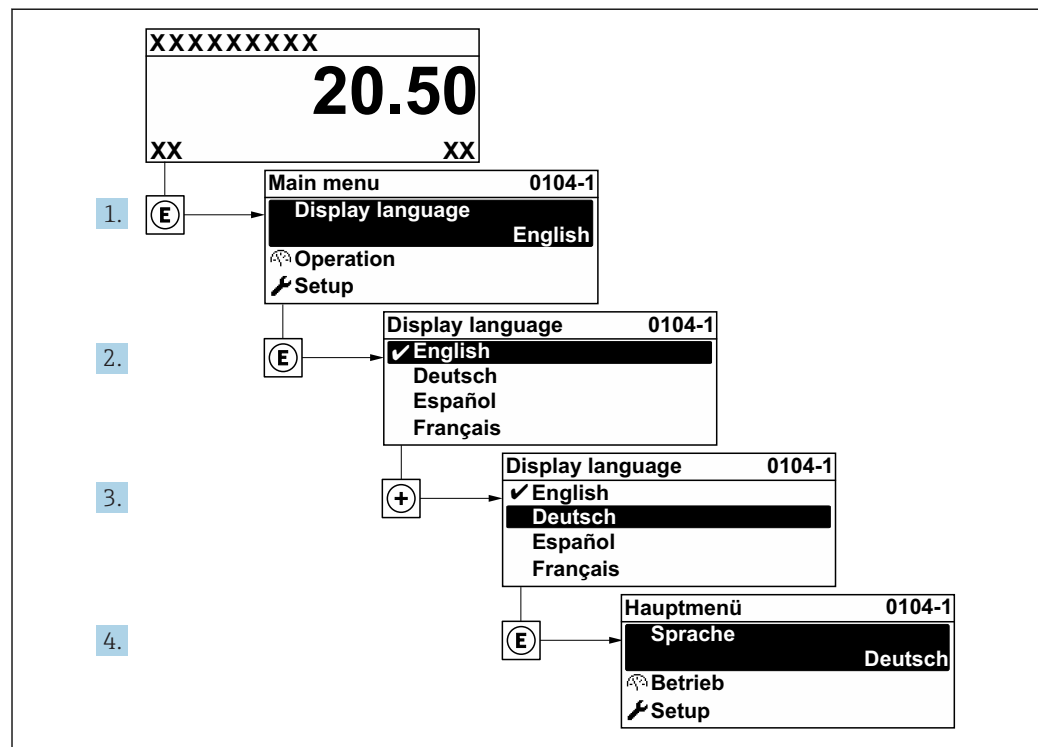


31 Taking the example of the local display

A0029420

10.4 Configuring the measuring device

- The **Setup** menu with its guided wizards contains all the parameters needed for standard operation.
- Navigation to the **Setup** menu

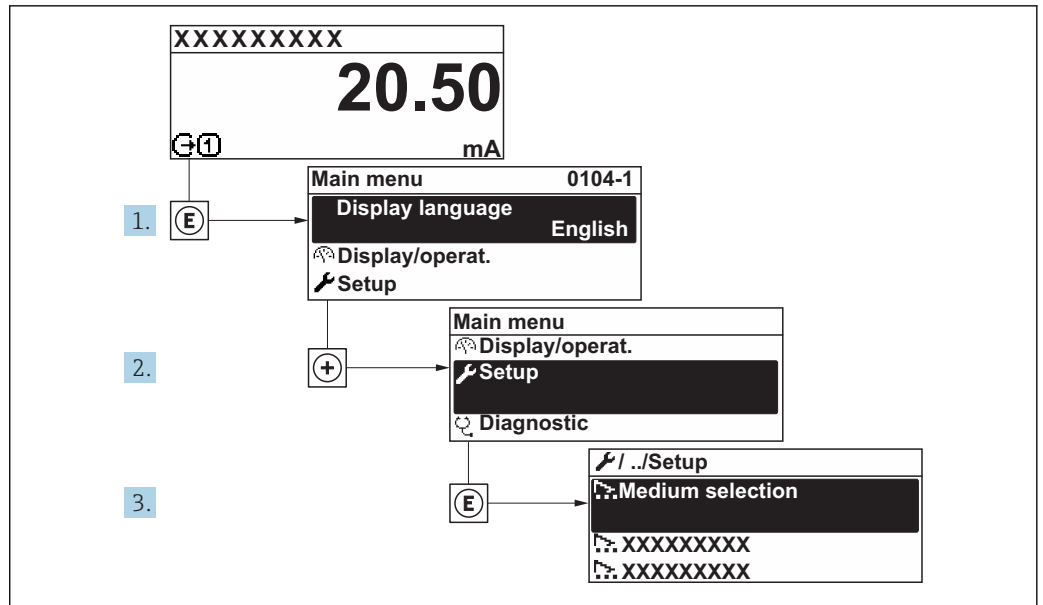

A003222-EN


32 Taking the example of the local display

i Depending on the device version, not all submenus and parameters are available in every device. The selection can vary depending on the order code.

| Setup | |
|--|-------|
| Device tag | → 80 |
| ▶ System units | → 80 |
| ▶ I/O configuration | → 82 |
| ▶ Current input 1 to n | → 83 |
| ▶ Status input 1 to n | → 82 |
| ▶ Current output 1 to n | → 84 |
| ▶ Pulse/frequency/switch output 1 to n | → 87 |
| ▶ Relay output 1 to n | → 98 |
| ▶ Double pulse output | → 100 |
| ▶ Display | → 93 |
| ▶ Low flow cut off | → 95 |
| ▶ Empty pipe detection | → 96 |
| ▶ Advanced setup | → 102 |

10.4.1 Defining the tag name

To enable fast identification of the measuring point within the system, you can enter a unique designation using the **Device tag** parameter and thus change the factory setting.

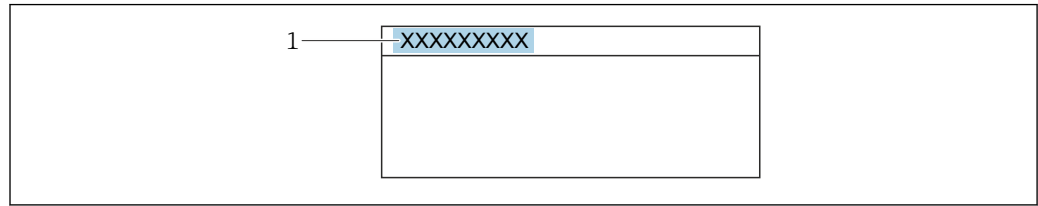

A0029422

33 Header of the operational display with tag name

1 Tag name

i Enter the tag name in the "FieldCare" operating tool → 72

Navigation

"Setup" menu → Device tag

Parameter overview with brief description

| Parameter | Description | User entry | Factory setting |
|------------|---|--|-----------------|
| Device tag | Enter the name for the measuring point. | Max. 32 characters, such as letters, numbers or special characters (e.g. @, %, /). | Promag |


10.4.2 Setting the system units



In the **System units** submenu the units of all the measured values can be set.

i Depending on the device version, not all submenus and parameters are available in every device. The selection can vary depending on the order code.


Navigation

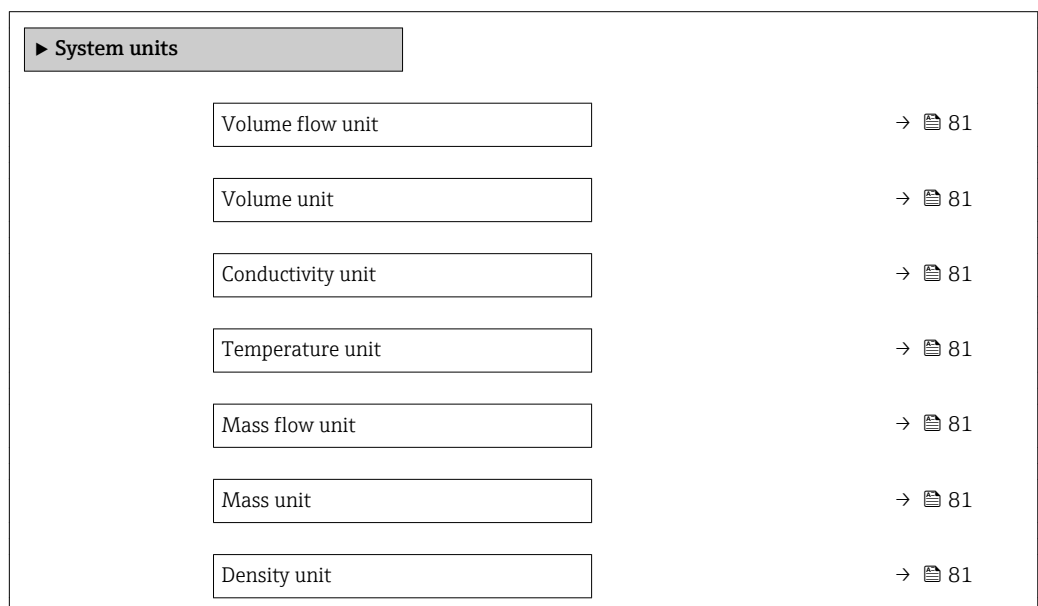"Setup" menu → System units



| | |
|----------------------------|--|
| Corrected volume flow unit | →  81 |
| Corrected volume unit | →  81 |

Parameter overview with brief description


| Parameter | Prerequisite | Description | Selection | Factory setting |
|----------------------------|--|--|------------------|--|
| Volume flow unit | – | Select volume flow unit. <i>Result</i> The selected unit applies for: <ul style="list-style-type: none"> ▪ Output ▪ Low flow cut off ▪ Simulation process variable | Unit choose list | Country-specific: <ul style="list-style-type: none"> ▪ l/h ▪ gal/min (us) |
| Volume unit | – | Select volume unit. | Unit choose list | Country-specific: <ul style="list-style-type: none"> ▪ m³ ▪ gal (us) |
| Conductivity unit | The On option is selected in the Conductivity measurement parameter parameter. | Select conductivity unit. <i>Effect</i> The selected unit applies for: <ul style="list-style-type: none"> ▪ Current output ▪ Frequency output ▪ Switch output ▪ Simulation process variable | Unit choose list | µS/cm |
| Temperature unit | – | Select temperature unit. <i>Result</i> The selected unit applies for: <ul style="list-style-type: none"> ▪ Temperature parameter ▪ Maximum value parameter ▪ Minimum value parameter ▪ External temperature parameter ▪ Maximum value parameter ▪ Minimum value parameter | Unit choose list | Country-specific: <ul style="list-style-type: none"> ▪ °C ▪ °F |
| Mass flow unit | – | Select mass flow unit. <i>Result</i> The selected unit applies for: <ul style="list-style-type: none"> ▪ Output ▪ Low flow cut off ▪ Simulation process variable | Unit choose list | Country-specific: <ul style="list-style-type: none"> ▪ kg/h ▪ lb/min |
| Mass unit | – | Select mass unit. | Unit choose list | Country-specific: <ul style="list-style-type: none"> ▪ kg ▪ lb |
| Density unit | – | Select density unit. <i>Result</i> The selected unit applies for: <ul style="list-style-type: none"> ▪ Output ▪ Simulation process variable | Unit choose list | Country-specific: <ul style="list-style-type: none"> ▪ kg/l ▪ lb/ft³ |
| Corrected volume flow unit | – | Select corrected volume flow unit. <i>Result</i> The selected unit applies for: Corrected volume flow parameter (→  120) | Unit choose list | Country-specific: <ul style="list-style-type: none"> ▪ NI/h ▪ Sft³/h |
| Corrected volume unit | – | Select corrected volume unit. | Unit choose list | Country-specific: <ul style="list-style-type: none"> ▪ Nm³ ▪ Sft³ |

10.4.3 Displaying the I/O configuration

The **I/O configuration** submenu guides the user systematically through all the parameters in which the configuration of the I/O modules is displayed.

Navigation

"Setup" menu → I/O configuration

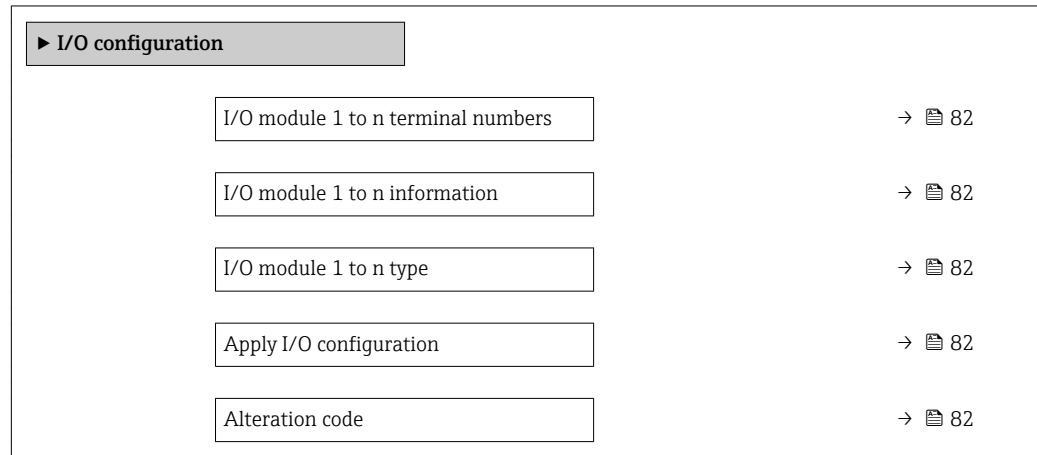

Parameter overview with brief description

| Parameter | Description | User interface / Selection / User entry | Factory setting |
|------------------------------------|---|---|-----------------|
| I/O module 1 to n terminal numbers | Shows the terminal numbers used by the I/O module. | <ul style="list-style-type: none"> ▪ Not used ▪ 26-27 (I/O 1) ▪ 24-25 (I/O 2) ▪ 22-23 (I/O 3) | – |
| I/O module 1 to n information | Shows information of the plugged I/O module. | <ul style="list-style-type: none"> ▪ Not plugged ▪ Invalid ▪ Not configurable ▪ Configurable ▪ HART | – |
| I/O module 1 to n type | Shows the I/O module type. | <ul style="list-style-type: none"> ▪ Off ▪ Current output * ▪ Current input * ▪ Status input * ▪ Pulse/frequency/switch output * | Off |
| Apply I/O configuration | Apply parameterization of the freely configurable I/O module. | <ul style="list-style-type: none"> ▪ No ▪ Yes | No |
| Alteration code | Enter the code in order to change the I/O configuration. | Positive integer | 0 |

* Visibility depends on order options or device settings

10.4.4 Configuring the status input

The **Status input** submenu guides the user systematically through all the parameters that have to be set for configuring the status input.

Navigation

"Setup" menu → Status input

▶ **Status input 1 to n**

| | |
|----------------------------|--------|
| Assign status input | → ⓘ 83 |
| Terminal number | → ⓘ 83 |
| Active level | → ⓘ 83 |
| Terminal number | → ⓘ 83 |
| Response time status input | → ⓘ 83 |
| Terminal number | → ⓘ 83 |

Parameter overview with brief description

| Parameter | Description | User interface / Selection / User entry | Factory setting |
|----------------------------|---|---|-----------------|
| Terminal number | Shows the terminal numbers used by the status input module. | <ul style="list-style-type: none"> ▪ Not used ▪ 24-25 (I/O 2) ▪ 22-23 (I/O 3) | - |
| Assign status input | Select function for the status input. | <ul style="list-style-type: none"> ▪ Off ▪ Reset totalizer 1 ▪ Reset totalizer 2 ▪ Reset totalizer 3 ▪ Reset all totalizers ▪ Flow override | Off |
| Active level | Define input signal level at which the assigned function is triggered. | <ul style="list-style-type: none"> ▪ High ▪ Low | High |
| Response time status input | Define the minimum amount of time the input signal level must be present before the selected function is triggered. | 5 to 200 ms | 50 ms |

10.4.5 Configuring the current input





The "Current input" wizard guides the user systematically through all the parameters that have to be set for configuring the current input.

Navigation

"Setup" menu → Current input

▶ **Current input 1 to n**

| | |
|-----------------|--------|
| Terminal number | → ⓘ 84 |
| Signal mode | → ⓘ 84 |
| 0/4 mA value | → ⓘ 84 |

| | |
|---------------|--|
| 20 mA value | →  84 |
| Current span | →  84 |
| Failure mode | →  84 |
| Failure value | →  84 |

Parameter overview with brief description




| Parameter | Prerequisite | Description | User interface / Selection / User entry | Factory setting |
|-----------------|---|---|---|---|
| Terminal number | – | Shows the terminal numbers used by the current input module. | <ul style="list-style-type: none"> ▪ Not used ▪ 24-25 (I/O 2) ▪ 22-23 (I/O 3) | – |
| Signal mode | The measuring device is not approved for use in the hazardous area with type of protection Ex-i. | Select the signal mode for the current input. | <ul style="list-style-type: none"> ▪ Passive ▪ Active | Active |
| 0/4 mA value | – | Enter 4 mA value. | Signed floating-point number | 0 |
| 20 mA value | – | Enter 20 mA value. | Signed floating-point number | Depends on country and nominal diameter |
| Current span | – | Select current range for process value output and upper/lower level for alarm signal. | <ul style="list-style-type: none"> ▪ 4...20 mA ▪ 4...20 mA NAMUR ▪ 4...20 mA US ▪ 0...20 mA | Country-specific: <ul style="list-style-type: none"> ▪ 4...20 mA NAMUR ▪ 4...20 mA US |
| Failure mode | – | Define input behavior in alarm condition. | <ul style="list-style-type: none"> ▪ Alarm ▪ Last valid value ▪ Defined value | Alarm |
| Failure value | In the Failure mode parameter, the Defined value option is selected. | Enter value to be used by the device if input value from external device is missing. | Signed floating-point number | 0 |








10.4.6 Configuring the current output

The **Current output** wizard guides you systematically through all the parameters that have to be set for configuring the current output.




Navigation

"Setup" menu → Current output

| | |
|------------------------------|--|
| ▶ Current output 1 to n | |
| Terminal number | →  85 |
| Signal mode | →  85 |
| Assign current output 1 to n | →  85 |

| | |
|-----------------------|--|
| Current span | →  85 |
| 0/4 mA value | →  85 |
| 20 mA value | →  85 |
| Fixed current | →  85 |
| Damping output 1 to n | →  86 |
| Failure mode | →  86 |
| Failure current | →  86 |

Parameter overview with brief description

| Parameter | Prerequisite | Description | User interface / Selection / User entry | Factory setting |
|------------------------------|---|---|--|---|
| Terminal number | – | Shows the terminal numbers used by the current output module. | <ul style="list-style-type: none"> ▪ Not used ▪ 26-27 (I/O 1) ▪ 24-25 (I/O 2) ▪ 22-23 (I/O 3) | – |
| Signal mode | – | Select the signal mode for the current output. | <ul style="list-style-type: none"> ▪ Passive ▪ Active | Active |
| Assign current output 1 to n | – | Select process variable for current output. | <ul style="list-style-type: none"> ▪ Off ▪ Volume flow ▪ Mass flow ▪ Corrected volume flow ▪ Flow velocity ▪ Conductivity* ▪ Electronic temperature | Volume flow |
| Current span | – | Select current range for process value output and upper/lower level for alarm signal. | <ul style="list-style-type: none"> ▪ 4...20 mA NAMUR ▪ 4...20 mA US ▪ 4...20 mA ▪ 0...20 mA ▪ Fixed current | Country-specific: <ul style="list-style-type: none"> ▪ 4...20 mA NAMUR ▪ 4...20 mA US |
| 0/4 mA value | One of the following options is selected in the Current span parameter (→  85): <ul style="list-style-type: none"> ▪ 4...20 mA NAMUR ▪ 4...20 mA US ▪ 4...20 mA ▪ 0...20 mA | Enter 4 mA value. | Signed floating-point number | Country-specific: <ul style="list-style-type: none"> ▪ 0 l/h ▪ 0 gal/min (us) |
| 20 mA value | One of the following options is selected in the Current span parameter (→  85): <ul style="list-style-type: none"> ▪ 4...20 mA NAMUR ▪ 4...20 mA US ▪ 4...20 mA ▪ 0...20 mA | Enter 20 mA value. | Signed floating-point number | Depends on country and nominal diameter |
| Fixed current | The Fixed current option is selected in the Current span parameter (→  85). | Defines the fixed output current. | 0 to 22.5 mA | 22.5 mA |

| Parameter | Prerequisite | Description | User interface / Selection / User entry | Factory setting |
|-----------------------|--|--|---|-----------------|
| Damping output 1 to n | <p>One of the following options is selected in the Assign current output parameter (→ 85):</p> <ul style="list-style-type: none"> ▪ Volume flow ▪ Mass flow ▪ Corrected volume flow ▪ Flow velocity ▪ Conductivity* ▪ Electronic temperature <p>One of the following options is selected in the Current span parameter (→ 85):</p> <ul style="list-style-type: none"> ▪ 4...20 mA NAMUR ▪ 4...20 mA US ▪ 4...20 mA ▪ 0...20 mA | Set reaction time for output signal to fluctuations in the measured value. | 0.0 to 999.9 s | 1.0 s |
| Failure mode | <p>One of the following options is selected in the Assign current output parameter (→ 85):</p> <ul style="list-style-type: none"> ▪ Volume flow ▪ Mass flow ▪ Corrected volume flow ▪ Flow velocity ▪ Conductivity* ▪ Electronic temperature <p>One of the following options is selected in the Current span parameter (→ 85):</p> <ul style="list-style-type: none"> ▪ 4...20 mA NAMUR ▪ 4...20 mA US ▪ 4...20 mA ▪ 0...20 mA | Define output behavior in alarm condition. | <ul style="list-style-type: none"> ▪ Min. ▪ Max. ▪ Last valid value ▪ Actual value ▪ Defined value | Max. |
| Failure current | The Defined value option is selected in the Failure mode parameter. | Enter current output value in alarm condition. | 0 to 22.5 mA | 22.5 mA |


* Visibility depends on order options or device settings

10.4.7 Configuring the pulse/frequency/switch output

The **Pulse/frequency/switch output** wizard guides you systematically through all the parameters that can be set for configuring the selected output type.

Navigation

"Setup" menu → Advanced setup → Pulse/frequency/switch output

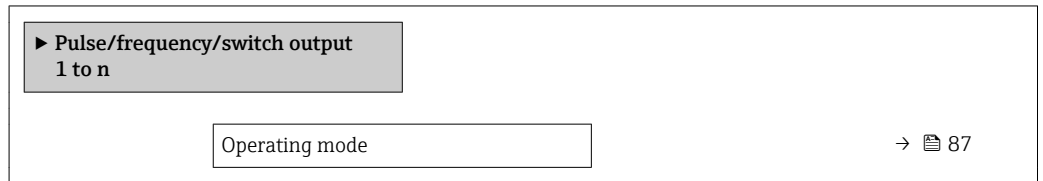


Parameter overview with brief description

| Parameter | Description | Selection | Factory setting |
|----------------|---|--|-----------------|
| Operating mode | Define the output as a pulse, frequency or switch output. | <ul style="list-style-type: none"> ■ Pulse ■ Frequency ■ Switch | Pulse |

Configuring the pulse output

Navigation

"Setup" menu → Pulse/frequency/switch output

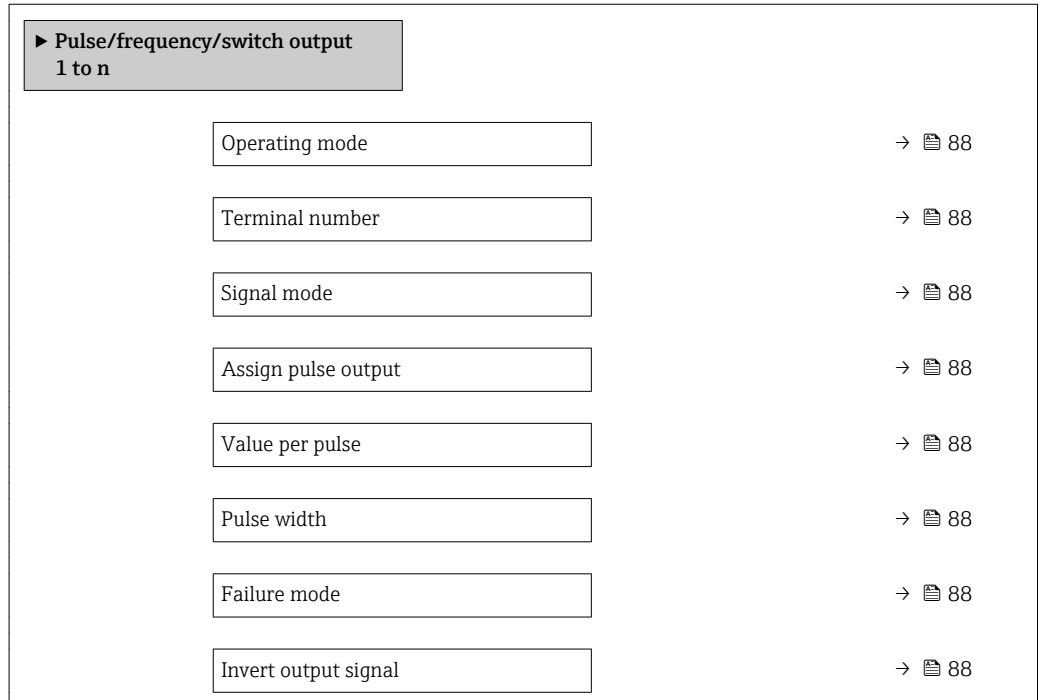

Parameter overview with brief description

| Parameter | Prerequisite | Description | Selection / User interface / User entry | Factory setting |
|----------------------------|---|---|--|---|
| Operating mode | – | Define the output as a pulse, frequency or switch output. | <ul style="list-style-type: none"> ▪ Pulse ▪ Frequency ▪ Switch | Pulse |
| Terminal number | – | Shows the terminal numbers used by the PFS output module. | <ul style="list-style-type: none"> ▪ Not used ▪ 24-25 (I/O 2) ▪ 22-23 (I/O 3) | – |
| Signal mode | – | Select the signal mode for the PFS output. | <ul style="list-style-type: none"> ▪ Passive ▪ Active | Passive |
| Assign pulse output 1 to n | The Pulse option is selected in the Operating mode parameter. | Select process variable for pulse output. | <ul style="list-style-type: none"> ▪ Off ▪ Volume flow ▪ Mass flow ▪ Corrected volume flow | Off |
| Value per pulse | In the Operating mode parameter, the Pulse option is selected, and one of the following options is selected in the Assign pulse output parameter (→ 88): <ul style="list-style-type: none"> ▪ Mass flow ▪ Volume flow ▪ Corrected volume flow | Enter measured value at which a pulse is output. | Signed floating-point number | Depends on country and nominal diameter |
| Pulse width | In the Operating mode parameter, the Pulse option is selected, and one of the following options is selected in the Assign pulse output parameter (→ 88): <ul style="list-style-type: none"> ▪ Mass flow ▪ Volume flow ▪ Corrected volume flow | Define time width of the output pulse. | 0.05 to 2 000 ms | 100 ms |
| Failure mode | In the Operating mode parameter, the Pulse option is selected, and one of the following options is selected in the Assign pulse output parameter (→ 88): <ul style="list-style-type: none"> ▪ Mass flow ▪ Volume flow ▪ Corrected volume flow | Define output behavior in alarm condition. | <ul style="list-style-type: none"> ▪ Actual value ▪ No pulses | No pulses |
| Invert output signal | – | Invert the output signal. | <ul style="list-style-type: none"> ▪ No ▪ Yes | No |

Configuring the frequency output

Navigation

"Setup" menu → Pulse/frequency/switch output

 
 
 

 
 
 
 

▶ Pulse/frequency/switch output 1 to n

Operating mode



→ 89

Terminal number

→ 89

| | |
|--------------------------------------|--|
| Signal mode | →  89 |
| Assign frequency output | →  89 |
| Minimum frequency value | →  89 |
| Maximum frequency value | →  90 |
| Measuring value at minimum frequency | →  90 |
| Measuring value at maximum frequency | →  90 |
| Failure mode | →  90 |
| Failure frequency | →  90 |
| Invert output signal | →  90 |

  Parameter overview with brief description

| Parameter | Prerequisite | Description | Selection / User interface / User entry | Factory setting |
|-------------------------|--|---|--|-----------------|
| Operating mode | – | Define the output as a pulse, frequency or switch output. | <ul style="list-style-type: none"> ▪ Pulse ▪ Frequency ▪ Switch | Pulse |
| Terminal number | – | Shows the terminal numbers used by the PFS output module. | <ul style="list-style-type: none"> ▪ Not used ▪ 24-25 (I/O 2) ▪ 22-23 (I/O 3) | – |
| Signal mode | – | Select the signal mode for the PFS output. | <ul style="list-style-type: none"> ▪ Passive ▪ Active | Passive |
| Assign frequency output | The Frequency option is selected in the Operating mode parameter (→  87). | Select process variable for frequency output. | <ul style="list-style-type: none"> ▪ Off ▪ Volume flow ▪ Mass flow ▪ Corrected volume flow ▪ Flow velocity ▪ Conductivity* ▪ Electronic temperature | Off |
| Minimum frequency value | One of the following options is selected in the Assign current output parameter (→  85): <ul style="list-style-type: none"> ▪ Volume flow ▪ Mass flow ▪ Corrected volume flow ▪ Flow velocity ▪ Conductivity* ▪ Electronic temperature | Enter minimum frequency. | 0.0 to 10000.0 Hz | 0.0 Hz |

| Parameter | Prerequisite | Description | Selection / User interface / User entry | Factory setting |
|--------------------------------------|--|--|---|---|
| Maximum frequency value | One of the following options is selected in the Assign current output parameter (→ 85): <ul style="list-style-type: none"> ▪ Volume flow ▪ Mass flow ▪ Corrected volume flow ▪ Flow velocity ▪ Conductivity* ▪ Electronic temperature | Enter maximum frequency. | 0.0 to 10 000.0 Hz | 10000.0 Hz |
| Measuring value at minimum frequency | One of the following options is selected in the Assign current output parameter (→ 85): <ul style="list-style-type: none"> ▪ Volume flow ▪ Mass flow ▪ Corrected volume flow ▪ Flow velocity ▪ Conductivity* ▪ Electronic temperature | Enter measured value for minimum frequency. | Signed floating-point number | Depends on country and nominal diameter |
| Measuring value at maximum frequency | One of the following options is selected in the Assign current output parameter (→ 85): <ul style="list-style-type: none"> ▪ Volume flow ▪ Mass flow ▪ Corrected volume flow ▪ Flow velocity ▪ Conductivity* ▪ Electronic temperature | Enter measured value for maximum frequency. | Signed floating-point number | Depends on country and nominal diameter |
| Failure mode | One of the following options is selected in the Assign current output parameter (→ 85): <ul style="list-style-type: none"> ▪ Volume flow ▪ Mass flow ▪ Corrected volume flow ▪ Flow velocity ▪ Conductivity* ▪ Electronic temperature | Define output behavior in alarm condition. | <ul style="list-style-type: none"> ▪ Actual value ▪ Defined value ▪ 0 Hz | 0 Hz |
| Failure frequency | One of the following options is selected in the Assign current output parameter (→ 85): <ul style="list-style-type: none"> ▪ Volume flow ▪ Mass flow ▪ Corrected volume flow ▪ Flow velocity ▪ Conductivity* ▪ Electronic temperature | Enter frequency output value in alarm condition. | 0.0 to 12 500.0 Hz | 0.0 Hz |
| Invert output signal | – | Invert the output signal. | <ul style="list-style-type: none"> ▪ No ▪ Yes | No |

* Visibility depends on order options or device settings

Configuring the switch output

Navigation

"Setup" menu → Pulse/frequency/switch output

| ► Pulse/frequency/switch output 1 to n | |
|---|------|
| Operating mode | → 91 |
| Terminal number | → 91 |
| Signal mode | → 91 |
| Switch output function | → 92 |
| Assign diagnostic behavior | → 92 |
| Assign limit | → 92 |
| Assign flow direction check | → 92 |
| Assign status | → 92 |
| Switch-on value | → 92 |
| Switch-off value | → 92 |
| Switch-on delay | → 92 |
| Switch-off delay | → 93 |
| Failure mode | → 93 |
| Invert output signal | → 93 |

Parameter overview with brief description

| Parameter | Prerequisite | Description | Selection / User interface / User entry | Factory setting |
|-----------------|--------------|---|--|-----------------|
| Operating mode | – | Define the output as a pulse, frequency or switch output. | <ul style="list-style-type: none"> ■ Pulse ■ Frequency ■ Switch | Pulse |
| Terminal number | – | Shows the terminal numbers used by the PFS output module. | <ul style="list-style-type: none"> ■ Not used ■ 24-25 (I/O 2) ■ 22-23 (I/O 3) | – |
| Signal mode | – | Select the signal mode for the PFS output. | <ul style="list-style-type: none"> ■ Passive ■ Active | Passive |

| Parameter | Prerequisite | Description | Selection / User interface / User entry | Factory setting |
|-----------------------------|---|--|--|---|
| Switch output function | The Switch option is selected in the Operating mode parameter. | Select function for switch output. | <ul style="list-style-type: none"> ▪ Off ▪ On ▪ Diagnostic behavior ▪ Limit ▪ Flow direction check ▪ Status | Off |
| Assign diagnostic behavior | <ul style="list-style-type: none"> ▪ In the Operating mode parameter, the Switch option is selected. ▪ In the Switch output function parameter, the Diagnostic behavior option is selected. | Select diagnostic behavior for switch output. | <ul style="list-style-type: none"> ▪ Alarm ▪ Alarm or warning ▪ Warning | Alarm |
| Assign limit | <ul style="list-style-type: none"> ▪ The Switch option is selected in the Operating mode parameter. ▪ The Limit option is selected in the Switch output function parameter. | Select process variable for limit function. | <ul style="list-style-type: none"> ▪ Off ▪ Volume flow ▪ Mass flow ▪ Corrected volume flow ▪ Flow velocity* ▪ Conductivity* ▪ Totalizer 1 ▪ Totalizer 2 ▪ Totalizer 3 ▪ Electronic temperature | Volume flow |
| Assign flow direction check | <ul style="list-style-type: none"> ▪ The Switch option is selected in the Operating mode parameter. ▪ The Flow direction check option is selected in the Switch output function parameter. | Select process variable for flow direction monitoring. | <ul style="list-style-type: none"> ▪ Off ▪ Volume flow ▪ Mass flow ▪ Corrected volume flow | Volume flow |
| Assign status | <ul style="list-style-type: none"> ▪ The Switch option is selected in the Operating mode parameter. ▪ The Status option is selected in the Switch output function parameter. | Select device status for switch output. | <ul style="list-style-type: none"> ▪ Empty pipe detection ▪ Low flow cut off | Empty pipe detection |
| Switch-on value | <ul style="list-style-type: none"> ▪ In the Operating mode parameter, the Switch option is selected. ▪ In the Switch output function parameter, the Limit option is selected. | Enter measured value for the switch-on point. | Signed floating-point number | Country-specific: <ul style="list-style-type: none"> ▪ 0 l/h ▪ 0 gal/min (us) |
| Switch-off value | <ul style="list-style-type: none"> ▪ In the Operating mode parameter, the Switch option is selected. ▪ In the Switch output function parameter, the Limit option is selected. | Enter measured value for the switch-off point. | Signed floating-point number | Country-specific: <ul style="list-style-type: none"> ▪ 0 l/h ▪ 0 gal/min (us) |
| Switch-on delay | <ul style="list-style-type: none"> ▪ The Switch option is selected in the Operating mode parameter. ▪ The Limit option is selected in the Switch output function parameter. | Define delay for the switch-on of status output. | 0.0 to 100.0 s | 0.0 s |

| Parameter | Prerequisite | Description | Selection / User interface / User entry | Factory setting |
|----------------------|---|---|---|-----------------|
| Switch-off delay | <ul style="list-style-type: none"> ▪ The Switch option is selected in the Operating mode parameter. ▪ The Limit option is selected in the Switch output function parameter. | Define delay for the switch-off of status output. | 0.0 to 100.0 s | 0.0 s |
| Failure mode | – | Define output behavior in alarm condition. | <ul style="list-style-type: none"> ▪ Actual status ▪ Open ▪ Closed | Open |
| Invert output signal | – | Invert the output signal. | <ul style="list-style-type: none"> ▪ No ▪ Yes | No |

* Visibility depends on order options or device settings

10.4.8 Configuring the local display

The **Display** wizard guides you systematically through all the parameters that can be configured for configuring the local display.

Navigation

"Setup" menu → Display

▶ Display

| | |
|-----------------------|-------|
| Format display | → 94 |
| Value 1 display | → 94 |
| 0% bargraph value 1 | → 94 |
| 100% bargraph value 1 | → 94 |
| Value 2 display | → 94 |
| Value 3 display | → 94 |
| 0% bargraph value 3 | → 94 |
| 100% bargraph value 3 | → 94 |
| Value 4 display | → 94 |

Parameter overview with brief description

| Parameter | Prerequisite | Description | Selection / User entry | Factory setting |
|-----------------------|---|---|---|---|
| Format display | A local display is provided. | Select how measured values are shown on the display. | <ul style="list-style-type: none"> ▪ 1 value, max. size ▪ 1 bargraph + 1 value ▪ 2 values ▪ 1 value large + 2 values ▪ 4 values | 1 value, max. size |
| Value 1 display | A local display is provided. | Select the measured value that is shown on the local display. | <ul style="list-style-type: none"> ▪ Volume flow ▪ Mass flow ▪ Corrected volume flow ▪ Flow velocity ▪ Electronic temperature ▪ Totalizer 1 ▪ Totalizer 2 ▪ Totalizer 3 ▪ Current output 1 ▪ Current output 2 * ▪ Current output 3 * | Volume flow |
| 0% bargraph value 1 | A local display is provided. | Enter 0% value for bar graph display. | Signed floating-point number | Country-specific: <ul style="list-style-type: none"> ▪ 0 l/h ▪ 0 gal/min (us) |
| 100% bargraph value 1 | A local display is provided. | Enter 100% value for bar graph display. | Signed floating-point number | Depends on country and nominal diameter |
| Value 2 display | A local display is provided. | Select the measured value that is shown on the local display. | <ul style="list-style-type: none"> ▪ None ▪ Volume flow ▪ Mass flow ▪ Corrected volume flow ▪ Flow velocity ▪ Conductivity * ▪ Electronic temperature ▪ Totalizer 1 ▪ Totalizer 2 ▪ Totalizer 3 ▪ Current output 1 ▪ Current output 2 * ▪ Current output 3 * ▪ Current output 4 * | None |
| Value 3 display | A local display is provided. | Select the measured value that is shown on the local display. | For the picklist, see the Value 2 display parameter (→ 94) | None |
| 0% bargraph value 3 | A selection was made in the Value 3 display parameter. | Enter 0% value for bar graph display. | Signed floating-point number | Country-specific: <ul style="list-style-type: none"> ▪ 0 l/h ▪ 0 gal/min (us) |
| 100% bargraph value 3 | A selection was made in the Value 3 display parameter. | Enter 100% value for bar graph display. | Signed floating-point number | 0 |
| Value 4 display | A local display is provided. | Select the measured value that is shown on the local display. | For the picklist, see the Value 2 display parameter (→ 94) | None |


* Visibility depends on order options or device settings

10.4.9 Configuring the low flow cut off

The **Low flow cut off** wizard systematically guides the user through all the parameters that must be set to configure low flow cut off.

Navigation

"Setup" menu → Low flow cut off

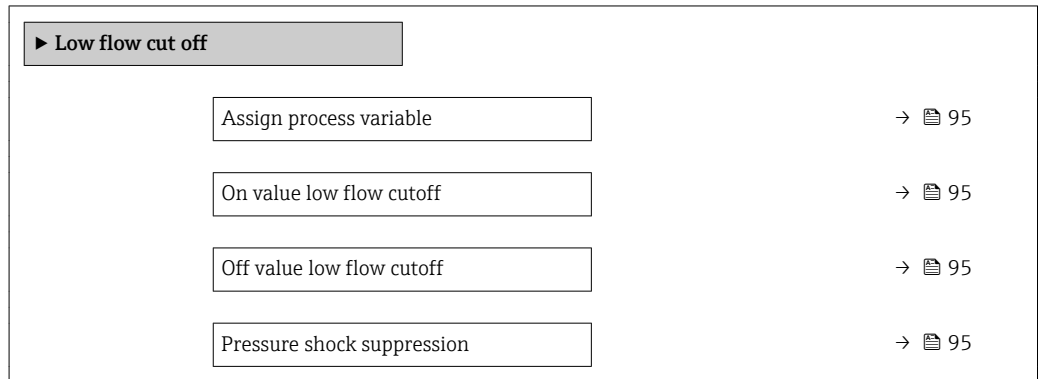

Parameter overview with brief description


| Parameter | Prerequisite | Description | Selection / User entry | Factory setting |
|----------------------------|--|--|--|---|
| Assign process variable | – | Select process variable for low flow cut off. | <ul style="list-style-type: none"> ▪ Off ▪ Volume flow ▪ Mass flow ▪ Corrected volume flow | Volume flow |
| On value low flow cutoff | One of the following options is selected in the Assign process variable parameter (→ 95): <ul style="list-style-type: none"> ▪ Volume flow ▪ Mass flow | Enter on value for low flow cut off. | Positive floating-point number | Depends on country and nominal diameter |
| Off value low flow cutoff | One of the following options is selected in the Assign process variable parameter (→ 95): <ul style="list-style-type: none"> ▪ Volume flow ▪ Mass flow ▪ Corrected volume flow | Enter off value for low flow cut off. | 0 to 100.0 % | 50 % |
| Pressure shock suppression | One of the following options is selected in the Assign process variable parameter (→ 95): <ul style="list-style-type: none"> ▪ Volume flow ▪ Mass flow ▪ Corrected volume flow | Enter time frame for signal suppression (= active pressure shock suppression). | 0 to 100 s | 0 s |

10.4.10 Configuring empty pipe detection

The **Empty pipe detection** submenu contains parameters that must be configured for the configuration of empty pipe detection.

Navigation

"Setup" menu → Empty pipe detection

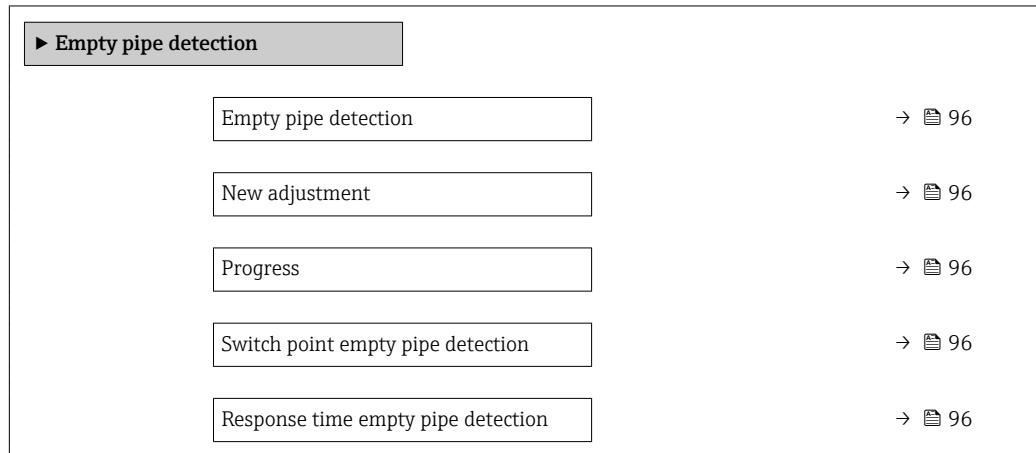


Parameter overview with brief description








| Parameter | Prerequisite | Description | Selection / User interface / User entry | Factory setting |
|------------------------------------|--|---|---|-----------------|
| Empty pipe detection | – | Switch empty pipe detection on and off. | <ul style="list-style-type: none"> ▪ Off ▪ On | Off |
| New adjustment | The On option is selected in the Empty pipe detection parameter. | Select type of adjustment. | <ul style="list-style-type: none"> ▪ Cancel ▪ Empty pipe adjust ▪ Full pipe adjust | Cancel |
| Progress | The On option is selected in the Empty pipe detection parameter. | Shows the progress. | <ul style="list-style-type: none"> ▪ Ok ▪ Busy ▪ Not ok | – |
| Switch point empty pipe detection | The On option is selected in the Empty pipe detection parameter. | Enter hysteresis in %, below this value the measuring tube will be detected as empty. | 0 to 100 % | 10 % |
| Response time empty pipe detection | In the Empty pipe detection parameter (→ 96), the On option is selected. | Enter the time before diagnostic message S862 'Pipe empty' is displayed for empty pipe detection. | 0 to 100 s | 1 s |

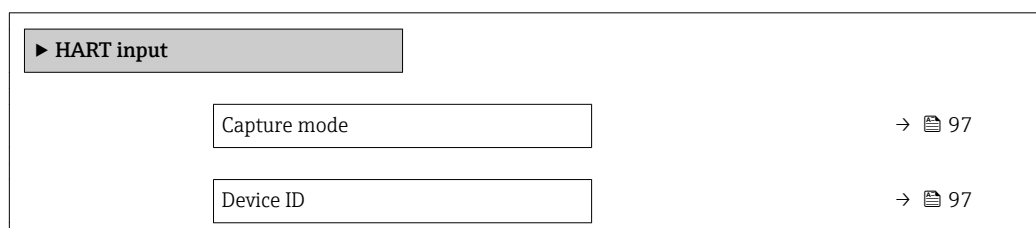10.4.11 Configuring the HART input

Navigation

"Setup" menu → HART input



| | |
|-----------------|--|
| Device type | →  97 |
| Manufacturer ID | →  97 |
| Burst command | →  97 |
| Slot number | →  97 |
| Timeout | →  98 |
| Failure mode | →  98 |
| Failure value | →  98 |


"Configuration" submenu

Navigation

"Expert" menu → Communication → HART input → Configuration

Parameter overview with brief description

| Parameter | Prerequisite | Description | Selection / User entry | Factory setting |
|-----------------|--|--|---|-----------------|
| Capture mode | – | Select capture mode via burst or master communication. | <ul style="list-style-type: none"> ▪ Off ▪ Burst network ▪ Master network | Off |
| Device ID | The Master network option is selected in the Capture mode parameter. | Enter device ID of external device. | 6-digit value: <ul style="list-style-type: none"> ▪ Via local operation: enter as hexadecimal or decimal number ▪ Via operating tool: enter as decimal number | 0 |
| Device type | In the Capture mode parameter, the Master network option is selected. | Enter device type of external device. | 2-digit hexadecimal number | 0x00 |
| Manufacturer ID | The Master network option is selected in the Capture mode parameter. | Enter manufacture ID of external device. | 2-digit value: <ul style="list-style-type: none"> ▪ Via local operation: enter as hexadecimal or decimal number ▪ Via operating tool: enter as decimal number | 0 |
| Burst command | The Burst network option or the Master network option are selected in the Capture mode parameter. | Select command to read in external process variable. | <ul style="list-style-type: none"> ▪ Command 1 ▪ Command 3 ▪ Command 9 ▪ Command 33 | Command 1 |
| Slot number | The Burst network option or the Master network option is selected in the Capture mode parameter. | Define position of external process variable in burst command. | 1 to 8 | 1 |

| Parameter | Prerequisite | Description | Selection / User entry | Factory setting |
|---------------|--|--|--|-----------------|
| Timeout | The Burst network option or the Master network option is selected in the Capture mode parameter. | Enter deadline for process variable of external device.  If the waiting time is exceeded, the diagnostic message F410 Data transfer is displayed. | 1 to 120 s | 5 s |
| Failure mode | In the Capture mode parameter, the Burst network option or Master network option is selected. | Define behavior if external process variable is missed. | <ul style="list-style-type: none"> ▪ Alarm ▪ Last valid value ▪ Defined value | Alarm |
| Failure value | The following conditions are met: <ul style="list-style-type: none"> ▪ In the Capture mode parameter, the Burst network option or Master network option is selected. ▪ In the Failure mode parameter, the Defined value option is selected. | Enter value to be used by the device if input value from external device is missing. | Signed floating-point number | 0 |

"Input" submenu

Navigation

"Expert" menu → Communication → HART input → Input

Parameter overview with brief description

| Parameter | Description | User interface |
|-----------|-------------|--|
| Value | | Signed floating-point number |
| Status | | <ul style="list-style-type: none"> ▪ Manual/Fixed ▪ Good ▪ Poor accuracy ▪ Bad |

10.4.12 Configuring the relay output


The **Relay output** wizard guides the user systematically through all the parameters that have to be set for configuring the relay output.


Navigation


"Setup" menu → Relay output 1 to n


► RelaisOutput 1 to n


- Switch output function




→  99
- Assign flow direction check

→  99
- Assign limit

→  99
- Assign diagnostic behavior

→  99
- Assign status

→  99

| | |
|------------------|---|
| Switch-off value | →  99 |
| Switch-on value | →  99 |
| Failure mode | →  100 |

Parameter overview with brief description

| Parameter | Prerequisite | Description | Selection / User interface / User entry | Factory setting |
|-----------------------------|--|---|---|--|
| Relay output function | – | Select the function for the relay output. | <ul style="list-style-type: none"> ■ Closed ■ Open ■ Diagnostic behavior ■ Limit ■ Flow direction check ■ Digital Output | Closed |
| Terminal number | – | Shows the terminal numbers used by the relay output module. | <ul style="list-style-type: none"> ■ Not used ■ 24-25 (I/O 2) ■ 22-23 (I/O 3) | – |
| Assign flow direction check | In the Relay output function parameter, the Flow direction check option is selected. | Select process variable for flow direction monitoring. | <ul style="list-style-type: none"> ■ Off ■ Volume flow ■ Mass flow ■ Corrected volume flow | Volume flow |
| Assign limit | In the Relay output function parameter, the Limit option is selected. | Select process variable for limit function. | <ul style="list-style-type: none"> ■ Off ■ Volume flow ■ Mass flow ■ Corrected volume flow ■ Flow velocity ■ Conductivity* ■ Totalizer 1 ■ Totalizer 2 ■ Totalizer 3 ■ Electronic temperature | Volume flow |
| Assign diagnostic behavior | In the Relay output function parameter, the Diagnostic behavior option is selected. | Select diagnostic behavior for switch output. | <ul style="list-style-type: none"> ■ Alarm ■ Alarm or warning ■ Warning | Alarm |
| Assign status | In the Relay output function parameter, the Digital Output option is selected. | Select device status for switch output. | <ul style="list-style-type: none"> ■ Partially filled pipe detection ■ Low flow cut off | Partially filled pipe detection |
| Switch-off value | In the Relay output function parameter, the Limit option is selected. | Enter measured value for the switch-off point. | Signed floating-point number | Country-specific: <ul style="list-style-type: none"> ■ 0 l/h ■ 0 gal(us)/min |
| Switch-off delay | In the Relay output function parameter, the Limit option is selected. | Define delay for the switch-off of status output. | 0.0 to 100.0 s | 0.0 s |
| Switch-on value | In the Relay output function parameter, the Limit option is selected. | Enter measured value for the switch-on point. | Signed floating-point number | Country-specific: <ul style="list-style-type: none"> ■ 0 l/h ■ 0 gal(us)/min |

| Parameter | Prerequisite | Description | Selection / User interface / User entry | Factory setting |
|-----------------|---|--|---|-----------------|
| Switch-on delay | In the Relay output function parameter, the Limit option is selected. | Define delay for the switch-on of status output. | 0.0 to 100.0 s | 0.0 s |
| Failure mode | – | Define output behavior in alarm condition. | <ul style="list-style-type: none"> ▪ Actual status ▪ Open ▪ Closed | Open |

* Visibility depends on order options or device settings

10.4.13 Configuring the double pulse output

The **Double pulse output** submenu guides the user systematically through all the parameters that have to be set for configuring the double pulse output.

Navigation

"Setup" menu → Double pulse output

| ► Double pulse output | |
|------------------------|-------|
| Master terminal number | → 100 |
| Slave terminal number | → 100 |
| Signal mode | → 100 |
| Assign pulse output 1 | → 101 |
| Measuring mode | → 101 |
| Value per pulse | → 101 |
| Pulse width | → 101 |
| Failure mode | → 101 |
| Invert output signal | → 101 |

Parameter overview with brief description


| Parameter | Description | Selection / User interface / User entry | Factory setting |
|------------------------|--|--|-----------------|
| Signal mode | Select the signal mode for the double pulse output. | <ul style="list-style-type: none"> ▪ Passive ▪ Active ▪ Passive NAMUR | Passive |
| Master terminal number | Shows the terminal numbers used by the master of the double pulse output module. | <ul style="list-style-type: none"> ▪ Not used ▪ 24-25 (I/O 2) ▪ 22-23 (I/O 3) | – |
| Slave terminal number | | <ul style="list-style-type: none"> ▪ Not used ▪ 24-25 (I/O 2) ▪ 22-23 (I/O 3) | – |

| Parameter | Description | Selection / User interface / User entry | Factory setting |
|-----------------------|--|---|---|
| Assign pulse output 1 | Select process variable for pulse output. | <ul style="list-style-type: none"> ■ Off ■ Volume flow ■ Mass flow ■ Corrected volume flow | Off |
| Measuring mode | Select measuring mode for pulse output. | <ul style="list-style-type: none"> ■ Forward flow ■ Forward/Reverse flow ■ Reverse flow ■ Reverse flow compensation | Forward flow |
| Value per pulse | Enter measured value at which a pulse is output. | Signed floating-point number | Depends on country and nominal diameter |
| Pulse width | Define time width of the output pulse. | 0.5 to 2 000 ms | 0.5 ms |
| Failure mode | Define output behavior in alarm condition. | <ul style="list-style-type: none"> ■ Actual value ■ No pulses | No pulses |
| Invert output signal | Invert the output signal. | <ul style="list-style-type: none"> ■ No ■ Yes | No |

10.5 Advanced settings

The **Advanced setup** submenu together with its submenus contains parameters for specific settings.

Navigation to the "Advanced setup" submenu

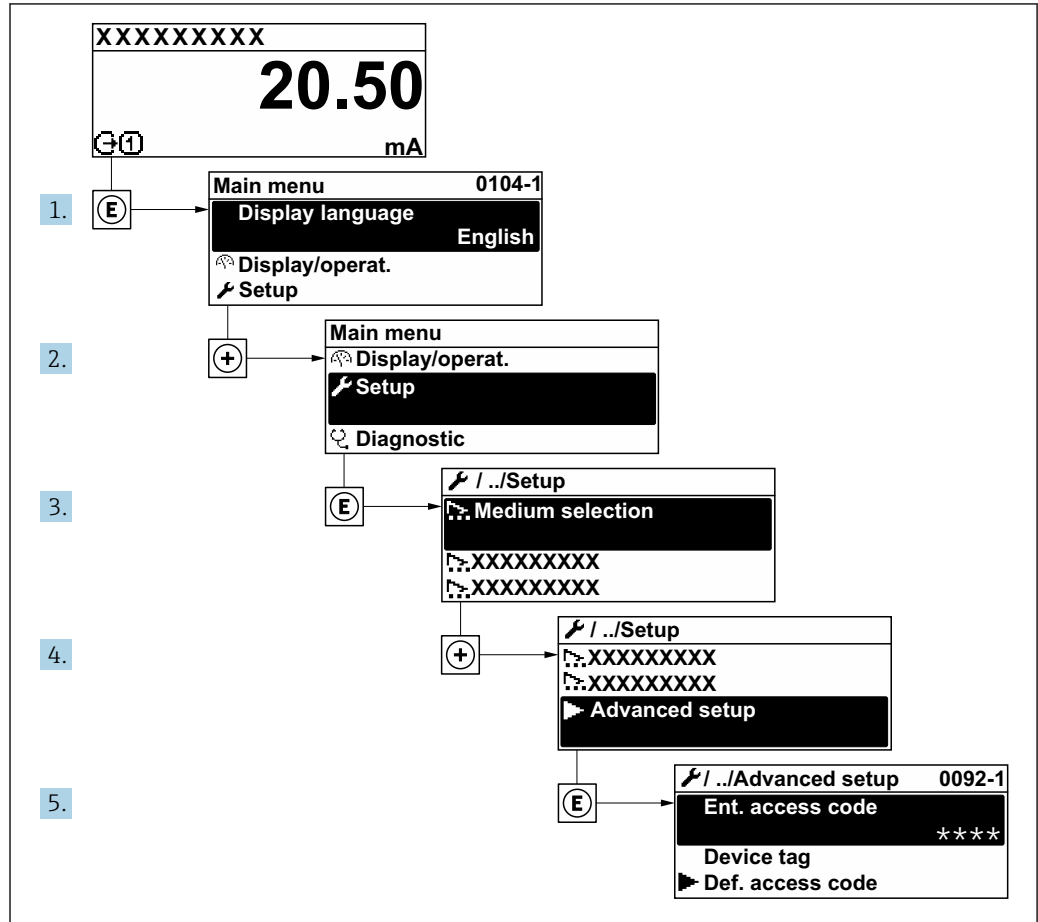


A0032223-EN

i The number of submenus can vary depending on the device version. Some submenus are not dealt with in the Operating Instructions. These submenus and the parameters they contain are explained in the Special Documentation for the device.

Navigation

"Setup" menu → Advanced setup

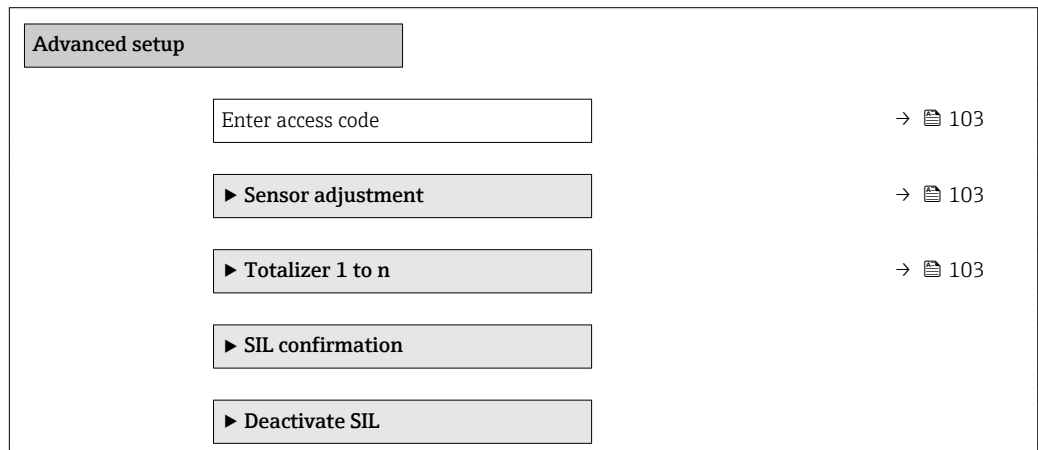

| | |
|------------------------------|---------|
| ▶ Display | → ⓘ 105 |
| ▶ Electrode cleaning circuit | → ⓘ 108 |
| ▶ WLAN settings | → ⓘ 109 |
| ▶ Heartbeat setup | |
| ▶ Configuration backup | → ⓘ 110 |
| ▶ Administration | → ⓘ 111 |

10.5.1 Using the parameter to enter the access code

Navigation

"Setup" menu → Advanced setup

Parameter overview with brief description

| Parameter | Description | User entry |
|-------------------|--|------------|
| Enter access code | Enter access code to disable write protection of parameters. | 0 to 9999 |

10.5.2 Carrying out a sensor adjustment

The **Sensor adjustment** submenu contains parameters that pertain to the functionality of the sensor.

Navigation

"Setup" menu → Advanced setup → Sensor adjustment

| | |
|------------------------|---------|
| ▶ Sensor adjustment | |
| Installation direction | → ⓘ 103 |

Parameter overview with brief description

| Parameter | Description | Selection | Factory setting |
|------------------------|---|---|-------------------------|
| Installation direction | Set sign of flow direction to match the direction of the arrow on the sensor. | <ul style="list-style-type: none"> ▪ Flow in arrow direction ▪ Flow against arrow direction | Flow in arrow direction |

10.5.3 Configuring the totalizer

In the **"Totalizer 1 to n"** submenu the individual totalizer can be configured.

Navigation

"Setup" menu → Advanced setup → Totalizer 1 to n

| | |
|---------------------------|---------|
| ▶ Totalizer 1 to n | |
| Assign process variable | → ⓘ 104 |
| Unit totalizer 1 to n | → ⓘ 104 |
| Totalizer operation mode | → ⓘ 104 |
| Failure mode | → ⓘ 104 |

Parameter overview with brief description

| Parameter | Prerequisite | Description | Selection | Factory setting |
|--------------------------|--|---|--|-----------------|
| Assign process variable | – | Select process variable for totalizer. | <ul style="list-style-type: none"> ▪ Off ▪ Volume flow ▪ Mass flow ▪ Corrected volume flow | Volume flow |
| Unit totalizer 1 to n | One of the following options is selected in the Assign process variable parameter (→ ⓘ 104) of the Totalizer 1 to n submenu: <ul style="list-style-type: none"> ▪ Volume flow ▪ Mass flow ▪ Corrected volume flow | Select process variable totalizer unit. | Unit choose list | 1 |
| Totalizer operation mode | – | Select totalizer calculation mode. | <ul style="list-style-type: none"> ▪ Net flow total ▪ Forward flow total ▪ Reverse flow total | Net flow total |
| Failure mode | – | Define totalizer behavior in alarm condition. | <ul style="list-style-type: none"> ▪ Stop ▪ Actual value ▪ Last valid value | Stop |

10.5.4 Carrying out additional display configurations

In the **Display** submenu you can set all the parameters associated with the configuration of the local display.


Navigation

"Setup" menu → Advanced setup → Display

| ► Display | |
|-----------------------|-------|
| Format display | → 106 |
| Value 1 display | → 106 |
| 0% bargraph value 1 | → 106 |
| 100% bargraph value 1 | → 106 |
| Decimal places 1 | → 106 |
| Value 2 display | → 106 |
| Decimal places 2 | → 106 |
| Value 3 display | → 106 |
| 0% bargraph value 3 | → 106 |
| 100% bargraph value 3 | → 106 |
| Decimal places 3 | → 107 |
| Value 4 display | → 107 |
| Decimal places 4 | → 107 |
| Display language | → 107 |
| Display interval | → 107 |
| Display damping | → 107 |
| Header | → 107 |
| Header text | → 107 |
| Separator | → 108 |
| Backlight | → 108 |

Parameter overview with brief description

| Parameter | Prerequisite | Description | Selection / User entry | Factory setting |
|-----------------------|--|---|---|---|
| Format display | A local display is provided. | Select how measured values are shown on the display. | <ul style="list-style-type: none"> ▪ 1 value, max. size ▪ 1 bargraph + 1 value ▪ 2 values ▪ 1 value large + 2 values ▪ 4 values | 1 value, max. size |
| Value 1 display | A local display is provided. | Select the measured value that is shown on the local display. | <ul style="list-style-type: none"> ▪ Volume flow ▪ Mass flow ▪ Corrected volume flow ▪ Flow velocity ▪ Electronic temperature ▪ Totalizer 1 ▪ Totalizer 2 ▪ Totalizer 3 ▪ Current output 1 ▪ Current output 2 * ▪ Current output 3 * | Volume flow |
| 0% bargraph value 1 | A local display is provided. | Enter 0% value for bar graph display. | Signed floating-point number | Country-specific: <ul style="list-style-type: none"> ▪ 0 l/h ▪ 0 gal/min (us) |
| 100% bargraph value 1 | A local display is provided. | Enter 100% value for bar graph display. | Signed floating-point number | Depends on country and nominal diameter |
| Decimal places 1 | A measured value is specified in the Value 1 display parameter. | Select the number of decimal places for the display value. | <ul style="list-style-type: none"> ▪ x ▪ x.x ▪ x.xx ▪ x.xxx ▪ x.xxxx | x.xx |
| Value 2 display | A local display is provided. | Select the measured value that is shown on the local display. | <ul style="list-style-type: none"> ▪ None ▪ Volume flow ▪ Mass flow ▪ Corrected volume flow ▪ Flow velocity ▪ Conductivity * ▪ Electronic temperature ▪ Totalizer 1 ▪ Totalizer 2 ▪ Totalizer 3 ▪ Current output 1 ▪ Current output 2 * ▪ Current output 3 * ▪ Current output 4 * | None |
| Decimal places 2 | A measured value is specified in the Value 2 display parameter. | Select the number of decimal places for the display value. | <ul style="list-style-type: none"> ▪ x ▪ x.x ▪ x.xx ▪ x.xxx ▪ x.xxxx | x.xx |
| Value 3 display | A local display is provided. | Select the measured value that is shown on the local display. | For the picklist, see the Value 2 display parameter (→ 94) | None |
| 0% bargraph value 3 | A selection was made in the Value 3 display parameter. | Enter 0% value for bar graph display. | Signed floating-point number | Country-specific: <ul style="list-style-type: none"> ▪ 0 l/h ▪ 0 gal/min (us) |
| 100% bargraph value 3 | A selection was made in the Value 3 display parameter. | Enter 100% value for bar graph display. | Signed floating-point number | 0 |

 
| Parameter | Prerequisite | Description | Selection / User entry | Factory setting |
|------------------|--|---|--|--|
| Decimal places 3 | A measured value is specified in the Value 3 display parameter. | Select the number of decimal places for the display value. | <ul style="list-style-type: none"> ■ x ■ x.x ■ x.xx ■ x.xxx ■ x.xxxx | x.xx |
| Value 4 display | A local display is provided. | Select the measured value that is shown on the local display. | For the picklist, see the Value 2 display parameter (→  94) | None |
| Decimal places 4 | A measured value is specified in the Value 4 display parameter. | Select the number of decimal places for the display value. | <ul style="list-style-type: none"> ■ x ■ x.x ■ x.xx ■ x.xxx ■ x.xxxx | x.xx |
| Display language | A local display is provided. | Set display language. | <ul style="list-style-type: none"> ■ English ■ Deutsch * ■ Français * ■ Español * ■ Italiano * ■ Nederlands * ■ Portuguesa * ■ Polski * ■ русский язык (Russian) * ■ Svenska * ■ Türkçe * ■ 中文 (Chinese) * ■ 日本語 (Japanese) * ■ 한국어 (Korean) * ■ العربية (Arabic) * ■ Bahasa Indonesia * ■ ภาษาไทย (Thai) * ■ tiếng Việt (Vietnamese) * ■ čeština (Czech) * | English (alternatively, the ordered language is preset in the device) |
| Display interval | A local display is provided. | Set time measured values are shown on display if display alternates between values. | 1 to 10 s | 5 s |
| Display damping | A local display is provided. | Set display reaction time to fluctuations in the measured value. | 0.0 to 999.9 s | 0.0 s |
| Header | A local display is provided. | Select header contents on local display. | <ul style="list-style-type: none"> ■ Device tag ■ Free text | Device tag |
| Header text | In the Header parameter, the Free text option is selected. | Enter display header text. | Max. 12 characters such as letters, numbers or special characters (e.g. @, %, /) | ----- |

| Parameter | Prerequisite | Description | Selection / User entry | Factory setting |
|-----------|---|---|--|-----------------|
| Separator | A local display is provided. | Select decimal separator for displaying numerical values. | <ul style="list-style-type: none"> ▪ . (point) ▪ , (comma) | . (point) |
| Backlight | One of the following conditions is met: <ul style="list-style-type: none"> ▪ Order code for "Display; operation", option F "4-line, illum.; touch control" ▪ Order code for "Display; operation", option G "4-line, illum.; touch control +WLAN" ▪ Order code for "Display; operation", option O "Separate 4-line display, illum.; 10m/30ft cable; touch control" | Switch the local display backlight on and off. | <ul style="list-style-type: none"> ▪ Disable ▪ Enable | Enable |

* Visibility depends on order options or device settings






10.5.5 Performing electrode cleaning

The **Electrode cleaning circuit** submenu contains parameters that must be configured for the configuration of electrode cleaning.

 The submenu is only available if the device was ordered with electrode cleaning.

Navigation

"Setup" menu → Advanced setup → Electrode cleaning circuit

| ▶ Electrode cleaning circuit | |
|------------------------------|---|
| Electrode cleaning circuit | →  108 |
| ECC duration | →  108 |
| ECC recovery time | →  109 |
| ECC cleaning cycle | →  109 |
| ECC Polarity | →  109 |

Parameter overview with brief description

| Parameter | Prerequisite | Description | Selection / User entry / User interface | Factory setting |
|----------------------------|--|--|---|-----------------|
| Electrode cleaning circuit | For the following order code: "Application package", option EC "ECC electrode cleaning" | Enable the cyclic electrode cleaning circuit. | <ul style="list-style-type: none"> ▪ Off ▪ On | Off |
| ECC duration | For the following order code: "Application package", option EC "ECC electrode cleaning" | Enter the duration of electrode cleaning in seconds. | 0.01 to 30 s | 2 s |


| Parameter | Prerequisite | Description | Selection / User entry / User interface | Factory setting |
|--------------------|--|---|--|---|
| ECC recovery time | For the following order code: "Application package", option EC "ECC electrode cleaning" | Define recovery time after electrode cleaning. During this time the current output values will be held at last valid value. | 1 to 600 s | 60 s |
| ECC cleaning cycle | For the following order code: "Application package", option EC "ECC electrode cleaning" | Enter the pause duration between electrode cleaning cycles. | 0.5 to 168 h | 0.5 h |
| ECC Polarity | For the following order code: "Application package", option EC "ECC electrode cleaning" | Select the polarity of the electrode cleaning circuit. | <ul style="list-style-type: none"> ■ Positive ■ Negative | Depends on the electrode material: <ul style="list-style-type: none"> ■ Platinum: Negative option ■ Tantalum, Alloy C22, stainless steel: Positive option |

10.5.6 WLAN configuration

The **WLAN Settings** submenu guides the user systematically through all the parameters that have to be set for the WLAN configuration.



Navigation

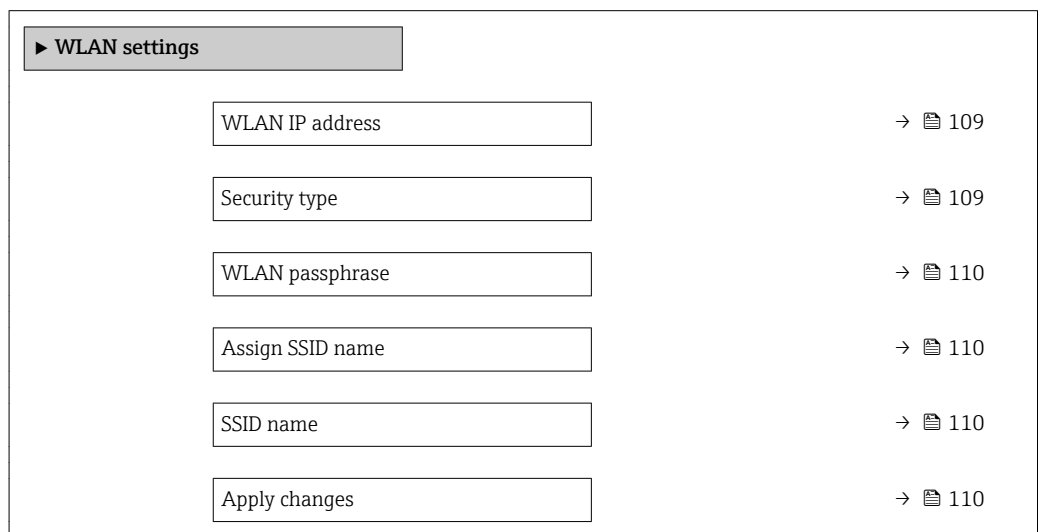"Setup" menu → Advanced setup → WLAN Settings



Parameter overview with brief description

| Parameter | Prerequisite | Description | User entry / Selection | Factory setting |
|------------------|--------------|--|--|-----------------|
| WLAN IP address | – | Enter IP address of the device WLAN interface. | 4 octet: 0 to 255 (in the particular octet) | 192.168.1.212 |
| Network security | – | Select the security type of the WLAN network. | <ul style="list-style-type: none"> ■ Unsecured ■ WPA2-PSK ■ EAP-PEAP with MSCHAPv2 ■ EAP-PEAP MSCHAPv2 no server authentic. ■ EAP-TLS | Unsecured |

| Parameter | Prerequisite | Description | User entry / Selection | Factory setting |
|------------------|--|--|--|--|
| WLAN passphrase | The WPA2-PSK option is selected in the Security type parameter. | Enter the network key (8 to 32 characters).  The network key supplied with the device should be changed during commissioning for security reasons. | 8 to 32-digit character string comprising numbers, letters and special characters | Serial number of the measuring device (e.g. L100A802000) |
| Assign SSID name | – | Select which name will be used for SSID: device tag or user-defined name. | <ul style="list-style-type: none"> ▪ Device tag ▪ User-defined | User-defined |
| SSID name | <ul style="list-style-type: none"> ▪ The User-defined option is selected in the Assign SSID name parameter. ▪ The WLAN access point option is selected in the WLAN mode parameter. | Enter the user-defined SSID name (max. 32 characters).  The user-defined SSID name may only be assigned once. If the SSID name is assigned more than once, the devices can interfere with one another. | Max. 32-digit character string comprising numbers, letters and special characters | EH_device designation_last 7 digits of the serial number (e.g. EH_Promag_300_A 802000) |
| Apply changes | – | Use changed WLAN settings. | <ul style="list-style-type: none"> ▪ Cancel ▪ Ok | Cancel |


10.5.7 Configuration management

After commissioning, you can save the current device configuration or restore the previous device configuration.

You can do so using the **Configuration management** parameter and the related options found in the **Configuration backup** submenu.

Navigation

"Setup" menu → Advanced setup → Configuration backup

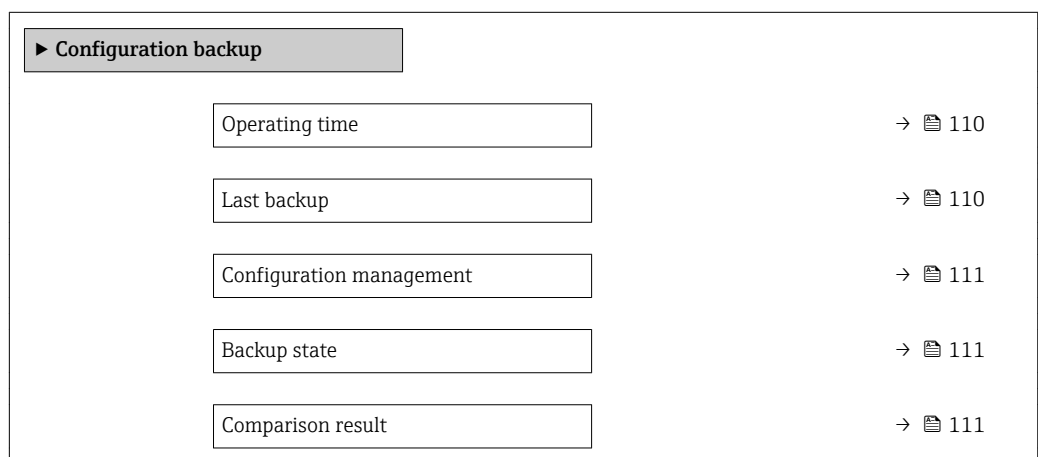

Parameter overview with brief description

| Parameter | Description | User interface / Selection | Factory setting |
|----------------|---|--|-----------------|
| Operating time | Indicates how long the device has been in operation. | Days (d), hours (h), minutes (m) and seconds (s) | – |
| Last backup | Shows when the last data backup was saved to HistoROM backup. | Days (d), hours (h), minutes (m) and seconds (s) | – |


| Parameter | Description | User interface / Selection | Factory setting |
|--------------------------|--|---|-----------------|
| Configuration management | Select action for managing the device data in the HistoROM backup. | <ul style="list-style-type: none"> ■ Cancel ■ Execute backup ■ Restore ■ Compare ■ Clear backup data | Cancel |
| Backup state | Shows the current status of data saving or restoring. | <ul style="list-style-type: none"> ■ None ■ Backup in progress ■ Restoring in progress ■ Delete in progress ■ Compare in progress ■ Restoring failed ■ Backup failed | None |
| Comparison result | Comparison of current device data with HistoROM backup. | <ul style="list-style-type: none"> ■ Settings identical ■ Settings not identical ■ No backup available ■ Backup settings corrupt ■ Check not done ■ Dataset incompatible | Check not done |

Function scope of the "Configuration management" parameter

| Options | Description |
|-------------------|---|
| Cancel | No action is executed and the user exits the parameter. |
| Execute backup | A backup copy of the current device configuration is saved from the HistoROM backup to the memory of the device. The backup copy includes the transmitter data of the device. |
| Restore | The last backup copy of the device configuration is restored from the device memory to the device's HistoROM backup. The backup copy includes the transmitter data of the device. |
| Compare | The device configuration saved in the device memory is compared with the current device configuration of the HistoROM backup. |
| Clear backup data | The backup copy of the device configuration is deleted from the memory of the device. |

HistoROM backup

A HistoROM is a "non-volatile" device memory in the form of an EEPROM.

-  While this action is in progress, the configuration cannot be edited via the local display and a message on the processing status appears on the display.

10.5.8 Using parameters for device administration

The **Administration** submenu systematically guides the user through all the parameters that can be used for device administration purposes.

Navigation

"Setup" menu → Advanced setup → Administration

| | | |
|-----------------------------|--|-------|
| ▶ Administration | | |
| ▶ Define access code | | → 112 |
| Define access code | | → 112 |
| Confirm access code | | → 112 |
| ▶ Reset access code | | → 113 |
| Operating time | | → 113 |
| Reset access code | | → 113 |
| Device reset | | → 113 |

Using the parameter to define the access code**Navigation**

"Setup" menu → Advanced setup → Administration → Define access code

| | | |
|-----------------------------|--|-------|
| ▶ Define access code | | |
| Define access code | | → 112 |
| Confirm access code | | → 112 |


Parameter overview with brief description

| Parameter | Description | User entry |
|---------------------|---|---|
| Define access code | Restrict write-access to parameters to protect the configuration of the device against unintentional changes. | Max. 16-digit character string comprising numbers, letters and special characters |
| Confirm access code | Confirm the entered access code. | Max. 16-digit character string comprising numbers, letters and special characters |


Using the parameter to reset the access code

Navigation

"Setup" menu → Advanced setup → Administration → Reset access code

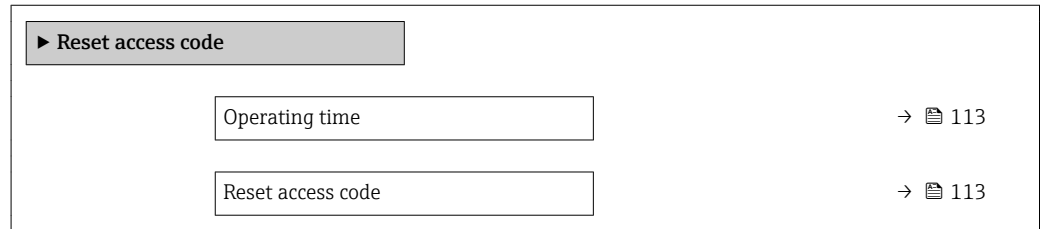

Parameter overview with brief description

| Parameter | Description | User interface / User entry | Factory setting |
|-------------------|--|---|-----------------|
| Operating time | Indicates how long the device has been in operation. | Days (d), hours (h), minutes (m) and seconds (s) | - |
| Reset access code | Reset access code to factory settings.  For a reset code, contact your Endress+Hauser service organization. The reset code can only be entered via: <ul style="list-style-type: none"> ▪ Web browser ▪ DeviceCare, FieldCare (via service interface CDI-RJ45) ▪ Fieldbus | Character string comprising numbers, letters and special characters | 0x00 |

Using the parameter to reset the device

Navigation

"Setup" menu → Advanced setup → Administration

Parameter overview with brief description


| Parameter | Description | Selection | Factory setting |
|--------------|---|--|-----------------|
| Device reset | Reset the device configuration - either entirely or in part - to a defined state. | <ul style="list-style-type: none"> ▪ Cancel ▪ To delivery settings ▪ Restart device ▪ Restore S-DAT backup | Cancel |









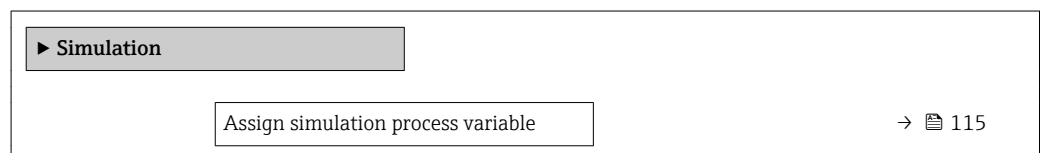











10.6 Simulation

The **Simulation** submenu enables you to simulate, without a real flow situation, various process variables in the process and the device alarm mode and to verify downstream signal chains (switching valves or closed-control loops).



Navigation


"Diagnostics" menu → Simulation



| | |
|------------------------------------|---|
| Process variable value | →  115 |
| Status input simulation | →  115 |
| Input signal level | →  115 |
| Current input 1 to n simulation | →  115 |
| Value current input 1 to n | →  115 |
| Current output 1 to n simulation | →  115 |
| Value current output 1 to n | →  115 |
| Frequency output simulation 1 to n | →  115 |
| Frequency value 1 to n | →  115 |
| Pulse output simulation 1 to n | →  115 |
| Pulse value 1 to n | →  115 |
| Switch output simulation 1 to n | →  115 |
| Switch status 1 to n | →  115 |
| Relay output 1 to n simulation | →  115 |
| Switch status 1 to n | →  115 |
| Pulse output simulation | →  116 |
| Pulse value | →  116 |
| Device alarm simulation | →  116 |
| Diagnostic event category | →  116 |
| Diagnostic event simulation | →  116 |

Parameter overview with brief description




| Parameter | Prerequisite | Description | Selection / User entry / User interface | Factory setting |
|------------------------------------|--|---|--|-----------------|
| Assign simulation process variable | – | Select a process variable for the simulation process that is activated. | <ul style="list-style-type: none"> ▪ Off ▪ Volume flow ▪ Mass flow ▪ Corrected volume flow ▪ Flow velocity ▪ Conductivity* | Off |
| Process variable value | – | Enter the simulation value for the selected process variable. | Depends on the process variable selected | 0 |
| Status input simulation | – | Switch simulation of the status input on and off. | <ul style="list-style-type: none"> ▪ Off ▪ On | Off |
| Input signal level | In the Status input simulation parameter, the On option is selected. | Select the signal level for the simulation of the status input. | <ul style="list-style-type: none"> ▪ High ▪ Low | High |
| Current input 1 to n simulation | – | Switch simulation of the current input on and off. | <ul style="list-style-type: none"> ▪ Off ▪ On | Off |
| Value current input 1 to n | In the Current input 1 to n simulation parameter, the On option is selected. | Enter the current value for simulation. | 0 to 22.5 mA | 0 mA |
| Current output 1 to n simulation | – | Switch the simulation of the current output on and off. | <ul style="list-style-type: none"> ▪ Off ▪ On | Off |
| Value current output 1 to n | In the Current output 1 to n simulation parameter, the On option is selected. | Enter the current value for simulation. | 3.59 to 22.5 mA | 3.59 mA |
| Frequency output simulation 1 to n | In the Operating mode parameter, the Frequency option is selected. | Switch the simulation of the frequency output on and off. | <ul style="list-style-type: none"> ▪ Off ▪ On | Off |
| Frequency value 1 to n | In the Frequency output simulation 1 to n parameter, the On option is selected. | Enter the frequency value for the simulation. | 0.0 to 12 500.0 Hz | 0.0 Hz |
| Pulse output simulation 1 to n | In the Operating mode parameter, the Pulse option is selected. | Set and switch off the pulse output simulation.  For Fixed value option: Pulse width parameter (→  88) defines the pulse width of the pulses output. | <ul style="list-style-type: none"> ▪ Off ▪ Fixed value ▪ Down-counting value | Off |
| Pulse value 1 to n | In the Pulse output simulation 1 to n parameter, the Down-counting value option is selected. | Enter the number of pulses for simulation. | 0 to 65535 | 0 |
| Switch output simulation 1 to n | In the Operating mode parameter, the Switch option is selected. | Switch the simulation of the switch output on and off. | <ul style="list-style-type: none"> ▪ Off ▪ On | Off |
| Switch status 1 to n | – | Select the status of the status output for the simulation. | <ul style="list-style-type: none"> ▪ Open ▪ Closed | Open |
| Relay output 1 to n simulation | – | Switch simulation of the relay output on and off. | <ul style="list-style-type: none"> ▪ Off ▪ On | Off |
| Switch status 1 to n | The On option is selected in the Switch output simulation 1 to n parameter parameter. | Select status of the relay output for the simulation. | <ul style="list-style-type: none"> ▪ Open ▪ Closed | Open |

| Parameter | Prerequisite | Description | Selection / User entry / User interface | Factory setting |
|-----------------------------|---|--|---|-----------------|
| Pulse output simulation | – | Set and switch off the pulse output simulation.  For Fixed value option: Pulse width parameter defines the pulse width of the pulses output. | <ul style="list-style-type: none"> ▪ Off ▪ Fixed value ▪ Down-counting value | Off |
| Pulse value | In the Pulse output simulation parameter, the Down-counting value option is selected. | Set and switch off the pulse output simulation. | 0 to 65 535 | 0 |
| Device alarm simulation | – | Switch the device alarm on and off. | <ul style="list-style-type: none"> ▪ Off ▪ On | Off |
| Diagnostic event category | – | Select a diagnostic event category. | <ul style="list-style-type: none"> ▪ Sensor ▪ Electronics ▪ Configuration ▪ Process | Process |
| Diagnostic event simulation | – | Select a diagnostic event to simulate this event. | <ul style="list-style-type: none"> ▪ Off ▪ Diagnostic event picklist (depends on the category selected) | Off |
| Logging interval | – | Define the logging interval tlog for data logging. This value defines the time interval between the individual data points in the memory. | 1.0 to 3 600.0 s | – |

* Visibility depends on order options or device settings

10.7 Protecting settings from unauthorized access

The following write protection options exist in order to protect the configuration of the measuring device from unintentional modification:




- Protect access to parameters via access code →  116
- Protect access to local operation via key locking →  60
- Protect access to measuring device via write protection switch →  118

10.7.1 Write protection via access code



The effects of the user-specific access code are as follows:

- Via local operation, the parameters for the measuring device configuration are write-protected and their values can no longer be changed.
- Device access is protected via the Web browser, as are the parameters for the measuring device configuration.
- Device access is protected via FieldCare or DeviceCare (via CDI-RJ45 service interface), as are the parameters for the measuring device configuration.

Defining the access code via local display


1. Navigate to the **Define access code** parameter (→  112).
2. Define a max. 16-digit character string comprising numbers, letters and special characters as the access code.
3. Enter the access code again in the **Confirm access code** parameter (→  112) to confirm the code.
 - ↳ The -symbol appears in front of all write-protected parameters.

The device automatically locks the write-protected parameters again if a key is not pressed for 10 minutes in the navigation and editing view. The device locks the write-protected parameters automatically after 60 s if the user skips back to the operational display mode from the navigation and editing view.



- i
 - If parameter write protection is activated via an access code, it can also only be deactivated via this access code →  59.
 - The user role with which the user is currently logged on via the local display is indicated by the →  59 **Access status** parameter. Navigation path: Operation → Access status

Parameters which can always be modified via the local display

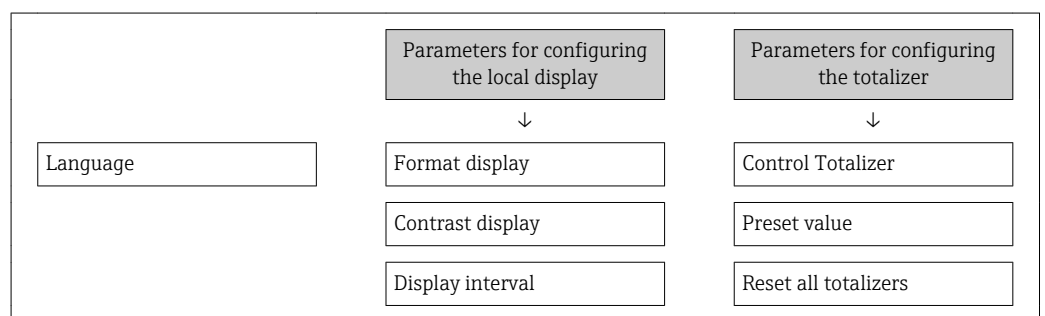
Certain parameters that do not affect the measurement are excepted from parameter write protection via the local display. Despite the user-specific access code, they can always be modified, even if the other parameters are locked.



Defining the access code via the Web browser

1. Navigate to the **Define access code** parameter (→  112).
2. Define a max. 16-digit numeric code as an access code.
3. Enter the access code again in the **Confirm access code** parameter (→  112) to confirm the code.
 - ↳ The Web browser switches to the login page.

i If no action is performed for 10 minutes, the Web browser automatically returns to the login page.



- i
 - If parameter write protection is activated via an access code, it can also only be deactivated via this access code →  59.
 - The user role with which the user is currently logged on via Web browser is indicated by the **Access status** parameter. Navigation path: Operation → Access status

Resetting the access code

If you misplace the user-specific access code, it is possible to reset the code to the factory setting. A reset code must be entered for this purpose. The user-specific access code can then be defined again afterwards.

Via Web browser, FieldCare, DeviceCare (via CDI-RJ45 service interface), fieldbus

i For a reset code, contact your Endress+Hauser service organization.


1. Navigate to the **Reset access code** parameter (→  113).
2. Enter the reset code.
 - ↳ The access code has been reset to the factory setting **0000**. It can be redefined →  116.

10.7.2 Write protection via write protection switch


Unlike parameter write protection via a user-specific access code, this allows write access to the entire operating menu - except for the **"Contrast display" parameter** - to be locked.


The parameter values are now read only and cannot be edited any more (exception **"Contrast display" parameter**):

- Via local display
- Via HART protocol

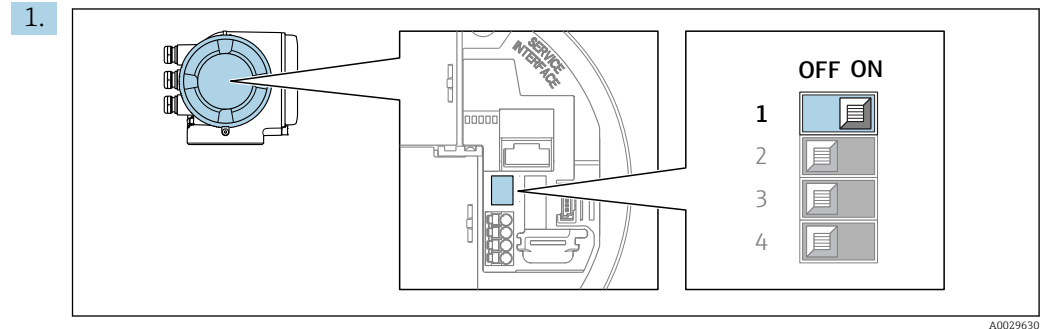


 Setting the write protection (WP) switch on the main electronics module to the **ON** position enables hardware write protection.

- ↳ In the **Locking status** parameter the **Hardware locked** option is displayed → 119. In addition, on the local display the -symbol appears in front of the parameters in the header of the operational display and in the navigation view.

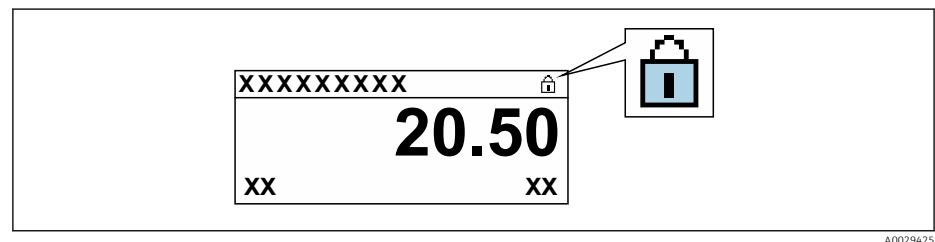

 2. Setting the write protection (WP) switch on the main electronics module to the **OFF** position (factory setting) disables hardware write protection.

- ↳ No option is displayed in the **Locking status** parameter → 119. On the local display, the -symbol disappears from in front of the parameters in the header of the operational display and in the navigation view.

11 Operation

11.1 Reading the device locking status


Device active write protection: **Locking status** parameter

Operation → Locking status

Function scope of the "Locking status" parameter

| Options | Description |
|--------------------|---|
| None | The access status displayed in the Access status parameter applies → 59. Only appears on local display. |
| Hardware locked | The DIP switch for hardware locking is activated on the PCB board. This locks write access to the parameters (e.g. via local display or operating tool) . |
| SIL locked | The SIL mode is enabled. This locks write access to the parameters (e.g. via local display or operating tool). |
| Temporarily locked | Write access to the parameters is temporarily locked on account of internal processes running in the device (e.g. data upload/download, reset etc.). Once the internal processing has been completed, the parameters can be changed once again. |

11.2 Adjusting the operating language

 Detailed information:

- To configure the operating language → 78
- For information on the operating languages supported by the measuring device → 175

11.3 Configuring the display

Detailed information:

- On the basic settings for the local display → 93
- On the advanced settings for the local display → 105

11.4 Reading measured values

With the **Measured values** submenu, it is possible to read all the measured values.

 





11.4.1 "Process variables" submenu

The **Process variables** submenu contains all the parameters needed to display the current measured values for each process variable.






Navigation

"Diagnostics" menu → Measured values → Process variables

| | |
|---------------------|-------|
| ▶ Process variables | |
| Volume flow | → 120 |
| Mass flow | → 120 |

| | |
|------------------------|---|
| Corrected volume flow | →  120 |
| Flow velocity | →  120 |
| Conductivity | →  120 |
| Corrected conductivity | →  120 |
| Temperature | →  121 |
| Density | →  121 |

Parameter overview with brief description

| Parameter | Prerequisite | Description | User interface |
|------------------------|---|---|--------------------------------|
| Volume flow | - | Displays the volume flow currently measured. <i>Dependency</i> The unit is taken from the Volume flow unit parameter (→  81). | Signed floating-point number |
| Mass flow | - | Displays the mass flow currently calculated. <i>Dependency</i> The unit is taken from the Mass flow unit parameter (→  81). | Signed floating-point number |
| Corrected volume flow | - | Displays the corrected volume flow currently calculated. <i>Dependency</i> The unit is taken from the Corrected volume flow unit parameter (→  81). | Signed floating-point number |
| Flow velocity | - | Displays the flow velocity currently calculated. | Signed floating-point number |
| Conductivity | - | Displays the conductivity currently measured. <i>Dependency</i> The unit is taken from the Conductivity unit parameter (→  81). | Signed floating-point number |
| Corrected conductivity | One of the following conditions is met: <ul style="list-style-type: none"> ▪ Order code for "Sensor option", option CI "Medium temperature measurement" or ▪ The temperature is read into the flowmeter from an external device. | Displays the conductivity currently corrected. <i>Dependency</i> The unit is taken from the Conductivity unit parameter (→  81). | Positive floating-point number |

| Parameter | Prerequisite | Description | User interface |
|-------------|---|--|--------------------------------|
| Temperature | One of the following conditions is met: <ul style="list-style-type: none"> Order code for "Sensor option", option CI "Medium temperature measurement" or The temperature is read into the flowmeter from an external device. | Displays the temperature currently calculated. <i>Dependency</i> The unit is taken from the Temperature unit parameter (→ 81). | Positive floating-point number |
| Density | – | Displays the current fixed density or density read in from an external device. <i>Dependency</i> The unit is taken from the Density unit parameter. | Signed floating-point number |

11.4.2 "Totalizer" submenu

The **Totalizer** submenu contains all the parameters needed to display the current measured values for every totalizer.

Navigation

"Diagnostics" menu → Measured values → Totalizer

| | |
|---------------------------|-------|
| ▶ Totalizer | |
| Totalizer value 1 to n | → 121 |
| Totalizer overflow 1 to n | → 121 |

Parameter overview with brief description

| Parameter | Prerequisite | Description | User interface |
|---------------------------|--|---|------------------------------|
| Totalizer value 1 to n | A process variable is selected in the Assign process variable parameter (→ 104) of the Totalizer 1 to n submenu. | Displays the current totalizer counter value. | Signed floating-point number |
| Totalizer overflow 1 to n | A process variable is selected in the Assign process variable parameter (→ 104) of the Totalizer 1 to n submenu. | Displays the current totalizer overflow. | Integer with sign |

11.4.3 "Input values" submenu

The **Input values** submenu guides you systematically to the individual input values.

Navigation

"Diagnostics" menu → Measured values → Input values


| | |
|-------------------------------|-------|
| ▶ Input values | |
| ▶ Current input 1 to n | → 122 |
| ▶ Status input 1 to n | → 122 |

Input values of current input

The **Current input 1 to n** submenu contains all the parameters needed to display the current measured values for every current input.

Navigation

"Diagnostics" menu → Measured values → Input values → Current input 1 to n

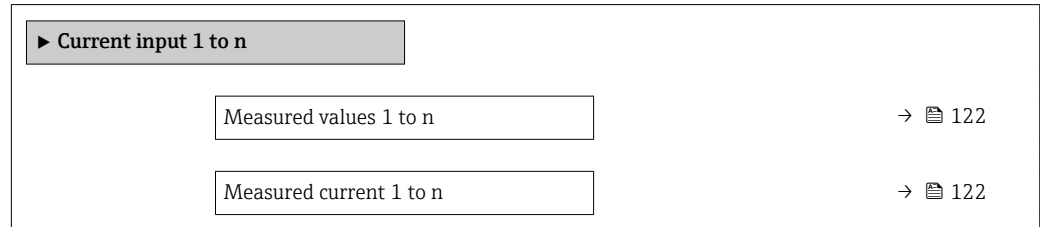

Parameter overview with brief description


| Parameter | Description | User interface |
|-------------------------|--|------------------------------|
| Measured values 1 to n | Displays the current input value. | Signed floating-point number |
| Measured current 1 to n | Displays the current value of the current input. | 0 to 22.5 mA |

Input values of status input

The **Status input 1 to n** submenu contains all the parameters needed to display the current measured values for every status input.

Navigation

"Diagnostics" menu → Measured values → Input values → Status input 1 to n

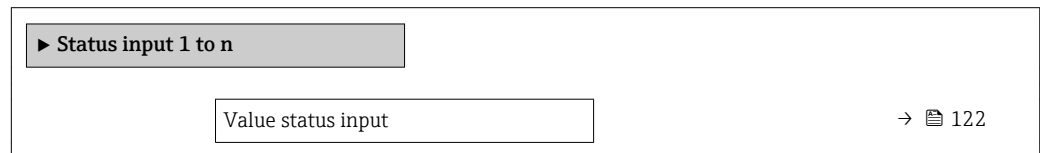

Parameter overview with brief description


| Parameter | Description | User interface |
|--------------------|---------------------------------------|---|
| Value status input | Shows the current input signal level. | <ul style="list-style-type: none"> ▪ High ▪ Low |

11.4.4 Output values

The **Output values** submenu contains all the parameters needed to display the current measured values for every output.

Navigation

"Diagnostics" menu → Measured values → Output values

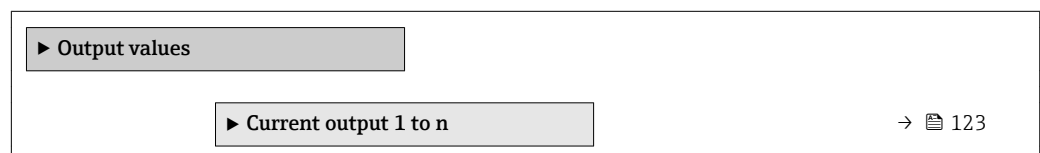

| | |
|--|-------|
| ▶ Pulse/frequency/switch output 1 to n | → 123 |
| ▶ Relay output 1 to n | → 124 |
| ▶ Double pulse output | → 124 |

Output values of current output

The **Value current output** submenu contains all the parameters needed to display the current measured values for every current output.

Navigation

"Diagnostics" menu → Measured values → Output values → Value current output 1 to n

| | |
|-------------------------|-------|
| ▶ Current output 1 to n | |
| Output current 1 to n | → 123 |
| Measured current 1 to n | → 123 |

Parameter overview with brief description

| Parameter | Description | User interface |
|------------------|---|-----------------|
| Output current 1 | Displays the current value currently calculated for the current output. | 3.59 to 22.5 mA |
| Measured current | Displays the current value currently measured for the current output. | 0 to 30 mA |

Output values for pulse/frequency/switch output

The **Pulse/frequency/switch output 1 to n** submenu contains all the parameters needed to display the current measured values for every pulse/frequency/switch output.

Navigation

"Diagnostics" menu → Measured values → Output values → Pulse/frequency/switch output 1 to n

| | |
|--|-------|
| ▶ Pulse/frequency/switch output 1 to n | |
| Output frequency 1 to n | → 124 |
| Pulse output 1 to n | → 124 |
| Switch status 1 to n | → 124 |

Parameter overview with brief description


| Parameter | Prerequisite | Description | User interface |
|-------------------------|--|---|--|
| Output frequency 1 to n | In the Operating mode parameter, the Frequency option is selected. | Displays the value currently measured for the frequency output. | 0.0 to 12 500.0 Hz |
| Pulse output 1 to n | In the Operating mode parameter, the Pulse option is selected. | Displays the pulse frequency currently output. | Positive floating-point number |
| Switch status 1 to n | The Switch option is selected in the Operating mode parameter. | Displays the current switch output status. | <ul style="list-style-type: none"> ▪ Open ▪ Closed |

Output values for relay output

The **Relay output 1 to n** submenu contains all the parameters needed to display the current measured values for every relay output.

Navigation

"Diagnostics" menu → Measured values → Output values → Relay output 1 to n

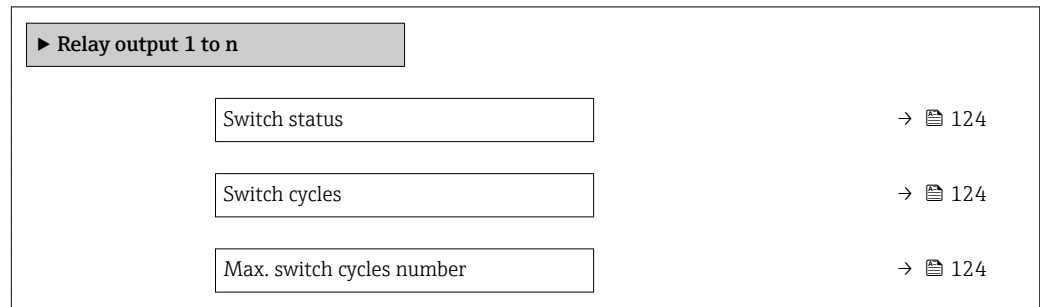

Parameter overview with brief description


| Parameter | Description | User interface |
|---------------------------|---|--|
| Switch status | Shows the current relay switch status. | <ul style="list-style-type: none"> ▪ Open ▪ Closed |
| Switch cycles | Shows number of all performed switch cycles. | Positive integer |
| Max. switch cycles number | Shows the maximal number of guaranteed switch cycles. | Positive integer |

Output values for double pulse output

The **Double pulse output** submenu contains all the parameters needed to display the current measured values for every double pulse output.

Navigation

"Diagnostics" menu → Measured values → Output values → Double pulse output

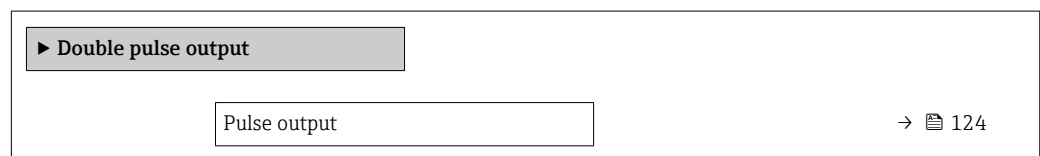



Parameter overview with brief description

| Parameter | Description | User interface |
|--------------|---|--------------------------------|
| Pulse output | Shows the currently output pulse frequency. | Positive floating-point number |

11.5 Adapting the measuring device to the process conditions

The following are available for this purpose:

- Basic settings using the **Setup** menu (→  78)
- Advanced settings using the **Advanced setup** submenu (→  102)




11.6 Performing a totalizer reset

The totalizers are reset in the **Operation** submenu:





- Control Totalizer
- Reset all totalizers

Navigation

"Operation" menu → Totalizer handling

| | |
|---|---|
| <div style="background-color: #cccccc; padding: 2px; border: 1px solid black;">▶ Totalizer handling</div> | |
| Control Totalizer 1 to n | →  125 |
| Preset value 1 to n | →  125 |
| Reset all totalizers | →  125 |

  Parameter overview with brief description

| Parameter | Prerequisite | Description | Selection / User entry | Factory setting |
|--------------------------|---|---|--|-----------------|
| Control Totalizer 1 to n | One of the following options is selected in the Assign process variable parameter (→  104) of the Totalizer 1 to n submenu: Volume flow | Control totalizer value. | <ul style="list-style-type: none"> ▪ Totalize ▪ Reset + hold ▪ Preset + hold ▪ Reset + totalize ▪ Preset + totalize ▪ Hold | Totalize |
| Preset value 1 to n | One of the following options is selected in the Assign process variable parameter (→  104) of the Totalizer 1 to n submenu: Volume flow | Specify start value for totalizer. <i>Dependency</i>  The unit of the selected process variable is specified for the totalizer in the Unit totalizer parameter (→  104). | Signed floating-point number | 01 |
| Reset all totalizers | – | Reset all totalizers to 0 and start. | <ul style="list-style-type: none"> ▪ Cancel ▪ Reset + totalize | Cancel |

11.6.1 Function scope of the "Control Totalizer" parameter

| Options | Description |
|------------------|---|
| Totalize | The totalizer is started or continues running. |
| Reset + hold | The totaling process is stopped and the totalizer is reset to 0. |
| Preset + hold | The totaling process is stopped and the totalizer is set to its defined start value from the Preset value parameter. |
| Reset + totalize | The totalizer is reset to 0 and the totaling process is restarted. |


 
| Options | Description |
|-------------------|---|
| Preset + totalize | The totalizer is set to the defined start value from the Preset value parameter and the totaling process is restarted. |
| Hold | Totalizing is stopped. |

11.6.2 Function scope of the "Reset all totalizers" parameter

| Options | Description |
|------------------|--|
| Cancel | No action is executed and the user exits the parameter. |
| Reset + totalize | Resets all totalizers to 0 and restarts the totaling process. This deletes all the flow values previously totalized. |


11.7 Showing data logging

The **Extended HistoROM** application package must be enabled in the device (order option) for the **Data logging** submenu to appear. This contains all the parameters for the measured value history.

-  Data logging is also available via:
 - Plant Asset Management Tool FieldCare →  70.
 - Web browser


Function range

- A total of 1000 measured values can be stored
- 4 logging channels
- Adjustable logging interval for data logging
- Display of the measured value trend for each logging channel in the form of a chart

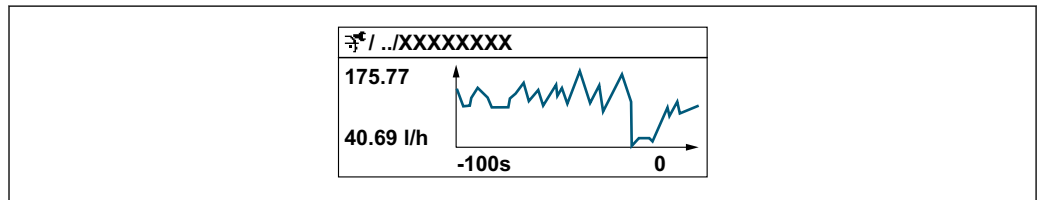

A0034352

- x-axis: depending on the number of channels selected displays 250 to 1000 measured values of a process variable.
- y-axis: displays the approximate measured value span and constantly adapts this to the ongoing measurement.


-  If the length of the logging interval or the assignment of the process variables to the channels is changed, the content of the data logging is deleted.

Navigation

 
"Diagnostics" menu → Data logging

▶ Data logging


Assign channel 1









→  127

 Assign channel 2

 


→  127





Assign channel 3

→  128

| | |
|-------------------------|---|
| Assign channel 4 | →  128 |
| Logging interval | →  128 |
| Clear logging data | →  128 |
| Data logging | →  128 |
| Logging delay | →  128 |
| Data logging control | →  128 |
| Data logging status | →  128 |
| Entire logging duration | →  128 |
| ▶ Display channel 1 | |
| ▶ Display channel 2 | |
| ▶ Display channel 3 | |
| ▶ Display channel 4 | |

Parameter overview with brief description

| Parameter | Prerequisite | Description | Selection / User entry / User interface | Factory setting |
|------------------|---|---|---|-----------------|
| Assign channel 1 | <p>The Extended HistorOM application package is available.</p> <p> The software options currently enabled are displayed in the Software option overview parameter.</p> | Assign a process variable to logging channel. | <ul style="list-style-type: none"> ■ Off ■ Volume flow ■ Mass flow ■ Corrected volume flow ■ Flow velocity ■ Conductivity* ■ Corrected conductivity* ■ Temperature* ■ Electronic temperature ■ Current output 1 ■ Current output 2* ■ Current output 3* | Off |
| Assign channel 2 | <p>The Extended HistorOM application package is available.</p> <p> The software options currently enabled are displayed in the Software option overview parameter.</p> | Assign process variable to logging channel. | Picklist, see Assign channel 1 parameter (→  127) | Off |

| Parameter | Prerequisite | Description | Selection / User entry / User interface | Factory setting |
|-------------------------|--|--|---|-----------------|
| Assign channel 3 | The Extended HistorOM application package is available.  The software options currently enabled are displayed in the Software option overview parameter. | Assign process variable to logging channel. | Picklist, see Assign channel 1 parameter (→  127) | Off |
| Assign channel 4 | The Extended HistorOM application package is available.  The software options currently enabled are displayed in the Software option overview parameter. | Assign process variable to logging channel. | Picklist, see Assign channel 1 parameter (→  127) | Off |
| Logging interval | The Extended HistorOM application package is available. | Define the logging interval for data logging. This value defines the time interval between the individual data points in the memory. | 0.1 to 3 600.0 s | 1.0 s |
| Clear logging data | The Extended HistorOM application package is available. | Clear the entire logging data. | <ul style="list-style-type: none"> ▪ Cancel ▪ Clear data | Cancel |
| Data logging | – | Select the data logging method. | <ul style="list-style-type: none"> ▪ Overwriting ▪ Not overwriting | Overwriting |
| Logging delay | In the Data logging parameter, the Not overwriting option is selected. | Enter the time delay for measured value logging. | 0 to 999 h | 0 h |
| Data logging control | In the Data logging parameter, the Not overwriting option is selected. | Start and stop measured value logging. | <ul style="list-style-type: none"> ▪ None ▪ Delete + start ▪ Stop | None |
| Data logging status | In the Data logging parameter, the Not overwriting option is selected. | Displays the measured value logging status. | <ul style="list-style-type: none"> ▪ Done ▪ Delay active ▪ Active ▪ Stopped | Done |
| Entire logging duration | In the Data logging parameter, the Not overwriting option is selected. | Displays the total logging duration. | Positive floating-point number | 0 s |

* Visibility depends on order options or device settings

12 Diagnostics and troubleshooting

12.1 General troubleshooting

For local display









| Error | Possible causes | Solution |
|---|---|---|
| Local display dark and no output signals | Supply voltage does not match the value indicated on the nameplate. | Apply the correct supply voltage → 36. |
| Local display dark and no output signals | The polarity of the supply voltage is wrong. | Correct the polarity. |
| Local display dark and no output signals | No contact between connecting cables and terminals. | Check the connection of the cables and correct if necessary. |
| Local display dark and no output signals | Terminals are not plugged into the I/O electronics module correctly. Terminals are not plugged into the main electronics module correctly. | Check terminals. |
| Local display dark and no output signals | I/O electronics module is defective. Main electronics module is defective. | Order spare part → 152. |
| Local display is dark, but signal output is within the valid range | Display is set too bright or too dark. | <ul style="list-style-type: none"> ▪ Set the display brighter by simultaneously pressing $\square + \square$. ▪ Set the display darker by simultaneously pressing $\square + \square$. |
| Local display is dark, but signal output is within the valid range | The cable of the display module is not plugged in correctly. | Insert the plug correctly into the main electronics module and display module. |
| Local display is dark, but signal output is within the valid range | Display module is defective. | Order spare part → 152. |
| Backlighting of local display is red | Diagnostic event with "Alarm" diagnostic behavior has occurred. | Take remedial measures |
| Text on local display appears in a foreign language and cannot be understood. | Incorrect operating language is configured. | <ol style="list-style-type: none"> 1. Press $\square + \square$ for 2 s ("home position"). 2. Press \square. 3. Set the desired language in the Display language parameter (→ 107). |
| Message on local display: "Communication Error" "Check Electronics" | Communication between the display module and the electronics is interrupted. | <ul style="list-style-type: none"> ▪ Check the cable and the connector between the main electronics module and display module. ▪ Order spare part → 152. |

For output signals

| Error | Possible causes | Solution |
|--|---|-------------------------|
| Signal output outside the valid range | Main electronics module is defective. | Order spare part → 152. |
| Signal output outside the valid current range ($< 3.6 \text{ mA}$ or $> 22 \text{ mA}$) | Main electronics module is defective. I/O electronics module is defective. | Order spare part → 152. |

| Error | Possible causes | Solution |
|---|--|---|
| Device shows correct value on local display, but signal output is incorrect, though in the valid range. | Configuration error | Check and correct the parameter configuration. |
| Device measures incorrectly. | Configuration error or device is operated outside the application. | 1. Check and correct parameter configuration. 2. Observe limit values specified in the "Technical Data". |

For access


| Error | Possible causes | Solution |
|---|---|--|
| No write access to parameters | Hardware write protection enabled | Set the write protection switch on main electronics module to the OFF position →  118. |
| No write access to parameters | Current user role has limited access authorization | 1. Check user role →  59. 2. Enter correct customer-specific access code →  59. |
| No connection via HART protocol | Communication resistor missing or incorrectly installed. | Install the communication resistor (250 Ω) correctly. Observe the maximum load →  160. |
| No connection via HART protocol | Commubox <ul style="list-style-type: none"> ▪ Connected incorrectly ▪ Configured incorrectly ▪ Drivers not installed correctly ▪ USB interface on computer configured incorrectly | Observe the documentation for the Commubox.  FXA195 HART: Document "Technical Information" TI00404F |
| Not connecting to Web server | Web server disabled | Using the "FieldCare" or "DeviceCare" operating tool, check whether the Web server of the measuring device is enabled, and enable it if necessary →  66. |
| | Incorrect setting for the Ethernet interface of the computer | 1. Check the properties of the Internet protocol (TCP/IP) →  62. 2. Check the network settings with the IT manager. |
| Not connecting to Web server | Incorrect IP address | Check the IP address: 192.168.1.212 →  62 |
| Not connecting to Web server | Incorrect WLAN access data | <ul style="list-style-type: none"> ▪ Check WLAN network status. ▪ Log on to the device again using WLAN access data. ▪ Verify that WLAN is enabled on the measuring device and operating device . |
| | WLAN communication disabled | – |
| Not connecting to Web server, FieldCare or DeviceCare | No WLAN network available | <ul style="list-style-type: none"> ▪ Check if WLAN reception is present: LED on display module is lit blue ▪ Check if WLAN connection is enabled: LED on display module flashes blue ▪ Switch on instrument function. |
| Network connection not present or unstable | WLAN network is weak. | <ul style="list-style-type: none"> ▪ Operating device is outside of reception range: Check network status on operating device. ▪ To improve network performance, use an external WLAN antenna. |

| Error | Possible causes | Solution |
|--|--|--|
| | Parallel WLAN and Ethernet communication | <ul style="list-style-type: none"> ▪ Check network settings. ▪ Temporarily enable only the WLAN as an interface. |
| Web browser frozen and operation no longer possible | Data transfer active | Wait until data transfer or current action is finished. |
| | Connection lost | <ol style="list-style-type: none"> 1. Check cable connection and power supply. 2. Refresh the Web browser and restart if necessary. |
| Content of Web browser incomplete or difficult to read | Not using optimum version of Web server. | <ol style="list-style-type: none"> 1. Use the correct Web browser version . 2. Clear the Web browser cache and restart the Web browser. |
| | Unsuitable view settings. | Change the font size/display ratio of the Web browser. |
| No or incomplete display of contents in the Web browser | <ul style="list-style-type: none"> ▪ JavaScript not enabled ▪ JavaScript cannot be enabled | <ol style="list-style-type: none"> 1. Enable JavaScript. 2. Enter http://XXX.XXX.X.XXX/basic.html as the IP address. |
| Operation with FieldCare or DeviceCare via CDI-RJ45 service interface (port 8000) | Firewall of computer or network is preventing communication | Depending on the settings of the firewall used on the computer or in the network, the firewall must be adapted or disabled to allow FieldCare/DeviceCare access. |
| Flashing of firmware with FieldCare or DeviceCare via CDI-RJ45 service interface (via port 8000 or TFTP ports) | Firewall of computer or network is preventing communication | Depending on the settings of the firewall used on the computer or in the network, the firewall must be adapted or disabled to allow FieldCare/DeviceCare access. |

12.2 Diagnostic information via light emitting diodes

12.2.1 Transmitter

Different LEDs in the transmitter provide information on the device status.

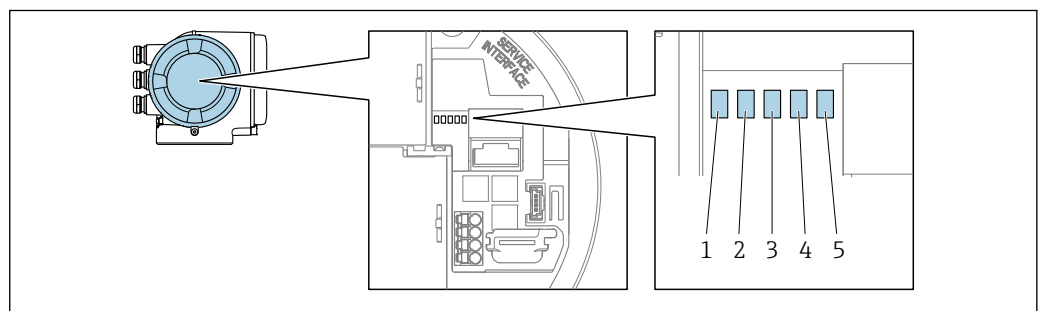

A0029629

- 1 Supply voltage
- 2 Device status
- 3 Not used
- 4 Communication
- 5 Service interface (CDI) active


| LED | Color | Meaning |
|------------------|-------|-----------------------------------|
| 1 Supply voltage | Off | Supply voltage is off or too low. |
| | Green | Supply voltage is ok. |
| 2 Device status | Off | Firmware error |

| LED | Color | Meaning |
|---------------------------|--------------------|---|
| | Green | Device status is ok. |
| | Flashing green | Device is not configured. |
| | Flashing red | A diagnostic event with "Warning" diagnostic behavior has occurred. |
| | Red | A diagnostic event with "Alarm" diagnostic behavior has occurred. |
| | Flashing red/green | The device restarts. |
| 3 Not used | – | – |
| 4 Communication | White | Communication active. |
| | Off | Communication not active. |
| 5 Service interface (CDI) | Off | Not connected or no connection established. |
| | Yellow | Connected and connection established. |
| | Flashing yellow | Service interface active. |

12.3 Diagnostic information on local display

12.3.1 Diagnostic message

Faults detected by the self-monitoring system of the measuring device are displayed as a diagnostic message in alternation with the operational display.

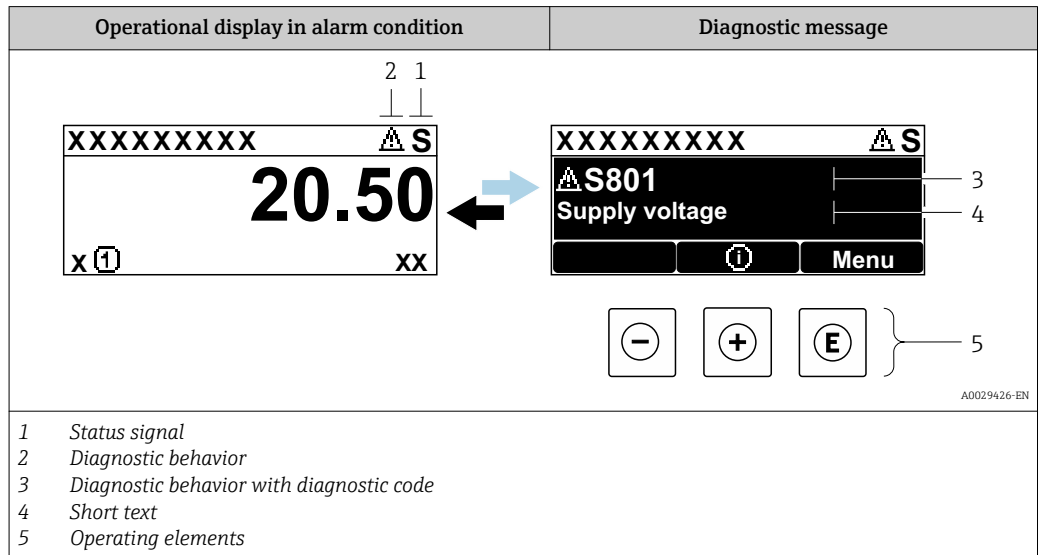

If two or more diagnostic events are pending simultaneously, only the message of the diagnostic event with the highest priority is shown.

- i** Other diagnostic events that have occurred can be displayed in the **Diagnostics** menu:
 - Via parameter
 - Via submenus → 144



Status signals

The status signals provide information on the state and reliability of the device by categorizing the cause of the diagnostic information (diagnostic event).

- i** The status signals are categorized according to VDI/VDE 2650 and NAMUR Recommendation NE 107: F = Failure, C = Function Check, S = Out of Specification, M = Maintenance Required


| Symbol | Meaning |
|----------|---|
| F | Failure A device error has occurred. The measured value is no longer valid. |
| C | Function check The device is in service mode (e.g. during a simulation). |
| S | Out of specification The device is operated: <ul style="list-style-type: none"> ▪ Outside its technical specification limits (e.g. outside the process temperature range) ▪ Outside of the configuration carried out by the user (e.g. maximum flow in parameter 20 mA value) |
| M | Maintenance required Maintenance is required. The measured value remains valid. |

Diagnostic behavior



| Symbol | Meaning |
|---|---|
|  | Alarm <ul style="list-style-type: none"> ▪ Measurement is interrupted. ▪ Signal outputs and totalizers assume the defined alarm condition. ▪ A diagnostic message is generated. |
|  | Warning Measurement is resumed. The signal outputs and totalizers are not affected. A diagnostic message is generated. |

Diagnostic information

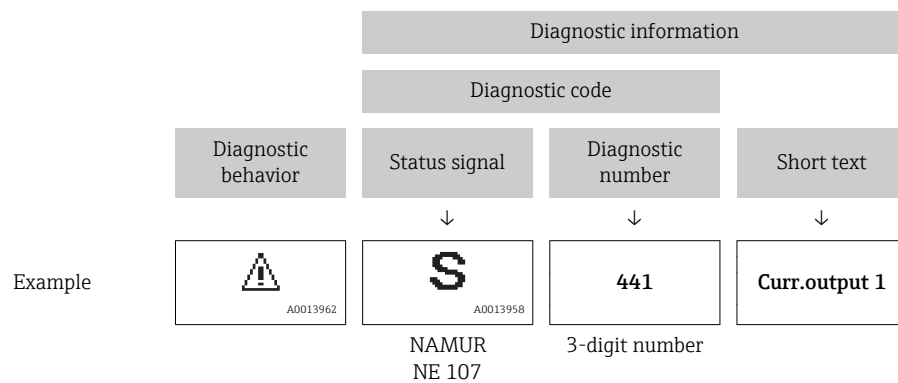
The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault. In addition, the corresponding symbol for the diagnostic behavior is displayed in front of the diagnostic information on the local display.



Operating elements

| Key | Meaning |
|---|---|
|  | Plus key <i>In a menu, submenu</i> Opens the message about remedy information. |
|  | Enter key <i>In a menu, submenu</i> Opens the operating menu. |

12.3.2 Calling up remedial measures

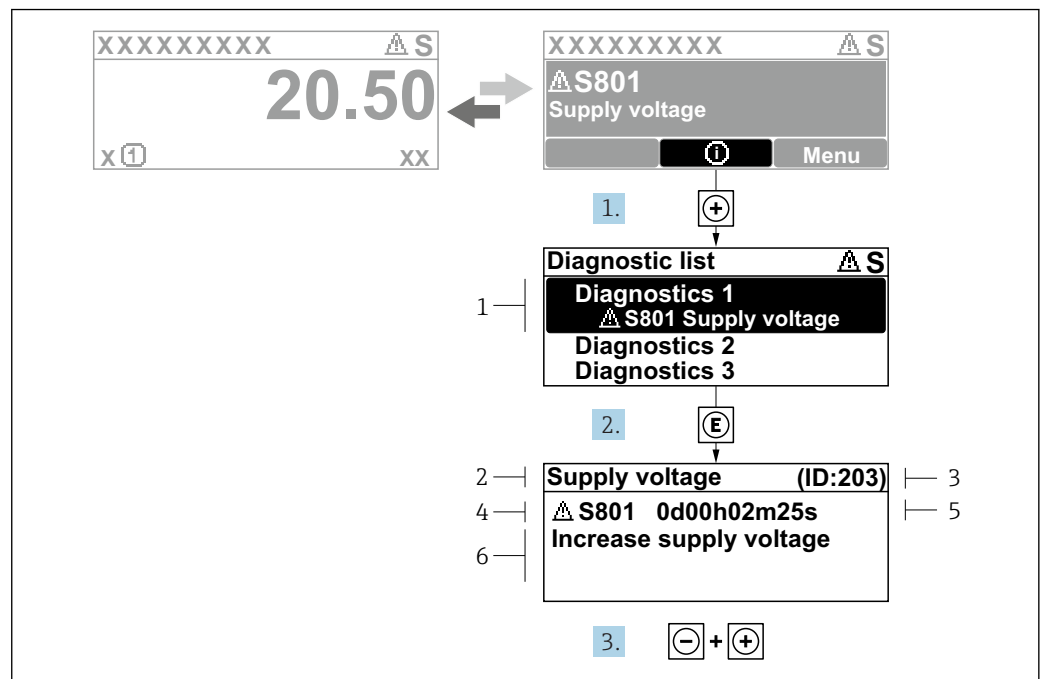

34 Message about remedial measures

- 1 Diagnostic information
- 2 Short text
- 3 Service ID
- 4 Diagnostic behavior with diagnostic code
- 5 Operation time of occurrence
- 6 Remedial measures

1. The user is in the diagnostic message.
Press \oplus ($\textcircled{1}$ symbol).
↳ The **Diagnostic list** submenu opens.
2. Select the desired diagnostic event with \oplus or \ominus and press E .
↳ The message about the remedial measures opens.
3. Press $\ominus + \oplus$ simultaneously.
↳ The message about the remedial measures closes.


The user is in the **Diagnostics** menu at an entry for a diagnostics event, e.g. in the **Diagnostic list** submenu or **Previous diagnostics** parameter.

1. Press E .
↳ The message for the remedial measures for the selected diagnostic event opens.
2. Press $\ominus + \oplus$ simultaneously.
↳ The message for the remedial measures closes.

12.4 Diagnostic information in the Web browser

12.4.1 Diagnostic options

Any faults detected by the measuring device are displayed in the Web browser on the home page once the user has logged on.

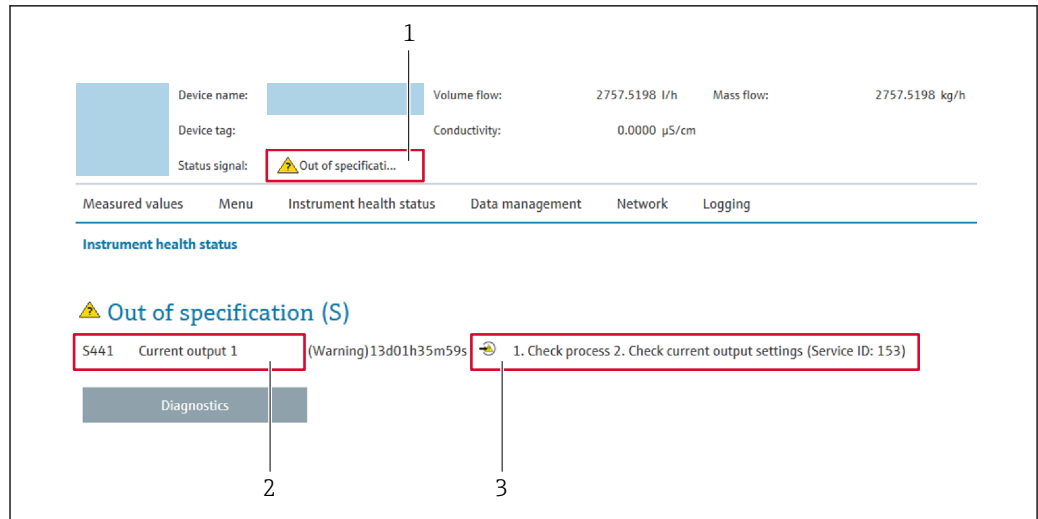

A0031056

- 1 Status area with status signal
- 2 Diagnostic information → 134
- 3 Remedy information with Service ID

i In addition, diagnostic events which have occurred can be shown in the **Diagnostics** menu:

- Via parameter
- Via submenu → 144

Status signals

The status signals provide information on the state and reliability of the device by categorizing the cause of the diagnostic information (diagnostic event).

| Symbol | Meaning |
|--------|--|
| | Failure A device error has occurred. The measured value is no longer valid. |
| | Function check The device is in service mode (e.g. during a simulation). |
| | Out of specification The device is operated: <ul style="list-style-type: none"> ▪ Outside its technical specification limits (e.g. outside the process temperature range) ▪ Outside of the configuration carried out by the user (e.g. maximum flow in parameter 20 mA value) |
| | Maintenance required Maintenance is required. The measured value is still valid. |

i The status signals are categorized in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107.


12.4.2 Calling up remedy information

Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly. These measures are displayed in red along with the diagnostic event and the related diagnostic information.

12.5 Diagnostic information in DeviceCare or FieldCare

12.5.1 Diagnostic options

Any faults detected by the measuring device are displayed on the home page of the operating tool once the connection has been established.

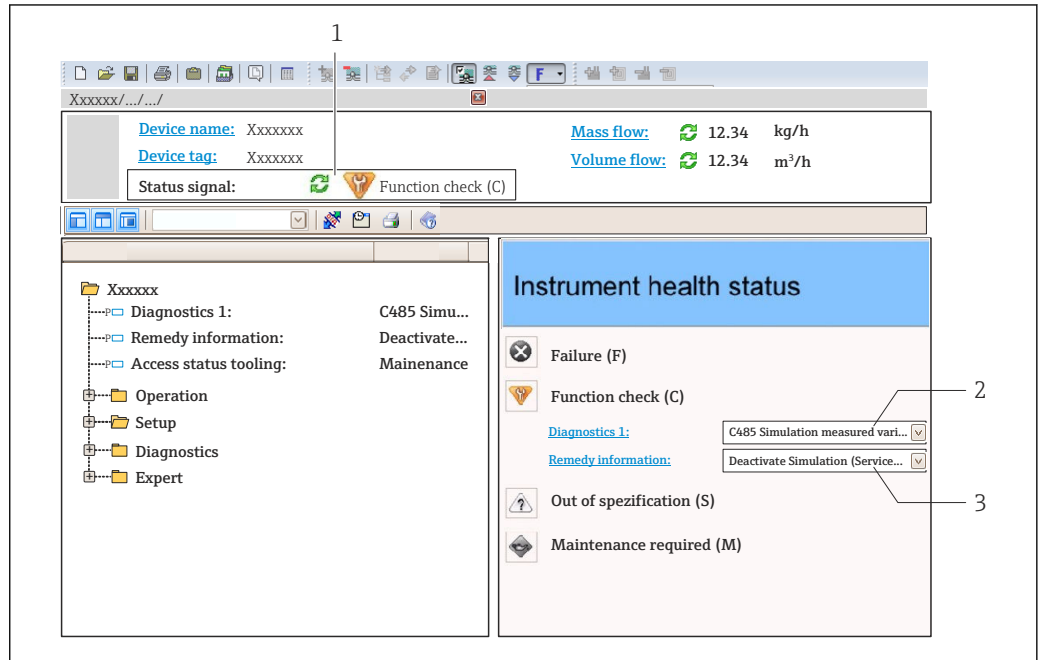


- 1 Status area with status signal → 133
- 2 Diagnostic information → 134
- 3 Remedy information with Service ID

i In addition, diagnostic events which have occurred can be shown in the **Diagnostics** menu:

- Via parameter
- Via submenu → 144

Diagnostic information

The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault. In addition, the corresponding symbol for the diagnostic behavior is displayed in front of the diagnostic information on the local display.

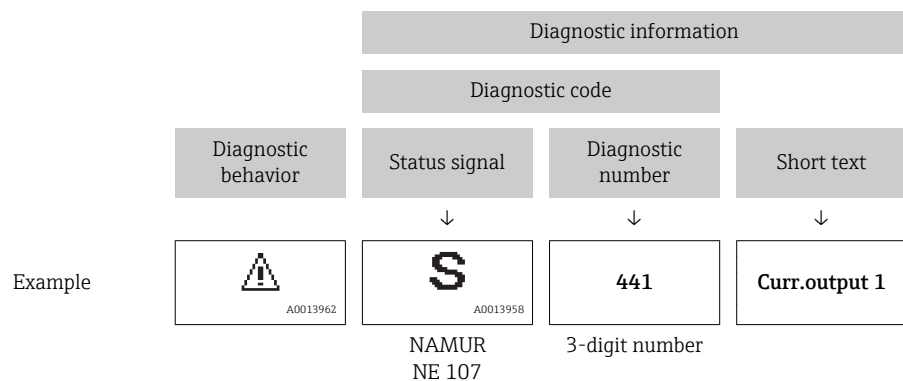

12.5.2 Calling up remedy information

Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly:

- On the home page
Remedy information is displayed in a separate field below the diagnostics information.
- In the **Diagnostics** menu
Remedy information can be called up in the working area of the user interface.

The user is in the **Diagnostics** menu.


1. Call up the desired parameter.
2. On the right in the working area, mouse over the parameter.
 - ↳ A tool tip with remedy information for the diagnostic event appears.

12.6 Adapting the diagnostic information

12.6.1 Adapting the diagnostic behavior

Each item of diagnostic information is assigned a specific diagnostic behavior at the factory. The user can change this assignment for specific diagnostic information in the **Diagnostic behavior** submenu.

Expert → System → Diagnostic handling → Diagnostic behavior

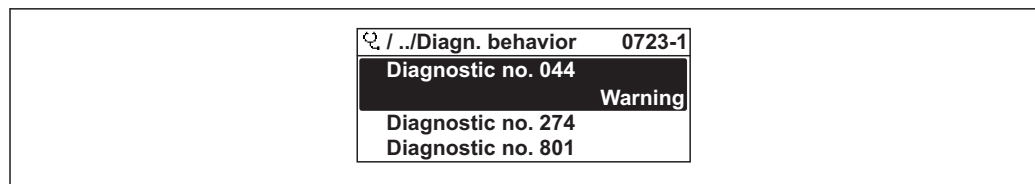

A0014048-EN

35 Taking the example of the local display

You can assign the following options to the diagnostic number as the diagnostic behavior:

| Options | Description |
|--------------------|--|
| Alarm | The device stops measurement. The signal outputs and totalizers assume the defined alarm condition. A diagnostic message is generated. The background lighting changes to red. |
| Warning | The device continues to measure. The signal outputs and totalizers are not affected. A diagnostic message is generated. |
| Logbook entry only | The device continues to measure. The diagnostic message is displayed only in the Event logbook submenu (Event list submenu) and is not displayed in alternation with the operational display. |
| Off | The diagnostic event is ignored, and no diagnostic message is generated or entered. |

12.6.2 Adapting the status signal

Each item of diagnostic information is assigned a specific status signal at the factory. The user can change this assignment for specific diagnostic information in the **Diagnostic event category** submenu.


Expert → Communication → Diagnostic event category



Available status signals

Configuration as per HART 7 Specification (Condensed Status), in accordance with NAMUR NE107.

| Symbol | Meaning |
|-------------------------------------|--|
| F <small>A0013956</small> | Failure A device error is present. The measured value is no longer valid. |
| C <small>A0013959</small> | Function check The device is in service mode (e.g. during a simulation). |
| S <small>A0013958</small> | Out of specification The device is being operated: <ul style="list-style-type: none"> ▪ Outside its technical specification limits (e.g. outside the process temperature range) ▪ Outside of the configuration carried out by the user (e.g. maximum flow in parameter 20 mA value) |
| M <small>A0013957</small> | Maintenance required Maintenance is required. The measured value is still valid. |
| N <small>A0023076</small> | Has no effect on the condensed status. |

12.7 Overview of diagnostic information

 The amount of diagnostic information and the number of measured variables affected increase if the measuring device has one or more application packages.

 In the case of some items of diagnostic information, the status signal and the diagnostic behavior can be changed. Change the diagnostic information →  138

| Diagnostic number | Short text | Remedy instructions | Status signal [from the factory] | Diagnostic behavior [from the factory] |
|---------------------------------|---------------------------------|---|----------------------------------|--|
| Diagnostic of sensor | | | | |
| 043 | Sensor short circuit | 1. Check sensor cable and sensor 2. Execute Heartbeat Verification 3. Replace sensor cable or sensor | S | Warning ¹⁾ |
| 082 | Data storage | 1. Check module connections 2. Contact service | F | Alarm |
| 083 | Memory content | 1. Restart device 2. Restore HistoROM S-DAT backup ('Device reset' parameter) 3. Replace HistoROM S-DAT | F | Alarm |
| 169 | Conductivity measurement failed | 1. Check grounding conditions 2. Deactivate conductivity measurement | M | Warning |
| 170 | Coil resistance | Check ambient and process temperature | F | Alarm |
| 180 | Temperature sensor defective | 1. Check sensor connections 2. Replace sensor cable or sensor 3. Turn off temperature measurement | F | Warning |
| 181 | Sensor connection | 1. Check sensor cable and sensor 2. Execute Heartbeat Verification 3. Replace sensor cable or sensor | F | Alarm |
| Diagnostic of electronic | | | | |
| 201 | Device failure | 1. Restart device 2. Contact service | F | Alarm |

| Diagnostic number | Short text | Remedy instructions | Status signal [from the factory] | Diagnostic behavior [from the factory] |
|-------------------|-------------------------------------|---|----------------------------------|--|
| 242 | Software incompatible | 1. Check software 2. Flash or change main electronics module | F | Alarm |
| 252 | Modules incompatible | 1. Check electronic modules 2. Change electronic modules | F | Alarm |
| 252 | Modules incompatible | 1. Check if correct electronic modul is plugged 2. Replace electronic module | F | Alarm |
| 262 | Sensor electronic connection faulty | 1. Check or replace connection cable between sensor electronic module (ISEM) and main electronics 2. Check or replace ISEM or main electronics | F | Alarm |
| 270 | Main electronic failure | Change main electronic module | F | Alarm |
| 271 | Main electronic failure | 1. Restart device 2. Change main electronic module | F | Alarm |
| 272 | Main electronic failure | 1. Restart device 2. Contact service | F | Alarm |
| 273 | Main electronic failure | Change electronic | F | Alarm |
| 275 | I/O module 1 to n defective | Change I/O module | F | Alarm |
| 276 | I/O module 1 to n faulty | 1. Restart device 2. Change I/O module | F | Alarm |
| 283 | Memory content | 1. Reset device 2. Contact service | F | Alarm |
| 302 | Device verification active | Device verification active, please wait. | C | Warning |
| 311 | Electronic failure | 1. Do not reset device 2. Contact service | M | Warning |
| 332 | Writing in embedded HistoROM failed | Replace user interface board Ex d/XP: replace transmitter | F | Alarm |
| 361 | I/O module 1 to n faulty | 1. Restart device 2. Check electronic modules 3. Change I/O Modul or main electronics | F | Alarm |
| 372 | Sensor electronic (ISEM) faulty | 1. Restart device 2. Check if failure recurs 3. Replace sensor electronic module (ISEM) | F | Alarm |
| 373 | Sensor electronic (ISEM) faulty | 1. Transfer data or reset device 2. Contact service | F | Alarm |
| 375 | I/O- 1 to n communication failed | 1. Restart device 2. Check if failure recurs 3. Replace module rack inclusive electronic modules | F | Alarm |
| 376 | Sensor electronic (ISEM) faulty | 1. Replace sensor electronic module (ISEM) 2. Turn off diagnostic message | S | Warning ¹⁾ |
| 377 | Sensor electronic (ISEM) faulty | 1. Check sensor cable and sensor 2. Perform Heartbeat Verification 3. Replace sensor cable or sensor | S | Warning ¹⁾ |
| 382 | Data storage | 1. Insert T-DAT 2. Replace T-DAT | F | Alarm |

| Diagnostic number | Short text | Remedy instructions | Status signal [from the factory] | Diagnostic behavior [from the factory] |
|------------------------------------|------------------------------------|---|----------------------------------|--|
| 383 | Memory content | 1. Restart device 2. Delete T-DAT via 'Reset device' parameter 3. Replace T-DAT | F | Alarm |
| 387 | HistoROM backup failed | Contact service organization | F | Alarm |
| 512 | Sensor electronic (ISEM) faulty | 1. Check ECC recovery time 2. Turn off ECC | F | Alarm |
| Diagnostic of configuration | | | | |
| 303 | I/O 1 to n configuration changed | 1. Apply I/O module configuration (parameter 'Apply I/O configuration') 2. Afterwards reload device description and check wiring | M | Warning |
| 330 | Flash file invalid | 1. Update firmware of device 2. Restart device | M | Warning |
| 331 | Firmware update failed | 1. Update firmware of device 2. Restart device | F | Warning |
| 410 | Data transfer | 1. Check connection 2. Retry data transfer | F | Alarm |
| 412 | Processing download | Download active, please wait | C | Warning |
| 431 | Trim 1 to n | Carry out trim | C | Warning |
| 437 | Configuration incompatible | 1. Restart device 2. Contact service | F | Alarm |
| 438 | Dataset | 1. Check data set file 2. Check device configuration 3. Up- and download new configuration | M | Warning |
| 441 | Current output 1 to n | 1. Check process 2. Check current output settings | S | Warning ¹⁾ |
| 442 | Frequency output 1 to n | 1. Check process 2. Check frequency output settings | S | Warning ¹⁾ |
| 443 | Pulse output 1 to n | 1. Check process 2. Check pulse output settings | S | Warning ¹⁾ |
| 444 | Current input 1 to n | 1. Check process 2. Check current input settings | S | Warning ¹⁾ |
| 453 | Flow override | Deactivate flow override | C | Warning |
| 484 | Failure mode simulation | Deactivate simulation | C | Alarm |
| 485 | Measured variable simulation | Deactivate simulation | C | Warning |
| 486 | Current input 1 to n simulation | Deactivate simulation | C | Warning |
| 491 | Current output 1 to n simulation | Deactivate simulation | C | Warning |
| 492 | Simulation frequency output 1 to n | Deactivate simulation frequency output | C | Warning |
| 493 | Simulation pulse output 1 to n | Deactivate simulation pulse output | C | Warning |
| 494 | Switch output simulation 1 to n | Deactivate simulation switch output | C | Warning |
| 495 | Diagnostic event simulation | Deactivate simulation | C | Warning |






| Diagnostic number | Short text | Remedy instructions | Status signal [from the factory] | Diagnostic behavior [from the factory] |
|------------------------------|---|---|----------------------------------|--|
| 496 | Status input simulation | Deactivate simulation status input | C | Warning |
| 502 | CT activation/deactivation failed | Follow the sequence of the custody transfer activation/deactivation: First authorized user login, then set the DIP switch on the main electronic module | C | Warning |
| 511 | ISEM settings faulty | 1. Check measuring period and integration time 2. Check sensor properties | C | Alarm |
| 520 | I/O 1 to n hardware configuration invalid | 1. Check I/O hardware configuration 2. Replace wrong I/O module 3. Plug the module of double pulse output on correct slot | F | Alarm |
| 530 | Electrode cleaning is running | Turn off ECC | C | Warning |
| 531 | Empty pipe adjustment faulty | Execute EPD adjustment | S | Warning ¹⁾ |
| 537 | Configuration | 1. Check IP addresses in network 2. Change IP address | F | Warning |
| 540 | Custody transfer mode failed | 1. Check electronic components 2. Check parameter settings 3. Deactivate custody transfer mode 4. Reactivate custody transfer mode | F | Alarm |
| 543 | Double pulse output | 1. Check process 2. Check pulse output settings | S | Warning ¹⁾ |
| 593 | Double pulse output simulation | Deactivate simulation pulse output | C | Warning |
| 594 | Relay output simulation | Deactivate simulation switch output | C | Warning |
| 599 | Custody transfer logbook full | 1. Deactivate custody transfer mode 2. Clear custody transfer logbook (all 30 entries) 3. Activate custody transfer mode | F | Warning |
| Diagnostic of process | | | | |
| 803 | Current loop | 1. Check wiring 2. Change I/O module | F | Alarm |
| 832 | Electronic temperature too high | Reduce ambient temperature | S | Warning ¹⁾ |
| 833 | Electronic temperature too low | Increase ambient temperature | S | Warning ¹⁾ |
| 834 | Process temperature too high | Reduce process temperature | S | Warning ¹⁾ |
| 835 | Process temperature too low | Increase process temperature | S | Warning ¹⁾ |
| 842 | Process limit | Low flow cut off active! 1. Check low flow cut off configuration | S | Warning |
| 882 | Input signal | 1. Check input configuration 2. Check external device or process conditions | F | Alarm |
| 937 | Sensor symmetry | 1. Eliminate external magnetic field near sensor 2. Turn off diagnostic message | S | Warning ¹⁾ |



| Diagnostic number | Short text | Remedy instructions | Status signal [from the factory] | Diagnostic behavior [from the factory] |
|-------------------|--|---|----------------------------------|--|
| 938 | EMC interference | 1. Check ambient conditions regarding EMC influence 2. Turn off diagnostic message | F | Alarm ¹⁾ |
| 961 | Electrode potential out of specification | 1. Check process conditions 2. Check ambient conditions | S | Warning ¹⁾ |
| 962 | Pipe empty | 1. Perform full pipe adjustment 2. Perform empty pipe adjustment 3. Turn off empty pipe detection | S | Warning ¹⁾ |

 1) Diagnostic behavior can be changed.

12.8 Pending diagnostic events






The **Diagnostics** menu allows the user to view the current diagnostic event and the previous diagnostic event separately.

-  To call up the measures to rectify a diagnostic event:
 - Via local display →  135
 - Via Web browser →  136
 - Via "FieldCare" operating tool →  138
 - Via "DeviceCare" operating tool →  138


-  Other pending diagnostic events can be displayed in the **Diagnostic list** submenu →  144

Navigation

"Diagnostics" menu

| | |
|--|---|
|  Diagnostics | |
| Actual diagnostics | →  143 |
| Previous diagnostics | →  143 |
| Operating time from restart | →  144 |
| Operating time | →  144 |

Parameter overview with brief description

| Parameter | Prerequisite | Description | User interface |
|----------------------|--|--|--|
| Actual diagnostics | A diagnostic event has occurred. | Shows the current occurred diagnostic event along with its diagnostic information.  If two or more messages occur simultaneously, the message with the highest priority is shown on the display. | Symbol for diagnostic behavior, diagnostic code and short message. |
| Previous diagnostics | Two diagnostic events have already occurred. | Shows the diagnostic event that occurred prior to the current diagnostic event along with its diagnostic information. | Symbol for diagnostic behavior, diagnostic code and short message. |


| Parameter | Prerequisite | Description | User interface |
|-----------------------------|--------------|--|--|
| Operating time from restart | – | Shows the time the device has been in operation since the last device restart. | Days (d), hours (h), minutes (m) and seconds (s) |
| Operating time | – | Indicates how long the device has been in operation. | Days (d), hours (h), minutes (m) and seconds (s) |

12.9 Diagnostic list

Up to 5 currently pending diagnostic events can be displayed in the **Diagnostic list** submenu along with the associated diagnostic information. If more than 5 diagnostic events are pending, the events with the highest priority are shown on the display.

Navigation path

Diagnostics → Diagnostic list

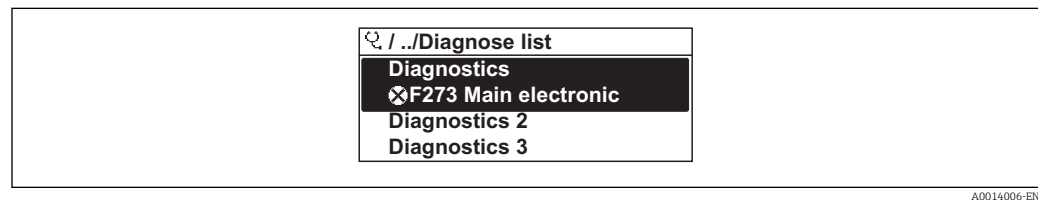

36 Taking the example of the local display

i To call up the measures to rectify a diagnostic event:

- Via local display → 135
- Via Web browser → 136
- Via "FieldCare" operating tool → 138
- Via "DeviceCare" operating tool → 138


12.10 Event logbook

12.10.1 Reading out the event logbook

A chronological overview of the event messages that have occurred is provided in the **Events list** submenu.

Navigation path

Diagnostics menu → **Event logbook** submenu → Event list

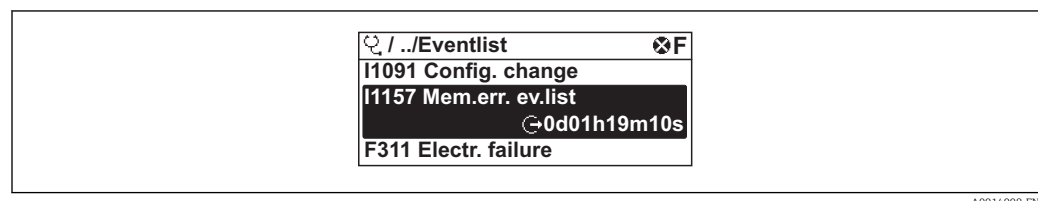

37 Taking the example of the local display



 


- A maximum of 20 event messages can be displayed in chronological order.
- If the **Extended HistoROM** application package (order option) is enabled in the device, the event list can contain up to 100 entries.

The event history includes entries for:

- Diagnostic events → 139
- Information events → 145

In addition to the operation time of its occurrence, each event is also assigned a symbol that indicates whether the event has occurred or is ended:

- Diagnostic event
 - ☺: Occurrence of the event
 - ☹: End of the event
- Information event
 - ☺: Occurrence of the event

-  To call up the measures to rectify a diagnostic event:
- Via local display →  135
 - Via Web browser →  136
 - Via "FieldCare" operating tool →  138
 - Via "DeviceCare" operating tool →  138

-  For filtering the displayed event messages →  145

12.10.2 Filtering the event logbook

Using the **Filter options** parameter you can define which category of event message is displayed in the **Events list** submenu.

Navigation path

Diagnostics → Event logbook → Filter options

Filter categories

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information (I)

12.10.3 Overview of information events

Unlike a diagnostic event, an information event is displayed in the event logbook only and not in the diagnostic list.

| Info number | Info name |
|-------------|--------------------------------|
| I1000 | ----- (Device ok) |
| I1079 | Sensor changed |
| I1089 | Power on |
| I1090 | Configuration reset |
| I1091 | Configuration changed |
| I1092 | HistoROM backup deleted |
| I1137 | Electronic changed |
| I1151 | History reset |
| I1155 | Reset electronic temperature |
| I1156 | Memory error trend |
| I1157 | Memory error event list |
| I1184 | Display connected |
| I1256 | Display: access status changed |
| I1264 | Safety sequence aborted |
| I1278 | I/O module reset detected |
| I1335 | Firmware changed |

| Info number | Info name |
|-------------|--|
| I1351 | Empty pipe detection adjustment failure |
| I1353 | Empty pipe detection adjustment ok |
| I1361 | Web server: login failed |
| I1397 | Fieldbus: access status changed |
| I1398 | CDI: access status changed |
| I1443 | Coating thickness not determined |
| I1444 | Device verification passed |
| I1445 | Device verification failed |
| I1457 | Measured error verification failed |
| I1459 | I/O module verification failed |
| I1461 | Sensor verification failed |
| I1462 | Sensor electronic module verific. failed |
| I1512 | Download started |
| I1513 | Download finished |
| I1514 | Upload started |
| I1515 | Upload finished |
| I1517 | Custody transfer active |
| I1518 | Custody transfer inactive |
| I1554 | Safety sequence started |
| I1555 | Safety sequence confirmed |
| I1556 | Safety mode off |
| I1618 | I/O module 2 replaced |
| I1619 | I/O module 3 replaced |
| I1621 | I/O module 4 replaced |
| I1622 | Calibration changed |
| I1624 | Reset all totalizers |
| I1625 | Write protection activated |
| I1626 | Write protection deactivated |
| I1627 | Web server: login successful |
| I1628 | Display: login successful |
| I1629 | CDI: login successful |
| I1631 | Web server access changed |
| I1632 | Display login failed |
| I1633 | CDI: login failed |
| I1634 | Reset to factory settings |
| I1635 | Reset to delivery settings |
| I1639 | Max. switch cycles number reached |
| I1643 | Custody transfer logbook cleared |
| I1649 | Hardware write protection activated |
| I1650 | Hardware write protection deactivated |
| I1651 | Custody transfer parameter changed |
| I1712 | New flash file received |

| Info number | Info name |
|-------------|---|
| I1725 | Sensor electronic module (ISEM) changed |
| I1726 | Configuration backup failed |

12.11 Resetting the measuring device

Using the **Device reset** parameter (→ ⓘ 113) it is possible to reset the entire device configuration or some of the configuration to a defined state.

12.11.1 Function scope of the "Device reset" parameter

| Options | Description |
|----------------------|---|
| Cancel | No action is executed and the user exits the parameter. |
| To delivery settings | Every parameter for which a customer-specific default setting was ordered is reset to this customer-specific value. All other parameters are reset to the factory setting. |
| Restart device | The restart resets every parameter whose data are in the volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged. |
| Restore S-DAT backup | Restore the data that are saved on the S-DAT. The data record is restored from the electronics memory to the S-DAT. |

12.12 Device information

The **Device information** submenu contains all parameters that display different information for device identification.






Navigation

"Diagnostics" menu → Device information

| ▶ Device information | |
|-----------------------|---------|
| Device tag | → ⓘ 148 |
| Serial number | → ⓘ 148 |
| Firmware version | → ⓘ 148 |
| Device name | → ⓘ 148 |
| Order code | → ⓘ 148 |
| Extended order code 1 | → ⓘ 148 |
| Extended order code 2 | → ⓘ 148 |
| Extended order code 3 | → ⓘ 148 |
| ENP version | → ⓘ 148 |

| | |
|-----------------|---------|
| Device revision | → ⓘ 148 |
| Device ID | → ⓘ 148 |
| Device type | → ⓘ 149 |
| Manufacturer ID | → ⓘ 149 |


Parameter overview with brief description


| Parameter | Description | User interface | Factory setting |
|-----------------------|--|---|-----------------|
| Device tag | Shows name of measuring point. | Max. 32 characters, such as letters, numbers or special characters (e.g. @, %, /). | Promag |
| Serial number | Shows the serial number of the measuring device. | A maximum of 11-digit character string comprising letters and numbers. | – |
| Firmware version | Shows the device firmware version installed. | Character string in the format xx.yy.zz | – |
| Device name | Shows the name of the transmitter.  The name can be found on the nameplate of the transmitter. | Promag300/500 | – |
| Order code | Shows the device order code.  The order code can be found on the nameplate of the sensor and transmitter in the "Order code" field. | Character string composed of letters, numbers and certain punctuation marks (e.g. /). | – |
| Extended order code 1 | Shows the 1st part of the extended order code.  The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field. | Character string | – |
| Extended order code 2 | Shows the 2nd part of the extended order code.  The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field. | Character string | – |
| Extended order code 3 | Shows the 3rd part of the extended order code.  The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field. | Character string | – |
| ENP version | Shows the version of the electronic nameplate (ENP). | Character string | 2.02.00 |
| Device revision | Shows the device revision with which the device is registered with the HART Communication Foundation. | 2-digit hexadecimal number | 2 |
| Device ID | Shows the device ID for identifying the device in a HART network. | 6-digit hexadecimal number | – |


| Parameter | Description | User interface | Factory setting |
|-----------------|---|----------------------------|---------------------------|
| Device type | Shows the device type with which the measuring device is registered with the HART Communication Foundation. | 2-digit hexadecimal number | 0x3A (for Promag 300) |
| Manufacturer ID | Shows the manufacturer ID device is registered with the HART Communication Foundation. | 2-digit hexadecimal number | 0x11 (for Endress+Hauser) |

12.13 Firmware history

| Release date | Firmware version | Order code for "Firmware version" | Firmware changes | Documentation type | Documentation |
|--------------|------------------|-----------------------------------|---|------------------------|----------------------|
| 08.2016 | 01.00.zz | Option 76 | Original firmware | Operating Instructions | BA01393D/06/EN/01.16 |
| 10.2017 | 01.01.zz | Option 68 | <ul style="list-style-type: none"> ▪ OPC-UA with Security new ▪ Local display - enhanced performance and data entry via text editor ▪ Optimized keypad lock for local display ▪ Web server feature update <ul style="list-style-type: none"> - Support for trend data function - Heartbeat function enhanced to include detailed results (page 3/4 of the report) - Device configuration as PDF (parameter log, similar to FDT print) ▪ Network capability of Ethernet (service) interface ▪ Comprehensive Heartbeat feature update ▪ Local display - support for WLAN infrastructure mode ▪ Implementation of reset code | Operating Instructions | BA01393D/06/EN/02.17 |

 It is possible to flash the firmware to the current version or the previous version using the service interface.

 For the compatibility of the firmware version with the previous version, the installed device description files and operating tools, observe the information about the device in the "Manufacturer's information" document.

 The manufacturer's information is available:

- In the Download Area of the Endress+Hauser web site: www.endress.com → Downloads
- Specify the following details:
 - Product root: e.g. 5P3B
The product root is the first part of the order code: see the nameplate on the device.
 - Text search: Manufacturer's information
 - Media type: Documentation – Technical Documentation

13 Maintenance

13.1 Maintenance tasks

No special maintenance work is required.

13.1.1 Exterior cleaning

When cleaning the exterior of measuring devices, always use cleaning agents that do not attack the surface of the housing or the seals.

13.1.2 Interior cleaning

No interior cleaning is planned for the device.

13.1.3 Replacing seals


The sensor's seals (particularly aseptic molded seals) must be replaced periodically.

 
The interval between changes depends on the frequency of the cleaning cycles, the cleaning temperature and the medium temperature.

Replacement seals (accessory part) →  183

13.2 Measuring and test equipment

Endress+Hauser offers a wide variety of measuring and test equipment, such as W@M or device tests.

 Your Endress+Hauser Sales Center can provide detailed information on the services.

List of some of the measuring and testing equipment: →  154

13.3 Endress+Hauser services

Endress+Hauser offers a wide variety of services for maintenance such as recalibration, maintenance service or device tests.

 Your Endress+Hauser Sales Center can provide detailed information on the services.

14 Repairs

14.1 General notes

14.1.1 Repair and conversion concept

The Endress+Hauser repair and conversion concept provides for the following:

- The measuring devices have a modular design.
- Spare parts are grouped into logical kits with the associated Installation Instructions.
- Repairs are carried out by Endress+Hauser Service or by appropriately trained customers.
- Certified devices can only be converted to other certified devices by Endress+Hauser Service or at the factory.

14.1.2 Notes for repair and conversion



For repair and modification of a measuring device, observe the following notes:

- ▶ Use only original Endress+Hauser spare parts.
- ▶ Carry out the repair according to the Installation Instructions.
- ▶ Observe the applicable standards, federal/national regulations, Ex documentation (XA) and certificates.
- ▶ Document every repair and each conversion and enter them into the *W@M* life cycle management database.

14.2 Spare parts


W@M Device Viewer (www.endress.com/deviceviewer):

All the spare parts for the measuring device, along with the order code, are listed here and can be ordered. If available, users can also download the associated Installation Instructions.

-  Measuring device serial number:
 - Is located on the nameplate of the device.
 - Can be read out via the **Serial number** parameter (→  148) in the **Device information** submenu.

14.3 Endress+Hauser services

Endress+Hauser offers a wide range of services.

-  Your Endress+Hauser Sales Center can provide detailed information on the services.

14.4 Return

The measuring device must be returned if it is need of repair or a factory calibration, or if the wrong measuring device has been delivered or ordered. Legal specifications require Endress+Hauser, as an ISO-certified company, to follow certain procedures when handling products that are in contact with the medium.

To ensure safe, swift and professional device returns, please refer to the procedure and conditions for returning devices provided on the Endress+Hauser website at <http://www.endress.com/support/return-material>

14.5 Disposal

14.5.1 Removing the measuring device

1. Switch off the device.

⚠ WARNING

Danger to persons from process conditions.

- ▶ Beware of hazardous process conditions such as pressure in the measuring device, high temperatures or aggressive fluids.

2. Carry out the mounting and connection steps from the "Mounting the measuring device" and "Connecting the measuring device" sections in reverse order. Observe the safety instructions.

14.5.2 Disposing of the measuring device

⚠ WARNING

Danger to personnel and environment from fluids that are hazardous to health.

- ▶ Ensure that the measuring device and all cavities are free of fluid residues that are hazardous to health or the environment, e.g. substances that have permeated into crevices or diffused through plastic.

Observe the following notes during disposal:










- ▶ Observe valid federal/national regulations.
- ▶ Ensure proper separation and reuse of the device components.

15 Accessories


Various accessories, which can be ordered with the device or subsequently from Endress+Hauser, are available for the device. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.

15.1 Device-specific accessories







15.1.1 For the transmitter

| Accessories | Description |
|--|--|
| Transmitter Promag 300 | <p>Transmitter for replacement or storage. Use the order code to define the following specifications:</p> <ul style="list-style-type: none"> ▪ Approvals ▪ Output ▪ Input ▪ Display / operation ▪ Housing ▪ Software <p> Order code: 5X3BXX</p> <p> For details, see Installation Instructions EA01150</p> |
| Remote display and operating module DKX001 | <ul style="list-style-type: none"> ▪ If ordered directly with the measuring device: Order code for "Display; operation", option O "Separate 4-line display, illum.; 10 m (30 ft)Cable; touch control". ▪ If ordered separately: <ul style="list-style-type: none"> – Measuring device: order code for "Display; operation", option M "None, prepared for separate display". – DKX001: Via the separate product structure DKX001. ▪ If ordered subsequently: DKX001: Via the separate product structure DKX001. <p>Mounting bracket for DKX001</p> <ul style="list-style-type: none"> ▪ Ordered directly with the DKX001: Order code for "Enclosed accessories", option RA "Mounting bracket, 1 1/2" pipe". ▪ If ordered subsequently: order number: 71340960 <p>Connecting cable (replacement cable) Via the separate product structure: DKX002</p> <p> Further information on display and operating module DKX001 →  176.</p> <p> For details, see Special Documentation SD01763D</p> |
| External WLAN antenna | <p>External WLAN antenna with 2 m (6.6 ft)connecting cable and two angle brackets. Order code for "Enclosed accessories", option P8 "Wireless antenna wide area".</p> <p> Further information on the WLAN interface →  68.</p> |
| Protective cover | <p>Is used to protect the measuring device from the effects of the weather: e.g. rainwater, excess heating from direct sunlight.</p> <p> Order number: 71343505</p> <p> For details, see Installation Instructions EA01160</p> |
| Ground cable | <p>Set, consisting of two ground cables for potential equalization.</p> |

15.1.2 For the sensor



| Accessories | Description |
|--------------|--|
| Ground disks | <p>Are used to ground the medium in lined measuring tubes to ensure proper measurement.</p> <p> For details, see Installation Instructions EA00070D</p> |

15.2 Communication-specific accessories


| Accessories | Description |
|---------------------------|---|
| Commubox FXA195 HART | <p>For intrinsically safe HART communication with FieldCare via the USB interface.</p> <p> For details, see "Technical Information" TI00404F</p> |
| HART Loop Converter HMX50 | <p>Is used to evaluate and convert dynamic HART process variables to analog current signals or limit values.</p> <p> For details, see "Technical Information" TI00429F and Operating Instructions BA00371F</p> |
| Fieldgate FXA320 | <p>Gateway for the remote monitoring of connected 4 to 20 mA measuring devices via a Web browser.</p> <p> For details, see "Technical Information" TI00025S and Operating Instructions BA00053S</p> |
| Fieldgate FXA520 | <p>Gateway for the remote diagnostics and remote configuration of connected HART measuring devices via a Web browser.</p> <p> For details, see "Technical Information" TI00025S and Operating Instructions BA00051S</p> |
| Field Xpert SFX350 | <p>Field Xpert SFX350 is a mobile computer for commissioning and maintenance. It enables efficient device configuration and diagnostics for HART devices and can be used in non-hazardous areas.</p> <p> For details, see Operating Instructions BA01202S</p> |
| Field Xpert SFX370 | <p>Field Xpert SFX370 is a mobile computer for commissioning and maintenance. It enables efficient device configuration and diagnostics for HART devices and can be used in the non-hazardous area and in the hazardous area.</p> <p> For details, see Operating Instructions BA01202S</p> |

15.3 Service-specific accessories

| Accessories | Description |
|-------------|--|
| Applicator | <p>Software for selecting and sizing Endress+Hauser measuring devices:</p> <ul style="list-style-type: none"> ▪ Choice of measuring devices for industrial requirements ▪ Calculation of all the necessary data for identifying the optimum flowmeter: e.g. nominal diameter, pressure loss, flow velocity and accuracy. ▪ Graphic illustration of the calculation results ▪ Determination of the partial order code, administration, documentation and access to all project-related data and parameters over the entire life cycle of a project. <p>Applicator is available:</p> <ul style="list-style-type: none"> ▪ Via the Internet: https://wapps.endress.com/applicator ▪ As a downloadable DVD for local PC installation. |

| | |
|------------|--|
| W@M | <p>W@M Life Cycle Management</p> <p>Improved productivity with information at your fingertips. Data relevant to a plant and its components is generated from the first stages of planning and during the asset's complete life cycle.</p> <p>W@M Life Cycle Management is an open and flexible information platform with online and on-site tools. Instant access for your staff to current, in-depth data shortens your plant's engineering time, speeds up procurement processes and increases plant uptime.</p> <p>Combined with the right services, W@M Life Cycle Management boosts productivity in every phase. For more information, visit www.endress.com/lifecyclemanagement</p> |
| FieldCare | <p>FDT-based plant asset management tool from Endress+Hauser. It can configure all smart field units in your system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.</p> <p> For details, see Operating Instructions BA00027S and BA00059S</p> |
| DeviceCare | <p>Tool for connecting and configuring Endress+Hauser field devices.</p> <p> For details, see Innovation brochure IN01047S</p> |

15.4 System components

| Accessories | Description |
|----------------------------------|---|
| Memograph M graphic data manager | <p>The Memograph M graphic data manager provides information on all the relevant measured variables. Measured values are recorded correctly, limit values are monitored and measuring points analyzed. The data are stored in the 256 MB internal memory and also on a SD card or USB stick.</p> <p> For details, see "Technical Information" TI00133R and Operating Instructions BA00247R</p> |

16 Technical data

16.1 Application


The measuring device is only suitable for flow measurement of liquids with a minimum conductivity of 5 $\mu\text{S}/\text{cm}$.

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

To ensure that the device remains in proper operating condition for its service life, use the measuring device only for media against which the process-wetted materials are sufficiently resistant.

16.2 Function and system design

Measuring principle Electromagnetic flow measurement on the basis of *Faraday's law of magnetic induction*.

Measuring system The device consists of a transmitter and a sensor.
The device is available as a compact version:
The transmitter and sensor form a mechanical unit.
For information on the structure of the device →  14

16.3 Input

Measured variable **Direct measured variables**

- Volume flow (proportional to induced voltage)
- Electrical conductivity

Calculated measured variables

- Mass flow
- Corrected volume flow

Measuring range Typically $v = 0.01$ to 10 m/s (0.03 to 33 ft/s) with the specified accuracy

Flow characteristic values in SI units

| Nominal diameter | | Recommended flow min./max. full scale value ($v \sim 0.3/10$ m/s) | Factory settings | | |
|------------------|------|--|--|------------------------------------|--|
| [mm] | [in] | | Full scale value current output ($v \sim 2.5$ m/s) | Pulse value (~ 2 pulse/s) | Low flow cut off ($v \sim 0.04$ m/s) |
| | | [dm ³ /min] | [dm ³ /min] | [dm ³] | [dm ³ /min] |
| 15 | ½ | 4 to 100 | 25 | 0.2 | 0.5 |
| 25 | 1 | 9 to 300 | 75 | 0.5 | 1 |
| 32 | – | 15 to 500 | 125 | 1 | 2 |
| 40 | 1 ½ | 25 to 700 | 200 | 1.5 | 3 |
| 50 | 2 | 35 to 1100 | 300 | 2.5 | 5 |
| 65 | – | 60 to 2000 | 500 | 5 | 8 |

| Nominal diameter | | Recommended flow min./max. full scale value (v ~ 0.3/10 m/s) | Factory settings | | |
|------------------|------|--|--|------------------------------|------------------------------------|
| [mm] | [in] | | Full scale value current output (v ~ 2.5 m/s) | Pulse value (~ 2 pulse/s) | Low flow cut off (v ~ 0.04 m/s) |
| | | [dm ³ /min] | [dm ³ /min] | [dm ³] | [dm ³ /min] |
| 80 | 3 | 90 to 3 000 | 750 | 5 | 12 |
| 100 | 4 | 145 to 4 700 | 1200 | 10 | 20 |
| 125 | – | 220 to 7 500 | 1850 | 15 | 30 |
| 150 | 6 | 20 to 600 m ³ /h | 150 m ³ /h | 0.03 m ³ | 2.5 m ³ /h |
| 200 | 8 | 35 to 1 100 m ³ /h | 300 m ³ /h | 0.05 m ³ | 5 m ³ /h |
| 250 | 10 | 55 to 1 700 m ³ /h | 500 m ³ /h | 0.05 m ³ | 7.5 m ³ /h |
| 300 | 12 | 80 to 2 400 m ³ /h | 750 m ³ /h | 0.1 m ³ | 10 m ³ /h |
| 350 | 14 | 110 to 3 300 m ³ /h | 1 000 m ³ /h | 0.1 m ³ | 15 m ³ /h |
| 400 | 16 | 140 to 4 200 m ³ /h | 1 200 m ³ /h | 0.15 m ³ | 20 m ³ /h |
| 450 | 18 | 180 to 5 400 m ³ /h | 1 500 m ³ /h | 0.25 m ³ | 25 m ³ /h |
| 500 | 20 | 220 to 6 600 m ³ /h | 2 000 m ³ /h | 0.25 m ³ | 30 m ³ /h |
| 600 | 24 | 310 to 9 600 m ³ /h | 2 500 m ³ /h | 0.3 m ³ | 40 m ³ /h |

Flow characteristic values in US units

| Nominal diameter | | Recommended flow min./max. full scale value (v ~ 0.3/10 m/s) | Factory settings | | |
|------------------|------|--|--|------------------------------|------------------------------------|
| [in] | [mm] | | Full scale value current output (v ~ 2.5 m/s) | Pulse value (~ 2 pulse/s) | Low flow cut off (v ~ 0.04 m/s) |
| | | [gal/min] | [gal/min] | [gal] | [gal/min] |
| ½ | 15 | 1.0 to 27 | 6 | 0.1 | 0.15 |
| 1 | 25 | 2.5 to 80 | 18 | 0.2 | 0.25 |
| 1 ½ | 40 | 7 to 190 | 50 | 0.5 | 0.75 |
| 2 | 50 | 10 to 300 | 75 | 0.5 | 1.25 |
| 3 | 80 | 24 to 800 | 200 | 2 | 2.5 |
| 4 | 100 | 40 to 1 250 | 300 | 2 | 4 |
| 6 | 150 | 90 to 2 650 | 600 | 5 | 12 |
| 8 | 200 | 155 to 4 850 | 1 200 | 10 | 15 |
| 10 | 250 | 250 to 7 500 | 1 500 | 15 | 30 |
| 12 | 300 | 350 to 10 600 | 2 400 | 25 | 45 |
| 14 | 350 | 500 to 15 000 | 3 600 | 30 | 60 |
| 16 | 400 | 600 to 19 000 | 4 800 | 50 | 60 |
| 18 | 450 | 800 to 24 000 | 6 000 | 50 | 90 |
| 20 | 500 | 1 000 to 30 000 | 7 500 | 75 | 120 |
| 24 | 600 | 1 400 to 44 000 | 10 500 | 100 | 180 |

Recommended measuring range


"Flow limit" section →  170

Input signal

External measured values

To increase the accuracy of certain measured variables or to calculate the corrected volume flow, the automation system can continuously write different measured values to the measuring device:

- Medium temperature to increase the accuracy of the electrical conductivity (e.g. iTEMP)
- Reference density for calculating the corrected volume flow

 Various pressure transmitters and temperature measuring devices can be ordered from Endress+Hauser: see "Accessories" section →  156

It is recommended to read in external measured values to calculate the following measured variables:


Corrected volume flow

HART protocol

The measured values are written from the automation system to the measuring device via the HART protocol. The pressure transmitter must support the following protocol-specific functions:

- HART protocol
- Burst mode

Current input

The measured values are written from the automation system to the measuring device via the current input →  159.

Current input 0/4 to 20 mA

| | |
|---------------------------------|---|
| Current input | 0/4 to 20 mA (active/passive) |
| Current span | <ul style="list-style-type: none"> ■ 4 to 20 mA (active) ■ 0/4 to 20 mA (passive) |
| Resolution | 1 μ A |
| Voltage drop | Typically: 0.6 to 2 V for 3.6 to 22 mA (passive) |
| Maximum input voltage | \leq 30 V (passive) |
| Open-circuit voltage | \leq 28.8 V (active) |
| Possible input variables | <ul style="list-style-type: none"> ■ Pressure ■ Temperature ■ Density |


Status input

| | |
|-----------------------------|--|
| Maximum input values | <ul style="list-style-type: none"> ■ DC -3 to 30 V ■ If status input is active (ON): $R_i > 3 \text{ k}\Omega$ |
| Response time | Adjustable: 5 to 200 ms |
| Input signal level | <ul style="list-style-type: none"> ■ Low signal: DC -3 to +5 V ■ High signal: DC 12 to 30 V |
| Assignable functions | <ul style="list-style-type: none"> ■ Off ■ Reset the individual totalizers separately ■ Reset all totalizers ■ Flow override |


16.4 Output

Output signal


HART current output

| | |
|--------------------------------------|---|
| Current output | 4 to 20 mA HART |
| Current span | Can be set to: 4 to 20 mA (active/passive)  Ex-i, passive |
| Open-circuit voltage | DC 28.8 V (active) |
| Maximum input voltage | DC 30 V (passive) |
| Load | 250 to 700 Ω |
| Resolution | 0.38 μA |
| Damping | Adjustable: 0.07 to 999 s |
| Assignable measured variables | <ul style="list-style-type: none"> ▪ Volume flow ▪ Mass flow ▪ Corrected volume flow ▪ Flow velocity ▪ Conductivity ▪ Corrected conductivity ▪ Temperature ▪ Electronic temperature |

Current output 0/4 to 20 mA

| | |
|--------------------------------------|---|
| Current output | 0/4 to 20 mA |
| Maximum output values | 22.5 mA |
| Current span | Can be set to: <ul style="list-style-type: none"> ▪ 4 to 20 mA (active) ▪ 0/4 to 20 mA (passive)  Ex-i, passive |
| Open-circuit voltage | DC 28.8 V (active) |
| Maximum input voltage | DC 30 V (passive) |
| Load | 0 to 700 Ω |
| Resolution | 0.38 μA |
| Damping | Adjustable: 0.07 to 999 s |
| Assignable measured variables | <ul style="list-style-type: none"> ▪ Volume flow ▪ Mass flow ▪ Corrected volume flow ▪ Flow velocity ▪ Conductivity ▪ Corrected conductivity ▪ Temperature ▪ Electronic temperature |

Pulse/frequency/switch output

| | |
|--------------------------------------|---|
| Function | Can be set to pulse, frequency or switch output |
| Version | Open collector Can be set to: <ul style="list-style-type: none"> ▪ Active ▪ Passive  Ex-i, passive |
| Maximum input values | DC 30 V, 250 mA (passive) |
| Open-circuit voltage | DC 28.8 V (active) |
| Voltage drop | For 22.5 mA: ≤ DC 2 V |
| Pulse output | |
| Maximum input values | DC 30 V, 250 mA (passive) |
| Maximum output current | 22.5 mA (active) |
| Open-circuit voltage | DC 28.8 V (active) |
| Pulse width | Adjustable: 0.05 to 2 000 ms |
| Maximum pulse rate | 10 000 Impulse/s |
| Pulse value | Adjustable |
| Assignable measured variables | <ul style="list-style-type: none"> ▪ Volume flow ▪ Mass flow ▪ Corrected volume flow |
| Frequency output | |
| Maximum input values | DC 30 V, 250 mA (passive) |
| Maximum output current | 22.5 mA (active) |
| Open-circuit voltage | DC 28.8 V (active) |
| Output frequency | Adjustable: end value frequency 2 to 10 000 Hz ($f_{\max} = 12\,500$ Hz) |
| Damping | Adjustable: 0 to 999 s |
| Pulse/pause ratio | 1:1 |
| Assignable measured variables | <ul style="list-style-type: none"> ▪ Volume flow ▪ Mass flow ▪ Corrected volume flow ▪ Flow velocity ▪ Conductivity ▪ Corrected conductivity ▪ Temperature ▪ Electronic temperature |
| Switch output | |
| Maximum input values | DC 30 V, 250 mA (passive) |
| Open-circuit voltage | DC 28.8 V (active) |
| Switching behavior | Binary, conductive or non-conductive |
| Switching delay | Adjustable: 0 to 100 s |

| | |
|-----------------------------------|--|
| Number of switching cycles | Unlimited |
| Assignable functions | <ul style="list-style-type: none"> ■ Off ■ On ■ Diagnostic behavior ■ Limit value: <ul style="list-style-type: none"> - Off - Volume flow - Mass flow - Corrected volume flow - Flow velocity - Conductivity - Corrected conductivity - Totalizer 1-3 - Temperature - Electronic temperature ■ Flow direction monitoring ■ Status <ul style="list-style-type: none"> - Empty pipe detection - Low flow cut off |

Double pulse output

| | |
|--------------------------------------|---|
| Function | Double pulse |
| Version | Open collector Can be set to: <ul style="list-style-type: none"> ■ Active ■ Passive |
| Maximum input values | DC 30 V, 250 mA (passive) |
| Open-circuit voltage | DC 28.8 V (active) |
| Voltage drop | For 22.5 mA: ≤ DC 2 V |
| Output frequency | Adjustable: 0 to 1 000 Hz |
| Damping | Adjustable: 0 to 999 s |
| Pulse/pause ratio | 1:1 |
| Assignable measured variables | <ul style="list-style-type: none"> ■ Volume flow ■ Mass flow ■ Corrected volume flow ■ Flow velocity ■ Conductivity ■ Corrected conductivity ■ Temperature ■ Electronic temperature |

Relay output

| | |
|---------------------------|--|
| Function | Switch output |
| Version | Relay output, galvanically isolated |
| Switching behavior | Can be set to: <ul style="list-style-type: none"> ■ NO (normally open), factory setting ■ NC (normally closed) |

| | |
|---|--|
| Maximum switching capacity (passive) | <ul style="list-style-type: none"> ▪ DC 30 V, 0.1 A ▪ AC 30 V, 0.5 A |
| Assignable functions | <ul style="list-style-type: none"> ▪ Off ▪ On ▪ Diagnostic behavior ▪ Limit value: <ul style="list-style-type: none"> - Off - Volume flow - Mass flow - Corrected volume flow - Flow velocity - Conductivity - Corrected conductivity - Totalizer 1-3 - Temperature - Electronic temperature ▪ Flow direction monitoring ▪ Status <ul style="list-style-type: none"> - Empty pipe detection - Low flow cut off |

User configurable input/output

One specific input or output is assigned to a user-configurable input/output (configurable I/O) during device commissioning.

The following inputs and outputs are available for assignment:

- Choice of current output: 4 to 20 mA (active), 0/4 to 20 mA (passive)
- Pulse/frequency/switch output
- Choice of current input: 4 to 20 mA (active), 0/4 to 20 mA (passive)
- Status input

The technical values correspond to those of the inputs and outputs described in this section.

Signal on alarm

Depending on the interface, failure information is displayed as follows:

Current output 0/4 to 20 mA

4 to 20 mA

| | |
|---------------------|--|
| Failure mode | Choose from: <ul style="list-style-type: none"> ▪ 4 to 20 mA in accordance with NAMUR recommendation NE 43 ▪ 4 to 20 mA in accordance with US ▪ Min. value: 3.59 mA ▪ Max. value: 22.5 mA ▪ Freely definable value between: 3.59 to 22.5 mA ▪ Actual value ▪ Last valid value |
|---------------------|--|

0 to 20 mA

| | |
|---------------------|---|
| Failure mode | Choose from: <ul style="list-style-type: none"> ▪ Maximum alarm: 22 mA ▪ Freely definable value between: 0 to 20.5 mA |
|---------------------|---|

Pulse/frequency/switch output

| | |
|---------------------|--|
| Pulse output | |
| Failure mode | Choose from: <ul style="list-style-type: none"> ▪ Actual value ▪ No pulses |

| Frequency output | |
|------------------|--|
| Failure mode | Choose from: <ul style="list-style-type: none"> ▪ Actual value ▪ 0 Hz ▪ Defined value (f_{max} 2 to 12 500 Hz) |
| Switch output | |
| Failure mode | Choose from: <ul style="list-style-type: none"> ▪ Current status ▪ Open ▪ Closed |

Relay output

| | |
|--------------|---|
| Failure mode | Choose from: <ul style="list-style-type: none"> ▪ Current status ▪ Open ▪ Closed |
|--------------|---|

Local display

| | |
|--------------------|---|
| Plain text display | With information on cause and remedial measures |
| Backlight | Red backlighting indicates a device error. |

 Status signal as per NAMUR recommendation NE 107

Interface/protocol


- Via digital communication:
 - HART protocol
- Via service interface
 - CDI-RJ45 service interface
 - WLAN interface

| | |
|--------------------|---|
| Plain text display | With information on cause and remedial measures |
|--------------------|---|

Web server


| | |
|--------------------|---|
| Plain text display | With information on cause and remedial measures |
|--------------------|---|

Light emitting diodes (LED)

| | |
|--------------------|--|
| Status information | Status indicated by various light emitting diodes The following information is displayed depending on the device version: <ul style="list-style-type: none"> ▪ Supply voltage active ▪ Data transmission active ▪ Device alarm/error has occurred  Diagnostic information via light emitting diodes |
|--------------------|--|

Low flow cut off The switch points for low flow cut off are user-selectable.

Galvanic isolation The outputs are galvanically isolated from one another and from earth (PE).

| | | |
|------------------------|---|---|
| Protocol-specific data | Manufacturer ID | 0x11 |
| | Device type ID | 0x3C |
| | HART protocol revision | 7 |
| | Device description files (DTM, DD) | Information and files under: www.endress.com |
| | HART load | Min. 250 Ω |
| | System integration | Information on system integration →  74. <ul style="list-style-type: none"> ▪ Measured variables via HART protocol ▪ Burst Mode functionality |

16.5 Power supply

Terminal assignment →  36

| Supply voltage | Order code for "Power supply" | terminal voltage | | Frequency range |
|----------------|-------------------------------|------------------|------------|-----------------|
| | | | | |
| | Option D | DC24 V | ±20% | – |
| | Option E | AC100 to 240 V | –15...+10% | 50/60 Hz, ±4 Hz |
| | Option I | DC24 V | ±20% | – |
| | | AC100 to 240 V | –15...+10% | 50/60 Hz, ±4 Hz |

Power consumption **Transmitter**
Max. 10 W (active power)


Current consumption **Transmitter**

- Max. 400 mA (24 V)
- Max. 200 mA (110 V, 50/60 Hz; 230 V, 50/60 Hz)

Power supply failure

- Totalizers stop at the last value measured.
- Configuration is retained in the plug-in memory (HistoROM DAT).
- Error messages (incl. total operated hours) are stored.

Electrical connection →  36

Potential equalization →  39

terminals Spring-loaded terminals: Suitable for strands and strands with ferrules.
Conductor cross-section 0.2 to 2.5 mm² (24 to 12 AWG).

Cable entries

- Cable gland: M20 × 1.5 with cable ∅ 6 to 12 mm (0.24 to 0.47 in)
- Thread for cable entry:
 - NPT ½"
 - G ½"
 - M20

Cable specification → 33

16.6 Performance characteristics

- Reference operating conditions
- Error limits following DIN EN 29104, in future ISO 20456
 - Water, typically +15 to +45 °C (+59 to +113 °F); 0.5 to 7 bar (73 to 101 psi)
 - Data as indicated in the calibration protocol
 - Accuracy based on accredited calibration rigs according to ISO 17025


Maximum measured error **Error limits under reference operating conditions**

o.r. = of reading

Volume flow

- ±0.5 % o.r. ± 1 mm/s (0.04 in/s)
- Optional: ±0.2 % o.r. ± 2 mm/s (0.08 in/s)

i Fluctuations in the supply voltage do not have any effect within the specified range.

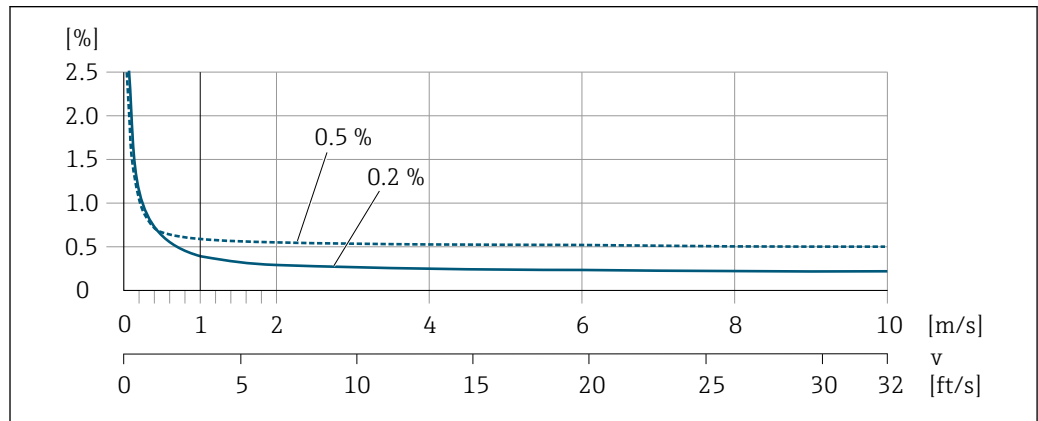

38 Maximum measured error in % o.r.

Electrical conductivity

Max. measured error not specified.

Accuracy of outputs

The outputs have the following base accuracy specifications.

Current output

| | |
|----------|-------|
| Accuracy | ±5 µA |
|----------|-------|

Pulse/frequency output

o.r. = of reading

| | |
|----------|---|
| Accuracy | Max. ±50 ppm o.r. (over the entire ambient temperature range) |
|----------|---|

Repeatability o.r. = of reading

Volume flow

Max. ±0.1 % o.r. ± 0.5 mm/s (0.02 in/s)

Electrical conductivityMax. ± 5 % o.r.

Influence of ambient temperature

Current output

| | |
|-------------------------|-------------------------------------|
| Temperature coefficient | Max. 1 $\mu\text{A}/^\circ\text{C}$ |
|-------------------------|-------------------------------------|

Pulse/frequency output

| | |
|-------------------------|---|
| Temperature coefficient | No additional effect. Included in accuracy. |
|-------------------------|---|

16.7 Installation

"Mounting requirements"

16.8 Environment

Ambient temperature range

→  23**Temperature tables**

Observe the interdependencies between the permitted ambient and fluid temperatures when operating the device in hazardous areas.



For detailed information on the temperature tables, see the separate document entitled "Safety Instructions" (XA) for the device.

Storage temperature

-50 to +80 °C (-58 to +176 °F)

- Protect the measuring device against direct sunlight during storage in order to avoid unacceptably high surface temperatures.
- Select a storage location where moisture cannot collect in the measuring device as fungus or bacteria infestation can damage the liner.
- If protection caps or protective covers are mounted these should never be removed before installing the measuring device.

Degree of protection

Measuring device


- As standard: IP66/67, type 4X enclosure
- When housing is open: IP20, type 1 enclosure
- Display module: IP20, type 1 enclosure

External WLAN antenna

IP67


Vibration resistance

- Vibration, sinusoidal according to IEC 60068-2-6
 - 2 to 8.4 Hz, 3.5 mm peak
 - 8.4 to 2 000 Hz, 1 g peak
- Vibration broad-band random, according to IEC 60068-2-64
 - 10 to 200 Hz, 0.003 g^2/Hz
 - 200 to 2 000 Hz, 0.001 g^2/Hz
 - Total: 1.54 g rms


| | |
|-------------------------------------|--|
| Shock resistance | Shock, half-sine according to IEC 60068-2-27 6 ms 50 g |
| Impact resistance | Rough handling shocks according to IEC 60068-2-31 |
| Mechanical load | <ul style="list-style-type: none"> ■ Protect the transmitter housing against mechanical effects, such as shock or impact. ■ Never use the transmitter housing as a ladder or climbing aid. |
| Electromagnetic compatibility (EMC) | <p>As per IEC/EN 61326 and NAMUR Recommendation 21 (NE 21)</p> <p> Details are provided in the Declaration of Conformity.</p> |

16.9 Process

| | |
|--------------------------|--|
| Medium temperature range | <ul style="list-style-type: none"> ■ -20 to +150 °C (-4 to +302 °F) for PFA, DN 25 to 200 (1 to 8") ■ -20 to +180 °C (-4 to +356 °F) for PFA high-temperature, DN 25 to 200 (1 to 8") ■ -40 to +130 °C (-40 to +266 °F) for PTFE, DN 15 to 600 (½ to 24") |
|--------------------------|--|

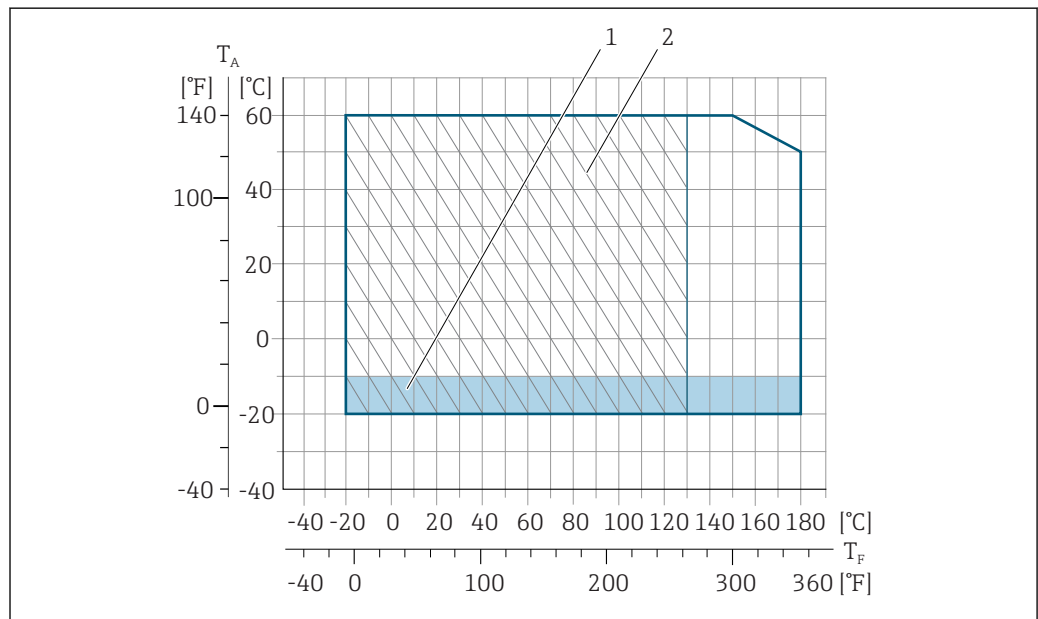

A0029347


 39 PFA

T_A Ambient temperature range

T_F Fluid temperature

1 Colored area: the ambient temperature range -10 to -20 °C (+14 to -4 °F) applies to stainless flanges only

2 Hatched area: harsh environment only for fluid temperature range -20 to +130 °C (-4 to +266 °F)

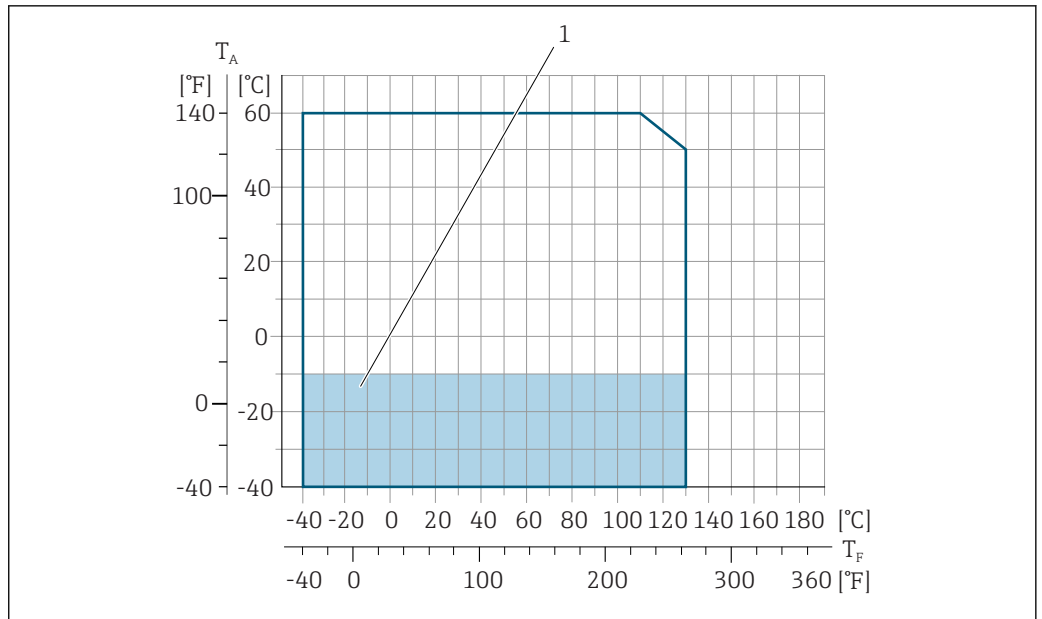

A0029808


40 PTFE

T_A Ambient temperature range

T_F Fluid temperature

1 Colored area: the ambient temperature range of -10 to -40 °C (+14 to -40 °F) applies to stainless flanges only

Conductivity $\geq 5 \mu\text{S/cm}$ for liquids in general. Stronger filter damping is required for very low conductivity values.

Pressure-temperature ratings  An overview of the pressure-temperature ratings for the process connections is provided in the "Technical Information" document

Pressure tightness "-" = no specifications possible

Liner: PFA

| Nominal diameter | | Limit values for absolute pressure in [mbar] ([psi]) for medium temperatures: | | |
|------------------|------|---|------------------|-----------------------------------|
| [mm] | [in] | +25 °C (+77 °F) | +80 °C (+176 °F) | +100 to +180 °C (+212 to +356 °F) |
| 25 | 1 | 0 (0) | 0 (0) | 0 (0) |
| 32 | - | 0 (0) | 0 (0) | 0 (0) |
| 40 | 1 ½ | 0 (0) | 0 (0) | 0 (0) |
| 50 | 2 | 0 (0) | 0 (0) | 0 (0) |
| 65 | - | 0 (0) | 0 (0) | 0 (0) |
| 80 | 3 | 0 (0) | 0 (0) | 0 (0) |
| 100 | 4 | 0 (0) | 0 (0) | 0 (0) |
| 125 | - | 0 (0) | 0 (0) | 0 (0) |
| 150 | 6 | 0 (0) | 0 (0) | 0 (0) |
| 200 | 8 | 0 (0) | 0 (0) | 0 (0) |

Liner: PTFE

| Nominal diameter | | Limit values for absolute pressure in [mbar] ([psi]) for medium temperatures: | | | |
|------------------|------|---|------------------|-------------------|-------------------|
| [mm] | [in] | +25 °C (+77 °F) | +80 °C (+176 °F) | +100 °C (+212 °F) | +130 °C (+266 °F) |
| 15 | ½ | 0 (0) | 0 (0) | 0 (0) | 100 (1.45) |
| 25 | 1 | 0 (0) | 0 (0) | 0 (0) | 100 (1.45) |
| 32 | – | 0 (0) | 0 (0) | 0 (0) | 100 (1.45) |
| 40 | 1 ½ | 0 (0) | 0 (0) | 0 (0) | 100 (1.45) |
| 50 | 2 | 0 (0) | 0 (0) | 0 (0) | 100 (1.45) |
| 65 | – | 0 (0) | – | 40 (0.58) | 130 (1.89) |
| 80 | 3 | 0 (0) | – | 40 (0.58) | 130 (1.89) |
| 100 | 4 | 0 (0) | – | 135 (1.96) | 170 (2.47) |
| 125 | – | 135 (1.96) | – | 240 (3.48) | 385 (5.58) |
| 150 | 6 | 135 (1.96) | – | 240 (3.48) | 385 (5.58) |
| 200 | 8 | 200 (2.90) | – | 290 (4.21) | 410 (5.95) |
| 250 | 10 | 330 (4.79) | – | 400 (5.80) | 530 (7.69) |
| 300 | 12 | 400 (5.80) | – | 500 (7.25) | 630 (9.14) |
| 350 | 14 | 470 (6.82) | – | 600 (8.70) | 730 (10.6) |
| 400 | 16 | 540 (7.83) | – | 670 (9.72) | 800 (11.6) |
| 450 | 18 | No negative pressure permitted! | | | |
| 500 | 20 | | | | |
| 600 | 24 | | | | |

Flow limit


The diameter of the pipe and the flow rate determine the nominal diameter of the sensor. The optimum velocity of flow is between 2 to 3 m/s (6.56 to 9.84 ft/s). Also match the velocity of flow (v) to the physical properties of the fluid:


- v < 2 m/s (6.56 ft/s): for abrasive fluids (e.g. potter's clay, lime milk, ore slurry)
- v > 2 m/s (6.56 ft/s): for fluids producing buildup (e.g. wastewater sludge)

 A necessary increase in the flow velocity can be achieved by reducing the sensor nominal diameter.


 For an overview of the full scale values for the measuring range, see the "Measuring range" section →  157

Pressure loss

- No pressure loss occurs if the sensor is installed in a pipe with the same nominal diameter.
- Pressure losses for configurations incorporating adapters according to DIN EN 545 →  25

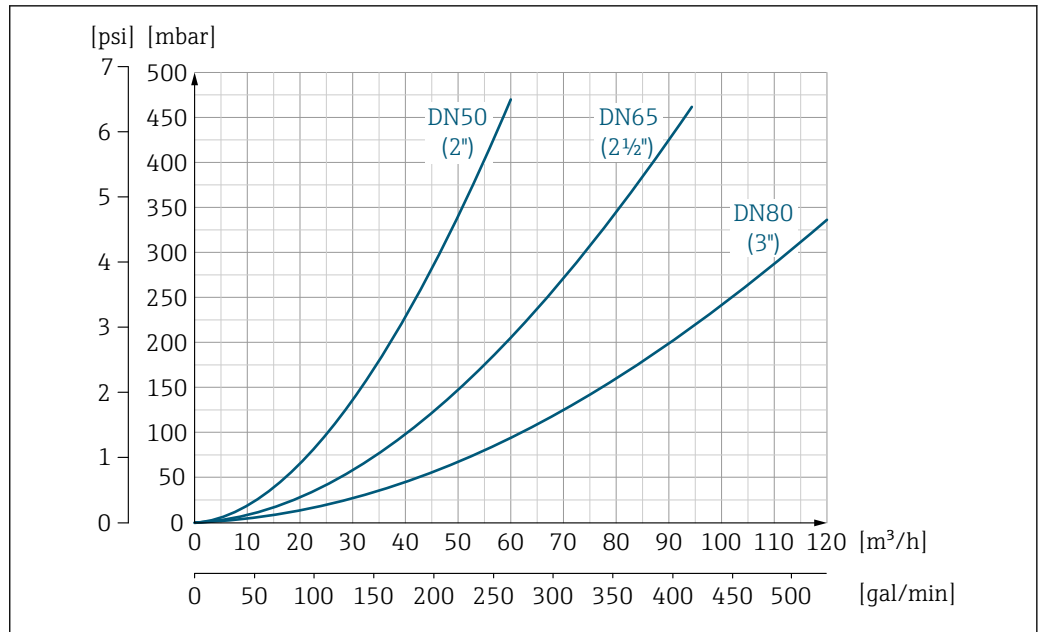

41 Pressure loss DN 50 to 80 (2 to 3") in the case of order code for "Design", option C "Insertion length short ISO/DVGW to DN300, without inlet/outlet runs, constricted meas.tube"

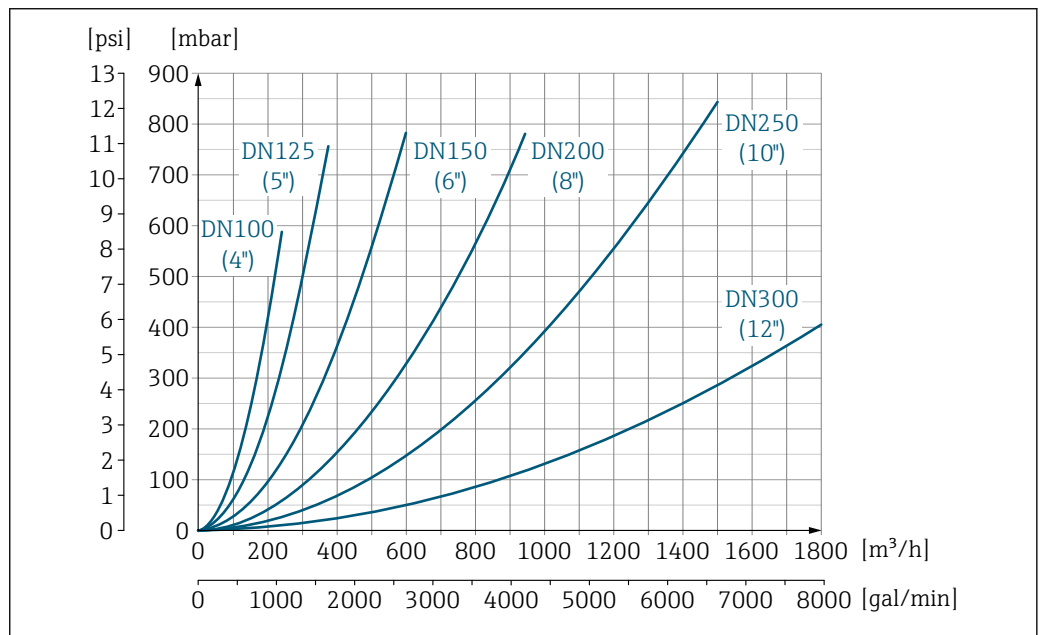

42 Pressure loss DN 100 to 300 (4 to 12") in the case of order code for "Design", option C "Insertion length short ISO/DVGW to DN300, without inlet/outlet runs, constricted meas.tube"

System pressure → 24

Vibrations → 24

16.10 Mechanical construction

Design, dimensions



For the dimensions and installation lengths of the device, see the "Technical Information" document, "Mechanical construction" section.

Weight All values (weight exclusive of packaging material) refer to devices for standard pressure ratings. Weight specifications including transmitter as per order code for "Housing", option A "Aluminum, coated".

Different values due to different transmitter versions:
 Transmitter version for the hazardous area
 (Order code for "Housing", option A "Aluminum, coated"; Ex d): +2 kg (+4.4 lbs)

Weight in SI units

| Nominal diameter | | EN (DIN), AS ¹⁾ | | ASME | | JIS | |
|------------------|------|----------------------------|-------|-----------------|------|-----------------|------|
| [mm] | [in] | Pressure rating | [kg] | Pressure rating | [kg] | Pressure rating | [kg] |
| 15 | ½ | PN 40 | 7.2 | Class 150 | 7.2 | 10K | 4.5 |
| 25 | 1 | PN 40 | 8.0 | Class 150 | 8.0 | 10K | 5.3 |
| 32 | - | PN 40 | 8.7 | Class 150 | - | 10K | 5.3 |
| 40 | 1 ½ | PN 40 | 10.1 | Class 150 | 10.1 | 10K | 6.3 |
| 50 | 2 | PN 40 | 11.3 | Class 150 | 11.3 | 10K | 7.3 |
| 65 | - | PN 16 | 12.7 | Class 150 | - | 10K | 9.1 |
| 80 | 3 | PN 16 | 14.7 | Class 150 | 14.7 | 10K | 10.5 |
| 100 | 4 | PN 16 | 16.7 | Class 150 | 16.7 | 10K | 12.7 |
| 125 | - | PN 16 | 22.2 | Class 150 | - | 10K | 19 |
| 150 | 6 | PN 16 | 26.2 | Class 150 | 26.2 | 10K | 22.5 |
| 200 | 8 | PN 10 | 45.7 | Class 150 | 45.7 | 10K | 39.9 |
| 250 | 10 | PN 10 | 65.7 | Class 150 | 75.7 | 10K | 67.4 |
| 300 | 12 | PN 10 | 70.7 | Class 150 | 111 | 10K | 70.3 |
| 350 | 14 | PN 10 | 105.7 | Class 150 | 176 | 10K | 79 |
| 400 | 16 | PN 10 | 120.7 | Class 150 | 206 | 10K | 100 |
| 450 | 18 | PN 10 | 161.7 | Class 150 | 256 | 10K | 128 |
| 500 | 20 | PN 10 | 156.7 | Class 150 | 286 | 10K | 142 |
| 600 | 24 | PN 10 | 208.7 | Class 150 | 406 | 10K | 188 |

1) For flanges to AS, only DN 25 and 50 are available.

Weight in US units

| Nominal diameter | | ASME | |
|------------------|------|-----------------|-------|
| [mm] | [in] | Pressure rating | [lbs] |
| 15 | ½ | Class 150 | 15.9 |
| 25 | 1 | Class 150 | 17.6 |
| 40 | 1 ½ | Class 150 | 22.3 |
| 50 | 2 | Class 150 | 24.9 |
| 80 | 3 | Class 150 | 32.4 |
| 100 | 4 | Class 150 | 36.8 |
| 150 | 6 | Class 150 | 57.7 |
| 200 | 8 | Class 150 | 101 |
| 250 | 10 | Class 150 | 167 |
| 300 | 12 | Class 150 | 244 |

| Nominal diameter | | ASME | |
|------------------|------|-----------------|-------|
| [mm] | [in] | Pressure rating | [lbs] |
| 350 | 14 | Class 150 | 387 |
| 400 | 16 | Class 150 | 454 |
| 450 | 18 | Class 150 | 564 |
| 500 | 20 | Class 150 | 630 |
| 600 | 24 | Class 150 | 895 |

Measuring tube specification

| Nominal diameter | | Pressure rating | | | | | Process connection internal diameter | | | |
|------------------|------|-----------------|-----------|---------|---------|-------|--------------------------------------|------|------|------|
| | | EN (DIN) | ASME | AS 2129 | AS 4087 | JIS | PFA | | PTFE | |
| [mm] | [in] | [bar] | [psi] | [bar] | [bar] | [bar] | [mm] | [in] | [mm] | [in] |
| 15 | ½ | PN 40 | Class 150 | - | - | 20K | - | - | 15 | 0.59 |
| 25 | 1 | PN 40 | Class 150 | Table E | - | 20K | 23 | 0.91 | 26 | 1.02 |
| 32 | - | PN 40 | - | - | - | 20K | 32 | 1.26 | 35 | 1.38 |
| 40 | 1 ½ | PN 40 | Class 150 | - | - | 20K | 36 | 1.42 | 41 | 1.61 |
| 50 | 2 | PN 40 | Class 150 | Table E | PN 16 | 10K | 48 | 1.89 | 52 | 2.05 |
| 65 | - | PN 16 | - | - | - | 10K | 63 | 2.48 | 67 | 2.64 |
| 80 | 3 | PN 16 | Class 150 | - | - | 10K | 75 | 2.95 | 80 | 3.15 |
| 100 | 4 | PN 16 | Class 150 | - | - | 10K | 101 | 3.98 | 104 | 4.09 |
| 125 | - | PN 16 | - | - | - | 10K | 126 | 4.96 | 129 | 5.08 |
| 150 | 6 | PN 16 | Class 150 | - | - | 10K | 154 | 6.06 | 156 | 6.14 |
| 200 | 8 | PN 10 | Class 150 | - | - | 10K | 201 | 7.91 | 202 | 7.95 |
| 250 | 10 | PN 10 | Class 150 | - | - | 10K | - | - | 256 | 10.1 |
| 300 | 12 | PN 10 | Class 150 | - | - | 10K | - | - | 306 | 12.0 |
| 350 | 14 | PN 10 | Class 150 | - | - | 10K | - | - | 337 | 13.3 |
| 400 | 16 | PN 10 | Class 150 | - | - | 10K | - | - | 387 | 15.2 |
| 450 | 18 | PN 10 | Class 150 | - | - | 10K | - | - | 432 | 17.0 |
| 500 | 20 | PN 10 | Class 150 | - | - | 10K | - | - | 487 | 19.2 |
| 600 | 24 | PN 10 | Class 150 | - | - | 10K | - | - | 593 | 23.3 |

Materials

Transmitter housing


Order code for "Housing":

Option **A** "Aluminum, coated": aluminum, AlSi10Mg, coated*Window material*

Order code for "Housing":

Option **A** "Aluminum, coated": glass

Cable entries/cable glands

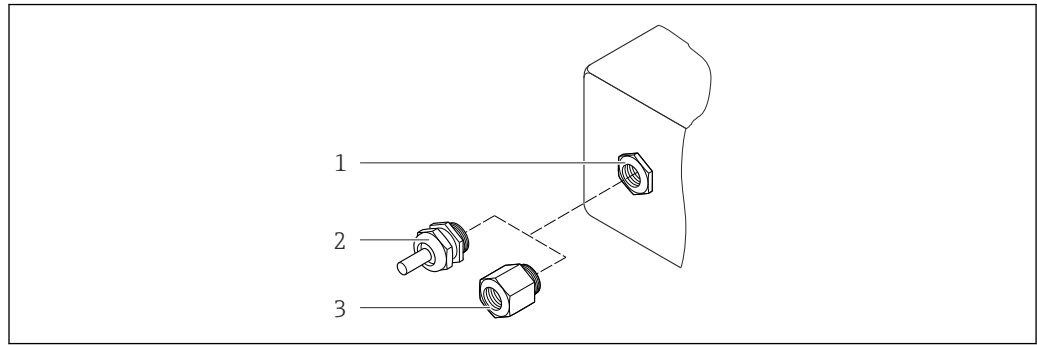

A0020640

43 Possible cable entries/cable glands

- 1 Female thread M20 × 1.5
- 2 Cable gland M20 × 1.5
- 3 Adapter for cable entry with internal thread G ½" or NPT ½"

Order code for "Housing", option A "Aluminum, coated"

The various cable entries are suitable for hazardous and non-hazardous areas.

| Cable entry/cable gland | Material |
|---|--|
| Cable gland M20 × 1.5 | Plastic/nickel-plated brass |
| Adapter for cable entry with internal thread G ½" | Nickel-plated brass |
| Adapter for cable entry with internal thread NPT ½" | |
| Device plug connectors | Plug M12 × 1 <ul style="list-style-type: none"> ▪ Socket: Stainless steel, 1.4404 (316L) ▪ Contact housing: Polyamide ▪ Contacts: Gold-plated brass |

Sensor housing

- DN 15 to 300 (½ to 12"): coated aluminum AlSi10Mg
- DN 350 to 600 (14 to 24"): carbon steel with protective varnish

Measuring tubes

Stainless steel, 1.4301/304/1.4306/304L; for flanges made of carbon with Al/Zn protective coating (DN 15 to 300 (½ to 12")) or protective varnish (DN 350 to 600 (14 to 24"))

Liner

- PFA
- PTFE

Process connections

EN 1092-1 (DIN 2501)

Stainless steel, 1.4571 (F316L); carbon steel, E250C³⁾/S235JRG2/P245GH

ASME B16.5

Stainless steel, F316L; carbon steel, A105³⁾

JIS B2220

Stainless steel, 1.0425 (F316L)³⁾; carbon steel, A105/A350 LF2

3) DN 15 to 300 (½ to 12") with Al/Zn protective coating; DN 350 to 600 (14 to 24") with protective varnish

AS 2129 Table E

- DN 25 (1"): carbon steel, A105/S235JRG2
- DN 40 (1 ½"): carbon steel, A105/S275JR

AS 4087 PN 16

Carbon steel, A105/S275JR

Electrodes

Stainless steel, 1.4435 (F316L); Alloy C22, 2.4602 (UNS N06022); platinum; tantalum; titanium

Seals

As per DIN EN 1514-1, form IBC

Accessories

Protective cover

Stainless steel, 1.4404 (316L)

External WLAN antenna

- Antenna: ASA plastic (acrylic ester-styrene-acrylonitrile) and nickel-plated brass
- Adapter: Stainless steel and nickel-plated brass
- Cable: Polyethylene
- Plug: Nickel-plated brass
- Angle bracket: Stainless steel

Ground disks

Stainless steel, 1.4435 (F316L); Alloy C22, 2.4602 (UNS N06022); tantalum; titanium

Fitted electrodes

Measuring electrodes, reference electrodes and electrodes for empty pipe detection:

- Standard: stainless steel, 1.4435 (F316L); Alloy C22, 2.4602 (UNS N06022); tantalum, titanium
- Optional: only platinum measuring electrodes

Surface roughness

Stainless steel electrodes, 1.4435 (F316L); Alloy C22, 2.4602 (UNS N06022); platinum; tantalum; titanium:

≤ 0.3 to 0.5 μm (11.8 to 19.7 μin)

(All data relate to parts in contact with fluid)

Liner with PFA:

≤ 0.4 μm (15.7 μin)

(All data relate to parts in contact with fluid)

16.11 Operability

Languages

Can be operated in the following languages:



- Via local operation
 - English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish, Chinese, Japanese, Korean, Bahasa (Indonesian), Vietnamese, Czech, Swedish
- Via Web browser
 - English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish, Chinese, Japanese, Korean, Bahasa (Indonesian), Vietnamese, Czech, Swedish
- Via "FieldCare", "DeviceCare" operating tool: English, German, French, Spanish, Italian, Chinese, Japanese


Local operation

Via display module


Two display modules are available:

- Order code for "Display; operation", option **F** "4-line, illuminated, graphic display; touch control"
- Order code for "Display; operation", option **G** "4-line, illuminated, graphic display; touch control + WLAN"

 Information about WLAN interface →  68

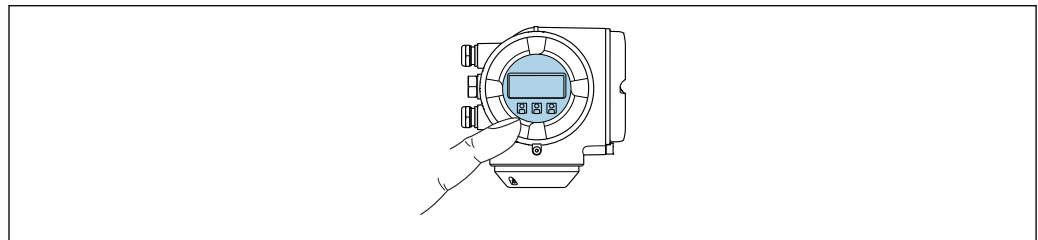




A0026785

 44 Operation with touch control



Display elements

   - 4-line, illuminated, graphic display
- White background lighting; switches to red in event of device errors
- Format for displaying measured variables and status variables can be individually configured
- Permitted ambient temperature for the display: -20 to +60 °C (-4 to +140 °F)
The readability of the display may be impaired at temperatures outside the temperature range.


Operating elements

- External operation via touch control (3 optical keys) without opening the housing: , , 
- Operating elements also accessible in the various zones of the hazardous area

Via remote display and operating module DKX001

 The remote display and operating module DKX001 is available as an optional extra →  154.

- The measuring device is always supplied with a dummy cover when the remote display and operating module DKX001 is ordered directly with the measuring device. Display or operation at the transmitter is not possible in this case.
- If ordered subsequently, the remote display and operating module DKX001 may not be connected at the same time as the existing measuring device display module. Only one display or operation unit may be connected to the transmitter at any one time.

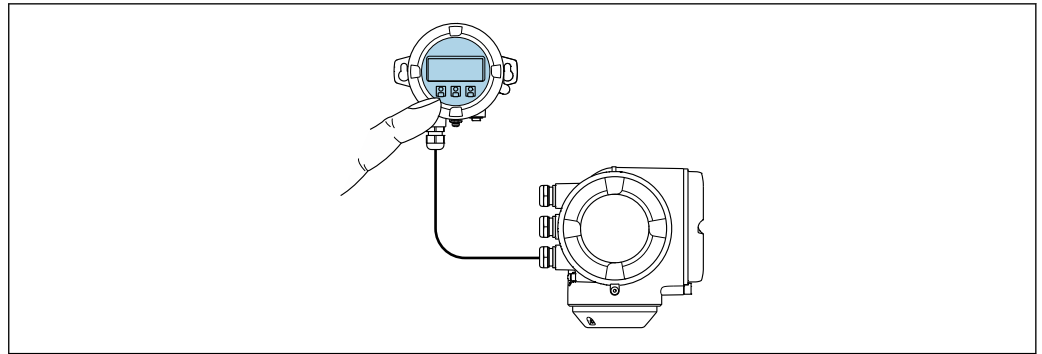

A0026786

45 Operation via remote display and operating module DKX001

Display and operating elements

The display and operating elements correspond to those of the display module .

Material

The housing material of the display and operating module DKX001 depends on the choice of transmitter housing material.

| Transmitter housing | | Remote display and operating module |
|-----------------------------|------------------|-------------------------------------|
| Order code for "Housing" | Material | Material |
| Option A "Aluminum, coated" | AlSi10Mg, coated | AlSi10Mg, coated |

Cable entry

Corresponds to the choice of transmitter housing, order code for "Electrical connection".

Connecting cable

Dimensions



Information on the dimensions:


"Mechanical construction" section of the "Technical Information" document.


Remote operation → 67

Service interface → 68

Supported operating tools Different operating tools can be used for local or remote access to the measuring device. Depending on the operating tool used, access is possible with different operating units and via a variety of interfaces.

| Supported operating tools | Operating unit | Interface | Additional information |
|---------------------------|--|---|----------------------------------|
| Web browser | Notebook, PC or tablet with Web browser | <ul style="list-style-type: none"> ▪ CDI-RJ45 service interface ▪ WLAN interface | Special Documentation for device |
| DeviceCare SFE100 | Notebook, PC or tablet with Microsoft Windows system | <ul style="list-style-type: none"> ▪ CDI-RJ45 service interface ▪ WLAN interface ▪ Fieldbus protocol | → 155 |
 
| Supported operating tools | Operating unit | Interface | Additional information |
|---------------------------|--|---|--|
| FieldCare SFE500 | Notebook, PC or tablet with Microsoft Windows system | <ul style="list-style-type: none"> ■ CDI-RJ45 service interface ■ WLAN interface ■ Fieldbus protocol | →  155 |
| Device Xpert | Field Xpert SFX 100/350/370 | HART and FOUNDATION Fieldbus fieldbus protocol | Operating Instructions BA01202S Device description files: Use update function of handheld terminal |

 Other operating tools based on FDT technology with a device driver such as DTM/iDTM or DD/EDD can be used for device operation. These operating tools are available from the individual manufacturers. Integration into the following operating tools, among others, is supported:

- FactoryTalk AssetCentre (FTAC) by Rockwell Automation → www.rockwellautomation.com
- Process Device Manager (PDM) by Siemens → www.siemens.com
- Asset Management Solutions (AMS) by Emerson → www.emersonprocess.com
- FieldCommunicator 375/475 by Emerson → www.emersonprocess.com
- Field Device Manager (FDM) by Honeywell → www.honeywellprocess.com
- FieldMate by Yokogawa → www.yokogawa.com
- PACTWare → www.pactware.com

The associated device description files are available at: www.endress.com → Downloads


Web server



Thanks to the integrated Web server, the device can be operated and configured via a Web browser and via a service interface (CDI-RJ45) or via a WLAN interface. The structure of the operating menu is the same as for the local display. In addition to the measured values, status information on the device is also displayed and allows the user to monitor the status of the device. Furthermore the device data can be managed and the network parameters can be configured.

A device that has a WLAN interface (can be ordered as an option) is required for the WLAN connection: order code for "Display; operation", option **G** "4-line, illuminated; touch control + WLAN". The device acts as an Access Point and enables communication by computer or a mobile handheld terminal.


Supported functions

Data exchange between the operating unit (such as a notebook for example) and the measuring device:

- Upload the configuration from the measuring device (XML format, configuration backup)
- Save the configuration to the measuring device (XML format, restore configuration)
- Export event list (.csv file)
- Export parameter settings (.csv file or PDF file, document the measuring point configuration)
- Export the Heartbeat verification log (PDF file, only available with the "Heartbeat Verification" application package)
- Flash firmware version for device firmware upgrade, for instance
- Download driver for system integration
- Visualize up to 1000 saved measured values (only available with the **Extended HistoROM** application package →  182)

 Webserver special documentation →  184

HistoROM data management The measuring device features HistoROM data management. HistoROM data management comprises both the storage and import/export of key device and process data, making operation and servicing far more reliable, secure and efficient.

 When the device is delivered, the factory settings of the configuration data are stored as a backup in the device memory. This memory can be overwritten with an updated data record, for example after commissioning.

Additional information on the data storage concept

There are different types of data storage units in which device data are stored and used by the device:

| | Device memory | T-DAT | S-DAT |
|-------------------------|--|--|---|
| Available data | <ul style="list-style-type: none"> ▪ Event logbook such as diagnostic events for example ▪ Parameter data record backup ▪ Device firmware package | <ul style="list-style-type: none"> ▪ Measured value logging ("Extended HistoROM" order option) ▪ Current parameter data record (used by firmware at run time) ▪ Maximum indicators (min/max values) ▪ Totalizer values | <ul style="list-style-type: none"> ▪ Sensor data: nominal diameter etc. ▪ Serial number ▪ Calibration data ▪ Device configuration (e.g. SW options, fixed I/O or multi I/O) |
| Storage location | Fixed on the user interface board in the connection compartment | Attachable to the user interface board in the connection compartment | In the sensor plug in the transmitter neck part |

Data backup

Automatic

- The most important device data (sensor and transmitter) are automatically saved in the DAT modules
- If the transmitter or measuring device is replaced: once the T-DAT containing the previous device data has been exchanged, the new measuring device is ready for operation again immediately without any errors
- If the sensor is replaced: once the sensor has been replaced, new sensor data are transferred from the S-DAT in the measuring device and the measuring device is ready for operation again immediately without any errors
- If exchanging the electronics module (e.g. I/O electronics module): Once the electronics module has been replaced, the software of the module is compared against the current device firmware. The module software is upgraded or downgraded where necessary. The electronics module is available for use immediately afterwards and no compatibility problems occur.

Manual

Additional parameter data record (complete parameter settings) in the integrated device memory HistoROM backup for:

- Data backup function
Backup and subsequent restoration of a device configuration in the device memory HistoROM backup
- Data comparison function
Comparison of the current device configuration with the device configuration saved in the device memory HistoROM backup

Data transfer

Manual

Transfer of a device configuration to another device using the export function of the specific operating tool, e.g. with FieldCare, DeviceCare or Web server: to duplicate the configuration or to store in an archive (e.g. for backup purposes)

Event list

Automatic

- Chronological display of up to 20 event messages in the events list
- If the **Extended HistoROM** application package (order option) is enabled: up to 100 event messages are displayed in the events list along with a time stamp, plain text description and remedial measures
- The events list can be exported and displayed via a variety of interfaces and operating tools e.g. DeviceCare, FieldCare or Web server


 
Data logging



Manual

If the **Extended HistoROM** application package (order option) is enabled:

- Record up to 1 000 measured values via 1 to 4 channels
- User configurable recording interval
- Record up to 250 measured values via each of the 4 memory channels
- Export the measured value log via a variety of interfaces and operating tools e.g. FieldCare, DeviceCare or web server

16.12 Certificates and approvals

| | |
|------------------------------|---|
| CE mark | <p>The measuring system is in conformity with the statutory requirements of the applicable EU Directives. These are listed in the corresponding EU Declaration of Conformity along with the standards applied.</p> <p>Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.</p> |
| C-Tick symbol | <p>The measuring system meets the EMC requirements of the "Australian Communications and Media Authority (ACMA)".</p> |
| Ex approval | <p>The devices are certified for use in hazardous areas and the relevant safety instructions are provided in the separate "Safety Instructions" (XA) document. Reference is made to this document on the nameplate.</p> |
| Pharmaceutical compatibility | <ul style="list-style-type: none"> ■ FDA ■ USP Class VI ■ TSE/BSE certificate of suitability |
| Functional safety | <p>The measuring device can be used for flow monitoring systems (min., max., range) up to SIL 2 (single-channel architecture; order code for "Additional approval", option LA) and SIL 3 (multichannel architecture with homogeneous redundancy) and is independently evaluated and certified by the TÜV in accordance with IEC 61508.</p> <p>The following types of monitoring in safety equipment are possible: Volume flow</p> <p> Functional Safety Manual with information on the SIL device →  184</p> |

| | |
|--------------------------------|--|
| HART certification | <p>HART interface</p> <p>The measuring device is certified and registered by the FieldComm Group. The measuring system meets all the requirements of the following specifications:</p> <ul style="list-style-type: none"> ■ Certified according to HART 7 ■ The device can also be operated with certified devices of other manufacturers (interoperability) |
| Radio approval | <p>The measuring device has radio approval.</p> <p> For detailed information on the radio approval, see the Special Documentation</p> |
| Pressure Equipment Directive | <ul style="list-style-type: none"> ■ With the identification PED/G1/x (x = category) on the sensor nameplate, Endress+Hauser confirms conformity with the "Essential Safety Requirements" specified in Appendix I of the Pressure Equipment Directive 2014/68/EC. ■ Devices not bearing this marking (PED) are designed and manufactured according to good engineering practice. They meet the requirements of Art. 4, Par. 3 of the Pressure Equipment Directive 2014/68/EU. The range of application is indicated in tables 6 to 9 in Annex II of the Pressure Equipment Directive 2014/68/EC. |
| Measuring instrument approval | <p>The measuring device is qualified to OIML R117 and has an OIML Certificate of Conformity (optional).</p> |
| Additional certification | <p>PWIS-free</p> <p>PWIS = paint-wetting impairment substances</p> <p>Order code for "Service":</p> <ul style="list-style-type: none"> ■ Option HC: PWIS-free (version A) ■ Option HD: PWIS-free (version B) ■ Option HE: PWIS-free (version C) <p> For more information on PWIS-free certification, see "Test specification" document TSO1028D</p> |
| Other standards and guidelines | <ul style="list-style-type: none"> ■ EN 60529 Degrees of protection provided by enclosures (IP code) ■ EN 61010-1 Safety requirements for electrical equipment for measurement, control and laboratory use - general requirements ■ IEC/EN 61326 Emission in accordance with Class A requirements. Electromagnetic compatibility (EMC requirements). ■ NAMUR NE 21 Electromagnetic compatibility (EMC) of industrial process and laboratory control equipment ■ NAMUR NE 32 Data retention in the event of a power failure in field and control instruments with microprocessors ■ NAMUR NE 43 Standardization of the signal level for the breakdown information of digital transmitters with analog output signal. ■ NAMUR NE 53 Software of field devices and signal-processing devices with digital electronics ■ NAMUR NE 105 Specifications for integrating fieldbus devices in engineering tools for field devices |

- NAMUR NE 107
Self-monitoring and diagnosis of field devices
- NAMUR NE 131
Requirements for field devices for standard applications
- ETSI EN 300 328
Guidelines for 2.4 GHz radio components.
- EN 301489
Electromagnetic compatibility and radio spectrum matters (ERM).

16.13 Application packages



Many different application packages are available to enhance the functionality of the device. Such packages might be needed to address safety aspects or specific application requirements.

The application packages can be ordered with the device or subsequently from Endress+Hauser. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.



| Diagnostics functions | Package | Description |
|-----------------------|-------------------|---|
| | Extended HistoROM | <p>Comprises extended functions concerning the event log and the activation of the measured value memory.</p> <p>Event log: Memory volume is extended from 20 message entries (standard version) to up to 100 entries.</p> <p>Data logging (line recorder):</p> <ul style="list-style-type: none"> ■ Memory capacity for up to 1000 measured values is activated. ■ 250 measured values can be output via each of the 4 memory channels. The recording interval can be defined and configured by the user. ■ Measured value logs can be accessed via the local display or operating tool e.g. FieldCare, DeviceCare or Web server. |

| Heartbeat Technology | Package | Description |
|----------------------|------------------------------------|---|
| | Heartbeat Verification +Monitoring | <p>Heartbeat Verification Meets the requirement for traceable verification to DIN ISO 9001:2008 Chapter 7.6 a) "Control of monitoring and measuring equipment".</p> <ul style="list-style-type: none"> ■ Functional testing in the installed state without interrupting the process. ■ Traceable verification results on request, including a report. ■ Simple testing process via local operation or other operating interfaces. ■ Clear measuring point assessment (pass/fail) with high test coverage within the framework of manufacturer specifications. ■ Extension of calibration intervals according to operator's risk assessment. <p>Heartbeat Monitoring Continuously supplies data, which are characteristic of the measuring principle, to an external condition monitoring system for the purpose of preventive maintenance or process analysis. These data enable the operator to:</p> <ul style="list-style-type: none"> ■ Draw conclusions - using these data and other information - about the impact process influences (such as corrosion, abrasion, buildup etc.) have on the measuring performance over time. ■ Schedule servicing in time. ■ Monitor the process or product quality, e.g. gas pockets. |


| Package | Description |
|----------------------------------|---|
| Electrode cleaning circuit (ECC) | The electrode cleaning circuit (ECC) function has been developed to have a solution for applications where magnetite (Fe ₃ O ₄) deposits frequently occur (e.g. hot water). Since magnetite is highly conductive this build up leads to measuring errors and ultimately to the loss of signal. The application package is designed to AVOID build up of highly conductive matter and thin layers (typical of magnetite). |

| Package | Description |
|---------------|--|
| OPC-UA-Server | The application package provides the user with an integrated OPC-UA server for comprehensive instrument services for IoT and SCADA applications.  Special Documentation for the "OPC-UA-Server" application package →  184. |

16.14 Accessories

 Overview of accessories available for order →  154

16.15 Supplementary documentation

 For an overview of the scope of the associated Technical Documentation, refer to the following:

- The *W@M Device Viewer* : Enter the serial number from the nameplate (www.endress.com/deviceviewer)
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

Standard documentation **Brief Operating Instructions**

Brief Operating Instructions for the sensor

| Measuring device | Documentation code |
|------------------|--------------------|
| Proline Promag P | KA01290D |

Brief Operating Instructions for transmitter

| Measuring device | Documentation code |
|------------------|--------------------|
| Proline 300 | KA01308D |

Technical Information

| Measuring device | Documentation code |
|------------------|--------------------|
| Promag P 300 | TI01224D |

Description of device parameters

| Measuring device | Documentation code |
|------------------|--------------------|
| Promag 300 | GP01051D |

Device-dependent
additional documentation

Safety instructions

Safety instructions for electrical devices for hazardous areas.

| Contents | Documentation code |
|-----------------------|--------------------|
| ATEX/IECEX Ex d/Ex de | XA01414D |
| ATEX/IECEX Ex ec | XA01514D |
| cCSAus XP | XA01515D |
| cCSAus Ex d/ Ex de | XA01516D |
| cCSAus Ex nA | XA01517D |
| INMETRO Ex d/Ex de | XA01518D |
| INMETRO Ex ec | XA01519D |
| NEPSI Ex d/Ex de | XA01520D |
| NEPSI Ex nA | XA01521D |

Remote display and operating module DKX001

| Contents | Documentation code |
|------------------|--------------------|
| ATEX/IECEX Ex i | XA01494D |
| ATEX/IECEX Ex ec | XA01498D |
| cCSAus IS | XA01499D |
| cCSAus Ex nA | XA01513D |
| INMETRO Ex i | XA01500D |
| INMETRO Ex ec | XA01501D |
| NEPSI Ex i | XA01502D |
| NEPSI Ex nA | XA01503D |

Special Documentation

| Contents | Documentation code |
|---|--------------------|
| Information on the Pressure Equipment Directive | SD01614D |
| Functional Safety Manual | SD01740D |
| Radio approvals for WLAN interface for A309/A310 display module | SD01793D |
| Remote display and operating module DKX001 | SD01763D |
| OPC-UA-Server | SD02043D |

| Contents | Documentation code |
|----------------------|--------------------|
| Heartbeat Technology | SD01640D |
| Web server | SD01654D |

Installation Instructions

| Contents | Comment |
|---|---|
| Installation instructions for spare part sets and accessories | <ul style="list-style-type: none"> ▪ Access the overview of all the available spare part sets via <i>W@M Device Viewer</i> → 📖 152 ▪ Accessories available for order with Installation Instructions → 📖 154 |

Index

A

- Access authorization to parameters
 - Read access 59
 - Write access 59
- Access code 59
 - Incorrect input 59
- Adapters 25
- Adapting the diagnostic behavior 138
- Adapting the status signal 138
- Additional certification 181
- Ambient temperature
 - Influence 167
- Ambient temperature range 23
- AMS Device Manager 72
 - Function 72
- Application 157
- Applicator 157
- Approvals 180

B

- Burst Mode 76

C

- C-Tick symbol 180
- Cable entries
 - Technical data 165
- Cable entry
 - Degree of protection 45
- CE mark 10, 180
- Certificates 180
- Checklist
 - Post-connection check 46
 - Post-installation check 32
- Cleaning
 - Exterior cleaning 151
 - Interior cleaning 151
- Commissioning 78
 - Advanced settings 102
 - Configuring the measuring device 78
- Communication-specific data 74
- Conductivity 169
- Connecting cable 33, 34
- Connecting the measuring device 36
- Connecting the signal cables 36
- Connecting the supply voltage cables 36
- Connection
 - see Electrical connection
- Connection examples, potential equalization 39, 40
- Connection preparations 36
- Connection tools 33
- Context menu
 - Calling up 55
 - Closing 55
 - Explanation 55
- Current consumption 165

D

- Declaration of Conformity 10
- Define access code 116, 117
- Degree of protection 45, 167
- Designated use 9
- Device components 14
- Device description files 74
- Device documentation
 - Supplementary documentation 8
- Device locking, status 119
- Device name
 - Sensor 17
 - Transmitter 16
- Device repair 152
- Device revision 74
- Device type ID 74
- DeviceCare 72
 - Device description file 74
- Diagnostic behavior
 - Explanation 134
 - Symbols 134
- Diagnostic information
 - Design, description 134, 137
 - DeviceCare 137
 - FieldCare 137
 - Light emitting diodes 131
 - Onsite display 133
 - Overview 139
 - Remedial measures 139
 - Web browser 135
- Diagnostic list 144
- Diagnostic message 133
- Diagnostics
 - Symbols 133
- DIP switches
 - see Write protection switch
- Direct access 57
- Direct access code 52
- Disabling write protection 116
- Display
 - see Onsite display
- Display and operating module DKX001 176
- Display area
 - For operational display 50
 - In the navigation view 52
- Display values
 - For locking status 119
- Disposal 153
- Document
 - Function 6
 - Symbols used 6
- Document function 6
- Down pipe 21

E

- ECC 108

- Editing view 53
 - Input screen 54
 - Using operating elements 54
- Electrical connection
 - CommuBox FXA195 (USB) 67
 - Computer with Web browser (e.g. Internet Explorer) 67
 - Degree of protection 45
 - Field Communicator 475 67
 - Field Xpert SFX350/SFX370 67
 - Measuring device 33
 - Operating tool (e.g. FieldCare, AMS Device Manager, SIMATIC PDM) 67
 - Operating tools
 - Via HART protocol 67
 - Via service interface (CDI-RJ45) 68
 - Via WLAN interface 68
 - VIATOR Bluetooth modem 67
 - Web server 68
 - WLAN interface 68
- Electromagnetic compatibility 168
- Electronics module 14
- Enabling write protection 116
- Enabling/disabling the keypad lock 60
- Endress+Hauser services
 - Maintenance 151
 - Repair 152
- Environment
 - Ambient temperature range 23
 - Impact resistance 168
 - Mechanical load 168
 - Shock resistance 168
 - Storage temperature 167
 - Vibration resistance 167
- Error messages
 - see Diagnostic messages
- Event list 144
- Event logbook 144
- Ex approval 180
- Extended order code
 - Sensor 17
 - Transmitter 16
- Exterior cleaning 151
- F**
- FDA 180
- Field Communicator
 - Function 73
- Field Communicator 475 73
- Field of application
 - Residual risks 10
- Field Xpert
 - Function 70
- Field Xpert SFX350 70
- FieldCare 70
 - Device description file 74
 - Establishing a connection 71
 - Function 70
 - User interface 72
- Filtering the event logbook 145
- Firmware
 - Release date 74
 - Version 74
- Firmware history 150
- Fitted electrodes 175
- Flow direction 22
- Flow limit 170
- Function check 78
- Function range
 - Field Xpert 70
- Function scope
 - AMS Device Manager 72
 - Field Communicator 73
 - Field Communicator 475 73
 - SIMATIC PDM 73
- Functional safety (SIL) 180
- Functions
 - see Parameter
- G**
- Galvanic isolation 164
- H**
- Hardware write protection 118
- HART certification 181
- HART input
 - Settings 96
- HART protocol
 - Device variables 74
 - Measured values 74
- Heavy sensors 22
- Help text
 - Calling up 58
 - Closing 58
 - Explanation 58
- HistoROM 110
- I**
- Identifying the measuring device 15
- Impact resistance 168
- Incoming acceptance 15
- Influence
 - Ambient temperature 167
- Information on the document 6
- Inlet runs 23
- Input 157
- Inspection
 - Installation 32
 - Received goods 15
- Inspection check
 - Connection 46
- Installation 21
- Installation conditions
 - Adapters 25
 - Down pipe 21
 - Heavy sensors 22
 - Inlet and outlet runs 23
 - Installation dimensions 23

- Mounting location 21
- Orientation 22
- Partially filled pipe 21
- System pressure 24
- Thermal insulation 24
- Vibrations 24
- Installation dimensions 23
- Interior cleaning 151
- L**
- Languages, operation options 175
- Line recorder 126
- Local display
 - Navigation view 51
 - see Operational display
- Low flow cut off 164
- M**
- Main electronics module 14
- Maintenance tasks 151
 - Replacing seals 151
- Managing the device configuration 110
- Manufacturer ID 74
- Manufacturing date 16, 17
- Materials 173
- Maximum measured error 166
- Measured values
 - Calculated 157
 - Measured 157
 - see Process variables
- Measuring and test equipment 151
- Measuring device
 - Configuration 78
 - Conversion 152
 - Disposal 153
 - Integrating via communication protocol 74
 - Mounting the sensor 26
 - Mounting the ground cable/ground disks 27
 - Mounting the seals 27
 - Screw tightening torques 27
 - Preparing for electrical connection 36
 - Preparing for mounting 26
 - Removing 153
 - Repairs 152
 - Structure 14
 - Switch-on 78
- Measuring instrument approval 181
- Measuring principle 157
- Measuring range 157
- Measuring system 157
- Measuring tube specification 173
- Mechanical load 168
- Medium temperature range 168
- Menu
 - Diagnostics 143
 - Setup 80
- Menus
 - For measuring device configuration 78
 - For specific settings 102
- Mounting dimensions
 - see Installation dimensions
- Mounting location 21
- Mounting preparations 26
- Mounting tools 26
- N**
- Nameplate
 - Sensor 17
 - Transmitter 16
- Navigation path (navigation view) 51
- Navigation view
 - In the submenu 51
 - In the wizard 51
- Numeric editor 53
- O**
- Onsite display 176
 - Numeric editor 53
 - see Diagnostic message
 - see In alarm condition
 - Text editor 53
- Operable flow range 158
- Operating elements 55, 134
- Operating keys
 - see Operating elements
- Operating menu
 - Menus, submenus 48
 - Structure 48
 - Submenus and user roles 49
- Operating philosophy 49
- Operation 119
- Operation options 47
- Operational display 50
- Operational safety 10
- Order code 16, 17
- Orientation (vertical, horizontal) 22
- Outlet runs 23
- Output 160
- Output signal 160
- P**
- Packaging disposal 20
- Parameter
 - Changing 58
 - Entering values or text 58
- Parameter settings
 - Administration (Submenu) 113
 - Advanced setup (Submenu) 103
 - Burst configuration 1 to n (Submenu) 76
 - Configuration (Submenu) 97
 - Configuration backup (Submenu) 110
 - Current input 83
 - Current input (Wizard) 83
 - Current input 1 to n (Submenu) 122
 - Current output 84
 - Current output (Wizard) 84
 - Data logging (Submenu) 126
 - Define access code (Wizard) 112

- Device information (Submenu) 147
 - Diagnostics (Menu) 143
 - Display (Submenu) 105
 - Display (Wizard) 93
 - Double pulse output 100
 - Double pulse output (Submenu) 100, 124
 - Electrode cleaning circuit (Submenu) 108
 - Empty pipe detection (Wizard) 96
 - I/O configuration 82
 - I/O configuration (Submenu) 82
 - Input (Submenu) 98
 - Low flow cut off (Wizard) 95
 - Process variables (Submenu) 119
 - Pulse/frequency/switch output 87
 - Pulse/frequency/switch output (Wizard) 87, 88, 91
 - Pulse/frequency/switch output 1 to n (Submenu) 123
 - Relay output 98
 - Relay output 1 to n (Submenu) 124
 - Relay output 1 to n (Wizard) 98
 - Reset access code (Submenu) 113
 - Sensor adjustment (Submenu) 103
 - Setup (Menu) 80
 - Simulation (Submenu) 113
 - Status input 82
 - Status input (Submenu) 82
 - Status input 1 to n (Submenu) 122
 - System units (Submenu) 80
 - Totalizer (Submenu) 121
 - Totalizer 1 to n (Submenu) 103
 - Totalizer handling (Submenu) 125
 - Value current output 1 to n (Submenu) 123
 - Web server (Submenu) 66
 - WLAN Settings (Submenu) 109
 - Partially filled pipe 21
 - Performance characteristics 166
 - Pharmaceutical compatibility 180
 - Post-connection check (checklist) 46
 - Post-installation check 78
 - Post-installation check (checklist) 32
 - Potential equalization 39
 - Power consumption 165
 - Power supply failure 165
 - Pressure Equipment Directive 181
 - Pressure loss 170
 - Pressure tightness 169
 - Pressure-temperature ratings 169
 - Process conditions
 - Conductivity 169
 - Flow limit 170
 - Fluid temperature 168
 - Pressure loss 170
 - Pressure tightness 169
 - Product safety 10
 - Protecting parameter settings 116
- R**
- Radio approval 181
 - Read access 59
 - Reading measured values 119
 - Recalibration 151
 - Reference operating conditions 166
 - Registered trademarks 8
 - Remedial measures
 - Calling up 135
 - Closing 135
 - Remote operation 177
 - Repair of a device 152
 - Repairs 152
 - Notes 152
 - Repeatability 166
 - Replacement
 - Device components 152
 - Replacing seals 151
 - Requirements for personnel 9
 - Return 152
- S**
- Safety 9
 - Screw tightening torques 27
 - Sensor
 - Mounting 26
 - Serial number 16, 17
 - Setting the operating language 78
 - Settings
 - Adapting the measuring device to the process conditions 125
 - Administration 111
 - Advanced display configurations 105
 - Current input 83
 - Current output 84
 - Device reset 147
 - Device tag 80
 - Double pulse output 100
 - Electrode cleaning circuit (ECC) 108
 - Empty pipe detection (EPD) 96
 - HART input 96
 - I/O configuration 82
 - Low flow cut off 95
 - Managing the device configuration 110
 - Onsite display 93
 - Operating language 78
 - Pulse output 87
 - Pulse/frequency/switch output 87, 88
 - Relay output 98
 - Resetting the totalizer 125
 - Sensor adjustment 103
 - Simulation 113
 - Status input 82
 - Switch output 91
 - System units 80
 - Totalizer 103
 - Totalizer reset 125
 - WLAN 109
 - Shock resistance 168
 - Showing data logging 126
 - Signal on alarm 163
 - SIL (functional safety) 180

- SIMATIC PDM 73
 - Function 73
 - Software release 74
 - Spare part 152
 - Spare parts 152
 - Special connection instructions 41
 - Standards and guidelines 181
 - Status area
 - For operational display 50
 - In the navigation view 52
 - Status signals 133, 136
 - Storage conditions 19
 - Storage temperature 19
 - Storage temperature range 167
 - Structure
 - Measuring device 14
 - Operating menu 48
 - Submenu
 - Administration 111, 113
 - Advanced setup 102, 103
 - Burst configuration 1 to n 76
 - Configuration 97
 - Configuration backup 110
 - Current input 1 to n 122
 - Data logging 126
 - Device information 147
 - Display 105
 - Double pulse output 100, 124
 - Electrode cleaning circuit 108
 - Event list 144
 - HART input 96
 - I/O configuration 82
 - Input 98
 - Input values 121
 - Output values 122
 - Overview 49
 - Process variables 119
 - Pulse/frequency/switch output 1 to n 123
 - Relay output 1 to n 124
 - Reset access code 113
 - Sensor adjustment 103
 - Simulation 113
 - Status input 82
 - Status input 1 to n 122
 - System units 80
 - Totalizer 121
 - Totalizer 1 to n 103
 - Totalizer handling 125
 - Value current output 1 to n 123
 - Web server 66
 - WLAN Settings 109
 - Supplementary documentation 183
 - Supply voltage 165
 - Surface roughness 175
 - Switch output 162
 - Symbols
 - Controlling data entries 54
 - For communication 50
 - For diagnostic behavior 50
 - For locking 50
 - For measured variable 50
 - For measurement channel number 50
 - For menus 52
 - For parameters 52
 - For status signal 50
 - For submenu 52
 - For wizard 52
 - In the status area of the local display 50
 - Input screen 54
 - Operating elements 54
 - System design
 - Measuring system 157
 - see Measuring device design
 - System integration 74
 - System pressure 24
- T**
- Technical data, overview 157
 - Temperature range
 - Ambient temperature range for display 176
 - Storage temperature 19
 - Terminal assignment 36
 - terminals 165
 - Text editor 53
 - Thermal insulation 24
 - Tool tip
 - see Help text
 - Tools
 - Electrical connection 33
 - For mounting 26
 - Transport 19
 - Totalizer
 - Configuration 103
 - Transmitter
 - Turning the display module 31
 - Turning the housing 31
 - Transporting the measuring device 19
 - Troubleshooting
 - General 129
 - TSE/BSE certificate of suitability 180
 - Turning the display module 31
 - Turning the electronics housing
 - see Turning the transmitter housing
 - Turning the transmitter housing 31
- U**
- Use of the measuring device
 - Borderline cases 9
 - Incorrect use 9
 - see Designated use
 - User interface
 - Current diagnostic event 143
 - Previous diagnostic event 143
 - User roles 49
 - USP Class VI 180
- V**
- Version data for the device 74

| | |
|---|------------|
| Vibration resistance | 167 |
| Vibrations | 24 |
| W | |
| W@M | 151, 152 |
| W@M Device Viewer | 15, 152 |
| Weight | |
| Transport (notes) | 19 |
| Wizard | |
| Current input | 83 |
| Current output | 84 |
| Define access code | 112 |
| Display | 93 |
| Empty pipe detection | 96 |
| Low flow cut off | 95 |
| Pulse/frequency/switch output | 87, 88, 91 |
| Relay output 1 to n | 98 |
| WLAN settings | 109 |
| Workplace safety | 10 |
| Write access | 59 |
| Write protection | |
| Via access code | 116 |
| Via write protection switch | 118 |
| Write protection switch | 118 |

www.addresses.endress.com
