


# Operating Instructions

# Proline Promass I 500

# HART

Coriolis flowmeter

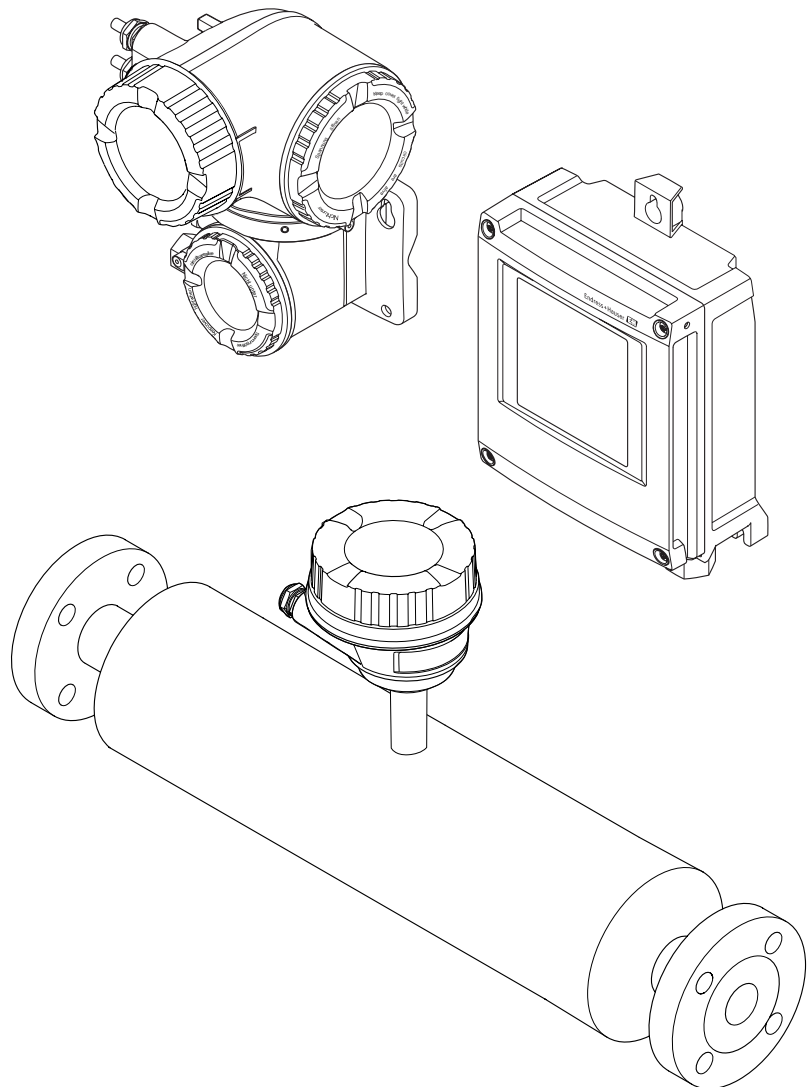

- Make sure the document is stored in a safe place such that it is always available when working on or with the device.
- To avoid danger to individuals or the facility, read the "Basic safety instructions" section carefully, as well as all other safety instructions in the document that are specific to working procedures.
- The manufacturer reserves the right to modify technical data without prior notice. Your Endress+Hauser Sales Center will supply you with current information and updates to these instructions.

## Table of contents

|          |   |           |          |   |           |
|----------|---|-----------|----------|---|-----------|
| <b>1</b> | <b>About this document</b> . . . . .                                | <b>6</b>  | 5.3      | Packaging disposal . . . . .  | 23        |
| 1.1      | Document function . . . . .   | 6         | <b>6</b> | <b>Installation</b> . . . . .   | <b>23</b> |
| 1.2      | Symbols used . . . . .  | 6         | 6.1      | Installation conditions . . . . .                                     | 23        |
| 1.2.1    | Safety symbols . . . . .  | 6         | 6.1.1    | Mounting position . . . . .   | 23        |
| 1.2.2    | Electrical symbols . . . . .  | 6         | 6.1.2    | Requirements from environment and<br>process . . . . .                | 25        |
| 1.2.3    | Communication symbols . . . . .                                     | 6         | 6.1.3    | Special mounting instructions . . . . .                               | 27        |
| 1.2.4    | Tool symbols . . . . .  | 7         | 6.2      | Mounting the measuring device . . . . .                               | 30        |
| 1.2.5    | Symbols for<br>certain types of information . . . . .               | 7         | 6.2.1    | Required tools . . . . .  | 30        |
| 1.2.6    | Symbols in graphics . . . . .                                       | 7         | 6.2.2    | Preparing the measuring device . . . . .                              | 30        |
| 1.3      | Documentation . . . . .   | 8         | 6.2.3    | Mounting the measuring device . . . . .                               | 30        |
| 1.3.1    | Standard documentation . . . . .                                    | 8         | 6.2.4    | Mounting the transmitter housing:<br>Proline 500 – digital . . . . .  | 31        |
| 1.3.2    | Supplementary device-dependent<br>documentation . . . . .           | 8         | 6.2.5    | Mounting the transmitter housing:<br>Proline 500 . . . . .            | 32        |
| 1.4      | Registered trademarks . . . . .                                     | 8         | 6.2.6    | Turning the transmitter housing:<br>Proline 500 . . . . .             | 34        |
| <b>2</b> | <b>Basic safety instructions</b> . . . . .                          | <b>10</b> | 6.2.7    | Turning the display module: Proline<br>500 . . . . .                  | 35        |
| 2.1      | Requirements for the personnel . . . . .                            | 10        | 6.3      | Post-installation check . . . . .                                     | 35        |
| 2.2      | Designated use . . . . .  | 10        | <b>7</b> | <b>Electrical connection</b> . . . . .                                | <b>36</b> |
| 2.3      | Workplace safety . . . . .  | 11        | 7.1      | Connection conditions . . . . .                                       | 36        |
| 2.4      | Operational safety . . . . .  | 11        | 7.1.1    | Required tools . . . . .  | 36        |
| 2.5      | Product safety . . . . .  | 11        | 7.1.2    | Requirements for connecting cable . . . . .                           | 36        |
| 2.6      | IT security . . . . .   | 12        | 7.1.3    | Terminal assignment . . . . .   | 40        |
| 2.7      | Device-specific IT security . . . . .                               | 12        | 7.1.4    | Preparing the measuring device . . . . .                              | 40        |
| 2.7.1    | Protecting access via hardware write<br>protection . . . . .        | 12        | 7.2      | Connecting the measuring device: Proline<br>500 - digital . . . . .   | 41        |
| 2.7.2    | Protecting access via a password . . . . .                          | 12        | 7.2.1    | Connecting the connecting cable . . . . .                             | 41        |
| 2.7.3    | Access via fieldbus . . . . .                                       | 13        | 7.2.2    | Connecting the signal cable and the<br>supply voltage cable . . . . . | 46        |
| 2.7.4    | Access via Web server . . . . .                                     | 13        | 7.3      | Connecting the measuring device: Proline<br>500 . . . . .             | 48        |
| 2.7.5    | Access via CDI-RJ45 service<br>interface . . . . .                  | 13        | 7.3.1    | Connecting the connecting cable . . . . .                             | 48        |
| <b>3</b> | <b>Product description</b> . . . . .                                | <b>15</b> | 7.3.2    | Connecting the signal cable and the<br>supply voltage cable . . . . . | 52        |
| 3.1      | Product design . . . . .  | 15        | 7.4      | Ensure potential equalization . . . . .                               | 54        |
| 3.1.1    | Proline 500 – digital . . . . .                                     | 15        | 7.4.1    | Requirements . . . . .  | 54        |
| 3.1.2    | Proline 500 . . . . .   | 16        | 7.5      | Special connection instructions . . . . .                             | 54        |
| <b>4</b> | <b>Incoming acceptance and product<br/>identification</b> . . . . . | <b>17</b> | 7.5.1    | Connection examples . . . . .   | 54        |
| 4.1      | Incoming acceptance . . . . .                                       | 17        | 7.6      | Ensuring the degree of protection . . . . .                           | 58        |
| 4.2      | Product identification . . . . .                                    | 17        | 7.7      | Post-connection check . . . . .                                       | 59        |
| 4.2.1    | Transmitter nameplate . . . . .                                     | 18        | <b>8</b> | <b>Operation options</b> . . . . .                                    | <b>60</b> |
| 4.2.2    | Sensor nameplate . . . . .  | 20        | 8.1      | Overview of operation options . . . . .                               | 60        |
| 4.2.3    | Symbols on measuring device . . . . .                               | 21        | 8.2      | Structure and function of the operating<br>menu . . . . .             | 61        |
| <b>5</b> | <b>Storage and transport</b> . . . . .                              | <b>22</b> | 8.2.1    | Structure of the operating menu . . . . .                             | 61        |
| 5.1      | Storage conditions . . . . .  | 22        | 8.2.2    | Operating philosophy . . . . .  | 62        |
| 5.2      | Transporting the product . . . . .                                  | 22        | 8.3      | Access to the operating menu via the local<br>display . . . . .       | 63        |
| 5.2.1    | Measuring devices without lifting<br>lugs . . . . .                 | 22        | 8.3.1    | Operational display . . . . .   | 63        |
| 5.2.2    | Measuring devices with lifting lugs . . . . .                       | 23        |          |   |           |
| 5.2.3    | Transporting with a fork lift . . . . .                             | 23        |          |   |           |

|           |  |           |           |  |            |
|-----------|--|-----------|-----------|--|------------|
| 8.3.2     | Navigation view . . . . .  | 64        | 10.4.13   | Configuring the partial filled pipe<br>detection . . . . .           | 135        |
| 8.3.3     | Editing view . . . . .   | 66        | 10.5      | Advanced settings . . . . .  | 136        |
| 8.3.4     | Operating elements . . . . .                                     | 68        | 10.5.1    | Using the parameter to enter the<br>access code . . . . .            | 137        |
| 8.3.5     | Opening the context menu . . . . .                               | 69        | 10.5.2    | Calculated values . . . . .  | 137        |
| 8.3.6     | Navigating and selecting from list . . .                         | 70        | 10.5.3    | Carrying out a sensor adjustment . . .                               | 138        |
| 8.3.7     | Calling the parameter directly . . . . .                         | 70        | 10.5.4    | Configuring the totalizer . . . . .                                  | 139        |
| 8.3.8     | Calling up help text . . . . .                                   | 71        | 10.5.5    | Carrying out additional display<br>configurations . . . . .          | 141        |
| 8.3.9     | Changing the parameters . . . . .                                | 71        | 10.5.6    | WLAN configuration . . . . .   | 147        |
| 8.3.10    | User roles and related access<br>authorization . . . . .         | 72        | 10.5.7    | Configuration management . . . . .                                   | 148        |
| 8.3.11    | Disabling write protection via access<br>code . . . . .          | 72        | 10.5.8    | Using parameters for device<br>administration . . . . .              | 150        |
| 8.3.12    | Enabling and disabling the keypad<br>lock . . . . .              | 73        | 10.6      | Simulation . . . . .   | 151        |
| 8.4       | Access to the operating menu via the Web<br>browser . . . . .    | 73        | 10.7      | Protecting settings from unauthorized<br>access . . . . .            | 155        |
| 8.4.1     | Function range . . . . .   | 73        | 10.7.1    | Write protection via access code . . .                               | 155        |
| 8.4.2     | Prerequisites . . . . .  | 74        | 10.7.2    | Write protection via write protection<br>switch . . . . .            | 157        |
| 8.4.3     | Establishing a connection . . . . .                              | 75        | <b>11</b> | <b>Operation . . . . .</b>   | <b>159</b> |
| 8.4.4     | Logging on . . . . .   | 77        | 11.1      | Reading the device locking status . . . . .                          | 159        |
| 8.4.5     | User interface . . . . .   | 78        | 11.2      | Adjusting the operating language . . . . .                           | 159        |
| 8.4.6     | Disabling the Web server . . . . .                               | 79        | 11.3      | Configuring the display . . . . .                                    | 159        |
| 8.4.7     | Logging out . . . . .  | 79        | 11.4      | Reading measured values . . . . .                                    | 159        |
| 8.5       | Access to the operating menu via the<br>operating tool . . . . . | 79        | 11.4.1    | "Measured variables" submenu . . . . .                               | 160        |
| 8.5.1     | Connecting the operating tool . . . . .                          | 80        | 11.4.2    | "Totalizer" submenu . . . . .  | 162        |
| 8.5.2     | Field Xpert SFX350, SFX370 . . . . .                             | 83        | 11.4.3    | "Input values" submenu . . . . .                                     | 163        |
| 8.5.3     | FieldCare . . . . .  | 83        | 11.4.4    | Output values . . . . .  | 164        |
| 8.5.4     | DeviceCare . . . . .   | 85        | 11.5      | Adapting the measuring device to the process<br>conditions . . . . . | 166        |
| 8.5.5     | AMS Device Manager . . . . .                                     | 85        | 11.6      | Performing a totalizer reset . . . . .                               | 166        |
| 8.5.6     | SIMATIC PDM . . . . .  | 86        | 11.6.1    | Function scope of the "Control<br>Totalizer" parameter . . . . .     | 167        |
| 8.5.7     | Field Communicator 475 . . . . .                                 | 86        | 11.6.2    | Function scope of the "Reset all<br>totalizers" parameter . . . . .  | 167        |
| <b>9</b>  | <b>System integration . . . . .</b>                              | <b>87</b> | 11.7      | Showing data logging . . . . .                                       | 167        |
| 9.1       | Overview of device description files . . . . .                   | 87        | <b>12</b> | <b>Diagnostics and troubleshooting . .</b>                           | <b>173</b> |
| 9.1.1     | Current version data for the device . . .                        | 87        | 12.1      | General troubleshooting . . . . .                                    | 173        |
| 9.1.2     | Operating tools . . . . .  | 87        | 12.2      | Diagnostic information via light emitting<br>diodes . . . . .        | 175        |
| 9.2       | Measured variables via HART protocol . . . . .                   | 87        | 12.2.1    | Transmitter . . . . .  | 175        |
| 9.3       | Other settings . . . . .   | 90        | 12.2.2    | Sensor connection housing . . . . .                                  | 177        |
| <b>10</b> | <b>Commissioning . . . . .</b>                                   | <b>94</b> | 12.3      | Diagnostic information on local display . . . . .                    | 179        |
| 10.1      | Function check . . . . .   | 94        | 12.3.1    | Diagnostic message . . . . .   | 179        |
| 10.2      | Switching on the measuring device . . . . .                      | 94        | 12.3.2    | Calling up remedial measures . . . . .                               | 181        |
| 10.3      | Setting the operating language . . . . .                         | 94        | 12.4      | Diagnostic information in the Web browser .                          | 181        |
| 10.4      | Configuring the measuring device . . . . .                       | 94        | 12.4.1    | Diagnostic options . . . . .   | 181        |
| 10.4.1    | Defining the tag name . . . . .                                  | 96        | 12.4.2    | Calling up remedy information . . . . .                              | 182        |
| 10.4.2    | Setting the system units . . . . .                               | 96        | 12.5      | Diagnostic information in DeviceCare or<br>FieldCare . . . . .       | 183        |
| 10.4.3    | Selecting and setting the medium . . .                           | 99        | 12.5.1    | Diagnostic options . . . . .   | 183        |
| 10.4.4    | Displaying the I/O configuration . . .                           | 100       | 12.5.2    | Calling up remedy information . . . . .                              | 184        |
| 10.4.5    | Configuring the current input . . . . .                          | 101       | 12.6      | Adapting the diagnostic information . . . . .                        | 184        |
| 10.4.6    | Configuring the status input . . . . .                           | 102       | 12.6.1    | Adapting the diagnostic behavior . . .                               | 184        |
| 10.4.7    | Configuring the current output . . . . .                         | 103       | 12.6.2    | Adapting the status signal . . . . .                                 | 184        |
| 10.4.8    | Configuring the pulse/frequency/<br>switch output . . . . .      | 109       |           |  |            |
| 10.4.9    | Configuring the relay output . . . . .                           | 123       |           |  |            |
| 10.4.10   | Configuring the double pulse output . . .                        | 126       |           |  |            |
| 10.4.11   | Configuring the local display . . . . .                          | 127       |           |  |            |
| 10.4.12   | Configuring the low flow cut off . . . . .                       | 134       |           |  |            |

|           |   |            |                            |
|-----------|---|------------|----------------------------|
| 12.7      | Overview of diagnostic information . . . . .                        | 185        | <b>Index . . . . . 235</b> |
| 12.8      | Pending diagnostic events . . . . .                                 | 189        |                            |
| 12.9      | Diagnostic list . . . . .   | 190        |                            |
| 12.10     | Event logbook . . . . .   | 191        |                            |
|           | 12.10.1 Reading out the event logbook . . . . .                     | 191        |                            |
|           | 12.10.2 Filtering the event logbook . . . . .                       | 191        |                            |
|           | 12.10.3 Overview of information events . . . . .                    | 192        |                            |
| 12.11     | Resetting the measuring device . . . . .                            | 193        |                            |
|           | 12.11.1 Function scope of the "Device reset"<br>parameter . . . . . | 193        |                            |
| 12.12     | Device information . . . . .  | 194        |                            |
| 12.13     | Firmware history . . . . .  | 196        |                            |
| <b>13</b> | <b>Maintenance . . . . .</b>  | <b>198</b> |                            |
| 13.1      | Maintenance tasks . . . . .   | 198        |                            |
|           | 13.1.1 Exterior cleaning . . . . .                                  | 198        |                            |
|           | 13.1.2 Interior cleaning . . . . .                                  | 198        |                            |
| 13.2      | Measuring and test equipment . . . . .                              | 198        |                            |
| 13.3      | Endress+Hauser services . . . . .                                   | 198        |                            |
| <b>14</b> | <b>Repairs . . . . .</b>  | <b>199</b> |                            |
| 14.1      | General notes . . . . .   | 199        |                            |
|           | 14.1.1 Repair and conversion concept . . . . .                      | 199        |                            |
|           | 14.1.2 Notes for repair and conversion . . . . .                    | 199        |                            |
| 14.2      | Spare parts . . . . .   | 199        |                            |
| 14.3      | Endress+Hauser services . . . . .                                   | 199        |                            |
| 14.4      | Return . . . . .  | 199        |                            |
| 14.5      | Disposal . . . . .  | 200        |                            |
|           | 14.5.1 Removing the measuring device . . . . .                      | 200        |                            |
|           | 14.5.2 Disposing of the measuring device . . . . .                  | 200        |                            |
| <b>15</b> | <b>Accessories . . . . .</b>  | <b>201</b> |                            |
| 15.1      | Device-specific accessories . . . . .                               | 201        |                            |
|           | 15.1.1 For the transmitter . . . . .                                | 201        |                            |
|           | 15.1.2 For the sensor . . . . .                                     | 202        |                            |
| 15.2      | Communication-specific accessories . . . . .                        | 202        |                            |
| 15.3      | Service-specific accessories . . . . .                              | 203        |                            |
| 15.4      | System components . . . . .   | 203        |                            |
| <b>16</b> | <b>Technical data . . . . .</b>                                     | <b>204</b> |                            |
| 16.1      | Application . . . . .   | 204        |                            |
| 16.2      | Function and system design . . . . .                                | 204        |                            |
| 16.3      | Input . . . . .   | 205        |                            |
| 16.4      | Output . . . . .  | 208        |                            |
| 16.5      | Power supply . . . . .  | 213        |                            |
| 16.6      | Performance characteristics . . . . .                               | 214        |                            |
| 16.7      | Installation . . . . .  | 218        |                            |
| 16.8      | Environment . . . . .   | 219        |                            |
| 16.9      | Process . . . . .   | 219        |                            |
| 16.10     | Mechanical construction . . . . .                                   | 222        |                            |
| 16.11     | Operability . . . . .   | 225        |                            |
| 16.12     | Certificates and approvals . . . . .                                | 229        |                            |
| 16.13     | Application packages . . . . .                                      | 231        |                            |
| 16.14     | Accessories . . . . .   | 233        |                            |
| 16.15     | Supplementary documentation . . . . .                               | 233        |                            |





# 1 About this document

## 1.1 Document function






These Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.

## 1.2 Symbols used



### 1.2.1 Safety symbols



| Symbol  | Meaning  |
|---|--|
|    | <b>DANGER!</b><br>This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury. |
|    | <b>WARNING!</b><br>This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury. |
|   | <b>CAUTION!</b><br>This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.  |
|  | <b>NOTE!</b><br>This symbol contains information on procedures and other facts which do not result in personal injury.                     |

### 1.2.2 Electrical symbols




| Symbol  | Meaning  |
|---|--|
|  | Direct current   |
|  | Alternating current  |
|  | Direct current and alternating current   |
|  | <b>Ground connection</b><br>A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.  |
|  | <b>Protective Earth (PE)</b><br>A terminal which must be connected to ground prior to establishing any other connections.<br><br>The ground terminals are situated inside and outside the device: <ul style="list-style-type: none"> <li>▪ Inner ground terminal: Connects the protective earth to the mains supply.</li> <li>▪ Outer ground terminal: Connects the device to the plant grounding system.</li> </ul> |

### 1.2.3 Communication symbols













| Symbol  | Meaning   |
|---|---|
|  | <b>Wireless Local Area Network (WLAN)</b><br>Communication via a wireless, local network. |
|  | <b>LED</b><br>Light emitting diode is off.  |

| Symbol  | Meaning   |
|---|---|
|  | <b>LED</b><br>Light emitting diode is on.       |
|  | <b>LED</b><br>Light emitting diode is flashing. |






#### 1.2.4 Tool symbols



| Symbol  | Meaning                   |
|---|---------------------------|
|  | Torx screwdriver          |
|  | Phillips head screwdriver |
|  | Open-ended wrench         |

#### 1.2.5 Symbols for certain types of information

| Symbol  | Meaning  |
|---|--|
|    | <b>Permitted</b><br>Procedures, processes or actions that are permitted. |
|   | <b>Preferred</b><br>Procedures, processes or actions that are preferred. |
|  | <b>Forbidden</b><br>Procedures, processes or actions that are forbidden. |
|  | <b>Tip</b><br>Indicates additional information.                          |
|  | Reference to documentation.  |
|  | Reference to page.   |
|  | Reference to graphic.  |
|  | Notice or individual step to be observed.                                |
|  | Series of steps.   |
|  | Result of a step.  |
|  | Help in the event of a problem.  |
|  | Visual inspection.   |
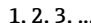
#### 1.2.6 Symbols in graphics



| Symbol  | Meaning         |
|---|-----------------|
|  | Item numbers    |
|  | Series of steps |
|  | Views           |
|  | Sections        |
|  | Hazardous area  |

| Symbol  | Meaning                        |
|---|--------------------------------|
|  | Safe area (non-hazardous area) |
|  | Flow direction                 |

## 1.3 Documentation

 For an overview of the scope of the associated Technical Documentation, refer to the following:

- The *W@M Device Viewer* : Enter the serial number from the nameplate ([www.endress.com/deviceviewer](http://www.endress.com/deviceviewer))
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

 For a detailed list of the individual documents along with the documentation code →  233

### 1.3.1 Standard documentation

| Document type                            | Purpose and content of the document   |
|--|---|
| Technical Information                    | <b>Planning aid for your device</b><br>The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.  |
| Sensor Brief Operating Instructions      | <b>Guides you quickly to the 1st measured value - Part 1</b><br>The Sensor Brief Operating Instructions are aimed at specialists with responsibility for installing the measuring device. <ul style="list-style-type: none"> <li>▪ Incoming acceptance and product identification</li> <li>▪ Storage and transport</li> <li>▪ Installation</li> </ul>   |
| Transmitter Brief Operating Instructions | <b>Guides you quickly to the 1st measured value - Part 2</b><br>The Transmitter Brief Operating Instructions are aimed at specialists with responsibility for commissioning, configuring and parameterizing the measuring device (until the first measured value). <ul style="list-style-type: none"> <li>▪ Product description</li> <li>▪ Installation</li> <li>▪ Electrical connection</li> <li>▪ Operation options</li> <li>▪ System integration</li> <li>▪ Commissioning</li> <li>▪ Diagnostic information</li> </ul> |
| Description of Device Parameters         | <b>Reference for your parameters</b><br>The document provides a detailed explanation of each individual parameter in the Expert operating menu. The description is aimed at those who work with the device over the entire life cycle and perform specific configurations.  |

### 1.3.2 Supplementary device-dependent documentation

Additional documents are supplied depending on the device version ordered: Always comply strictly with the instructions in the supplementary documentation. The supplementary documentation is an integral part of the device documentation.

## 1.4 Registered trademarks

**HART®**

Registered trademark of the FieldComm Group, Austin, Texas, USA



**TRI-CLAMP®**

Registered trademark of Ladish & Co., Inc., Kenosha, USA

## 2 Basic safety instructions

### 2.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- ▶ Trained, qualified specialists must have a relevant qualification for this specific function and task.
- ▶ Are authorized by the plant owner/operator.
- ▶ Are familiar with federal/national regulations.
- ▶ Before starting work, read and understand the instructions in the manual and supplementary documentation as well as the certificates (depending on the application).
- ▶ Follow instructions and comply with basic conditions.

The operating personnel must fulfill the following requirements:

- ▶ Are instructed and authorized according to the requirements of the task by the facility's owner-operator.
- ▶ Follow the instructions in this manual.

### 2.2 Designated use


#### Application and media

The measuring device described in these Brief Operating Instructions is intended only for flow measurement of liquids and gases.

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

Measuring devices for use in hazardous areas, in hygienic applications or where there is an increased risk due to process pressure, are labeled accordingly on the nameplate.

To ensure that the measuring device remains in proper condition for the operation time:

- ▶ Keep within the specified pressure and temperature range.
- ▶ Only use the measuring device in full compliance with the data on the nameplate and the general conditions listed in the Operating Instructions and supplementary documentation.
- ▶ Based on the nameplate, check whether the ordered device is permitted for the intended use in the hazardous area (e.g. explosion protection, pressure vessel safety).
- ▶ Use the measuring device only for media to which the process-wetted materials are sufficiently resistant.
- ▶ If the measuring device is not operated at atmospheric temperature, compliance with the relevant basic conditions specified in the associated device documentation is absolutely essential: "Documentation" section →  8.
- ▶ Protect the measuring device permanently against corrosion from environmental influences.

#### Incorrect use

Non-designated use can compromise safety. The manufacturer is not liable for damage caused by improper or non-designated use.

#### **WARNING**

##### **Danger of breakage due to corrosive or abrasive fluids!**

- ▶ Verify the compatibility of the process fluid with the sensor material.
- ▶ Ensure the resistance of all fluid-wetted materials in the process.
- ▶ Keep within the specified pressure and temperature range.

**NOTICE****Verification for borderline cases:**

- ▶ For special fluids and fluids for cleaning, Endress+Hauser is glad to provide assistance in verifying the corrosion resistance of fluid-wetted materials, but does not accept any warranty or liability as minute changes in the temperature, concentration or level of contamination in the process can alter the corrosion resistance properties.

**Residual risks****⚠ WARNING**

**The electronics and the medium may cause the surfaces to heat up. This presents a burn hazard!**

- ▶ For elevated fluid temperatures, ensure protection against contact to prevent burns.

## 2.3 Workplace safety

For work on and with the device:

- ▶ Wear the required personal protective equipment according to federal/national regulations.

For welding work on the piping:

- ▶ Do not ground the welding unit via the measuring device.

If working on and with the device with wet hands:

- ▶ Due to the increased risk of electric shock, gloves must be worn.

## 2.4 Operational safety

Risk of injury.

- ▶ Operate the device in proper technical condition and fail-safe condition only.
- ▶ The operator is responsible for interference-free operation of the device.

**Conversions to the device**

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers.

- ▶ If, despite this, modifications are required, consult with Endress+Hauser.

**Repair**

To ensure continued operational safety and reliability,

- ▶ Carry out repairs on the device only if they are expressly permitted.
- ▶ Observe federal/national regulations pertaining to repair of an electrical device.
- ▶ Use original spare parts and accessories from Endress+Hauser only.

## 2.5 Product safety

This measuring device is designed in accordance with good engineering practice to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate.

It meets general safety standards and legal requirements. It also complies with the EU directives listed in the device-specific EU Declaration of Conformity. Endress+Hauser confirms this by affixing the CE mark to the device.






## 2.6 IT security

We only provide a warranty if the device is installed and used as described in the Operating Instructions. The device is equipped with security mechanisms to protect it against any inadvertent changes to the device settings.

IT security measures in line with operators' security standards and designed to provide additional protection for the device and device data transfer must be implemented by the operators themselves.

## 2.7 Device-specific IT security

The device offers a range of specific functions to support protective measures on the operator's side. These functions can be configured by the user and guarantee greater in-operation safety if used correctly. An overview of the most important functions is provided in the following section.

| Function/interface   | Factory setting     | Recommendation   |
|--|---------------------|--|
| Write protection via hardware write protection switch →  12                   | Not enabled.        | Individually following risk assessment.                |
| Access code (also applies for Web server login or FieldCare connection) →  13 | Not enabled (0000). | Assign an individual access code during commissioning. |
| WLAN (order option in display module)  | Enabled.            | Individually following risk assessment.                |
| WLAN security mode   | Enabled (WPA2-PSK)  | Do not change.   |
| WLAN passphrase (password) →  13  | Serial number       | Assign an individual access code during commissioning. |
| WLAN mode  | Access Point        | Individually following risk assessment.                |
| Web server →  13  | Enabled.            | Individually following risk assessment.                |
| CDI-RJ45 service interface →  13  | –                   | Individually following risk assessment.                |

### 2.7.1 Protecting access via hardware write protection

Write access to the device parameters via the local display, Web browser or operating tool (e.g. FieldCare, DeviceCare) can be disabled via a write protection switch (DIP switch on the motherboard). When hardware write protection is enabled, only read access to the parameters is possible.


Hardware write protection is disabled when the device is delivered →  157.

### 2.7.2 Protecting access via a password

Different passwords are available to protect write access to the device parameters or access to the device via the WLAN interface.


- User-specific access code  
Protect write access to the device parameters via the local display, Web browser or operating tool (e.g. FieldCare, DeviceCare). Access authorization is clearly regulated through the use of a user-specific access code.
- WLAN passphrase  
The network key protects a connection between an operating unit (e.g. notebook or tablet) and the device via the WLAN interface which can be ordered as an option.


### User-specific access code

Write access to the device parameters via the local display, Web browser or operating tool (e.g. FieldCare, DeviceCare) can be protected by the modifiable, user-specific access code (→  155).


When the device is delivered, the device does not have an access code and is equivalent to 0000 (open).

### WLAN passphrase

A connection between an operating unit (e.g. notebook or tablet) and the device via the WLAN interface (→  81) which can be ordered as an option is protected by the network key. The WLAN authentication of the network key complies with the IEEE 802.11 standard.

When the device is delivered, the network key is pre-defined depending on the device. It can be changed via the **WLAN settings** submenu in the **WLAN passphrase** parameter (→  148).

### General notes on the use of passwords

- The access code and network key supplied with the device should be changed during commissioning.
- Follow the general rules for generating a secure password when defining and managing the access code or network key.
- The user is responsible for the management and careful handling of the access code and network key.
- For information on configuring the access code or on what to do if you lose the password, see the "Write protection via access code" section →  155


## 2.7.3 Access via fieldbus

When communicating via fieldbus, access to the device parameters can be restricted to "Read only" access. The option can be changed in the **Fieldbus writing access** parameter.

This does not affect cyclic measured value transmission to the higher-order system, which is always guaranteed.

 For detailed information, see the "Description of Device Parameters" document pertaining to the device →  233

## 2.7.4 Access via Web server

The device can be operated and configured via a Web browser with the integrated Web server (→  73). The connection is via the service interface (CDI-RJ45) or the WLAN interface.

The Web server is enabled when the device is delivered. The Web server can be disabled if necessary (e.g. after commissioning) via the **Web server functionality** parameter.

The device and status information can be hidden on the login page. This prevents unauthorized access to the information.

 For detailed information, see the "Description of Device Parameters" document pertaining to the device →  233

## 2.7.5 Access via CDI-RJ45 service interface

The device can be connected to a network via the CDI-RJ45 service interface. Device-specific functions guarantee the secure operation of the device in a network.

It is advisable to take relevant security concepts into consideration, such as those issued by the Federal Office for Information Security. This includes organizational security measures

such as the assignment of access authorization as well as technical measures such as network segmentation.

## 3 Product description

The measuring system consists of a transmitter and a sensor. The transmitter and sensor are mounted in physically separate locations. They are interconnected by one connecting cable(s).

### 3.1 Product design

Two versions of the transmitter are available.

#### 3.1.1 Proline 500 – digital


Signal transmission: digital

Order code for "Integrated ISEM electronics", option **A** "Sensor"

For use in applications not required to meet special requirements due to ambient or operating conditions.

As the electronics are located in the sensor, the device is ideal:  
For simple transmitter replacement.

- A standard cable can be used as the connecting cable.
- Not sensitive to external EMC interference.

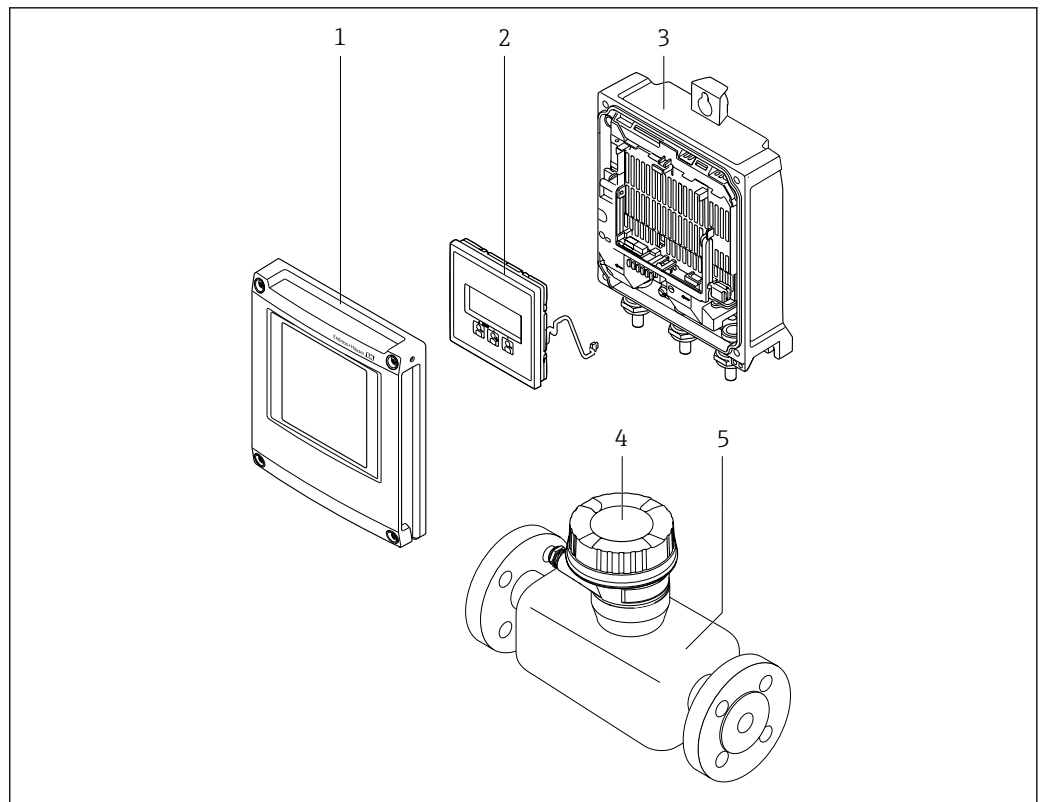

A0029593

#### 1 Important components of a measuring device

- 1 Electronics compartment cover
- 2 Display module
- 3 Transmitter housing
- 4 Sensor connection housing with integrated ISEM electronics: connecting cable connection
- 5 Sensor

### 3.1.2 Proline 500


Signal transmission: analog

Order code for "Integrated ISEM electronics", option **B** "Transmitter"

For use in applications required to meet special requirements due to ambient or operating conditions.

As the electronics are located in the transmitter, the device is ideal in the event of:

- Strong vibrations at the sensor.
- Sensor operation in underground installations.
- Permanent sensor immersion in water.

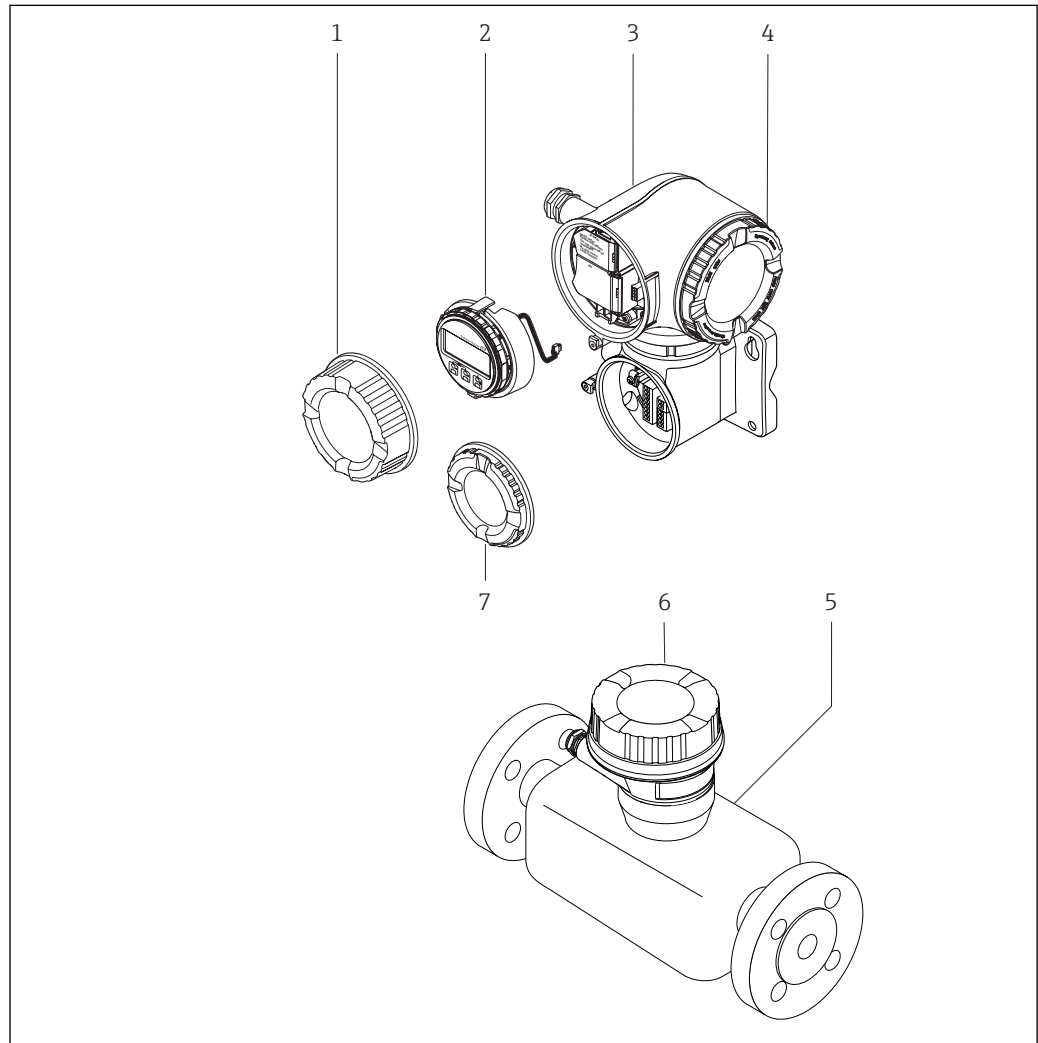

A0029589


#### 2 Important components of a measuring device

- 1 Connection compartment cover
- 2 Display module
- 3 Transmitter housing with integrated ISEM electronics
- 4 Electronics compartment cover
- 5 Sensor
- 6 Sensor connection housing: connecting cable connection
- 7 Connection compartment cover: connecting cable connection





## 4 Incoming acceptance and product identification


### 4.1 Incoming acceptance

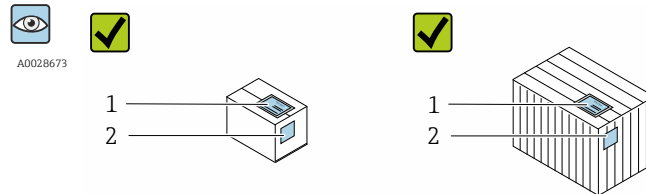


Are the order codes on the delivery note (1) and the product sticker (2) identical?

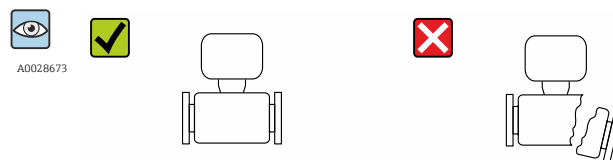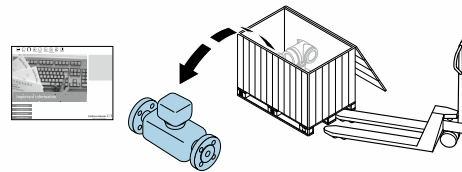

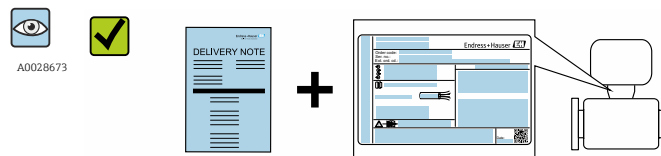

Are the goods undamaged?

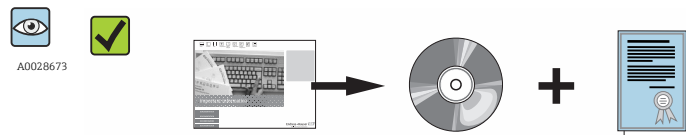

Do the nameplate data match the ordering information on the delivery note?



Is the CD-ROM with the Technical Documentation (depends on device version) and documents present?



-  If one of the conditions is not satisfied, contact your Endress+Hauser Sales Center.
- Depending on the device version, the CD-ROM might not be part of the delivery! The Technical Documentation is available via the Internet or via the *Endress+Hauser Operations App*, see the "Product identification" section →  18.

### 4.2 Product identification

The following options are available for identification of the measuring device:


- Nameplate specifications
- Order code with breakdown of the device features on the delivery note
- Enter serial numbers from nameplates in *W@M Device Viewer* ([www.endress.com/deviceviewer](http://www.endress.com/deviceviewer)): All information about the measuring device is displayed.
- Enter the serial number from the nameplates into the *Endress+Hauser Operations App* or scan the 2-D matrix code (QR code) on the nameplate with the *Endress+Hauser Operations App*: all the information for the measuring device is displayed.

For an overview of the scope of the associated Technical Documentation, refer to the following:


- The chapters "Additional standard documentation on the device" →  8 and "Supplementary device-dependent documentation" →  8
- The *W@M Device Viewer*: Enter the serial number from the nameplate ([www.endress.com/deviceviewer](http://www.endress.com/deviceviewer))
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

## 4.2.1 Transmitter nameplate

### Proline 500 – digital

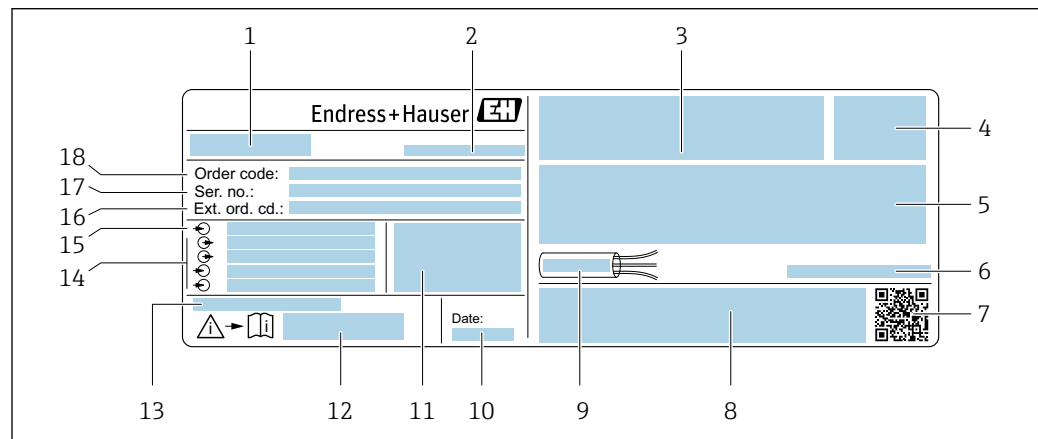


A0029194

 3 Example of a transmitter nameplate

- 1 Name of the transmitter
- 2 Manufacturing location
- 3 Space for approvals: use in hazardous areas
- 4 Degree of protection
- 5 Electrical connection data: available inputs and outputs
- 6 Permitted ambient temperature ( $T_a$ )
- 7 2-D matrix code
- 8 Space for approvals and certificates: e.g. CE mark, C-Tick
- 9 Permitted temperature range for cable
- 10 Manufacturing date: year-month
- 11 Firmware version (FW) and device revision (Dev.Rev.) from the factory
- 12 Document number of safety-related supplementary documentation
- 13 Space for additional information in the case of special products
- 14 Available inputs and outputs, supply voltage
- 15 Electrical connection data: supply voltage
- 16 Extended order code (Ext. ord. cd.)
- 17 Serial number (ser. no.)
- 18 Order code

**Proline 500**

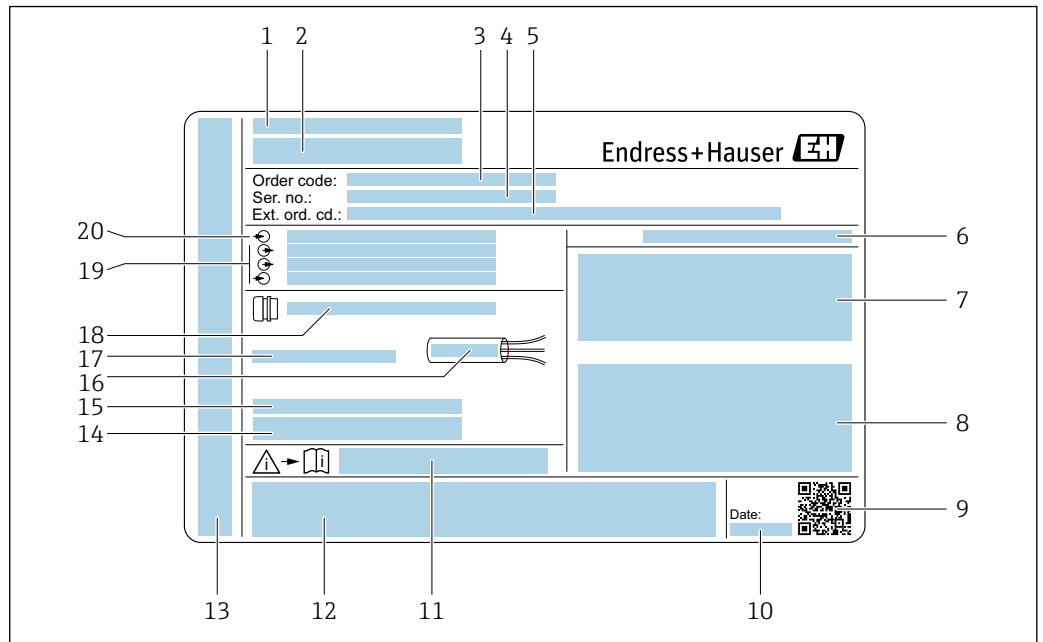


A0029192


**4** Example of a transmitter nameplate

- 1 Manufacturing location
- 2 Name of the transmitter
- 3 Order code
- 4 Serial number (ser. no.)
- 5 Extended order code (Ext. ord. cd.)
- 6 Degree of protection
- 7 Space for approvals: use in hazardous areas
- 8 Electrical connection data: available inputs and outputs
- 9 2-D matrix code
- 10 Manufacturing date: year-month
- 11 Document number of safety-related supplementary documentation
- 12 Space for approvals and certificates: e.g. CE mark, C-Tick
- 13 Space for degree of protection of connection and electronics compartment when used in hazardous areas
- 14 Firmware version (FW) and device revision (Dev.Rev.) from the factory
- 15 Space for additional information in the case of special products
- 16 Permitted temperature range for cable
- 17 Permitted ambient temperature ( $T_a$ )
- 18 Information on cable gland
- 19 Available inputs and outputs, supply voltage
- 20 Electrical connection data: supply voltage

## 4.2.2 Sensor nameplate

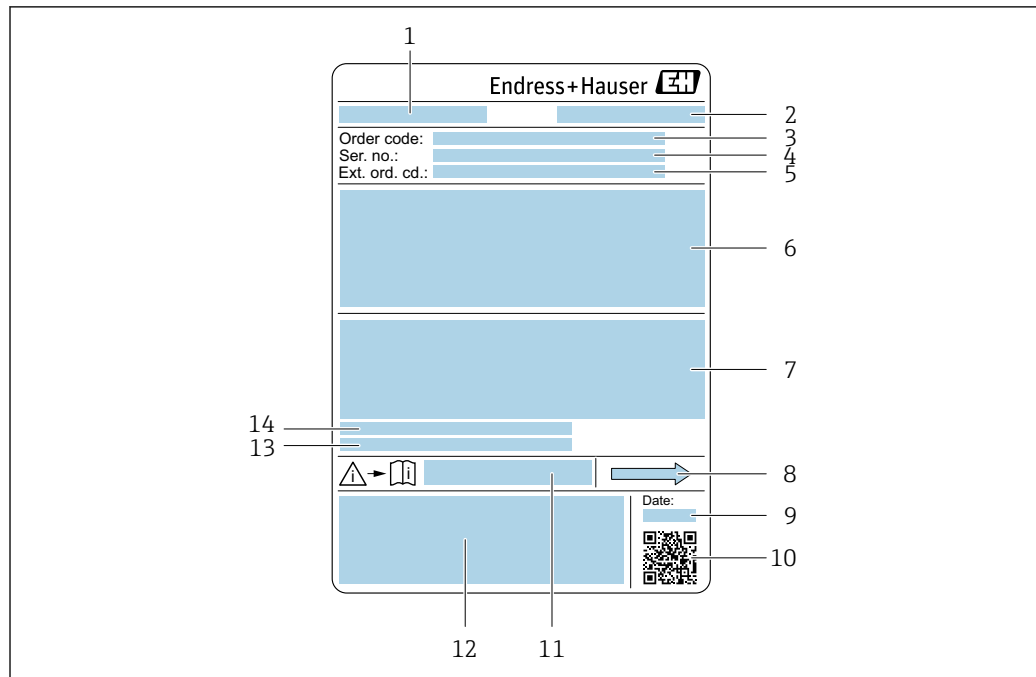

A0029199

 5 Example of a sensor nameplate

- 1 Name of the sensor
- 2 Manufacturing location
- 3 Order code
- 4 Serial number (ser. no.)
- 5 Extended order code (Ext. ord. cd.)
- 6 Nominal diameter of the sensor; flange nominal diameter/nominal pressure; sensor test pressure; medium temperature range; material of measuring tube and manifold; sensor-specific information: e.g. pressure range of secondary containment, wide-range density specification (special density calibration)
- 7 Approval information for explosion protection, Pressure Equipment Directive and degree of protection
- 8 Flow direction
- 9 Manufacturing date: year-month
- 10 2-D matrix code
- 11 Document number of safety-related supplementary documentation
- 12 CE mark, C-Tick
- 13 Surface roughness
- 14 Permitted ambient temperature ( $T_a$ )




### Order code

The measuring device is reordered using the order code.

#### Extended order code

- The device type (product root) and basic specifications (mandatory features) are always listed.
- Of the optional specifications (optional features), only the safety and approval-related specifications are listed (e.g. LA). If other optional specifications are also ordered, these are indicated collectively using the # placeholder symbol (e.g. #LA#).
- If the ordered optional specifications do not include any safety and approval-related specifications, they are indicated by the + placeholder symbol (e.g. XXXXXX-ABCDE+).

### 4.2.3 Symbols on measuring device

| Symbol  | Meaning  |
|---|--|
|  | <b>WARNING!</b><br>This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury. |
|  | <b>Reference to documentation</b><br>Refers to the corresponding device documentation.   |
|  | <b>Protective ground connection</b><br>A terminal which must be connected to ground prior to establishing any other connections.           |

## 5 Storage and transport

### 5.1 Storage conditions


Observe the following notes for storage:

- ▶ Store in the original packaging to ensure protection from shock.
- ▶ Do not remove protective covers or protective caps installed on process connections. They prevent mechanical damage to the sealing surfaces and contamination in the measuring tube.
- ▶ Protect from direct sunlight to avoid unacceptably high surface temperatures.
- ▶ Store in a dry and dust-free place.
- ▶ Do not store outdoors.


Storage temperature →  219

### 5.2 Transporting the product

Transport the measuring device to the measuring point in the original packaging.

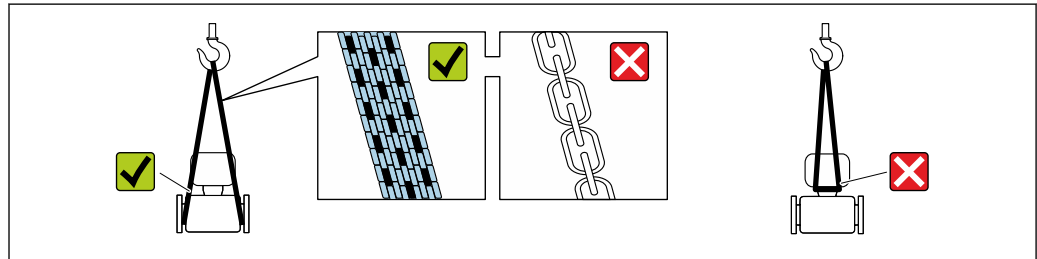

A0029252

 Do not remove protective covers or caps installed on process connections. They prevent mechanical damage to the sealing surfaces and contamination in the measuring tube.


#### 5.2.1 Measuring devices without lifting lugs

##### WARNING

**Center of gravity of the measuring device is higher than the suspension points of the webbing slings.**

Risk of injury if the measuring device slips.

- ▶ Secure the measuring device against slipping or turning.
- ▶ Observe the weight specified on the packaging (stick-on label).

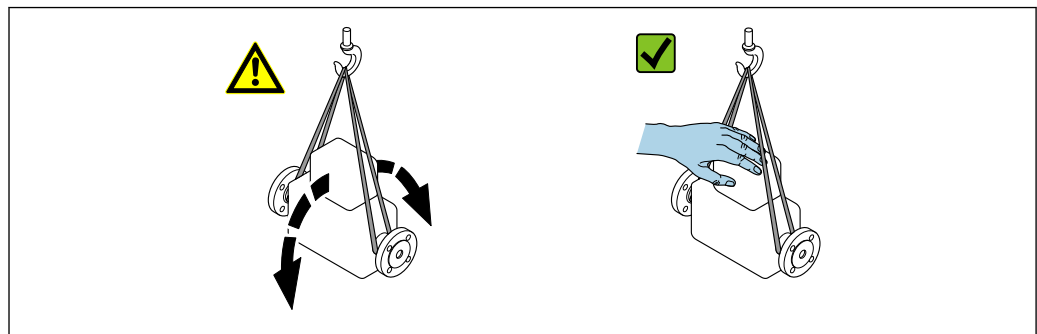

A0029214

## 5.2.2 Measuring devices with lifting lugs

### ⚠ CAUTION

#### Special transportation instructions for devices with lifting lugs

- ▶ Only use the lifting lugs fitted on the device or flanges to transport the device.
- ▶ The device must always be secured at two lifting lugs at least.

## 5.2.3 Transporting with a fork lift

If transporting in wood crates, the floor structure enables the crates to be lifted lengthwise or at both sides using a forklift.

## 5.3 Packaging disposal

All packaging materials are environmentally friendly and 100% recyclable:

- Measuring device secondary packaging: polymer stretch film that conforms to EC Directive 2002/95/EC (RoHS).
- Packaging:
  - Wood crate, treated in accordance with ISPM 15 standard, which is confirmed by the affixed IPPC logo.
  - or
  - Carton in accordance with European Packaging Directive 94/62EC; recyclability is confirmed by the affixed RESY symbol.
- Seaworthy packaging (optional): Wood crate, treated in accordance with ISPM 15 standard, which is confirmed by the affixed IPPC logo.
- Carrying and mounting hardware:
  - Disposable plastic pallet
  - Plastic straps
  - Plastic adhesive strips
- Dunnage: Paper cushion


## 6 Installation

### 6.1 Installation conditions

No special measures such as supports are necessary. External forces are absorbed by the construction of the device.

#### 6.1.1 Mounting position

##### Mounting location

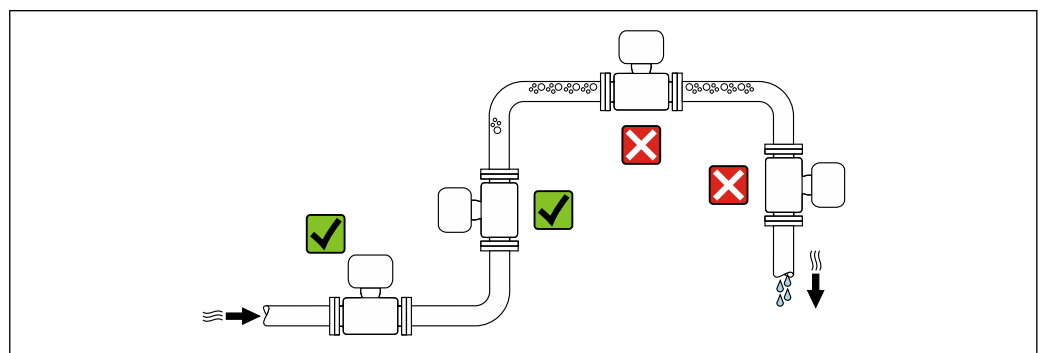


A0028772

To prevent measuring errors arising from accumulation of gas bubbles in the measuring tube, avoid the following mounting locations in the pipe:

- Highest point of a pipeline.
- Directly upstream of a free pipe outlet in a down pipe.

*Installation in down pipes*

However, the following installation suggestion allows for installation in an open vertical pipeline. Pipe restrictions or the use of an orifice with a smaller cross-section than the nominal diameter prevent the sensor running empty while measurement is in progress.

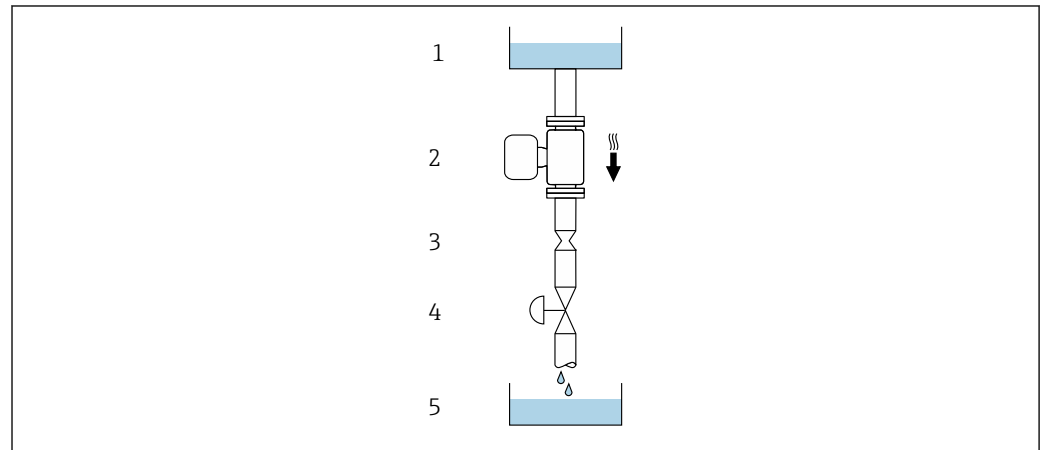

A0028773

6 Installation in a down pipe (e.g. for batching applications)

- 1 Supply tank
- 2 Sensor
- 3 Orifice plate, pipe restriction
- 4 Valve
- 5 Batching tank





| DN    |          | Ø orifice plate, pipe restriction |      |
|-------|----------|-----------------------------------|------|
| [mm]  | [in]     | [mm]                              | [in] |
| 8     | 3/8      | 6                                 | 0.24 |
| 15    | 1/2      | 10                                | 0.40 |
| 15 FB | 1/2 FB   | 15                                | 0.60 |
| 25    | 1        | 14                                | 0.55 |
| 25 FB | 1 FB     | 24                                | 0.95 |
| 40    | 1 1/2    | 22                                | 0.87 |
| 40 FB | 1 1/2 FB | 35                                | 1.38 |
| 50    | 2        | 28                                | 1.10 |
| 50 FB | 2 FB     | 54                                | 2.13 |
| 80    | 3        | 50                                | 1.97 |

FB = Full bore

**Orientation**

The direction of the arrow on the sensor nameplate helps you to install the sensor according to the flow direction (direction of medium flow through the piping).




| Orientation |   | Recommendation  |                  |
|-------------|---|---|------------------|
| <b>A</b>    | Vertical orientation                          | <br>A0015591 | ☑☑               |
| <b>B</b>    | Horizontal orientation, transmitter at top    | <br>A0015589 | ☑☑ <sup>1)</sup> |
| <b>C</b>    | Horizontal orientation, transmitter at bottom | <br>A0015590 | ☑☑ <sup>2)</sup> |
| <b>D</b>    | Horizontal orientation, transmitter at side   | <br>A0015592 | ☑☑               |


- 1) Applications with low process temperatures may decrease the ambient temperature. To maintain the minimum ambient temperature for the transmitter, this orientation is recommended.
- 2) Applications with high process temperatures may increase the ambient temperature. To maintain the maximum ambient temperature for the transmitter, this orientation is recommended.

**Inlet and outlet runs**

No special precautions need to be taken for fittings which create turbulence, such as valves, elbows or T-pieces, as long as no cavitation occurs → 26.

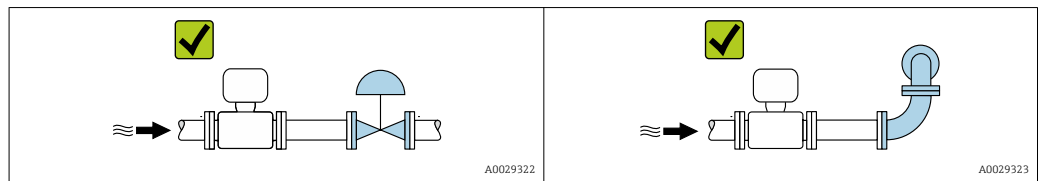

*Installation dimensions*

 For the dimensions and installation lengths of the device, see the "Technical Information" document, "Mechanical construction" section.

**6.1.2 Requirements from environment and process**

**Ambient temperature range**

|   |   |
|---|---|
| <b>Measuring device</b>                 | <ul style="list-style-type: none"> <li>■ -40 to +60 °C (-40 to +140 °F)</li> <li>■ Order code for "Test, certificate", option JP:<br/>-50 to +60 °C (-58 to +140 °F)</li> </ul> |
| <b>Readability of the local display</b> | -20 to +60 °C (-4 to +140 °F)<br>The readability of the display may be impaired at temperatures outside the temperature range.  |

 Dependency of ambient temperature on medium temperature → 219

- ▶ If operating outdoors:  
Avoid direct sunlight, particularly in warm climatic regions.

 You can order a weather protection cover from Endress+Hauser : → 201

### System pressure

It is important that cavitation does not occur, or that gases entrained in the liquids do not outgas.


Cavitation is caused if the pressure drops below the vapor pressure:

- In liquids that have a low boiling point (e.g. hydrocarbons, solvents, liquefied gases)
- In suction lines

► Ensure the system pressure is sufficiently high to prevent cavitation and outgassing.

For this reason, the following mounting locations are recommended:

- At the lowest point in a vertical pipe
- Downstream from pumps (no danger of vacuum)

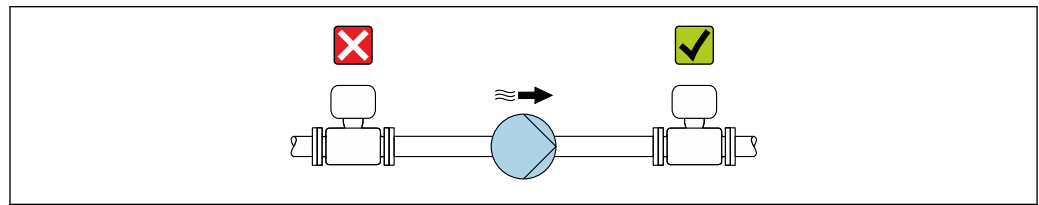

A0028777

### Thermal insulation

In the case of some fluids, it is important to keep the heat radiated from the sensor to the transmitter to a low level. A wide range of materials can be used for the required insulation.

The following device versions are recommended for versions with thermal insulation:


Version with extended neck for insulation:

Order code for "Sensor option", option **CG** with an extended neck length of 105 mm (4.13 in).

#### NOTICE

#### Electronics overheating on account of thermal insulation!

- Recommended orientation: horizontal orientation, sensor connection housing pointing downwards.
- Do not insulate the sensor connection housing.
- Maximum permissible temperature at the lower end of the sensor connection housing: 80 °C (176 °F)
- Thermal insulation with extended neck free: the insulation is omitted around the extended neck. We recommend that you do not insulate the extended neck in order to ensure optimum dissipation of heat.

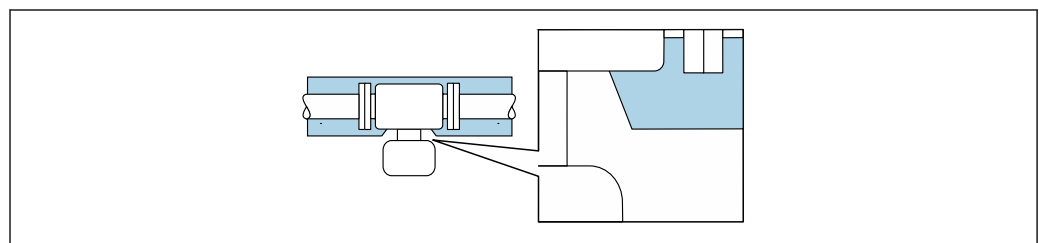

A0034391

7 Thermal insulation with extended neck free

**Heating****NOTICE****Electronics can overheat due to elevated ambient temperature!**

- ▶ Observe maximum permitted ambient temperature for the transmitter .
- ▶ Depending on the fluid temperature, take the device orientation requirements into account .

**NOTICE****Danger of overheating when heating**

- ▶ Ensure that the temperature at the lower end of the transmitter housing does not exceed 80 °C (176 °F).
- ▶ Ensure that convection takes place on a sufficiently large scale at the transmitter neck.
- ▶ Ensure that a sufficiently large area of the housing support remains exposed. The uncovered part serves as a radiator and protects the electronics from overheating and excessive cooling.

*Heating options*

If a fluid requires that no heat loss should occur at the sensor, users can avail of the following heating options:

- Electrical heating, e.g. with electric band heaters
- Via pipes carrying hot water or steam
- Via heating jackets

*Using an electrical trace heating system*

If heating is regulated via phase angle control or pulse packages, magnetic fields can affect the measured values (= for values that are greater than the values permitted by the EN standard (sine 30 A/m)).

For this reason, the sensor must be magnetically shielded: the housing can be shielded with tin plates or electric sheets without a privileged direction (e.g. V330-35A).

The sheet must have the following properties:


- Relative magnetic permeability  $\mu_r \geq 300$
- Plate thickness  $d \geq 0.35$  mm ( $d \geq 0.014$  in)

**Vibrations**

The high oscillation frequency of the measuring tubes ensures that the correct operation of the measuring system is not influenced by plant vibrations.

**6.1.3 Special mounting instructions****Ensuring complete drainability**

When the sensor is installed in a horizontal line, eccentric clamps can be used to ensure complete drainability. When the system is pitched in a specific direction and at a specific slope, gravity can be used to achieve complete drainability. The sensor must be mounted in the correct position to ensure full drainability in the horizontal position. Markings on the sensor show the correct mounting position to optimize drainability.

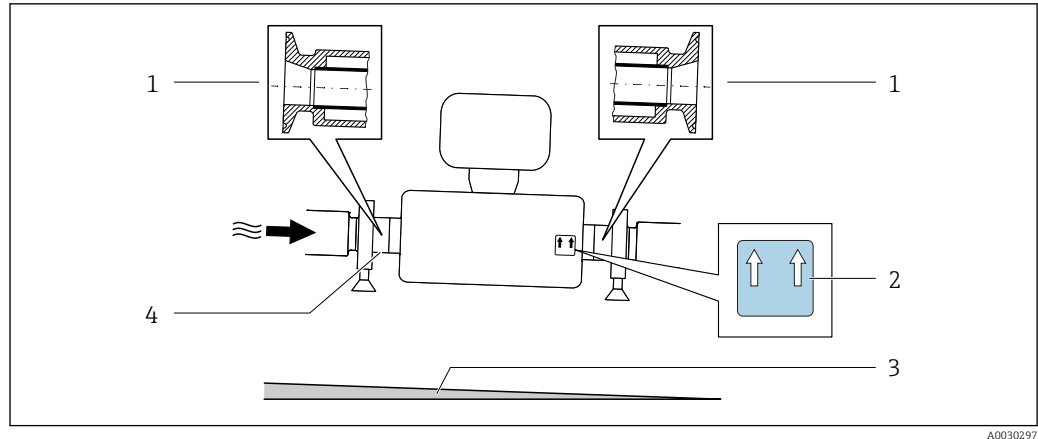


- 1 Eccentric clamp connection
- 2 "This side up" label indicates which side is up
- 3 Slope the device in accordance with the hygiene guidelines. Slope: approx. 2 % or 21 mm/m (0.24 in/feet)
- 4 Line on the underside indicates the lowest point of the eccentric process connection.

**Securing with mounting clamp in the case of hygiene connections**

It is not necessary to provide additional support for the sensor for operational performance purposes. If, however, additional support is required for installation purposes, the following dimensions must be observed.

Use mounting clamp with lining between clamp and measuring instrument.

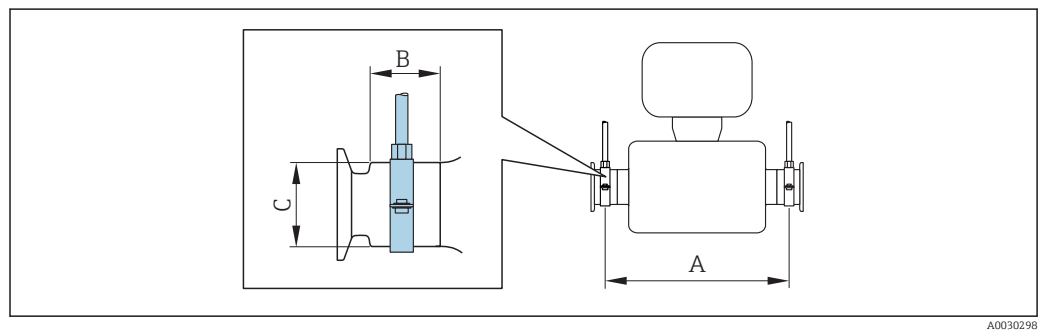

| DN    |       | A    |       | B    |      | C    |      |
|-------|-------|------|-------|------|------|------|------|
| [mm]  | [in]  | [mm] | [in]  | [mm] | [in] | [mm] | [in] |
| 8     | 8     | 373  | 14.69 | 20   | 0.79 | 40   | 1.57 |
| 15    | 15    | 409  | 16.1  | 20   | 0.79 | 40   | 1.57 |
| 15 FB | 15 FB | 539  | 21.22 | 30   | 1.18 | 44.5 | 1.75 |
| 25    | 25    | 539  | 21.22 | 30   | 1.18 | 44.5 | 1.75 |
| 25 FB | 25 FB | 668  | 26.3  | 28   | 1.1  | 60   | 2.36 |
| 40    | 40    | 668  | 26.3  | 28   | 1.1  | 60   | 2.36 |
| 40 FB | 40 FB | 780  | 30.71 | 35   | 1.38 | 80   | 3.15 |
| 50    | 50    | 780  | 30.71 | 35   | 1.38 | 80   | 3.15 |
| 50 FB | 50 FB | 1152 | 45.35 | 57   | 2.24 | 90   | 3.54 |
| 80    | 80    | 1152 | 45.35 | 57   | 2.24 | 90   | 3.54 |


### Zero point adjustment

All measuring devices are calibrated in accordance with state-of-the-art technology. Calibration takes place under reference conditions → 214. Therefore, a zero point adjustment in the field is generally not required.


Experience shows that zero point adjustment is advisable only in special cases:

- To achieve maximum measuring accuracy even with low flow rates.
- Under extreme process or operating conditions (e.g. very high process temperatures or very high-viscosity fluids).

### Protective cover

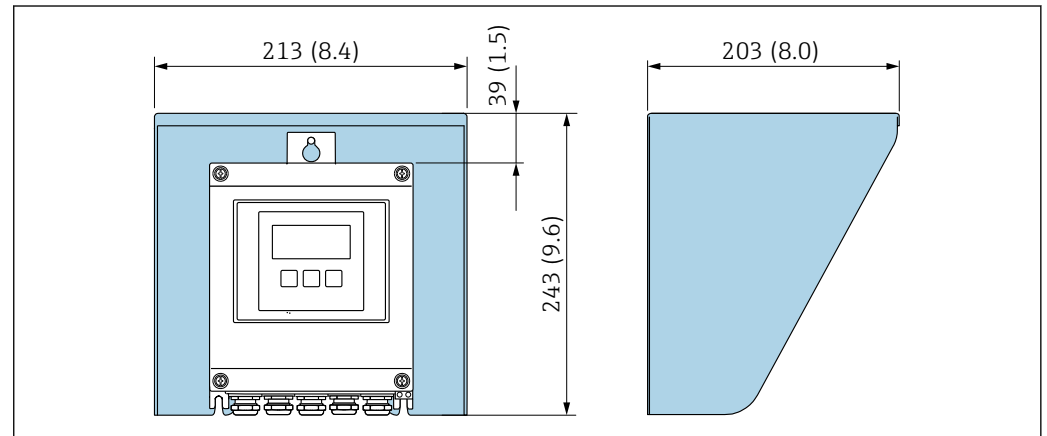

8 Weather protection cover for Proline 500 – digital

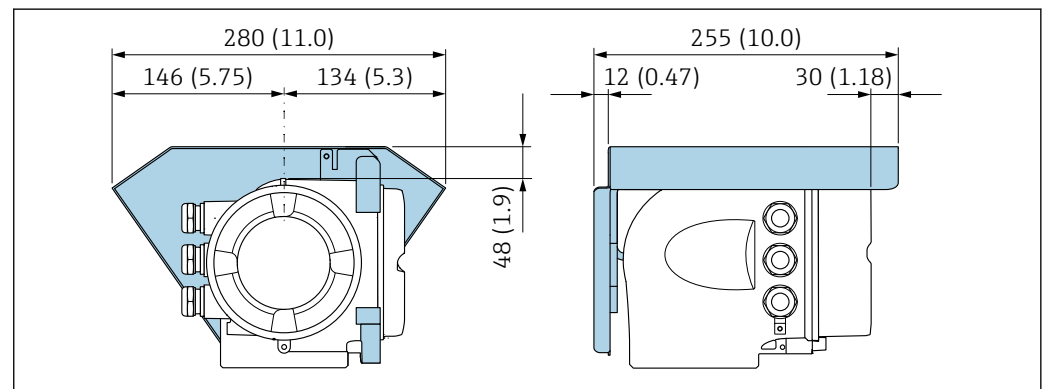

9 Weather protection cover for Proline 500


### Cover locking: Proline 500

#### NOTICE

**Order code "Transmitter housing", option L "Cast, stainless": The covers of the transmitter housing are provided with a borehole to lock the cover.**

The cover can be locked using screws and a chain or cable provided by the customer.

- ▶ It is recommended to use stainless steel cables or chains.
- ▶ If a protective coating is applied, it is recommended to use a heat shrink tube to protect the housing paint.

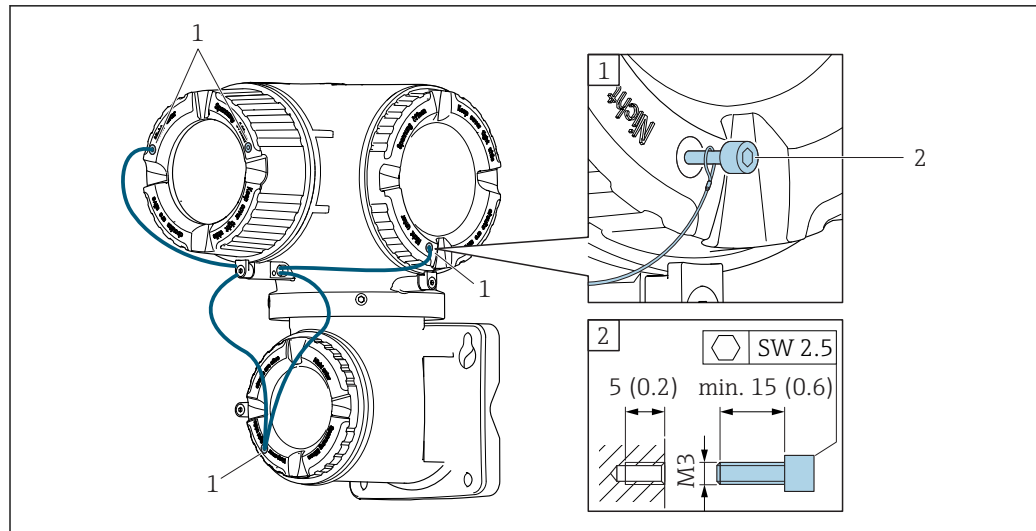

A0029799

- 1 Cover borehole for the securing screw  
2 Securing screw to lock the cover

## 6.2 Mounting the measuring device

### 6.2.1 Required tools

#### For transmitter

For mounting on a post:

- Proline 500 – digital transmitter
  - Open-ended wrench AF 10
  - Torx screwdriver TX 25
- Proline 500 transmitter
  - Open-ended wrench AF 13

For wall mounting:

Drill with drill bit  $\varnothing$  6.0 mm

#### For sensor

For flanges and other process connections: Corresponding mounting tools

### 6.2.2 Preparing the measuring device

1. Remove all remaining transport packaging.
2. Remove any protective covers or protective caps present from the sensor.
3. Remove stick-on label on the electronics compartment cover.

### 6.2.3 Mounting the measuring device


#### **⚠ WARNING**

#### **Danger due to improper process sealing!**

- ▶ Ensure that the inside diameters of the gaskets are greater than or equal to that of the process connections and piping.
- ▶ Ensure that the gaskets are clean and undamaged.
- ▶ Install the gaskets correctly.

1. Ensure that the direction of the arrow on the nameplate of the sensor matches the flow direction of the fluid.

2. Install the measuring device or turn the transmitter housing so that the cable entries do not point upwards.

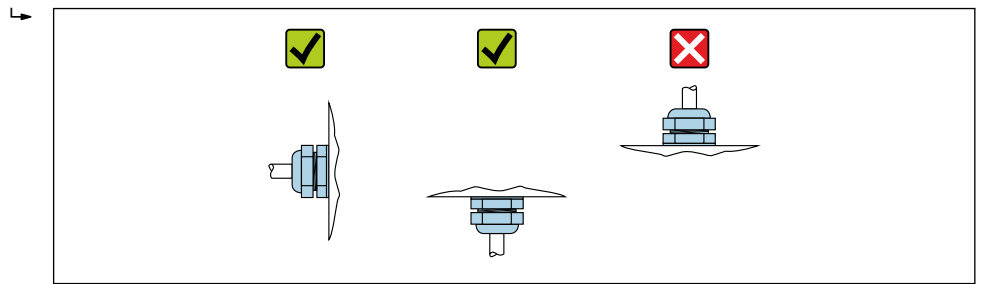

A0029263

### 6.2.4 Mounting the transmitter housing: Proline 500 – digital

**CAUTION**

**Ambient temperature too high!**

Danger of electronics overheating and housing deformation.

- ▶ Do not exceed the permitted maximum ambient temperature .
- ▶ If operating outdoors: Avoid direct sunlight and exposure to weathering, particularly in warm climatic regions.

**CAUTION**

**Excessive force can damage the housing!**

- ▶ Avoid excessive mechanical stress.

The transmitter can be mounted in the following ways:

- Post mounting
- Wall mounting


**Post mounting**

**WARNING**

**Excessive tightening torque applied to the fixing screws!**

Risk of damaging the plastic transmitter.


- ▶ Tighten the fixing screws as per the tightening torque: 2 Nm (1.5 lbf ft)

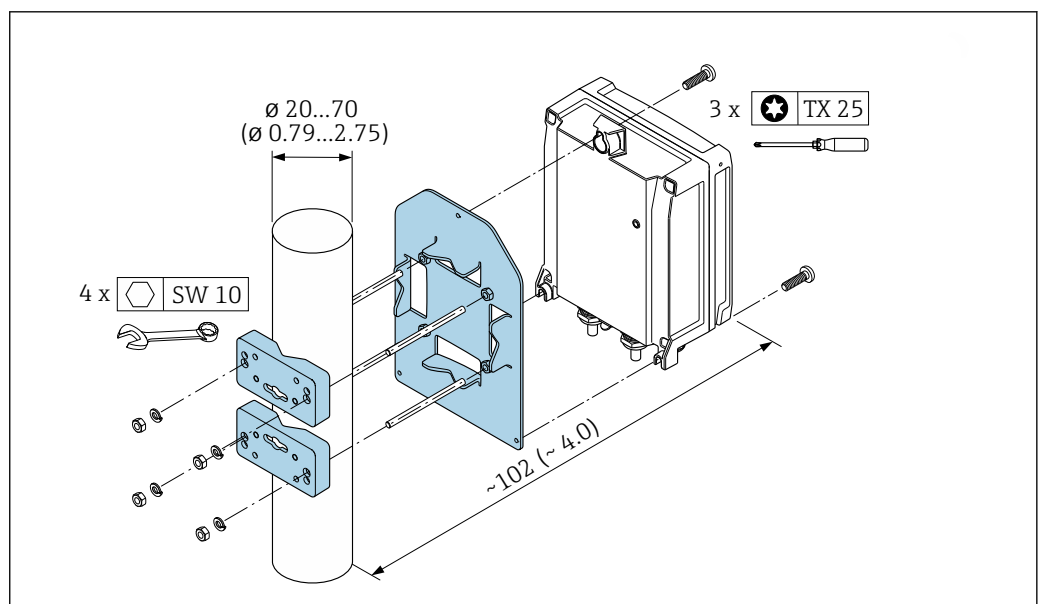

A0029051

10 Engineering unit mm (in)

### Wall mounting

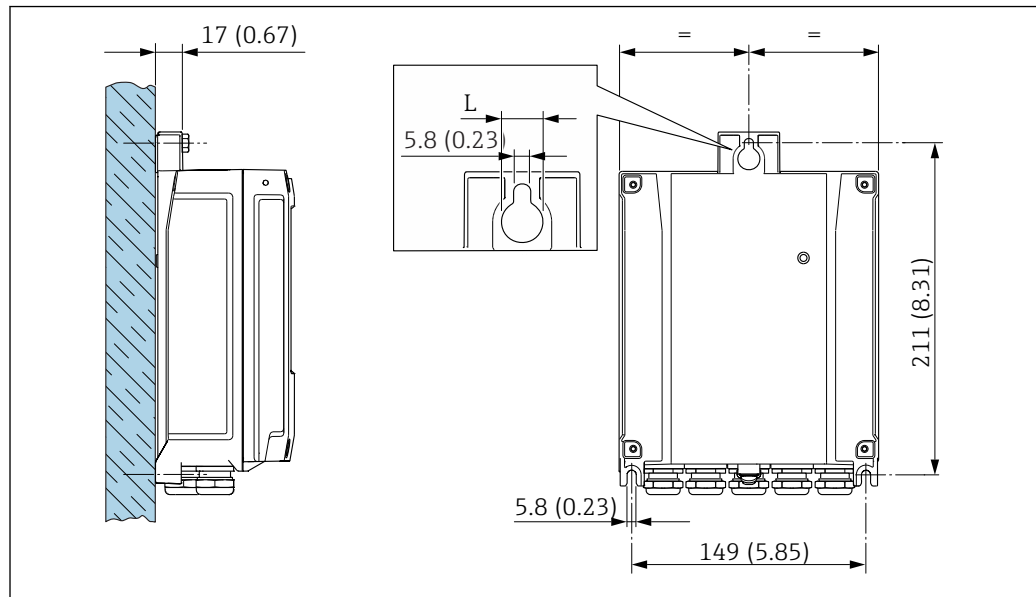

11 Engineering unit mm (in)

L Depends on order code for "Transmitter housing"

Order code for "Transmitter housing"

- Option A, aluminum coated: L = 14 mm (0.55 in)
- Option D, polycarbonate: L = 13 mm (0.51 in)

1. Drill the holes.
2. Insert wall plugs into the drilled holes.
3. Screw in the securing screws slightly at first.
4. Fit the transmitter housing over the securing screws and mount in place.
5. Tighten the securing screws.

### 6.2.5 Mounting the transmitter housing: Proline 500

#### ⚠ CAUTION

#### Ambient temperature too high!

Danger of electronics overheating and housing deformation.

- ▶ Do not exceed the permitted maximum ambient temperature .
- ▶ If operating outdoors: Avoid direct sunlight and exposure to weathering, particularly in warm climatic regions.

#### ⚠ CAUTION


#### Excessive force can damage the housing!

- ▶ Avoid excessive mechanical stress.

The transmitter can be mounted in the following ways:

- Post mounting
- Wall mounting

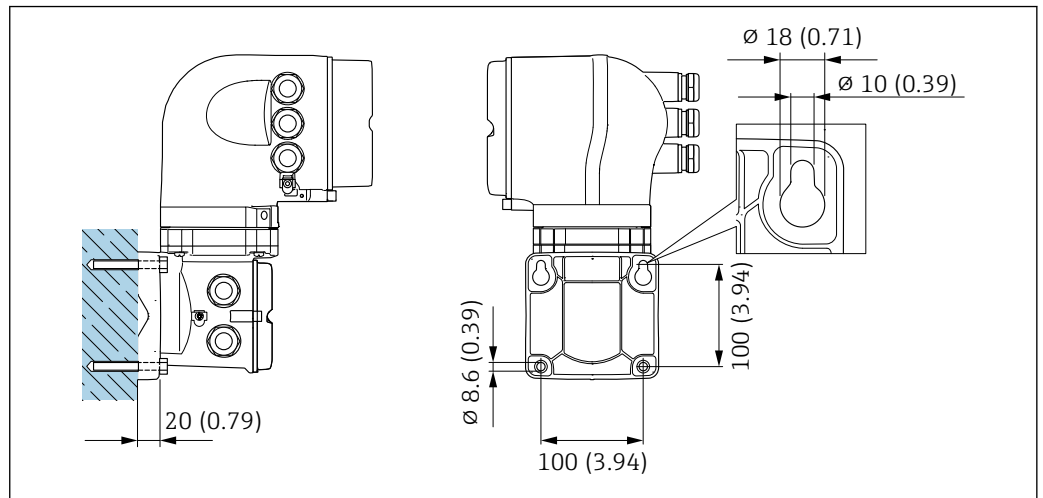

**Wall mounting**

12 Engineering unit mm (in)

1. Drill the holes.
2. Insert wall plugs into the drilled holes.
3. Screw in the securing screws slightly at first.
4. Fit the transmitter housing over the securing screws and mount in place.
5. Tighten the securing screws.


### Post mounting

#### **⚠ WARNING**

Order code for "Transmitter housing", option L "Cast, stainless": cast transmitters are very heavy.

They are unstable if they are not mounted on a secure, fixed post.


- Only mount the transmitter on a secure, fixed post on a stable surface.

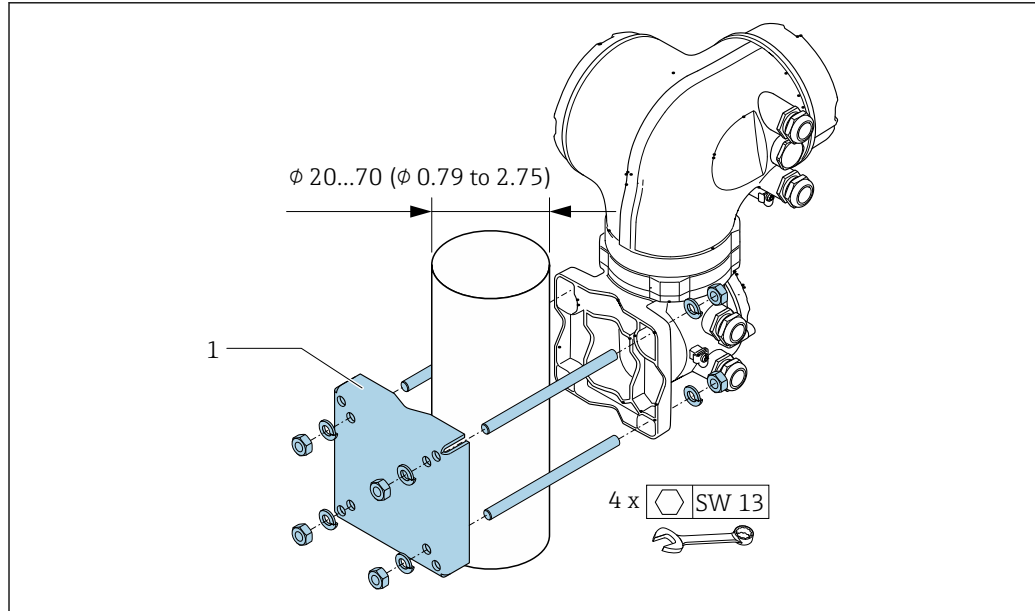

13 Engineering unit mm (in)

### 6.2.6 Turning the transmitter housing: Proline 500

To provide easier access to the connection compartment or display module, the transmitter housing can be turned.

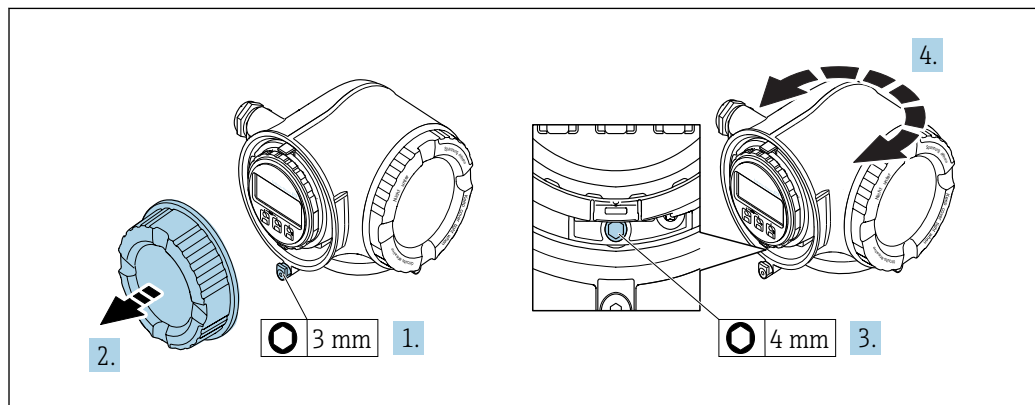


1. Depending on the device version: Loosen the securing clamp of the connection compartment cover.
2. Unscrew the connection compartment cover.
3. Release the fixing screw.
4. Turn the housing to the desired position.
5. Firmly tighten the securing screw.
6. Screw on the connection compartment cover

- 7. Depending on the device version: Attach the securing clamp of the connection compartment cover.

### 6.2.7 Turning the display module: Proline 500

The display module can be turned to optimize display readability and operability.

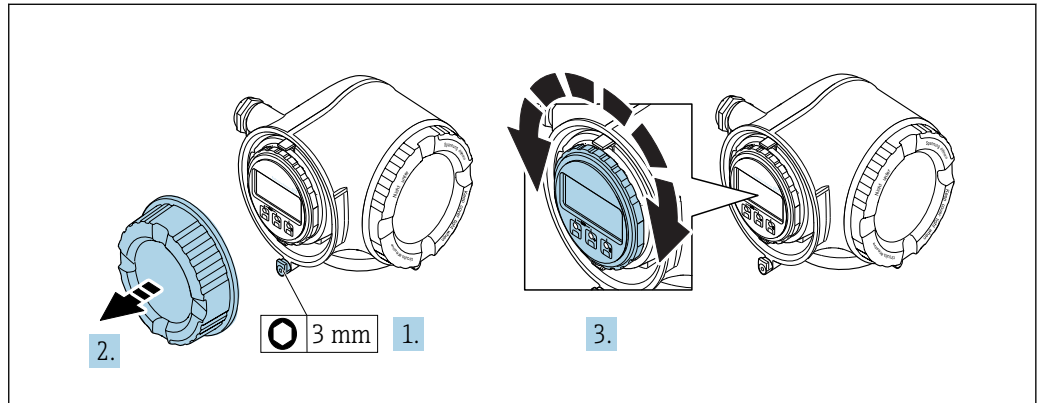

A0030035

- 1. Depending on the device version: Loosen the securing clamp of the connection compartment cover.
- 2. Unscrew the connection compartment cover.
- 3. Turn the display module to the desired position: max.  $8 \times 45^\circ$  in each direction.
- 4. Screw on the connection compartment cover.
- 5. Depending on the device version: Attach the securing clamp of the connection compartment cover.

### 6.3 Post-installation check

|   |                          |
|---|--------------------------|
| Is the device undamaged (visual inspection)?  | <input type="checkbox"/> |
| Does the measuring device conform to the measuring point specifications?<br>For example: <ul style="list-style-type: none"> <li>▪ Process temperature → 219</li> <li>▪ Process pressure (refer to the section on "Pressure-temperature ratings" in the "Technical Information" document)</li> <li>▪ Ambient temperature</li> <li>▪ Measuring range</li> </ul> | <input type="checkbox"/> |
| Has the correct orientation for the sensor been selected ? <ul style="list-style-type: none"> <li>▪ According to sensor type</li> <li>▪ According to medium temperature</li> <li>▪ According to medium properties (outgassing, with entrained solids)</li> </ul>  | <input type="checkbox"/> |
| Does the arrow on the sensor nameplate match the direction of flow of the fluid through the piping → 24?  | <input type="checkbox"/> |
| Are the measuring point identification and labeling correct (visual inspection)?  | <input type="checkbox"/> |
| Is the device adequately protected from precipitation and direct sunlight?  | <input type="checkbox"/> |
| Are the securing screw and securing clamp tightened securely?   | <input type="checkbox"/> |

## 7 Electrical connection

### NOTICE

The measuring device does not have an internal circuit breaker.

- ▶ For this reason, assign the measuring device a switch or power-circuit breaker so that the power supply line can be easily disconnected from the mains.
- ▶ Although the measuring device is equipped with a fuse, additional overcurrent protection (maximum 10 A) should be integrated into the system installation.

### 7.1 Connection conditions

#### 7.1.1 Required tools

- For cable entries: Use corresponding tools
- For securing clamp: Allen key 3 mm
- Wire stripper
- When using stranded cables: crimper for wire end ferrule
- For removing cables from terminal: Flat blade screwdriver  $\leq 3$  mm (0.12 in)

#### 7.1.2 Requirements for connecting cable

The connecting cables provided by the customer must fulfill the following requirements.

##### Electrical safety

In accordance with applicable federal/national regulations.

##### Protective ground cable

Cable: 2.1 mm<sup>2</sup> (14 AWG)

The grounding impedance must be less than 1  $\Omega$ .

##### Permitted temperature range

- The installation guidelines that apply in the country of installation must be observed.
- The cables must be suitable for the minimum and maximum temperatures to be expected.

##### Power supply cable

Standard installation cable is sufficient.

##### Signal cable

*Current output 4 to 20 mA HART*

A shielded cable is recommended. Observe grounding concept of the plant.

*Current output 0/4 to 20 mA*

Standard installation cable is sufficient.

*Pulse/frequency/switch output*

Standard installation cable is sufficient.

*Double pulse output*

Standard installation cable is sufficient.

*Relay output*

Standard installation cable is sufficient.

*Current input 0/4 to 20 mA*

Standard installation cable is sufficient.

*Status input*


Standard installation cable is sufficient.

**Cable diameter**

- Cable glands supplied:  
M20 × 1.5 with cable Ø 6 to 12 mm (0.24 to 0.47 in)
- Spring-loaded terminals: Suitable for strands and strands with ferrules.  
Conductor cross-section 0.2 to 2.5 mm<sup>2</sup> (24 to 12 AWG).

**Choice of connecting cable between the transmitter and sensor**

Depends on the type of transmitter and the installation zones

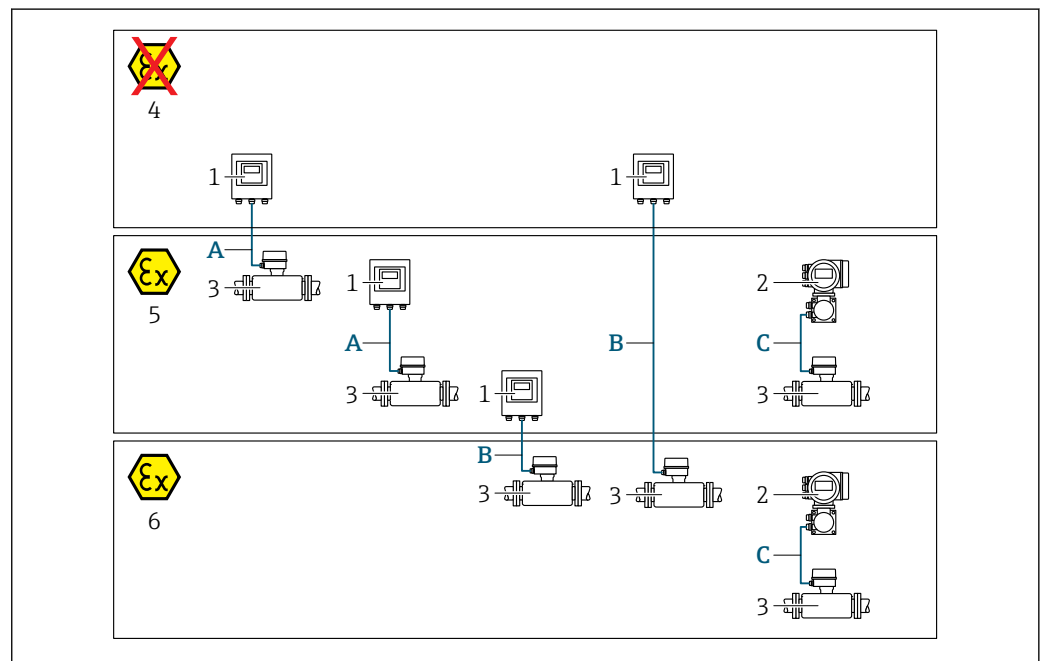

A0032476

- 1 Proline 500 digital transmitter
- 2 Proline 500 transmitter
- 3 Promass sensor
- 4 Non-hazardous area
- 5 Hazardous area: Zone 2; Class I, Division 2
- 6 Hazardous area: Zone 1; Class I, Division 1
- A Standard cable to 500 digital transmitter → 38  
Transmitter installed in the non-hazardous area or hazardous area: Zone 2; Class I, Division 2 / sensor installed in the hazardous area: Zone 2; Class I, Division 2
- B Standard cable to 500 digital transmitter → 38  
Transmitter installed in the hazardous area: Zone 2; Class I, Division 2 / sensor installed in the hazardous area: Zone 1; Class I, Division 1
- C Signal cable to 500 transmitter → 39  
Transmitter and sensor installed in the hazardous area: Zone 2; Class I, Division 2 oder Zone 1; Class I, Division 1

*A: Connecting cable between sensor and transmitter: Proline 500 – digital**Standard cable*

A standard cable with the following specifications can be used as the connecting cable.

|                        |  |
|------------------------|--|
| <b>Design</b>          | 4 cores (2 pairs); uninsulated stranded CU wires; pair-stranded with common shield |
| <b>Shielding</b>       | Tin-plated copper-braid, optical cover $\geq 85\%$                                 |
| <b>Loop resistance</b> | Power supply line (+, -): maximum $10\ \Omega$                                     |
| <b>Cable length</b>    | Maximum 300 m (1000 ft), see the following table.                                  |

| <b>Cross-section</b>          | <b>Cable length [max.]</b> |
|-------------------------------|----------------------------|
| 0.34 mm <sup>2</sup> (AWG 22) | 80 m (270 ft)              |
| 0.50 mm <sup>2</sup> (AWG 20) | 120 m (400 ft)             |
| 0.75 mm <sup>2</sup> (AWG 18) | 180 m (600 ft)             |
| 1.00 mm <sup>2</sup> (AWG 17) | 240 m (800 ft)             |
| 1.50 mm <sup>2</sup> (AWG 15) | 300 m (1000 ft)            |

*Optionally available connecting cable*




|                               |  |
|-------------------------------|--|
| <b>Design</b>                 | 2 × 2 × 0.34 mm <sup>2</sup> (AWG 22) PVC cable <sup>1)</sup> with common shield (2 pairs, uninsulated stranded CU wires; pair-stranded)   |
| <b>Flame resistance</b>       | According to DIN EN 60332-1-2  |
| <b>Oil-resistance</b>         | According to DIN EN 60811-2-1  |
| <b>Shielding</b>              | Tin-plated copper-braid, optical cover $\geq 85\%$   |
| <b>Operating temperature</b>  | When mounted in a fixed position: $-50$ to $+105\ ^\circ\text{C}$ ( $-58$ to $+221\ ^\circ\text{F}$ ); when cable can move freely: $-25$ to $+105\ ^\circ\text{C}$ ( $-13$ to $+221\ ^\circ\text{F}$ ) |
| <b>Available cable length</b> | Fixed: 20 m (65 ft); variable: up to maximum 50 m (165 ft)   |

1) UV radiation can impair the cable outer sheath. Protect the cable from direct sunshine where possible.

*B: Connecting cable between sensor and transmitter: Proline 500 - digital**Standard cable*

A standard cable with the following specifications can be used as the connecting cable.

|  |  |
|--|--|
| <b>Design</b>                            | 4, 6, 8 cores (2, 3, 4 pairs); uninsulated stranded CU wires; pair-stranded with common shield                     |
| <b>Shielding</b>                         | Tin-plated copper-braid, optical cover $\geq 85\%$   |
| <b>Capacitance C</b>                     | Maximum 760 nF IIC, maximum 4.2 $\mu\text{F}$ IIB  |
| <b>Inductance L</b>                      | Maximum 26 $\mu\text{H}$ IIC, maximum 104 $\mu\text{H}$ IIB  |
| <b>Inductance/resistance ratio (L/R)</b> | Maximum 8.9 $\mu\text{H}/\Omega$ IIC, maximum 35.6 $\mu\text{H}/\Omega$ IIB (e.g. in accordance with IEC 60079-25) |
| <b>Loop resistance</b>                   | Power supply line (+, -): maximum $5\ \Omega$  |
| <b>Cable length</b>                      | Maximum 150 m (500 ft), see the following table.   |
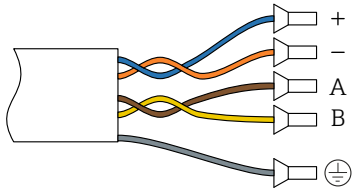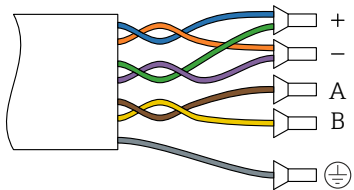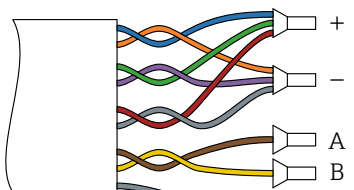
| Cross-section                            | Cable length [max.] | Termination  |
|--|---------------------|--|
| 2 x 2 x 0.50 mm <sup>2</sup><br>(AWG 22) | 50 m (165 ft)       | 2 x 2 x 0.50 mm <sup>2</sup> (AWG 22)<br><br><ul style="list-style-type: none"><li>▪ +, - = 0.5 mm<sup>2</sup></li><li>▪ A, B = 0.5 mm<sup>2</sup></li></ul>  |
| 3 x 2 x 0.50 mm <sup>2</sup><br>(AWG 22) | 100 m (330 ft)      | 3 x 2 x 0.50 mm <sup>2</sup> (AWG 22)<br><br><ul style="list-style-type: none"><li>▪ +, - = 1.0 mm<sup>2</sup></li><li>▪ A, B = 0.5 mm<sup>2</sup></li></ul>  |
| 4 x 2 x 0.50 mm <sup>2</sup><br>(AWG 22) | 150 m (500 ft)      | 4 x 2 x 0.50 mm <sup>2</sup> (AWG 22)<br><br><ul style="list-style-type: none"><li>▪ +, - = 1.5 mm<sup>2</sup></li><li>▪ A, B = 0.5 mm<sup>2</sup></li></ul> |

*Optionally available connecting cable*

|                               |  |
|-------------------------------|--|
| <b>Connecting cable for</b>   | Zone 1; Class I, Division 1  |
| <b>Standard cable</b>         | 2 × 2 × 0.5 mm <sup>2</sup> (AWG 20) PVC cable <sup>1)</sup> with common shield (2 pairs, pair-stranded)                       |
| <b>Flame resistance</b>       | According to DIN EN 60332-1-2  |
| <b>Oil-resistance</b>         | According to DIN EN 60811-2-1  |
| <b>Shielding</b>              | Tin-plated copper-braid, optical cover ≥ 85 %  |
| <b>Operating temperature</b>  | When mounted in a fixed position: -50 to +105 °C (-58 to +221 °F); when cable can move freely: -25 to +105 °C (-13 to +221 °F) |
| <b>Available cable length</b> | Fixed: 20 m (65 ft); variable: up to maximum 50 m (165 ft)   |

1) UV radiation can impair the cable outer sheath. Protect the cable from direct sunshine where possible.

*C: Connecting cable between sensor and transmitter: Proline 500*

|                             |   |
|-----------------------------|---|
| <b>Standard cable</b>       | 6 × 0.38 mm <sup>2</sup> PVC cable <sup>1)</sup> with common shield and individually shielded cores |
| <b>Conductor resistance</b> | ≤ 50 Ω/km (0.015 Ω/ft)  |

|                                     |   |
|-------------------------------------|---|
| Capacitance: core/shield            | ≤420 pF/m (128 pF/ft)                   |
| Cable length (max.)                 | 20 m (65 ft)                            |
| Cable lengths (available for order) | 5 m (15 ft), 10 m (32 ft), 20 m (65 ft) |
| Operating temperature               | max. 105 °C (221 °F)                    |

- 1) UV radiation can impair the cable outer sheath. Protect the cable from direct sunshine where possible.

### 7.1.3 Terminal assignment

#### Transmitter: supply voltage, input/outputs



The terminal assignment of the inputs and outputs depends on the individual order version of the device. The device-specific terminal assignment is documented on an adhesive label in the terminal cover.

| Supply voltage   |       | Input/output 1 |        | Input/output 2 |        | Input/output 3 |        | Input/output 4 |        |
|--|-------|----------------|--------|----------------|--------|----------------|--------|----------------|--------|
| 1 (+)  | 2 (-) | 26 (+)         | 27 (-) | 24 (+)         | 25 (-) | 22 (+)         | 23 (-) | 20 (+)         | 21 (-) |
| Device-specific terminal assignment: adhesive label in terminal cover. |       |                |        |                |        |                |        |                |        |

#### Transmitter and sensor connection housing: connecting cable

The sensor and transmitter, which are mounted in separate locations, are interconnected by a connecting cable. The cable is connected via the sensor connection housing and the transmitter housing.

Terminal assignment and connection of the connecting cable:

- Proline 500 – digital →  41
- Proline 500 →  48

### 7.1.4 Preparing the measuring device

Carry out the steps in the following order:


1. Mount the sensor and transmitter.
2. Connection housing, sensor: Connect connecting cable.
3. Transmitter: Connect connecting cable.
4. Transmitter: Connect signal cable and cable for supply voltage.

#### NOTICE

##### Insufficient sealing of the housing!

Operational reliability of the measuring device could be compromised.

- ▶ Use suitable cable glands corresponding to the degree of protection.

1. Remove dummy plug if present.
2. If the measuring device is supplied without cable glands:  
Provide suitable cable gland for corresponding connecting cable.
3. If the measuring device is supplied with cable glands:  
Observe requirements for connecting cables →  36.



## 7.2 Connecting the measuring device: Proline 500 - digital

### NOTICE

#### Limitation of electrical safety due to incorrect connection!

- ▶ Have electrical connection work carried out by appropriately trained specialists only.
- ▶ Observe applicable federal/national installation codes and regulations.
- ▶ Comply with local workplace safety regulations.
- ▶ Always connect the protective ground cable ⊕ before connecting additional cables.
- ▶ For use in potentially explosive atmospheres, observe the information in the device-specific Ex documentation.


### 7.2.1 Connecting the connecting cable

#### ⚠ WARNING

#### Risk of damaging the electronic components!

- ▶ Connect the sensor and transmitter to the same potential equalization.
- ▶ Only connect the sensor to a transmitter with the same serial number.
- ▶ Ground the connection housing of the sensor via the external screw terminal.

#### Connecting cable terminal assignment

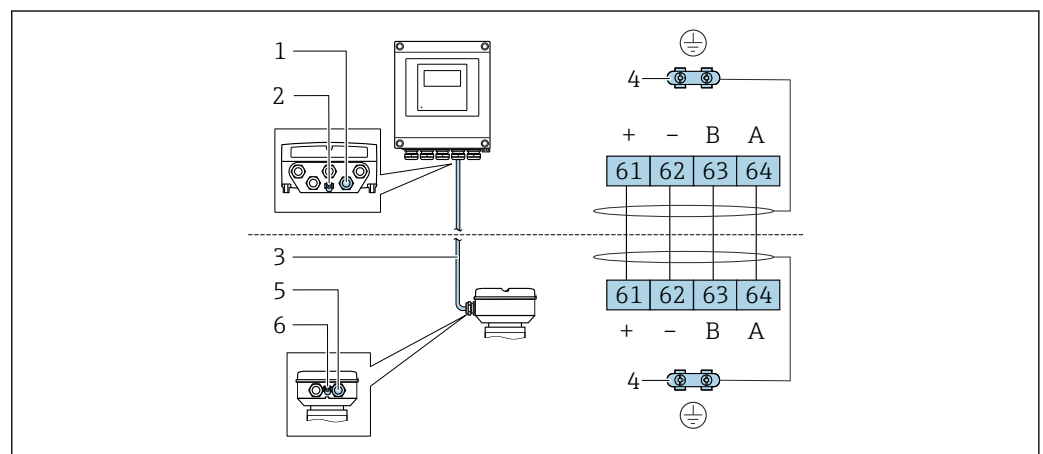

A0028198

- 1 Cable entry for cable on transmitter housing
- 2 Protective earth (PE)
- 3 Connecting cable ISEM communication
- 4 Grounding via ground connection; on device plug versions grounding is through the plug itself
- 5 Cable entry for cable or connection of device plug on sensor connection housing
- 6 Protective earth (PE)

#### Connecting the connecting cable to the sensor connection housing

- Connection via terminals with order code for "Sensor connection housing":
  - Option A "Aluminum, coated" → ☞ 42
  - Option B "Stainless" → ☞ 43
  - Option L "Cast, stainless" → ☞ 42
- Connection via connectors with order code for "Sensor connection housing":
  - Option C "Ultra-compact hygienic, stainless" → ☞ 44


#### Connecting the connecting cable to the transmitter

The cable is connected to the transmitter via terminals → ☞ 45.

### Connecting the sensor connection housing via terminals

For the device version with the order code for "Sensor connection housing":

- Option A "Aluminum coated"
- Option L "Cast, stainless"

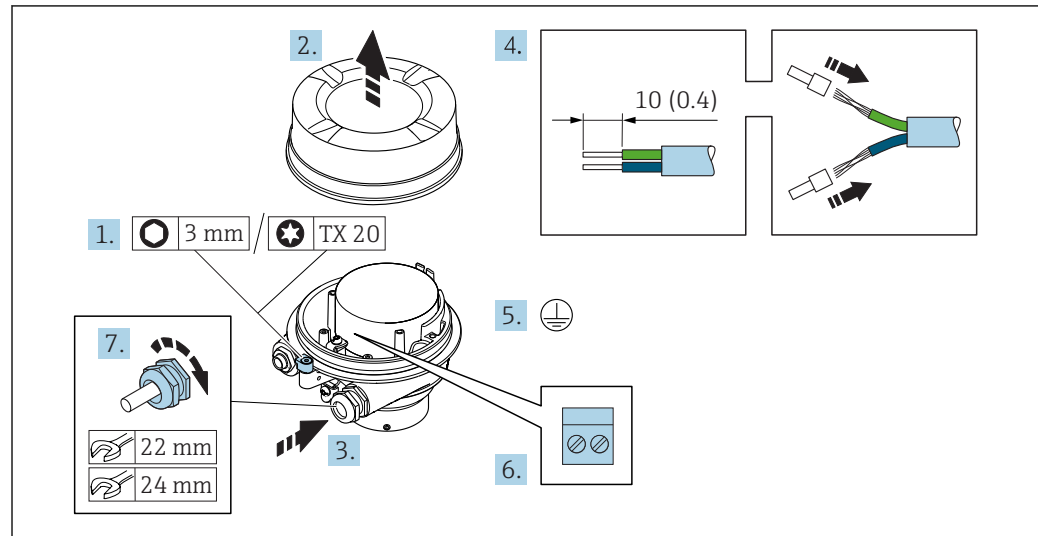

A0029616

1. Loosen the securing clamp of the housing cover.
2. Unscrew the housing cover.
3. Push the cable through the cable entry . To ensure tight sealing, do not remove the sealing ring from the cable entry.
4. Strip the cable and cable ends. In the case of stranded cables, fit ferrules.
5. Connect the protective ground.
6. Connect the cable in accordance with the connecting cable terminal assignment.
7. Firmly tighten the cable glands.
  - ↳ This concludes the process for connecting the connecting cable.

#### **⚠ WARNING**


**Housing degree of protection voided due to insufficient sealing of the housing.**

- ▶ Screw in the thread on the cover without using any lubricant. The thread on the cover is coated with a dry lubricant.

8. Screw on the housing cover.
9. Tighten the securing clamp of the housing cover.

### Connecting the sensor connection housing via terminals

For the device version with the order code for "Sensor connection housing":  
Option B "Stainless"

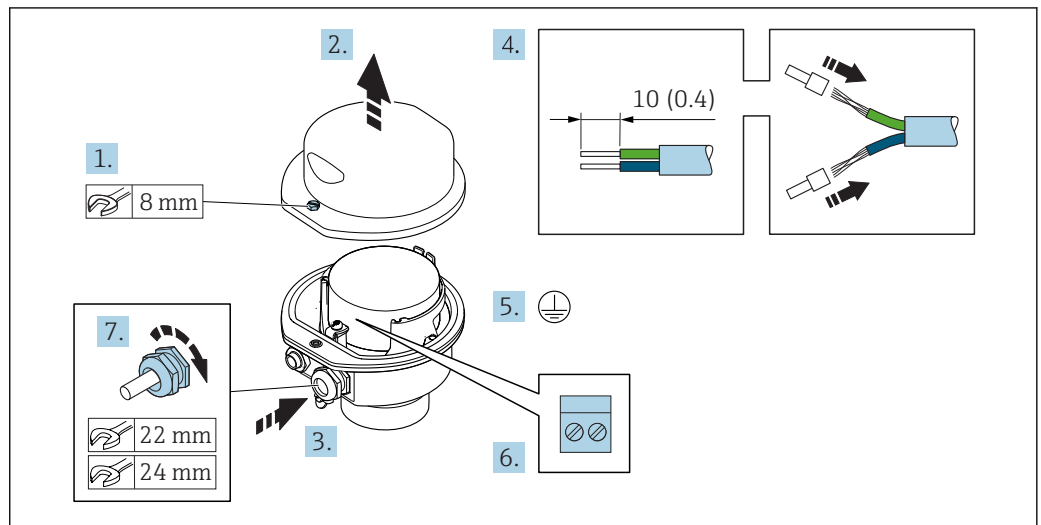


A0029613

1. Release the securing screw of the housing cover.
2. Open the housing cover.
3. Push the cable through the cable entry . To ensure tight sealing, do not remove the sealing ring from the cable entry.
4. Strip the cable and cable ends. In the case of stranded cables, fit ferrules.
5. Connect the protective ground.
6. Connect the cable in accordance with the connecting cable terminal assignment.
7. Firmly tighten the cable glands.
  - ↳ This concludes the process for connecting the connecting cable.
8. Close the housing cover.
9. Tighten the securing screw of the housing cover.

**Connecting the sensor connection housing via the connector**


For the device version with the order code for "Sensor connection housing":  
Option **C** "Ultra-compact hygienic, stainless"

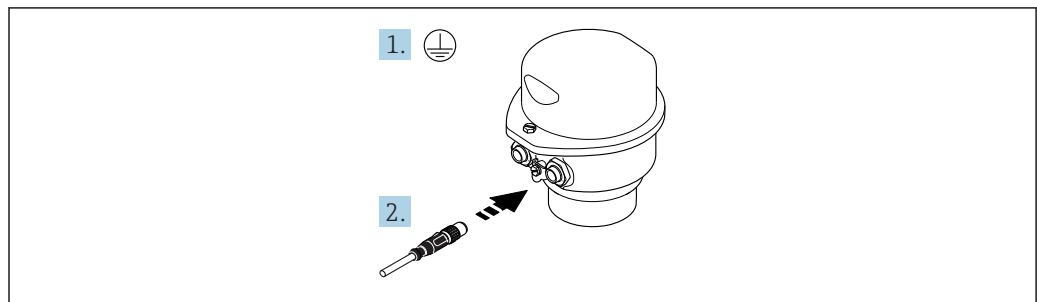

A0029615

1. Connect the protective ground.
2. Connect the connector.


## Connecting the connecting cable to the transmitter

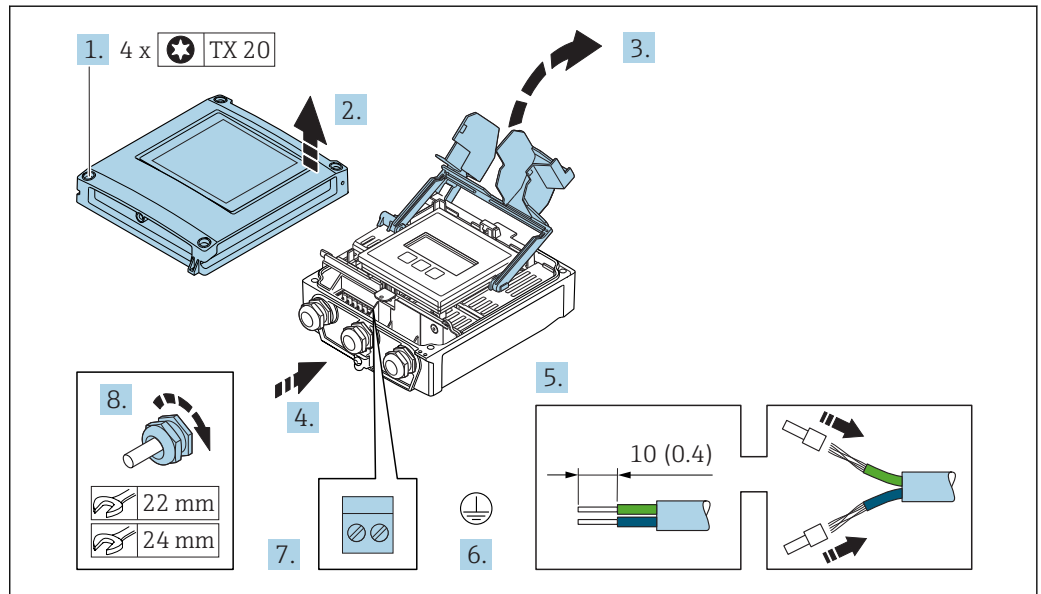

A0029597


1. Loosen the 4 fixing screws on the housing cover.
2. Open the housing cover.
3. Fold open the terminal cover.
4. Push the cable through the cable entry. To ensure tight sealing, do not remove the sealing ring from the cable entry.
5. Strip the cable and cable ends. In the case of stranded cables, fit ferrules.
6. Connect the protective ground.
7. Connect the cable in accordance with the connecting cable terminal assignment → 41.
8. Firmly tighten the cable glands.
  - ↳ This concludes the process for connecting the connecting cable.
9. Close the housing cover.
10. Tighten the securing screw of the housing cover.
11. After connecting the connecting cable:
  - Connect the signal cable and the supply voltage cable → 46.

## 7.2.2 Connecting the signal cable and the supply voltage cable

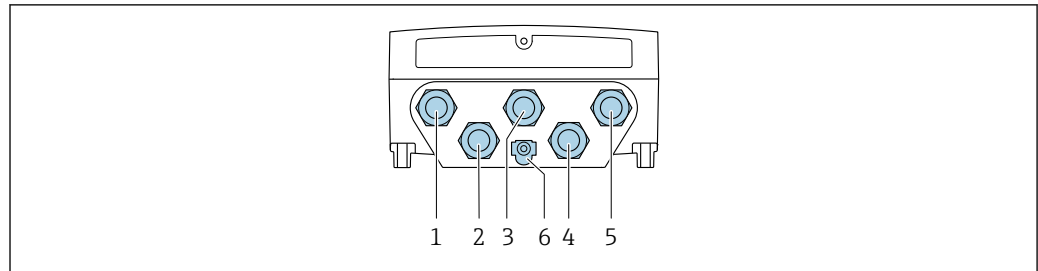

A0028200

- 1 Terminal connection for supply voltage
- 2 Terminal connection for signal transmission, input/output
- 3 Terminal connection for signal transmission, input/output
- 4 Terminal connection for connecting cable between sensor and transmitter
- 5 Terminal connection for signal transmission, input/output; optional: connection for external WLAN antenna
- 6 Protective earth (PE)

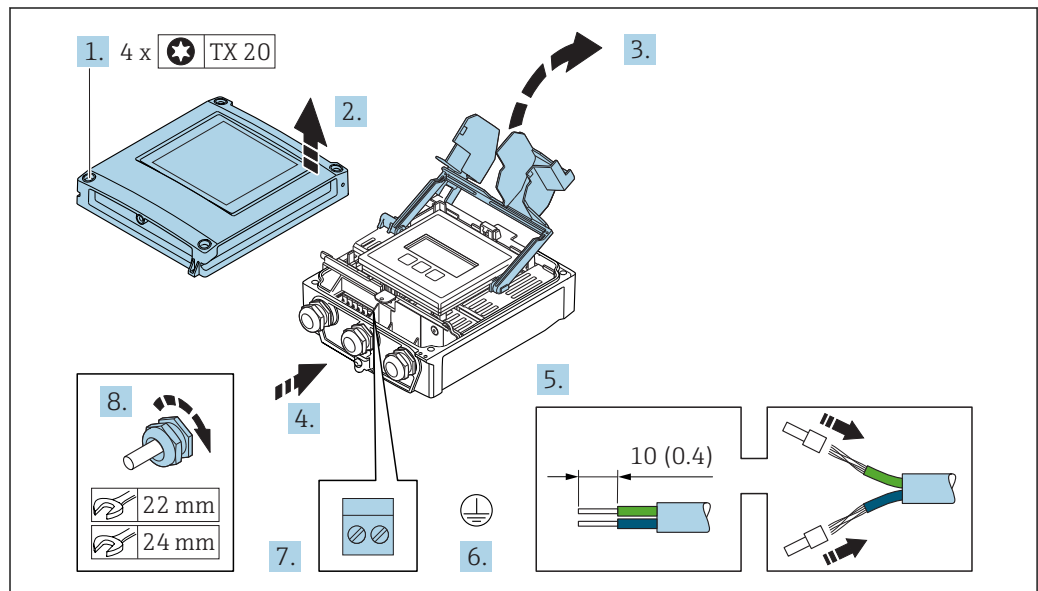

A0029597

1. Loosen the 4 fixing screws on the housing cover.
2. Open the housing cover.
3. Fold open the terminal cover.
4. Push the cable through the cable entry . To ensure tight sealing, do not remove the sealing ring from the cable entry.
5. Strip the cable and cable ends. In the case of stranded cables, fit ferrules.
6. Connect the protective ground.
7. Connect the cable in accordance with the terminal assignment .
  - ↳ **Signal cable terminal assignment:** The device-specific terminal assignment is documented on an adhesive label in the terminal cover.
  - Supply voltage terminal assignment:** Adhesive label in the terminal cover or → 40.
8. Firmly tighten the cable glands.
  - ↳ This concludes the cable connection process.
9. Close the terminal cover.
10. Close the housing cover.

**⚠ WARNING**

Housing degree of protection may be voided due to insufficient sealing of the housing.

- ▶ Screw in the screw without using any lubricant.


**⚠ WARNING**

Excessive tightening torque applied to the fixing screws!

Risk of damaging the plastic transmitter.

- ▶ Tighten the fixing screws as per the tightening torque: 2 Nm (1.5 lbf ft)

11. Tighten the 4 fixing screws on the housing cover.

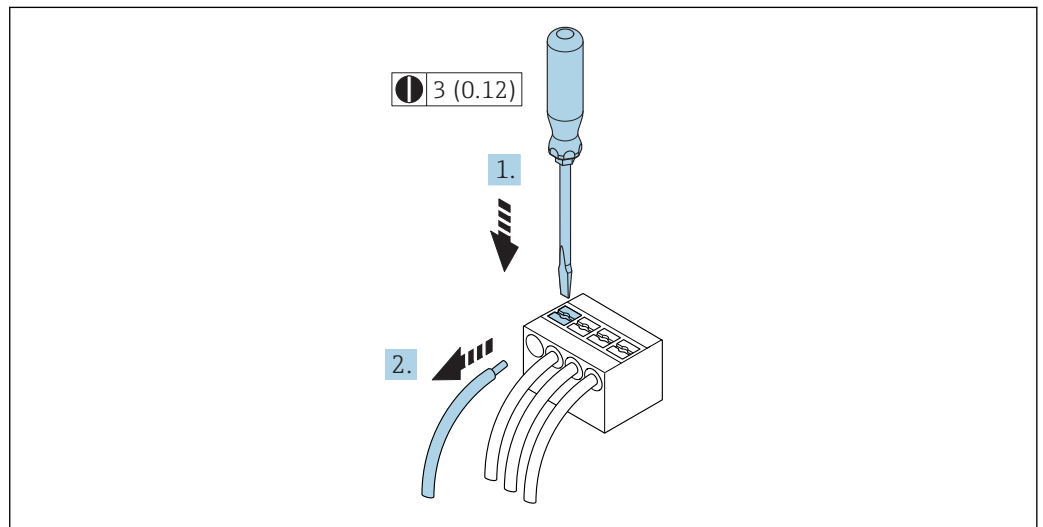**Removing a cable**

14 Engineering unit mm (in)

1. To remove a cable from the terminal, use a flat-blade screwdriver to push the slot between the two terminal holes
2. while simultaneously pulling the cable end out of the terminal.

## 7.3 Connecting the measuring device: Proline 500

### NOTICE

#### Limitation of electrical safety due to incorrect connection!

- ▶ Have electrical connection work carried out by appropriately trained specialists only.
- ▶ Observe applicable federal/national installation codes and regulations.
- ▶ Comply with local workplace safety regulations.
- ▶ Always connect the protective ground cable ⊕ before connecting additional cables.
- ▶ For use in potentially explosive atmospheres, observe the information in the device-specific Ex documentation.


### 7.3.1 Connecting the connecting cable

#### ⚠ WARNING

#### Risk of damaging the electronic components!

- ▶ Connect the sensor and transmitter to the same potential equalization.
- ▶ Only connect the sensor to a transmitter with the same serial number.
- ▶ Ground the connection housing of the sensor via the external screw terminal.

#### Connecting cable terminal assignment

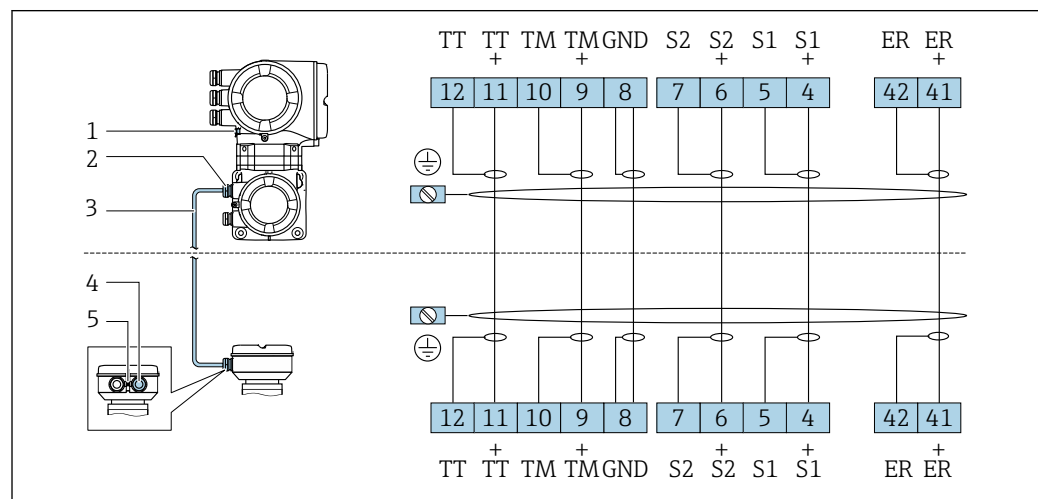

A0028197

- 1 Protective earth (PE)
- 2 Cable entry for connecting cable on transmitter connection housing
- 3 Connecting cable
- 4 Cable entry for connecting cable on sensor connection housing
- 5 Protective earth (PE)

#### Connecting the connecting cable to the sensor connection housing

Connection via terminals with order code for "Housing":

- Option **B** "Stainless" → 50
- Option **L** "Cast, stainless" → 49


#### Connecting the connecting cable to the transmitter

The cable is connected to the transmitter via terminals → 51.



### Connecting the sensor connection housing via terminals

For the device version with the order code for "Housing":  
Option L "Cast, stainless"

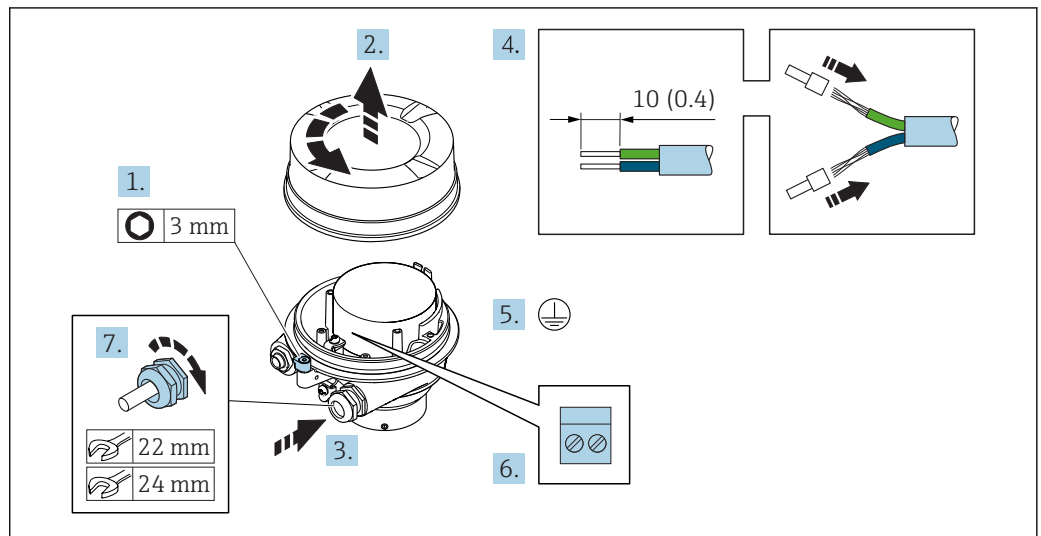

A0029612

1. Loosen the securing clamp of the housing cover.
2. Unscrew the housing cover.
3. Push the cable through the cable entry . To ensure tight sealing, do not remove the sealing ring from the cable entry.
4. Strip the cable and cable ends. In the case of stranded cables, fit ferrules.
5. Connect the protective ground.
6. Connect the cable in accordance with the connecting cable terminal assignment.
7. Firmly tighten the cable glands.
  - ↳ This concludes the process for connecting the connecting cable.


#### **⚠ WARNING**

#### **Housing degree of protection voided due to insufficient sealing of the housing.**

- ▶ Screw in the thread on the cover without using any lubricant. The thread on the cover is coated with a dry lubricant.
8. Screw on the housing cover.
  9. Tighten the securing clamp of the housing cover.

### Connecting the sensor connection housing via terminals


For the device version with the order code for "Housing":  
Option B "Stainless"

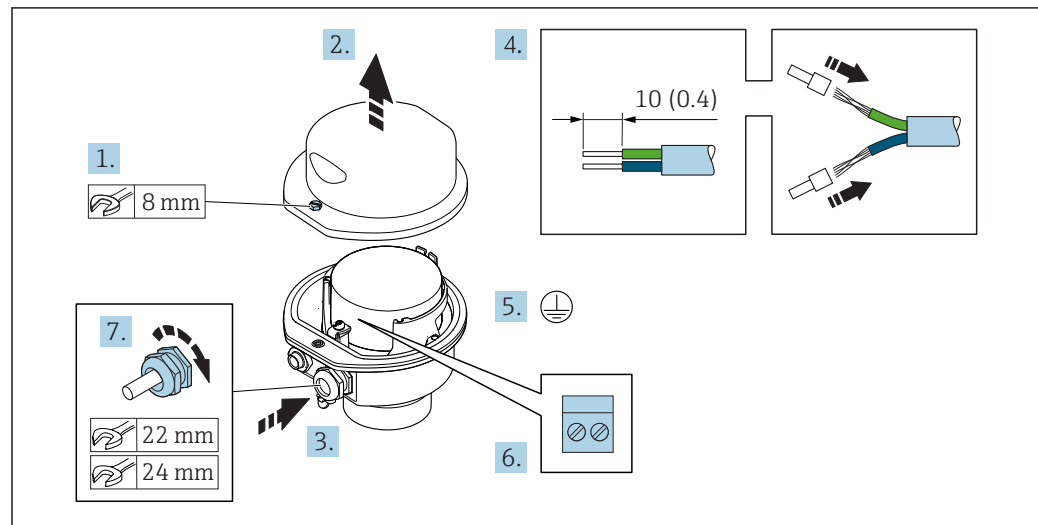

A0029613

1. Release the securing screw of the housing cover.
2. Open the housing cover.
3. Push the cable through the cable entry . To ensure tight sealing, do not remove the sealing ring from the cable entry.
4. Strip the cable and cable ends. In the case of stranded cables, fit ferrules.
5. Connect the protective ground.
6. Connect the cable in accordance with the connecting cable terminal assignment.
7. Firmly tighten the cable glands.
  - ↳ This concludes the process for connecting the connecting cable.
8. Close the housing cover.
9. Tighten the securing screw of the housing cover.


## Connecting the connecting cable to the transmitter

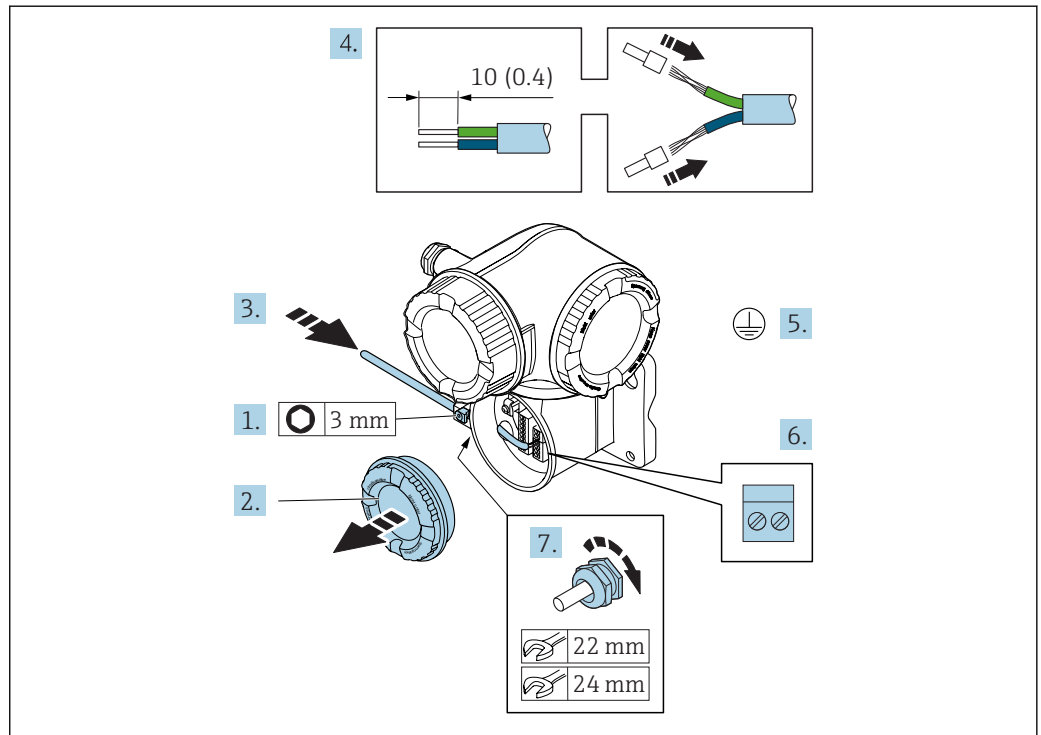

A0029592


1. Loosen the securing clamp of the connection compartment cover.
2. Unscrew the connection compartment cover.
3. Push the cable through the cable entry . To ensure tight sealing, do not remove the sealing ring from the cable entry.
4. Strip the cable and cable ends. In the case of stranded cables, also fit ferrules.
5. Connect the protective ground.
6. Connect the cable in accordance with the connecting cable terminal assignment → 48.
7. Firmly tighten the cable glands.
  - ↳ This concludes the process for connecting the connecting cable.
8. Screw on the connection compartment cover.
9. Tighten the securing clamp of the connection compartment cover.
10. After connecting the connecting cable: After connecting the connecting cables: Connect the signal cable and the supply voltage cable → 52.

### 7.3.2 Connecting the signal cable and the supply voltage cable

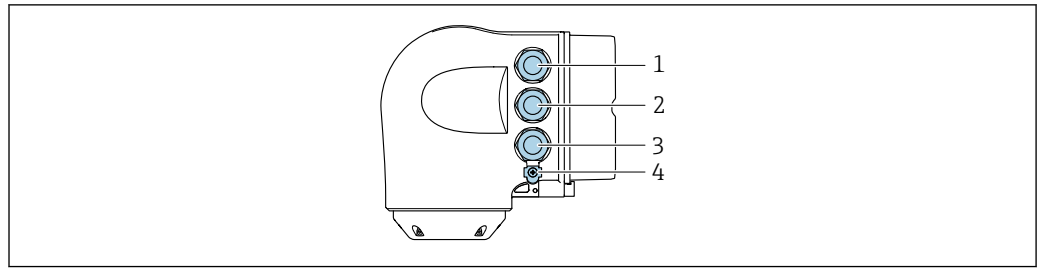


A0026781

- 1 Terminal connection for supply voltage
- 2 Terminal connection for signal transmission, input/output
- 3 Terminal connection for signal transmission, input/output or terminal connection for network connection via service interface (CDI-RJ45)
- 4 Protective earth (PE)

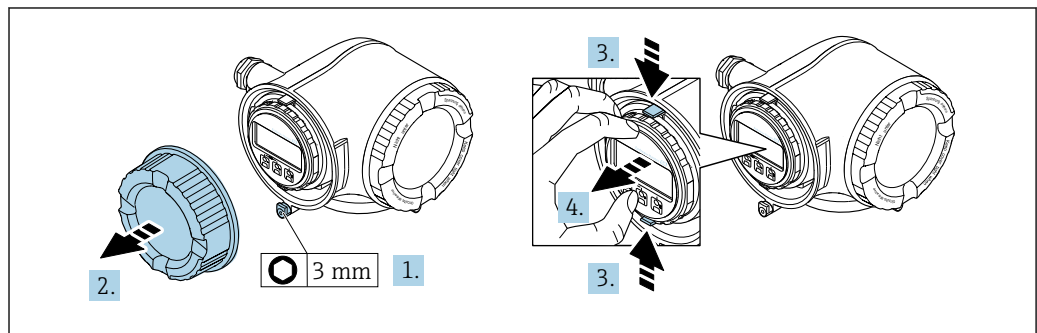


A0029813

1. Loosen the securing clamp of the connection compartment cover.
2. Unscrew the connection compartment cover.
3. Squeeze the tabs of the display module holder together.
4. Remove the display module holder.

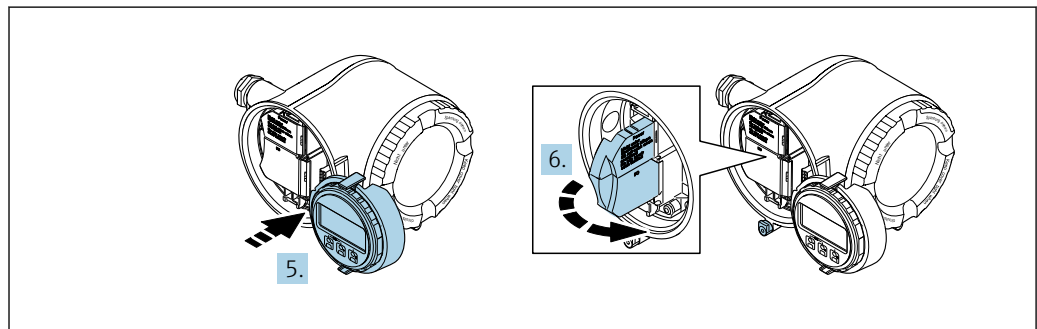


A0029814

5. Attach the holder to the edge of the electronics compartment.
6. Open the terminal cover.

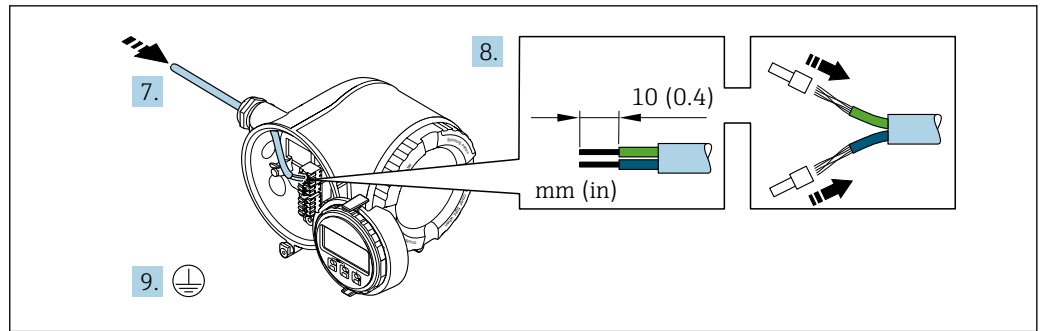

A0029815


7. Push the cable through the cable entry . To ensure tight sealing, do not remove the sealing ring from the cable entry.
8. Strip the cable and cable ends. In the case of stranded cables, also fit ferrules.
9. Connect the protective ground.

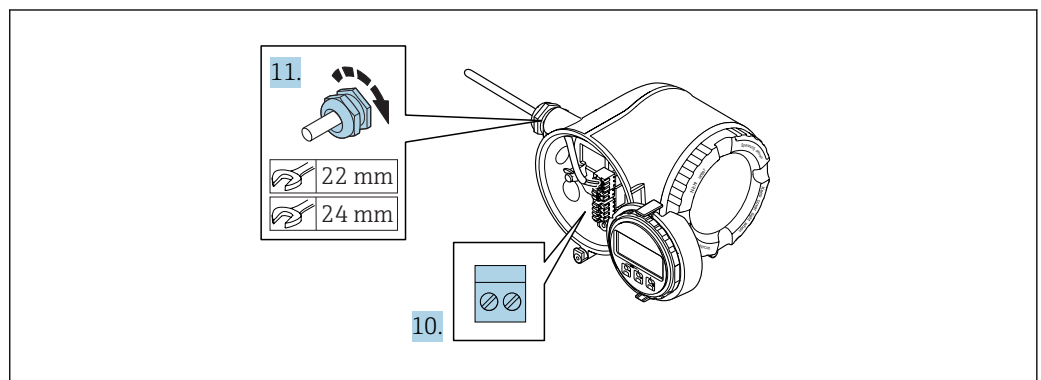

A0029816

10. Connect the cable in accordance with the terminal assignment .
  - ↳ **Signal cable terminal assignment:** The device-specific terminal assignment is documented on an adhesive label in the terminal cover.
  - Supply voltage terminal assignment:** Adhesive label in the terminal cover or → 40.
11. Firmly tighten the cable glands.
  - ↳ This concludes the cable connection process.
12. Close the terminal cover.
13. Fit the display module holder in the electronics compartment.
14. Screw on the connection compartment cover.
15. Secure the securing clamp of the connection compartment cover.

## Removing a cable

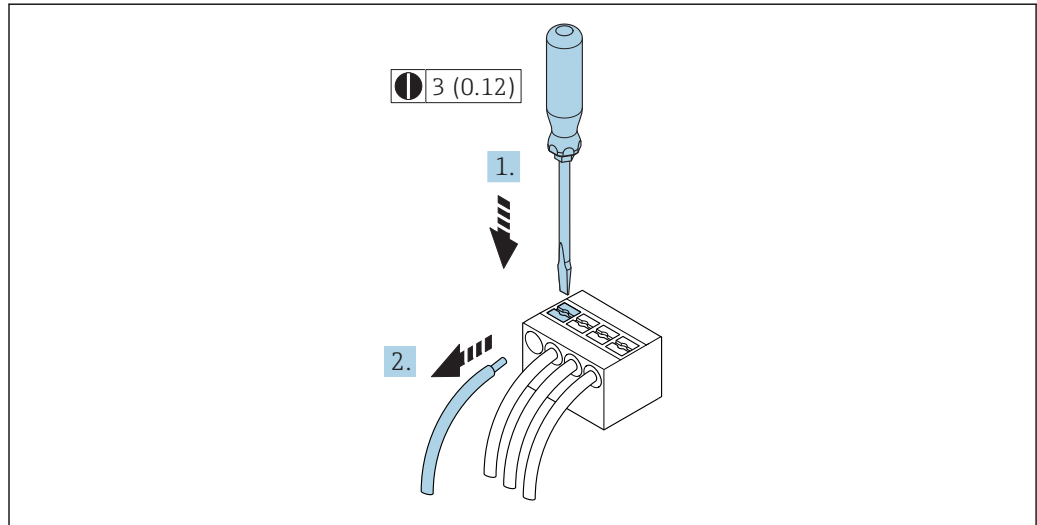

A0029598

15 Engineering unit mm (in)

1. To remove a cable from the terminal, use a flat-blade screwdriver to push the slot between the two terminal holes
2. while simultaneously pulling the cable end out of the terminal.

## 7.4 Ensure potential equalization


### 7.4.1 Requirements

No special measures for potential equalization are required.

## 7.5 Special connection instructions

### 7.5.1 Connection examples


#### Current output 4 to 20 mA HART

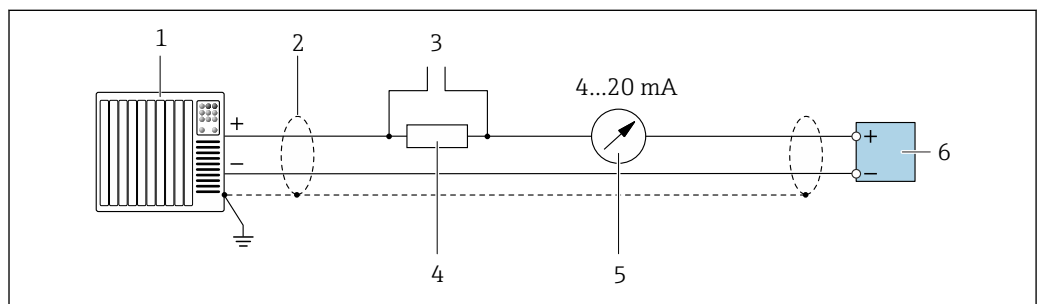

A0029055

16 Connection example for 4 to 20 mA HART current output (active)

- 1 Automation system with current input (e.g. PLC)
- 2 Cable shield: the cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- 3 Connection for HART operating devices → 80
- 4 Resistor for HART communication ( $\geq 250 \Omega$ ): observe maximum load → 208
- 5 Analog display unit: observe maximum load → 208
- 6 Transmitter

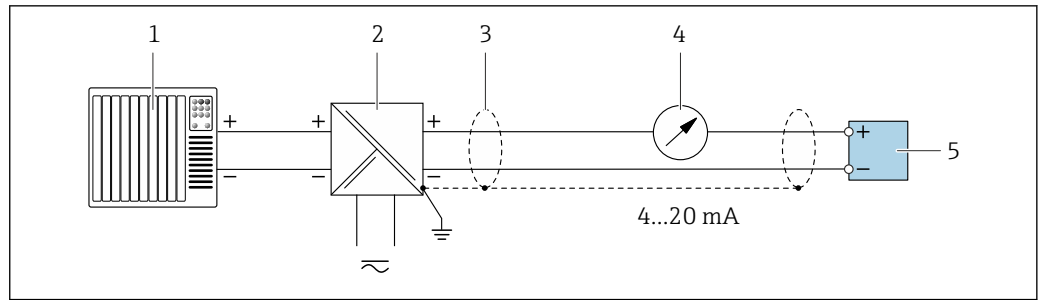


A0028762

17 Connection example for 4 to 20 mA HART current output (passive)

- 1 Automation system with current input (e.g. PLC)
- 2 Power supply
- 3 Cable shield: the cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- 4 Analog display unit: observe maximum load → 208
- 5 Transmitter

### HART input

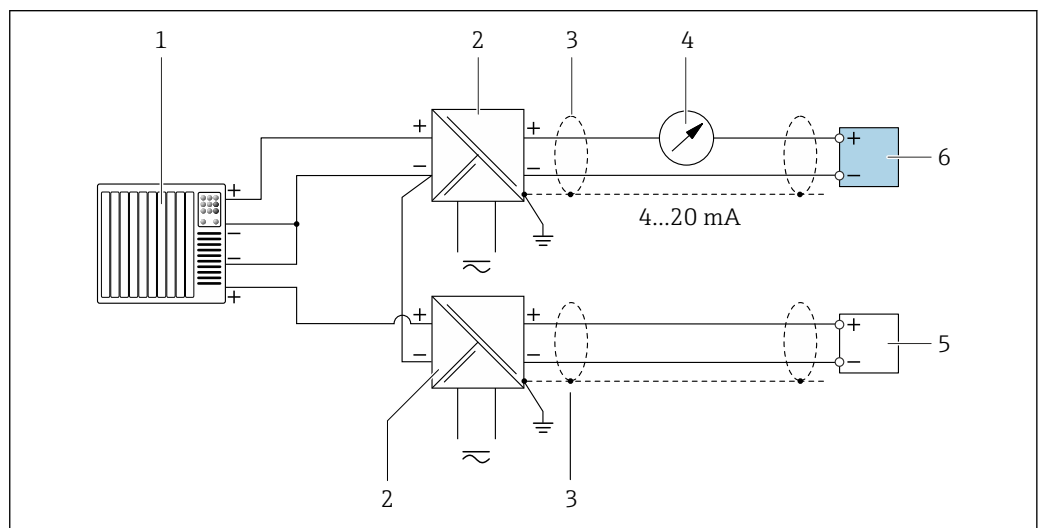


A0028763

18 Connection example for HART input with a common negative (passive)

- 1 Automation system with HART output (e.g. PLC)
- 2 Active barrier for power supply (e.g. RN221N)
- 3 Cable shield: the cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- 4 Analog display unit: observe maximum load
- 5 Pressure transmitter (e.g. Cerabar M, Cerabar S): see requirements
- 6 Transmitter


### Current output 4-20 mA

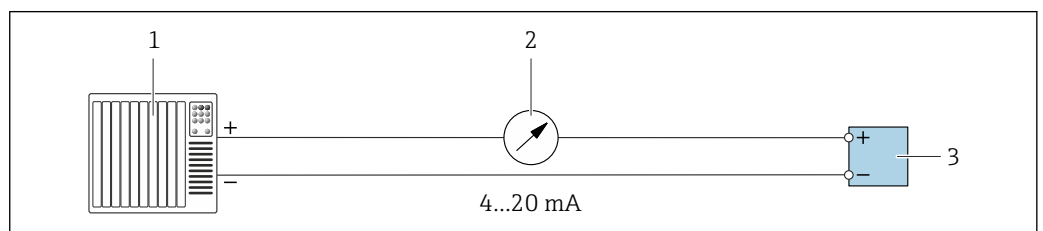

A0028758

19 Connection example for 4-20 mA current output (active)

- 1 Automation system with current input (e.g. PLC)
- 2 Analog display unit: observe maximum load
- 3 Transmitter

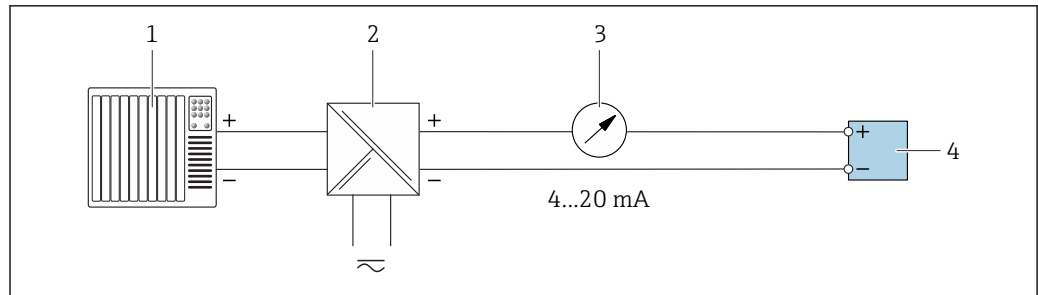


A0028759

20 Connection example for 4-20 mA current output (passive)

- 1 Automation system with current input (e.g. PLC)
- 2 Active barrier for power supply (e.g. RN221N)
- 3 Analog display unit: observe maximum load
- 4 Transmitter

### Pulse/frequency output

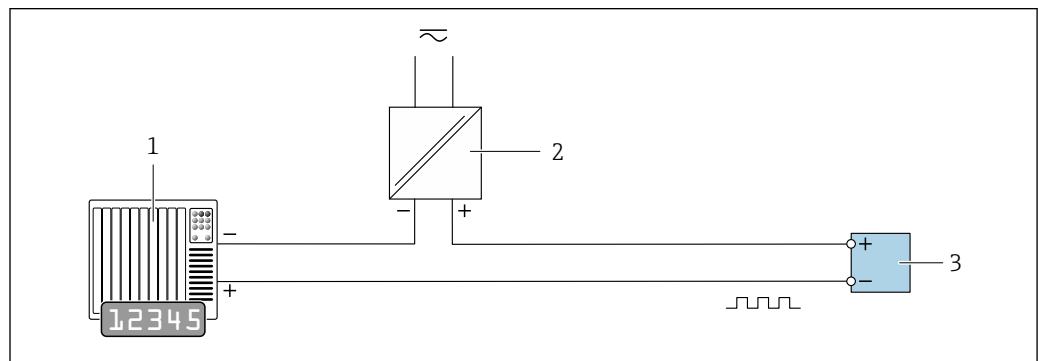


A0028761

21 Connection example for pulse/frequency output (passive)

- 1 Automation system with pulse/frequency input (e.g. PLC)
- 2 Power supply
- 3 Transmitter: Observe input values → 209

### Switch output

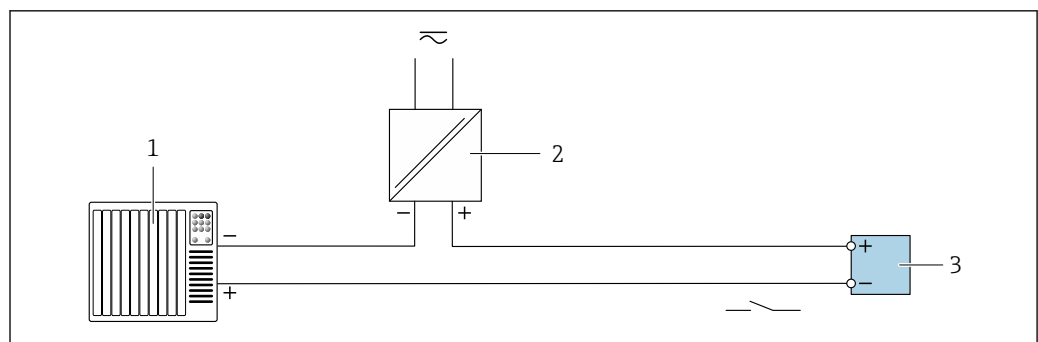


A0028760

22 Connection example for switch output (passive)

- 1 Automation system with switch input (e.g. PLC)
- 2 Power supply
- 3 Transmitter: Observe input values → 209




**Double pulse output**

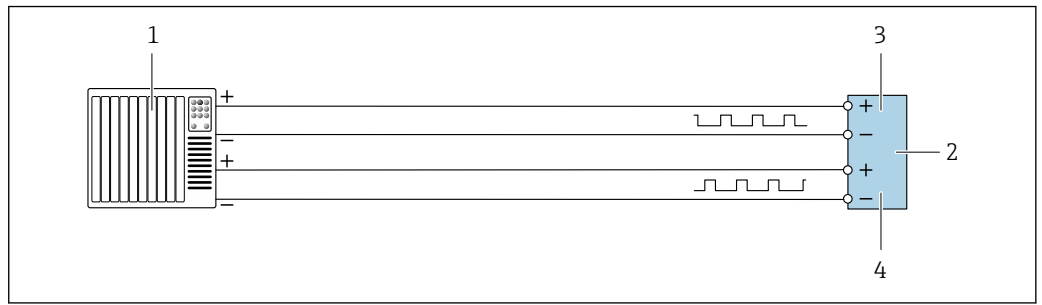

A0029280

23 Connection example for double pulse output (active)

- 1 Automation system with double pulse input (e.g. PLC)
- 2 Transmitter: Observe input values → 210
- 3 Double pulse output
- 4 Double pulse output (slave), phase-shifted

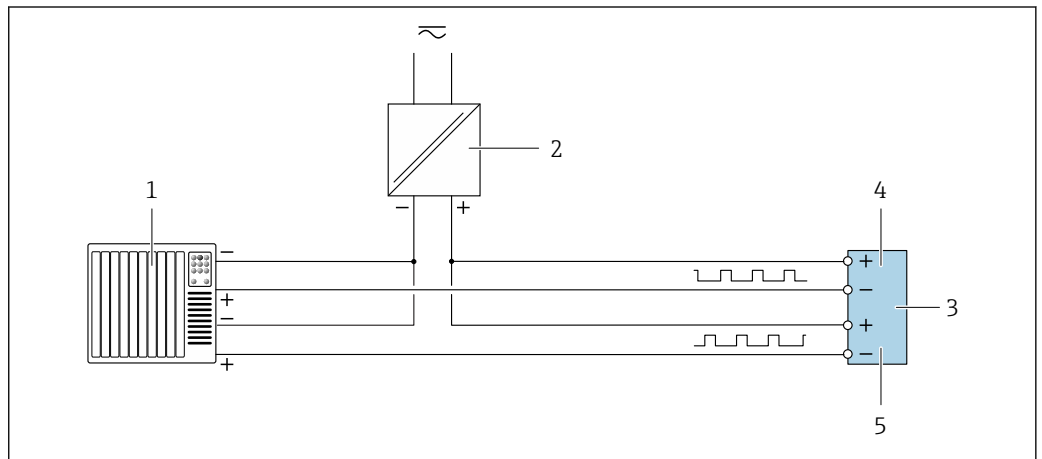


A0029279

24 Connection example for double pulse output (passive)

- 1 Automation system with double pulse input (e.g. PLC)
- 2 Power supply
- 3 Transmitter: Observe input values → 210
- 4 Double pulse output
- 5 Double pulse output (slave), phase-shifted

**Relay output**

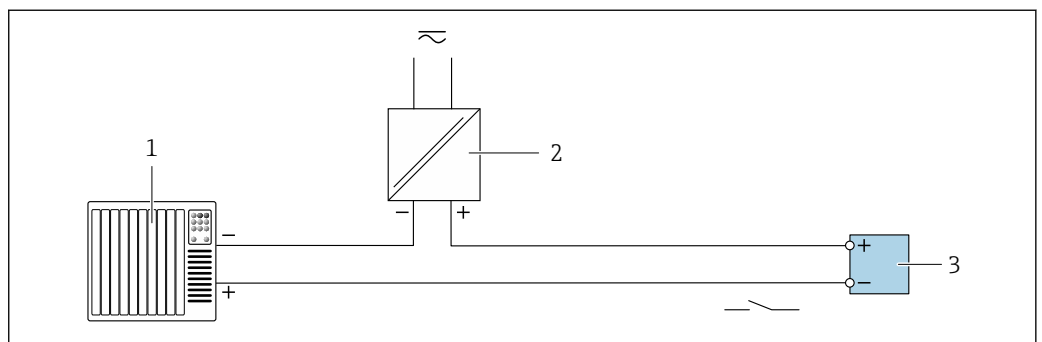


A0028760

25 Connection example for relay output (passive)

- 1 Automation system with relay input (e.g. PLC)
- 2 Power supply
- 3 Transmitter: Observe input values → 210

### Current input

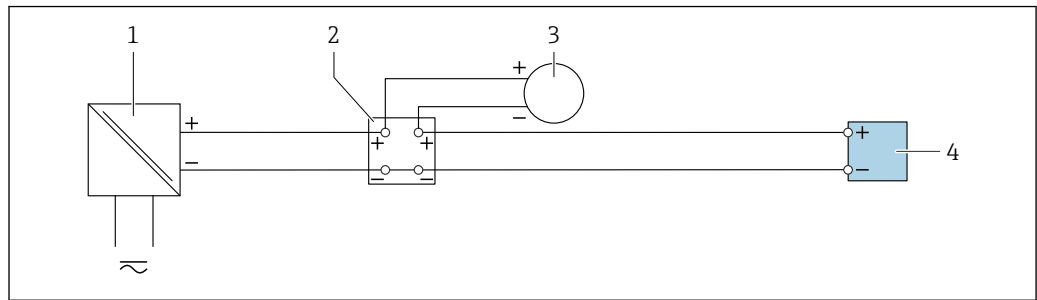


A0028915

26 Connection example for 4 to 20 mA current input

- 1 Power supply
- 2 External measuring device (for reading in pressure or temperature, for instance)
- 3 Transmitter: Observe input values

### Status input

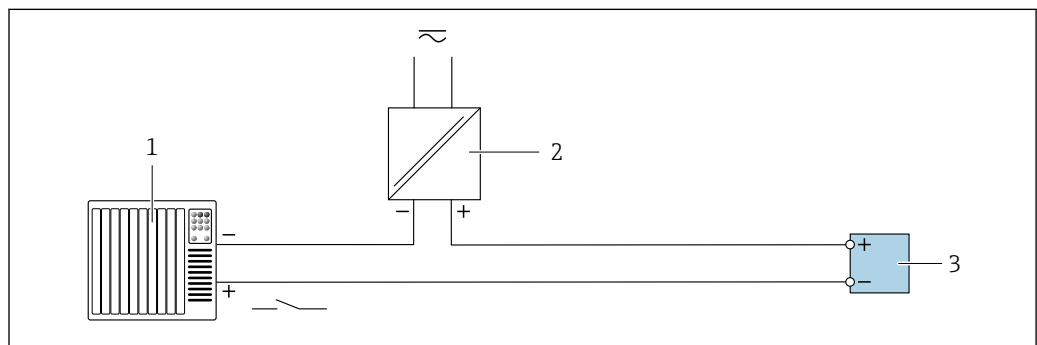

A0028764

27 Connection example for status input

- 1 Automation system with status output (e.g. PLC)
- 2 Power supply
- 3 Transmitter: Observe input values


## 7.6 Ensuring the degree of protection

The measuring device fulfills all the requirements for the IP66/67 degree of protection, Type 4X enclosure.

To guarantee IP66/67 degree of protection, Type 4X enclosure, carry out the following steps after the electrical connection:

1. Check that the housing seals are clean and fitted correctly.
2. Dry, clean or replace the seals if necessary.
3. Tighten all housing screws and screw covers.
4. Firmly tighten the cable glands.

- 5. To ensure that moisture does not enter the cable entry:  
Route the cable so that it loops down before the cable entry ("water trap").

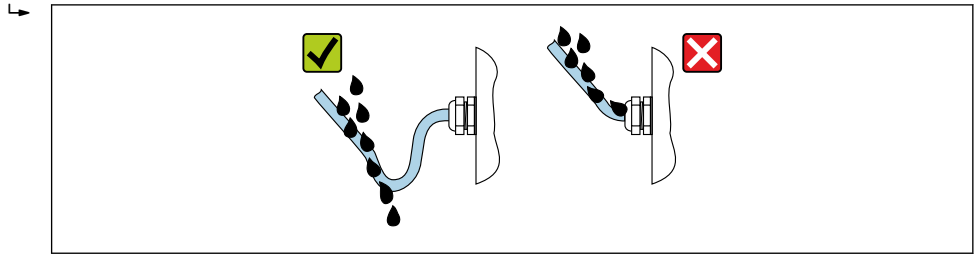

A0029278


- 6. Insert dummy plugs into unused cable entries.

### 7.7 Post-connection check

|  |                          |
|--|--------------------------|
| Are cables or the device undamaged (visual inspection)?  | <input type="checkbox"/> |
| Do the cables used meet the requirements?  | <input type="checkbox"/> |
| Do the cables have adequate strain relief?   | <input type="checkbox"/> |
| Are all the cable glands installed, firmly tightened and leak-tight? Cable run with "water trap"<br>→ 58 ? | <input type="checkbox"/> |

## 8 Operation options

### 8.1 Overview of operation options

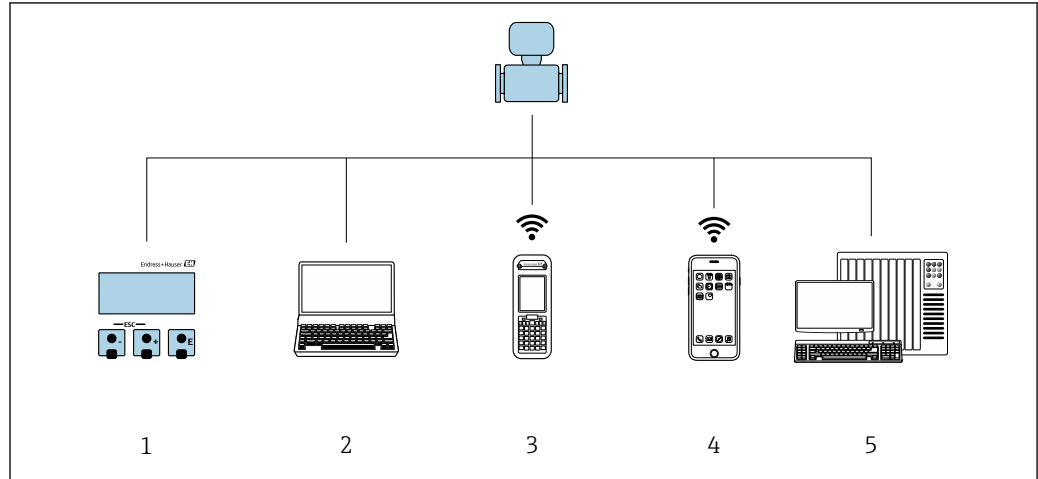




A0034513


- 1 Local operation via display module
- 2 Computer with Web browser (e.g. Internet Explorer) or with operating tool (e.g. FieldCare, DeviceCare, AMS Device Manager, SIMATIC PDM)
- 3 Field Xpert SFX350 or SFX370
- 5 Mobile handheld terminal
- 6 Control system (e.g. PLC)

## 8.2 Structure and function of the operating menu

### 8.2.1 Structure of the operating menu

 For an overview of the operating menu for experts: "Description of Device Parameters" document supplied with the device →  233

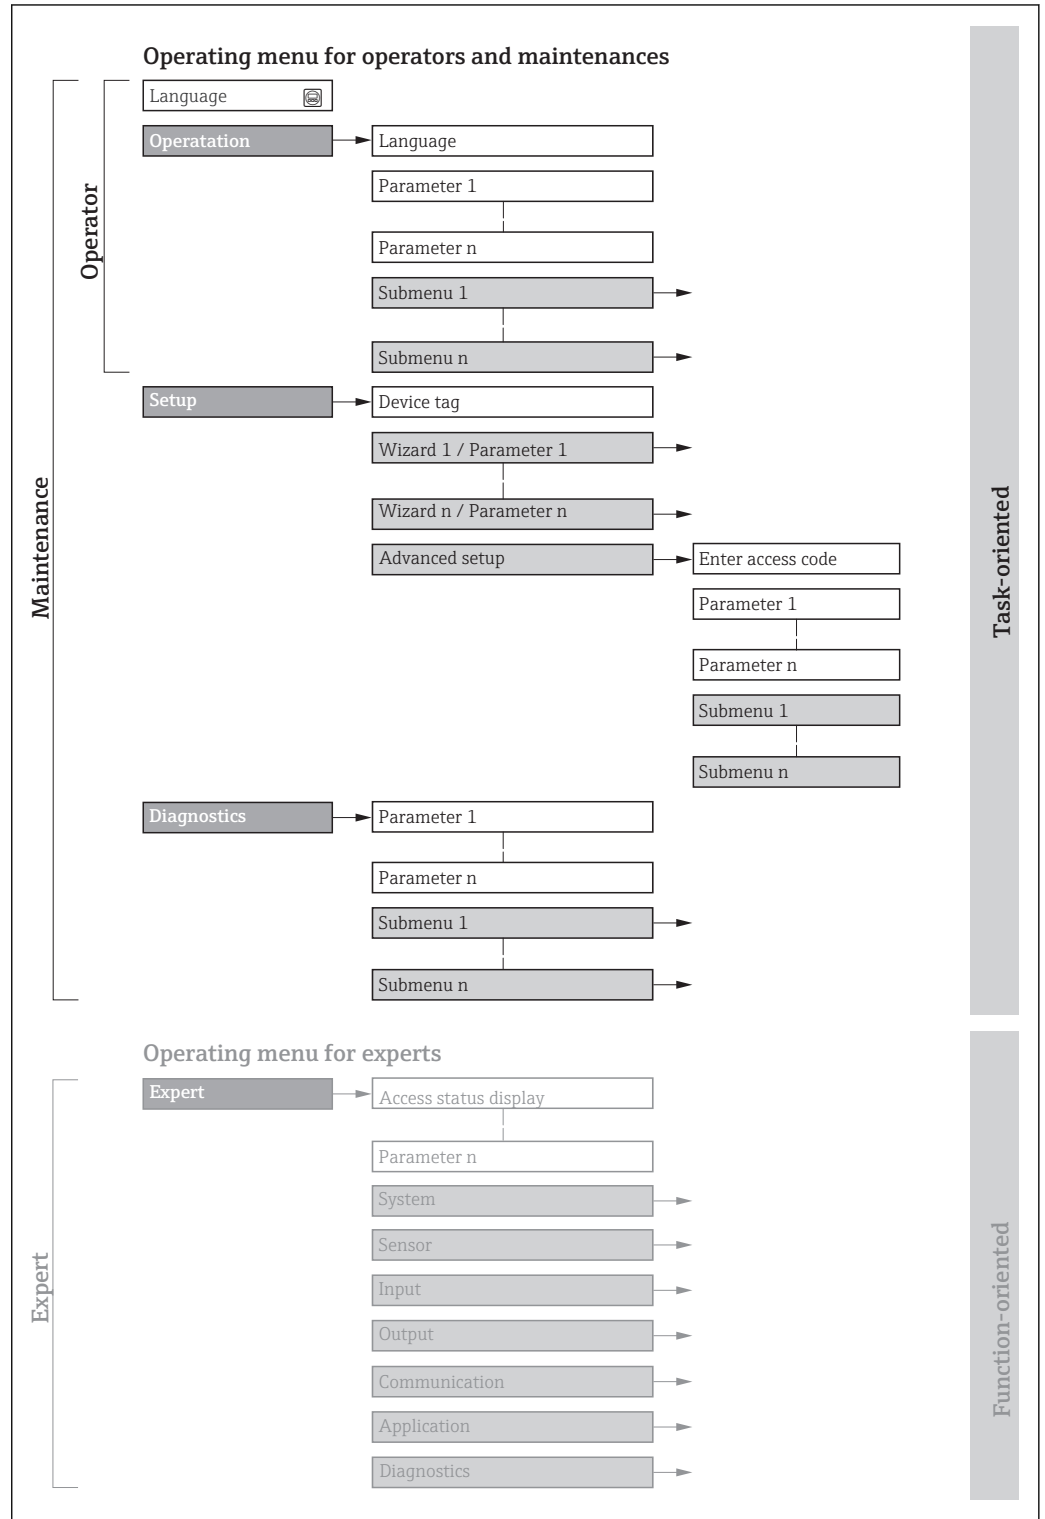

 28 Schematic structure of the operating menu

A0018237-EN


### 8.2.2 Operating philosophy

The individual parts of the operating menu are assigned to certain user roles (operator, maintenance etc.). Each user role contains typical tasks within the device lifecycle.

| Menu/parameter |                   | User role and tasks  | Content/meaning  |
|----------------|-------------------|--|--|
| Language       | task-oriented     | <b>Role "Operator", "Maintenance"</b><br>Tasks during operation: <ul style="list-style-type: none"> <li>▪ Configuring the operational display</li> <li>▪ Reading measured values</li> </ul>  | <ul style="list-style-type: none"> <li>▪ Defining the operating language</li> <li>▪ Defining the Web server operating language</li> <li>▪ Resetting and controlling totalizers</li> </ul>  |
| Operation      |                   |  | <ul style="list-style-type: none"> <li>▪ Configuring the operational display (e.g. display format, display contrast)</li> <li>▪ Resetting and controlling totalizers</li> </ul>  |
| Setup          |                   | <b>"Maintenance" role</b><br>Commissioning: <ul style="list-style-type: none"> <li>▪ Configuration of the measurement</li> <li>▪ Configuration of the inputs and outputs</li> <li>▪ Configuration of the communication interface</li> </ul>  | Wizards for fast commissioning: <ul style="list-style-type: none"> <li>▪ Set the system units</li> <li>▪ Configuration of the communication interface</li> <li>▪ Define the medium</li> <li>▪ Display I/O/configuration</li> <li>▪ Configure the inputs</li> <li>▪ Configure the outputs</li> <li>▪ Configuring the operational display</li> <li>▪ Define the output conditioning</li> <li>▪ Set the low flow cut off</li> <li>▪ Configure partial and empty pipe detection</li> </ul> Advanced setup <ul style="list-style-type: none"> <li>▪ For more customized configuration of the measurement (adaptation to special measuring conditions)</li> <li>▪ Configuration of totalizers</li> <li>▪ Configure the WLAN settings</li> <li>▪ Administration (define access code, reset measuring device)</li> </ul>   |
| Diagnostics    |                   | <b>"Maintenance" role</b><br>Fault elimination: <ul style="list-style-type: none"> <li>▪ Diagnostics and elimination of process and device errors</li> <li>▪ Measured value simulation</li> </ul>  | Contains all parameters for error detection and analyzing process and device errors: <ul style="list-style-type: none"> <li>▪ Diagnostic list<br/>Contains up to 5 currently pending diagnostic messages.</li> <li>▪ Event logbook<br/>Contains event messages that have occurred.</li> <li>▪ Device information<br/>Contains information for identifying the device.</li> <li>▪ Measured values<br/>Contains all current measured values.</li> <li>▪ <b>Data logging</b> submenu with "Extended HistoROM" order option<br/>Storage and visualization of measured values</li> <li>▪ Heartbeat<br/>The functionality of the device is checked on demand and the verification results are documented.</li> <li>▪ Simulation<br/>Is used to simulate measured values or output values.</li> </ul>   |
| Expert         | function-oriented | Tasks that require detailed knowledge of the function of the device: <ul style="list-style-type: none"> <li>▪ Commissioning measurements under difficult conditions</li> <li>▪ Optimal adaptation of the measurement to difficult conditions</li> <li>▪ Detailed configuration of the communication interface</li> <li>▪ Error diagnostics in difficult cases</li> </ul> | Contains all the parameters of the device and makes it possible to access these parameters directly using an access code. The structure of this menu is based on the function blocks of the device: <ul style="list-style-type: none"> <li>▪ System<br/>Contains all higher-order device parameters which do not concern the measurement or the communication interface.</li> <li>▪ Sensor<br/>Configuration of the measurement.</li> <li>▪ Input<br/>Configuring the status input.</li> <li>▪ Output<br/>Configuring of the analog current outputs as well as the pulse/frequency and switch output.</li> <li>▪ Communication<br/>Configuration of the digital communication interface and the Web server.</li> <li>▪ Application<br/>Configure the functions that go beyond the actual measurement (e.g. totalizer).</li> <li>▪ Diagnostics<br/>Error detection and analysis of process and device errors and for device simulation and Heartbeat Technology.</li> </ul> |

## 8.3 Access to the operating menu via the local display

### 8.3.1 Operational display

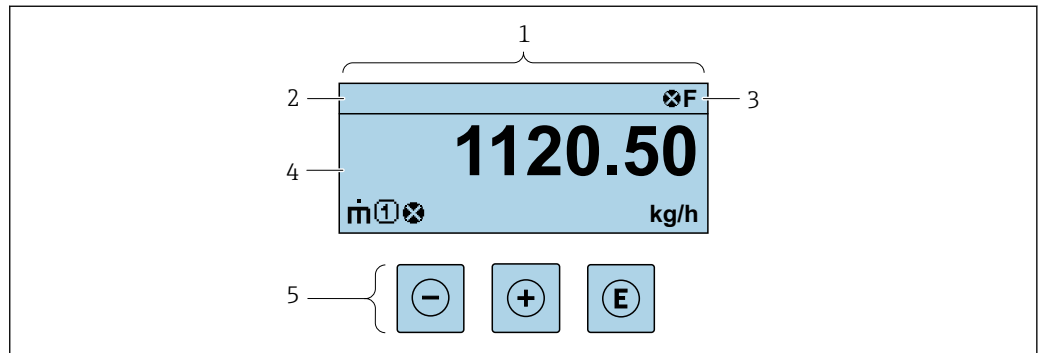

A0029348

- 1 Operational display
- 2 Device tag
- 3 Status area
- 4 Display area for measured values (4-line)
- 5 Operating elements → 68

#### Status area

The following symbols appear in the status area of the operational display at the top right:

- Status signals → 179
  - **F**: Failure
  - **C**: Function check
  - **S**: Out of specification
  - **M**: Maintenance required
- Diagnostic behavior → 180
  - : Alarm
  - : Warning
- : Locking (the device is locked via the hardware )
- : Communication (communication via remote operation is active)

#### Display area

In the display area, each measured value is prefaced by certain symbol types for further description:

|         | Measured variable | Measurement channel number | Diagnostic behavior |
|---------|-------------------|----------------------------|---------------------|
|         | ↓                 | ↓                          | ↓                   |
| Example |                   |                            |                     |

Appears only if a diagnostics event is present for this measured variable.

#### Measured values

| Symbol | Meaning  |
|--------|--|
|        | Mass flow  |
|        | <ul style="list-style-type: none"> <li>▪ Volume flow</li> <li>▪ Corrected volume flow</li> </ul> |

|  |   |
|--|---|
|  | <ul style="list-style-type: none"> <li>Density</li> <li>Reference density</li> </ul>              |
|  | Temperature   |
|  | Totalizer<br>The measurement channel number indicates which of the three totalizers is displayed. |
|  | Output<br>The measurement channel number indicates which of the outputs is displayed.             |
|  | Status input  |

Measurement channel numbers


| Symbol  | Meaning                    |
|---|----------------------------|
|   | Measurement channel 1 to 4 |
| The measurement channel number is displayed only if more than one channel is present for the same measured variable type (e.g. Totalizer 1 to 3). |                            |

Diagnostic behavior

The diagnostic behavior pertains to a diagnostic event that is relevant to the displayed measured variable. For information on the symbols → 180

The number and display format of the measured values can be configured via the **Format display** parameter (→ 129).

### 8.3.2 Navigation view

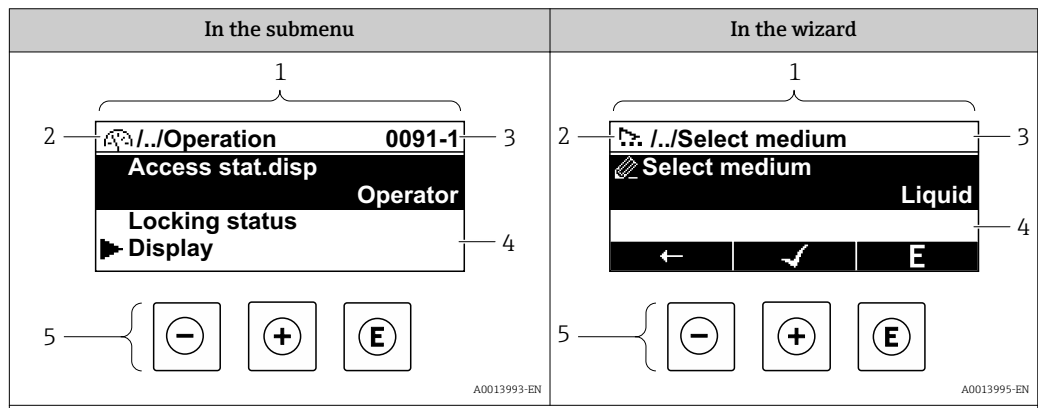





- 1 Navigation view
- 2 Navigation path to current position
- 3 Status area
- 4 Display area for navigation
- 5 Operating elements → 68

Navigation path

The navigation path - displayed at the top left in the navigation view - consists of the following elements:






|          | <ul style="list-style-type: none"> <li>In the submenu:<br/>Display symbol for menu</li> <li>In the wizard:<br/>Display symbol for wizard</li> </ul> | Omission symbol for operating menu levels in between | Name of current <ul style="list-style-type: none"> <li>Submenu</li> <li>Wizard</li> <li>Parameters</li> </ul> |
|----------|---|--|---|
| Examples | ↓   | ↓  | ↓   |
|          |    | / .. /   | <b>Display</b>  |
|          |    | / .. /   | <b>Display</b>  |

 For more information about the icons in the menu, refer to the "Display area" section →  65

### Status area





The following appears in the status area of the navigation view in the top right corner:

- In the submenu
  - The direct access code for the parameter you are navigating to (e.g. 0022-1)
  - If a diagnostic event is present, the diagnostic behavior and status signal
- In the wizard
  - If a diagnostic event is present, the diagnostic behavior and status signal





-  For information on the diagnostic behavior and status signal →  179
- For information on the function and entry of the direct access code →  70

### Display area


#### Menus

| Symbol  | Meaning   |
|---|---|
|  | <b>Operation</b><br>Appears: <ul style="list-style-type: none"> <li>In the menu next to the "Operation" selection</li> <li>At the left in the navigation path in the <b>Operation</b> menu</li> </ul>       |
|  | <b>Setup</b><br>Appears: <ul style="list-style-type: none"> <li>In the menu next to the "Setup" selection</li> <li>At the left in the navigation path in the <b>Setup</b> menu</li> </ul>                   |
|  | <b>Diagnostics</b><br>Appears: <ul style="list-style-type: none"> <li>In the menu next to the "Diagnostics" selection</li> <li>At the left in the navigation path in the <b>Diagnostics</b> menu</li> </ul> |
|  | <b>Expert</b><br>Appears: <ul style="list-style-type: none"> <li>In the menu next to the "Expert" selection</li> <li>At the left in the navigation path in the <b>Expert</b> menu</li> </ul>                |




#### Submenus, wizards, parameters

| Symbol  | Meaning  |
|---|--|
|  | Submenu  |
|  | Wizard   |
|  | Parameters within a wizard<br> No display symbol exists for parameters in submenus. |

Locking


| Symbol  | Meaning   |
|---|---|
|  | <b>Parameter locked</b><br>When displayed in front of a parameter name, indicates that the parameter is locked. <ul style="list-style-type: none"> <li>▪ By a user-specific access code</li> <li>▪ By the hardware write protection switch</li> </ul> |

Wizard operation


| Symbol  | Meaning  |
|---|--|
|  | Switches to the previous parameter.                              |
|  | Confirms the parameter value and switches to the next parameter. |
|  | Opens the editing view of the parameter.                         |

### 8.3.3 Editing view

Numeric editor

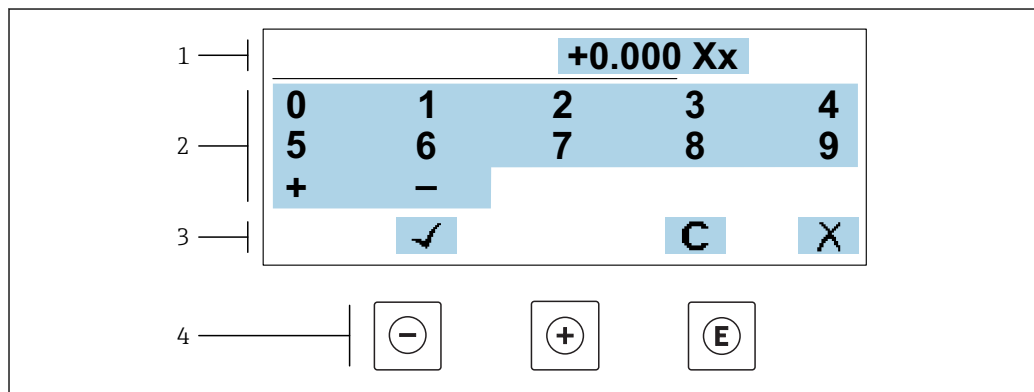


A0034250

 29 For entering values in parameters (e.g. limit values)

- 1 Entry display area
- 2 Input screen
- 3 Confirm, delete or reject entry
- 4 Operating elements

**Text editor**

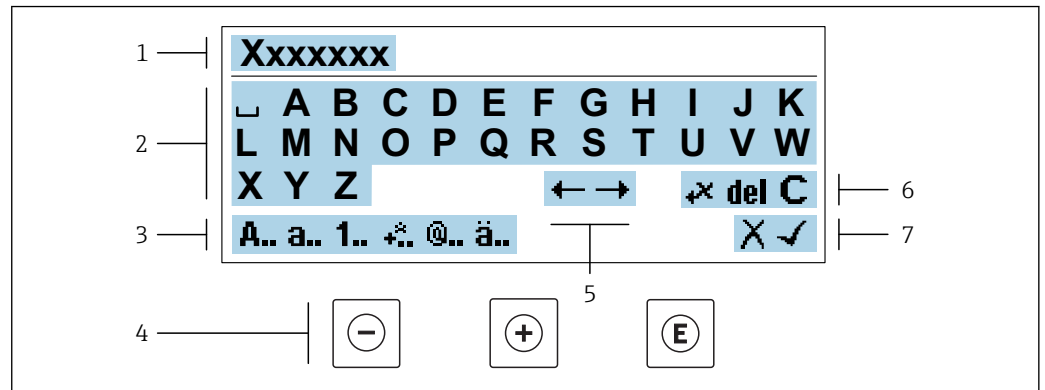

A0034114

30 For entering text in parameters (e.g. tag name)

- 1 Entry display area
- 2 Current input screen
- 3 Change input screen
- 4 Operating elements
- 5 Move entry position
- 6 Delete entry
- 7 Reject or confirm entry





*Using the operating elements in the editing view*

| Operating key(s) | Meaning  |
|------------------|--|
|                  | <b>Minus key</b><br>Move the entry position to the left.   |
|                  | <b>Plus key</b><br>Move the entry position to the right.   |
|                  | <b>Enter key</b> <ul style="list-style-type: none"> <li>▪ Press the key briefly: confirm your selection.</li> <li>▪ Press the key for 2 s: confirm the entry.</li> </ul> |
|                  | <b>Escape key combination (press keys simultaneously)</b><br>Close the editing view without accepting the changes.   |




*Input screens*

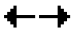



| Symbol     | Meaning   |
|------------|---|
| <b>A..</b> | Upper case  |
| <b>a..</b> | Lower case  |
| <b>1..</b> | Numbers   |
| <b>+*</b>  | Punctuation marks and special characters: = + - * / <sup>2</sup> <sup>3</sup> ¼ ½ ¾ ( )     < > { } |
| <b>@..</b> | Punctuation marks and special characters: ' " ^ . , ; : ? ! % μ ° € \$ £ ¥ § @ # / \   ~ & _        |
| <b>ä..</b> | Umlauts and accents   |

*Controlling data entries*

| Symbol  | Meaning   |
|---|---|
|  | Move entry position   |
|  | Reject entry  |
|  | Confirm entry   |
|  | Delete character immediately to the left of the entry position  |
| <b>del</b>  | Delete character immediately to the right of the entry position |
| <b>C</b>  | Clear all the characters entered                                |

**8.3.4 Operating elements**

| Operating key(s)  | Meaning  |
|---|--|
|    | <p><b>Minus key</b></p> <p><i>In a menu, submenu</i><br/>Moves the selection bar upwards in a choose list.</p> <p><i>With a Wizard</i><br/>Confirms the parameter value and goes to the previous parameter.</p> <p><i>With a text and numeric editor</i><br/>Move the entry position to the left.</p>  |
|  | <p><b>Plus key</b></p> <p><i>In a menu, submenu</i><br/>Moves the selection bar downwards in a choose list.</p> <p><i>With a Wizard</i><br/>Confirms the parameter value and goes to the next parameter.</p> <p><i>With a text and numeric editor</i><br/>Move the entry position to the right.</p>  |
|  | <p><b>Enter key</b></p> <p><i>For operational display</i></p> <ul style="list-style-type: none"> <li>▪ Pressing the key briefly opens the operating menu.</li> <li>▪ Pressing the key for 2 s opens the context menu including the option for activating the keypad lock.</li> </ul> <p><i>In a menu, submenu</i></p> <ul style="list-style-type: none"> <li>▪ Pressing the key briefly: <ul style="list-style-type: none"> <li>- Opens the selected menu, submenu or parameter.</li> <li>- Starts the wizard.</li> <li>- If help text is open, closes the help text of the parameter.</li> </ul> </li> <li>▪ Pressing the key for 2 s for parameter: <ul style="list-style-type: none"> <li>- If present, opens the help text for the function of the parameter.</li> </ul> </li> </ul> <p><i>With a Wizard</i><br/>Opens the editing view of the parameter.</p> <p><i>With a text and numeric editor</i></p> <ul style="list-style-type: none"> <li>▪ Press the key briefly: confirm your selection.</li> <li>▪ Press the key for 2 s: confirm the entry.</li> </ul> |

| Operating key(s)  | Meaning   |
|---|---|
|  +  | <p><b>Escape key combination (press keys simultaneously)</b></p> <p><i>In a menu, submenu</i></p> <ul style="list-style-type: none"> <li>▪ Pressing the key briefly:                             <ul style="list-style-type: none"> <li>- Exits the current menu level and takes you to the next higher level.</li> <li>- If help text is open, closes the help text of the parameter.</li> </ul> </li> <li>▪ Pressing the key for 2 s returns you to the operational display ("home position").</li> </ul> <p><i>With a Wizard</i><br/>Exits the wizard and takes you to the next higher level.</p> <p><i>With a text and numeric editor</i><br/>Close the editing view without accepting the changes.</p> |
|  +  | <p><b>Minus/Enter key combination (press the keys simultaneously)</b></p> <p>Press the key for 3 s: deactivate the keypad lock.</p>   |


### 8.3.5 Opening the context menu


Using the context menu, the user can call up the following menus quickly and directly from the operational display:

- Setup
- Data backup
- Simulation



#### Calling up and closing the context menu

The user is in the operational display.

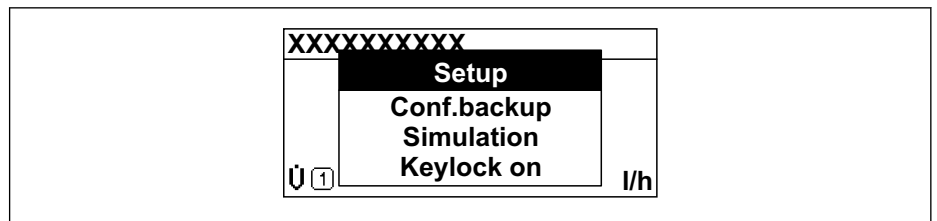

1. Press  for 2 s.
  - ↳ The context menu opens.



A0034608-EN

2. Press  +  simultaneously.
  - ↳ The context menu is closed and the operational display appears.

#### Calling up the menu via the context menu


1. Open the context menu.
2. Press  to navigate to the desired menu.
3. Press  to confirm the selection.
  - ↳ The selected menu opens.

### 8.3.6 Navigating and selecting from list

Different operating elements are used to navigate through the operating menu. The navigation path is displayed on the left in the header. Icons are displayed in front of the individual menus. These icons are also shown in the header during navigation.

**i** For an explanation of the navigation view with symbols and operating elements  
 → 64

**Example: Setting the number of displayed measured values to "2 values"**

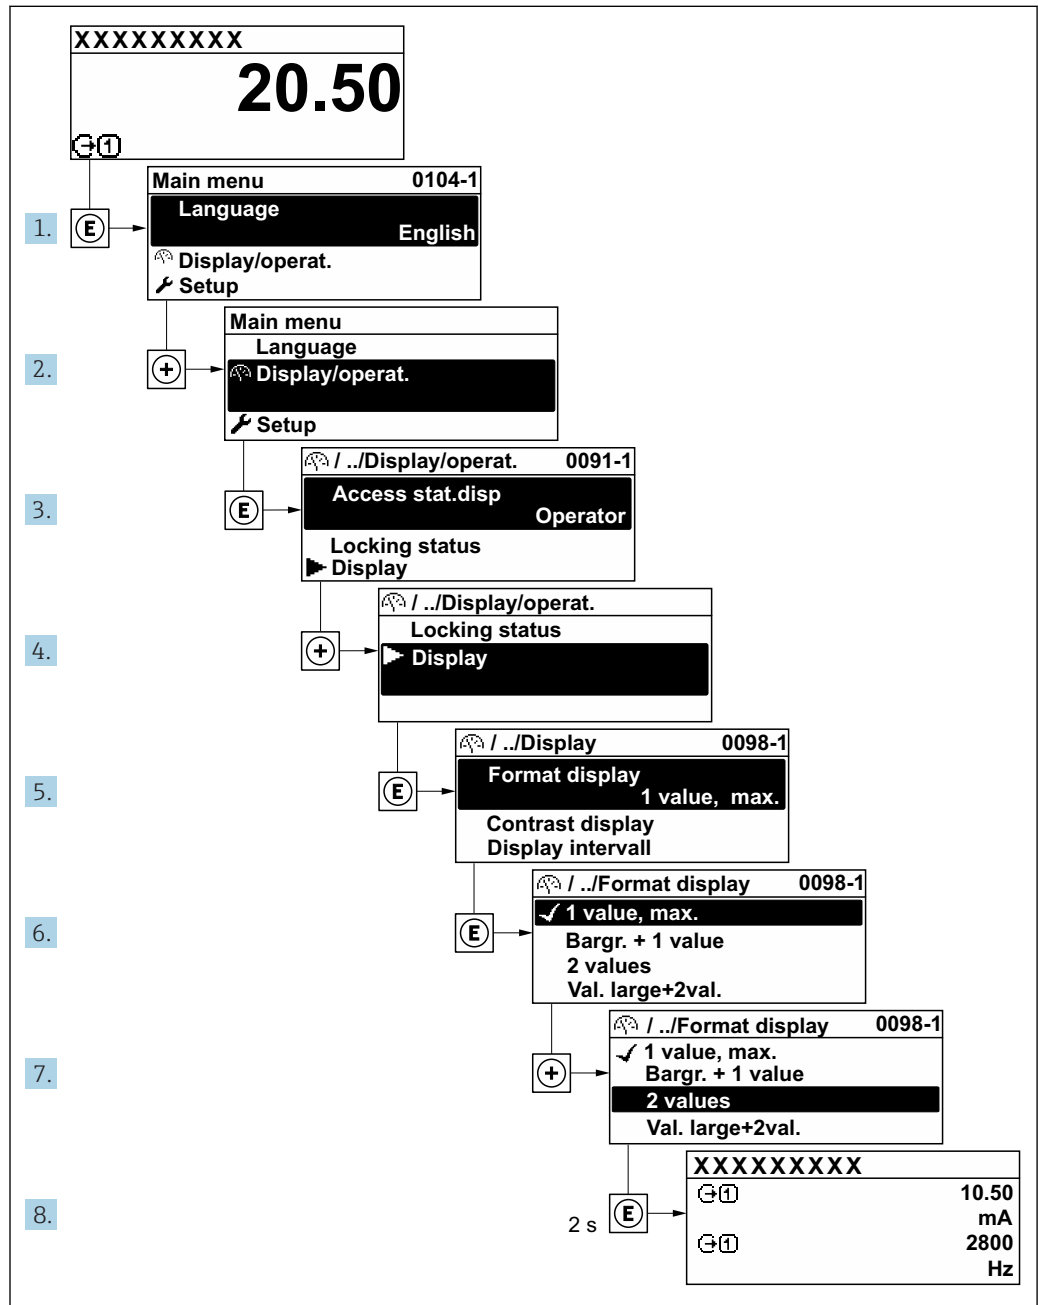

A0029562-EN


### 8.3.7 Calling the parameter directly

A parameter number is assigned to every parameter to be able to access a parameter directly via the onsite display. Entering this access code in the **Direct access** parameter calls up the desired parameter directly.

#### Navigation path

Expert → Direct access

The direct access code consists of a 5-digit number (at maximum) and the channel number, which identifies the channel of a process variable: e.g. 00914-2. In the navigation view, this appears on the right-hand side in the header of the selected parameter.

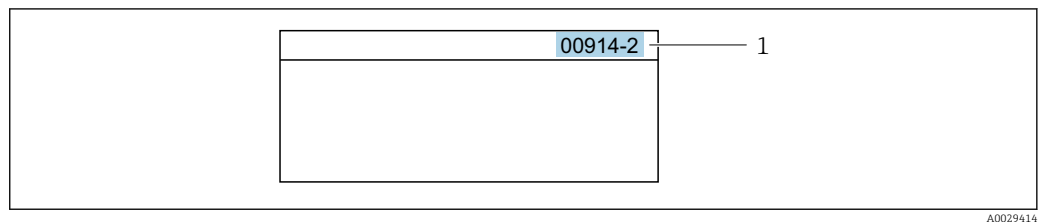

1 Direct access code

Note the following when entering the direct access code:

- The leading zeros in the direct access code do not have to be entered.  
Example: Enter "914" instead of "00914"
- If no channel number is entered, channel 1 is accessed automatically.  
Example: Enter 00914 → **Assign process variable** parameter
- If a different channel is accessed: Enter the direct access code with the corresponding channel number.  
Example: Enter 00914-2 → **Assign process variable** parameter



For the direct access codes of the individual parameters, see the "Description of Device Parameters" document for the device


### 8.3.8 Calling up help text

Help text is available for some parameters and can be called up from the navigation view. The help text provides a brief explanation of the parameter function and thereby supports swift and safe commissioning.

#### Calling up and closing the help text

The user is in the navigation view and the selection bar is on a parameter.

1. Press for 2 s.  
↳ The help text for the selected parameter opens.

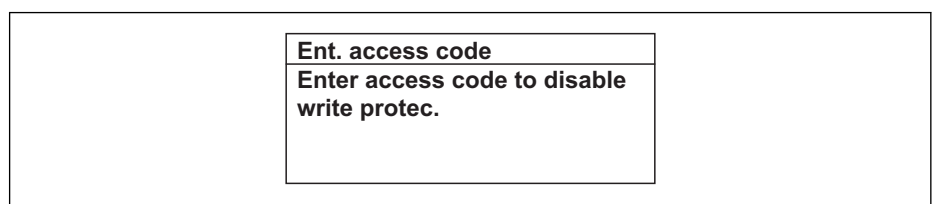

31 Example: Help text for parameter "Enter access code"


2. Press + simultaneously.  
↳ The help text is closed.

### 8.3.9 Changing the parameters

Parameters can be changed via the numeric editor or text editor.

- Numeric editor: Change values in a parameter, e.g. specifications for limit values.
- Text editor: Enter text in a parameter, e.g. tag name.

A message is displayed if the value entered is outside the permitted value range.

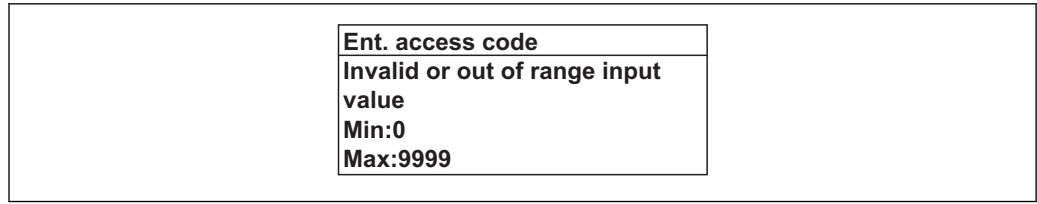

A0014049-EN

**i** For a description of the editing view - consisting of the text editor and numeric editor - with symbols → 66, for a description of the operating elements → 68

### 8.3.10 User roles and related access authorization

The two user roles "Operator" and "Maintenance" have different write access to the parameters if the customer defines a user-specific access code. This protects the device configuration via the local display from unauthorized access → 155.

#### Defining access authorization for user roles

An access code is not yet defined when the device is delivered from the factory. Access authorization (read and write access) to the device is not restricted and corresponds to the "Maintenance" user role.

- ▶ Define the access code.
  - ↳ The "Operator" user role is redefined in addition to the "Maintenance" user role. Access authorization differs for the two user roles.

#### Access authorization to parameters: "Maintenance" user role

| Access code status   | Read access | Write access    |
|--|-------------|-----------------|
| An access code has not yet been defined (factory setting). | ✓           | ✓               |
| After an access code has been defined.                     | ✓           | ✓ <sup>1)</sup> |

1) The user only has write access after entering the access code.

#### Access authorization to parameters: "Operator" user role

| Access code status                     | Read access | Write access     |
|--|-------------|------------------|
| After an access code has been defined. | ✓           | -- <sup>1)</sup> |

1) Despite the defined access code, certain parameters can always be modified and thus are excepted from the write protection, as they do not affect the measurement. Refer to the "Write protection via access code" section

**i** The user role with which the user is currently logged on is indicated by the **Access status** parameter. Navigation path: Operation → Access status


### 8.3.11 Disabling write protection via access code

If the -symbol appears on the local display in front of a parameter, the parameter is write-protected by a user-specific access code and its value cannot be changed at the moment using local operation → 155.

Parameter write protection via local operation can be disabled by entering the user-specific access code in the **Enter access code** parameter (→ 137) via the respective access option.

1. After you press , the input prompt for the access code appears.




2. Enter the access code.
  - ↳ The -symbol in front of the parameters disappears; all previously write-protected parameters are now re-enabled.

### 8.3.12 Enabling and disabling the keypad lock


The keypad lock makes it possible to block access to the entire operating menu via local operation. As a result, it is no longer possible to navigate through the operating menu or change the values of individual parameters. Users can only read the measured values on the operational display.

The keypad lock is switched on and off via the context menu.

#### Switching on the keypad lock


-  The keypad lock is switched on automatically:
- If the device has not been operated via the display for > 1 minute.
  - Each time the device is restarted.

#### To activate the keylock manually:

1. The device is in the measured value display.  
Press  for at least 2 seconds.  
↳ A context menu appears.
2. In the context menu select the **Keylock on** option.  
↳ The keypad lock is switched on.

-  If the user attempts to access the operating menu while the keypad lock is active, the **Keylock on** message appears.

#### Switching off the keypad lock



1. The keypad lock is switched on.  
Press  for at least 2 seconds.  
↳ A context menu appears.
2. In the context menu select the **Keylock off** option.  
↳ The keypad lock is switched off.

## 8.4 Access to the operating menu via the Web browser

### 8.4.1 Function range

Thanks to the integrated Web server, the device can be operated and configured via a Web browser and via a service interface (CDI-RJ45) or via a WLAN interface. The structure of the operating menu is the same as for the local display. In addition to the measured values, status information on the device is also displayed and allows the user to monitor the status of the device. Furthermore the device data can be managed and the network parameters can be configured.

A device that has a WLAN interface (can be ordered as an option) is required for the WLAN connection: order code for "Display; operation", option **G** "4-line, illuminated; touch control + WLAN". The device acts as an Access Point and enables communication by computer or a mobile handheld terminal.


-  For additional information on the Web server, refer to the Special Documentation for the device →  234

## 8.4.2 Prerequisites



### Computer hardware

| Hardware   | Interface   |  |
|------------|---|--|
|            | CDI-RJ45  | WLAN   |
| Interface  | The computer must have an RJ45 interface.                 | The operating unit must have a WLAN interface. |
| Connection | Standard Ethernet cable with RJ45 connector.              | Connection via Wireless LAN.                   |
| Screen     | Recommended size: ≥12" (depends on the screen resolution) |  |

### Computer software



| Software                      | Interface   |      |
|-------------------------------|---|------|
|                               | CDI-RJ45  | WLAN |
| Recommended operating systems | <ul style="list-style-type: none"> <li>▪ Microsoft Windows 7 or higher.</li> <li>▪ Mobile operating systems:                             <ul style="list-style-type: none"> <li>- iOS</li> <li>- Android</li> </ul> </li> </ul> <p> Microsoft Windows XP is supported.</p> |      |
| Web browsers supported        | <ul style="list-style-type: none"> <li>▪ Microsoft Internet Explorer 8 or higher</li> <li>▪ Microsoft Edge</li> <li>▪ Mozilla Firefox</li> <li>▪ Google Chrome</li> <li>▪ Safari</li> </ul>   |      |

### Computer settings



| Settings                                 | Interface  |   |
|--|--|---|
|  | CDI-RJ45   | WLAN                                      |
| User rights                              | Appropriate user rights (e.g. administrator rights) for TCP/IP and proxy server settings are necessary (for adjusting the IP address, subnet mask etc.).   |   |
| Proxy server settings of the Web browser | The Web browser setting <i>Use a Proxy Server for Your LAN</i> must be <b>deselected</b> .   |   |
| JavaScript                               | <p>JavaScript must be enabled.</p> <p> If JavaScript cannot be enabled: enter <code>http://192.168.1.212/basic.html</code> in the address line of the Web browser. A fully functional but simplified version of the operating menu structure starts in the Web browser.</p> <p> When installing a new firmware version: To enable correct data display, clear the temporary memory (cache) of the Web browser under <b>Internet options</b>.</p> |   |
| Network connections                      | Only the active network connections to the measuring device should be used.  |   |
|  | Switch off all other network connections such as WLAN.   | Switch off all other network connections. |

 In the event of connection problems: →  174

*Measuring device: Via CDI-RJ45 service interface*

| Device           | CDI-RJ45 service interface   |
|------------------|--|
| Measuring device | The measuring device has an RJ45 interface.  |
| Web server       | Web server must be enabled; factory setting: ON<br> For information on enabling the Web server →  79 |

*Measuring device: via WLAN interface*

| Device           | WLAN interface  |
|------------------|---|
| Measuring device | The measuring device has a WLAN antenna: <ul style="list-style-type: none"> <li>▪ Transmitter with integrated WLAN antenna</li> <li>▪ Transmitter with external WLAN antenna</li> </ul>   |
| Web server       | Web server and WLAN must be enabled; factory setting: ON<br> For information on enabling the Web server →  79 |

### 8.4.3 Establishing a connection

#### Via service interface (CDI-RJ45)

*Preparing the measuring device*

*Proline 500 – digital*

1. Loosen the 4 fixing screws on the housing cover.
2. Open the housing cover.
3. The location of the connection socket depends on the measuring device and the communication protocol:  
 Connect the computer to the RJ45 connector via the standard Ethernet connecting cable .


*Proline 500*

1. Depending on the housing version:  
 Release the securing clamp or securing screw of the housing cover.
2. Depending on the housing version:  
 Unscrew or open the housing cover.
3. The location of the connection socket depends on the measuring device and the communication protocol:  
 Connect the computer to the RJ45 connector via the standard Ethernet connecting cable .

*Configuring the Internet protocol of the computer*

The following information refers to the default Ethernet settings of the device.

IP address of the device: 192.168.1.212 (factory setting)

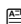1. Switch on the measuring device.
2. Connect to the computer using a cable →  81.
3. If a 2nd network card is not used, close all the applications on the notebook.
  - ↳ Applications requiring Internet or a network, such as e-mail, SAP applications, Internet or Windows Explorer.
4. Close any open Internet browsers.
5. Configure the properties of the Internet protocol (TCP/IP) as defined in the table:

|                        |  |
|------------------------|--|
| <b>IP address</b>      | 192.168.1.XXX; for XXX all numerical sequences except: 0, 212 and 255 → e.g. 192.168.1.213 |
| <b>Subnet mask</b>     | 255.255.255.0  |
| <b>Default gateway</b> | 192.168.1.212 or leave cells empty   |

### Via WLAN interface

*Configuring the Internet protocol of the mobile terminal*

#### NOTICE

**If the WLAN connection is lost during the configuration, settings made may be lost.**

- ▶ Make sure that the WLAN connection is not disconnected while configuring the device.

#### NOTICE

**In principle, avoid simultaneous access to the measuring device via the service interface (CDI-RJ45) and the WLAN interface from the same mobile terminal. This could cause a network conflict.**


- ▶ Only activate one service interface (CDI-RJ45 service interface or WLAN interface).
- ▶ If simultaneous communication is necessary: configure different IP address ranges, e.g. 192.168.0.1 (WLAN interface) and 192.168.1.212 (CDI-RJ45 service interface).


*Preparing the mobile terminal*

- ▶ Enable WLAN reception on the mobile terminal.

*Establishing a connection from the mobile terminal to the measuring device*

1. In the WLAN settings of the mobile terminal:  
Select the measuring device using the SSID (e.g. EH\_Promass\_500\_A802000).
2. If necessary, select the WPA2 encryption method.
3. Enter the password: serial number of the measuring device ex-works (e.g. L100A802000).  
↳ LED on display module flashes: it is now possible to operate the measuring device with the Web browser, FieldCare or DeviceCare.

 The serial number can be found on the nameplate.

 To ensure the safe and swift assignment of the WLAN network to the measuring point, it is advisable to change the SSID name. It should be possible to clearly assign the new SSID name to the measuring point (e.g. tag name) because it is displayed as the WLAN network.


*Disconnecting*

- ▶ After configuring the device:  
Terminate the WLAN connection between the operating unit and measuring device.

### Starting the Web browser

1. Start the Web browser on the computer.

2. Enter the IP address of the Web server in the address line of the Web browser:  
192.168.1.212  
↳ The login page appears.

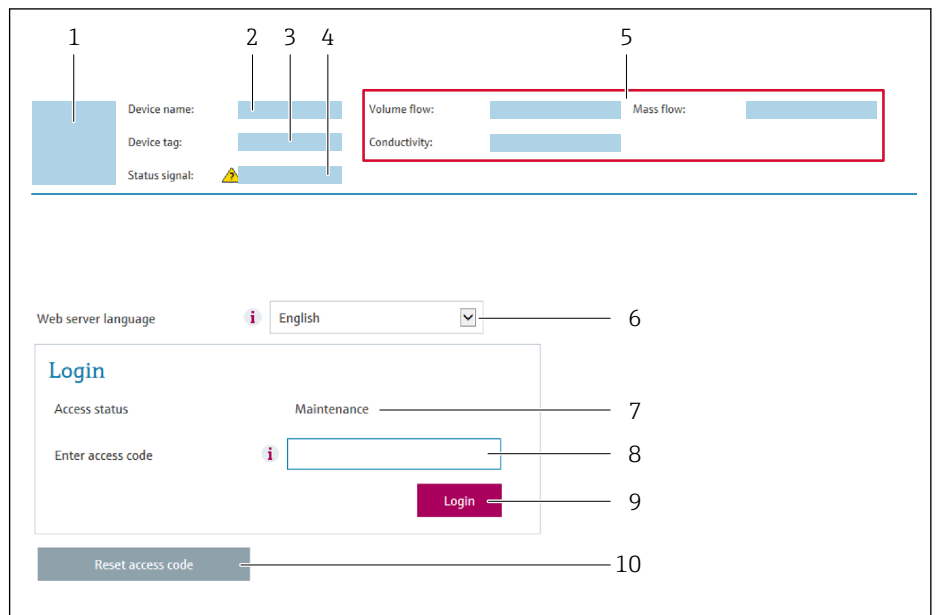

A0029417

- 1 Picture of device
- 2 Device name
- 3 Device tag (→ ⓘ 96)
- 4 Status signal
- 5 Current measured values
- 6 Operating language
- 7 User role
- 8 Access code
- 9 Login
- 10 Reset access code (→ ⓘ 151)

**i** If a login page does not appear, or if the page is incomplete → ⓘ 174


### 8.4.4 Logging on

1. Select the preferred operating language for the Web browser.
2. Enter the user-specific access code.
3. Press **OK** to confirm your entry.

|                    |  |
|--------------------|--|
| <b>Access code</b> | 0000 (factory setting); can be changed by customer |
|--------------------|--|

**i** If no action is performed for 10 minutes, the Web browser automatically returns to the login page.

### 8.4.5 User interface

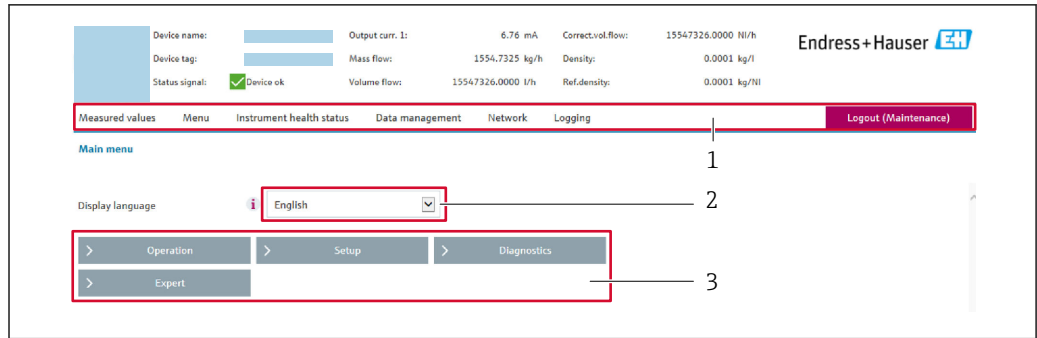

A0029418


- 1 Function row
- 2 Local display language
- 3 Navigation area

#### Header

The following information appears in the header:

- Device tag
- Device status with status signal → 📄 182
- Current measured values

#### Function row

| Functions             | Meaning   |
|-----------------------|---|
| Measured values       | Displays the measured values of the measuring device  |
| Menu                  | <ul style="list-style-type: none"> <li>■ Access to the operating menu from the measuring device</li> <li>■ The structure of the operating menu is the same as for the local display</li> </ul>  For detailed information on the structure of the operating menu, see the Operating Instructions for the measuring device   |
| Device status         | Displays the diagnostic messages currently pending, listed in order of priority   |
| Data management       | Data exchange between PC and measuring device: <ul style="list-style-type: none"> <li>■ Device configuration:               <ul style="list-style-type: none"> <li>- Load settings from the device (XML format, save configuration)</li> <li>- Save settings to the device (XML format, restore configuration)</li> </ul> </li> <li>■ Logbook - Export Event logbook (.csv file)</li> <li>■ Documents - Export documents:               <ul style="list-style-type: none"> <li>- Export backup data record (.csv file, create documentation of the measuring point configuration)</li> <li>- Verification report (PDF file, only available with the "Heartbeat Verification" application package)</li> </ul> </li> <li>■ Firmware update - Flashing a firmware version</li> </ul> |
| Network configuration | Configuration and checking of all the parameters required for establishing the connection to the measuring device: <ul style="list-style-type: none"> <li>■ Network settings (e.g. IP address, MAC address)</li> <li>■ Device information (e.g. serial number, firmware version)</li> </ul>   |
| Logout                | End the operation and call up the login page  |

#### Navigation area

If a function is selected in the function bar, the submenus of the function open in the navigation area. The user can now navigate through the menu structure.

**Working area**

Depending on the selected function and the related submenus, various actions can be performed in this area:

- Configuring parameters
- Reading measured values
- Calling up help text
- Starting an upload/download

**8.4.6 Disabling the Web server**

The Web server of the measuring device can be switched on and off as required using the **Web server functionality** parameter.

**Navigation**

"Expert" menu → Communication → Web server

**Parameter overview with brief description**

| Parameter                | Description                       | Selection   | Factory setting |
|--------------------------|-----------------------------------|---|-----------------|
| Web server functionality | Switch the Web server on and off. | <ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ On</li> </ul> | On              |

**Function scope of the "Web server functionality" parameter**


| Option | Description  |
|--------|--|
| Off    | <ul style="list-style-type: none"> <li>▪ The web server is completely disabled.</li> <li>▪ Port 80 is locked.</li> </ul>   |
| On     | <ul style="list-style-type: none"> <li>▪ The complete functionality of the web server is available.</li> <li>▪ JavaScript is used.</li> <li>▪ The password is transferred in an encrypted state.</li> <li>▪ Any change to the password is also transferred in an encrypted state.</li> </ul> |


**Enabling the Web server**

If the Web server is disabled it can only be re-enabled with the **Web server functionality** parameter via the following operating options:

- Via local display
- Via Bedientool "FieldCare"
- Via "DeviceCare" operating tool

**8.4.7 Logging out**

 Before logging out, perform a data backup via the **Data management** function (upload configuration from device) if necessary.

1. Select the **Logout** entry in the function row.  
↳ The home page with the Login box appears.
2. Close the Web browser.
3. If no longer needed:  
Reset modified properties of the Internet protocol (TCP/IP) →  75.


**8.5 Access to the operating menu via the operating tool**

The structure of the operating menu in the operating tools is the same as for operation via the local display.

### 8.5.1 Connecting the operating tool

#### Via HART protocol


This communication interface is available in device versions with a HART output.

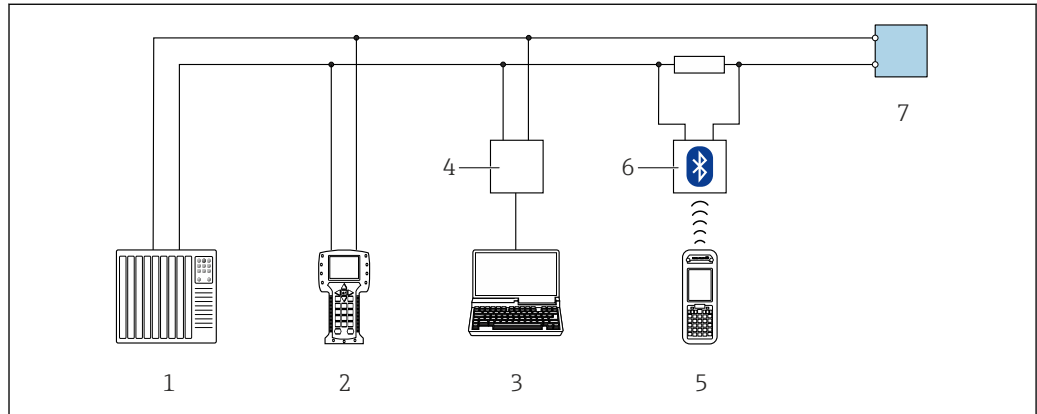

A0028747

32 Options for remote operation via HART protocol (active)

- 1 Control system (e.g. PLC)
- 2 Field Communicator 475
- 3 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated device Web server or computer with operating tool (e.g. FieldCare, DeviceCare, AMS Device Manager, SIMATIC PDM) with COM DTM "CDI Communication TCP/IP"
- 4 Commubox FXA195 (USB)
- 5 Field Xpert SFX350 or SFX370
- 6 VIATOR Bluetooth modem with connecting cable
- 7 Transmitter

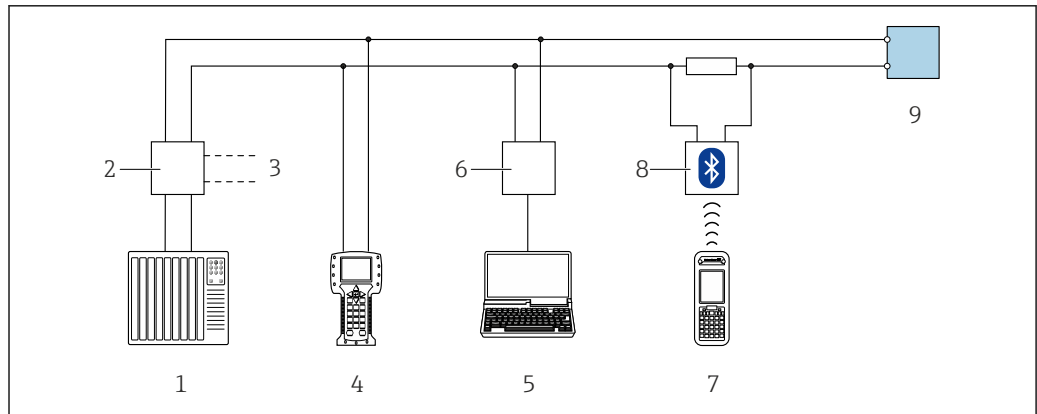

A0028746

33 Options for remote operation via HART protocol (passive)


- 1 Control system (e.g. PLC)
- 2 Transmitter power supply unit, e.g. RN221N (with communication resistor)
- 3 Connection for Commubox FXA195 and Field Communicator 475
- 4 Field Communicator 475
- 5 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated device Web server or computer with operating tool (e.g. FieldCare, DeviceCare, AMS Device Manager, SIMATIC PDM) with COM DTM "CDI Communication TCP/IP"
- 6 Commubox FXA195 (USB)
- 7 Field Xpert SFX350 or SFX370
- 8 VIATOR Bluetooth modem with connecting cable
- 9 Transmitter



### Service interface


#### Via service interface (CDI-RJ45)

A point-to-point connection can be established to configure the device onsite. With the housing open, the connection is established directly via the service interface (CDI-RJ45) of the device.

 An adapter for RJ45 and the M12 connector is optionally available:  
Order code for "Accessories", option **NB**: "Adapter RJ45 M12 (service interface)"

The adapter connects the service interface (CDI-RJ45) to an M12 connector mounted in the cable entry. Therefore the connection to the service interface can be established via an M12 connector without opening the device.

#### Proline 500 – digital transmitter

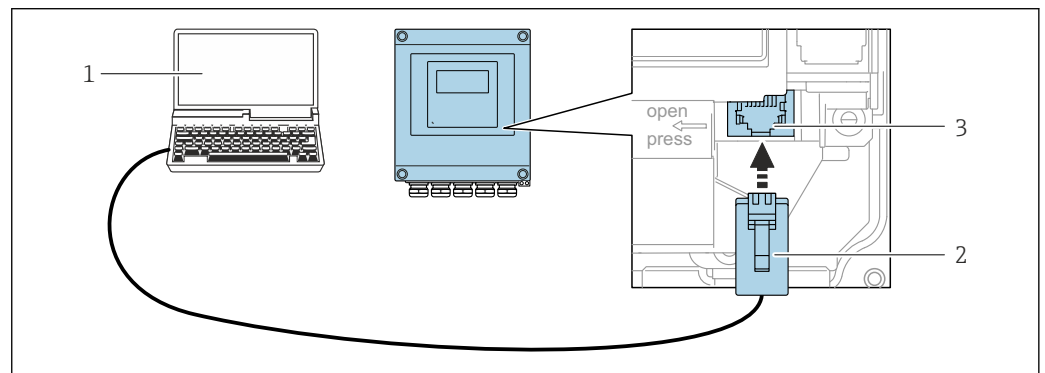


A0029163

#### 34 Connection via service interface (CDI-RJ45)

- 1 Computer with Web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device Web server or with "FieldCare", "DeviceCare" operating tool with COM DTM "CDI Communication TCP/IP"
- 2 Standard Ethernet connecting cable with RJ45 connector
- 3 Service interface (CDI-RJ45) of the measuring device with access to the integrated Web server

#### Proline 500 transmitter

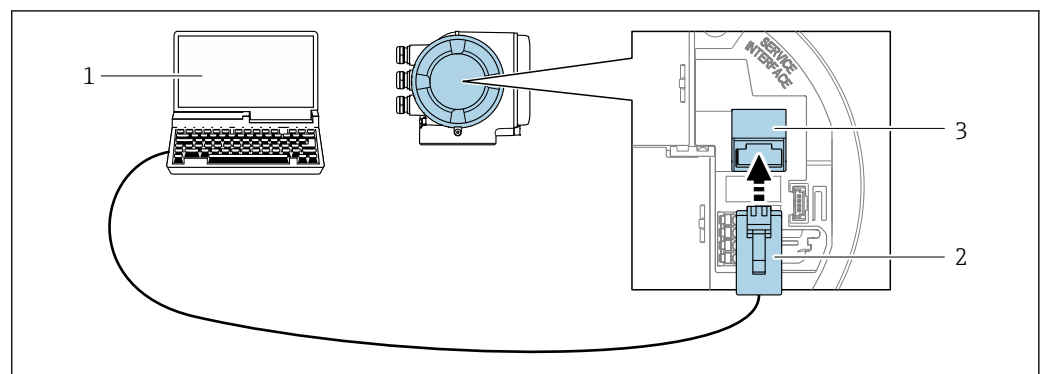


A0027563

#### 35 Connection via service interface (CDI-RJ45)

- 1 Computer with Web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device Web server or with "FieldCare", "DeviceCare" operating tool with COM DTM "CDI Communication TCP/IP"
- 2 Standard Ethernet connecting cable with RJ45 connector
- 3 Service interface (CDI-RJ45) of the measuring device with access to the integrated Web server


#### Via WLAN interface

The optional WLAN interface is available on the following device version:  
Order code for "Display; operation", option **G** "4-line, illuminated, graphic display; touch control + WLAN"

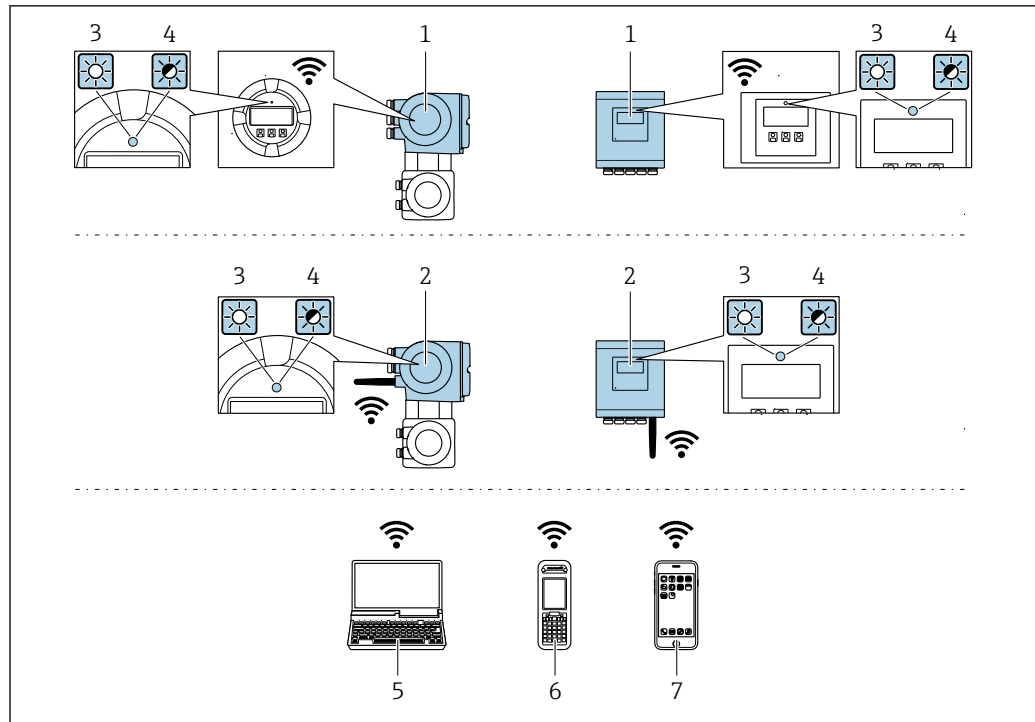

A0034569

- 1 Transmitter with integrated WLAN antenna
- 2 Transmitter with external WLAN antenna
- 3 LED lit constantly: WLAN reception is enabled on measuring device
- 4 LED flashing: WLAN connection established between operating unit and measuring device
- 5 Computer with WLAN interface and Web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device Web server or with operating tool (e.g. FieldCare, DeviceCare)
- 6 Mobile handheld terminal with WLAN interface and Web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device Web server or operating tool (e.g. FieldCare, DeviceCare)
- 7 Smartphone or tablet

|                                     |   |
|-------------------------------------|---|
| Function                            | WLAN: IEEE 802.11 b/g (2.4 GHz)   |
| Encryption                          | WPA2-PSK/AES 128 bit  |
| Configurable WLAN channels          | 1 to 11   |
| Degree of protection                | IP67  |
| Available antennas                  | <ul style="list-style-type: none"> <li>▪ Internal antenna</li> <li>▪ External antenna (optional)</li> </ul> In the event of poor transmission/reception conditions at the place of installation.<br> Only one antenna active in each case! |
| Max. range                          | 50 m (164 ft)   |
| Materials:<br>External WLAN antenna | <ul style="list-style-type: none"> <li>▪ Antenna: ASA plastic (acrylic ester-styrene-acrylonitrile) and nickel-plated brass</li> <li>▪ Adapter: Stainless steel and nickel-plated brass</li> <li>▪ Cable: Polyethylene</li> <li>▪ Connector: Nickel-plated brass</li> <li>▪ Angle bracket: Stainless steel</li> </ul>         |

*Configuring the Internet protocol of the mobile terminal*

**NOTICE**

**If the WLAN connection is lost during the configuration, settings made may be lost.**

- ▶ Make sure that the WLAN connection is not disconnected while configuring the device.

**NOTICE**

**In principle, avoid simultaneous access to the measuring device via the service interface (CDI-RJ45) and the WLAN interface from the same mobile terminal. This could cause a network conflict.**

- ▶ Only activate one service interface (CDI-RJ45 service interface or WLAN interface).
- ▶ If simultaneous communication is necessary: configure different IP address ranges, e.g. 192.168.0.1 (WLAN interface) and 192.168.1.212 (CDI-RJ45 service interface).

*Preparing the mobile terminal*

- ▶ Enable WLAN reception on the mobile terminal.

*Establishing a connection from the mobile terminal to the measuring device*

1. In the WLAN settings of the mobile terminal:  
Select the measuring device using the SSID (e.g. EH\_Promass\_500\_A802000).
2. If necessary, select the WPA2 encryption method.
3. Enter the password: serial number of the measuring device ex-works (e.g. L100A802000).
  - ↳ LED on display module flashes: it is now possible to operate the measuring device with the Web browser, FieldCare or DeviceCare.



The serial number can be found on the nameplate.



To ensure the safe and swift assignment of the WLAN network to the measuring point, it is advisable to change the SSID name. It should be possible to clearly assign the new SSID name to the measuring point (e.g. tag name) because it is displayed as the WLAN network.

*Disconnecting*

- ▶ After configuring the device:  
Terminate the WLAN connection between the operating unit and measuring device.

**8.5.2 Field Xpert SFX350, SFX370****Function range**

Field Xpert SFX350 and Field Xpert SFX370 are mobile computers for commissioning and maintenance. They enable efficient device configuration and diagnostics for HART and FOUNDATION Fieldbus devices in the **non-hazardous area** (SFX350, SFX370) and **hazardous area** (SFX370).



For details, see Operating Instructions BA01202S



**Source for device description files**

See information → 87

**8.5.3 FieldCare****Function scope**

FDT-based plant asset management tool from Endress+Hauser. It can configure all smart field devices in a system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.

Access is via:

- HART protocol
- CDI-RJ45 service interface →  81
- WLAN interface →  81

Typical functions:

- Configuring parameters of transmitters
- Loading and saving device data (upload/download)
- Documentation of the measuring point
- Visualization of the measured value memory (line recorder) and event logbook



For additional information about FieldCare, see Operating Instructions BA00027S and BA00059S

### Source for device description files

See information →  87


### Establishing a connection

1. Start FieldCare and launch the project.
2. In the network: Add a device.
  - ↳ The **Add device** window opens.
3. Select the **CDI Communication TCP/IP** option from the list and press **OK** to confirm.
4. Right-click **CDI Communication TCP/IP** and select the **Add device** option in the context menu that opens.
5. Select the desired device from the list and press **OK** to confirm.
  - ↳ The **CDI Communication TCP/IP (Configuration)** window opens.
6. Enter the device address in the **IP address** field: 192.168.1.212 and press **Enter** to confirm.
7. Establish the online connection to the device.



For additional information, see Operating Instructions BA00027S and BA00059S

User interface

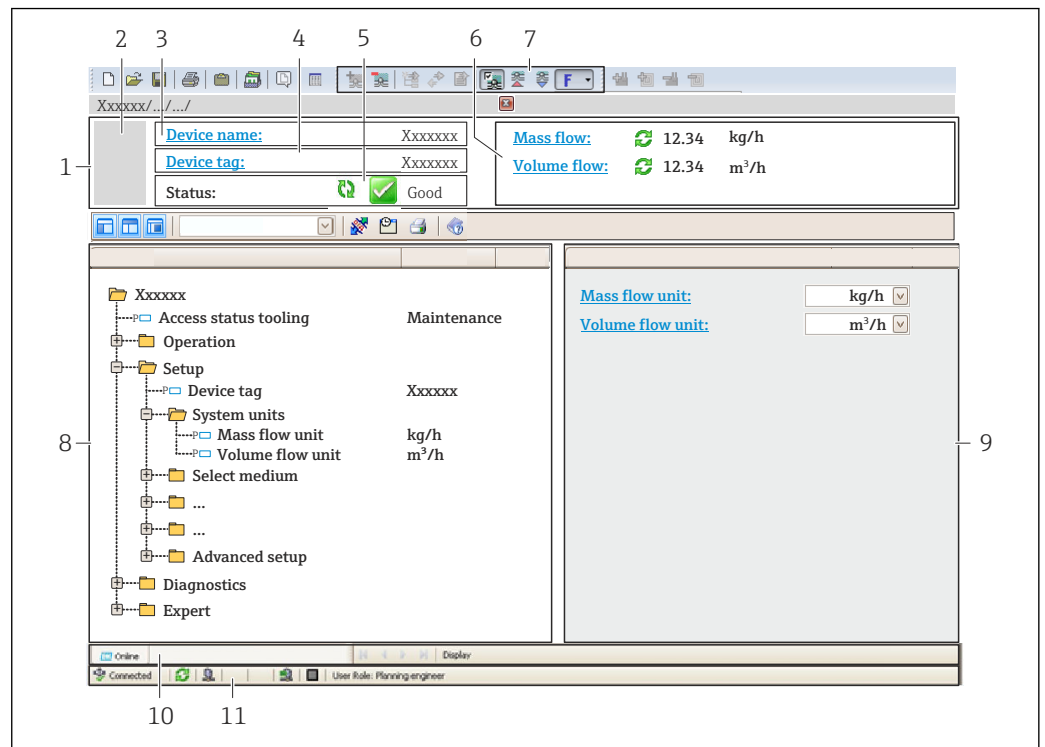

A0021051-EN

- 1 Header
- 2 Picture of device
- 3 Device name
- 4 Tag name
- 5 Status area with status signal → 182
- 6 Display area for current measured values
- 7 Edit toolbar with additional functions such as save/restore, event list and create documentation
- 8 Navigation area with operating menu structure
- 9 Working area
- 10 Range of action
- 11 Status area

### 8.5.4 DeviceCare


#### Function scope

Tool to connect and configure Endress+Hauser field devices.

The fastest way to configure Endress+Hauser field devices is with the dedicated "DeviceCare" tool. Together with the device type managers (DTMs) it presents a convenient, comprehensive solution.

 For details, see Innovation Brochure IN01047S

#### Source for device description files


See information →  87

### 8.5.5 AMS Device Manager

#### Function scope

Program from Emerson Process Management for operating and configuring measuring devices via HART protocol.


**Source for device description files**

See data →  87

**8.5.6 SIMATIC PDM****Function scope**

SIMATIC PDM is a standardized, manufacturer-independent program from Siemens for the operation, configuration, maintenance and diagnosis of intelligent field devices via HART protocol.


**Source for device description files**

See data →  87

**8.5.7 Field Communicator 475****Function scope**

Industrial handheld terminal from Emerson Process Management for remote configuration and measured value display via HART protocol.

**Source for device description files**

See data →  87

## 9 System integration

### 9.1 Overview of device description files

#### 9.1.1 Current version data for the device

|                                  |          |   |
|----------------------------------|----------|---|
| Firmware version                 | 01.01.zz | <ul style="list-style-type: none"> <li>▪ On the title page of the Operating Instructions</li> <li>▪ On the transmitter nameplate</li> <li>▪ Firmware version<br/>Diagnostics → Device information → Firmware version</li> </ul> |
| Release date of firmware version | 10.2017  | ---   |
| Manufacturer ID                  | 0x11     | Manufacturer ID<br>Diagnostics → Device information → Manufacturer ID   |
| Device type ID                   | 0x3B     | Device type<br>Diagnostics → Device information → Device type   |
| HART protocol revision           | 7        | ---   |
| Device revision                  | 1        | <ul style="list-style-type: none"> <li>▪ On the transmitter nameplate</li> <li>▪ Device revision<br/>Diagnostics → Device information → Device revision</li> </ul>  |

 For an overview of the different firmware versions for the device →  196

#### 9.1.2 Operating tools

The suitable device description file for the individual operating tools is listed in the table below, along with information on where the file can be acquired.

| Operating tool via HART protocol   | Sources for obtaining device descriptions   |
|--|---|
| FieldCare  | <ul style="list-style-type: none"> <li>▪ <a href="http://www.endress.com">www.endress.com</a> → Download Area</li> <li>▪ CD-ROM (contact Endress+Hauser)</li> <li>▪ DVD (contact Endress+Hauser)</li> </ul> |
| DeviceCare   | <ul style="list-style-type: none"> <li>▪ <a href="http://www.endress.com">www.endress.com</a> → Download Area</li> <li>▪ CD-ROM (contact Endress+Hauser)</li> <li>▪ DVD (contact Endress+Hauser)</li> </ul> |
| <ul style="list-style-type: none"> <li>▪ Field Xpert SFX350</li> <li>▪ Field Xpert SFX370</li> </ul> | Use update function of handheld terminal  |
| AMS Device Manager<br>(Emerson Process Management)   | <a href="http://www.endress.com">www.endress.com</a> → Download Area  |
| SIMATIC PDM<br>(Siemens)   | <a href="http://www.endress.com">www.endress.com</a> → Download Area  |
| Field Communicator 475<br>(Emerson Process Management)   | Use update function of handheld terminal  |

## 9.2 Measured variables via HART protocol

The following measured variables (HART device variables) are assigned to the dynamic variables at the factory:

| Dynamic variables                | Measured variables<br>(HART device variables) |
|----------------------------------|---|
| Primary dynamic variable (PV)    | Mass flow                                     |
| Secondary dynamic variable (SV)  | Totalizer 1                                   |
| Tertiary dynamic variable (TV)   | Density                                       |
| Quaternary dynamic variable (QV) | Temperature                                   |

The assignment of the measured variables to the dynamic variables can be modified and assigned as desired via local operation and the operating tool using the following parameters:

- Expert → Communication → HART output → Output → Assign PV
- Expert → Communication → HART output → Output → Assign SV
- Expert → Communication → HART output → Output → Assign TV
- Expert → Communication → HART output → Output → Assign QV

The following measured variables can be assigned to the dynamic variables:

#### Measured variables for PV (primary dynamic variable)

- Off
- Mass flow
- Volume flow
- Corrected volume flow
- Target mass flow <sup>1)</sup>
- Carrier mass flow <sup>1)</sup>
- Target volume flow <sup>1)</sup>
- Carrier volume flow <sup>1)</sup>
- Target standard volume flow <sup>1)</sup>
- Carrier standard volume flow <sup>1)</sup>
- Density
- Reference density
- Standard density alternate <sup>1)</sup>
- Gross standard volume flow <sup>1)</sup>
- Gross standard volume flow alternate <sup>1)</sup>
- Net standard volume flow <sup>1)</sup>
- Net standard volume flow alternate <sup>1)</sup>
- Sediment and water volume <sup>1)</sup>
- Water cut <sup>1)</sup>
- Density oil <sup>1)</sup>
- Density water <sup>1)</sup>
- Mass flow oil <sup>1)</sup>
- Mass flow water <sup>1)</sup>
- Volume flow oil <sup>1)</sup>
- Volume flow water <sup>1)</sup>
- Standard volume flow oil <sup>1)</sup>
- Standard volume flow water <sup>1)</sup>
- Concentration <sup>1)</sup>
- Dynamic viscosity <sup>1)</sup>
- Kinematic viscosity <sup>1)</sup>
- Temp. compensated dynamic viscosity <sup>1)</sup>
- Temp. compensated kinematic viscosity <sup>1)</sup>
- Temperature
- Electronic temperature
- Oscillation frequency 0
- Oscillation frequency 1 <sup>1)</sup>
- Oscillation amplitude 0


1) Visible depending on the order options or device settings



- Oscillation amplitude 1 <sup>1)</sup>
- Frequency fluctuation 0
- Frequency fluctuation 1 <sup>1)</sup>
- Oscillation damping 0
- Oscillation damping 1 <sup>1)</sup>
- Oscillation damping fluctuation 0
- Oscillation damping fluctuation 1 <sup>1)</sup>
- Signal asymmetry
- Exciter current 0
- Exciter current 1 <sup>1)</sup>
- HBSI <sup>1)</sup>
- Pressure <sup>1)</sup>

**Measured variables for SV, TV, QV (secondary, tertiary and quaternary dynamic variable)**

- Mass flow
- Volume flow
- Corrected volume flow
- Target mass flow <sup>2)</sup>
- Carrier mass flow <sup>2)</sup>
- Density
- Reference density
- Concentration <sup>2)</sup>
- Dynamic viscosity <sup>2)</sup>
- Kinematic viscosity <sup>2)</sup>
- Temp. compensated dynamic viscosity <sup>2)</sup>
- Temp. compensated kinematic viscosity <sup>2)</sup>
- Temperature
- Electronic temperature
- Totalizer 1...3
- HBSI <sup>2)</sup>
- Target volume flow <sup>2)</sup>
- Carrier volume flow <sup>2)</sup>
- Target standard volume flow <sup>2)</sup>
- Carrier standard volume flow <sup>2)</sup>
- Standard density alternate <sup>2)</sup>
- Gross standard volume flow <sup>2)</sup>
- Gross standard volume flow alternate <sup>2)</sup>
- Net standard volume flow <sup>2)</sup>
- Net standard volume flow alternate <sup>2)</sup>
- Sediment and water volume <sup>2)</sup>
- Water cut <sup>2)</sup>
- Density oil <sup>2)</sup>
- Density water <sup>2)</sup>
- Mass flow oil <sup>2)</sup>
- Mass flow water <sup>2)</sup>
- Volume flow oil <sup>2)</sup>
- Volume flow water <sup>2)</sup>
- Standard volume flow oil <sup>2)</sup>
- Standard volume flow water <sup>2)</sup>
- Density weighted average <sup>2)</sup>
- Temperature weighted average <sup>2)</sup>

 The range of options increases if the measuring device has one or more application packages.

2) Visible depending on the order options or device settings

**Heartbeat Technology application package**

Additional measured variables are available with the Heartbeat Technology application package:

- HBSI
- Carrier pipe temperature

**Device variables**

The device variables are permanently assigned. A maximum of 8 device variables can be transmitted:

- 0 = mass flow
- 1 = volume flow
- 2 = corrected volume flow
- 3 = density
- 4 = reference density
- 5 = temperature
- 6 = totalizer 1
- 7 = totalizer 2
- 8 = totalizer 3
- 9 = dynamic viscosity
- 10 = kinematic viscosity
- 11 = temp. compensated dynamic viscosity
- 12 = temp. compensated kinematic viscosity
- 13 = target mass flow
- 14 = carrier mass flow
- 15 = concentration







## 9.3 Other settings

Burst mode functionality in accordance with HART 7 Specification:

**Navigation**

"Expert" menu → Communication → HART output → Burst configuration → Burst configuration 1 to n

|                              |      |
|------------------------------|------|
| ▶ Burst configuration        |      |
| ▶ Burst configuration 1 to n |      |
| Burst mode 1 to n            | → 91 |
| Burst command 1 to n         | → 91 |
| Burst variable 0             | → 92 |
| Burst variable 1             | → 92 |
| Burst variable 2             | → 92 |
| Burst variable 3             | → 92 |
| Burst variable 4             | → 92 |
| Burst variable 5             | → 92 |

|                     |  |
|---------------------|--|
| Burst variable 6    | →  92 |
| Burst variable 7    | →  92 |
| Burst trigger mode  | →  93 |
| Burst trigger level | →  93 |
| Min. update period  | →  93 |
| Max. update period  | →  93 |

**Parameter overview with brief description**

| Parameter            | Description  | Selection / User entry   | Factory setting |
|----------------------|--|--|-----------------|
| Burst mode 1 to n    | Activate the HART burst mode for burst message X.        | <ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ On</li> </ul>  | Off             |
| Burst command 1 to n | Select the HART command that is sent to the HART master. | <ul style="list-style-type: none"> <li>▪ Command 1</li> <li>▪ Command 2</li> <li>▪ Command 3</li> <li>▪ Command 9</li> <li>▪ Command 33</li> <li>▪ Command 48</li> </ul> | Command 2       |

| Parameter        | Description   | Selection / User entry   | Factory setting |
|------------------|---|--|-----------------|
| Burst variable 0 | For HART command 9 and 33: select the HART device variable or the process variable. | <ul style="list-style-type: none"> <li>■ Mass flow</li> <li>■ Volume flow</li> <li>■ Corrected volume flow</li> <li>■ Target mass flow *</li> <li>■ Carrier mass flow *</li> <li>■ Density</li> <li>■ Reference density</li> <li>■ Concentration *</li> <li>■ Dynamic viscosity *</li> <li>■ Kinematic viscosity *</li> <li>■ Temp. compensated dynamic viscosity *</li> <li>■ Temp. compensated kinematic viscosity *</li> <li>■ Temperature</li> <li>■ Totalizer 1</li> <li>■ Totalizer 2</li> <li>■ Totalizer 3</li> <li>■ HBSI *</li> <li>■ HART input</li> <li>■ Percent of range</li> <li>■ Measured current</li> <li>■ Primary variable (PV)</li> <li>■ Secondary variable (SV)</li> <li>■ Tertiary variable (TV)</li> <li>■ Quaternary variable (QV)</li> <li>■ Not used</li> <li>■ Target volume flow</li> <li>■ Carrier volume flow</li> <li>■ Target corrected volume flow</li> <li>■ Carrier corrected volume flow</li> <li>■ Reference density alternative</li> <li>■ GSV flow</li> <li>■ GSV flow alternative</li> <li>■ NSV flow</li> <li>■ NSV flow alternative</li> <li>■ S&amp;W volume flow</li> <li>■ Water cut</li> <li>■ Oil density</li> <li>■ Water density</li> <li>■ Oil mass flow</li> <li>■ Water mass flow</li> <li>■ Oil volume flow</li> <li>■ Water volume flow</li> <li>■ Oil corrected volume flow</li> <li>■ Water corrected volume flow</li> </ul> | Volume flow     |
| Burst variable 1 | For HART command 9 and 33: select the HART device variable or the process variable. | See the <b>Burst variable 0</b> parameter.   | Not used        |
| Burst variable 2 | For HART command 9 and 33: select the HART device variable or the process variable. | See the <b>Burst variable 0</b> parameter.   | Not used        |
| Burst variable 3 | For HART command 9 and 33: select the HART device variable or the process variable. | See the <b>Burst variable 0</b> parameter.   | Not used        |
| Burst variable 4 | For HART command 9: select the HART device variable or the process variable.        | See the <b>Burst variable 0</b> parameter.   | Not used        |
| Burst variable 5 | For HART command 9: select the HART device variable or the process variable.        | See the <b>Burst variable 0</b> parameter.   | Not used        |
| Burst variable 6 | For HART command 9: select the HART device variable or the process variable.        | See the <b>Burst variable 0</b> parameter.   | Not used        |
| Burst variable 7 | For HART command 9: select the HART device variable or the process variable.        | See the <b>Burst variable 0</b> parameter.   | Not used        |

| Parameter           | Description  | Selection / User entry   | Factory setting |
|---------------------|--|--|-----------------|
| Burst trigger mode  | Select the event that triggers burst message X.  | <ul style="list-style-type: none"> <li>■ Continuous</li> <li>■ Window</li> <li>■ Rising</li> <li>■ Falling</li> <li>■ On change</li> </ul> | Continuous      |
| Burst trigger level | Enter the burst trigger value.<br>Together with the option selected in the <b>Burst trigger mode</b> parameter the burst trigger value determines the time of burst message X. | Signed floating-point number   | –               |
| Min. update period  | Enter the minimum time span between two burst commands of burst message X.   | Positive integer   | 1 000 ms        |
| Max. update period  | Enter the maximum time span between two burst commands of burst message X.   | Positive integer   | 2 000 ms        |

\* Visibility depends on order options or device settings

## 10 Commissioning

### 10.1 Function check

Before commissioning the measuring device:

- ▶ Make sure that the post-installation and post-connection checks have been performed.
  - "Post-installation check" checklist → 35
  - "Post-connection check" checklist → 59


### 10.2 Switching on the measuring device

- ▶ After a successful function check, switch on the measuring device.
  - ↳ After a successful startup, the local display switches automatically from the startup display to the operational display.

**i** If nothing appears on the local display or a diagnostic message is displayed, refer to the section on "Diagnostics and troubleshooting" → 173.

### 10.3 Setting the operating language

Factory setting: English or ordered local language

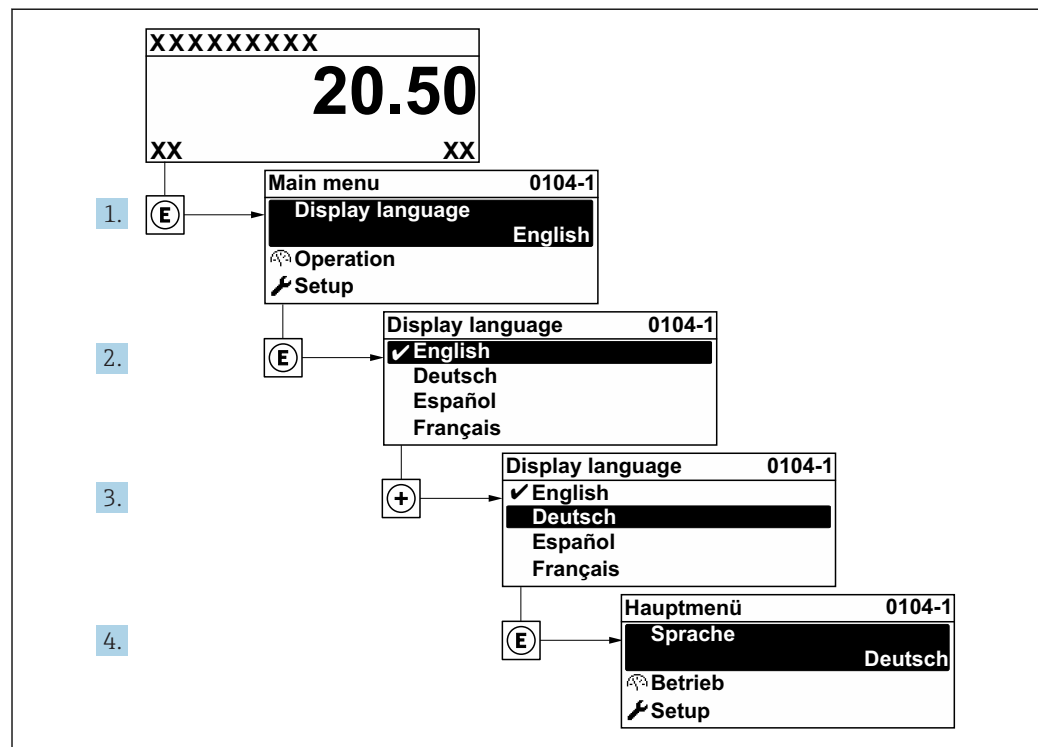


**36** Taking the example of the local display

A0029420

### 10.4 Configuring the measuring device

- The **Setup** menu with its guided wizards contains all the parameters needed for standard operation.
- Navigation to the **Setup** menu

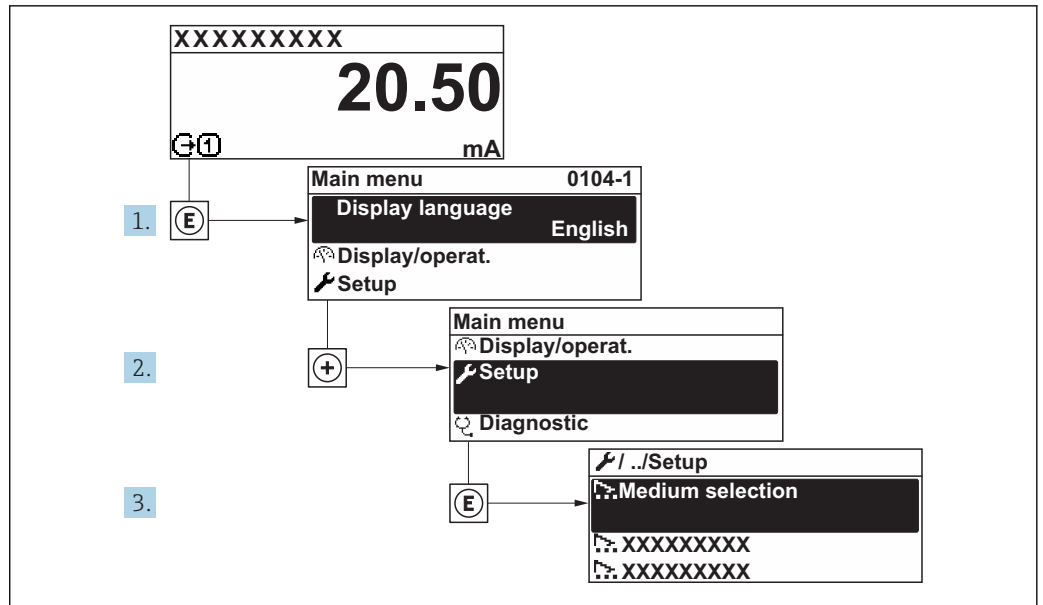

A003222-EN

37 Taking the example of the local display


**i** Depending on the device version, not all submenus and parameters are available in every device. The selection can vary depending on the order code.

| Setup                                  |       |
|--|-------|
| Device tag                             | → 96  |
| ▶ System units                         | → 96  |
| ▶ Medium selection                     | → 99  |
| ▶ I/O configuration                    | → 100 |
| ▶ Current input 1 to n                 | → 101 |
| ▶ Status input 1 to n                  | → 102 |
| ▶ Current output 1 to n                | → 103 |
| ▶ Pulse/frequency/switch output 1 to n | → 109 |
| ▶ Relay output 1 to n                  | → 123 |
| ▶ Double pulse output                  | → 126 |
| ▶ Display                              | → 127 |
| ▶ Low flow cut off                     | → 134 |

|                                   |       |
|-----------------------------------|-------|
| ▶ Partially filled pipe detection | → 135 |
| ▶ Advanced setup                  | → 136 |

### 10.4.1 Defining the tag name

To enable fast identification of the measuring point within the system, you can enter a unique designation using the **Device tag** parameter and thus change the factory setting.

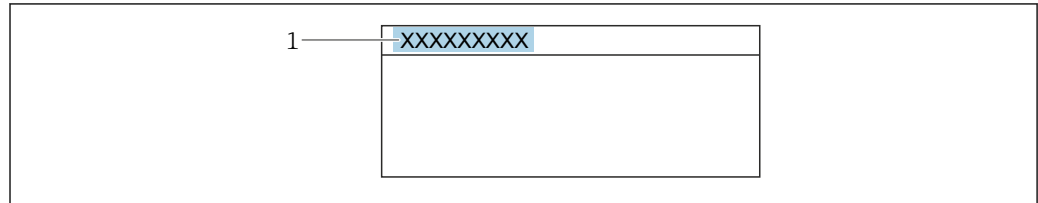

A0029422

38 Header of the operational display with tag name

1 Tag name

**i** Enter the tag name in the "FieldCare" operating tool → 85

#### Navigation

"Setup" menu → Device tag

#### Parameter overview with brief description

| Parameter  | Description                             | User entry   | Factory setting |
|------------|---|--|-----------------|
| Device tag | Enter the name for the measuring point. | Max. 32 characters, such as letters, numbers or special characters (e.g. @, %, /). | Promass         |

### 10.4.2 Setting the system units

In the **System units** submenu the units of all the measured values can be set.







**i** Depending on the device version, not all submenus and parameters are available in every device. The selection can vary depending on the order code.

#### Navigation


"Setup" menu → System units



|                  |      |
|------------------|------|
| ▶ System units   |      |
| Mass flow unit   | → 97 |
| Mass unit        | → 97 |
| Volume flow unit | → 97 |
| Volume unit      | → 97 |



|                            |  |
|----------------------------|--|
| Corrected volume flow unit | →  97 |
| Corrected volume unit      | →  97 |
| Density unit               | →  97 |
| Reference density unit     | →  97 |
| Temperature unit           | →  98 |
| Pressure unit              | →  98 |

### Parameter overview with brief description

| Parameter                  | Description   | Selection        | Factory setting  |
|----------------------------|---|------------------|--|
| Mass flow unit             | Select mass flow unit.<br><i>Result</i><br>The selected unit applies for:<br><ul style="list-style-type: none"> <li>▪ Output</li> <li>▪ Low flow cut off</li> <li>▪ Simulation process variable</li> </ul>                      | Unit choose list | Country-specific:<br><ul style="list-style-type: none"> <li>▪ kg/h</li> <li>▪ lb/min</li> </ul>                                  |
| Mass unit                  | Select mass unit.   | Unit choose list | Country-specific:<br><ul style="list-style-type: none"> <li>▪ kg</li> <li>▪ lb</li> </ul>  |
| Volume flow unit           | Select volume flow unit.<br><i>Result</i><br>The selected unit applies for:<br><ul style="list-style-type: none"> <li>▪ Output</li> <li>▪ Low flow cut off</li> <li>▪ Simulation process variable</li> </ul>                    | Unit choose list | Country-specific:<br><ul style="list-style-type: none"> <li>▪ l/h</li> <li>▪ gal/min (us)</li> </ul>                             |
| Volume unit                | Select volume unit.   | Unit choose list | Country-specific:<br><ul style="list-style-type: none"> <li>▪ l (DN &gt; 150 (6"): m<sup>3</sup>)</li> <li>▪ gal (us)</li> </ul> |
| Corrected volume flow unit | Select corrected volume flow unit.<br><i>Result</i><br>The selected unit applies for:<br><b>Corrected volume flow</b> parameter<br>(→  161)  | Unit choose list | Country-specific:<br><ul style="list-style-type: none"> <li>▪ NI/h</li> <li>▪ Sft<sup>3</sup>/min</li> </ul>                     |
| Corrected volume unit      | Select corrected volume unit.   | Unit choose list | Country-specific:<br><ul style="list-style-type: none"> <li>▪ NI</li> <li>▪ Sft<sup>3</sup></li> </ul>                           |
| Density unit               | Select density unit.<br><i>Result</i><br>The selected unit applies for:<br><ul style="list-style-type: none"> <li>▪ Output</li> <li>▪ Simulation process variable</li> <li>▪ Density adjustment (<b>Expert</b> menu)</li> </ul> | Unit choose list | Country-specific:<br><ul style="list-style-type: none"> <li>▪ kg/l</li> <li>▪ lb/ft<sup>3</sup></li> </ul>                       |
| Reference density unit     | Select reference density unit.  | Unit choose list | Country-dependent<br><ul style="list-style-type: none"> <li>▪ kg/NI</li> <li>▪ lb/Sft<sup>3</sup></li> </ul>                     |

| Parameter        | Description  | Selection        | Factory setting   |
|------------------|--|------------------|---|
| Temperature unit | <p>Select temperature unit.</p> <p><i>Result</i></p> <p>The selected unit applies for:</p> <ul style="list-style-type: none"> <li>▪ <b>Electronic temperature</b> parameter (6053)</li> <li>▪ <b>Maximum value</b> parameter (6051)</li> <li>▪ <b>Minimum value</b> parameter (6052)</li> <li>▪ <b>External temperature</b> parameter (6080)</li> <li>▪ <b>Maximum value</b> parameter (6108)</li> <li>▪ <b>Minimum value</b> parameter (6109)</li> <li>▪ <b>Carrier pipe temperature</b> parameter (6027)</li> <li>▪ <b>Maximum value</b> parameter (6029)</li> <li>▪ <b>Minimum value</b> parameter (6030)</li> <li>▪ <b>Reference temperature</b> parameter (1816)</li> <li>▪ <b>Temperature</b> parameter</li> </ul> | Unit choose list | <p>Country-specific:</p> <ul style="list-style-type: none"> <li>▪ °C</li> <li>▪ °F</li> </ul>       |
| Pressure unit    | <p>Select process pressure unit.</p> <p><i>Result</i></p> <p>The unit is taken from:</p> <ul style="list-style-type: none"> <li>▪ <b>Pressure value</b> parameter (→  100)</li> <li>▪ <b>External pressure</b> parameter (→  100)</li> <li>▪ Pressure value</li> </ul>   | Unit choose list | <p>Country-specific:</p> <ul style="list-style-type: none"> <li>▪ bar a</li> <li>▪ psi a</li> </ul> |

### 10.4.3 Selecting and setting the medium

The **Select medium** wizard submenu contains parameters that must be configured in order to select and set the medium.

#### Navigation

"Setup" menu → Select medium

| ► Medium selection                     |       |
|--|-------|
| Select medium                          | → 100 |
| Select gas type                        | → 100 |
| Reference sound velocity               | → 100 |
| Temperature coefficient sound velocity | → 100 |
| Pressure compensation                  | → 100 |
| Pressure value                         | → 100 |
| External pressure                      | → 100 |

## Parameter overview with brief description


| Parameter                              | Prerequisite  | Description  | Selection / User entry / User interface  | Factory setting         |
|--|---|--|--|-------------------------|
| Select medium                          | –   | Select medium type.  | <ul style="list-style-type: none"> <li>▪ Liquid</li> <li>▪ Gas</li> </ul>  | Liquid                  |
| Select gas type                        | The <b>Gas</b> option is selected in the <b>Select medium</b> parameter.                    | Select measured gas type.                                  | <ul style="list-style-type: none"> <li>▪ Air</li> <li>▪ Ammonia NH<sub>3</sub></li> <li>▪ Argon Ar</li> <li>▪ Sulfur hexafluoride SF<sub>6</sub></li> <li>▪ Oxygen O<sub>2</sub></li> <li>▪ Ozone O<sub>3</sub></li> <li>▪ Nitrogen oxide NO<sub>x</sub></li> <li>▪ Nitrogen N<sub>2</sub></li> <li>▪ Nitrous oxide N<sub>2</sub>O</li> <li>▪ Methane CH<sub>4</sub></li> <li>▪ Hydrogen H<sub>2</sub></li> <li>▪ Helium He</li> <li>▪ Hydrogen chloride HCl</li> <li>▪ Hydrogen sulfide H<sub>2</sub>S</li> <li>▪ Ethylene C<sub>2</sub>H<sub>4</sub></li> <li>▪ Carbon dioxide CO<sub>2</sub></li> <li>▪ Carbon monoxide CO</li> <li>▪ Chlorine Cl<sub>2</sub></li> <li>▪ Butane C<sub>4</sub>H<sub>10</sub></li> <li>▪ Propane C<sub>3</sub>H<sub>8</sub></li> <li>▪ Propylene C<sub>3</sub>H<sub>6</sub></li> <li>▪ Ethane C<sub>2</sub>H<sub>6</sub></li> <li>▪ Others</li> </ul> | Methane CH <sub>4</sub> |
| Reference sound velocity               | In the <b>Select gas type</b> parameter, the <b>Others</b> option is selected.              | Enter sound velocity of gas at 0 °C (32 °F).               | 1 to 99 999.9999 m/s   | 415.0 m/s               |
| Temperature coefficient sound velocity | The <b>Others</b> option is selected in the <b>Select gas type</b> parameter.               | Enter temperature coefficient for the gas sound velocity.  | Positive floating-point number   | 0 (m/s)/K               |
| Pressure compensation                  | –   | Select pressure compensation type.                         | <ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ Fixed value</li> <li>▪ External value</li> <li>▪ Current input 1 *</li> <li>▪ Current input 2 *</li> <li>▪ Current input 3 *</li> </ul>  | Off                     |
| Pressure value                         | The <b>Fixed value</b> option is selected in the <b>Pressure compensation</b> parameter.    | Enter process pressure to be used for pressure correction. | Positive floating-point number   | 0 bar                   |
| External pressure                      | The <b>External value</b> option is selected in the <b>Pressure compensation</b> parameter. | Shows the external process pressure value.                 | Positive floating-point number   | 0 bar                   |

\* Visibility depends on order options or device settings

#### 10.4.4 Displaying the I/O configuration

The **I/O configuration** submenu guides the user systematically through all the parameters in which the configuration of the I/O modules is displayed.

**Navigation**  
 "Setup" menu → I/O configuration

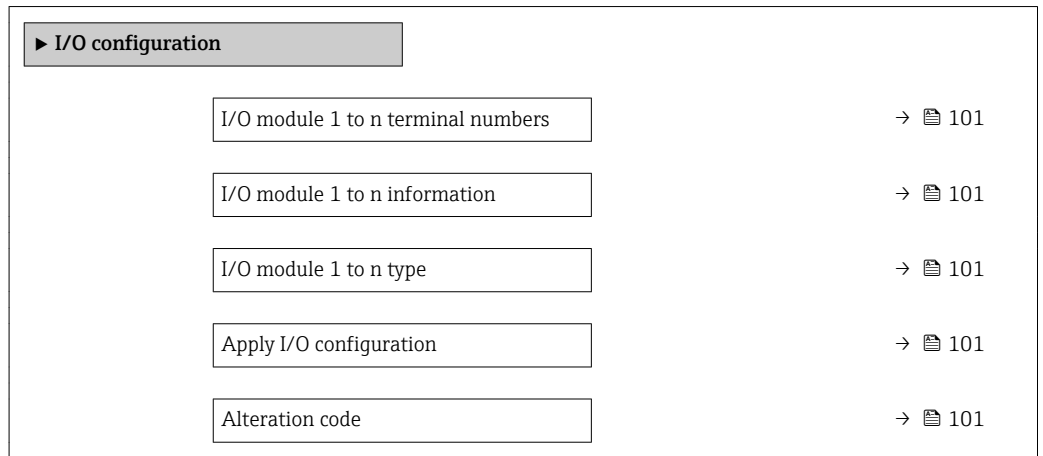

**Parameter overview with brief description**


| Parameter                          | Description   | User interface / Selection / User entry   | Factory setting |
|------------------------------------|---|---|-----------------|
| I/O module 1 to n terminal numbers | Shows the terminal numbers used by the I/O module.            | <ul style="list-style-type: none"> <li>Not used</li> <li>26-27 (I/O 1)</li> <li>24-25 (I/O 2)</li> <li>22-23 (I/O 3)</li> <li>20-21 (I/O 4) *</li> </ul>                  | –               |
| I/O module 1 to n information      | Shows information of the plugged I/O module.                  | <ul style="list-style-type: none"> <li>Not plugged</li> <li>Invalid</li> <li>Not configurable</li> <li>Configurable</li> <li>HART</li> </ul>                              | –               |
| I/O module 1 to n type             | Shows the I/O module type.                                    | <ul style="list-style-type: none"> <li>Off</li> <li>Current output *</li> <li>Current input *</li> <li>Status input *</li> <li>Pulse/frequency/switch output *</li> </ul> | Off             |
| Apply I/O configuration            | Apply parameterization of the freely configurable I/O module. | <ul style="list-style-type: none"> <li>No</li> <li>Yes</li> </ul>   | No              |
| Alteration code                    | Enter the code in order to change the I/O configuration.      | Positive integer  | 0               |







\* Visibility depends on order options or device settings

**10.4.5 Configuring the current input**

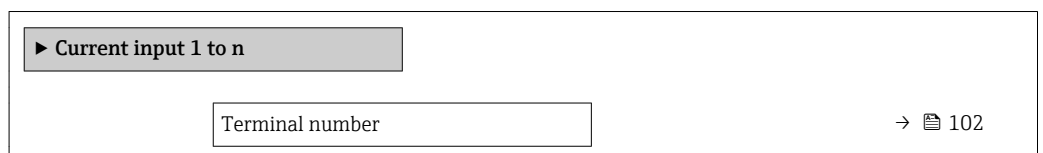The "Current input" wizard guides the user systematically through all the parameters that have to be set for configuring the current input.

**Navigation**  
 "Setup" menu → Current input



|               |   |
|---------------|---|
| Signal mode   | →  102 |
| 0/4 mA value  | →  102 |
| 20 mA value   | →  102 |
| Current span  | →  102 |
| Failure mode  | →  102 |
| Failure value | →  102 |

### Parameter overview with brief description

| Parameter       | Prerequisite  | Description   | User interface / Selection / User entry   | Factory setting   |
|-----------------|---|---|---|---|
| Terminal number | –   | Shows the terminal numbers used by the current input module.                          | <ul style="list-style-type: none"> <li>▪ Not used</li> <li>▪ 24-25 (I/O 2)</li> <li>▪ 22-23 (I/O 3)</li> <li>▪ 20-21 (I/O 4) *</li> </ul> | –   |
| Signal mode     | The measuring device is <b>not</b> approved for use in the hazardous area with type of protection Ex-i. | Select the signal mode for the current input.   | <ul style="list-style-type: none"> <li>▪ Passive</li> <li>▪ Active</li> </ul>   | Active  |
| 0/4 mA value    | –   | Enter 4 mA value.   | Signed floating-point number  | 0   |
| 20 mA value     | –   | Enter 20 mA value.  | Signed floating-point number  | Depends on country and nominal diameter   |
| Current span    | –   | Select current range for process value output and upper/lower level for alarm signal. | <ul style="list-style-type: none"> <li>▪ 4...20 mA</li> <li>▪ 4...20 mA NAMUR</li> <li>▪ 4...20 mA US</li> <li>▪ 0...20 mA</li> </ul>     | Country-specific: <ul style="list-style-type: none"> <li>▪ 4...20 mA NAMUR</li> <li>▪ 4...20 mA US</li> </ul> |
| Failure mode    | –   | Define input behavior in alarm condition.   | <ul style="list-style-type: none"> <li>▪ Alarm</li> <li>▪ Last valid value</li> <li>▪ Defined value</li> </ul>                            | Alarm   |
| Failure value   | In the <b>Failure mode</b> parameter, the <b>Defined value</b> option is selected.                      | Enter value to be used by the device if input value from external device is missing.  | Signed floating-point number  | 0   |

\* Visibility depends on order options or device settings

### 10.4.6 Configuring the status input

The **Status input** submenu guides the user systematically through all the parameters that have to be set for configuring the status input.

**Navigation**

"Setup" menu → Status input

▶ **Status input 1 to n**

|                            |         |
|----------------------------|---------|
| Assign status input        | → ⓘ 103 |
| Terminal number            | → ⓘ 103 |
| Active level               | → ⓘ 103 |
| Terminal number            | → ⓘ 103 |
| Response time status input | → ⓘ 103 |
| Terminal number            | → ⓘ 103 |

**Parameter overview with brief description**

| Parameter                  | Description   | User interface / Selection / User entry   | Factory setting |
|----------------------------|---|---|-----------------|
| Terminal number            | Shows the terminal numbers used by the status input module.   | <ul style="list-style-type: none"> <li>▪ Not used</li> <li>▪ 24-25 (I/O 2)</li> <li>▪ 22-23 (I/O 3)</li> <li>▪ 20-21 (I/O 4) *</li> </ul>   | -               |
| Assign status input        | Select function for the status input.   | <ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ Reset totalizer 1</li> <li>▪ Reset totalizer 2</li> <li>▪ Reset totalizer 3</li> <li>▪ Reset all totalizers</li> <li>▪ Flow override</li> </ul> | Off             |
| Active level               | Define input signal level at which the assigned function is triggered.  | <ul style="list-style-type: none"> <li>▪ High</li> <li>▪ Low</li> </ul>   | High            |
| Response time status input | Define the minimum amount of time the input signal level must be present before the selected function is triggered. | 5 to 200 ms   | 50 ms           |

\* Visibility depends on order options or device settings

**10.4.7 Configuring the current output**









The **Current output** wizard guides you systematically through all the parameters that have to be set for configuring the current output.

**Navigation**

"Setup" menu → Current output

▶ **Current output 1 to n**

|                 |         |
|-----------------|---------|
| Terminal number | → ⓘ 104 |
| Signal mode     | → ⓘ 104 |

|                              |   |
|------------------------------|---|
| Assign current output 1 to n | →  105 |
| Current span                 | →  106 |
| 0/4 mA value                 | →  106 |
| 20 mA value                  | →  106 |
| Fixed current                | →  106 |
| Damping output 1 to n        | →  107 |
| Failure mode                 | →  108 |
| Failure current              | →  108 |


### Parameter overview with brief description

| Parameter       | Prerequisite | Description   | User interface / Selection / User entry  | Factory setting |
|-----------------|--------------|---|--|-----------------|
| Terminal number | -            | Shows the terminal numbers used by the current output module. | <ul style="list-style-type: none"> <li>▪ Not used</li> <li>▪ 26-27 (I/O 1)</li> <li>▪ 24-25 (I/O 2)</li> <li>▪ 22-23 (I/O 3)</li> <li>▪ 20-21 (I/O 4) *</li> </ul> | -               |
| Signal mode     | -            | Select the signal mode for the current output.                | <ul style="list-style-type: none"> <li>▪ Passive</li> <li>▪ Active</li> </ul>  | Active          |



| Parameter                    | Prerequisite | Description                                 | User interface / Selection / User entry   | Factory setting |
|------------------------------|--------------|---|---|-----------------|
| Assign current output 1 to n | -            | Select process variable for current output. | <ul style="list-style-type: none"> <li>■ Off</li> <li>■ Mass flow</li> <li>■ Volume flow</li> <li>■ Corrected volume flow</li> <li>■ Target mass flow *</li> <li>■ Carrier mass flow *</li> <li>■ Target volume flow</li> <li>■ Carrier volume flow</li> <li>■ Target corrected volume flow</li> <li>■ Carrier corrected volume flow</li> <li>■ Density</li> <li>■ Reference density</li> <li>■ Reference density alternative</li> <li>■ GSV flow</li> <li>■ GSV flow alternative</li> <li>■ NSV flow</li> <li>■ NSV flow alternative</li> <li>■ S&amp;W volume flow</li> <li>■ Water cut</li> <li>■ Oil density</li> <li>■ Water density</li> <li>■ Oil mass flow</li> <li>■ Water mass flow</li> <li>■ Oil volume flow</li> <li>■ Water volume flow</li> <li>■ Oil corrected volume flow</li> <li>■ Water corrected volume flow</li> <li>■ Concentration *</li> <li>■ Dynamic viscosity *</li> <li>■ Kinematic viscosity *</li> <li>■ Temp. compensated dynamic viscosity *</li> <li>■ Temp. compensated kinematic viscosity *</li> <li>■ Temperature</li> <li>■ Carrier pipe temperature *</li> <li>■ Electronic temperature</li> <li>■ Oscillation frequency 0</li> <li>■ Oscillation frequency 1 *</li> <li>■ Oscillation amplitude 0 *</li> <li>■ Oscillation amplitude 1 *</li> <li>■ Frequency fluctuation 0</li> <li>■ Frequency fluctuation 1 *</li> <li>■ Oscillation damping 0</li> </ul> | Mass flow       |

| Parameter     | Prerequisite   | Description   | User interface / Selection / User entry   | Factory setting   |
|---------------|--|---|---|---|
|               |  |   | <ul style="list-style-type: none"> <li>▪ Oscillation damping 1 *</li> <li>▪ Oscillation damping fluctuation 0</li> <li>▪ Oscillation damping fluctuation 1 *</li> <li>▪ Signal asymmetry</li> <li>▪ Exciter current 0</li> <li>▪ Exciter current 1 *</li> <li>▪ HBSI *</li> <li>▪ Pressure</li> </ul> |   |
| Current span  | –  | Select current range for process value output and upper/lower level for alarm signal. | <ul style="list-style-type: none"> <li>▪ 4...20 mA NAMUR</li> <li>▪ 4...20 mA US</li> <li>▪ 4...20 mA</li> <li>▪ 0...20 mA</li> <li>▪ Fixed current</li> </ul>  | Country-specific: <ul style="list-style-type: none"> <li>▪ 4...20 mA NAMUR</li> <li>▪ 4...20 mA US</li> </ul> |
| 0/4 mA value  | One of the following options is selected in the <b>Current span</b> parameter (→ 106): <ul style="list-style-type: none"> <li>▪ 4...20 mA NAMUR</li> <li>▪ 4...20 mA US</li> <li>▪ 4...20 mA</li> <li>▪ 0...20 mA</li> </ul> | Enter 4 mA value.   | Signed floating-point number  | Country-specific: <ul style="list-style-type: none"> <li>▪ 0 kg/h</li> <li>▪ 0 lb/min</li> </ul>              |
| 20 mA value   | One of the following options is selected in the <b>Current span</b> parameter (→ 106): <ul style="list-style-type: none"> <li>▪ 4...20 mA NAMUR</li> <li>▪ 4...20 mA US</li> <li>▪ 4...20 mA</li> <li>▪ 0...20 mA</li> </ul> | Enter 20 mA value.  | Signed floating-point number  | Depends on country and nominal diameter   |
| Fixed current | The <b>Fixed current</b> option is selected in the <b>Current span</b> parameter (→ 106).  | Defines the fixed output current.   | 0 to 22.5 mA  | 22.5 mA   |

| Parameter             | Prerequisite   | Description  | User interface / Selection / User entry | Factory setting |
|-----------------------|--|--|---|-----------------|
| Damping output 1 to n | <p>One of the following options is selected in the <b>Assign current output</b> parameter (→ ⓘ 105):</p> <ul style="list-style-type: none"> <li>▪ Mass flow</li> <li>▪ Volume flow</li> <li>▪ Corrected volume flow</li> <li>▪ Target mass flow *</li> <li>▪ Carrier mass flow *</li> <li>▪ Density</li> <li>▪ Reference density</li> <li>▪ Concentration *</li> <li>▪ Dynamic viscosity *</li> <li>▪ Kinematic viscosity *</li> <li>▪ Temp. compensated dynamic viscosity *</li> <li>▪ Temp. compensated kinematic viscosity *</li> <li>▪ Temperature</li> <li>▪ Carrier pipe temperature *</li> <li>▪ Electronic temperature</li> <li>▪ Oscillation frequency 0</li> <li>▪ Oscillation frequency 1 *</li> <li>▪ Oscillation amplitude 0 *</li> <li>▪ Oscillation amplitude 1 *</li> <li>▪ Frequency fluctuation 0</li> <li>▪ Frequency fluctuation 1 *</li> <li>▪ Oscillation damping fluctuation 0</li> <li>▪ Oscillation damping fluctuation 1 *</li> <li>▪ Tube damping fluctuation 0</li> <li>▪ Tube damping fluctuation 1 *</li> <li>▪ Signal asymmetry</li> <li>▪ Exciter current 0</li> <li>▪ Exciter current 1 *</li> <li>▪ HBSI *</li> </ul> <p> Detailed description of the options <b>Oscillation frequency</b>, <b>Oscillation amplitude</b>, <b>Oscillation damping</b> and <b>Signal asymmetry: Value 1 display</b> parameter</p> <p>One of the following options is selected in the <b>Current span</b> parameter (→ ⓘ 106):</p> <ul style="list-style-type: none"> <li>▪ 4...20 mA NAMUR</li> <li>▪ 4...20 mA US</li> <li>▪ 4...20 mA</li> <li>▪ 0...20 mA</li> </ul> | Set reaction time for output signal to fluctuations in the measured value. | 0.0 to 999.9 s                          | 1.0 s           |

| Parameter       | Prerequisite  | Description                                    | User interface / Selection / User entry   | Factory setting |
|-----------------|---|--|---|-----------------|
| Failure mode    | <p>One of the following options is selected in the <b>Assign current output</b> parameter (→ ⓘ 105):</p> <ul style="list-style-type: none"> <li>▪ Mass flow</li> <li>▪ Volume flow</li> <li>▪ Corrected volume flow</li> <li>▪ Target mass flow *</li> <li>▪ Carrier mass flow *</li> <li>▪ Density</li> <li>▪ Reference density</li> <li>▪ Concentration *</li> <li>▪ Dynamic viscosity *</li> <li>▪ Kinematic viscosity *</li> <li>▪ Temp. compensated dynamic viscosity *</li> <li>▪ Temp. compensated kinematic viscosity *</li> <li>▪ Temperature</li> <li>▪ Carrier pipe temperature *</li> <li>▪ Electronic temperature</li> <li>▪ Oscillation frequency 0</li> <li>▪ Oscillation frequency 1 *</li> <li>▪ Oscillation amplitude 0 *</li> <li>▪ Oscillation amplitude 1 *</li> <li>▪ Frequency fluctuation 0</li> <li>▪ Frequency fluctuation 1 *</li> <li>▪ Oscillation damping 0</li> <li>▪ Oscillation damping 1 *</li> <li>▪ Oscillation damping fluctuation 0</li> <li>▪ Oscillation damping fluctuation 1 *</li> <li>▪ Signal asymmetry</li> <li>▪ Exciter current 0</li> <li>▪ Exciter current 1 *</li> <li>▪ HBSI *</li> </ul> <p>One of the following options is selected in the <b>Current span</b> parameter (→ ⓘ 106):</p> <ul style="list-style-type: none"> <li>▪ 4...20 mA NAMUR</li> <li>▪ 4...20 mA US</li> <li>▪ 4...20 mA</li> <li>▪ 0...20 mA</li> </ul> | Define output behavior in alarm condition.     | <ul style="list-style-type: none"> <li>▪ Min.</li> <li>▪ Max.</li> <li>▪ Last valid value</li> <li>▪ Actual value</li> <li>▪ Defined value</li> </ul> | Max.            |
| Failure current | The <b>Defined value</b> option is selected in the <b>Failure mode</b> parameter.   | Enter current output value in alarm condition. | 0 to 22.5 mA  | 22.5 mA         |


\* Visibility depends on order options or device settings

### 10.4.8 Configuring the pulse/frequency/switch output

The **Pulse/frequency/switch output** wizard guides you systematically through all the parameters that can be set for configuring the selected output type.

#### Navigation

"Setup" menu → Advanced setup → Pulse/frequency/switch output

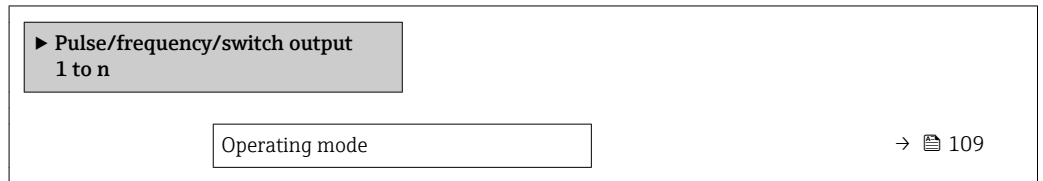


#### Parameter overview with brief description

| Parameter      | Description   | Selection  | Factory setting |
|----------------|---|--|-----------------|
| Operating mode | Define the output as a pulse, frequency or switch output. | <ul style="list-style-type: none"> <li>■ Pulse</li> <li>■ Frequency</li> <li>■ Switch</li> </ul> | Pulse           |

#### Configuring the pulse output

#### Navigation

"Setup" menu → Pulse/frequency/switch output

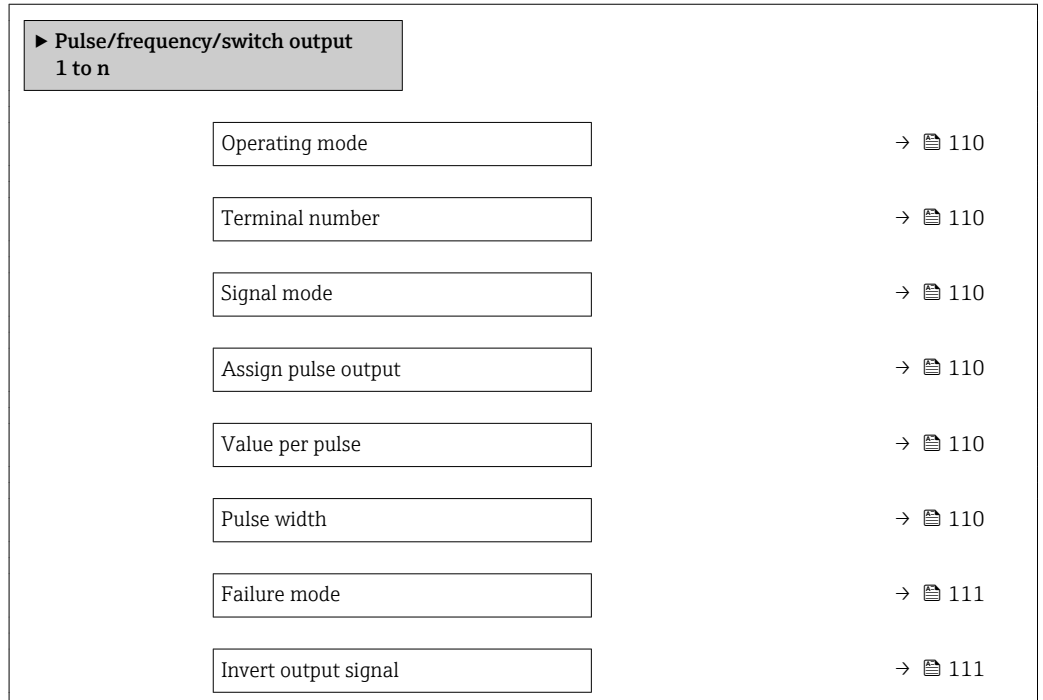

## Parameter overview with brief description

| Parameter                  | Prerequisite  | Description   | Selection / User interface / User entry  | Factory setting                         |
|----------------------------|---|---|--|---|
| Operating mode             | –   | Define the output as a pulse, frequency or switch output. | <ul style="list-style-type: none"> <li>▪ Pulse</li> <li>▪ Frequency</li> <li>▪ Switch</li> </ul>   | Pulse                                   |
| Terminal number            | –   | Shows the terminal numbers used by the PFS output module. | <ul style="list-style-type: none"> <li>▪ Not used</li> <li>▪ 24-25 (I/O 2)</li> <li>▪ 22-23 (I/O 3)</li> <li>▪ 20-21 (I/O 4) *</li> </ul>  | –                                       |
| Signal mode                | –   | Select the signal mode for the PFS output.                | <ul style="list-style-type: none"> <li>▪ Passive</li> <li>▪ Active</li> </ul>  | Passive                                 |
| Assign pulse output 1 to n | The <b>Pulse</b> option is selected in the <b>Operating mode</b> parameter.   | Select process variable for pulse output.                 | <ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ Mass flow</li> <li>▪ Volume flow</li> <li>▪ Corrected volume flow</li> <li>▪ Target mass flow *</li> <li>▪ Carrier mass flow *</li> <li>▪ Target volume flow</li> <li>▪ Carrier volume flow</li> <li>▪ Target corrected volume flow</li> <li>▪ Carrier corrected volume flow</li> <li>▪ GSV flow</li> <li>▪ GSV flow alternative</li> <li>▪ NSV flow</li> <li>▪ NSV flow alternative</li> <li>▪ S&amp;W volume flow</li> <li>▪ Oil mass flow</li> <li>▪ Water mass flow</li> <li>▪ Oil volume flow</li> <li>▪ Water volume flow</li> <li>▪ Oil corrected volume flow</li> <li>▪ Water corrected volume flow</li> </ul> | Off                                     |
| Value per pulse            | In the <b>Operating mode</b> parameter, the <b>Pulse</b> option is selected, and one of the following options is selected in the <b>Assign pulse output</b> parameter (→ 110): <ul style="list-style-type: none"> <li>▪ Mass flow</li> <li>▪ Volume flow</li> <li>▪ Corrected volume flow</li> <li>▪ Target mass flow *</li> <li>▪ Carrier mass flow *</li> </ul> | Enter measured value at which a pulse is output.          | Signed floating-point number   | Depends on country and nominal diameter |
| Pulse width                | In the <b>Operating mode</b> parameter, the <b>Pulse</b> option is selected, and one of the following options is selected in the <b>Assign pulse output</b> parameter (→ 110): <ul style="list-style-type: none"> <li>▪ Mass flow</li> <li>▪ Volume flow</li> <li>▪ Corrected volume flow</li> <li>▪ Target mass flow *</li> <li>▪ Carrier mass flow *</li> </ul> | Define time width of the output pulse.                    | 0.05 to 2 000 ms   | 100 ms                                  |

| Parameter            | Prerequisite  | Description                                | Selection / User interface / User entry   | Factory setting |
|----------------------|---|--|---|-----------------|
| Failure mode         | In the <b>Operating mode</b> parameter, the <b>Pulse</b> option is selected, and one of the following options is selected in the <b>Assign pulse output</b> parameter (→ 110): <ul style="list-style-type: none"> <li>■ Mass flow</li> <li>■ Volume flow</li> <li>■ Corrected volume flow</li> <li>■ Target mass flow*</li> <li>■ Carrier mass flow*</li> </ul> | Define output behavior in alarm condition. | <ul style="list-style-type: none"> <li>■ Actual value</li> <li>■ No pulses</li> </ul> | No pulses       |
| Invert output signal | –   | Invert the output signal.                  | <ul style="list-style-type: none"> <li>■ No</li> <li>■ Yes</li> </ul>                 | No              |

\* Visibility depends on order options or device settings

### Configuring the frequency output

#### Navigation

"Setup" menu → Pulse/frequency/switch output


| ► Pulse/frequency/switch output<br>1 to n |       |
|---|-------|
| Operating mode                            | → 112 |
| Terminal number                           | → 112 |
| Signal mode                               | → 112 |
| Assign frequency output                   | → 113 |
| Minimum frequency value                   | → 114 |
| Maximum frequency value                   | → 115 |
| Measuring value at minimum frequency      | → 116 |
| Measuring value at maximum frequency      | → 117 |
| Failure mode                              | → 118 |
| Failure frequency                         | → 119 |
| Invert output signal                      | → 119 |


### Parameter overview with brief description


| Parameter       | Prerequisite | Description   | Selection / User interface / User entry   | Factory setting |
|-----------------|--------------|---|---|-----------------|
| Operating mode  | –            | Define the output as a pulse, frequency or switch output. | <ul style="list-style-type: none"> <li>▪ Pulse</li> <li>▪ Frequency</li> <li>▪ Switch</li> </ul>  | Pulse           |
| Terminal number | –            | Shows the terminal numbers used by the PFS output module. | <ul style="list-style-type: none"> <li>▪ Not used</li> <li>▪ 24-25 (I/O 2)</li> <li>▪ 22-23 (I/O 3)</li> <li>▪ 20-21 (I/O 4) *</li> </ul> | –               |
| Signal mode     | –            | Select the signal mode for the PFS output.                | <ul style="list-style-type: none"> <li>▪ Passive</li> <li>▪ Active</li> </ul>   | Passive         |





| Parameter               | Prerequisite  | Description                                   | Selection / User interface / User entry   | Factory setting |
|-------------------------|---|---|---|-----------------|
| Assign frequency output | The <b>Frequency</b> option is selected in the <b>Operating mode</b> parameter (→ 109). | Select process variable for frequency output. | <ul style="list-style-type: none"> <li>■ Off</li> <li>■ Mass flow</li> <li>■ Volume flow</li> <li>■ Corrected volume flow</li> <li>■ Target mass flow *</li> <li>■ Carrier mass flow *</li> <li>■ Target volume flow</li> <li>■ Carrier volume flow</li> <li>■ Target corrected volume flow</li> <li>■ Carrier corrected volume flow</li> <li>■ Density</li> <li>■ Reference density</li> <li>■ Reference density alternative</li> <li>■ GSV flow</li> <li>■ GSV flow alternative</li> <li>■ NSV flow</li> <li>■ NSV flow alternative</li> <li>■ S&amp;W volume flow</li> <li>■ Water cut</li> <li>■ Oil density</li> <li>■ Water density</li> <li>■ Oil mass flow</li> <li>■ Water mass flow</li> <li>■ Oil volume flow</li> <li>■ Water volume flow</li> <li>■ Oil corrected volume flow</li> <li>■ Water corrected volume flow</li> <li>■ Concentration *</li> <li>■ Dynamic viscosity *</li> <li>■ Kinematic viscosity *</li> <li>■ Temp. compensated dynamic viscosity *</li> <li>■ Temp. compensated kinematic viscosity *</li> <li>■ Temperature</li> <li>■ Carrier pipe temperature *</li> <li>■ Electronic temperature</li> <li>■ Oscillation frequency 0</li> <li>■ Oscillation frequency 1 *</li> <li>■ Oscillation amplitude 0 *</li> <li>■ Oscillation amplitude 1 *</li> <li>■ Frequency fluctuation 0</li> <li>■ Frequency fluctuation 1 *</li> <li>■ Oscillation damping 0</li> </ul> | Off             |


| Parameter               | Prerequisite   | Description              | Selection / User interface / User entry   | Factory setting |
|-------------------------|--|--------------------------|---|-----------------|
|                         |  |                          | <ul style="list-style-type: none"> <li>▪ Oscillation damping 1 *</li> <li>▪ Oscillation damping fluctuation 0</li> <li>▪ Oscillation damping fluctuation 1 *</li> <li>▪ Signal asymmetry</li> <li>▪ Exciter current 0</li> <li>▪ Exciter current 1 *</li> <li>▪ HBSI</li> <li>▪ Pressure</li> </ul> |                 |
| Minimum frequency value | <p>In the <b>Operating mode</b> parameter, the <b>Frequency</b> option is selected, and one of the following options is selected in the <b>Assign frequency output</b> parameter (→  113):</p> <ul style="list-style-type: none"> <li>▪ Mass flow</li> <li>▪ Volume flow</li> <li>▪ Corrected volume flow</li> <li>▪ Target mass flow *</li> <li>▪ Carrier mass flow *</li> <li>▪ Density</li> <li>▪ Reference density</li> <li>▪ Concentration *</li> <li>▪ Dynamic viscosity *</li> <li>▪ Kinematic viscosity *</li> <li>▪ Temp. compensated dynamic viscosity *</li> <li>▪ Temp. compensated kinematic viscosity *</li> <li>▪ Temperature</li> <li>▪ Carrier pipe temperature *</li> <li>▪ Electronic temperature</li> <li>▪ Oscillation frequency 0</li> <li>▪ Oscillation frequency 1 *</li> <li>▪ Frequency fluctuation 0</li> <li>▪ Frequency fluctuation 1 *</li> <li>▪ Oscillation amplitude 0 *</li> <li>▪ Oscillation amplitude 1 *</li> <li>▪ Oscillation damping 0</li> <li>▪ Oscillation damping 1 *</li> <li>▪ Oscillation damping fluctuation 0</li> <li>▪ Oscillation damping fluctuation 1 *</li> <li>▪ Signal asymmetry</li> <li>▪ Exciter current 0</li> <li>▪ Exciter current 1 *</li> </ul> | Enter minimum frequency. | 0.0 to 10 000.0 Hz  | 0.0 Hz          |

| Parameter               | Prerequisite   | Description              | Selection / User interface / User entry | Factory setting |
|-------------------------|--|--------------------------|---|-----------------|
| Maximum frequency value | <p>In the <b>Operating mode</b> parameter, the <b>Frequency</b> option is selected, and one of the following options is selected in the <b>Assign frequency output</b> parameter (→  113):</p> <ul style="list-style-type: none"> <li>▪ Mass flow</li> <li>▪ Volume flow</li> <li>▪ Corrected volume flow</li> <li>▪ Target mass flow *</li> <li>▪ Carrier mass flow *</li> <li>▪ Density</li> <li>▪ Reference density</li> <li>▪ Concentration *</li> <li>▪ Dynamic viscosity *</li> <li>▪ Kinematic viscosity *</li> <li>▪ Temp. compensated dynamic viscosity *</li> <li>▪ Temp. compensated kinematic viscosity *</li> <li>▪ Temperature</li> <li>▪ Carrier pipe temperature *</li> <li>▪ Electronic temperature</li> <li>▪ Oscillation frequency 0</li> <li>▪ Oscillation frequency 1 *</li> <li>▪ Frequency fluctuation 0</li> <li>▪ Frequency fluctuation 1 *</li> <li>▪ Oscillation amplitude 0 *</li> <li>▪ Oscillation amplitude 1 *</li> <li>▪ Oscillation damping 0</li> <li>▪ Oscillation damping 1 *</li> <li>▪ Oscillation damping fluctuation 0</li> <li>▪ Oscillation damping fluctuation 1 *</li> <li>▪ Signal asymmetry</li> <li>▪ Exciter current 0</li> <li>▪ Exciter current 1 *</li> </ul> | Enter maximum frequency. | 0.0 to 10000.0 Hz                       | 10000.0 Hz      |

| Parameter                            | Prerequisite   | Description                                 | Selection / User interface / User entry | Factory setting                         |
|--------------------------------------|--|---|---|---|
| Measuring value at minimum frequency | <p>In the <b>Operating mode</b> parameter, the <b>Frequency</b> option is selected, and one of the following options is selected in the <b>Assign frequency output</b> parameter (→  113):</p> <ul style="list-style-type: none"> <li>▪ Mass flow</li> <li>▪ Volume flow</li> <li>▪ Corrected volume flow</li> <li>▪ Target mass flow *</li> <li>▪ Carrier mass flow *</li> <li>▪ Density</li> <li>▪ Reference density</li> <li>▪ Concentration *</li> <li>▪ Dynamic viscosity *</li> <li>▪ Kinematic viscosity *</li> <li>▪ Temp. compensated dynamic viscosity *</li> <li>▪ Temp. compensated kinematic viscosity *</li> <li>▪ Temperature</li> <li>▪ Carrier pipe temperature *</li> <li>▪ Electronic temperature</li> <li>▪ Oscillation frequency 0</li> <li>▪ Oscillation frequency 1 *</li> <li>▪ Frequency fluctuation 0</li> <li>▪ Frequency fluctuation 1 *</li> <li>▪ Oscillation amplitude 0 *</li> <li>▪ Oscillation amplitude 1 *</li> <li>▪ Oscillation damping 0</li> <li>▪ Oscillation damping 1 *</li> <li>▪ Oscillation damping fluctuation 0</li> <li>▪ Oscillation damping fluctuation 1 *</li> <li>▪ Signal asymmetry</li> <li>▪ Exciter current 0</li> <li>▪ Exciter current 1 *</li> </ul> | Enter measured value for minimum frequency. | Signed floating-point number            | Depends on country and nominal diameter |

| Parameter                            | Prerequisite   | Description                                 | Selection / User interface / User entry | Factory setting                         |
|--------------------------------------|--|---|---|---|
| Measuring value at maximum frequency | <p>In the <b>Operating mode</b> parameter, the <b>Frequency</b> option is selected, and one of the following options is selected in the <b>Assign frequency output</b> parameter (→  113):</p> <ul style="list-style-type: none"> <li>▪ Mass flow</li> <li>▪ Volume flow</li> <li>▪ Corrected volume flow</li> <li>▪ Target mass flow<sup>*</sup></li> <li>▪ Carrier mass flow<sup>*</sup></li> <li>▪ Density</li> <li>▪ Reference density</li> <li>▪ Concentration<sup>*</sup></li> <li>▪ Dynamic viscosity<sup>*</sup></li> <li>▪ Kinematic viscosity<sup>*</sup></li> <li>▪ Temp. compensated dynamic viscosity<sup>*</sup></li> <li>▪ Temp. compensated kinematic viscosity<sup>*</sup></li> <li>▪ Temperature</li> <li>▪ Carrier pipe temperature<sup>*</sup></li> <li>▪ Electronic temperature</li> <li>▪ Oscillation frequency 0</li> <li>▪ Oscillation frequency 1<sup>*</sup></li> <li>▪ Frequency fluctuation 0</li> <li>▪ Frequency fluctuation 1<sup>*</sup></li> <li>▪ Oscillation amplitude 0<sup>*</sup></li> <li>▪ Oscillation amplitude 1<sup>*</sup></li> <li>▪ Oscillation damping 0</li> <li>▪ Oscillation damping 1<sup>*</sup></li> <li>▪ Oscillation damping fluctuation 0</li> <li>▪ Oscillation damping fluctuation 1<sup>*</sup></li> <li>▪ Signal asymmetry</li> <li>▪ Exciter current 0</li> <li>▪ Exciter current 1<sup>*</sup></li> </ul> | Enter measured value for maximum frequency. | Signed floating-point number            | Depends on country and nominal diameter |

| Parameter    | Prerequisite   | Description                                | Selection / User interface / User entry   | Factory setting |
|--------------|--|--|---|-----------------|
| Failure mode | <p>In the <b>Operating mode</b> parameter, the <b>Frequency</b> option is selected, and one of the following options is selected in the <b>Assign frequency output</b> parameter (→  113):</p> <ul style="list-style-type: none"> <li>▪ Mass flow</li> <li>▪ Volume flow</li> <li>▪ Corrected volume flow</li> <li>▪ Target mass flow *</li> <li>▪ Carrier mass flow *</li> <li>▪ Density</li> <li>▪ Reference density</li> <li>▪ Concentration *</li> <li>▪ Dynamic viscosity *</li> <li>▪ Kinematic viscosity *</li> <li>▪ Temp. compensated dynamic viscosity *</li> <li>▪ Temp. compensated kinematic viscosity *</li> <li>▪ Temperature</li> <li>▪ Carrier pipe temperature *</li> <li>▪ Electronic temperature</li> <li>▪ Oscillation frequency 0</li> <li>▪ Oscillation frequency 1 *</li> <li>▪ Frequency fluctuation 0</li> <li>▪ Frequency fluctuation 1 *</li> <li>▪ Oscillation amplitude 0 *</li> <li>▪ Oscillation amplitude 1 *</li> <li>▪ Oscillation damping 0</li> <li>▪ Oscillation damping 1 *</li> <li>▪ Oscillation damping fluctuation 0</li> <li>▪ Oscillation damping fluctuation 1 *</li> <li>▪ Signal asymmetry</li> <li>▪ Exciter current 0</li> <li>▪ Exciter current 1 *</li> </ul> | Define output behavior in alarm condition. | <ul style="list-style-type: none"> <li>▪ Actual value</li> <li>▪ Defined value</li> <li>▪ 0 Hz</li> </ul> | 0 Hz            |

| Parameter            | Prerequisite   | Description                                      | Selection / User interface / User entry                               | Factory setting |
|----------------------|--|--|---|-----------------|
| Failure frequency    | <p>In the <b>Operating mode</b> parameter, the <b>Frequency</b> option is selected, and one of the following options is selected in the <b>Assign frequency output</b> parameter (→  113):</p> <ul style="list-style-type: none"> <li>▪ Mass flow</li> <li>▪ Volume flow</li> <li>▪ Corrected volume flow</li> <li>▪ Target mass flow<sup>*</sup></li> <li>▪ Carrier mass flow<sup>*</sup></li> <li>▪ Density</li> <li>▪ Reference density</li> <li>▪ Concentration<sup>*</sup></li> <li>▪ Dynamic viscosity<sup>*</sup></li> <li>▪ Kinematic viscosity<sup>*</sup></li> <li>▪ Temp. compensated dynamic viscosity<sup>*</sup></li> <li>▪ Temp. compensated kinematic viscosity<sup>*</sup></li> <li>▪ Temperature</li> <li>▪ Carrier pipe temperature<sup>*</sup></li> <li>▪ Electronic temperature</li> <li>▪ Oscillation frequency 0</li> <li>▪ Oscillation frequency 1<sup>*</sup></li> <li>▪ Frequency fluctuation 0</li> <li>▪ Frequency fluctuation 1<sup>*</sup></li> <li>▪ Oscillation amplitude 0<sup>*</sup></li> <li>▪ Oscillation amplitude 1<sup>*</sup></li> <li>▪ Oscillation damping 0</li> <li>▪ Oscillation damping 1<sup>*</sup></li> <li>▪ Oscillation damping fluctuation 0</li> <li>▪ Oscillation damping fluctuation 1<sup>*</sup></li> <li>▪ Signal asymmetry</li> <li>▪ Exciter current 0</li> <li>▪ Exciter current 1<sup>*</sup></li> </ul> | Enter frequency output value in alarm condition. | 0.0 to 12 500.0 Hz  | 0.0 Hz          |
| Invert output signal | –  | Invert the output signal.                        | <ul style="list-style-type: none"> <li>▪ No</li> <li>▪ Yes</li> </ul> | No              |

\* Visibility depends on order options or device settings

## Configuring the switch output

### Navigation

"Setup" menu → Pulse/frequency/switch output

| ► Pulse/frequency/switch output<br>1 to n |       |
|---|-------|
| Operating mode                            | → 120 |
| Terminal number                           | → 120 |
| Signal mode                               | → 120 |
| Switch output function                    | → 121 |
| Assign diagnostic behavior                | → 121 |
| Assign limit                              | → 122 |
| Assign flow direction check               | → 122 |
| Assign status                             | → 123 |
| Switch-on value                           | → 123 |
| Switch-off value                          | → 123 |
| Switch-on delay                           | → 123 |
| Switch-off delay                          | → 123 |
| Failure mode                              | → 123 |
| Invert output signal                      | → 123 |

### Parameter overview with brief description

| Parameter       | Prerequisite | Description   | Selection / User interface / User entry   | Factory setting |
|-----------------|--------------|---|---|-----------------|
| Operating mode  | –            | Define the output as a pulse, frequency or switch output. | <ul style="list-style-type: none"> <li>▪ Pulse</li> <li>▪ Frequency</li> <li>▪ Switch</li> </ul>  | Pulse           |
| Terminal number | –            | Shows the terminal numbers used by the PFS output module. | <ul style="list-style-type: none"> <li>▪ Not used</li> <li>▪ 24-25 (I/O 2)</li> <li>▪ 22-23 (I/O 3)</li> <li>▪ 20-21 (I/O 4) *</li> </ul> | –               |
| Signal mode     | –            | Select the signal mode for the PFS output.                | <ul style="list-style-type: none"> <li>▪ Passive</li> <li>▪ Active</li> </ul>   | Passive         |



| Parameter                  | Prerequisite  | Description                                   | Selection / User interface / User entry   | Factory setting |
|----------------------------|---|---|---|-----------------|
| Switch output function     | The <b>Switch</b> option is selected in the <b>Operating mode</b> parameter.  | Select function for switch output.            | <ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ On</li> <li>▪ Diagnostic behavior</li> <li>▪ Limit</li> <li>▪ Flow direction check</li> <li>▪ Status</li> </ul> | Off             |
| Assign diagnostic behavior | <ul style="list-style-type: none"> <li>▪ In the <b>Operating mode</b> parameter, the <b>Switch</b> option is selected.</li> <li>▪ In the <b>Switch output function</b> parameter, the <b>Diagnostic behavior</b> option is selected.</li> </ul> | Select diagnostic behavior for switch output. | <ul style="list-style-type: none"> <li>▪ Alarm</li> <li>▪ Alarm or warning</li> <li>▪ Warning</li> </ul>  | Alarm           |

| Parameter                   | Prerequisite   | Description  | Selection / User interface / User entry   | Factory setting |
|-----------------------------|--|--|---|-----------------|
| Assign limit                | <ul style="list-style-type: none"> <li>▪ The <b>Switch</b> option is selected in the <b>Operating mode</b> parameter.</li> <li>▪ The <b>Limit</b> option is selected in the <b>Switch output function</b> parameter.</li> </ul>                | Select process variable for limit function.            | <ul style="list-style-type: none"> <li>▪ Mass flow</li> <li>▪ Volume flow</li> <li>▪ Corrected volume flow</li> <li>▪ Target mass flow *</li> <li>▪ Carrier mass flow *</li> <li>▪ Target volume flow</li> <li>▪ Carrier volume flow</li> <li>▪ Target corrected volume flow</li> <li>▪ Carrier corrected volume flow</li> <li>▪ Density</li> <li>▪ Reference density</li> <li>▪ Reference density alternative</li> <li>▪ GSV flow</li> <li>▪ GSV flow alternative</li> <li>▪ NSV flow</li> <li>▪ NSV flow alternative</li> <li>▪ S&amp;W volume flow</li> <li>▪ Water cut</li> <li>▪ Oil density</li> <li>▪ Water density</li> <li>▪ Oil mass flow</li> <li>▪ Water mass flow</li> <li>▪ Oil volume flow</li> <li>▪ Water volume flow</li> <li>▪ Oil corrected volume flow</li> <li>▪ Water corrected volume flow</li> <li>▪ Dynamic viscosity *</li> <li>▪ Concentration *</li> <li>▪ Kinematic viscosity *</li> <li>▪ Temp. compensated dynamic viscosity *</li> <li>▪ Temp. compensated kinematic viscosity *</li> <li>▪ Temperature</li> <li>▪ Totalizer 1</li> <li>▪ Totalizer 2</li> <li>▪ Totalizer 3</li> <li>▪ Oscillation damping</li> <li>▪ Pressure</li> </ul> | Mass flow       |
| Assign flow direction check | <ul style="list-style-type: none"> <li>▪ The <b>Switch</b> option is selected in the <b>Operating mode</b> parameter.</li> <li>▪ The <b>Flow direction check</b> option is selected in the <b>Switch output function</b> parameter.</li> </ul> | Select process variable for flow direction monitoring. | <ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ Volume flow</li> <li>▪ Mass flow</li> <li>▪ Corrected volume flow</li> </ul>  | Mass flow       |

| Parameter            | Prerequisite  | Description                                       | Selection / User interface / User entry   | Factory setting  |
|----------------------|---|---|---|--|
| Assign status        | <ul style="list-style-type: none"> <li>The <b>Switch</b> option is selected in the <b>Operating mode</b> parameter.</li> <li>The <b>Status</b> option is selected in the <b>Switch output function</b> parameter.</li> </ul>  | Select device status for switch output.           | <ul style="list-style-type: none"> <li>Partially filled pipe detection</li> <li>Low flow cut off</li> </ul> | Partially filled pipe detection  |
| Switch-on value      | <ul style="list-style-type: none"> <li>In the <b>Operating mode</b> parameter, the <b>Switch</b> option is selected.</li> <li>In the <b>Switch output function</b> parameter, the <b>Limit</b> option is selected.</li> </ul> | Enter measured value for the switch-on point.     | Signed floating-point number  | Country-specific: <ul style="list-style-type: none"> <li>0 kg/h</li> <li>0 lb/min</li> </ul> |
| Switch-off value     | <ul style="list-style-type: none"> <li>In the <b>Operating mode</b> parameter, the <b>Switch</b> option is selected.</li> <li>In the <b>Switch output function</b> parameter, the <b>Limit</b> option is selected.</li> </ul> | Enter measured value for the switch-off point.    | Signed floating-point number  | Country-specific: <ul style="list-style-type: none"> <li>0 kg/h</li> <li>0 lb/min</li> </ul> |
| Switch-on delay      | <ul style="list-style-type: none"> <li>The <b>Switch</b> option is selected in the <b>Operating mode</b> parameter.</li> <li>The <b>Limit</b> option is selected in the <b>Switch output function</b> parameter.</li> </ul>   | Define delay for the switch-on of status output.  | 0.0 to 100.0 s  | 0.0 s  |
| Switch-off delay     | <ul style="list-style-type: none"> <li>The <b>Switch</b> option is selected in the <b>Operating mode</b> parameter.</li> <li>The <b>Limit</b> option is selected in the <b>Switch output function</b> parameter.</li> </ul>   | Define delay for the switch-off of status output. | 0.0 to 100.0 s  | 0.0 s  |
| Failure mode         | –   | Define output behavior in alarm condition.        | <ul style="list-style-type: none"> <li>Actual status</li> <li>Open</li> <li>Closed</li> </ul>               | Open   |
| Invert output signal | –   | Invert the output signal.                         | <ul style="list-style-type: none"> <li>No</li> <li>Yes</li> </ul>   | No   |

\* Visibility depends on order options or device settings

### 10.4.9 Configuring the relay output





The **Relay output** wizard guides the user systematically through all the parameters that have to be set for configuring the relay output.

#### Navigation

"Setup" menu → Relay output 1 to n

▶ RelaisOutput 1 to n

|                             |         |
|-----------------------------|---------|
| Switch output function      | → ⓘ 124 |
| Assign flow direction check | → ⓘ 124 |
| Assign limit                | → ⓘ 125 |
| Assign diagnostic behavior  | → ⓘ 125 |

|                  |   |
|------------------|---|
| Assign status    | →  125 |
| Switch-off value | →  125 |
| Switch-on value  | →  126 |
| Failure mode     | →  126 |

### Parameter overview with brief description

| Parameter                   | Prerequisite   | Description   | Selection / User interface / User entry  | Factory setting |
|-----------------------------|--|---|--|-----------------|
| Relay output function       | –  | Select the function for the relay output.                   | <ul style="list-style-type: none"> <li>▪ Closed</li> <li>▪ Open</li> <li>▪ Diagnostic behavior</li> <li>▪ Limit</li> <li>▪ Flow direction check</li> <li>▪ Digital Output</li> </ul> | Closed          |
| Terminal number             | –  | Shows the terminal numbers used by the relay output module. | <ul style="list-style-type: none"> <li>▪ Not used</li> <li>▪ 24-25 (I/O 2)</li> <li>▪ 22-23 (I/O 3)</li> <li>▪ 20-21 (I/O 4)</li> </ul>  | –               |
| Assign flow direction check | In the <b>Relay output function</b> parameter, the <b>Flow direction check</b> option is selected. | Select process variable for flow direction monitoring.      | <ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ Volume flow</li> <li>▪ Mass flow</li> <li>▪ Corrected volume flow</li> </ul>   | Mass flow       |

| Parameter                  | Prerequisite  | Description                                    | Selection / User interface / User entry   | Factory setting  |
|----------------------------|---|--|---|--|
| Assign limit               | In the <b>Relay output function</b> parameter, the <b>Limit</b> option is selected.               | Select process variable for limit function.    | <ul style="list-style-type: none"> <li>■ Mass flow</li> <li>■ Volume flow</li> <li>■ Corrected volume flow</li> <li>■ Target mass flow *</li> <li>■ Carrier mass flow *</li> <li>■ Target volume flow</li> <li>■ Carrier volume flow</li> <li>■ Target corrected volume flow</li> <li>■ Carrier corrected volume flow</li> <li>■ Density</li> <li>■ Reference density</li> <li>■ Reference density alternative</li> <li>■ GSV flow</li> <li>■ GSV flow alternative</li> <li>■ NSV flow</li> <li>■ NSV flow alternative</li> <li>■ S&amp;W volume flow</li> <li>■ Water cut</li> <li>■ Oil density</li> <li>■ Water density</li> <li>■ Oil mass flow</li> <li>■ Water mass flow</li> <li>■ Oil volume flow</li> <li>■ Water volume flow</li> <li>■ Oil corrected volume flow</li> <li>■ Water corrected volume flow</li> <li>■ Dynamic viscosity *</li> <li>■ Concentration *</li> <li>■ Kinematic viscosity *</li> <li>■ Temp. compensated dynamic viscosity *</li> <li>■ Temp. compensated kinematic viscosity *</li> <li>■ Temperature</li> <li>■ Totalizer 1</li> <li>■ Totalizer 2</li> <li>■ Totalizer 3</li> <li>■ Oscillation damping</li> <li>■ Pressure</li> </ul> | Mass flow  |
| Assign diagnostic behavior | In the <b>Relay output function</b> parameter, the <b>Diagnostic behavior</b> option is selected. | Select diagnostic behavior for switch output.  | <ul style="list-style-type: none"> <li>■ Alarm</li> <li>■ Alarm or warning</li> <li>■ Warning</li> </ul>  | Alarm  |
| Assign status              | In the <b>Relay output function</b> parameter, the <b>Digital Output</b> option is selected.      | Select device status for switch output.        | <ul style="list-style-type: none"> <li>■ Partially filled pipe detection</li> <li>■ Low flow cut off</li> </ul>   | Partially filled pipe detection  |
| Switch-off value           | In the <b>Relay output function</b> parameter, the <b>Limit</b> option is selected.               | Enter measured value for the switch-off point. | Signed floating-point number  | Country-specific: <ul style="list-style-type: none"> <li>■ 0 kg/h</li> <li>■ 0 lb/min</li> </ul> |

| Parameter        | Prerequisite  | Description                                       | Selection / User interface / User entry   | Factory setting   |
|------------------|---|---|---|---|
| Switch-off delay | In the <b>Relay output function</b> parameter, the <b>Limit</b> option is selected. | Define delay for the switch-off of status output. | 0.0 to 100.0 s  | 0.0 s   |
| Switch-on value  | In the <b>Relay output function</b> parameter, the <b>Limit</b> option is selected. | Enter measured value for the switch-on point.     | Signed floating-point number  | Country-specific:<br><ul style="list-style-type: none"> <li>■ 0 kg/h</li> <li>■ 0 lb/min</li> </ul> |
| Switch-on delay  | In the <b>Relay output function</b> parameter, the <b>Limit</b> option is selected. | Define delay for the switch-on of status output.  | 0.0 to 100.0 s  | 0.0 s   |
| Failure mode     | –   | Define output behavior in alarm condition.        | <ul style="list-style-type: none"> <li>■ Actual status</li> <li>■ Open</li> <li>■ Closed</li> </ul> | Open  |

\* Visibility depends on order options or device settings

### 10.4.10 Configuring the double pulse output

The **Double pulse output** submenu guides the user systematically through all the parameters that have to be set for configuring the double pulse output.

#### Navigation

"Setup" menu → Double pulse output

| ► Double pulse output  |       |
|------------------------|-------|
| Master terminal number | → 127 |
| Slave terminal number  | → 127 |
| Signal mode            | → 127 |
| Assign pulse output 1  | → 127 |
| Measuring mode         | → 127 |
| Value per pulse        | → 127 |
| Pulse width            | → 127 |
| Failure mode           | → 127 |
| Invert output signal   | → 127 |

### Parameter overview with brief description

| Parameter              | Description  | Selection / User interface / User entry  | Factory setting                         |
|------------------------|--|--|---|
| Signal mode            | Select the signal mode for the double pulse output.                              | <ul style="list-style-type: none"> <li>■ Passive</li> <li>■ Active</li> <li>■ Passive NAMUR</li> </ul>   | Passive                                 |
| Master terminal number | Shows the terminal numbers used by the master of the double pulse output module. | <ul style="list-style-type: none"> <li>■ Not used</li> <li>■ 24-25 (I/O 2)</li> <li>■ 22-23 (I/O 3)</li> </ul>   | –                                       |
| Slave terminal number  |  | <ul style="list-style-type: none"> <li>■ Not used</li> <li>■ 24-25 (I/O 2)</li> <li>■ 22-23 (I/O 3)</li> </ul>   | –                                       |
| Assign pulse output 1  | Select process variable for pulse output.  | <ul style="list-style-type: none"> <li>■ Off</li> <li>■ Mass flow</li> <li>■ Volume flow</li> <li>■ Corrected volume flow</li> <li>■ Target mass flow *</li> <li>■ Carrier mass flow *</li> <li>■ Target volume flow</li> <li>■ Carrier volume flow</li> <li>■ Target corrected volume flow</li> <li>■ Carrier corrected volume flow</li> <li>■ GSV flow</li> <li>■ GSV flow alternative</li> <li>■ NSV flow</li> <li>■ NSV flow alternative</li> <li>■ S&amp;W volume flow</li> <li>■ Oil mass flow</li> <li>■ Water mass flow</li> <li>■ Oil volume flow</li> <li>■ Water volume flow</li> <li>■ Oil corrected volume flow</li> <li>■ Water corrected volume flow</li> </ul> | Off                                     |
| Measuring mode         | Select measuring mode for pulse output.  | <ul style="list-style-type: none"> <li>■ Forward flow</li> <li>■ Forward/Reverse flow</li> <li>■ Reverse flow</li> <li>■ Reverse flow compensation</li> </ul>  | Forward flow                            |
| Value per pulse        | Enter measured value at which a pulse is output.                                 | Signed floating-point number   | Depends on country and nominal diameter |
| Pulse width            | Define time width of the output pulse.   | 0.5 to 2 000 ms  | 0.5 ms                                  |
| Failure mode           | Define output behavior in alarm condition.                                       | <ul style="list-style-type: none"> <li>■ Actual value</li> <li>■ No pulses</li> </ul>  | No pulses                               |
| Invert output signal   | Invert the output signal.  | <ul style="list-style-type: none"> <li>■ No</li> <li>■ Yes</li> </ul>  | No                                      |

\* Visibility depends on order options or device settings

#### 10.4.11 Configuring the local display

The **Display** wizard guides you systematically through all the parameters that can be configured for configuring the local display.

**Navigation**

"Setup" menu → Display

| ► Display             |       |
|-----------------------|-------|
| Format display        | → 129 |
| Value 1 display       | → 130 |
| 0% bargraph value 1   | → 131 |
| 100% bargraph value 1 | → 131 |
| Value 2 display       | → 132 |
| Value 3 display       | → 133 |
| 0% bargraph value 3   | → 133 |
| 100% bargraph value 3 | → 133 |
| Value 4 display       | → 133 |





**Parameter overview with brief description**

| Parameter      | Prerequisite                 | Description  | Selection / User entry   | Factory setting    |
|----------------|------------------------------|--|--|--------------------|
| Format display | A local display is provided. | Select how measured values are shown on the display. | <ul style="list-style-type: none"><li>■ 1 value, max. size</li><li>■ 1 bargraph + 1 value</li><li>■ 2 values</li><li>■ 1 value large + 2 values</li><li>■ 4 values</li></ul> | 1 value, max. size |

| Parameter       | Prerequisite                 | Description   | Selection / User entry   | Factory setting |
|-----------------|------------------------------|---|--|-----------------|
| Value 1 display | A local display is provided. | Select the measured value that is shown on the local display. | <ul style="list-style-type: none"> <li>▪ Mass flow</li> <li>▪ Volume flow</li> <li>▪ Corrected volume flow</li> <li>▪ Target mass flow *</li> <li>▪ Carrier mass flow *</li> <li>▪ Target volume flow</li> <li>▪ Carrier volume flow</li> <li>▪ Target corrected volume flow</li> <li>▪ Carrier corrected volume flow</li> <li>▪ Density</li> <li>▪ Reference density</li> <li>▪ Reference density alternative</li> <li>▪ GSV flow</li> <li>▪ GSV flow alternative</li> <li>▪ NSV flow</li> <li>▪ NSV flow alternative</li> <li>▪ S&amp;W volume flow</li> <li>▪ Water cut</li> <li>▪ Oil density</li> <li>▪ Water density</li> <li>▪ Oil mass flow</li> <li>▪ Water mass flow</li> <li>▪ Oil volume flow</li> <li>▪ Water volume flow</li> <li>▪ Oil corrected volume flow</li> <li>▪ Water corrected volume flow</li> <li>▪ Weighted density average</li> <li>▪ Weighted temperature average</li> <li>▪ Concentration *</li> <li>▪ Dynamic viscosity *</li> <li>▪ Kinematic viscosity *</li> <li>▪ Temp. compensated dynamic viscosity *</li> <li>▪ Temp. compensated kinematic viscosity *</li> <li>▪ Temperature</li> <li>▪ Carrier pipe temperature *</li> <li>▪ Electronic temperature</li> <li>▪ Oscillation frequency 0</li> <li>▪ Oscillation frequency 1 *</li> <li>▪ Oscillation amplitude 0 *</li> <li>▪ Oscillation amplitude 1 *</li> <li>▪ Frequency fluctuation 0</li> </ul> | Mass flow       |

| Parameter             | Prerequisite                 | Description                             | Selection / User entry   | Factory setting  |
|-----------------------|------------------------------|---|--|--|
|                       |                              |   | <ul style="list-style-type: none"> <li>■ Frequency fluctuation 1 *</li> <li>■ Oscillation damping 0</li> <li>■ Oscillation damping 1 *</li> <li>■ Oscillation damping fluctuation 0</li> <li>■ Oscillation damping fluctuation 1 *</li> <li>■ Signal asymmetry</li> <li>■ Exciter current 0</li> <li>■ Exciter current 1 *</li> <li>■ HBSI *</li> <li>■ Totalizer 1</li> <li>■ Totalizer 2</li> <li>■ Totalizer 3</li> <li>■ Current output 1</li> <li>■ Current output 2 *</li> <li>■ Current output 3 *</li> <li>■ Current output 4 *</li> <li>■ Pressure</li> </ul> |  |
| 0% bargraph value 1   | A local display is provided. | Enter 0% value for bar graph display.   | Signed floating-point number   | Country-specific: <ul style="list-style-type: none"> <li>■ 0 kg/h</li> <li>■ 0 lb/min</li> </ul> |
| 100% bargraph value 1 | A local display is provided. | Enter 100% value for bar graph display. | Signed floating-point number   | Depends on country and nominal diameter  |

| Parameter       | Prerequisite                 | Description   | Selection / User entry   | Factory setting |
|-----------------|------------------------------|---|--|-----------------|
| Value 2 display | A local display is provided. | Select the measured value that is shown on the local display. | <ul style="list-style-type: none"> <li>▪ None</li> <li>▪ Mass flow</li> <li>▪ Volume flow</li> <li>▪ Corrected volume flow</li> <li>▪ Target mass flow *</li> <li>▪ Carrier mass flow *</li> <li>▪ Target volume flow</li> <li>▪ Carrier volume flow</li> <li>▪ Target corrected volume flow</li> <li>▪ Carrier corrected volume flow</li> <li>▪ Density</li> <li>▪ Reference density</li> <li>▪ Reference density alternative</li> <li>▪ GSV flow</li> <li>▪ GSV flow alternative</li> <li>▪ NSV flow</li> <li>▪ NSV flow alternative</li> <li>▪ S&amp;W volume flow</li> <li>▪ Water cut</li> <li>▪ Oil density</li> <li>▪ Water density</li> <li>▪ Oil mass flow</li> <li>▪ Water mass flow</li> <li>▪ Oil volume flow</li> <li>▪ Water corrected volume flow</li> <li>▪ Oil corrected volume flow</li> <li>▪ Water volume flow</li> <li>▪ Weighted density average</li> <li>▪ Weighted temperature average</li> <li>▪ Concentration *</li> <li>▪ Dynamic viscosity *</li> <li>▪ Kinematic viscosity *</li> <li>▪ Temp. compensated dynamic viscosity *</li> <li>▪ Temp. compensated kinematic viscosity *</li> <li>▪ Temperature</li> <li>▪ Carrier pipe temperature *</li> <li>▪ Electronic temperature</li> <li>▪ Oscillation frequency 0</li> <li>▪ Oscillation frequency 1 *</li> <li>▪ Oscillation amplitude 0 *</li> <li>▪ Oscillation amplitude 1 *</li> <li>▪ Frequency fluctuation 0</li> </ul> | None            |

| Parameter             | Prerequisite  | Description   | Selection / User entry   | Factory setting  |
|-----------------------|---|---|--|--|
|                       |   |   | <ul style="list-style-type: none"> <li>▪ Frequency fluctuation 1 *</li> <li>▪ Oscillation damping 0</li> <li>▪ Oscillation damping 1 *</li> <li>▪ Oscillation damping fluctuation 0</li> <li>▪ Oscillation damping fluctuation 1 *</li> <li>▪ Signal asymmetry</li> <li>▪ Exciter current 0</li> <li>▪ Exciter current 1 *</li> <li>▪ HBSI *</li> <li>▪ Totalizer 1</li> <li>▪ Totalizer 2</li> <li>▪ Totalizer 3</li> <li>▪ Current output 1</li> <li>▪ Current output 2 *</li> <li>▪ Current output 3 *</li> <li>▪ Current output 4 *</li> <li>▪ Pressure</li> </ul> |  |
| Value 3 display       | A local display is provided.                                  | Select the measured value that is shown on the local display. | For the picklist, see the <b>Value 2 display</b> parameter (→  132)   | None   |
| 0% bargraph value 3   | A selection was made in the <b>Value 3 display</b> parameter. | Enter 0% value for bar graph display.                         | Signed floating-point number   | Country-specific: <ul style="list-style-type: none"> <li>▪ 0 kg/h</li> <li>▪ 0 lb/min</li> </ul> |
| 100% bargraph value 3 | A selection was made in the <b>Value 3 display</b> parameter. | Enter 100% value for bar graph display.                       | Signed floating-point number   | 0  |
| Value 4 display       | A local display is provided.                                  | Select the measured value that is shown on the local display. | For the picklist, see the <b>Value 2 display</b> parameter (→  132)   | None   |





\* Visibility depends on order options or device settings

### 10.4.12 Configuring the low flow cut off




The **Low flow cut off** wizard systematically guides the user through all the parameters that must be set to configure low flow cut off.

#### Navigation

"Setup" menu → Low flow cut off

| ► Low flow cut off         |   |
|----------------------------|---|
| Assign process variable    | →  134 |
| On value low flow cutoff   | →  134 |
| Off value low flow cutoff  | →  134 |
| Pressure shock suppression | →  134 |

#### Parameter overview with brief description

| Parameter                  | Prerequisite  | Description  | Selection / User entry   | Factory setting                         |
|----------------------------|---|--|--|---|
| Assign process variable    | –   | Select process variable for low flow cut off.                                  | <ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ Mass flow</li> <li>▪ Volume flow</li> <li>▪ Corrected volume flow</li> </ul> | Mass flow                               |
| On value low flow cutoff   | One of the following options is selected in the <b>Assign process variable</b> parameter (→  134): <ul style="list-style-type: none"> <li>▪ Mass flow</li> <li>▪ Volume flow</li> <li>▪ Corrected volume flow</li> </ul> | Enter on value for low flow cut off.   | Positive floating-point number   | Depends on country and nominal diameter |
| Off value low flow cutoff  | One of the following options is selected in the <b>Assign process variable</b> parameter (→  134): <ul style="list-style-type: none"> <li>▪ Mass flow</li> <li>▪ Volume flow</li> <li>▪ Corrected volume flow</li> </ul> | Enter off value for low flow cut off.  | 0 to 100.0 %   | 50 %                                    |
| Pressure shock suppression | One of the following options is selected in the <b>Assign process variable</b> parameter (→  134): <ul style="list-style-type: none"> <li>▪ Mass flow</li> <li>▪ Volume flow</li> <li>▪ Corrected volume flow</li> </ul> | Enter time frame for signal suppression (= active pressure shock suppression). | 0 to 100 s   | 0 s                                     |

### 10.4.13 Configuring the partial filled pipe detection

The **Partial filled pipe detection** wizard guides you systematically through all parameters that have to be set for configuring the monitoring of the pipe filling.

#### Navigation

"Setup" menu → Partially filled pipe detection

▶ Partially filled pipe detection

|  |        |
|--|--------|
| Assign process variable                  | →  135 |
| Low value partial filled pipe detection  | →  135 |
| High value partial filled pipe detection | →  135 |
| Response time part. filled pipe detect.  | →  135 |


#### Parameter overview with brief description

| Parameter                                | Prerequisite  | Description  | Selection / User entry  | Factory setting |
|--|---|--|---|-----------------|
| Assign process variable                  | –   | Select process variable for partially filled pipe detection.                           | <ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ Density</li> <li>▪ Reference density</li> </ul> | Off             |
| Low value partial filled pipe detection  | One of the following options is selected in the <b>Assign process variable</b> parameter (→  135): <ul style="list-style-type: none"> <li>▪ Density</li> <li>▪ Reference density</li> </ul> | Enter lower limit value for deactivating partialy filled pipe detection.               | Signed floating-point number  | 200             |
| High value partial filled pipe detection | One of the following options is selected in the <b>Assign process variable</b> parameter (→  135): <ul style="list-style-type: none"> <li>▪ Density</li> <li>▪ Reference density</li> </ul> | Enter upper limit value for deactivating partialy filled pipe detection.               | Signed floating-point number  | 6 000           |
| Response time part. filled pipe detect.  | One of the following options is selected in the <b>Assign process variable</b> parameter (→  135): <ul style="list-style-type: none"> <li>▪ Density</li> <li>▪ Reference density</li> </ul> | Enter time before diagnostic message is displayed for partially filled pipe detection. | 0 to 100 s  | 1 s             |

## 10.5 Advanced settings

The **Advanced setup** submenu together with its submenus contains parameters for specific settings.

*Navigation to the "Advanced setup" submenu*

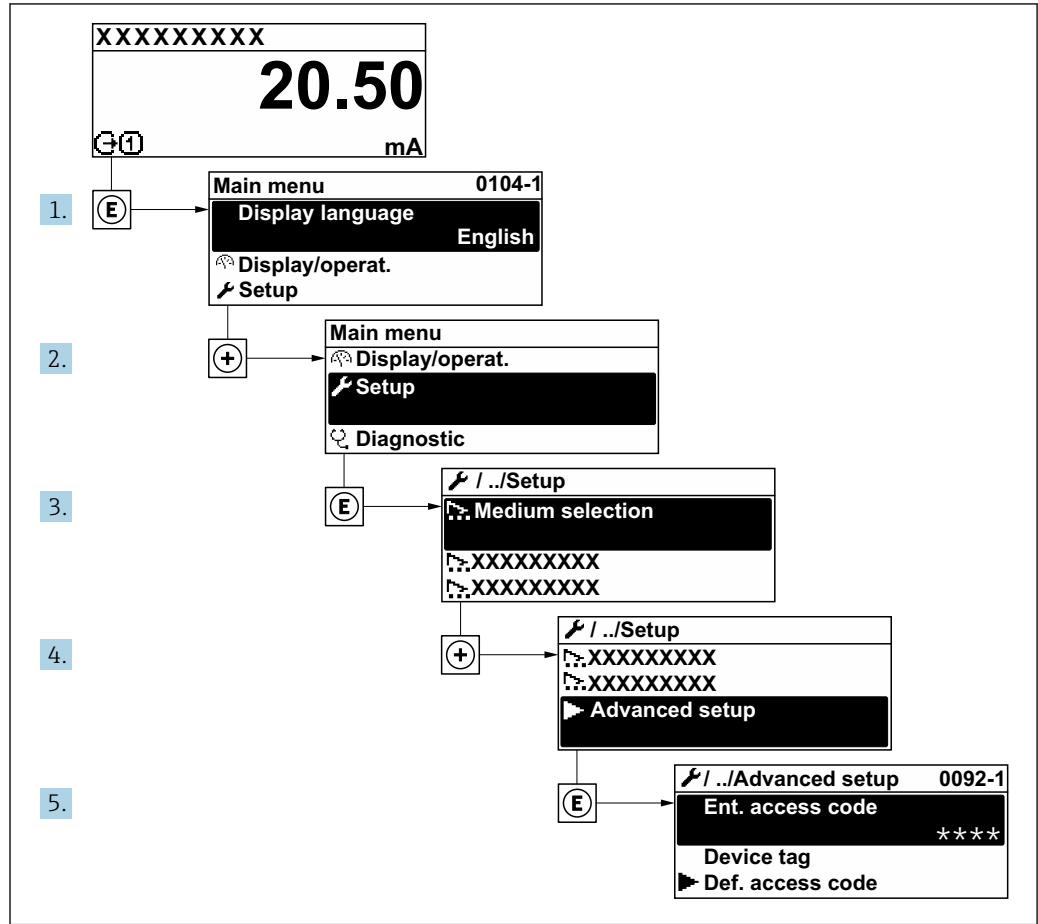


A0032223-EN


**i** The number of submenus can vary depending on the device version. Some submenus are not dealt with in the Operating Instructions. These submenus and the parameters they contain are explained in the Special Documentation for the device.

### Navigation

"Setup" menu → Advanced setup

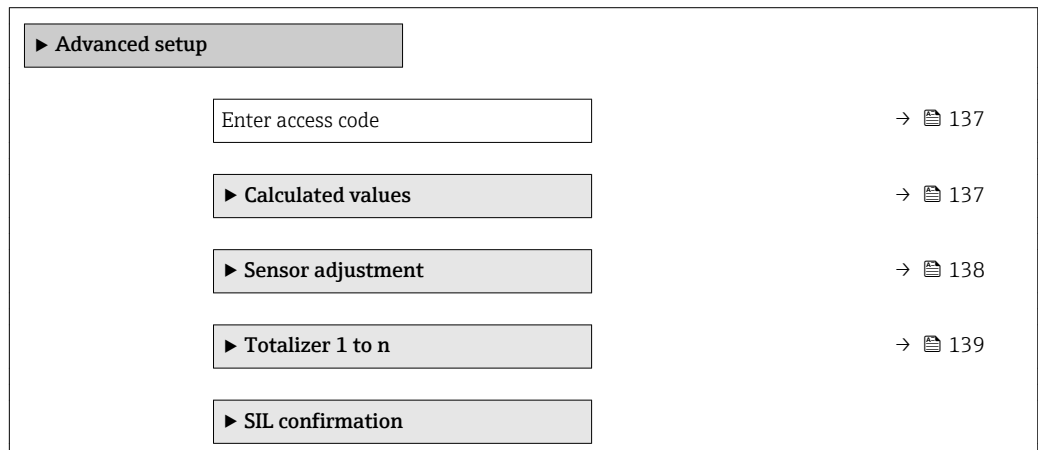



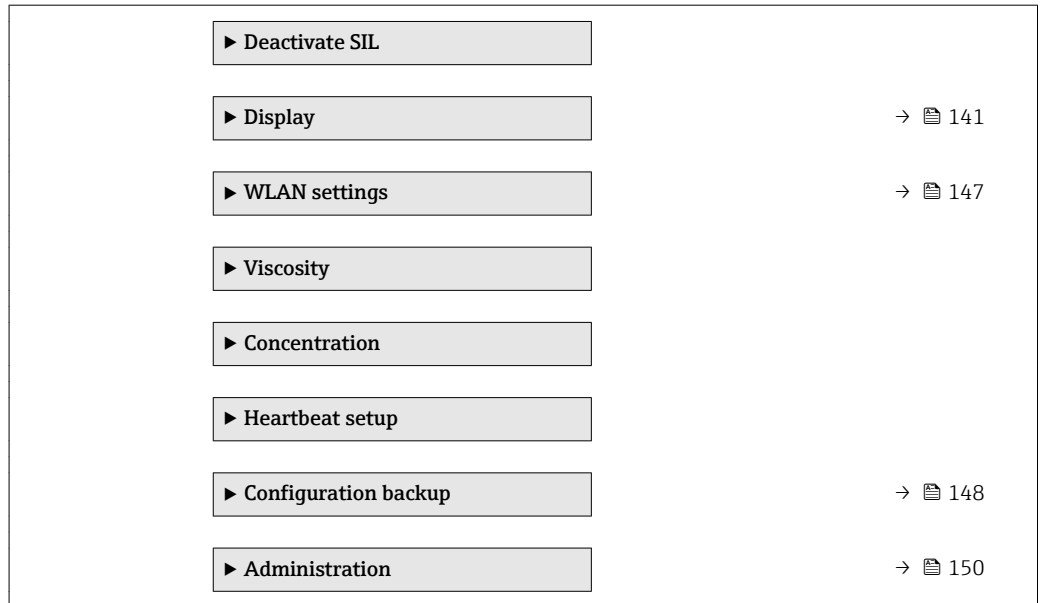

### 10.5.1 Using the parameter to enter the access code

**Navigation**

"Setup" menu → Advanced setup

**Parameter overview with brief description**


| Parameter         | Description  | User entry |
|-------------------|--|------------|
| Enter access code | Enter access code to disable write protection of parameters. | 0 to 9999  |

### 10.5.2 Calculated values

The **Calculated values** submenu contains parameters for calculating the corrected volume flow.

**Navigation**

"Setup" menu → Advanced setup → Calculated values

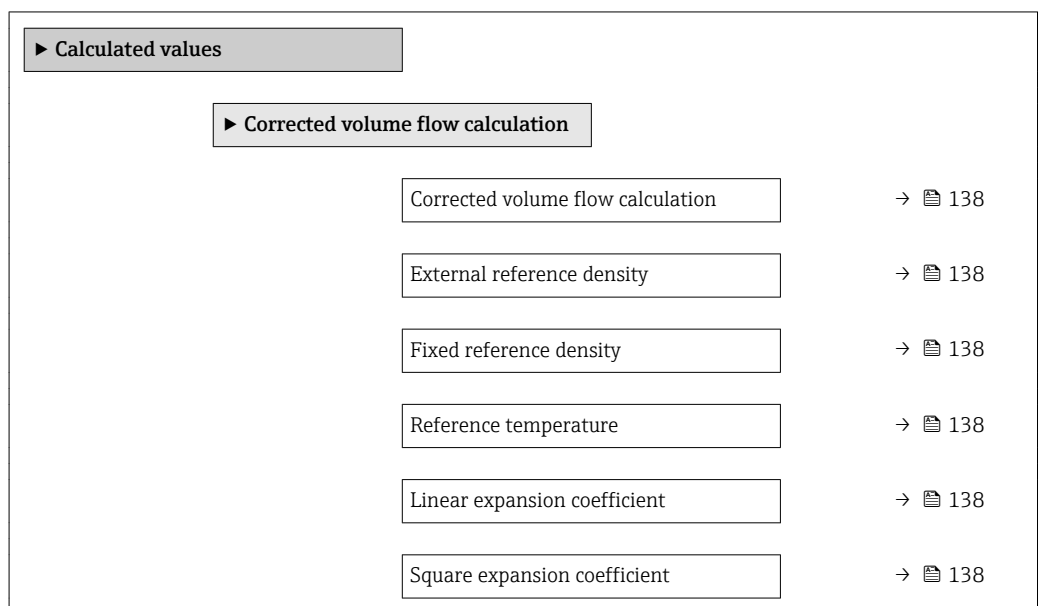

## Parameter overview with brief description

| Parameter                         | Prerequisite  | Description  | Selection / User interface / User entry  | Factory setting  |
|-----------------------------------|---|--|--|--|
| Corrected volume flow calculation | –   | Select reference density for calculating the corrected volume flow.  | <ul style="list-style-type: none"> <li>■ Fixed reference density</li> <li>■ Calculated reference density</li> <li>■ Current input 1<sup>*</sup></li> <li>■ Current input 2<sup>*</sup></li> <li>■ Current input 3<sup>*</sup></li> </ul> | Calculated reference density   |
| External reference density        | One of the following options is selected in the <b>Corrected volume flow calculation</b> parameter: <ul style="list-style-type: none"> <li>■ Current input 1<sup>*</sup></li> <li>■ Current input 2<sup>*</sup></li> <li>■ Current input 3<sup>*</sup></li> </ul> | Shows external reference density.  | Floating point number with sign  | –  |
| Fixed reference density           | The <b>Fixed reference density</b> option is selected in the <b>Corrected volume flow calculation</b> parameter.  | Enter fixed value for reference density.   | Positive floating-point number   | 1 kg/Nl  |
| Reference temperature             | The <b>Calculated reference density</b> option is selected in the <b>Corrected volume flow calculation</b> parameter.   | Enter reference temperature for calculating the reference density.   | –273.15 to 99 999 °C   | Country-specific: <ul style="list-style-type: none"> <li>■ +20 °C</li> <li>■ +68 °F</li> </ul> |
| Linear expansion coefficient      | The <b>Calculated reference density</b> option is selected in the <b>Corrected volume flow calculation</b> parameter.   | Enter linear, medium-specific expansion coefficient for calculating the reference density.   | Signed floating-point number   | 0.0 1/K  |
| Square expansion coefficient      | The <b>Calculated reference density</b> option is selected in the <b>Corrected volume flow calculation</b> parameter.   | For media with a non-linear expansion pattern: enter the quadratic, medium-specific expansion coefficient for calculating the reference density. | Signed floating-point number   | 0.0 1/K <sup>2</sup>   |

\* Visibility depends on order options or device settings

### 10.5.3 Carrying out a sensor adjustment

The **Sensor adjustment** submenu contains parameters that pertain to the functionality of the sensor.

#### Navigation


"Setup" menu → Advanced setup → Sensor adjustment

|                         |         |
|-------------------------|---------|
| ► Sensor adjustment     |         |
| Installation direction  | → ⓘ 139 |
| ► Zero point adjustment | → ⓘ 139 |

**Parameter overview with brief description**

| Parameter              | Description   | Selection   | Factory setting         |
|------------------------|---|---|-------------------------|
| Installation direction | Set sign of flow direction to match the direction of the arrow on the sensor. | <ul style="list-style-type: none"> <li>▪ Flow in arrow direction</li> <li>▪ Flow against arrow direction</li> </ul> | Flow in arrow direction |

**Zero point adjustment**

All measuring devices are calibrated in accordance with state-of-the-art technology. Calibration takes place under reference conditions →  214. Therefore, a zero point adjustment in the field is generally not required.

Experience shows that zero point adjustment is advisable only in special cases:


- To achieve maximum measuring accuracy even with low flow rates.
- Under extreme process or operating conditions (e.g. very high process temperatures or very high-viscosity fluids).

**Navigation**


"Setup" menu → Advanced setup → Sensor adjustment → Zero point adjustment

▶ Zero point adjustment

Zero point adjustment control

→  139

Progress

→  139

**Parameter overview with brief description**

| Parameter                     | Description                        | Selection / User interface   | Factory setting |
|-------------------------------|------------------------------------|--|-----------------|
| Zero point adjustment control | Start zero point adjustment.       | <ul style="list-style-type: none"> <li>▪ Cancel</li> <li>▪ Busy</li> <li>▪ Zero point adjust failure</li> <li>▪ Start</li> </ul> | Cancel          |
| Progress                      | Shows the progress of the process. | 0 to 100 %   | -               |

**10.5.4 Configuring the totalizer**


In the "Totalizer 1 to n" submenu the individual totalizer can be configured.

**Navigation**


"Setup" menu → Advanced setup → Totalizer 1 to n

▶ Totalizer 1 to n


Assign process variable

→  140


Unit totalizer 1 to n

→  140




Totalizer operation mode

→  140

Failure mode

→  140

## Parameter overview with brief description

| Parameter                | Prerequisite  | Description                                   | Selection  | Factory setting  |
|--------------------------|---|---|--|--|
| Assign process variable  | –   | Select process variable for totalizer.        | <ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ Mass flow</li> <li>▪ Volume flow</li> <li>▪ Corrected volume flow</li> <li>▪ Target mass flow<sup>*</sup></li> <li>▪ Carrier mass flow<sup>*</sup></li> <li>▪ Target volume flow</li> <li>▪ Carrier volume flow</li> <li>▪ Target corrected volume flow</li> <li>▪ Carrier corrected volume flow</li> <li>▪ GSV flow</li> <li>▪ GSV flow alternative</li> <li>▪ NSV flow</li> <li>▪ NSV flow alternative</li> <li>▪ S&amp;W volume flow</li> <li>▪ Oil mass flow</li> <li>▪ Water mass flow</li> <li>▪ Oil volume flow</li> <li>▪ Water volume flow</li> <li>▪ Oil corrected volume flow</li> <li>▪ Water corrected volume flow</li> </ul> | Mass flow  |
| Unit totalizer 1 to n    | One of the following options is selected in the <b>Assign process variable</b> parameter (→  140) of the <b>Totalizer 1 to n</b> submenu: <ul style="list-style-type: none"> <li>▪ Volume flow</li> <li>▪ Mass flow</li> <li>▪ Corrected volume flow</li> <li>▪ Target mass flow<sup>*</sup></li> <li>▪ Carrier mass flow<sup>*</sup></li> </ul>   | Select process variable totalizer unit.       | Unit choose list   | Country-specific: <ul style="list-style-type: none"> <li>▪ kg</li> <li>▪ lb</li> </ul> |
| Totalizer operation mode | One of the following options is selected in the <b>Assign process variable</b> parameter (→  140) of the <b>Totalizer 1 to n</b> submenu: <ul style="list-style-type: none"> <li>▪ Volume flow</li> <li>▪ Mass flow</li> <li>▪ Corrected volume flow</li> <li>▪ Target mass flow<sup>*</sup></li> <li>▪ Carrier mass flow<sup>*</sup></li> </ul> | Select totalizer calculation mode.            | <ul style="list-style-type: none"> <li>▪ Net flow total</li> <li>▪ Forward flow total</li> <li>▪ Reverse flow total</li> </ul>   | Net flow total   |
| Failure mode             | One of the following options is selected in the <b>Assign process variable</b> parameter (→  140) of the <b>Totalizer 1 to n</b> submenu: <ul style="list-style-type: none"> <li>▪ Volume flow</li> <li>▪ Mass flow</li> <li>▪ Corrected volume flow</li> <li>▪ Target mass flow<sup>*</sup></li> <li>▪ Carrier mass flow<sup>*</sup></li> </ul> | Define totalizer behavior in alarm condition. | <ul style="list-style-type: none"> <li>▪ Stop</li> <li>▪ Actual value</li> <li>▪ Last valid value</li> </ul>   | Stop   |

\* Visibility depends on order options or device settings

### 10.5.5 Carrying out additional display configurations

In the **Display** submenu you can set all the parameters associated with the configuration of the local display.

#### Navigation

"Setup" menu → Advanced setup → Display

| ► Display             |       |
|-----------------------|-------|
| Format display        | → 142 |
| Value 1 display       | → 143 |
| 0% bargraph value 1   | → 144 |
| 100% bargraph value 1 | → 144 |
| Decimal places 1      | → 144 |
| Value 2 display       | → 145 |
| Decimal places 2      | → 146 |
| Value 3 display       | → 146 |
| 0% bargraph value 3   | → 146 |
| 100% bargraph value 3 | → 146 |
| Decimal places 3      | → 146 |
| Value 4 display       | → 146 |
| Decimal places 4      | → 146 |
| Display language      | → 147 |
| Display interval      | → 147 |
| Display damping       | → 147 |
| Header                | → 147 |
| Header text           | → 147 |
| Separator             | → 147 |
| Backlight             | → 147 |

**Parameter overview with brief description**



| Parameter      | Prerequisite                 | Description  | Selection / User entry   | Factory setting    |
|----------------|------------------------------|--|--|--------------------|
| Format display | A local display is provided. | Select how measured values are shown on the display. | <ul style="list-style-type: none"><li>▪ 1 value, max. size</li><li>▪ 1 bargraph + 1 value</li><li>▪ 2 values</li><li>▪ 1 value large + 2 values</li><li>▪ 4 values</li></ul> | 1 value, max. size |

| Parameter       | Prerequisite                 | Description   | Selection / User entry   | Factory setting |
|-----------------|------------------------------|---|--|-----------------|
| Value 1 display | A local display is provided. | Select the measured value that is shown on the local display. | <ul style="list-style-type: none"> <li>■ Mass flow</li> <li>■ Volume flow</li> <li>■ Corrected volume flow</li> <li>■ Target mass flow *</li> <li>■ Carrier mass flow *</li> <li>■ Target volume flow</li> <li>■ Carrier volume flow</li> <li>■ Target corrected volume flow</li> <li>■ Carrier corrected volume flow</li> <li>■ Density</li> <li>■ Reference density</li> <li>■ Reference density alternative</li> <li>■ GSV flow</li> <li>■ GSV flow alternative</li> <li>■ NSV flow</li> <li>■ NSV flow alternative</li> <li>■ S&amp;W volume flow</li> <li>■ Water cut</li> <li>■ Oil density</li> <li>■ Water density</li> <li>■ Oil mass flow</li> <li>■ Water mass flow</li> <li>■ Oil volume flow</li> <li>■ Water volume flow</li> <li>■ Oil corrected volume flow</li> <li>■ Water corrected volume flow</li> <li>■ Weighted density average</li> <li>■ Weighted temperature average</li> <li>■ Concentration *</li> <li>■ Dynamic viscosity *</li> <li>■ Kinematic viscosity *</li> <li>■ Temp. compensated dynamic viscosity *</li> <li>■ Temp. compensated kinematic viscosity *</li> <li>■ Temperature</li> <li>■ Carrier pipe temperature *</li> <li>■ Electronic temperature</li> <li>■ Oscillation frequency 0</li> <li>■ Oscillation frequency 1 *</li> <li>■ Oscillation amplitude 0 *</li> <li>■ Oscillation amplitude 1 *</li> <li>■ Frequency fluctuation 0</li> </ul> | Mass flow       |

| Parameter             | Prerequisite   | Description  | Selection / User entry   | Factory setting  |
|-----------------------|--|--|--|--|
|                       |  |  | <ul style="list-style-type: none"> <li>▪ Frequency fluctuation 1 *</li> <li>▪ Oscillation damping 0</li> <li>▪ Oscillation damping 1 *</li> <li>▪ Oscillation damping fluctuation 0</li> <li>▪ Oscillation damping fluctuation 1 *</li> <li>▪ Signal asymmetry</li> <li>▪ Exciter current 0</li> <li>▪ Exciter current 1 *</li> <li>▪ HBSI *</li> <li>▪ Totalizer 1</li> <li>▪ Totalizer 2</li> <li>▪ Totalizer 3</li> <li>▪ Current output 1</li> <li>▪ Current output 2 *</li> <li>▪ Current output 3 *</li> <li>▪ Current output 4 *</li> <li>▪ Pressure</li> </ul> |  |
| 0% bargraph value 1   | A local display is provided.   | Enter 0% value for bar graph display.                      | Signed floating-point number   | Country-specific: <ul style="list-style-type: none"> <li>▪ 0 kg/h</li> <li>▪ 0 lb/min</li> </ul> |
| 100% bargraph value 1 | A local display is provided.   | Enter 100% value for bar graph display.                    | Signed floating-point number   | Depends on country and nominal diameter  |
| Decimal places 1      | A measured value is specified in the <b>Value 1 display</b> parameter. | Select the number of decimal places for the display value. | <ul style="list-style-type: none"> <li>▪ x</li> <li>▪ x.x</li> <li>▪ x.xx</li> <li>▪ x.xxx</li> <li>▪ x.xxxx</li> </ul>  | x.xx   |



| Parameter       | Prerequisite                 | Description   | Selection / User entry   | Factory setting |
|-----------------|------------------------------|---|--|-----------------|
| Value 2 display | A local display is provided. | Select the measured value that is shown on the local display. | <ul style="list-style-type: none"> <li>■ None</li> <li>■ Mass flow</li> <li>■ Volume flow</li> <li>■ Corrected volume flow</li> <li>■ Target mass flow *</li> <li>■ Carrier mass flow *</li> <li>■ Target volume flow</li> <li>■ Carrier volume flow</li> <li>■ Target corrected volume flow</li> <li>■ Carrier corrected volume flow</li> <li>■ Density</li> <li>■ Reference density</li> <li>■ Reference density alternative</li> <li>■ GSV flow</li> <li>■ GSV flow alternative</li> <li>■ NSV flow</li> <li>■ NSV flow alternative</li> <li>■ S&amp;W volume flow</li> <li>■ Water cut</li> <li>■ Oil density</li> <li>■ Water density</li> <li>■ Oil mass flow</li> <li>■ Water mass flow</li> <li>■ Oil volume flow</li> <li>■ Water corrected volume flow</li> <li>■ Oil corrected volume flow</li> <li>■ Water volume flow</li> <li>■ Weighted density average</li> <li>■ Weighted temperature average</li> <li>■ Concentration *</li> <li>■ Dynamic viscosity *</li> <li>■ Kinematic viscosity *</li> <li>■ Temp. compensated dynamic viscosity *</li> <li>■ Temp. compensated kinematic viscosity *</li> <li>■ Temperature</li> <li>■ Carrier pipe temperature *</li> <li>■ Electronic temperature</li> <li>■ Oscillation frequency 0</li> <li>■ Oscillation frequency 1 *</li> <li>■ Oscillation amplitude 0 *</li> <li>■ Oscillation amplitude 1 *</li> <li>■ Frequency fluctuation 0</li> </ul> | None            |

| Parameter             | Prerequisite   | Description   | Selection / User entry   | Factory setting  |
|-----------------------|--|---|--|--|
|                       |  |   | <ul style="list-style-type: none"> <li>▪ Frequency fluctuation 1 *</li> <li>▪ Oscillation damping 0</li> <li>▪ Oscillation damping 1 *</li> <li>▪ Oscillation damping fluctuation 0</li> <li>▪ Oscillation damping fluctuation 1 *</li> <li>▪ Signal asymmetry</li> <li>▪ Exciter current 0</li> <li>▪ Exciter current 1 *</li> <li>▪ HBSI *</li> <li>▪ Totalizer 1</li> <li>▪ Totalizer 2</li> <li>▪ Totalizer 3</li> <li>▪ Current output 1</li> <li>▪ Current output 2 *</li> <li>▪ Current output 3 *</li> <li>▪ Current output 4 *</li> <li>▪ Pressure</li> </ul> |  |
| Decimal places 2      | A measured value is specified in the <b>Value 2 display</b> parameter. | Select the number of decimal places for the display value.    | <ul style="list-style-type: none"> <li>▪ x</li> <li>▪ x.x</li> <li>▪ x.xx</li> <li>▪ x.xxx</li> <li>▪ x.xxxx</li> </ul>  | x.xx   |
| Value 3 display       | A local display is provided.   | Select the measured value that is shown on the local display. | For the picklist, see the <b>Value 2 display</b> parameter (→  132)   | None   |
| 0% bargraph value 3   | A selection was made in the <b>Value 3 display</b> parameter.          | Enter 0% value for bar graph display.                         | Signed floating-point number   | Country-specific: <ul style="list-style-type: none"> <li>▪ 0 kg/h</li> <li>▪ 0 lb/min</li> </ul> |
| 100% bargraph value 3 | A selection was made in the <b>Value 3 display</b> parameter.          | Enter 100% value for bar graph display.                       | Signed floating-point number   | 0  |
| Decimal places 3      | A measured value is specified in the <b>Value 3 display</b> parameter. | Select the number of decimal places for the display value.    | <ul style="list-style-type: none"> <li>▪ x</li> <li>▪ x.x</li> <li>▪ x.xx</li> <li>▪ x.xxx</li> <li>▪ x.xxxx</li> </ul>  | x.xx   |
| Value 4 display       | A local display is provided.   | Select the measured value that is shown on the local display. | For the picklist, see the <b>Value 2 display</b> parameter (→  132)   | None   |
| Decimal places 4      | A measured value is specified in the <b>Value 4 display</b> parameter. | Select the number of decimal places for the display value.    | <ul style="list-style-type: none"> <li>▪ x</li> <li>▪ x.x</li> <li>▪ x.xx</li> <li>▪ x.xxx</li> <li>▪ x.xxxx</li> </ul>  | x.xx   |

| Parameter        | Prerequisite   | Description   | Selection / User entry   | Factory setting   |
|------------------|--|---|--|---|
| Display language | A local display is provided.   | Set display language.   | <ul style="list-style-type: none"> <li>■ English *</li> <li>■ Deutsch *</li> <li>■ Français *</li> <li>■ Español *</li> <li>■ Italiano *</li> <li>■ Nederlands *</li> <li>■ Portuguesa *</li> <li>■ Polski *</li> <li>■ русский язык (Russian) *</li> <li>■ Svenska *</li> <li>■ Türkçe *</li> <li>■ 中文 (Chinese) *</li> <li>■ 日本語 (Japanese) *</li> <li>■ 한국어 (Korean) *</li> <li>■ Bahasa Indonesia *</li> <li>■ tiếng Việt (Vietnamese) *</li> <li>■ čeština (Czech) *</li> </ul> | English (alternatively, the ordered language is preset in the device) |
| Display interval | A local display is provided.   | Set time measured values are shown on display if display alternates between values. | 1 to 10 s  | 5 s   |
| Display damping  | A local display is provided.   | Set display reaction time to fluctuations in the measured value.                    | 0.0 to 999.9 s   | 0.0 s   |
| Header           | A local display is provided.   | Select header contents on local display.  | <ul style="list-style-type: none"> <li>■ Device tag</li> <li>■ Free text</li> </ul>  | Device tag  |
| Header text      | In the <b>Header</b> parameter, the <b>Free text</b> option is selected.   | Enter display header text.  | Max. 12 characters such as letters, numbers or special characters (e.g. @, %, /)   | -----   |
| Separator        | A local display is provided.   | Select decimal separator for displaying numerical values.                           | <ul style="list-style-type: none"> <li>■ . (point)</li> <li>■ , (comma)</li> </ul>   | . (point)   |
| Backlight        | One of the following conditions is met: <ul style="list-style-type: none"> <li>■ Order code for "Display; operation", option <b>F</b> "4-line, illum.; touch control"</li> <li>■ Order code for "Display; operation", option <b>G</b> "4-line, illum.; touch control +WLAN"</li> </ul> | Switch the local display backlight on and off.                                      | <ul style="list-style-type: none"> <li>■ Disable</li> <li>■ Enable</li> </ul>  | Enable  |


\* Visibility depends on order options or device settings

### 10.5.6 WLAN configuration

The **WLAN Settings** submenu guides the user systematically through all the parameters that have to be set for the WLAN configuration.



#### Navigation

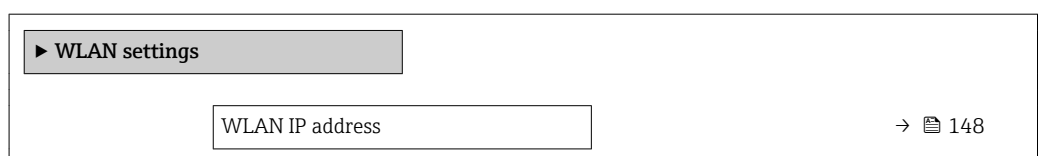"Setup" menu → Advanced setup → WLAN Settings



|                  |         |
|------------------|---------|
| Security type    | → ⓘ 148 |
| WLAN passphrase  | → ⓘ 148 |
| Assign SSID name | → ⓘ 148 |
| SSID name        | → ⓘ 148 |
| Apply changes    | → ⓘ 148 |

### Parameter overview with brief description

| Parameter        | Prerequisite   | Description  | User entry / Selection   | Factory setting   |
|------------------|--|--|--|---|
| WLAN IP address  | –  | Enter IP address of the device WLAN interface.   | 4 octet: 0 to 255 (in the particular octet)  | 192.168.1.212   |
| Network security | –  | Select the security type of the WLAN network.  | <ul style="list-style-type: none"> <li>▪ Unsecured</li> <li>▪ WPA2-PSK</li> <li>▪ EAP-PEAP with MSCHAPv2</li> <li>▪ EAP-PEAP MSCHAPv2 no server authentic.</li> <li>▪ EAP-TLS</li> </ul> | WPA2-PSK  |
| WLAN passphrase  | The <b>WPA2-PSK</b> option is selected in the <b>Security type</b> parameter.  | Enter the network key (8 to 32 characters).<br> The network key supplied with the device should be changed during commissioning for security reasons.   | 8 to 32-digit character string comprising numbers, letters and special characters  | Serial number of the measuring device (e.g. L100A802000)                                |
| Assign SSID name | –  | Select which name will be used for SSID: device tag or user-defined name.  | <ul style="list-style-type: none"> <li>▪ Device tag</li> <li>▪ User-defined</li> </ul>   | User-defined  |
| SSID name        | <ul style="list-style-type: none"> <li>▪ The <b>User-defined</b> option is selected in the <b>Assign SSID name</b> parameter.</li> <li>▪ The <b>WLAN access point</b> option is selected in the <b>WLAN mode</b> parameter.</li> </ul> | Enter the user-defined SSID name (max. 32 characters).<br> The user-defined SSID name may only be assigned once. If the SSID name is assigned more than once, the devices can interfere with one another. | Max. 32-digit character string comprising numbers, letters and special characters  | EH_device designation_last 7 digits of the serial number (e.g. EH_Promass_500_A 802000) |
| Apply changes    | –  | Use changed WLAN settings.   | <ul style="list-style-type: none"> <li>▪ Cancel</li> <li>▪ Ok</li> </ul>   | Cancel  |

## 10.5.7 Configuration management

After commissioning, you can save the current device configuration or restore the previous device configuration.

You can do so using the **Configuration management** parameter and the related options found in the **Configuration backup** submenu.

**Navigation**

"Setup" menu → Advanced setup → Configuration backup

|                          |         |
|--------------------------|---------|
| ► Configuration backup   |         |
| Operating time           | → ⓘ 149 |
| Last backup              | → ⓘ 149 |
| Configuration management | → ⓘ 149 |
| Backup state             | → ⓘ 149 |
| Comparison result        | → ⓘ 149 |

**Parameter overview with brief description**


| Parameter                | Description  | User interface / Selection  | Factory setting |
|--------------------------|--|---|-----------------|
| Operating time           | Indicates how long the device has been in operation.               | Days (d), hours (h), minutes (m) and seconds (s)  | –               |
| Last backup              | Shows when the last data backup was saved to HistoROM backup.      | Days (d), hours (h), minutes (m) and seconds (s)  | –               |
| Configuration management | Select action for managing the device data in the HistoROM backup. | <ul style="list-style-type: none"> <li>■ Cancel</li> <li>■ Execute backup</li> <li>■ Restore</li> <li>■ Compare</li> <li>■ Clear backup data</li> </ul>   | Cancel          |
| Backup state             | Shows the current status of data saving or restoring.              | <ul style="list-style-type: none"> <li>■ None</li> <li>■ Backup in progress</li> <li>■ Restoring in progress</li> <li>■ Delete in progress</li> <li>■ Compare in progress</li> <li>■ Restoring failed</li> <li>■ Backup failed</li> </ul> | None            |
| Comparison result        | Comparison of current device data with HistoROM backup.            | <ul style="list-style-type: none"> <li>■ Settings identical</li> <li>■ Settings not identical</li> <li>■ No backup available</li> <li>■ Backup settings corrupt</li> <li>■ Check not done</li> <li>■ Dataset incompatible</li> </ul>      | Check not done  |

**Function scope of the "Configuration management" parameter**

| Options        | Description   |
|----------------|---|
| Cancel         | No action is executed and the user exits the parameter.   |
| Execute backup | A backup copy of the current device configuration is saved from the HistoROM backup to the memory of the device. The backup copy includes the transmitter data of the device.     |
| Restore        | The last backup copy of the device configuration is restored from the device memory to the device's HistoROM backup. The backup copy includes the transmitter data of the device. |

| Options           | Description   |
|-------------------|---|
| Compare           | The device configuration saved in the device memory is compared with the current device configuration of the HistoROM backup. |
| Clear backup data | The backup copy of the device configuration is deleted from the memory of the device.   |

 **HistoROM backup**  
 A HistoROM is a "non-volatile" device memory in the form of an EEPROM.

 While this action is in progress, the configuration cannot be edited via the local display and a message on the processing status appears on the display.

### 10.5.8 Using parameters for device administration

The **Administration** submenu systematically guides the user through all the parameters that can be used for device administration purposes.

#### Navigation

"Setup" menu → Advanced setup → Administration

|                      |  |         |
|----------------------|--|---------|
| ▶ Administration     |  |         |
| ▶ Define access code |  | → ⓘ 150 |
| ▶ Reset access code  |  | → ⓘ 151 |
| Device reset         |  | → ⓘ 151 |

#### Using the parameter to define the access code

#### Navigation

"Setup" menu → Advanced setup → Administration → Define access code

|                      |  |         |
|----------------------|--|---------|
| ▶ Define access code |  |         |
| Define access code   |  | → ⓘ 150 |
| Confirm access code  |  | → ⓘ 150 |


#### Parameter overview with brief description

| Parameter           | Description   | User entry  |
|---------------------|---|---|
| Define access code  | Restrict write-access to parameters to protect the configuration of the device against unintentional changes. | Max. 16-digit character string comprising numbers, letters and special characters |
| Confirm access code | Confirm the entered access code.  | Max. 16-digit character string comprising numbers, letters and special characters |


### Using the parameter to reset the access code

#### Navigation

"Setup" menu → Advanced setup → Administration → Reset access code

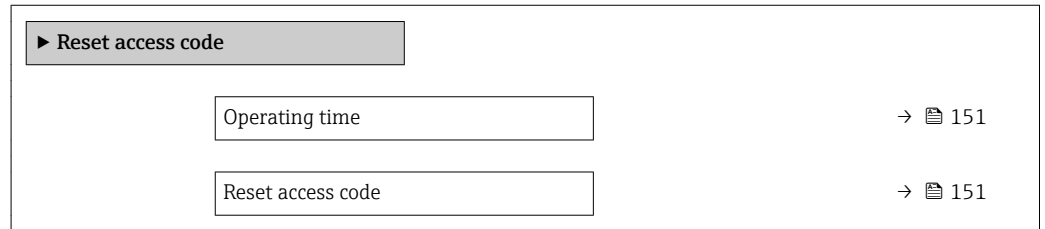

### Parameter overview with brief description

| Parameter         | Description  | User interface / User entry   | Factory setting |
|-------------------|--|---|-----------------|
| Operating time    | Indicates how long the device has been in operation.   | Days (d), hours (h), minutes (m) and seconds (s)                    | -               |
| Reset access code | Reset access code to factory settings.<br> For a reset code, contact your Endress+Hauser service organization.<br><br>The reset code can only be entered via: <ul style="list-style-type: none"> <li>▪ Web browser</li> <li>▪ DeviceCare, FieldCare (via service interface CDI-RJ45)</li> <li>▪ Fieldbus</li> </ul> | Character string comprising numbers, letters and special characters | 0x00            |

### Using the parameter to reset the device

#### Navigation

"Setup" menu → Advanced setup → Administration

### Parameter overview with brief description


| Parameter    | Description   | Selection  | Factory setting |
|--------------|---|--|-----------------|
| Device reset | Reset the device configuration - either entirely or in part - to a defined state. | <ul style="list-style-type: none"> <li>▪ Cancel</li> <li>▪ To delivery settings</li> <li>▪ Restart device</li> <li>▪ Restore S-DAT backup</li> </ul> | Cancel          |









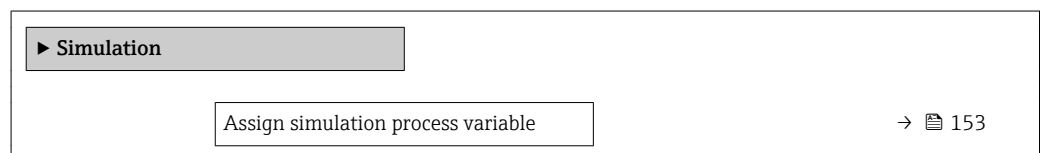











## 10.6 Simulation

The **Simulation** submenu enables you to simulate, without a real flow situation, various process variables in the process and the device alarm mode and to verify downstream signal chains (switching valves or closed-control loops).

#### Navigation

"Diagnostics" menu → Simulation





|                                    |   |
|------------------------------------|---|
| Process variable value             | →  154   |
| Status input simulation            | →  154   |
| Input signal level                 | →  154   |
| Current input 1 to n simulation    | →  154   |
| Value current input 1 to n         | →  154   |
| Current output 1 to n simulation   | →  154   |
| Value current output 1 to n        | →  154   |
| Frequency output simulation 1 to n | →  154   |
| Frequency value 1 to n             | →  154   |
| Pulse output simulation 1 to n     | →  154   |
| Pulse value 1 to n                 | →  154   |
| Switch output simulation 1 to n    | →  154 |
| Switch status 1 to n               | →  154 |
| Relay output 1 to n simulation     | →  154 |
| Switch status 1 to n               | →  155 |
| Pulse output simulation            | →  155 |
| Pulse value                        | →  155 |
| Device alarm simulation            | →  155 |
| Diagnostic event category          | →  155 |
| Diagnostic event simulation        | →  155 |



## Parameter overview with brief description

| Parameter                          | Prerequisite | Description   | Selection / User entry / User interface  | Factory setting |
|------------------------------------|--------------|---|--|-----------------|
| Assign simulation process variable | –            | Select a process variable for the simulation process that is activated. | <ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ Mass flow</li> <li>▪ Volume flow</li> <li>▪ Corrected volume flow</li> <li>▪ Target volume flow</li> <li>▪ Carrier volume flow</li> <li>▪ Target corrected volume flow</li> <li>▪ Carrier corrected volume flow</li> <li>▪ Density</li> <li>▪ Reference density</li> <li>▪ Reference density alternative</li> <li>▪ GSV flow</li> <li>▪ GSV flow alternative</li> <li>▪ NSV flow</li> <li>▪ NSV flow alternative</li> <li>▪ S&amp;W volume flow</li> <li>▪ Water cut</li> <li>▪ Oil density</li> <li>▪ Water density</li> <li>▪ Oil mass flow</li> <li>▪ Water mass flow</li> <li>▪ Oil volume flow</li> <li>▪ Water volume flow</li> <li>▪ Oil corrected volume flow</li> <li>▪ Water corrected volume flow</li> <li>▪ Weighted density average</li> <li>▪ Weighted temperature average</li> <li>▪ Temperature</li> <li>▪ Dynamic viscosity *</li> <li>▪ Kinematic viscosity *</li> <li>▪ Temp. compensated dynamic viscosity *</li> <li>▪ Temp. compensated kinematic viscosity *</li> <li>▪ Concentration *</li> <li>▪ Target mass flow *</li> <li>▪ Carrier mass flow *</li> </ul> | Off             |




| Parameter                          | Prerequisite  | Description  | Selection / User entry / User interface   | Factory setting |
|------------------------------------|---|--|---|-----------------|
| Process variable value             | One of the following options is selected in the <b>Assign simulation process variable</b> parameter (→ 153): <ul style="list-style-type: none"> <li>▪ Mass flow</li> <li>▪ Volume flow</li> <li>▪ Corrected volume flow</li> <li>▪ Density</li> <li>▪ Reference density</li> <li>▪ Temperature</li> <li>▪ Dynamic viscosity *</li> <li>▪ Kinematic viscosity *</li> <li>▪ Temp. compensated dynamic viscosity *</li> <li>▪ Temp. compensated kinematic viscosity *</li> <li>▪ Concentration *</li> <li>▪ Target mass flow *</li> <li>▪ Carrier mass flow *</li> </ul> | Enter the simulation value for the selected process variable.  | Depends on the process variable selected  | 0               |
| Status input simulation            | –   | Switch simulation of the status input on and off.  | <ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ On</li> </ul>   | Off             |
| Input signal level                 | In the <b>Status input simulation</b> parameter, the <b>On</b> option is selected.  | Select the signal level for the simulation of the status input.  | <ul style="list-style-type: none"> <li>▪ High</li> <li>▪ Low</li> </ul>                                       | High            |
| Current input 1 to n simulation    | –   | Switch simulation of the current input on and off.   | <ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ On</li> </ul>   | Off             |
| Value current input 1 to n         | In the <b>Current input 1 to n simulation</b> parameter, the <b>On</b> option is selected.  | Enter the current value for simulation.  | 0 to 22.5 mA  | 0 mA            |
| Current output 1 to n simulation   | –   | Switch the simulation of the current output on and off.  | <ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ On</li> </ul>   | Off             |
| Value current output 1 to n        | In the <b>Current output 1 to n simulation</b> parameter, the <b>On</b> option is selected.   | Enter the current value for simulation.  | 3.59 to 22.5 mA   | 3.59 mA         |
| Frequency output simulation 1 to n | In the <b>Operating mode</b> parameter, the <b>Frequency</b> option is selected.  | Switch the simulation of the frequency output on and off.  | <ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ On</li> </ul>   | Off             |
| Frequency value 1 to n             | In the <b>Frequency output simulation 1 to n</b> parameter, the <b>On</b> option is selected.   | Enter the frequency value for the simulation.  | 0.0 to 12 500.0 Hz  | 0.0 Hz          |
| Pulse output simulation 1 to n     | In the <b>Operating mode</b> parameter, the <b>Pulse</b> option is selected.  | Set and switch off the pulse output simulation.<br> For <b>Fixed value</b> option: <b>Pulse width</b> parameter (→ 110) defines the pulse width of the pulses output. | <ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ Fixed value</li> <li>▪ Down-counting value</li> </ul> | Off             |
| Pulse value 1 to n                 | In the <b>Pulse output simulation 1 to n</b> parameter, the <b>Down-counting value</b> option is selected.  | Enter the number of pulses for simulation.   | 0 to 65 535   | 0               |
| Switch output simulation 1 to n    | In the <b>Operating mode</b> parameter, the <b>Switch</b> option is selected.   | Switch the simulation of the switch output on and off.   | <ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ On</li> </ul>   | Off             |
| Switch status 1 to n               | –   | Select the status of the status output for the simulation.   | <ul style="list-style-type: none"> <li>▪ Open</li> <li>▪ Closed</li> </ul>                                    | Open            |
| Relay output 1 to n simulation     | –   | Switch simulation of the relay output on and off.  | <ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ On</li> </ul>   | Off             |

| Parameter                   | Prerequisite  | Description  | Selection / User entry / User interface   | Factory setting |
|-----------------------------|---|--|---|-----------------|
| Switch status 1 to n        | The <b>On</b> option is selected in the <b>Switch output simulation 1 to n</b> parameter parameter. | Select status of the relay output for the simulation.  | <ul style="list-style-type: none"> <li>▪ Open</li> <li>▪ Closed</li> </ul>  | Open            |
| Pulse output simulation     | –   | Set and switch off the pulse output simulation.<br> For <b>Fixed value</b> option: <b>Pulse width</b> parameter defines the pulse width of the pulses output. | <ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ Fixed value</li> <li>▪ Down-counting value</li> </ul>                   | Off             |
| Pulse value                 | In the <b>Pulse output simulation</b> parameter, the <b>Down-counting value</b> option is selected. | Set and switch off the pulse output simulation.  | 0 to 65535  | 0               |
| Device alarm simulation     | –   | Switch the device alarm on and off.  | <ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ On</li> </ul>   | Off             |
| Diagnostic event category   | –   | Select a diagnostic event category.  | <ul style="list-style-type: none"> <li>▪ Sensor</li> <li>▪ Electronics</li> <li>▪ Configuration</li> <li>▪ Process</li> </ul>   | Process         |
| Diagnostic event simulation | –   | Select a diagnostic event to simulate this event.  | <ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ Diagnostic event picklist (depends on the category selected)</li> </ul> | Off             |
| Logging interval            | –   | Define the logging interval tlog for data logging. This value defines the time interval between the individual data points in the memory.  | 1.0 to 3 600.0 s  | –               |

\* Visibility depends on order options or device settings

## 10.7 Protecting settings from unauthorized access

The following write protection options exist in order to protect the configuration of the measuring device from unintentional modification:


- Protect access to parameters via access code →  155
- Protect access to local operation via key locking →  73
- Protect access to measuring device via write protection switch →  157



### 10.7.1 Write protection via access code

The effects of the user-specific access code are as follows:




- Via local operation, the parameters for the measuring device configuration are write-protected and their values can no longer be changed.
- Device access is protected via the Web browser, as are the parameters for the measuring device configuration.
- Device access is protected via FieldCare or DeviceCare (via CDI-RJ45 service interface), as are the parameters for the measuring device configuration.

#### Defining the access code via local display

1. Navigate to the **Define access code** parameter (→  150).
2. Define a max. 16-digit character string comprising numbers, letters and special characters as the access code.


3. Enter the access code again in the **Confirm access code** parameter (→  150) to confirm the code.
  - ↳ The -symbol appears in front of all write-protected parameters.

The device automatically locks the write-protected parameters again if a key is not pressed for 10 minutes in the navigation and editing view. The device locks the write-protected parameters automatically after 60 s if the user skips back to the operational display mode from the navigation and editing view.



-  If parameter write protection is activated via an access code, it can also only be deactivated via this access code →  72.
- The user role with which the user is currently logged on via the local display is indicated by the →  72 **Access status** parameter. Navigation path: Operation → Access status


### Parameters which can always be modified via the local display

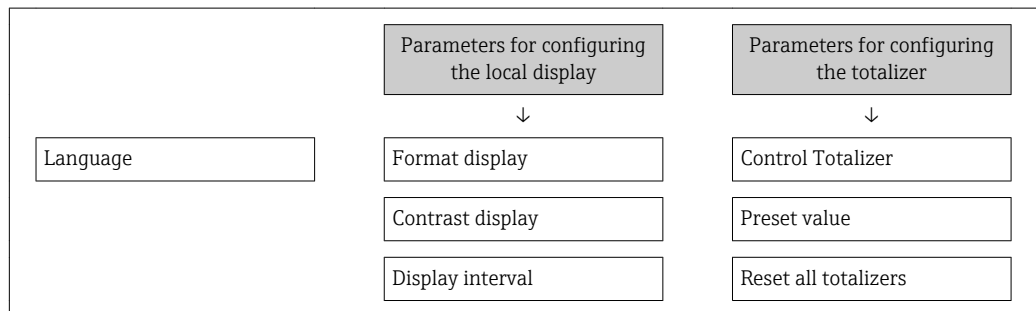

Certain parameters that do not affect the measurement are excepted from parameter write protection via the local display. Despite the user-specific access code, they can always be modified, even if the other parameters are locked.



### Defining the access code via the Web browser

1. Navigate to the **Define access code** parameter (→  150).
2. Define a max. 16-digit numeric code as an access code.
3. Enter the access code again in the **Confirm access code** parameter (→  150) to confirm the code.
  - ↳ The Web browser switches to the login page.

 If no action is performed for 10 minutes, the Web browser automatically returns to the login page.


-  If parameter write protection is activated via an access code, it can also only be deactivated via this access code →  72.
- The user role with which the user is currently logged on via Web browser is indicated by the **Access status** parameter. Navigation path: Operation → Access status

### Resetting the access code

If you misplace the user-specific access code, it is possible to reset the code to the factory setting. A reset code must be entered for this purpose. The user-specific access code can then be defined again afterwards.

### Via Web browser, FieldCare, DeviceCare (via CDI-RJ45 service interface), fieldbus

 For a reset code, contact your Endress+Hauser service organization.

1. Navigate to the **Reset access code** parameter (→  151).

2. Enter the reset code.

- ↳ The access code has been reset to the factory setting **0000**. It can be redefined → ☰ 155.

### 10.7.2 Write protection via write protection switch

Unlike parameter write protection via a user-specific access code, this allows write access to the entire operating menu - except for the **"Contrast display" parameter** - to be locked.

The parameter values are now read only and cannot be edited any more (exception **"Contrast display" parameter**):

- Via local display
- Via HART protocol


#### Proline 500 – digital

**⚠ WARNING**


**Excessive tightening torque applied to the fixing screws!**


Risk of damaging the plastic transmitter.

- ▶ Tighten the fixing screws as per the tightening torque: 2 Nm (1.5 lbf ft)

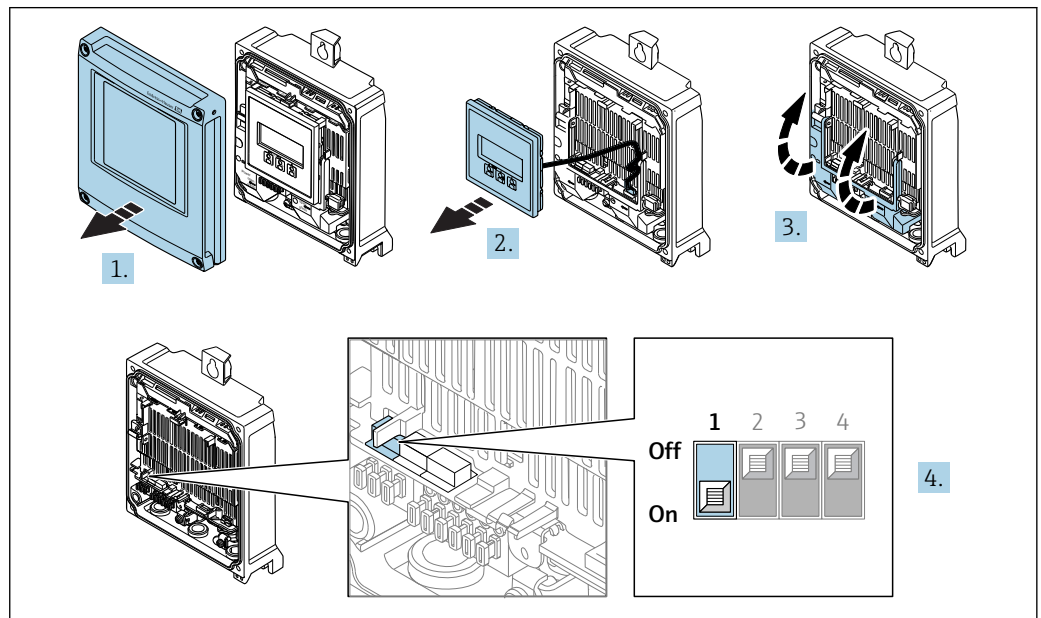


A0029673


1. Open the housing cover.
2. Remove the display module.
3. Fold open the terminal cover.
4. Setting the write protection (WP) switch on the main electronics module to the **ON** position enables hardware write protection.
  - ↳ In the **Locking status** parameter the **Hardware locked** option is displayed → ☰ 159. In addition, on the local display the -symbol appears in front of the parameters in the header of the operational display and in the navigation view.

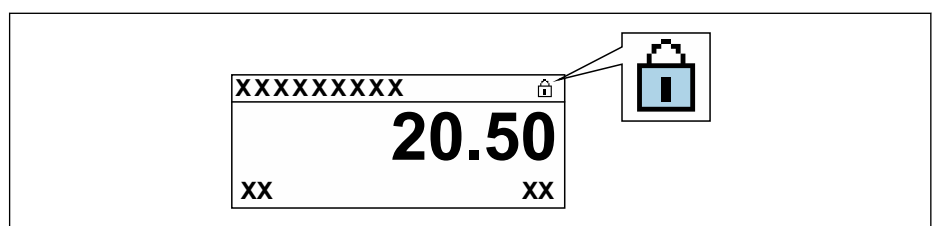


A0029425


5. Setting the write protection (WP) switch on the main electronics module to the **OFF** position (factory setting) disables hardware write protection.
  - ↳ No option is displayed in the **Locking status** parameter → 159. On the local display, the -symbol disappears from in front of the parameters in the header of the operational display and in the navigation view.


### Proline 500

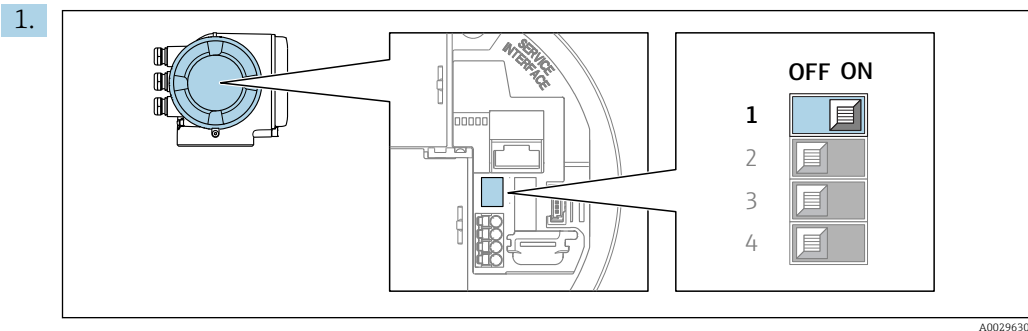

Setting the write protection (WP) switch on the main electronics module to the **ON** position enables hardware write protection.

- ↳ In the **Locking status** parameter the **Hardware locked** option is displayed → 159. In addition, on the local display the -symbol appears in front of the parameters in the header of the operational display and in the navigation view.

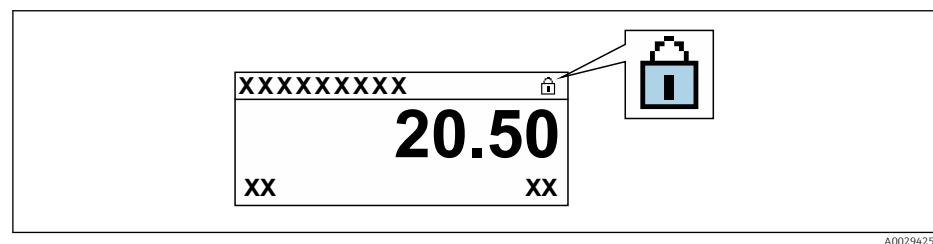

2. Setting the write protection (WP) switch on the main electronics module to the **OFF** position (factory setting) disables hardware write protection.
  - ↳ No option is displayed in the **Locking status** parameter → 159. On the local display, the -symbol disappears from in front of the parameters in the header of the operational display and in the navigation view.


## 11 Operation

### 11.1 Reading the device locking status


Device active write protection: **Locking status** parameter



Operation → Locking status

*Function scope of the "Locking status" parameter*

| Options            | Description   |
|--------------------|---|
| None               | The access status displayed in the <b>Access status</b> parameter applies →  72. Only appears on local display.  |
| Hardware locked    | The DIP switch for hardware locking is activated on the PCB board. This locks write access to the parameters (e.g. via local display or operating tool) .   |
| SIL locked         | The SIL mode is enabled. This locks write access to the parameters (e.g. via local display or operating tool).  |
| Temporarily locked | Write access to the parameters is temporarily locked on account of internal processes running in the device (e.g. data upload/download, reset etc.). Once the internal processing has been completed, the parameters can be changed once again. |



### 11.2 Adjusting the operating language

 Detailed information:

- To configure the operating language →  94
- For information on the operating languages supported by the measuring device →  225

### 11.3 Configuring the display

Detailed information:





- On the basic settings for the local display →  127
- On the advanced settings for the local display →  141

### 11.4 Reading measured values

With the **Measured values** submenu, it is possible to read all the measured values.

#### Navigation

"Diagnostics" menu → Measured values

|                      |   |
|----------------------|---|
| ▶ Measured values    |   |
| ▶ Measured variables | →  160 |
| ▶ Input values       | →  163 |
| ▶ Output values      | →  164 |
| ▶ Totalizer          | →  162 |

### 11.4.1 "Measured variables" submenu

The **Measured variables** submenu contains all the parameters needed to display the current measured values for each process variable.

#### Navigation





"Diagnostics" menu → Measured values → Measured variables






| ► Measured variables                  |         |
|---------------------------------------|---------|
| Mass flow                             | → ⓘ 160 |
| Volume flow                           | → ⓘ 160 |
| Corrected volume flow                 | → ⓘ 161 |
| Density                               | → ⓘ 161 |
| Reference density                     | → ⓘ 161 |
| Temperature                           | → ⓘ 161 |
| Pressure value                        | → ⓘ 161 |
| Dynamic viscosity                     | → ⓘ 161 |
| Kinematic viscosity                   | → ⓘ 161 |
| Temp. compensated dynamic viscosity   | → ⓘ 161 |
| Temp. compensated kinematic viscosity | → ⓘ 161 |
| Concentration                         | → ⓘ 162 |
| Target mass flow                      | → ⓘ 162 |
| Carrier mass flow                     | → ⓘ 162 |

#### Parameter overview with brief description

| Parameter   | Prerequisite | Description   | User interface               |
|-------------|--------------|---|------------------------------|
| Mass flow   | –            | Displays the mass flow currently measured.<br><i>Dependency</i><br>The unit is taken from the <b>Mass flow unit</b> parameter (→ ⓘ 97).       | Signed floating-point number |
| Volume flow | –            | Displays the volume flow currently calculated.<br><i>Dependency</i><br>The unit is taken from the <b>Volume flow unit</b> parameter (→ ⓘ 97). | Signed floating-point number |



| Parameter                             | Prerequisite   | Description  | User interface               |
|---------------------------------------|--|--|------------------------------|
| Corrected volume flow                 | –  | Displays the corrected volume flow currently calculated.<br><i>Dependency</i><br>The unit is taken from the <b>Corrected volume flow unit</b> parameter (→ 97).                            | Signed floating-point number |
| Density                               | –  | Shows the density currently measured.<br><i>Dependency</i><br>The unit is taken from the <b>Density unit</b> parameter (→ 97).   | Signed floating-point number |
| Reference density                     | –  | Displays the reference density currently calculated.<br><i>Dependency</i><br>The unit is taken from the <b>Reference density unit</b> parameter (→ 97).                                    | Signed floating-point number |
| Temperature                           | –  | Shows the medium temperature currently measured.<br><i>Dependency</i><br>The unit is taken from the <b>Temperature unit</b> parameter (→ 98).  | Signed floating-point number |
| Pressure value                        | –  | Displays either a fixed or external pressure value.<br><i>Dependency</i><br>The unit is taken from the <b>Pressure unit</b> parameter (→ 98).  | Signed floating-point number |
| Dynamic viscosity                     | For the following order code: "Application package", option EG "Viscosity"<br> The software options currently enabled are displayed in the <b>Software option overview</b> parameter. | Displays the dynamic viscosity currently calculated.<br><i>Dependency</i><br>The unit is taken from the <b>Dynamic viscosity unit</b> parameter.   | Signed floating-point number |
| Kinematic viscosity                   | For the following order code: "Application package", option EG "Viscosity"<br> The software options currently enabled are displayed in the <b>Software option overview</b> parameter. | Displays the kinematic viscosity currently calculated.<br><i>Dependency</i><br>The unit is taken from the <b>Kinematic viscosity unit</b> parameter.                                       | Signed floating-point number |
| Temp. compensated dynamic viscosity   | For the following order code: "Application package", option EG "Viscosity"<br> The software options currently enabled are displayed in the <b>Software option overview</b> parameter. | Displays the temperature compensation currently calculated for the viscosity.<br><i>Dependency</i><br>The unit is taken from the <b>Dynamic viscosity unit</b> parameter.                  | Signed floating-point number |
| Temp. compensated kinematic viscosity | For the following order code: "Application package", option EG "Viscosity"<br> The software options currently enabled are displayed in the <b>Software option overview</b> parameter. | Displays the temperature compensation currently calculated for the kinetic viscosity.<br><i>Dependency</i><br>The unit is taken from the <b>Kinematic viscosity unit</b> parameter (0578). | Signed floating-point number |


| Parameter         | Prerequisite  | Description   | User interface               |
|-------------------|---|---|------------------------------|
| Concentration     | For the following order code: "Application package", option <b>ED</b> "Concentration"<br> The software options currently enabled are displayed in the <b>Software option overview</b> parameter.   | Displays the concentration currently calculated.<br><i>Dependency</i><br>The unit is taken from the <b>Concentration unit</b> parameter.  | Signed floating-point number |
| Target mass flow  | With the following conditions:<br><ul style="list-style-type: none"> <li>Order code for "Application package", option <b>ED</b> "Concentration"</li> <li>The <b>WT-%</b> option or the <b>User conc.</b> option is selected in the <b>Concentration unit</b> parameter.</li> </ul>  The software options currently enabled are displayed in the <b>Software option overview</b> parameter. | Displays the target fluid mass flow currently measured.<br><i>Dependency</i><br>The unit is taken from the <b>Mass flow unit</b> parameter (→  97).  | Signed floating-point number |
| Carrier mass flow | With the following conditions:<br><ul style="list-style-type: none"> <li>Order code for "Application package", option <b>ED</b> "Concentration"</li> <li>The <b>WT-%</b> option or the <b>User conc.</b> option is selected in the <b>Concentration unit</b> parameter.</li> </ul>  The software options currently enabled are displayed in the <b>Software option overview</b> parameter. | Displays the carrier fluid mass flow currently measured.<br><i>Dependency</i><br>The unit is taken from the <b>Mass flow unit</b> parameter (→  97). | Signed floating-point number |

### 11.4.2 "Totalizer" submenu



The **Totalizer** submenu contains all the parameters needed to display the current measured values for every totalizer.

#### Navigation

"Diagnostics" menu → Measured values → Totalizer

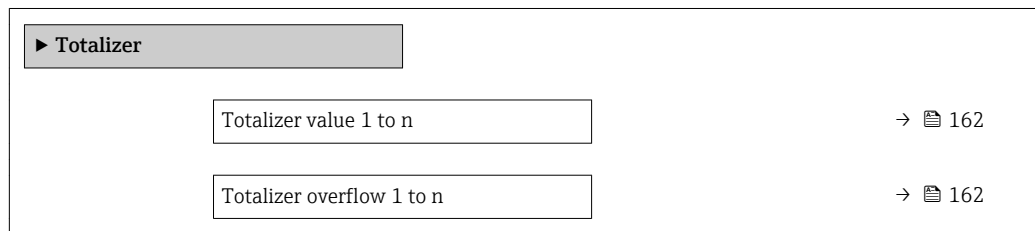

#### Parameter overview with brief description


| Parameter                 | Prerequisite   | Description                                   | User interface               |
|---------------------------|--|---|------------------------------|
| Totalizer value 1 to n    | A process variable is selected in the <b>Assign process variable</b> parameter (→  140) of the <b>Totalizer 1 to n</b> submenu. | Displays the current totalizer counter value. | Signed floating-point number |
| Totalizer overflow 1 to n | A process variable is selected in the <b>Assign process variable</b> parameter (→  140) of the <b>Totalizer 1 to n</b> submenu. | Displays the current totalizer overflow.      | Integer with sign            |

### 11.4.3 "Input values" submenu

The **Input values** submenu guides you systematically to the individual input values.

#### Navigation

"Diagnostics" menu → Measured values → Input values

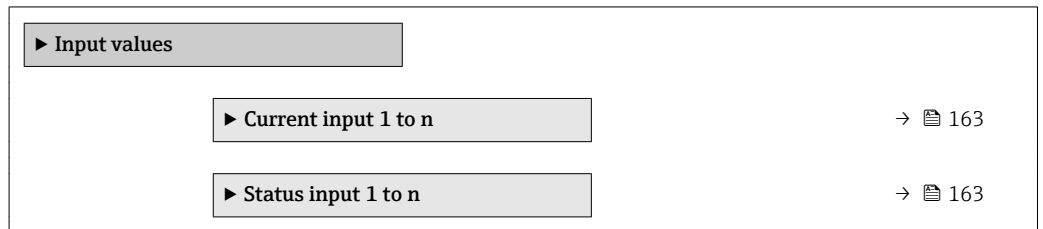


#### Input values of current input

The **Current input 1 to n** submenu contains all the parameters needed to display the current measured values for every current input.

#### Navigation

"Diagnostics" menu → Measured values → Input values → Current input 1 to n

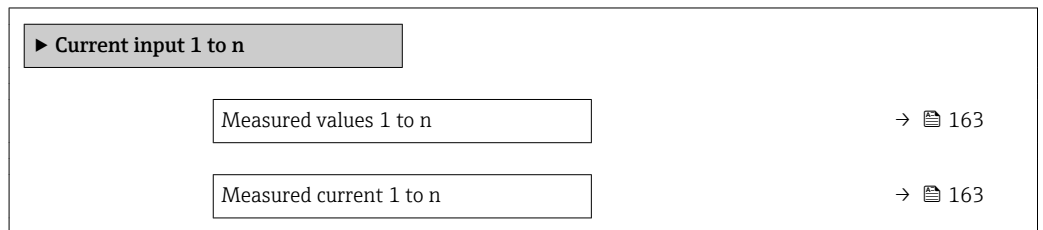

#### Parameter overview with brief description


| Parameter               | Description                                      | User interface               |
|-------------------------|--|------------------------------|
| Measured values 1 to n  | Displays the current input value.                | Signed floating-point number |
| Measured current 1 to n | Displays the current value of the current input. | 0 to 22.5 mA                 |

#### Input values of status input

The **Status input 1 to n** submenu contains all the parameters needed to display the current measured values for every status input.

#### Navigation

"Diagnostics" menu → Measured values → Input values → Status input 1 to n

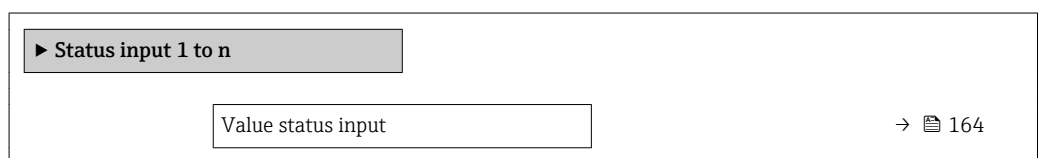

**Parameter overview with brief description**

| Parameter          | Description                           | User interface  |
|--------------------|---------------------------------------|---|
| Value status input | Shows the current input signal level. | <ul style="list-style-type: none"> <li>▪ High</li> <li>▪ Low</li> </ul> |

**11.4.4 Output values**

The **Output values** submenu contains all the parameters needed to display the current measured values for every output.

**Navigation**

"Diagnostics" menu → Measured values → Output values

|   |       |
|---|-------|
| ▶ <b>Output values</b>                        |       |
| ▶ <b>Current output 1 to n</b>                | → 164 |
| ▶ <b>Pulse/frequency/switch output 1 to n</b> | → 164 |
| ▶ <b>Relay output 1 to n</b>                  | → 165 |
| ▶ <b>Double pulse output</b>                  | → 166 |

**Output values of current output**

The **Value current output** submenu contains all the parameters needed to display the current measured values for every current output.

**Navigation**

"Diagnostics" menu → Measured values → Output values → Value current output 1 to n

|                                |       |
|--------------------------------|-------|
| ▶ <b>Current output 1 to n</b> |       |
| Output current 1 to n          | → 164 |
| Measured current 1 to n        | → 164 |

**Parameter overview with brief description**

| Parameter        | Description   | User interface  |
|------------------|---|-----------------|
| Output current 1 | Displays the current value currently calculated for the current output. | 3.59 to 22.5 mA |
| Measured current | Displays the current value currently measured for the current output.   | 0 to 30 mA      |

**Output values for pulse/frequency/switch output**

The **Pulse/frequency/switch output 1 to n** submenu contains all the parameters needed to display the current measured values for every pulse/frequency/switch output.

**Navigation**

"Diagnostics" menu → Measured values → Output values → Pulse/frequency/switch output 1 to n

▶ Pulse/frequency/switch output 1 to n

|                         |        |
|-------------------------|--------|
| Output frequency 1 to n | →  165 |
| Pulse output 1 to n     | →  165 |
| Switch status 1 to n    | →  165 |

**Parameter overview with brief description**

| Parameter               | Prerequisite   | Description   | User interface   |
|-------------------------|--|---|--|
| Output frequency 1 to n | In the <b>Operating mode</b> parameter, the <b>Frequency</b> option is selected. | Displays the value currently measured for the frequency output. | 0.0 to 12 500.0 Hz   |
| Pulse output 1 to n     | In the <b>Operating mode</b> parameter, the <b>Pulse</b> option is selected.     | Displays the pulse frequency currently output.                  | Positive floating-point number   |
| Switch status 1 to n    | The <b>Switch</b> option is selected in the <b>Operating mode</b> parameter.     | Displays the current switch output status.                      | <ul style="list-style-type: none"> <li>■ Open</li> <li>■ Closed</li> </ul> |

**Output values for relay output**

The **Relay output 1 to n** submenu contains all the parameters needed to display the current measured values for every relay output.

**Navigation**

"Diagnostics" menu → Measured values → Output values → Relay output 1 to n

▶ Relay output 1 to n

|                           |        |
|---------------------------|--------|
| Switch status             | →  165 |
| Switch cycles             | →  165 |
| Max. switch cycles number | →  165 |

**Parameter overview with brief description**


| Parameter                 | Description   | User interface   |
|---------------------------|---|--|
| Switch status             | Shows the current relay switch status.                | <ul style="list-style-type: none"> <li>■ Open</li> <li>■ Closed</li> </ul> |
| Switch cycles             | Shows number of all performed switch cycles.          | Positive integer   |
| Max. switch cycles number | Shows the maximal number of guaranteed switch cycles. | Positive integer   |

### Output values for double pulse output

The **Double pulse output** submenu contains all the parameters needed to display the current measured values for every double pulse output.

#### Navigation

"Diagnostics" menu → Measured values → Output values → Double pulse output

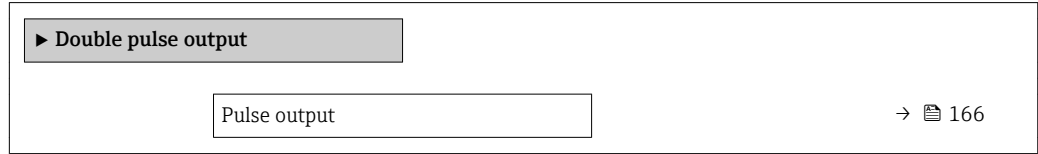

### Parameter overview with brief description

| Parameter    | Description                                 | User interface                 |
|--------------|---|--------------------------------|
| Pulse output | Shows the currently output pulse frequency. | Positive floating-point number |

## 11.5 Adapting the measuring device to the process conditions

The following are available for this purpose:

- Basic settings using the **Setup** menu (→ 📄 94)
- Advanced settings using the **Advanced setup** submenu (→ 📄 136)


## 11.6 Performing a totalizer reset

The totalizers are reset in the **Operation** submenu:


- Control Totalizer
- Reset all totalizers

#### Navigation

"Operation" menu → Totalizer handling

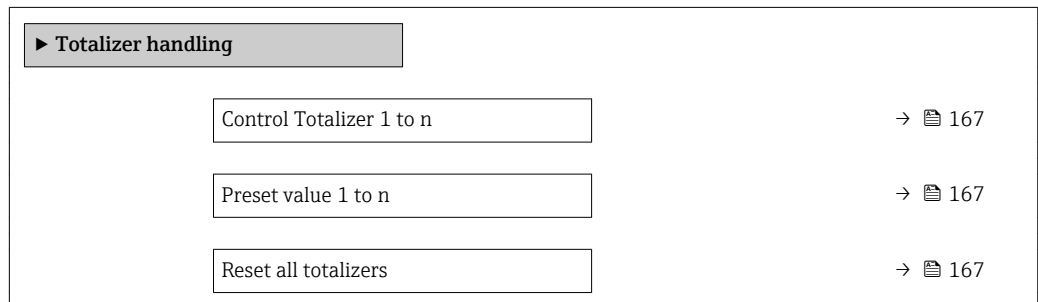

**Parameter overview with brief description**

| Parameter                | Prerequisite   | Description   | Selection / User entry   | Factory setting   |
|--------------------------|--|---|--|---|
| Control Totalizer 1 to n | One of the following options is selected in the <b>Assign process variable</b> parameter (→ ⓘ 140) of the <b>Totalizer 1 to n</b> submenu:<br><ul style="list-style-type: none"> <li>■ Volume flow</li> <li>■ Mass flow</li> <li>■ Corrected volume flow</li> <li>■ Target mass flow<sup>*</sup></li> <li>■ Carrier mass flow<sup>*</sup></li> </ul> | Control totalizer value.  | <ul style="list-style-type: none"> <li>■ Totalize</li> <li>■ Reset + hold</li> <li>■ Preset + hold</li> <li>■ Reset + totalize</li> <li>■ Preset + totalize</li> <li>■ Hold</li> </ul> | Totalize  |
| Preset value 1 to n      | One of the following options is selected in the <b>Assign process variable</b> parameter (→ ⓘ 140) of the <b>Totalizer 1 to n</b> submenu:<br><ul style="list-style-type: none"> <li>■ Volume flow</li> <li>■ Mass flow</li> <li>■ Corrected volume flow</li> <li>■ Target mass flow<sup>*</sup></li> <li>■ Carrier mass flow<sup>*</sup></li> </ul> | Specify start value for totalizer.<br><i>Dependency</i><br> The unit of the selected process variable is specified for the totalizer in the <b>Unit totalizer</b> parameter (→ ⓘ 140). | Signed floating-point number   | Country-specific:<br><ul style="list-style-type: none"> <li>■ 0 kg</li> <li>■ 0 lb</li> </ul> |
| Reset all totalizers     | –  | Reset all totalizers to 0 and start.  | <ul style="list-style-type: none"> <li>■ Cancel</li> <li>■ Reset + totalize</li> </ul>   | Cancel  |

\* Visibility depends on order options or device settings

**11.6.1 Function scope of the "Control Totalizer" parameter**


| Options           | Description   |
|-------------------|---|
| Totalize          | The totalizer is started or continues running.  |
| Reset + hold      | The totaling process is stopped and the totalizer is reset to 0.  |
| Preset + hold     | The totaling process is stopped and the totalizer is set to its defined start value from the <b>Preset value</b> parameter.   |
| Reset + totalize  | The totalizer is reset to 0 and the totaling process is restarted.  |
| Preset + totalize | The totalizer is set to the defined start value from the <b>Preset value</b> parameter and the totaling process is restarted. |
| Hold              | Totalizing is stopped.  |

**11.6.2 Function scope of the "Reset all totalizers" parameter**

| Options          | Description  |
|------------------|--|
| Cancel           | No action is executed and the user exits the parameter.  |
| Reset + totalize | Resets all totalizers to 0 and restarts the totaling process. This deletes all the flow values previously totalized. |


**11.7 Showing data logging**

The **Extended HistorOM** application package must be enabled in the device (order option) for the **Data logging** submenu to appear. This contains all the parameters for the measured value history.

-  Data logging is also available via:
- Plant Asset Management Tool FieldCare → ⓘ 83.
  - Web browser

**Function range**

- A total of 1000 measured values can be stored
- 4 logging channels
- Adjustable logging interval for data logging
- Display of the measured value trend for each logging channel in the form of a chart

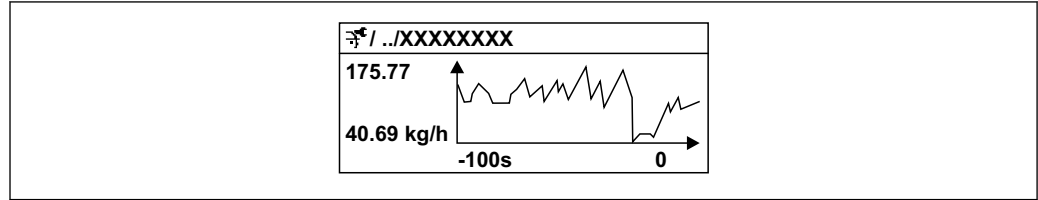

A0016357

39 Chart of a measured value trend

- x-axis: depending on the number of channels selected displays 250 to 1000 measured values of a process variable.
- y-axis: displays the approximate measured value span and constantly adapts this to the ongoing measurement.

**i** If the length of the logging interval or the assignment of the process variables to the channels is changed, the content of the data logging is deleted.

**Navigation**

"Diagnostics" menu → Data logging

▶ Data logging


|                         |         |
|-------------------------|---------|
| Assign channel 1        | → ⓘ 170 |
| Assign channel 2        | → ⓘ 171 |
| Assign channel 3        | → ⓘ 171 |
| Assign channel 4        | → ⓘ 171 |
| Logging interval        | → ⓘ 171 |
| Clear logging data      | → ⓘ 171 |
| Data logging            | → ⓘ 171 |
| Logging delay           | → ⓘ 171 |
| Data logging control    | → ⓘ 171 |
| Data logging status     | → ⓘ 172 |
| Entire logging duration | → ⓘ 172 |
| ▶ Display channel 1     |         |
| ▶ Display channel 2     |         |









▶ Display channel 3

▶ Display channel 4

Parameter overview with brief description

| Parameter        | Prerequisite  | Description                                   | Selection / User entry / User interface  | Factory setting |
|------------------|---|---|--|-----------------|
| Assign channel 1 | <p>The <b>Extended HistorOM</b> application package is available.</p> <p> The software options currently enabled are displayed in the <b>Software option overview</b> parameter.</p> | Assign a process variable to logging channel. | <ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ Mass flow</li> <li>▪ Volume flow</li> <li>▪ Corrected volume flow</li> <li>▪ Target mass flow *</li> <li>▪ Carrier mass flow *</li> <li>▪ Target volume flow</li> <li>▪ Carrier volume flow</li> <li>▪ Target corrected volume flow</li> <li>▪ Carrier corrected volume flow</li> <li>▪ Density</li> <li>▪ Reference density</li> <li>▪ Reference density alternative</li> <li>▪ GSV flow</li> <li>▪ GSV flow alternative</li> <li>▪ NSV flow</li> <li>▪ NSV flow alternative</li> <li>▪ S&amp;W volume flow</li> <li>▪ Water cut</li> <li>▪ Oil density</li> <li>▪ Water density</li> <li>▪ Oil mass flow</li> <li>▪ Water mass flow</li> <li>▪ Oil volume flow</li> <li>▪ Water volume flow</li> <li>▪ Oil corrected volume flow</li> <li>▪ Water corrected volume flow</li> <li>▪ Concentration *</li> <li>▪ Dynamic viscosity *</li> <li>▪ Kinematic viscosity *</li> <li>▪ Temp. compensated dynamic viscosity *</li> <li>▪ Temp. compensated kinematic viscosity *</li> <li>▪ Temperature</li> <li>▪ Carrier pipe temperature *</li> <li>▪ Electronic temperature</li> <li>▪ Oscillation frequency 0</li> <li>▪ Oscillation frequency 1 *</li> <li>▪ Frequency fluctuation 0</li> <li>▪ Frequency fluctuation 1 *</li> <li>▪ Oscillation amplitude *</li> <li>▪ Oscillation amplitude 1 *</li> </ul> | Off             |

| Parameter            | Prerequisite  | Description  | Selection / User entry / User interface   | Factory setting |
|----------------------|---|--|---|-----------------|
|                      |   |  | <ul style="list-style-type: none"> <li>▪ Frequency fluctuation 0</li> <li>▪ Oscillation damping 0</li> <li>▪ Oscillation damping 1 *</li> <li>▪ Oscillation damping fluctuation 0</li> <li>▪ Oscillation damping fluctuation 1 *</li> <li>▪ Signal asymmetry</li> <li>▪ Exciter current 0 *</li> <li>▪ Exciter current 1 *</li> <li>▪ HBSI</li> <li>▪ Current output 1</li> <li>▪ Current output 2 *</li> <li>▪ Current output 3 *</li> <li>▪ Current output 4 *</li> <li>▪ Pressure</li> </ul> |                 |
| Assign channel 2     | <p>The <b>Extended HistoROM</b> application package is available.</p> <p> The software options currently enabled are displayed in the <b>Software option overview</b> parameter.</p>  | Assign process variable to logging channel.  | Picklist, see <b>Assign channel 1</b> parameter (→  170)   | Off             |
| Assign channel 3     | <p>The <b>Extended HistoROM</b> application package is available.</p> <p> The software options currently enabled are displayed in the <b>Software option overview</b> parameter.</p> | Assign process variable to logging channel.  | Picklist, see <b>Assign channel 1</b> parameter (→  170)   | Off             |
| Assign channel 4     | <p>The <b>Extended HistoROM</b> application package is available.</p> <p> The software options currently enabled are displayed in the <b>Software option overview</b> parameter.</p> | Assign process variable to logging channel.  | Picklist, see <b>Assign channel 1</b> parameter (→  170)   | Off             |
| Logging interval     | The <b>Extended HistoROM</b> application package is available.  | Define the logging interval for data logging. This value defines the time interval between the individual data points in the memory. | 0.1 to 3 600.0 s  | 1.0 s           |
| Clear logging data   | The <b>Extended HistoROM</b> application package is available.  | Clear the entire logging data.   | <ul style="list-style-type: none"> <li>▪ Cancel</li> <li>▪ Clear data</li> </ul>  | Cancel          |
| Data logging         | –   | Select the data logging method.  | <ul style="list-style-type: none"> <li>▪ Overwriting</li> <li>▪ Not overwriting</li> </ul>  | Overwriting     |
| Logging delay        | In the <b>Data logging</b> parameter, the <b>Not overwriting</b> option is selected.  | Enter the time delay for measured value logging.   | 0 to 999 h  | 0 h             |
| Data logging control | In the <b>Data logging</b> parameter, the <b>Not overwriting</b> option is selected.  | Start and stop measured value logging.   | <ul style="list-style-type: none"> <li>▪ None</li> <li>▪ Delete + start</li> <li>▪ Stop</li> </ul>  | None            |

| Parameter               | Prerequisite   | Description                                 | Selection / User entry / User interface  | Factory setting |
|-------------------------|--|---|--|-----------------|
| Data logging status     | In the <b>Data logging</b> parameter, the <b>Not overwriting</b> option is selected. | Displays the measured value logging status. | <ul style="list-style-type: none"><li>▪ Done</li><li>▪ Delay active</li><li>▪ Active</li><li>▪ Stopped</li></ul> | Done            |
| Entire logging duration | In the <b>Data logging</b> parameter, the <b>Not overwriting</b> option is selected. | Displays the total logging duration.        | Positive floating-point number   | 0 s             |

\* Visibility depends on order options or device settings

## 12 Diagnostics and troubleshooting

### 12.1 General troubleshooting


*For local display*

| Error   | Possible causes   | Solution   |
|---|---|--|
| Local display dark and no output signals                                      | Supply voltage does not match the value indicated on the nameplate.   | Apply the correct supply voltage .   |
| Local display dark and no output signals                                      | The polarity of the supply voltage is wrong.  | Correct the polarity.  |
| Local display dark and no output signals                                      | No contact between connecting cables and terminals.   | Check the connection of the cables and correct if necessary.   |
| Local display dark and no output signals                                      | Terminals are not plugged into the I/O electronics module correctly.<br>Terminals are not plugged into the main electronics module correctly. | Check terminals.   |
| Local display dark and no output signals                                      | I/O electronics module is defective.<br>Main electronics module is defective.   | Order spare part → ☰ 199.  |
| Local display dark and no output signals                                      | The connector between the main electronics module and display module is not plugged in correctly.   | Check the connection and correct if necessary.   |
| Local display dark and no output signals                                      | The connecting cable is not plugged in correctly.   | 1. Check the connection of the electrode cable and correct if necessary.<br>2. Check the connection of the coil current cable and correct if necessary.                            |
| Local display is dark, but signal output is within the valid range            | Display is set too bright or too dark.  | <ul style="list-style-type: none"> <li>▪ Set the display brighter by simultaneously pressing ☐ + ☒.</li> <li>▪ Set the display darker by simultaneously pressing ☐ + ☓.</li> </ul> |
| Local display is dark, but signal output is within the valid range            | The cable of the display module is not plugged in correctly.  | Insert the plug correctly into the main electronics module and display module.   |
| Local display is dark, but signal output is within the valid range            | Display module is defective.  | Order spare part → ☰ 199.  |
| Backlighting of local display is red  | Diagnostic event with "Alarm" diagnostic behavior has occurred.   | Take remedial measures   |
| Text on local display appears in a foreign language and cannot be understood. | Incorrect operating language is configured.   | 1. Press ☐ + ☐ for 2 s ("home position").<br>2. Press ☒.<br>3. Set the desired language in the <b>Display language</b> parameter (→ ☰ 147).  |
| Message on local display:<br>"Communication Error"<br>"Check Electronics"     | Communication between the display module and the electronics is interrupted.  | <ul style="list-style-type: none"> <li>▪ Check the cable and the connector between the main electronics module and display module.</li> <li>▪ Order spare part → ☰ 199.</li> </ul> |

*For output signals*

| Error   | Possible causes   | Solution  |
|---|---|---|
| Signal output outside the valid range   | Main electronics module is defective.   | Order spare part → ☰ 199.   |
| Signal output outside the valid current range (< 3.6 mA or > 22 mA)                                     | Main electronics module is defective.<br>I/O electronics module is defective. | Order spare part → ☰ 199.   |
| Device shows correct value on local display, but signal output is incorrect, though in the valid range. | Configuration error   | Check and correct the parameter configuration.  |
| Device measures incorrectly.  | Configuration error or device is operated outside the application.            | 1. Check and correct parameter configuration.<br>2. Observe limit values specified in the "Technical Data". |

*For access*

| Error   | Possible causes   | Solution   |
|---|---|--|
| No write access to parameters                         | Hardware write protection enabled   | Set the write protection switch on main electronics module to the <b>OFF</b> position → ☰ 157.   |
| No write access to parameters                         | Current user role has limited access authorization  | 1. Check user role → ☰ 72.<br>2. Enter correct customer-specific access code → ☰ 72.   |
| No connection via HART protocol                       | Communication resistor missing or incorrectly installed.  | Install the communication resistor (250 Ω) correctly. Observe the maximum load → ☰ 208.  |
| No connection via HART protocol                       | Commubox <ul style="list-style-type: none"> <li>▪ Connected incorrectly</li> <li>▪ Configured incorrectly</li> <li>▪ Drivers not installed correctly</li> <li>▪ USB interface on computer configured incorrectly</li> </ul> | Observe the documentation for the Commubox.<br> FXA195 HART: Document "Technical Information" TI00404F  |
| Not connecting to Web server                          | Web server disabled   | Using the "FieldCare" or "DeviceCare" operating tool, check whether the Web server of the measuring device is enabled, and enable it if necessary → ☰ 79.  |
|   | Incorrect setting for the Ethernet interface of the computer  | 1. Check the properties of the Internet protocol (TCP/IP) → ☰ 75.<br>2. Check the network settings with the IT manager.  |
| Not connecting to Web server                          | Incorrect IP address  | Check the IP address: 192.168.1.212 → ☰ 75   |
| Not connecting to Web server                          | Incorrect WLAN access data  | <ul style="list-style-type: none"> <li>▪ Check WLAN network status.</li> <li>▪ Log on to the device again using WLAN access data.</li> <li>▪ Verify that WLAN is enabled on the measuring device and operating device .</li> </ul>                     |
|   | WLAN communication disabled   | –  |
| Not connecting to Web server, FieldCare or DeviceCare | No WLAN network available   | <ul style="list-style-type: none"> <li>▪ Check if WLAN reception is present: LED on display module is lit blue</li> <li>▪ Check if WLAN connection is enabled: LED on display module flashes blue</li> <li>▪ Switch on instrument function.</li> </ul> |


| Error  | Possible causes  | Solution   |
|--|--|--|
| Network connection not present or unstable   | WLAN network is weak.  | <ul style="list-style-type: none"> <li>▪ Operating device is outside of reception range: Check network status on operating device.</li> <li>▪ To improve network performance, use an external WLAN antenna.</li> </ul> |
|  | Parallel WLAN and Ethernet communication   | <ul style="list-style-type: none"> <li>▪ Check network settings.</li> <li>▪ Temporarily enable only the WLAN as an interface.</li> </ul>   |
| Web browser frozen and operation no longer possible  | Data transfer active   | Wait until data transfer or current action is finished.  |
|  | Connection lost  | <ol style="list-style-type: none"> <li>1. Check cable connection and power supply.</li> <li>2. Refresh the Web browser and restart if necessary.</li> </ol>  |
| Content of Web browser incomplete or difficult to read   | Not using optimum version of Web server.   | <ol style="list-style-type: none"> <li>1. Use the correct Web browser version .</li> <li>2. Clear the Web browser cache and restart the Web browser.</li> </ol>  |
|  | Unsuitable view settings.  | Change the font size/display ratio of the Web browser.   |
| No or incomplete display of contents in the Web browser  | <ul style="list-style-type: none"> <li>▪ JavaScript not enabled</li> <li>▪ JavaScript cannot be enabled</li> </ul> | <ol style="list-style-type: none"> <li>1. Enable JavaScript.</li> <li>2. Enter <code>http://XXX.XXX.X.XXX/basic.html</code> as the IP address.</li> </ol>  |
| Operation with FieldCare or DeviceCare via CDI-RJ45 service interface (port 8000)                              | Firewall of computer or network is preventing communication  | Depending on the settings of the firewall used on the computer or in the network, the firewall must be adapted or disabled to allow FieldCare/DeviceCare access.   |
| Flashing of firmware with FieldCare or DeviceCare via CDI-RJ45 service interface (via port 8000 or TFTP ports) | Firewall of computer or network is preventing communication  | Depending on the settings of the firewall used on the computer or in the network, the firewall must be adapted or disabled to allow FieldCare/DeviceCare access.   |

## 12.2 Diagnostic information via light emitting diodes

### 12.2.1 Transmitter

#### Proline 500 – digital

Different LEDs in the transmitter provide information on the device status.

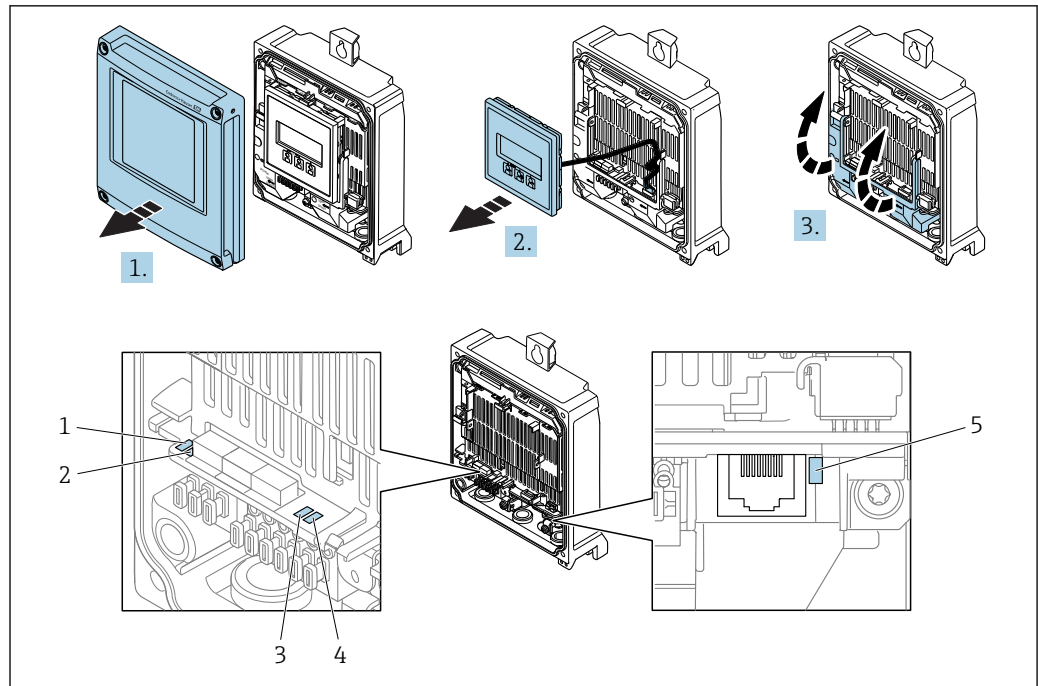

A0029689

- 1 Supply voltage
- 2 Device status
- 3 Not used
- 4 Communication
- 5 Service interface (CDI) active


1. Open the housing cover.
2. Remove the display module.
3. Fold open the terminal cover.

| LED                       | Color              | Meaning   |
|---------------------------|--------------------|---|
| 1 Supply voltage          | Off                | Supply voltage is off or too low.                                   |
|                           | Green              | Supply voltage is ok.   |
| 2 Device status           | Off                | Firmware error  |
|                           | Green              | Device status is ok.  |
|                           | Flashing green     | Device is not configured.   |
|                           | Flashing red       | A diagnostic event with "Warning" diagnostic behavior has occurred. |
|                           | Red                | A diagnostic event with "Alarm" diagnostic behavior has occurred.   |
|                           | Flashing red/green | The device restarts.  |
| 3 Not used                | –                  | –   |
| 4 Communication           | Off                | Communication not active.   |
|                           | White              | Communication active.   |
| 5 Service interface (CDI) | Off                | Not connected or no connection established.                         |
|                           | Yellow             | Connected and connection established.                               |
|                           | Flashing yellow    | Service interface active.   |

**Proline 500**

Different LEDs in the transmitter provide information on the device status.



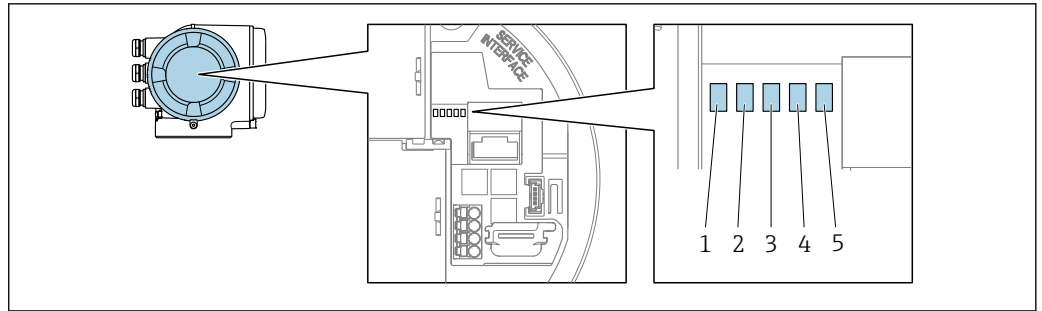

A0029629


- 1 Supply voltage
- 2 Device status
- 3 Not used
- 4 Communication
- 5 Service interface (CDI) active

| LED                       | Color              | Meaning   |
|---------------------------|--------------------|---|
| 1 Supply voltage          | Off                | Supply voltage is off or too low.                                   |
|                           | Green              | Supply voltage is ok.   |
| 2 Device status           | Off                | Firmware error  |
|                           | Green              | Device status is ok.  |
|                           | Flashing green     | Device is not configured.   |
|                           | Flashing red       | A diagnostic event with "Warning" diagnostic behavior has occurred. |
|                           | Red                | A diagnostic event with "Alarm" diagnostic behavior has occurred.   |
|                           | Flashing red/green | The device restarts.  |
| 3 Not used                | -                  | -   |
| 4 Communication           | White              | Communication active.   |
|                           | Off                | Communication not active.   |
| 5 Service interface (CDI) | Off                | Not connected or no connection established.                         |
|                           | Yellow             | Connected and connection established.                               |
|                           | Flashing yellow    | Service interface active.   |

### 12.2.2 Sensor connection housing

#### Proline 500 – digital

Various light emitting diodes (LED) on the ISEM electronics (Intelligent Sensor Electronic Module) in the sensor connection housing provide information on the device status.

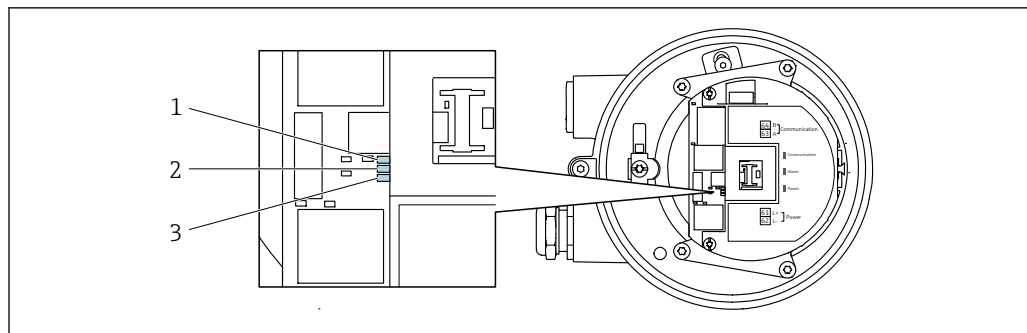

A0029699


- 1 *Communication*
- 2 *Device status*
- 3 *Supply voltage*

| LED              | Color        | Meaning                          |
|------------------|--------------|----------------------------------|
| 1 Communication  | White        | Communication active             |
| 2 Device status  | Red          | Error                            |
|                  | Flashing red | Warning                          |
| 3 Supply voltage | Green        | Supply voltage is ok             |
|                  | Off          | Supply voltage is off or too low |

## 12.3 Diagnostic information on local display

### 12.3.1 Diagnostic message

Faults detected by the self-monitoring system of the measuring device are displayed as a diagnostic message in alternation with the operational display.

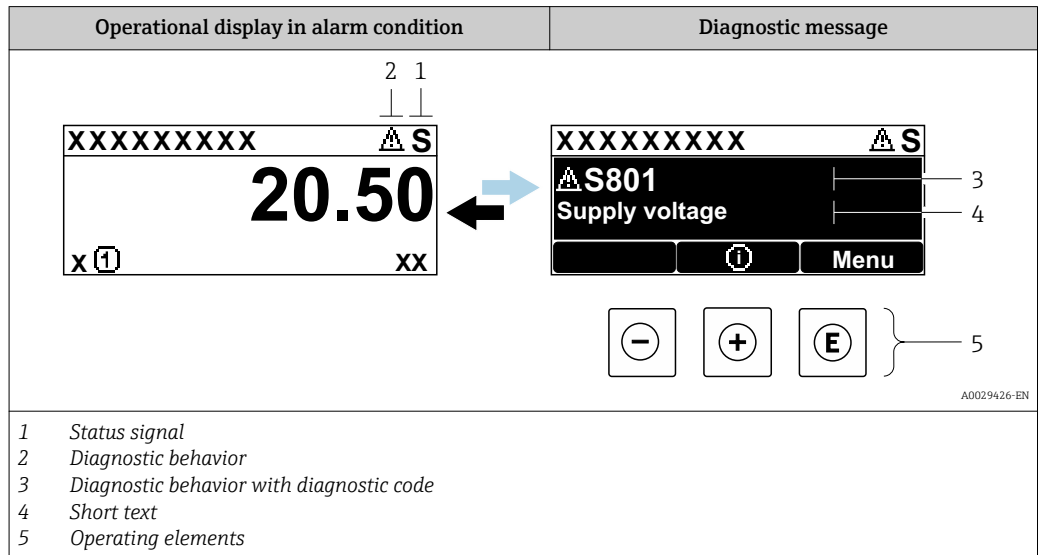

If two or more diagnostic events are pending simultaneously, only the message of the diagnostic event with the highest priority is shown.

- i** Other diagnostic events that have occurred can be displayed in the **Diagnostics** menu:
  - Via parameter
  - Via submenus → 190



#### Status signals

The status signals provide information on the state and reliability of the device by categorizing the cause of the diagnostic information (diagnostic event).

- i** The status signals are categorized according to VDI/VDE 2650 and NAMUR Recommendation NE 107: F = Failure, C = Function Check, S = Out of Specification, M = Maintenance Required


| Symbol   | Meaning   |
|----------|---|
| <b>F</b> | <b>Failure</b><br>A device error has occurred. The measured value is no longer valid.   |
| <b>C</b> | <b>Function check</b><br>The device is in service mode (e.g. during a simulation).  |
| <b>S</b> | <b>Out of specification</b><br>The device is operated: <ul style="list-style-type: none"> <li>▪ Outside its technical specification limits (e.g. outside the process temperature range)</li> <li>▪ Outside of the configuration carried out by the user (e.g. maximum flow in parameter 20 mA value)</li> </ul> |
| <b>M</b> | <b>Maintenance required</b><br>Maintenance is required. The measured value remains valid.   |

### Diagnostic behavior



| Symbol  | Meaning   |
|---|---|
|  | <b>Alarm</b> <ul style="list-style-type: none"> <li>Measurement is interrupted.</li> <li>Signal outputs and totalizers assume the defined alarm condition.</li> <li>A diagnostic message is generated.</li> </ul> |
|  | <b>Warning</b><br>Measurement is resumed. The signal outputs and totalizers are not affected. A diagnostic message is generated.  |

### Diagnostic information

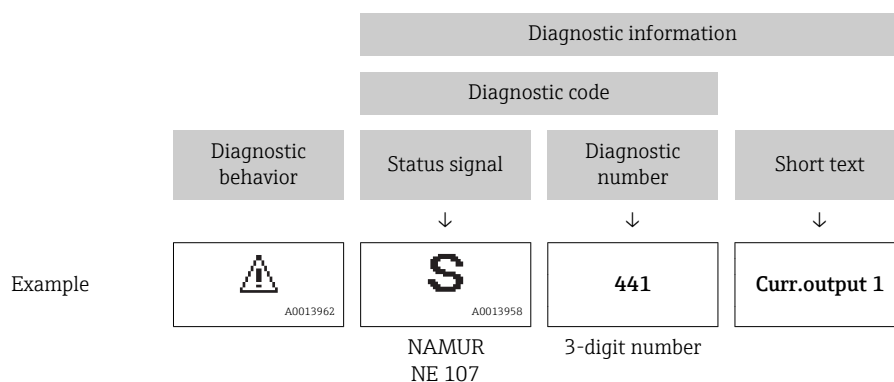
The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault. In addition, the corresponding symbol for the diagnostic behavior is displayed in front of the diagnostic information on the local display.



### Operating elements

| Key   | Meaning   |
|---|---|
|  | <b>Plus key</b><br><i>In a menu, submenu</i><br>Opens the message about remedy information. |
|  | <b>Enter key</b><br><i>In a menu, submenu</i><br>Opens the operating menu.                  |

### 12.3.2 Calling up remedial measures

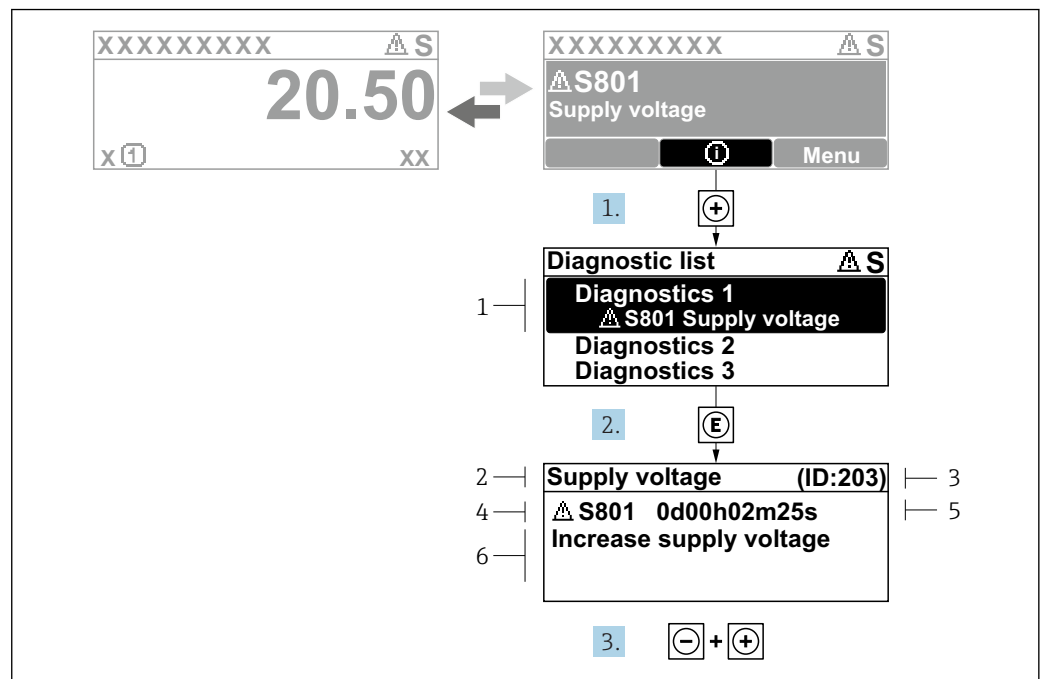

40 Message about remedial measures

- 1 Diagnostic information
- 2 Short text
- 3 Service ID
- 4 Diagnostic behavior with diagnostic code
- 5 Operation time of occurrence
- 6 Remedial measures

1. The user is in the diagnostic message.  
Press  $\oplus$  ( $\text{\textcircled{1}}$  symbol).  
↳ The **Diagnostic list** submenu opens.
2. Select the desired diagnostic event with  $\oplus$  or  $\ominus$  and press  $\text{\textcircled{E}}$ .  
↳ The message about the remedial measures opens.
3. Press  $\ominus + \oplus$  simultaneously.  
↳ The message about the remedial measures closes.


The user is in the **Diagnostics** menu at an entry for a diagnostics event, e.g. in the **Diagnostic list** submenu or **Previous diagnostics** parameter.

1. Press  $\text{\textcircled{E}}$ .  
↳ The message for the remedial measures for the selected diagnostic event opens.
2. Press  $\ominus + \oplus$  simultaneously.  
↳ The message for the remedial measures closes.

## 12.4 Diagnostic information in the Web browser


### 12.4.1 Diagnostic options

Any faults detected by the measuring device are displayed in the Web browser on the home page once the user has logged on.

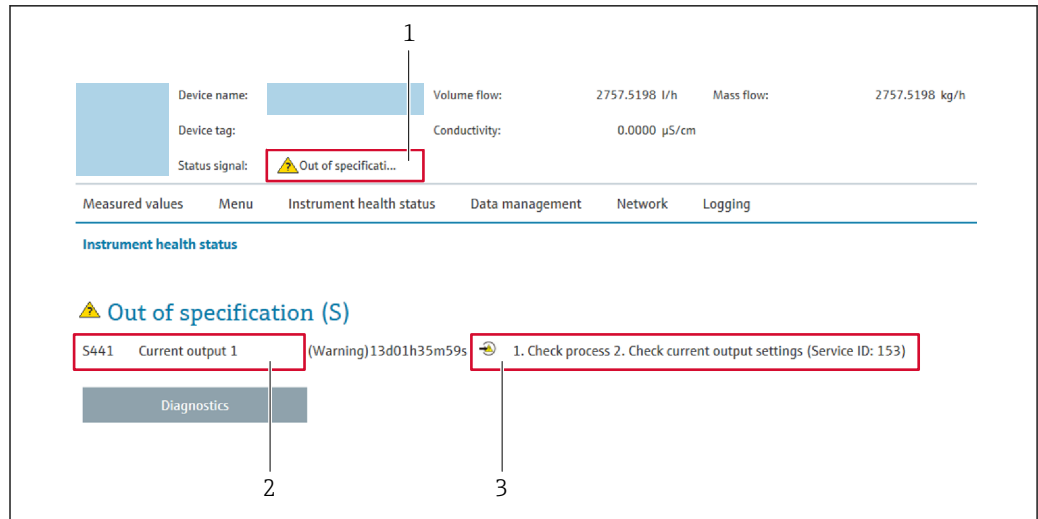





A0031056


- 1 Status area with status signal
- 2 Diagnostic information → 180
- 3 Remedy information with Service ID

-  In addition, diagnostic events which have occurred can be shown in the **Diagnostics** menu:
- Via parameter
  - Via submenu → 190

### Status signals

The status signals provide information on the state and reliability of the device by categorizing the cause of the diagnostic information (diagnostic event).

| Symbol  | Meaning  |
|---|--|
|  | <b>Failure</b><br>A device error has occurred. The measured value is no longer valid.  |
|  | <b>Function check</b><br>The device is in service mode (e.g. during a simulation).   |
|  | <b>Out of specification</b><br>The device is operated: <ul style="list-style-type: none"> <li>▪ Outside its technical specification limits (e.g. outside the process temperature range)</li> <li>▪ Outside of the configuration carried out by the user (e.g. maximum flow in parameter <b>20 mA value</b>)</li> </ul> |
|  | <b>Maintenance required</b><br>Maintenance is required. The measured value is still valid.   |

-  The status signals are categorized in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107.


### 12.4.2 Calling up remedy information

Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly. These measures are displayed in red along with the diagnostic event and the related diagnostic information.

## 12.5 Diagnostic information in DeviceCare or FieldCare

### 12.5.1 Diagnostic options

Any faults detected by the measuring device are displayed on the home page of the operating tool once the connection has been established.

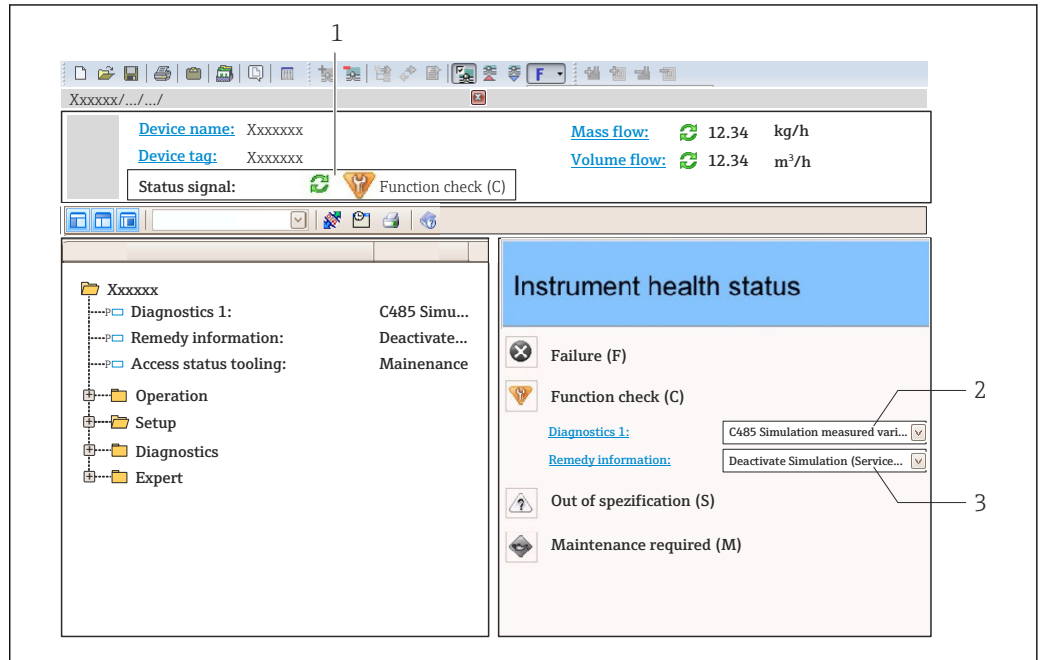


- 1 Status area with status signal → 179
- 2 Diagnostic information → 180
- 3 Remedy information with Service ID

**i** In addition, diagnostic events which have occurred can be shown in the **Diagnostics** menu:

- Via parameter
- Via submenu → 190

### Diagnostic information

The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault. In addition, the corresponding symbol for the diagnostic behavior is displayed in front of the diagnostic information on the local display.

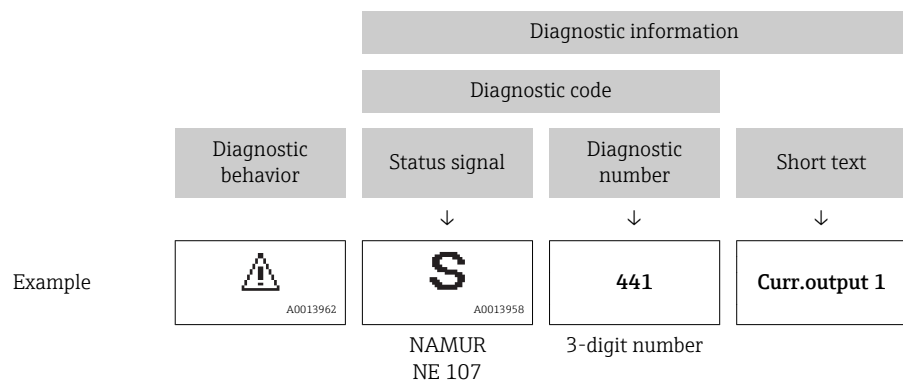

## 12.5.2 Calling up remedy information

Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly:

- On the home page  
Remedy information is displayed in a separate field below the diagnostics information.
- In the **Diagnostics** menu  
Remedy information can be called up in the working area of the user interface.

The user is in the **Diagnostics** menu.


1. Call up the desired parameter.
2. On the right in the working area, mouse over the parameter.
  - ↳ A tool tip with remedy information for the diagnostic event appears.

## 12.6 Adapting the diagnostic information

### 12.6.1 Adapting the diagnostic behavior

Each item of diagnostic information is assigned a specific diagnostic behavior at the factory. The user can change this assignment for specific diagnostic information in the **Diagnostic behavior** submenu.

Expert → System → Diagnostic handling → Diagnostic behavior

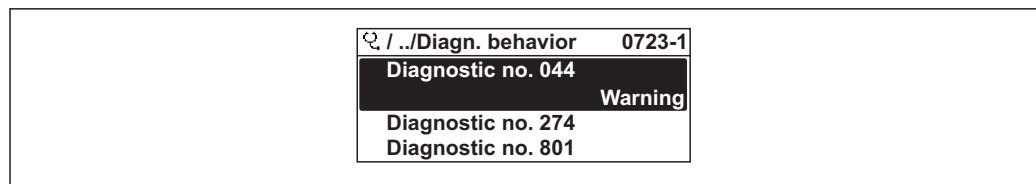

A0014048-EN

41 Taking the example of the local display

You can assign the following options to the diagnostic number as the diagnostic behavior:

| Options            | Description  |
|--------------------|--|
| Alarm              | The device stops measurement. The signal outputs and totalizers assume the defined alarm condition. A diagnostic message is generated.<br>The background lighting changes to red.                            |
| Warning            | The device continues to measure. The signal outputs and totalizers are not affected. A diagnostic message is generated.  |
| Logbook entry only | The device continues to measure. The diagnostic message is displayed only in the <b>Event logbook</b> submenu ( <b>Event list</b> submenu) and is not displayed in alternation with the operational display. |
| Off                | The diagnostic event is ignored, and no diagnostic message is generated or entered.  |

### 12.6.2 Adapting the status signal

Each item of diagnostic information is assigned a specific status signal at the factory. The user can change this assignment for specific diagnostic information in the **Diagnostic event category** submenu.

Expert → Communication → Diagnostic event category





### Available status signals

Configuration as per HART 7 Specification (Condensed Status), in accordance with NAMUR NE107.

| Symbol                              | Meaning  |
|-------------------------------------|--|
| <b>F</b><br><small>A0013956</small> | <b>Failure</b><br>A device error is present. The measured value is no longer valid.  |
| <b>C</b><br><small>A0013959</small> | <b>Function check</b><br>The device is in service mode (e.g. during a simulation).   |
| <b>S</b><br><small>A0013958</small> | <b>Out of specification</b><br>The device is being operated: <ul style="list-style-type: none"> <li>▪ Outside its technical specification limits (e.g. outside the process temperature range)</li> <li>▪ Outside of the configuration carried out by the user (e.g. maximum flow in parameter <b>20 mA value</b>)</li> </ul> |
| <b>M</b><br><small>A0013957</small> | <b>Maintenance required</b><br>Maintenance is required. The measured value is still valid.   |
| <b>N</b><br><small>A0023076</small> | Has no effect on the condensed status.   |

## 12.7 Overview of diagnostic information

 The amount of diagnostic information and the number of measured variables affected increase if the measuring device has one or more application packages.

 In the case of some items of diagnostic information, the status signal and the diagnostic behavior can be changed. Change the diagnostic information →  184

| Diagnostic number           | Short text                   | Remedy instructions  | Status signal [from the factory] | Diagnostic behavior [from the factory] |
|-----------------------------|------------------------------|--|----------------------------------|--|
| <b>Diagnostic of sensor</b> |                              |  |                                  |  |
| 022                         | Temperature sensor defective | 1. Check or replace sensor electronic module (ISEM)<br>2. If available: Check connection cable between sensor and transmitter<br>3. Replace sensor | F                                | Alarm                                  |
| 046                         | Sensor limit exceeded        | 1. Inspect sensor<br>2. Check process condition  | S                                | Alarm <sup>1)</sup>                    |
| 062                         | Sensor connection faulty     | 1. Check or replace sensor electronic module (ISEM)<br>2. If available: Check connection cable between sensor and transmitter<br>3. Replace sensor | F                                | Alarm                                  |
| 063                         | Exciter current faulty       | 1. Check or replace sensor electronic module (ISEM)<br>2. If available: Check connection cable between sensor and transmitter<br>3. Replace sensor | S                                | Alarm                                  |
| 082                         | Data storage                 | 1. Check module connections<br>2. Contact service  | F                                | Alarm                                  |
| 083                         | Memory content               | 1. Restart device<br>2. Restore HistoROM S-DAT backup ('Device reset' parameter)<br>3. Replace HistoROM S-DAT                                      | F                                | Alarm                                  |

| Diagnostic number               | Short text                          | Remedy instructions  | Status signal [from the factory] | Diagnostic behavior [from the factory] |
|---------------------------------|-------------------------------------|--|----------------------------------|--|
| 140                             | Sensor signal asymmetrical          | 1. Check or replace sensor electronic module (ISEM)<br>2. If available: Check connection cable between sensor and transmitter<br>3. Replace sensor | S                                | Alarm <sup>1)</sup>                    |
| 144                             | Measuring error too high            | 1. Check or change sensor<br>2. Check process conditions   | F                                | Alarm <sup>1)</sup>                    |
| <b>Diagnostic of electronic</b> |                                     |  |                                  |  |
| 201                             | Device failure                      | 1. Restart device<br>2. Contact service  | F                                | Alarm                                  |
| 242                             | Software incompatible               | 1. Check software<br>2. Flash or change main electronics module  | F                                | Alarm                                  |
| 252                             | Modules incompatible                | 1. Check electronic modules<br>2. Change electronic modules  | F                                | Alarm                                  |
| 252                             | Modules incompatible                | 1. Check if correct electronic modul is plugged<br>2. Replace electronic module  | F                                | Alarm                                  |
| 262                             | Sensor electronic connection faulty | 1. Check or replace connection cable between sensor electronic module (ISEM) and main electronics<br>2. Check or replace ISEM or main electronics  | F                                | Alarm                                  |
| 270                             | Main electronic failure             | Change main electronic module  | F                                | Alarm                                  |
| 271                             | Main electronic failure             | 1. Restart device<br>2. Change main electronic module  | F                                | Alarm                                  |
| 272                             | Main electronic failure             | 1. Restart device<br>2. Contact service  | F                                | Alarm                                  |
| 273                             | Main electronic failure             | Change electronic  | F                                | Alarm                                  |
| 275                             | I/O module 1 to n defective         | Change I/O module  | F                                | Alarm                                  |
| 276                             | I/O module 1 to n faulty            | 1. Restart device<br>2. Change I/O module  | F                                | Alarm                                  |
| 283                             | Memory content                      | 1. Reset device<br>2. Contact service  | F                                | Alarm                                  |
| 302                             | Device verification active          | Device verification active, please wait.   | C                                | Warning                                |
| 311                             | Electronic failure                  | 1. Do not reset device<br>2. Contact service   | M                                | Warning                                |
| 332                             | Writing in embedded HistoROM failed | Replace user interface board Ex d/XP: replace transmitter  | F                                | Alarm                                  |
| 361                             | I/O module 1 to n faulty            | 1. Restart device<br>2. Check electronic modules<br>3. Change I/O Modul or main electronics  | F                                | Alarm                                  |
| 372                             | Sensor electronic (ISEM) faulty     | 1. Restart device<br>2. Check if failure recurs<br>3. Replace sensor electronic module (ISEM)  | F                                | Alarm                                  |
| 373                             | Sensor electronic (ISEM) faulty     | 1. Transfer data or reset device<br>2. Contact service   | F                                | Alarm                                  |

| Diagnostic number                  | Short text                       | Remedy instructions   | Status signal [from the factory] | Diagnostic behavior [from the factory] |
|------------------------------------|----------------------------------|---|----------------------------------|--|
| 374                                | Sensor electronic (ISEM) faulty  | 1. Restart device<br>2. Check if failure recurs<br>3. Replace sensor electronic module (ISEM)                                       | S                                | Warning <sup>1)</sup>                  |
| 375                                | I/O- 1 to n communication failed | 1. Restart device<br>2. Check if failure recurs<br>3. Replace module rack inclusive electronic modules                              | F                                | Alarm                                  |
| 382                                | Data storage                     | 1. Insert T-DAT<br>2. Replace T-DAT   | F                                | Alarm                                  |
| 383                                | Memory content                   | 1. Restart device<br>2. Delete T-DAT via 'Reset device' parameter<br>3. Replace T-DAT   | F                                | Alarm                                  |
| 387                                | HistoROM backup failed           | Contact service organization  | F                                | Alarm                                  |
| <b>Diagnostic of configuration</b> |                                  |   |                                  |  |
| 303                                | I/O 1 to n configuration changed | 1. Apply I/O module configuration (parameter 'Apply I/O configuration')<br>2. Afterwards reload device description and check wiring | M                                | Warning                                |
| 330                                | Flash file invalid               | 1. Update firmware of device<br>2. Restart device   | M                                | Warning                                |
| 331                                | Firmware update failed           | 1. Update firmware of device<br>2. Restart device   | F                                | Warning                                |
| 410                                | Data transfer                    | 1. Check connection<br>2. Retry data transfer   | F                                | Alarm                                  |
| 412                                | Processing download              | Download active, please wait  | C                                | Warning                                |
| 431                                | Trim 1 to n                      | Carry out trim  | C                                | Warning                                |
| 437                                | Configuration incompatible       | 1. Restart device<br>2. Contact service   | F                                | Alarm                                  |
| 438                                | Dataset                          | 1. Check data set file<br>2. Check device configuration<br>3. Up- and download new configuration                                    | M                                | Warning                                |
| 441                                | Current output 1 to n            | 1. Check process<br>2. Check current output settings  | S                                | Warning <sup>1)</sup>                  |
| 442                                | Frequency output 1 to n          | 1. Check process<br>2. Check frequency output settings  | S                                | Warning <sup>1)</sup>                  |
| 443                                | Pulse output 1 to n              | 1. Check process<br>2. Check pulse output settings  | S                                | Warning <sup>1)</sup>                  |
| 444                                | Current input 1 to n             | 1. Check process<br>2. Check current input settings   | S                                | Warning <sup>1)</sup>                  |
| 453                                | Flow override                    | Deactivate flow override  | C                                | Warning                                |
| 484                                | Failure mode simulation          | Deactivate simulation   | C                                | Alarm                                  |
| 485                                | Measured variable simulation     | Deactivate simulation   | C                                | Warning                                |
| 486                                | Current input 1 to n simulation  | Deactivate simulation   | C                                | Warning                                |
| 491                                | Current output 1 to n simulation | Deactivate simulation   | C                                | Warning                                |


| Diagnostic number            | Short text                                | Remedy instructions   | Status signal [from the factory] | Diagnostic behavior [from the factory] |
|------------------------------|---|---|----------------------------------|--|
| 492                          | Simulation frequency output 1 to n        | Deactivate simulation frequency output  | C                                | Warning                                |
| 493                          | Simulation pulse output 1 to n            | Deactivate simulation pulse output  | C                                | Warning                                |
| 494                          | Switch output simulation 1 to n           | Deactivate simulation switch output   | C                                | Warning                                |
| 495                          | Diagnostic event simulation               | Deactivate simulation   | C                                | Warning                                |
| 496                          | Status input simulation                   | Deactivate simulation status input  | C                                | Warning                                |
| 502                          | CT activation/deactivation failed         | Follow the sequence of the custody transfer activation/deactivation: First authorized user login, then set the DIP switch on the main electronic module | C                                | Warning                                |
| 520                          | I/O 1 to n hardware configuration invalid | 1. Check I/O hardware configuration<br>2. Replace wrong I/O module<br>3. Plug the module of double pulse output on correct slot                         | F                                | Alarm                                  |
| 528                          | Concentration settings faulty             | 1. Check concentration settings<br>2. Check input values e.g. pressure, temperature   | S                                | Alarm                                  |
| 529                          | Concentration settings faulty             | 1. Check concentration settings<br>2. Check input values e.g. pressure, temperature   | S                                | Warning                                |
| 537                          | Configuration                             | 1. Check IP addresses in network<br>2. Change IP address  | F                                | Warning                                |
| 540                          | Custody transfer mode failed              | 1. Check electronic components<br>2. Check parameter settings<br>3. Deactivate custody transfer mode<br>4. Reactivate custody transfer mode             | F                                | Alarm                                  |
| 543                          | Double pulse output                       | 1. Check process<br>2. Check pulse output settings  | S                                | Warning <sup>1)</sup>                  |
| 593                          | Double pulse output simulation            | Deactivate simulation pulse output  | C                                | Warning                                |
| 594                          | Relay output simulation                   | Deactivate simulation switch output   | C                                | Warning                                |
| 599                          | Custody transfer logbook full             | 1. Deactivate custody transfer mode<br>2. Clear custody transfer logbook (all 30 entries)<br>3. Activate custody transfer mode                          | F                                | Warning                                |
| <b>Diagnostic of process</b> |   |   |                                  |  |
| 803                          | Current loop                              | 1. Check wiring<br>2. Change I/O module   | F                                | Alarm                                  |
| 830                          | Sensor temperature too high               | Reduce ambient temp. around the sensor housing  | S                                | Warning <sup>1)</sup>                  |
| 831                          | Sensor temperature too low                | Increase ambient temp. around the sensor housing  | S                                | Warning <sup>1)</sup>                  |
| 832                          | Electronic temperature too high           | Reduce ambient temperature  | S                                | Warning <sup>1)</sup>                  |
| 833                          | Electronic temperature too low            | Increase ambient temperature  | S                                | Warning <sup>1)</sup>                  |
| 834                          | Process temperature too high              | Reduce process temperature  | S                                | Warning <sup>1)</sup>                  |





| Diagnostic number | Short text                           | Remedy instructions   | Status signal [from the factory] | Diagnostic behavior [from the factory] |
|-------------------|--------------------------------------|---|----------------------------------|--|
| 835               | Process temperature too low          | Increase process temperature  | S                                | Warning <sup>1)</sup>                  |
| 842               | Process limit                        | Low flow cut off active!<br>1. Check low flow cut off configuration                               | S                                | Warning                                |
| 862               | Partly filled pipe                   | 1. Check for gas in process<br>2. Adjust detection limits   | S                                | Warning <sup>1)</sup>                  |
| 882               | Input signal                         | 1. Check input configuration<br>2. Check external device or process conditions                    | F                                | Alarm                                  |
| 910               | Tubes not oscillating                | 1. Check electronic<br>2. Inspect sensor  | F                                | Alarm                                  |
| 912               | Medium inhomogeneous                 | 1. Check process cond.<br>2. Increase system pressure   | S                                | Warning <sup>1)</sup>                  |
| 913               | Medium unsuitable                    | 1. Check process conditions<br>2. Check electronic modules or sensor                              | S                                | Alarm <sup>1)</sup>                    |
| 941               | API temperature out of specification | 1. Check process temperature with selected API commodity group<br>2. Check API related parameters | S                                | Alarm                                  |
| 942               | API density out of specification     | 1. Check process density with selected API commodity group<br>2. Check API related parameters     | S                                | Alarm                                  |
| 943               | API pressure out of specification    | 1. Check process pressure with selected API commodity group<br>2. Check API related parameters    | S                                | Alarm                                  |
| 944               | Monitoring failed                    | Check process conditions for Heartbeat Monitoring   | S                                | Warning <sup>1)</sup>                  |
| 948               | Oscillation damping too high         | Check process conditions  | S                                | Warning <sup>1)</sup>                  |



1) Diagnostic behavior can be changed.

## 12.8 Pending diagnostic events


The **Diagnostics** menu allows the user to view the current diagnostic event and the previous diagnostic event separately.

 To call up the measures to rectify a diagnostic event:

- Via local display →  181
- Via Web browser →  182
- Via "FieldCare" operating tool →  184
- Via "DeviceCare" operating tool →  184


 Other pending diagnostic events can be displayed in the **Diagnostic list** submenu →  190

**Navigation**  
"Diagnostics" menu

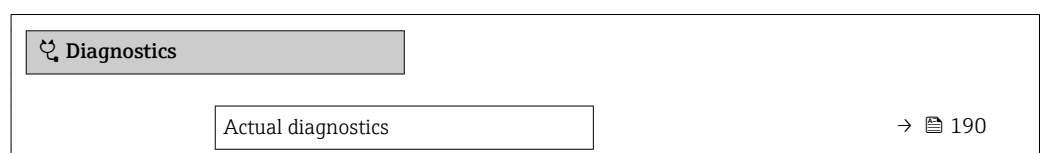

|                             |         |
|-----------------------------|---------|
| Previous diagnostics        | → ⓘ 190 |
| Operating time from restart | → ⓘ 190 |
| Operating time              | → ⓘ 190 |

### Parameter overview with brief description


| Parameter                   | Prerequisite                                 | Description  | User interface   |
|-----------------------------|--|--|--|
| Actual diagnostics          | A diagnostic event has occurred.             | Shows the current occurred diagnostic event along with its diagnostic information.<br><br> If two or more messages occur simultaneously, the message with the highest priority is shown on the display. | Symbol for diagnostic behavior, diagnostic code and short message. |
| Previous diagnostics        | Two diagnostic events have already occurred. | Shows the diagnostic event that occurred prior to the current diagnostic event along with its diagnostic information.  | Symbol for diagnostic behavior, diagnostic code and short message. |
| Operating time from restart | –  | Shows the time the device has been in operation since the last device restart.   | Days (d), hours (h), minutes (m) and seconds (s)                   |
| Operating time              | –  | Indicates how long the device has been in operation.   | Days (d), hours (h), minutes (m) and seconds (s)                   |

## 12.9 Diagnostic list


Up to 5 currently pending diagnostic events can be displayed in the **Diagnostic list** submenu along with the associated diagnostic information. If more than 5 diagnostic events are pending, the events with the highest priority are shown on the display.


### Navigation path

Diagnostics → Diagnostic list

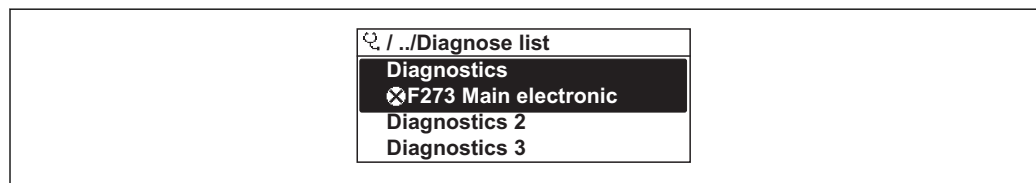

A0014-006-EN

 42 Taking the example of the local display

 To call up the measures to rectify a diagnostic event:

- Via local display → ⓘ 181
- Via Web browser → ⓘ 182
- Via "FieldCare" operating tool → ⓘ 184
- Via "DeviceCare" operating tool → ⓘ 184


## 12.10 Event logbook

### 12.10.1 Reading out the event logbook

A chronological overview of the event messages that have occurred is provided in the **Events list** submenu.

#### Navigation path

**Diagnostics** menu → **Event logbook** submenu → Event list

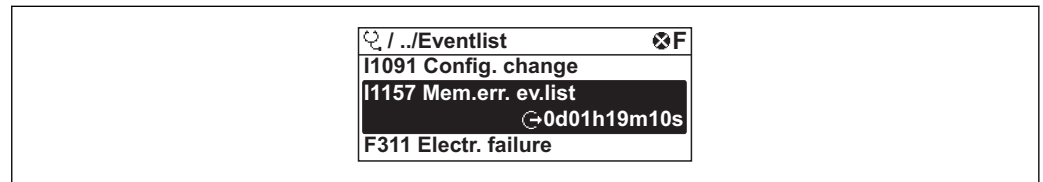

43 Taking the example of the local display

- A maximum of 20 event messages can be displayed in chronological order.
- If the **Extended HistoROM** application package (order option) is enabled in the device, the event list can contain up to 100 entries.

The event history includes entries for:

- Diagnostic events → 185
- Information events → 192

In addition to the operation time of its occurrence, each event is also assigned a symbol that indicates whether the event has occurred or is ended:

- Diagnostic event
  - ⌚: Occurrence of the event
  - ⌚: End of the event
- Information event
  - ⌚: Occurrence of the event

**i** To call up the measures to rectify a diagnostic event:

- Via local display → 181
- Via Web browser → 182
- Via "FieldCare" operating tool → 184
- Via "DeviceCare" operating tool → 184

**i** For filtering the displayed event messages → 191

### 12.10.2 Filtering the event logbook

Using the **Filter options** parameter you can define which category of event message is displayed in the **Events list** submenu.

#### Navigation path

**Diagnostics** → **Event logbook** → **Filter options**

#### Filter categories

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information (I)

### 12.10.3 Overview of information events


Unlike a diagnostic event, an information event is displayed in the event logbook only and not in the diagnostic list.

| Info number | Info name                                |
|-------------|--|
| I1000       | ----- (Device ok)                        |
| I1079       | Sensor changed                           |
| I1089       | Power on                                 |
| I1090       | Configuration reset                      |
| I1091       | Configuration changed                    |
| I1092       | HistoROM backup deleted                  |
| I1111       | Density adjust failure                   |
| I1137       | Electronic changed                       |
| I1151       | History reset                            |
| I1155       | Reset electronic temperature             |
| I1156       | Memory error trend                       |
| I1157       | Memory error event list                  |
| I1184       | Display connected                        |
| I1209       | Density adjustment ok                    |
| I1221       | Zero point adjust failure                |
| I1222       | Zero point adjustment ok                 |
| I1256       | Display: access status changed           |
| I1264       | Safety sequence aborted                  |
| I1278       | I/O module reset detected                |
| I1335       | Firmware changed                         |
| I1361       | Web server: login failed                 |
| I1397       | Fieldbus: access status changed          |
| I1398       | CDI: access status changed               |
| I1444       | Device verification passed               |
| I1445       | Device verification failed               |
| I1447       | Record application reference data        |
| I1448       | Application reference data recorded      |
| I1449       | Recording application ref. data failed   |
| I1450       | Monitoring off                           |
| I1451       | Monitoring on                            |
| I1457       | Measured error verification failed       |
| I1459       | I/O module verification failed           |
| I1460       | HBSI verification failed                 |
| I1461       | Sensor verification failed               |
| I1462       | Sensor electronic module verific. failed |
| I1512       | Download started                         |
| I1513       | Download finished                        |
| I1514       | Upload started                           |
| I1515       | Upload finished                          |



| Info number | Info name                               |
|-------------|---|
| I1517       | Custody transfer active                 |
| I1518       | Custody transfer inactive               |
| I1554       | Safety sequence started                 |
| I1555       | Safety sequence confirmed               |
| I1556       | Safety mode off                         |
| I1618       | I/O module 2 replaced                   |
| I1619       | I/O module 3 replaced                   |
| I1621       | I/O module 4 replaced                   |
| I1622       | Calibration changed                     |
| I1624       | Reset all totalizers                    |
| I1625       | Write protection activated              |
| I1626       | Write protection deactivated            |
| I1627       | Web server: login successful            |
| I1628       | Display: login successful               |
| I1629       | CDI: login successful                   |
| I1631       | Web server access changed               |
| I1632       | Display login failed                    |
| I1633       | CDI: login failed                       |
| I1634       | Reset to factory settings               |
| I1635       | Reset to delivery settings              |
| I1639       | Max. switch cycles number reached       |
| I1643       | Custody transfer logbook cleared        |
| I1649       | Hardware write protection activated     |
| I1650       | Hardware write protection deactivated   |
| I1651       | Custody transfer parameter changed      |
| I1712       | New flash file received                 |
| I1725       | Sensor electronic module (ISEM) changed |
| I1726       | Configuration backup failed             |

## 12.11 Resetting the measuring device

Using the **Device reset** parameter (→  151) it is possible to reset the entire device configuration or some of the configuration to a defined state.

### 12.11.1 Function scope of the "Device reset" parameter

| Options              | Description   |
|----------------------|---|
| Cancel               | No action is executed and the user exits the parameter.   |
| To delivery settings | Every parameter for which a customer-specific default setting was ordered is reset to this customer-specific value. All other parameters are reset to the factory setting.    |
| Restart device       | The restart resets every parameter whose data are in the volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged. |
| Restore S-DAT backup | Restore the data that are saved on the S-DAT. The data record is restored from the electronics memory to the S-DAT.   |

## 12.12 Device information


The **Device information** submenu contains all parameters that display different information for device identification.





### Navigation

"Diagnostics" menu → Device information

| ▶ Device information  |         |
|-----------------------|---------|
| Device tag            | → ⓘ 194 |
| Serial number         | → ⓘ 194 |
| Firmware version      | → ⓘ 194 |
| Device name           | → ⓘ 194 |
| Order code            | → ⓘ 195 |
| Extended order code 1 | → ⓘ 195 |
| Extended order code 2 | → ⓘ 195 |
| Extended order code 3 | → ⓘ 195 |
| ENP version           | → ⓘ 195 |
| Device revision       | → ⓘ 195 |
| Device ID             | → ⓘ 195 |
| Device type           | → ⓘ 195 |
| Manufacturer ID       | → ⓘ 195 |


### Parameter overview with brief description


| Parameter        | Description  | User interface   | Factory setting |
|------------------|--|--|-----------------|
| Device tag       | Shows name of measuring point.   | Max. 32 characters, such as letters, numbers or special characters (e.g. @, %, /). | Promass         |
| Serial number    | Shows the serial number of the measuring device.   | A maximum of 11-digit character string comprising letters and numbers.             | –               |
| Firmware version | Shows the device firmware version installed.   | Character string in the format xx.yy.zz  | –               |
| Device name      | Shows the name of the transmitter.<br> The name can be found on the nameplate of the transmitter. | Promass300/500   | –               |


| Parameter             | Description  | User interface  | Factory setting            |
|-----------------------|--|---|----------------------------|
| Order code            | Shows the device order code.<br> The order code can be found on the nameplate of the sensor and transmitter in the "Order code" field.                                    | Character string composed of letters, numbers and certain punctuation marks (e.g. /). | –                          |
| Extended order code 1 | Shows the 1st part of the extended order code.<br> The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field. | Character string  | –                          |
| Extended order code 2 | Shows the 2nd part of the extended order code.<br> The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field. | Character string  | –                          |
| Extended order code 3 | Shows the 3rd part of the extended order code.<br> The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field. | Character string  | –                          |
| ENP version           | Shows the version of the electronic nameplate (ENP).   | Character string  | 2.02.00                    |
| Device revision       | Shows the device revision with which the device is registered with the HART Communication Foundation.  | 2-digit hexadecimal number  | 2                          |
| Device ID             | Shows the device ID for identifying the device in a HART network.  | 6-digit hexadecimal number  | –                          |
| Device type           | Shows the device type with which the measuring device is registered with the HART Communication Foundation.  | 2-digit hexadecimal number  | 0x3B (for Promass 300/500) |
| Manufacturer ID       | Shows the manufacturer ID device is registered with the HART Communication Foundation.   | 2-digit hexadecimal number  | 0x11 (for Endress+Hauser)  |

## 12.13 Firmware history

| Release date | Firmware version | Order code for "Firmware version" | Firmware changes  | Documentation type     | Documentation        |
|--------------|------------------|-----------------------------------|---|------------------------|----------------------|
| 08.2016      | 01.00.zz         | Option 78                         | Original firmware   | Operating Instructions | BA01531D/06/EN/01.16 |
| 10.2017      | 01.01.zz         | Option 71                         | <ul style="list-style-type: none"> <li>▪ Petroleum new</li> <li>▪ Concentration update</li> <li>▪ Viscosity update</li> <li>▪ OPC-UA with Security new</li> <li>▪ Local display - enhanced performance and data entry via text editor</li> <li>▪ Optimized keypad lock for local display</li> <li>▪ Improvements and enhancements with regard to custody transfer measurement</li> <li>▪ Web server feature update               <ul style="list-style-type: none"> <li>- Support for trend data function</li> <li>- Heartbeat function enhanced to include detailed results (page 3/4 of the report)</li> <li>- Device configuration as PDF (parameter log, similar to FDT print)</li> </ul> </li> <li>▪ Network capability of Ethernet (service) interface</li> <li>▪ Comprehensive Heartbeat feature update</li> <li>▪ Local display - support for WLAN infrastructure mode</li> <li>▪ Implementation of reset code</li> </ul> | Operating Instructions | BA01531D/06/EN/02.17 |

 It is possible to flash the firmware to the current version or the previous version using the service interface.

 For the compatibility of the firmware version with the previous version, the installed device description files and operating tools, observe the information about the device in the "Manufacturer's information" document.

 The manufacturer's information is available:

- In the Download Area of the Endress+Hauser web site: [www.endress.com](http://www.endress.com) → Downloads
- Specify the following details:
  - Product root: e.g. 8I 5B

The product root is the first part of the order code: see the nameplate on the device.

- Text search: Manufacturer's information
- Media type: Documentation – Technical Documentation

## 13 Maintenance

### 13.1 Maintenance tasks


No special maintenance work is required.

#### 13.1.1 Exterior cleaning

When cleaning the exterior of measuring devices, always use cleaning agents that do not attack the surface of the housing or the seals.

#### 13.1.2 Interior cleaning

Observe the following points for CIP and SIP cleaning:


- Use only cleaning agents to which the process-wetted materials are adequately resistant.
- Observe the maximum permitted medium temperature for the measuring device  
→  219.


Observe the following point for cleaning with pigs:

Observe the inside diameter of the measuring tube and process connection.

### 13.2 Measuring and test equipment


Endress+Hauser offers a wide variety of measuring and test equipment, such as W@M or device tests.

 Your Endress+Hauser Sales Center can provide detailed information on the services.

List of some of the measuring and testing equipment: →  201

### 13.3 Endress+Hauser services

Endress+Hauser offers a wide variety of services for maintenance such as recalibration, maintenance service or device tests.

 Your Endress+Hauser Sales Center can provide detailed information on the services.

## 14 Repairs

### 14.1 General notes

#### 14.1.1 Repair and conversion concept

The Endress+Hauser repair and conversion concept provides for the following:

- The measuring devices have a modular design.
- Spare parts are grouped into logical kits with the associated Installation Instructions.
- Repairs are carried out by Endress+Hauser Service or by appropriately trained customers.
- Certified devices can only be converted to other certified devices by Endress+Hauser Service or at the factory.

#### 14.1.2 Notes for repair and conversion

For repair and modification of a measuring device, observe the following notes:

- ▶ Use only original Endress+Hauser spare parts.
- ▶ Carry out the repair according to the Installation Instructions.
- ▶ Observe the applicable standards, federal/national regulations, Ex documentation (XA) and certificates.
- ▶ Document every repair and each conversion and enter them into the *W@M* life cycle management database.

### 14.2 Spare parts

*W@M Device Viewer* ([www.endress.com/deviceviewer](http://www.endress.com/deviceviewer)):

All the spare parts for the measuring device, along with the order code, are listed here and can be ordered. If available, users can also download the associated Installation Instructions.



Measuring device serial number:

- Is located on the nameplate of the device.
- Can be read out via the **Serial number** parameter (→ 194) in the **Device information** submenu.

### 14.3 Endress+Hauser services

Endress+Hauser offers a wide range of services.



Your Endress+Hauser Sales Center can provide detailed information on the services.

### 14.4 Return

The measuring device must be returned if it is need of repair or a factory calibration, or if the wrong measuring device has been delivered or ordered. Legal specifications require Endress+Hauser, as an ISO-certified company, to follow certain procedures when handling products that are in contact with the medium.

To ensure safe, swift and professional device returns, please refer to the procedure and conditions for returning devices provided on the Endress+Hauser website at

<http://www.endress.com/support/return-material>

## 14.5 Disposal

### 14.5.1 Removing the measuring device

1. Switch off the device.

**⚠ WARNING**

**Danger to persons from process conditions.**

- ▶ Beware of hazardous process conditions such as pressure in the measuring device, high temperatures or aggressive fluids.

2. Carry out the mounting and connection steps from the "Mounting the measuring device" and "Connecting the measuring device" sections in reverse order. Observe the safety instructions.

### 14.5.2 Disposing of the measuring device

**⚠ WARNING**

**Danger to personnel and environment from fluids that are hazardous to health.**

- ▶ Ensure that the measuring device and all cavities are free of fluid residues that are hazardous to health or the environment, e.g. substances that have permeated into crevices or diffused through plastic.

Observe the following notes during disposal:

- ▶ Observe valid federal/national regulations.
- ▶ Ensure proper separation and reuse of the device components.















## 15 Accessories

Various accessories, which can be ordered with the device or subsequently from Endress+Hauser, are available for the device. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: [www.endress.com](http://www.endress.com).


### 15.1 Device-specific accessories

#### 15.1.1 For the transmitter







| Accessories  | Description  |
|--|--|
| Transmitter <ul style="list-style-type: none"> <li>▪ Proline 500 – digital</li> <li>▪ Proline 500</li> </ul>                     | Transmitter for replacement or storage. Use the order code to define the following specifications: <ul style="list-style-type: none"> <li>▪ Approvals</li> <li>▪ Output</li> <li>▪ Input</li> <li>▪ Display / operation</li> <li>▪ Housing</li> <li>▪ Software</li> </ul> <p> ▪ Proline 500 – digital transmitter:<br/>Order code: 8X5BXX-XXXXXXXXXA</p> <p>▪ Proline 500 transmitter:<br/>Order code: 8X5BXX-XXXXXXXXXB</p> <p> Proline 500 transmitter for replacement:<br/>It is essential to specify the serial number of the current transmitter when ordering. Based on the serial number, the device-specific data (e.g., calibration factors) of the replacement device can be used for the new transmitter.</p> <p> For details</p> <ul style="list-style-type: none"> <li>▪ Proline 500 – digital transmitter: Installation Instructions EA01151</li> <li>▪ Proline 500 transmitter: Installation Instructions EA01152</li> </ul> |
| External WLAN antenna  | External WLAN antenna with 2 m (6.6 ft) connecting cable and two angle brackets. Order code for "Enclosed accessories", option <b>P8</b> "Wireless antenna wide area". <p> Further information on the WLAN interface →  81.</p>  |
| Pipe mounting set  | Pipe mounting set for transmitter. <p> ▪ Proline 500 – digital transmitter<br/>Order number: 71346427</p> <p>▪ Proline 500 transmitter<br/>Order number: 71346428</p>   |
| Protective cover<br>Transmitter <ul style="list-style-type: none"> <li>▪ Proline 500 – digital</li> <li>▪ Proline 500</li> </ul> | Is used to protect the measuring device from the effects of the weather: e.g. rainwater, excess heating from direct sunlight. <p> ▪ Proline 500 – digital transmitter<br/>Order number: 71343504</p> <p>▪ Proline 500 transmitter<br/>Order number: 71343505</p> <p> For details, see Installation Instructions EA01160</p>  |
| Display guard<br>Proline 500 – digital   | Is used to protect the measuring device from the effects of the weather: e.g. rainwater, excess heating from direct sunlight. <p> Order number: 71228792</p> <p> For details, see Installation Instructions EA01161</p>  |

|  |  |
|--|--|
| Connecting cable<br>Proline 500 – digital<br>Sensor –<br>Transmitter | <p>The connecting cable can be ordered directly with the measuring device (order code for "Cable, sensor connection") or as an accessory (order number DK8012).</p> <p>The following cable lengths are available: order code for "Cable, sensor connection"</p> <ul style="list-style-type: none"> <li>▪ Option B: 20 m (65 ft)</li> <li>▪ Option E: User configurable up to max. 50 m</li> <li>▪ Option F: User configurable up to max. 165 ft</li> </ul> <p> Maximum possible cable length for a Proline 500 – digital connecting cable: 300 m (1 000 ft)</p> |
| Connecting cable<br>Proline 500<br>Sensor –<br>Transmitter           | <p>The connecting cable can be ordered directly with the measuring device (order code for "Cable, sensor connection") or as an accessory (order number DK8012).</p> <p>The following cable lengths are available: order code for "Cable, sensor connection"</p> <ul style="list-style-type: none"> <li>▪ Option 1: 5 m (16 ft)</li> <li>▪ Option 2: 10 m (32 ft)</li> <li>▪ Option 3: 20 m (65 ft)</li> </ul> <p> Possible cable length for a Proline 500 connecting cable: max. 20 m (65 ft)</p>   |



### 15.1.2 For the sensor

| Accessories    | Description   |
|----------------|---|
| Heating jacket | <p>Is used to stabilize the temperature of the fluids in the sensor.<br/>Water, water vapor and other non-corrosive liquids are permitted for use as fluids.<br/>If using oil as a heating medium, please consult with Endress+Hauser.</p> <p> For details, see Operating Instructions BA00099D</p> |





## 15.2 Communication-specific accessories

| Accessories                  | Description   |
|------------------------------|---|
| Commubox FXA195<br>HART      | <p>For intrinsically safe HART communication with FieldCare via the USB interface.</p> <p> For details, see "Technical Information" TI00404F</p>   |
| HART Loop Converter<br>HMX50 | <p>Is used to evaluate and convert dynamic HART process variables to analog current signals or limit values.</p> <p> For details, see "Technical Information" TI00429F and Operating Instructions BA00371F</p>   |
| Fieldgate FXA320             | <p>Gateway for the remote monitoring of connected 4 to 20 mA measuring devices via a Web browser.</p> <p> For details, see "Technical Information" TI00025S and Operating Instructions BA00053S</p>  |
| Fieldgate FXA520             | <p>Gateway for the remote diagnostics and remote configuration of connected HART measuring devices via a Web browser.</p> <p> For details, see "Technical Information" TI00025S and Operating Instructions BA00051S</p>  |
| Field Xpert SFX350           | <p>Field Xpert SFX350 is a mobile computer for commissioning and maintenance. It enables efficient device configuration and diagnostics for HART devices and can be used in non-hazardous areas.</p> <p> For details, see Operating Instructions BA01202S</p>                              |
| Field Xpert SFX370           | <p>Field Xpert SFX370 is a mobile computer for commissioning and maintenance. It enables efficient device configuration and diagnostics for HART devices and can be used in the non-hazardous area and in the hazardous area.</p> <p> For details, see Operating Instructions BA01202S</p> |

## 15.3 Service-specific accessories

| Accessories | Description  |
|-------------|--|
| Applicator  | <p>Software for selecting and sizing Endress+Hauser measuring devices:</p> <ul style="list-style-type: none"> <li>Choice of measuring devices for industrial requirements</li> <li>Calculation of all the necessary data for identifying the optimum flowmeter: e.g. nominal diameter, pressure loss, flow velocity and accuracy.</li> <li>Graphic illustration of the calculation results</li> <li>Determination of the partial order code, administration, documentation and access to all project-related data and parameters over the entire life cycle of a project.</li> </ul> <p>Applicator is available:</p> <ul style="list-style-type: none"> <li>Via the Internet: <a href="https://wapps.endress.com/applicator">https://wapps.endress.com/applicator</a></li> <li>As a downloadable DVD for local PC installation.</li> </ul> |
| W@M         | <p>W@M Life Cycle Management<br/>Improved productivity with information at your fingertips. Data relevant to a plant and its components is generated from the first stages of planning and during the asset's complete life cycle.</p> <p>W@M Life Cycle Management is an open and flexible information platform with online and on-site tools. Instant access for your staff to current, in-depth data shortens your plant's engineering time, speeds up procurement processes and increases plant uptime.</p> <p>Combined with the right services, W@M Life Cycle Management boosts productivity in every phase. For more information, visit <a href="http://www.endress.com/lifecyclemanagement">www.endress.com/lifecyclemanagement</a></p>  |
| FieldCare   | <p>FDT-based plant asset management tool from Endress+Hauser. It can configure all smart field units in your system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.</p> <p> For details, see Operating Instructions BA00027S and BA00059S</p>   |
| DeviceCare  | <p>Tool for connecting and configuring Endress+Hauser field devices.</p> <p> For details, see Innovation brochure IN01047S</p>  |

## 15.4 System components

| Accessories                      | Description   |
|----------------------------------|---|
| Memograph M graphic data manager | <p>The Memograph M graphic data manager provides information on all the relevant measured variables. Measured values are recorded correctly, limit values are monitored and measuring points analyzed. The data are stored in the 256 MB internal memory and also on a SD card or USB stick.</p> <p> For details, see "Technical Information" TI00133R and Operating Instructions BA00247R</p> |
| Cerabar M                        | <p>The pressure transmitter for measuring the absolute and gauge pressure of gases, steam and liquids. It can be used to read in the operating pressure value.</p> <p> For details, see "Technical Information" TI00426P, TI00436P and Operating Instructions BA00200P, BA00382P</p>   |
| Cerabar S                        | <p>The pressure transmitter for measuring the absolute and gauge pressure of gases, steam and liquids. It can be used to read in the operating pressure value.</p> <p> For details, see "Technical Information" TI00383P and Operating Instructions BA00271P</p>   |
| iTEMP                            | <p>The temperature transmitters can be used in all applications and are suitable for the measurement of gases, steam and liquids. They can be used to read in the medium temperature.</p> <p> For details, see "Fields of Activity", FA00006T</p>  |

## 16 Technical data

### 16.1 Application

The measuring device is suitable for flow measurement of liquids and gases only.

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

To ensure that the device remains in proper operating condition for its service life, use the measuring device only for media against which the process-wetted materials are sufficiently resistant.

### 16.2 Function and system design

---


#### Measuring principle

Mass flow measurement based on the Coriolis measuring principle

---

#### Measuring system

The measuring system consists of a transmitter and a sensor. The transmitter and sensor are mounted in physically separate locations. They are interconnected by one connecting cable(s).

For information on the structure of the device →  15

### 16.3 Input

Measured variable

**Direct measured variables**

- Mass flow
- Density
- Temperature
- Viscosity

**Calculated measured variables**

- Volume flow
- Corrected volume flow
- Reference density

Measuring range

**Measuring ranges for liquids**

| DN    |                   | Measuring range full scale values $\dot{m}_{\min(F)}$ to $\dot{m}_{\max(F)}$ |            |
|-------|-------------------|--|------------|
| [mm]  | [in]              | [kg/h]   | [lb/min]   |
| 8     | $\frac{3}{8}$     | 0 to 2 000   | 0 to 73.50 |
| 15    | $\frac{1}{2}$     | 0 to 6 500   | 0 to 238.9 |
| 15 FB | $\frac{1}{2}$ FB  | 0 to 18 000  | 0 to 661.5 |
| 25    | 1                 | 0 to 18 000  | 0 to 661.5 |
| 25 FB | 1 FB              | 0 to 45 000  | 0 to 1 654 |
| 40    | $1\frac{1}{2}$    | 0 to 45 000  | 0 to 1 654 |
| 40 FB | $1\frac{1}{2}$ FB | 0 to 70 000  | 0 to 2 573 |
| 50    | 2                 | 0 to 70 000  | 0 to 2 573 |
| 50 FB | 2 FB              | 0 to 180 000   | 0 to 6 615 |
| 80    | 3                 | 0 to 180 000   | 0 to 6 615 |

FB = Full bore

**Measuring ranges for gases**

The full scale values depend on the density of the gas and can be calculated with the formula below:

$$\dot{m}_{\max(G)} = \dot{m}_{\max(F)} \cdot \rho_G : x$$

|   |   |
|---|---|
| $\dot{m}_{\max(G)}$                     | Maximum full scale value for gas [kg/h]                           |
| $\dot{m}_{\max(F)}$                     | Maximum full scale value for liquid [kg/h]                        |
| $\dot{m}_{\max(G)} < \dot{m}_{\max(F)}$ | $\dot{m}_{\max(G)}$ can never be greater than $\dot{m}_{\max(F)}$ |
| $\rho_G$                                | Gas density in [kg/m <sup>3</sup> ] at operating conditions       |
| x                                       | Constant dependent on nominal diameter                            |

| DN    |                  | x                    |
|-------|------------------|----------------------|
| [mm]  | [in]             | [kg/m <sup>3</sup> ] |
| 8     | $\frac{3}{8}$    | 60                   |
| 15    | $\frac{1}{2}$    | 80                   |
| 15 FB | $\frac{1}{2}$ FB | 90                   |

| DN    |       | x                    |
|-------|-------|----------------------|
| [mm]  | [in]  | [kg/m <sup>3</sup> ] |
| 25    | 1     | 90                   |
| 25 FB | 1 FB  | 90                   |
| 40    | 1½    | 90                   |
| 40 FB | 1½ FB | 90                   |
| 50    | 2     | 90                   |
| 50 FB | 2 FB  | 110                  |
| 80    | 3     | 110                  |

FB = Full bore

**Calculation example for gas**

- Sensor: Promass I, DN 50
- Gas: Air with a density of 60.3 kg/m<sup>3</sup> (at 20 °C and 50 bar)
- Measuring range (liquid): 70 000 kg/h
- x = 90 kg/m<sup>3</sup> (for Promass I, DN 50)

Maximum possible full scale value:

$$\dot{m}_{\max(G)} = \dot{m}_{\max(F)} \cdot \rho_G : x = 70\,000 \text{ kg/h} \cdot 60.3 \text{ kg/m}^3 : 90 \text{ kg/m}^3 = 46\,900 \text{ kg/h}$$

**Recommended measuring range**

"Flow limit" section →  221

Operable flow range

Over 1000 : 1.

Flow rates above the preset full scale value do not override the electronics unit, with the result that the totalizer values are registered correctly.

Input signal

**External measured values**

To increase the accuracy of certain measured variables or to calculate the corrected volume flow for gases, the automation system can continuously write different measured values to the measuring device:

- Operating pressure to increase accuracy (Endress+Hauser recommends the use of a pressure measuring device for absolute pressure, e.g. Cerabar M or Cerabar S)
- Medium temperature to increase accuracy (e.g. iTEMP)
- Reference density for calculating the corrected volume flow for gases

 Various pressure transmitters and temperature measuring devices can be ordered from Endress+Hauser: see "Accessories" section →  203

It is recommended to read in external measured values to calculate the following measured variables for gases:


Corrected volume flow

*HART protocol*

The measured values are written from the automation system to the measuring device via the HART protocol. The pressure transmitter must support the following protocol-specific functions:

- HART protocol
- Burst mode

*Current input*

The measured values are written from the automation system to the measuring device via the current input →  207.

**Current input 0/4 to 20 mA**

|                                 |   |
|---------------------------------|---|
| <b>Current input</b>            | 0/4 to 20 mA (active/passive)   |
| <b>Current span</b>             | <ul style="list-style-type: none"> <li>▪ 4 to 20 mA (active)</li> <li>▪ 0/4 to 20 mA (passive)</li> </ul> |
| <b>Resolution</b>               | 1 $\mu$ A   |
| <b>Voltage drop</b>             | Typically: 0.6 to 2 V for 3.6 to 22 mA (passive)  |
| <b>Maximum input voltage</b>    | $\leq$ 30 V (passive)   |
| <b>Open-circuit voltage</b>     | $\leq$ 28.8 V (active)  |
| <b>Possible input variables</b> | <ul style="list-style-type: none"> <li>▪ Pressure</li> <li>▪ Temperature</li> <li>▪ Density</li> </ul>    |



**Status input**

|                             |  |
|-----------------------------|--|
| <b>Maximum input values</b> | <ul style="list-style-type: none"> <li>▪ DC -3 to 30 V</li> <li>▪ If status input is active (ON): <math>R_i &gt; 3 \text{ k}\Omega</math></li> </ul>                   |
| <b>Response time</b>        | Adjustable: 5 to 200 ms  |
| <b>Input signal level</b>   | <ul style="list-style-type: none"> <li>▪ Low signal: DC -3 to +5 V</li> <li>▪ High signal: DC 12 to 30 V</li> </ul>  |
| <b>Assignable functions</b> | <ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ Reset the individual totalizers separately</li> <li>▪ Reset all totalizers</li> <li>▪ Flow override</li> </ul> |



## 16.4 Output

Output signal

### HART current output



|                                      |  |
|--------------------------------------|--|
| <b>Current output</b>                | 4 to 20 mA HART  |
| <b>Current span</b>                  | Can be set to: 4 to 20 mA (active/passive)<br> Ex-i, passive  |
| <b>Open-circuit voltage</b>          | DC 28.8 V (active)   |
| <b>Maximum input voltage</b>         | DC 30 V (passive)  |
| <b>Load</b>                          | 250 to 700 Ω   |
| <b>Resolution</b>                    | 0.38 μA  |
| <b>Damping</b>                       | Adjustable: 0.07 to 999 s  |
| <b>Assignable measured variables</b> | <ul style="list-style-type: none"> <li>▪ Mass flow</li> <li>▪ Volume flow</li> <li>▪ Corrected volume flow</li> <li>▪ Density</li> <li>▪ Reference density</li> <li>▪ Temperature</li> <li>▪ Electronic temperature</li> <li>▪ Oscillation frequency 0</li> <li>▪ Oscillation damping 0</li> <li>▪ Signal asymmetry</li> <li>▪ Exciter current 0</li> </ul>  The range of options increases if the measuring device has one or more application packages. |


### Current output 0/4 to 20 mA

|                                      |  |
|--------------------------------------|--|
| <b>Current output</b>                | 0/4 to 20 mA   |
| <b>Maximum output values</b>         | 22.5 mA  |
| <b>Current span</b>                  | Can be set to: <ul style="list-style-type: none"> <li>▪ 4 to 20 mA (active)</li> <li>▪ 0/4 to 20 mA (passive)</li> </ul>  Ex-i, passive   |
| <b>Open-circuit voltage</b>          | DC 28.8 V (active)   |
| <b>Maximum input voltage</b>         | DC 30 V (passive)  |
| <b>Load</b>                          | 0 to 700 Ω   |
| <b>Resolution</b>                    | 0.38 μA  |
| <b>Damping</b>                       | Adjustable: 0.07 to 999 s  |
| <b>Assignable measured variables</b> | <ul style="list-style-type: none"> <li>▪ Mass flow</li> <li>▪ Volume flow</li> <li>▪ Corrected volume flow</li> <li>▪ Density</li> <li>▪ Reference density</li> <li>▪ Temperature</li> <li>▪ Electronic temperature</li> <li>▪ Oscillation frequency 0</li> <li>▪ Oscillation damping 0</li> <li>▪ Signal asymmetry</li> <li>▪ Exciter current 0</li> </ul>  The range of options increases if the measuring device has one or more application packages. |




## Pulse/frequency/switch output

|                                      |  |
|--------------------------------------|--|
| <b>Function</b>                      | Can be set to pulse, frequency or switch output  |
| <b>Version</b>                       | Open collector<br>Can be set to: <ul style="list-style-type: none"> <li>▪ Active</li> <li>▪ Passive</li> </ul>  Ex-i, passive   |
| <b>Maximum input values</b>          | DC 30 V, 250 mA (passive)  |
| <b>Open-circuit voltage</b>          | DC 28.8 V (active)   |
| <b>Voltage drop</b>                  | For 22.5 mA: ≤ DC 2 V  |
| <b>Pulse output</b>                  |  |
| <b>Maximum input values</b>          | DC 30 V, 250 mA (passive)  |
| <b>Maximum output current</b>        | 22.5 mA (active)   |
| <b>Open-circuit voltage</b>          | DC 28.8 V (active)   |
| <b>Pulse width</b>                   | Adjustable: 0.05 to 2 000 ms   |
| <b>Maximum pulse rate</b>            | 10 000 Impulse/s   |
| <b>Pulse value</b>                   | Adjustable   |
| <b>Assignable measured variables</b> | <ul style="list-style-type: none"> <li>▪ Mass flow</li> <li>▪ Volume flow</li> <li>▪ Corrected volume flow</li> </ul>  |
| <b>Frequency output</b>              |  |
| <b>Maximum input values</b>          | DC 30 V, 250 mA (passive)  |
| <b>Maximum output current</b>        | 22.5 mA (active)   |
| <b>Open-circuit voltage</b>          | DC 28.8 V (active)   |
| <b>Output frequency</b>              | Adjustable: end value frequency 2 to 10 000 Hz ( $f_{\max} = 12\,500$ Hz)  |
| <b>Damping</b>                       | Adjustable: 0 to 999 s   |
| <b>Pulse/pause ratio</b>             | 1:1  |
| <b>Assignable measured variables</b> | <ul style="list-style-type: none"> <li>▪ Mass flow</li> <li>▪ Volume flow</li> <li>▪ Corrected volume flow</li> <li>▪ Density</li> <li>▪ Reference density</li> <li>▪ Temperature</li> <li>▪ Electronic temperature</li> <li>▪ Oscillation frequency 0</li> <li>▪ Oscillation damping 0</li> <li>▪ Signal asymmetry</li> <li>▪ Exciter current 0</li> </ul>  The range of options increases if the measuring device has one or more application packages. |
| <b>Switch output</b>                 |  |
| <b>Maximum input values</b>          | DC 30 V, 250 mA (passive)  |
| <b>Open-circuit voltage</b>          | DC 28.8 V (active)   |
| <b>Switching behavior</b>            | Binary, conductive or non-conductive   |
| <b>Switching delay</b>               | Adjustable: 0 to 100 s   |


|                                   |  |
|-----------------------------------|--|
| <b>Number of switching cycles</b> | Unlimited  |
| <b>Assignable functions</b>       | <ul style="list-style-type: none"> <li>■ Off</li> <li>■ On</li> <li>■ Diagnostic behavior</li> <li>■ Limit value                             <ul style="list-style-type: none"> <li>- Mass flow</li> <li>- Volume flow</li> <li>- Corrected volume flow</li> <li>- Density</li> <li>- Reference density</li> <li>- Temperature</li> <li>- Totalizer 1-3</li> </ul> </li> <li>■ Flow direction monitoring</li> <li>■ Status                             <ul style="list-style-type: none"> <li>- Partially filled pipe detection</li> <li>- Low flow cut off</li> </ul> </li> </ul> <p> The range of options increases if the measuring device has one or more application packages.</p> |

### Double pulse output

|                                      |  |
|--------------------------------------|--|
| <b>Function</b>                      | Double pulse   |
| <b>Version</b>                       | Open collector<br>Can be set to: <ul style="list-style-type: none"> <li>■ Active</li> <li>■ Passive</li> </ul>   |
| <b>Maximum input values</b>          | DC 30 V, 250 mA (passive)  |
| <b>Open-circuit voltage</b>          | DC 28.8 V (active)   |
| <b>Voltage drop</b>                  | For 22.5 mA: ≤ DC 2 V  |
| <b>Output frequency</b>              | Adjustable: 0 to 1 000 Hz  |
| <b>Damping</b>                       | Adjustable: 0 to 999 s   |
| <b>Pulse/pause ratio</b>             | 1:1  |
| <b>Assignable measured variables</b> | <ul style="list-style-type: none"> <li>■ Mass flow</li> <li>■ Volume flow</li> <li>■ Corrected volume flow</li> <li>■ Density</li> <li>■ Reference density</li> <li>■ Temperature</li> </ul> <p> The range of options increases if the measuring device has one or more application packages.</p> |

### Relay output

|                           |  |
|---------------------------|--|
| <b>Function</b>           | Switch output  |
| <b>Version</b>            | Relay output, galvanically isolated  |
| <b>Switching behavior</b> | Can be set to: <ul style="list-style-type: none"> <li>■ NO (normally open), factory setting</li> <li>■ NC (normally closed)</li> </ul> |

|   |  |
|---|--|
| <b>Maximum switching capacity (passive)</b> | <ul style="list-style-type: none"> <li>▪ DC 30 V, 0.1 A</li> <li>▪ AC 30 V, 0.5 A</li> </ul>   |
| <b>Assignable functions</b>                 | <ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ On</li> <li>▪ Diagnostic behavior</li> <li>▪ Limit value                             <ul style="list-style-type: none"> <li>- Mass flow</li> <li>- Volume flow</li> <li>- Corrected volume flow</li> <li>- Density</li> <li>- Reference density</li> <li>- Temperature</li> <li>- Totalizer 1-3</li> </ul> </li> <li>▪ Flow direction monitoring</li> <li>▪ Status                             <ul style="list-style-type: none"> <li>- Partially filled pipe detection</li> <li>- Low flow cut off</li> </ul> </li> </ul> <p> The range of options increases if the measuring device has one or more application packages.</p> |

**User configurable input/output**

**One** specific input or output is assigned to a user-configurable input/output (configurable I/O) during device commissioning.

The following inputs and outputs are available for assignment:

- Choice of current output: 4 to 20 mA (active), 0/4 to 20 mA (passive)
- Pulse/frequency/switch output
- Choice of current input: 4 to 20 mA (active), 0/4 to 20 mA (passive)
- Status input

The technical values correspond to those of the inputs and outputs described in this section.

Signal on alarm

Depending on the interface, failure information is displayed as follows:

**Current output 0/4 to 20 mA**

*4 to 20 mA*

|                     |  |
|---------------------|--|
| <b>Failure mode</b> | Choose from: <ul style="list-style-type: none"> <li>▪ 4 to 20 mA in accordance with NAMUR recommendation NE 43</li> <li>▪ 4 to 20 mA in accordance with US</li> <li>▪ Min. value: 3.59 mA</li> <li>▪ Max. value: 22.5 mA</li> <li>▪ Freely definable value between: 3.59 to 22.5 mA</li> <li>▪ Actual value</li> <li>▪ Last valid value</li> </ul> |
|---------------------|--|

*0 to 20 mA*

|                     |   |
|---------------------|---|
| <b>Failure mode</b> | Choose from: <ul style="list-style-type: none"> <li>▪ Maximum alarm: 22 mA</li> <li>▪ Freely definable value between: 0 to 20.5 mA</li> </ul> |
|---------------------|---|

**Pulse/frequency/switch output**

|                     |  |
|---------------------|--|
| <b>Pulse output</b> |  |
| <b>Failure mode</b> | Choose from: <ul style="list-style-type: none"> <li>▪ Actual value</li> <li>▪ No pulses</li> </ul> |

| Frequency output |  |
|------------------|--|
| Failure mode     | Choose from: <ul style="list-style-type: none"> <li>▪ Actual value</li> <li>▪ 0 Hz</li> <li>▪ Defined value (<math>f_{max}</math> 2 to 12 500 Hz)</li> </ul> |
| Switch output    |  |
| Failure mode     | Choose from: <ul style="list-style-type: none"> <li>▪ Current status</li> <li>▪ Open</li> <li>▪ Closed</li> </ul>  |

### Relay output

|              |   |
|--------------|---|
| Failure mode | Choose from: <ul style="list-style-type: none"> <li>▪ Current status</li> <li>▪ Open</li> <li>▪ Closed</li> </ul> |
|--------------|---|

### Local display

|                    |   |
|--------------------|---|
| Plain text display | With information on cause and remedial measures |
| Backlight          | Red backlighting indicates a device error.      |

 Status signal as per NAMUR recommendation NE 107

### Interface/protocol


- Via digital communication:
  - HART protocol
- Via service interface
  - CDI-RJ45 service interface
  - WLAN interface

|                    |   |
|--------------------|---|
| Plain text display | With information on cause and remedial measures |
|--------------------|---|

### Web server


|                    |   |
|--------------------|---|
| Plain text display | With information on cause and remedial measures |
|--------------------|---|

### Light emitting diodes (LED)

|                    |  |
|--------------------|--|
| Status information | Status indicated by various light emitting diodes<br>The following information is displayed depending on the device version: <ul style="list-style-type: none"> <li>▪ Supply voltage active</li> <li>▪ Data transmission active</li> <li>▪ Device alarm/error has occurred</li> </ul>  Diagnostic information via light emitting diodes |
|--------------------|--|

Low flow cut off                      The switch points for low flow cut off are user-selectable.

Galvanic isolation                    The outputs are galvanically isolated from one another and from earth (PE).

|                        |   |   |
|------------------------|---|---|
| Protocol-specific data | <b>Manufacturer ID</b>                    | 0x11  |
|                        | <b>Device type ID</b>                     | 0x3B  |
|                        | <b>HART protocol revision</b>             | 7   |
|                        | <b>Device description files (DTM, DD)</b> | Information and files under:<br><a href="http://www.endress.com">www.endress.com</a>  |
|                        | <b>HART load</b>                          | Min. 250 $\Omega$   |
|                        | <b>System integration</b>                 | Information on system integration →  87.<br><ul style="list-style-type: none"> <li>▪ Measured variables via HART protocol</li> <li>▪ Burst Mode functionality</li> </ul> |

## 16.5 Power supply

Terminal assignment →  40

| Supply voltage | Order code for "Power supply" | terminal voltage |            | Frequency range |
|----------------|-------------------------------|------------------|------------|-----------------|
|                |                               |                  |            |                 |
|                | Option D                      | DC24 V           | ±20%       | –               |
|                | Option E                      | AC100 to 240 V   | –15...+10% | 50/60 Hz        |
|                | Option I                      | DC24 V           | ±20%       | –               |
|                |                               | AC100 to 240 V   | –15...+10% | 50/60 Hz        |


Power consumption **Transmitter**  
Max. 10 W (active power)


Current consumption **Transmitter**

- Max. 400 mA (24 V)
- Max. 200 mA (110 V, 50/60 Hz; 230 V, 50/60 Hz)

Power supply failure


- Totalizers stop at the last value measured.
- Configuration is retained in the plug-in memory (HistoROM DAT).
- Error messages (incl. total operated hours) are stored.

Electrical connection →  48



Potential equalization →  54

terminals Spring-loaded terminals: Suitable for strands and strands with ferrules.  
Conductor cross-section 0.2 to 2.5 mm<sup>2</sup> (24 to 12 AWG).

- Cable entries
- Cable gland: M20 × 1.5 with cable Ø 6 to 12 mm (0.24 to 0.47 in)
  - Thread for cable entry:
    - NPT ½"
    - G ½"
    - M20
  - Device plug for connecting cable: M12  
 A device plug is always used for the device version with the order code for "Sensor connection housing", option C "Ultra-compact, hygienic, stainless".



Cable specification →  36

## 16.6 Performance characteristics

- reference operating conditions
- Error limits based on ISO 11631
  - Water with +15 to +45 °C (+59 to +113 °F) at 2 to 6 bar (29 to 87 psi)
  - Specifications as per calibration protocol
  - Accuracy based on accredited calibration rigs that are traced to ISO 17025.
-  To obtain measured errors, use the *Applicator* sizing tool →  203

Maximum measured error o.r. = of reading; 1 g/cm<sup>3</sup> = 1 kg/l; T = medium temperature

### Base accuracy

 Design fundamentals →  218

#### *Mass flow and volume flow (liquids)*

±0.10 % o.r.

#### *Mass flow (gases)*

±0.50 % o.r.

#### *Density (liquids)*

| Under reference operating conditions<br>[g/cm <sup>3</sup> ] | Standard density calibration <sup>1)</sup><br>[g/cm <sup>3</sup> ] | Wide-range Density specification <sup>2) 3)</sup><br>[g/cm <sup>3</sup> ] |
|--|--|---|
| ±0.0005  | ±0.02  | ±0.004  |

- 1) Valid over the entire temperature and density range
- 2) Valid range for special density calibration: 0 to 2 g/cm<sup>3</sup>, +10 to +80 °C (+50 to +176 °F)
- 3) Order code for "Application package", option EE "Special density"

#### *Temperature*

±0.5 °C ± 0.005 · T °C (±0.9 °F ± 0.003 · (T – 32) °F)

**Zero point stability**

| DN    |                   | Zero point stability |          |
|-------|-------------------|----------------------|----------|
| [mm]  | [in]              | [kg/h]               | [lb/min] |
| 8     | $\frac{3}{8}$     | 0.150                | 0.0055   |
| 15    | $\frac{1}{2}$     | 0.488                | 0.0179   |
| 15 FB | $\frac{1}{2}$ FB  | 1.350                | 0.0496   |
| 25    | 1                 | 1.350                | 0.0496   |
| 25 FB | 1 FB              | 3.375                | 0.124    |
| 40    | $1\frac{1}{2}$    | 3.375                | 0.124    |
| 40 FB | $1\frac{1}{2}$ FB | 5.25                 | 0.193    |
| 50    | 2                 | 5.25                 | 0.193    |
| 50 FB | 2 FB              | 13.5                 | 0.496    |
| 80    | 3                 | 13.5                 | 0.496    |

FB = Full bore

**Flow values**

Flow values as turndown parameter depending on nominal diameter.

*SI units*

| DN    | 1:1     | 1:10   | 1:20   | 1:50   | 1:100  | 1:500  |
|-------|---------|--------|--------|--------|--------|--------|
| [mm]  | [kg/h]  | [kg/h] | [kg/h] | [kg/h] | [kg/h] | [kg/h] |
| 8     | 2 000   | 200    | 100    | 40     | 20     | 4      |
| 15    | 6 500   | 650    | 325    | 130    | 65     | 13     |
| 15 FB | 18 000  | 1 800  | 900    | 360    | 180    | 36     |
| 25    | 18 000  | 1 800  | 900    | 360    | 180    | 36     |
| 25 FB | 45 000  | 4 500  | 2 250  | 900    | 450    | 90     |
| 40    | 45 000  | 4 500  | 2 250  | 900    | 450    | 90     |
| 40 FB | 70 000  | 7 000  | 3 500  | 1 400  | 700    | 140    |
| 50    | 70 000  | 7 000  | 3 500  | 1 400  | 700    | 140    |
| 50 FB | 180 000 | 18 000 | 9 000  | 3 600  | 1 800  | 360    |
| 80    | 180 000 | 18 000 | 9 000  | 3 600  | 1 800  | 360    |

FB = Full bore

*US units*

| DN               | 1:1      | 1:10     | 1:20     | 1:50     | 1:100    | 1:500    |
|------------------|----------|----------|----------|----------|----------|----------|
| [inch]           | [lb/min] | [lb/min] | [lb/min] | [lb/min] | [lb/min] | [lb/min] |
| $\frac{3}{8}$    | 73.50    | 7.350    | 3.675    | 1.470    | 0.735    | 0.147    |
| $\frac{1}{2}$    | 238.9    | 23.89    | 11.95    | 4.778    | 2.389    | 0.478    |
| $\frac{1}{2}$ FB | 661.5    | 66.15    | 33.08    | 13.23    | 6.615    | 1.323    |
| 1                | 661.5    | 66.15    | 33.08    | 13.23    | 6.615    | 1.323    |
| 1 FB             | 1 654    | 165.4    | 82.70    | 33.08    | 16.54    | 3.308    |
| $1\frac{1}{2}$   | 1 654    | 165.4    | 82.70    | 33.08    | 16.54    | 3.308    |

| DN     | 1:1      | 1:10     | 1:20     | 1:50     | 1:100    | 1:500    |
|--------|----------|----------|----------|----------|----------|----------|
| [inch] | [lb/min] | [lb/min] | [lb/min] | [lb/min] | [lb/min] | [lb/min] |
| 1½ FB  | 2 573    | 257.3    | 128.7    | 51.46    | 25.73    | 5.146    |
| 2      | 2 573    | 257.3    | 128.7    | 51.46    | 25.73    | 5.146    |
| 2 FB   | 6 615    | 661.5    | 330.8    | 132.3    | 66.15    | 13.23    |
| 3      | 6 615    | 661.5    | 330.8    | 132.3    | 66.15    | 13.23    |

FB = Full bore

**Accuracy of outputs**

The outputs have the following base accuracy specifications.

*Current output*

|          |       |
|----------|-------|
| Accuracy | ±5 µA |
|----------|-------|

*Pulse/frequency output*

o.r. = of reading

|          |   |
|----------|---|
| Accuracy | Max. ±50 ppm o.r. (over the entire ambient temperature range) |
|----------|---|

Repeatability

o.r. = of reading; 1 g/cm<sup>3</sup> = 1 kg/l; T = medium temperature

**Base repeatability**

 Design fundamentals →  218

*Mass flow and volume flow (liquids)*

±0.05 % o.r.

*Mass flow (gases)*

±0.25 % o.r.

*Density (liquids)*

±0.00025 g/cm<sup>3</sup>

*Temperature*

±0.25 °C ± 0.0025 · T °C (±0.45 °F ± 0.0015 · (T-32) °F)

Response time

The response time depends on the configuration (damping).

Influence of ambient temperature

**Current output**

|                         |              |
|-------------------------|--------------|
| Temperature coefficient | Max. 1 µA/°C |
|-------------------------|--------------|

**Pulse/frequency output**

|                         |   |
|-------------------------|---|
| Temperature coefficient | No additional effect. Included in accuracy. |
|-------------------------|---|



Influence of medium temperature

**Mass flow and volume flow**

o.f.s. = of full scale value


When there is a difference between the temperature for zero point adjustment and the process temperature, the additional measured error of the sensor is typically  $\pm 0.0002\%$  o.f.s./ $^{\circ}\text{C}$  ( $\pm 0.0001\%$  o. f.s./ $^{\circ}\text{F}$ ).


The effect is reduced if zero point adjustment is performed at process temperature.

**Density**

When there is a difference between the density calibration temperature and the process temperature, the typical measured error of the sensor is  $\pm 0.0001\text{ g/cm}^3\text{ }^{\circ}\text{C}$  ( $\pm 0.00005\text{ g/cm}^3\text{ }^{\circ}\text{F}$ ). Field density calibration is possible.

**Wide-range density specification (special density calibration)**

If the process temperature is outside the valid range ( $\rightarrow$   214) the measured error is  $\pm 0.0001\text{ g/cm}^3\text{ }^{\circ}\text{C}$  ( $\pm 0.00005\text{ g/cm}^3\text{ }^{\circ}\text{F}$ )

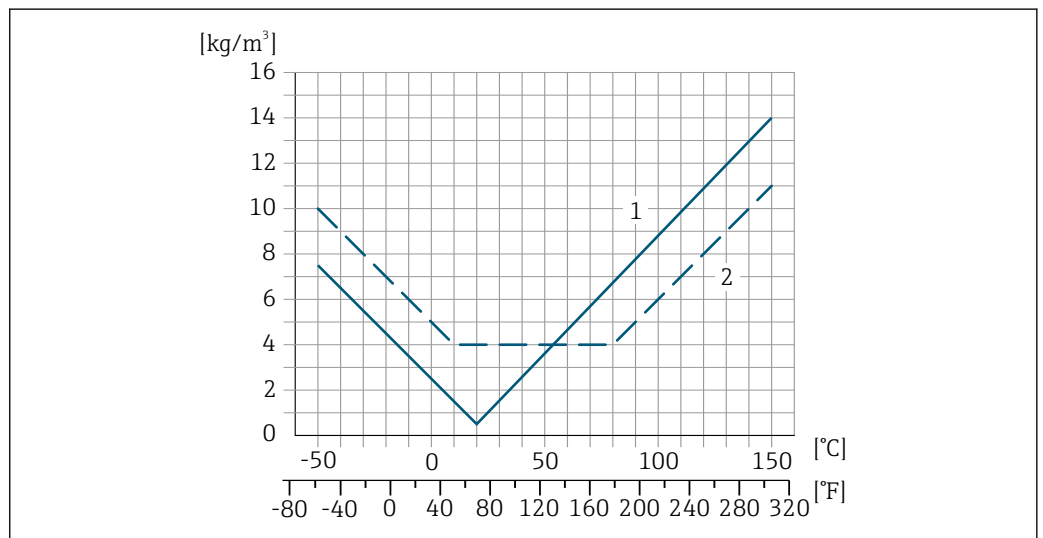

1 Field density calibration, for example at  $+20\text{ }^{\circ}\text{C}$  ( $+68\text{ }^{\circ}\text{F}$ )  
 2 Special density calibration


**Temperature**

$\pm 0.005 \cdot T\text{ }^{\circ}\text{C}$  ( $\pm 0.005 \cdot (T - 32)\text{ }^{\circ}\text{F}$ )

Influence of medium pressure

The table below shows the effect on accuracy of mass flow due to a difference between calibration pressure and process pressure.

o.r. = of reading

-  It is possible to compensate for the effect by:
  - Reading in the current pressure measured value via the current input.
  - Specifying a fixed value for the pressure in the device parameters.

 Operating Instructions .

| DN    |                  | [% o.r./bar] | [% o.r./psi] |
|-------|------------------|--------------|--------------|
| [mm]  | [in]             |              |              |
| 8     | $\frac{3}{8}$    | No effect    | No effect    |
| 15    | $\frac{1}{2}$    | No effect    | No effect    |
| 15 FB | $\frac{1}{2}$ FB | +0.003       | +0.0002      |
| 25    | 1                | +0.003       | +0.0002      |

| DN             |       | [% o.r./bar] | [% o.r./psi] |
|----------------|-------|--------------|--------------|
| [mm]           | [in]  |              |              |
| 25 FB          | 1 FB  | No effect    | No effect    |
| 40             | 1½    | No effect    | No effect    |
| 40 FB          | 1½ FB | No effect    | No effect    |
| 50             | 2     | No effect    | No effect    |
| 50 FB          | 2 FB  | No effect    | No effect    |
| 80             | 3     | No effect    | No effect    |
| FB = Full bore |       |              |              |

Design fundamentals

o.r. = of reading, o.f.s. = of full scale value

BaseAccu = base accuracy in % o.r., BaseRepeat = base repeatability in % o.r.

MeasValue = measured value; ZeroPoint = zero point stability


Calculation of the maximum measured error as a function of the flow rate

| Flow rate  | Maximum measured error in % o.r.   |
|--|--|
| $\geq \frac{\text{ZeroPoint}}{\text{BaseAccu}} \cdot 100$<br><small>A0021332</small> | $\pm \text{BaseAccu}$<br><small>A0021339</small>                                     |
| $< \frac{\text{ZeroPoint}}{\text{BaseAccu}} \cdot 100$<br><small>A0021333</small>    | $\pm \frac{\text{ZeroPoint}}{\text{MeasValue}} \cdot 100$<br><small>A0021334</small> |

Calculation of the maximum repeatability as a function of the flow rate

| Flow rate  | Maximum repeatability in % o.r.  |
|--|--|
| $\geq \frac{1/2 \cdot \text{ZeroPoint}}{\text{BaseRepeat}} \cdot 100$<br><small>A0021335</small> | $\pm \text{BaseRepeat}$<br><small>A0021340</small>   |
| $< \frac{1/2 \cdot \text{ZeroPoint}}{\text{BaseRepeat}} \cdot 100$<br><small>A0021336</small>    | $\pm 1/2 \cdot \frac{\text{ZeroPoint}}{\text{MeasValue}} \cdot 100$<br><small>A0021337</small> |

Example for maximum measured error

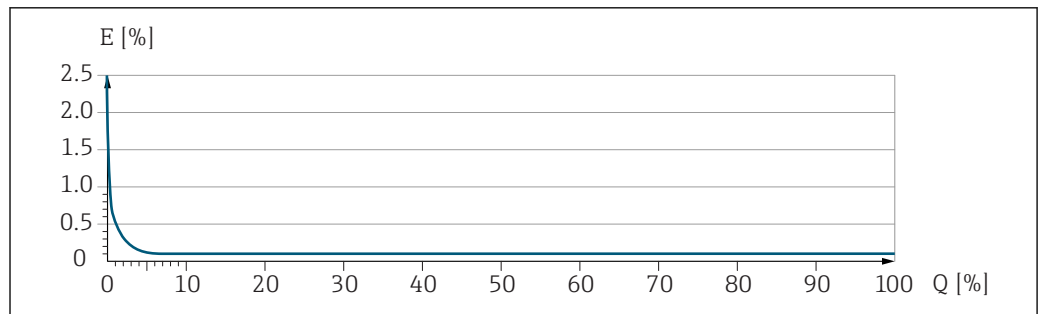

E Maximum measured error in % o.r. (example)  
 Q Flow rate in % of maximum full scale value



## 16.7 Installation

"Mounting requirements"

## 16.8 Environment

Ambient temperature range →  25

### Temperature tables

-  Observe the interdependencies between the permitted ambient and fluid temperatures when operating the device in hazardous areas.
-  For detailed information on the temperature tables, see the separate document entitled "Safety Instructions" (XA) for the device.

Storage temperature -50 to +80 °C (-58 to +176 °F)

Climate class DIN EN 60068-2-38 (test Z/AD)

Degree of protection

### Transmitter

- As standard: IP66/67, type 4X enclosure
- When housing is open: IP20, type 1 enclosure
- Display module: IP20, type 1 enclosure

### Sensor

- As standard: IP66/67, type 4X enclosure
- With the order code for "Sensor options", option **CM**: IP69 can also be ordered

### External WLAN antenna

IP67

Vibration resistance

- Vibration, sinusoidal according to IEC 60068-2-6  
2 to 8.4 Hz, 3.5 mm peak
- Vibration broad-band random, according to IEC 60068-2-64
  - 10 to 200 Hz, 0.003 g<sup>2</sup>/Hz
  - 200 to 2 000 Hz, 0.001 g<sup>2</sup>/Hz
  - Total: 1.54 g rms

Shock resistance

Shock, half-sine according to IEC 60068-2-27  
6 ms 50 g

Impact resistance


Rough handling shocks according to IEC 60068-2-31

Mechanical load

Never use the transmitter housing as a ladder or climbing aid.

Electromagnetic compatibility (EMC)


As per IEC/EN 61326 and NAMUR Recommendation 21 (NE 21)

-  Details are provided in the Declaration of Conformity.

## 16.9 Process

Medium temperature range -50 to +150 °C (-58 to +302 °F)

Dependency of ambient temperature on medium temperature

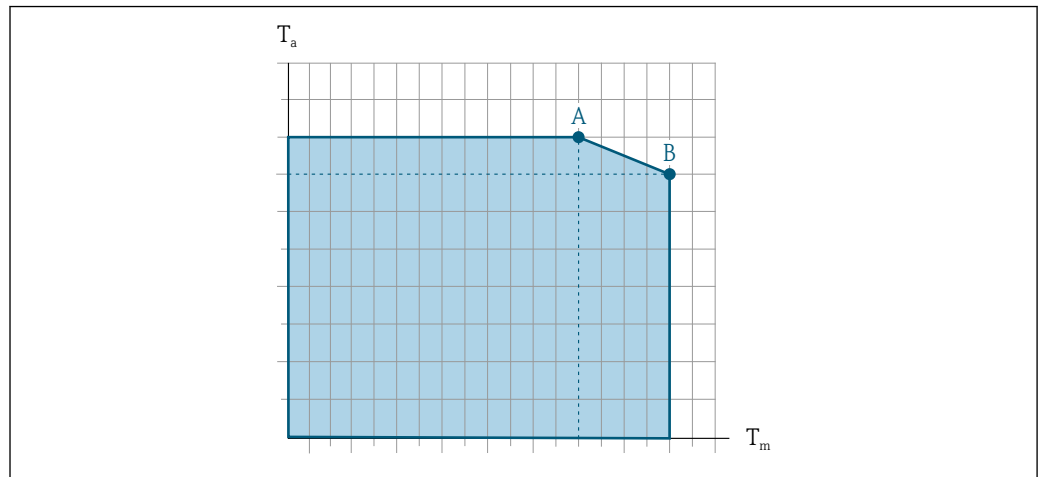

A0031121



44 Exemplary representation, values in the table below.

$T_a$  Ambient temperature

$T_m$  Medium temperature


A Maximum permitted medium temperature  $T_m$  at  $T_{a\ max} = 60\ ^\circ\text{C}$  (140 °F); higher medium temperatures  $T_m$  require a reduced ambient temperature  $T_a$

B Maximum permitted ambient temperature  $T_a$  for the maximum specified medium temperature  $T_m$  of the sensor

 Values for devices used in the hazardous area:  
Separate Ex documentation (XA) for the device →  233.

| Version                 | Not insulated     |                    |                   |                    | Insulated         |                   |                   |                    |
|-------------------------|-------------------|--------------------|-------------------|--------------------|-------------------|-------------------|-------------------|--------------------|
|                         | A                 |                    | B                 |                    | A                 |                   | B                 |                    |
|                         | $T_a$             | $T_m$              | $T_a$             | $T_m$              | $T_a$             | $T_m$             | $T_a$             | $T_m$              |
| Promass I 500 – digital | 60 °C<br>(140 °F) | 140 °C<br>(284 °F) | 55 °C<br>(131 °F) | 150 °C<br>(302 °F) | 60 °C<br>(140 °F) | 90 °C<br>(194 °F) | 45 °C<br>(113 °F) | 150 °C<br>(302 °F) |
| Promass I 500           |                   |                    |                   |                    |                   |                   |                   |                    |

Density 0 to 5 000 kg/m<sup>3</sup> (0 to 312 lb/cf)

Pressure-temperature ratings  An overview of the pressure-temperature ratings for the process connections is provided in the "Technical Information" document


Secondary containment The sensor housing is filled with dry nitrogen gas and protects the electronics and mechanics inside.  
The following secondary containment pressure ratings/burst pressures are only valid for standard devices and/or devices equipped with closed purge connections (never opened/as delivered).

If a device fitted with purge connections (order code for "Sensor option", option **CH** "Purge connection") is connected to the purge system, the maximum nominal pressure is determined by the purge system itself or by the device, depending on which component has the lower nominal pressure classification.


The secondary containment burst pressure refers to a typical internal pressure achieved prior to mechanical failure of the secondary containment as determined during type


testing. The corresponding type test declaration can be ordered with the device (order code for "Additional approval", option **LN** "Type test containment").

| DN             |                   | Secondary containment pressure rating<br>(designed with a safety factor $\geq 4$ ) |       | Secondary containment burst pressure |       |
|----------------|-------------------|--|-------|--------------------------------------|-------|
| [mm]           | [in]              | [bar]  | [psi] | [bar]                                | [psi] |
| 8              | $\frac{3}{8}$     | 40   | 580   | 220                                  | 3 190 |
| 15             | $\frac{1}{2}$     | 40   | 580   | 220                                  | 3 190 |
| 15 FB          | $\frac{1}{2}$ FB  | 40   | 580   | 235                                  | 3 408 |
| 25             | 1                 | 40   | 580   | 235                                  | 3 408 |
| 25 FB          | 1 FB              | 40   | 580   | 220                                  | 3 190 |
| 40             | $1\frac{1}{2}$    | 40   | 580   | 220                                  | 3 190 |
| 40 FB          | $1\frac{1}{2}$ FB | 40   | 580   | 235                                  | 3 408 |
| 50             | 2                 | 40   | 580   | 235                                  | 3 408 |
| 50 FB          | 2 FB              | 40   | 580   | 460                                  | 6 670 |
| 80             | 3                 | 40   | 580   | 460                                  | 6 670 |
| FB = Full bore |                   |  |       |                                      |       |

 If a measuring tube fails (e.g. due to process characteristics like corrosive or abrasive fluids), the fluid will be contained by the secondary containment.


If the sensor is to be purged with gas (gas detection), it should be equipped with purge connections.


 Do not open the purge connections unless the containment can be filled immediately with a dry, inert gas. Use only low pressure to purge. Maximum pressure: 5 bar (72.5 psi).



 For information on the dimensions: see the "Mechanical construction" section of the "Technical Information" document

#### Flow limit



Select the nominal diameter by optimizing between the required flow range and permissible pressure loss.

 For an overview of the full scale values for the measuring range, see the "Measuring range" section →  205


- The minimum recommended full scale value is approx. 1/20 of the maximum full scale value
- In most applications, 20 to 50 % of the maximum full scale value can be considered ideal
- A low full scale value must be selected for abrasive media (such as liquids with entrained solids): flow velocity < 1 m/s (< 3 ft/s).
- For gas measurement the following rules apply:
  - The flow velocity in the measuring tubes should not exceed half the sound velocity (0.5 Mach).
  - The maximum mass flow depends on the density of the gas: formula →  205

 To calculate the flow limit, use the *Applicator* sizing tool →  203

#### Pressure loss

 To calculate the pressure loss, use the *Applicator* sizing tool →  203

#### System pressure

→  26

## 16.10 Mechanical construction

### Design, dimensions



For the dimensions and installation lengths of the device, see the "Technical Information" document, "Mechanical construction" section.

### Weight

All values (weight exclusive of packaging material) refer to devices with EN/DIN PN 40 flanges.

Different values due to different transmitter versions:

#### Transmitter

- Proline 500 – digital polycarbonate: 1.4 kg (3.1 lbs)
- Proline 500 – digital aluminum: 2.4 kg (5.3 lbs)
- Proline 500 aluminum: 6.5 kg (14.3 lbs)
- Proline 500 cast, stainless: 15.6 kg (34.4 lbs)

#### Sensor

- Sensor with aluminum connection housing version: see the information in the following table
- Cast connection housing version, stainless: +3.7 kg (+8.2 lbs)

#### Weight in SI units

| DN [mm] | Weight [kg] |
|---------|-------------|
| 8       | 11          |
| 15      | 13          |
| 15 FB   | 19          |
| 25      | 20          |
| 25 FB   | 39          |
| 40      | 40          |
| 40 FB   | 65          |
| 50      | 67          |
| 50 FB   | 118         |
| 80      | 122         |

FB = Full bore

#### Weight in US units

| DN [in]  | Weight [lbs] |
|----------|--------------|
| 3/8      | 24           |
| 1/2      | 29           |
| 1/2 FB   | 42           |
| 1        | 44           |
| 1 FB     | 86           |
| 1 1/2    | 88           |
| 1 1/2 FB | 143          |
| 2        | 148          |
| 2 FB     | 260          |

| DN [in]        | Weight [lbs] |
|----------------|--------------|
| 3              | 269          |
| FB = Full bore |              |

## Materials

**Transmitter housing**

*Proline 500 – digital transmitter housing*

Order code for "Transmitter housing":

- Option **A** "Aluminum coated": aluminum, AlSi10Mg, coated
- Option **D** "Polycarbonate": polycarbonate

*Proline 500 transmitter housing*

Order code for "Transmitter housing":

- Option **A** "Aluminum coated": aluminum, AlSi10Mg, coated
- Option **L** "Cast, stainless": cast, stainless steel, 1.4409 (CF3M) similar to 316L

*Window material*


Order code for "Transmitter housing":

- Option **A** "Aluminum, coated": glass
- Option **D** "Polycarbonate": plastic
- Option **L** "Cast, stainless": glass

**Sensor connection housing**

Order code for "Sensor connection housing":

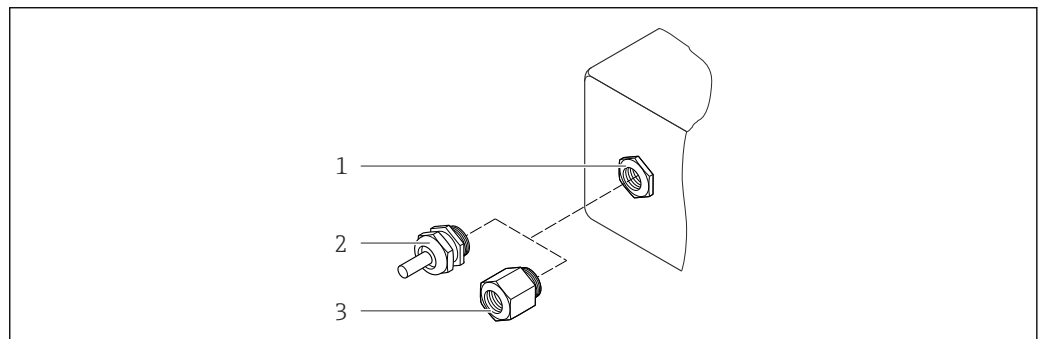

- Option **A** "Aluminum coated": aluminum, AlSi10Mg, coated
- Option **B** "Stainless":
  - Stainless steel 1.4301 (304)
  - Optional: Order code for "Sensor feature", option **CC** "Hygienic version, for maximum corrosion resistance": stainless steel, 1.4404 (316L)
- Option **C** "Ultra-compact, stainless":
  - Stainless steel 1.4301 (304)
  - Optional: Order code for "Sensor feature", option **CC** "Hygienic version, for maximum corrosion resistance": stainless steel, 1.4404 (316L)
- Option **L** "Cast, stainless": 1.4409 (CF3M) similar to 316L

**Cable entries/cable glands**

45 Possible cable entries/cable glands

- 1 Female thread M20 × 1.5
- 2 Cable gland M20 × 1.5
- 3 Adapter for cable entry with internal thread G ½" or NPT ½"

A0020640

| Cable entries and adapters   | Material                       |
|--|--------------------------------|
| Cable gland M20 × 1.5  | Plastic                        |
| <ul style="list-style-type: none"> <li>■ Adapter for cable entry with internal thread G ½"</li> <li>■ Adapter for cable entry with internal thread NPT ½"</li> </ul> <p> Only available for certain device versions:</p> <ul style="list-style-type: none"> <li>■ Order code for "Transmitter housing":                             <ul style="list-style-type: none"> <li>– Option <b>A</b> "Aluminum, coated"</li> <li>– Option <b>D</b> "Polycarbonate"</li> </ul> </li> <li>■ Order code for "Sensor connection housing":                             <ul style="list-style-type: none"> <li>– Proline 500 – digital:                                     <ul style="list-style-type: none"> <li>Option <b>A</b> "Aluminum coated"</li> <li>Option <b>B</b> "Stainless"</li> <li>Option <b>L</b> "Cast, stainless"</li> </ul> </li> <li>– Proline 500:                                     <ul style="list-style-type: none"> <li>Option <b>B</b> "Stainless"</li> <li>Option <b>L</b> "Cast, stainless"</li> </ul> </li> </ul> </li> </ul> | Nickel-plated brass            |
| <ul style="list-style-type: none"> <li>■ Adapter for cable entry with internal thread G ½"</li> <li>■ Adapter for cable entry with internal thread NPT ½"</li> </ul> <p> Only available for certain device versions:</p> <ul style="list-style-type: none"> <li>■ Order code for "Transmitter housing":                             <ul style="list-style-type: none"> <li>Option <b>L</b> "Cast, stainless"</li> </ul> </li> <li>■ Order code for "Sensor connection housing":                             <ul style="list-style-type: none"> <li>Option <b>L</b> "Cast, stainless"</li> </ul> </li> </ul>   | Stainless steel, 1.4404 (316L) |


### Connecting cable

*Connecting cable for sensor - Proline 500 – digital transmitter*

PVC cable with copper shield

*Connecting cable for sensor - Proline 500 transmitter*

- Standard cable: PVC cable with copper shield
- Reinforced cable: PVC cable with copper shield and additional steel wire braided jacket

 UV rays can impair the cable outer sheath. Protect the cable from exposure to sun as much as possible.

### Sensor housing


- Acid and alkali-resistant outer surface
- Stainless steel 1.4301 (304)

### Measuring tubes

Grade 9 titanium

### Process connections

- Flanges according to EN 1092-1 (DIN 2501) / according to ASME B16.5/ according to JIS:
  - Stainless steel 1.4301 (304)
  - Wetted parts: Grade 2 titanium
- All other process connections:
  - Grade 2 titanium

 List of all available process connections →  225

### Seals

Welded process connections without internal seals



### Accessories

#### Protective cover

Stainless steel, 1.4404 (316L)

#### External WLAN antenna

- Antenna: ASA plastic (acrylic ester-styrene-acrylonitrile) and nickel-plated brass
- Adapter: Stainless steel and nickel-plated brass
- Cable: Polyethylene
- Plug: Nickel-plated brass
- Angle bracket: Stainless steel

### Process connections

- Fixed flange connections:
  - EN 1092-1 (DIN 2501) flange
  - EN 1092-1 (DIN 2512N) flange
  - ASME B16.5 flange
  - JIS B2220 flange
  - DIN 11864-2 Form A flange, DIN 11866 series A, flange with notch
- Clamp connections
  - Tri-Clamp (OD tubes), DIN 11866 series C
- Eccentric clamp connection:
  - Eccen. Tri-Clamp, DIN 11866 series C
- Thread:
  - DIN 11851 thread, DIN 11866 series A
  - SMS 1145 thread
  - ISO 2853 thread, ISO 2037
  - DIN 11864-1 Form A thread, DIN 11866 series A



For information on the different materials used in the process connections → 224

### Surface roughness

All data relate to parts in contact with fluid. The following surface roughness quality can be ordered.

- Not polished
- $Ra_{max} = 0.8 \mu\text{m}$  (32  $\mu\text{in}$ )
- $Ra_{max} = 0.4 \mu\text{m}$  (16  $\mu\text{in}$ )

## 16.11 Operability

### Languages

Can be operated in the following languages:

- Via local operation
  - English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish, Chinese, Japanese, Korean, Bahasa (Indonesian), Vietnamese, Czech, Swedish
- Via Web browser
  - English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish, Chinese, Japanese, Korean, Bahasa (Indonesian), Vietnamese, Czech, Swedish
- Via "FieldCare", "DeviceCare" operating tool: English, German, French, Spanish, Italian, Chinese, Japanese


Local operation


**Via display module**

Two display modules are available:

- Order code for "Display; operation", option **F** "4-line, illuminated, graphic display; touch control"
- Order code for "Display; operation", option **G** "4-line, illuminated, graphic display; touch control + WLAN"

 Information about WLAN interface →  81

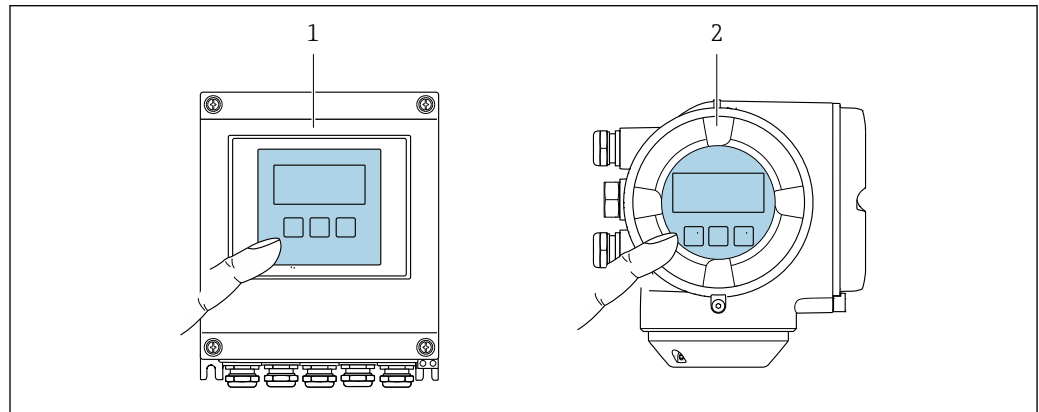


 46 Operation with touch control

- 1 Proline 500 - digital
- 2 Proline 500

*Display elements*

- 4-line, illuminated, graphic display
- White background lighting; switches to red in event of device errors
- Format for displaying measured variables and status variables can be individually configured
- Permitted ambient temperature for the display: -20 to +60 °C (-4 to +140 °F)  
The readability of the display may be impaired at temperatures outside the temperature range.


*Operating elements*

- External operation via touch control (3 optical keys) without opening the housing: 
- Operating elements also accessible in the various zones of the hazardous area

Remote operation




→  80

Service interface

→  81

Supported operating tools

Different operating tools can be used for local or remote access to the measuring device. Depending on the operating tool used, access is possible with different operating units and via a variety of interfaces.

| Supported operating tools | Operating unit                                       | Interface   | Additional information   |
|---------------------------|--|---|--|
| Web browser               | Notebook, PC or tablet with Web browser              | <ul style="list-style-type: none"> <li>■ CDI-RJ45 service interface</li> <li>■ WLAN interface</li> </ul>                              | Special Documentation for device →  234 |
| DeviceCare SFE100         | Notebook, PC or tablet with Microsoft Windows system | <ul style="list-style-type: none"> <li>■ CDI-RJ45 service interface</li> <li>■ WLAN interface</li> <li>■ Fieldbus protocol</li> </ul> | →  203                                  |
| FieldCare SFE500          | Notebook, PC or tablet with Microsoft Windows system | <ul style="list-style-type: none"> <li>■ CDI-RJ45 service interface</li> <li>■ WLAN interface</li> <li>■ Fieldbus protocol</li> </ul> | →  203                                  |
| Device Xpert              | Field Xpert SFX 100/350/370                          | HART and FOUNDATION Fieldbus fieldbus protocol  | Operating Instructions BA01202S<br>Device description files:<br>Use update function of handheld terminal                   |



Other operating tools based on FDT technology with a device driver such as DTM/iDTM or DD/EDD can be used for device operation. These operating tools are available from the individual manufacturers. Integration into the following operating tools, among others, is supported:

- FactoryTalk AssetCentre (FTAC) by Rockwell Automation → [www.rockwellautomation.com](http://www.rockwellautomation.com)
- Process Device Manager (PDM) by Siemens → [www.siemens.com](http://www.siemens.com)
- Asset Management Solutions (AMS) by Emerson → [www.emersonprocess.com](http://www.emersonprocess.com)
- FieldCommunicator 375/475 by Emerson → [www.emersonprocess.com](http://www.emersonprocess.com)
- Field Device Manager (FDM) by Honeywell → [www.honeywellprocess.com](http://www.honeywellprocess.com)
- FieldMate by Yokogawa → [www.yokogawa.com](http://www.yokogawa.com)
- PACTWare → [www.pactware.com](http://www.pactware.com)

The associated device description files are available at: [www.endress.com](http://www.endress.com) → Downloads

### Web server


Thanks to the integrated Web server, the device can be operated and configured via a Web browser and via a service interface (CDI-RJ45) or via a WLAN interface. The structure of the operating menu is the same as for the local display. In addition to the measured values, status information on the device is also displayed and allows the user to monitor the status of the device. Furthermore the device data can be managed and the network parameters can be configured.



A device that has a WLAN interface (can be ordered as an option) is required for the WLAN connection: order code for "Display; operation", option **G** "4-line, illuminated; touch control + WLAN". The device acts as an Access Point and enables communication by computer or a mobile handheld terminal.

### Supported functions

Data exchange between the operating unit (such as a notebook for example) and the measuring device:


- Upload the configuration from the measuring device (XML format, configuration backup)
- Save the configuration to the measuring device (XML format, restore configuration)
- Export event list (.csv file)
- Export parameter settings (.csv file or PDF file, document the measuring point configuration)
- Export the Heartbeat verification log (PDF file, only available with the "Heartbeat Verification" application package)

- Flash firmware version for device firmware upgrade, for instance
- Download driver for system integration
- Visualize up to 1000 saved measured values (only available with the **Extended HistoROM** application package →  231)

 [Webserver special documentation](#) →  234

HistoROM data management

The measuring device features HistoROM data management. HistoROM data management comprises both the storage and import/export of key device and process data, making operation and servicing far more reliable, secure and efficient.

 When the device is delivered, the factory settings of the configuration data are stored as a backup in the device memory. This memory can be overwritten with an updated data record, for example after commissioning.

**Additional information on the data storage concept**

*There are different types of data storage units in which device data are stored and used by the device:*

|                         | Device memory  | T-DAT  | S-DAT   |
|-------------------------|--|--|---|
| <b>Available data</b>   | <ul style="list-style-type: none"> <li>▪ Event logbook such as diagnostic events for example</li> <li>▪ Parameter data record backup</li> <li>▪ Device firmware package</li> </ul> | <ul style="list-style-type: none"> <li>▪ Measured value logging ("Extended HistoROM" order option)</li> <li>▪ Current parameter data record (used by firmware at run time)</li> <li>▪ Maximum indicators (min/max values)</li> <li>▪ Totalizer values</li> </ul> | <ul style="list-style-type: none"> <li>▪ Sensor data: nominal diameter etc.</li> <li>▪ Serial number</li> <li>▪ Calibration data</li> <li>▪ Device configuration (e.g. SW options, fixed I/O or multi I/O)</li> </ul> |
| <b>Storage location</b> | Fixed on the user interface board in the connection compartment  | Attachable to the user interface board in the connection compartment   | In the sensor plug in the transmitter neck part   |

**Data backup**

**Automatic**

- The most important device data (sensor and transmitter) are automatically saved in the DAT modules
- If the transmitter or measuring device is replaced: once the T-DAT containing the previous device data has been exchanged, the new measuring device is ready for operation again immediately without any errors
- If the sensor is replaced: once the sensor has been replaced, new sensor data are transferred from the S-DAT in the measuring device and the measuring device is ready for operation again immediately without any errors
- If exchanging the electronics module (e.g. I/O electronics module): Once the electronics module has been replaced, the software of the module is compared against the current device firmware. The module software is upgraded or downgraded where necessary. The electronics module is available for use immediately afterwards and no compatibility problems occur.

**Manual**

Additional parameter data record (complete parameter settings) in the integrated device memory HistoROM backup for:

- Data backup function  
Backup and subsequent restoration of a device configuration in the device memory HistoROM backup
- Data comparison function  
Comparison of the current device configuration with the device configuration saved in the device memory HistoROM backup

**Data transfer****Manual**

Transfer of a device configuration to another device using the export function of the specific operating tool, e.g. with FieldCare, DeviceCare or Web server: to duplicate the configuration or to store in an archive (e.g. for backup purposes)

**Event list****Automatic**

- Chronological display of up to 20 event messages in the events list
- If the **Extended HistoROM** application package (order option) is enabled: up to 100 event messages are displayed in the events list along with a time stamp, plain text description and remedial measures
- The events list can be exported and displayed via a variety of interfaces and operating tools e.g. DeviceCare, FieldCare or Web server

**Data logging****Manual**

If the **Extended HistoROM** application package (order option) is enabled:

- Record up to 1 000 measured values via 1 to 4 channels
- User configurable recording interval
- Record up to 250 measured values via each of the 4 memory channels
- Export the measured value log via a variety of interfaces and operating tools e.g. FieldCare, DeviceCare or web server

**16.12 Certificates and approvals****CE mark**

The measuring system is in conformity with the statutory requirements of the applicable EU Directives. These are listed in the corresponding EU Declaration of Conformity along with the standards applied.

Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.

**C-Tick symbol**





The measuring system meets the EMC requirements of the "Australian Communications and Media Authority (ACMA)".

**Ex approval**

The devices are certified for use in hazardous areas and the relevant safety instructions are provided in the separate "Safety Instructions" (XA) document. Reference is made to this document on the nameplate.

**Sanitary compatibility**

- 3-A approval  
Only devices with the order code for "Additional approval", option **LP** "3A" have 3-A approval.
- EHEDG-tested  
Only devices with the order code for "Additional approval", option **LT** "EHEDG" have been tested and meet the requirements of the EHEDG.  
To meet the requirements for EHEDG certification, the device must be used with process connections in accordance with the EHEDG position paper entitled "Easy Cleanable Pipe Couplings and Process Connections" ([www.ehedg.org](http://www.ehedg.org)).
- FDA
- Food Contact Materials Regulation (EC) 1935/2004



|                                |   |
|--------------------------------|---|
| Pharmaceutical compatibility   | <ul style="list-style-type: none"> <li>■ FDA</li> <li>■ USP Class VI</li> <li>■ TSE/BSE certificate of suitability</li> </ul>   |
| Functional safety              | <p>The measuring device can be used for flow monitoring systems (min., max., range) up to SIL 2 (single-channel architecture; order code for "Additional approval", option <b>LA</b>) and SIL 3 (multichannel architecture with homogeneous redundancy) and is independently evaluated and certified by the TÜV in accordance with IEC 61508.</p> <p>The following types of monitoring in safety equipment are possible:</p> <ul style="list-style-type: none"> <li>■ Mass flow</li> <li>■ Volume flow</li> <li>■ Density</li> </ul> <p> Functional Safety Manual with information on the SIL device →  233</p> |
| HART certification             | <p><b>HART interface</b></p> <p>The measuring device is certified and registered by the FieldComm Group. The measuring system meets all the requirements of the following specifications:</p> <ul style="list-style-type: none"> <li>■ Certified according to HART 7</li> <li>■ The device can also be operated with certified devices of other manufacturers (interoperability)</li> </ul>   |
| Pressure Equipment Directive   | <ul style="list-style-type: none"> <li>■ With the identification PED/G1/x (x = category) on the sensor nameplate, Endress+Hauser confirms conformity with the "Essential Safety Requirements" specified in Appendix I of the Pressure Equipment Directive 2014/68/EC.</li> <li>■ Devices not bearing this marking (PED) are designed and manufactured according to good engineering practice. They meet the requirements of Art. 4, Par. 3 of the Pressure Equipment Directive 2014/68/EU. The range of application is indicated in tables 6 to 9 in Annex II of the Pressure Equipment Directive 2014/68/EC.</li> </ul>  |
| Radio approval                 | <p>The measuring device has radio approval.</p> <p> For detailed information on the radio approval, see the Special Documentation →  234</p>  |
| Additional certification       | <p><b>CRN approval</b></p> <p>Some device versions have CRN approval. A CRN-approved process connection with a CSA approval must be ordered for a CRN-approved device.</p> <p><b>Tests and certificates</b></p> <ul style="list-style-type: none"> <li>■ Pressure test, internal procedure, inspection certificate</li> <li>■ EN10204-3.1 Material certificate, wetted parts and secondary containment</li> <li>■ PMI test (XRF), internal procedure, wetted parts, test report</li> <li>■ EN10204-2.1 confirmation of compliance with the order and EN10204-2.2 test report</li> </ul>   |
| Other standards and guidelines | <ul style="list-style-type: none"> <li>■ EN 60529<br/>Degrees of protection provided by enclosures (IP code)</li> <li>■ IEC/EN 60068-2-6<br/>Environmental influences: Test procedure - Test Fc: vibrate (sinusoidal).</li> <li>■ IEC/EN 60068-2-31<br/>Environmental influences: Test procedure - Test Ec: shocks due to rough handling, primarily for devices.</li> </ul>   |

- EN 61010-1  
Safety requirements for electrical equipment for measurement, control and laboratory use - general requirements
- IEC/EN 61326  
Emission in accordance with Class A requirements. Electromagnetic compatibility (EMC requirements).
- NAMUR NE 21  
Electromagnetic compatibility (EMC) of industrial process and laboratory control equipment
- NAMUR NE 32  
Data retention in the event of a power failure in field and control instruments with microprocessors
- NAMUR NE 43  
Standardization of the signal level for the breakdown information of digital transmitters with analog output signal.
- NAMUR NE 53  
Software of field devices and signal-processing devices with digital electronics
- NAMUR NE 80  
The application of the pressure equipment directive to process control devices
- NAMUR NE 105  
Specifications for integrating fieldbus devices in engineering tools for field devices
- NAMUR NE 107  
Self-monitoring and diagnosis of field devices
- NAMUR NE 131  
Requirements for field devices for standard applications
- NAMUR NE 132  
Coriolis mass meter

### 16.13 Application packages

Many different application packages are available to enhance the functionality of the device. Such packages might be needed to address safety aspects or specific application requirements.

The application packages can be ordered with the device or subsequently from Endress+Hauser. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: [www.endress.com](http://www.endress.com).

 Detailed information on the application packages:  
Special Documentation for the device →  233

#### Diagnostics functions

| Package           | Description   |
|-------------------|---|
| Extended HistoROM | <p>Comprises extended functions concerning the event log and the activation of the measured value memory.</p> <p>Event log:<br/>Memory volume is extended from 20 message entries (standard version) to up to 100 entries.</p> <p>Data logging (line recorder):</p> <ul style="list-style-type: none"> <li>▪ Memory capacity for up to 1000 measured values is activated.</li> <li>▪ 250 measured values can be output via each of the 4 memory channels. The recording interval can be defined and configured by the user.</li> <li>▪ Measured value logs can be accessed via the local display or operating tool e.g. FieldCare, DeviceCare or Web server.</li> </ul> |

Heartbeat Technology

| Package                               | Description   |
|---------------------------------------|---|
| Heartbeat Verification<br>+Monitoring | <p><b>Heartbeat Verification</b><br/>Meets the requirement for traceable verification to DIN ISO 9001:2008 Chapter 7.6 a) "Control of monitoring and measuring equipment".</p> <ul style="list-style-type: none"> <li>■ Functional testing in the installed state without interrupting the process.</li> <li>■ Traceable verification results on request, including a report.</li> <li>■ Simple testing process via local operation or other operating interfaces.</li> <li>■ Clear measuring point assessment (pass/fail) with high test coverage within the framework of manufacturer specifications.</li> <li>■ Extension of calibration intervals according to operator's risk assessment.</li> </ul> <p><b>Heartbeat Monitoring</b><br/>Continuously supplies data, which are characteristic of the measuring principle, to an external condition monitoring system for the purpose of preventive maintenance or process analysis. These data enable the operator to:</p> <ul style="list-style-type: none"> <li>■ Draw conclusions - using these data and other information - about the impact process influences (such as corrosion, abrasion, buildup etc.) have on the measuring performance over time.</li> <li>■ Schedule servicing in time.</li> <li>■ Monitor the process or product quality, e.g. gas pockets.</li> </ul> |



Concentration

| Package                                       | Description  |
|---|--|
| Concentration measurement and special density | <p><b>Calculation and outputting of fluid concentrations</b><br/>Many applications use density as a key measured value for monitoring quality or controlling processes. The device measures the density of the fluid as standard and makes this value available to the control system.<br/>The "Special Density" application package offers high-precision density measurement over a wide density and temperature range particularly for applications subject to varying process conditions.<br/>The observed density is converted to the concentration of a substance of a binary mixture using the "Concentration Measurement" application package:</p> <ul style="list-style-type: none"> <li>■ Choice of predefined fluids (e.g. various sugar solutions, acids, alkalis, salts, ethanol etc.)</li> <li>■ Common or user-defined units (°Brix, °Plato, % mass, % volume, mol/l etc.) for standard applications.</li> <li>■ Concentration calculation from user-defined tables.</li> </ul> |

Viscosity



| Package               | Description   |
|-----------------------|---|
| Viscosity measurement | <p><b>In-line and real-time viscosity measurement</b><br/>Promass I with the "Viscosity" application package also measures the real-time viscosity of the fluid directly in the process, in addition to measuring the mass flow/volume flow/ temperature and density.</p> <p>The following viscosity measurements are performed on liquids:</p> <ul style="list-style-type: none"> <li>■ Dynamic viscosity</li> <li>■ Kinematic viscosity</li> <li>■ Temperature-compensated viscosity (kinematic and dynamic) in relation to the reference temperature</li> </ul> <p>Viscosity measurement can be used for Newtonian and non-Newtonian applications and supplies accurate measured data irrespective of the flow, even under difficult conditions.</p> |

OPC-UA server


| Package       | Description   |
|---------------|---|
| OPC-UA-Server | <p>The application package provides the user with an integrated OPC-UA server for comprehensive instrument services for IoT and SCADA applications.</p> <p> Special Documentation for the "OPC-UA-Server" application package<br/>→  234.</p> |



## 16.14 Accessories

 Overview of accessories available for order →  201

## 16.15 Supplementary documentation

 For an overview of the scope of the associated Technical Documentation, refer to the following:

- The *W@M Device Viewer* : Enter the serial number from the nameplate ([www.endress.com/deviceviewer](http://www.endress.com/deviceviewer))
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

Standard documentation      **Brief Operating Instructions**

*Brief Operating Instructions for the sensor*

| Measuring device  | Documentation code |
|-------------------|--------------------|
| Proline Promass I | KA01284D           |

*Brief Operating Instructions for transmitter*

| Measuring device      | Documentation code |
|-----------------------|--------------------|
| Proline 500 – digital | KA01315D           |
| Proline 500           | KA01314D           |

### Technical Information

| Measuring device | Documentation code |
|------------------|--------------------|
| Promass I 500    | TI01284D           |

### Description of Device Parameters

| Measuring device | Documentation code |
|------------------|--------------------|
| Promass 500      | GP01060D           |

Device-dependent  
additional documentation

### Safety instructions

Safety instructions for electrical equipment for hazardous areas.

| Contents         | Documentation code |
|------------------|--------------------|
|                  | Measuring device   |
| ATEX/IECEX Ex i  | XA01473D           |
| ATEX/IECEX Ex ec | XA01474D           |
| cCSAus IS        | XA01475D           |
| cCSAus Ex i      | XA01509D           |
| cCSAus Ex nA     | XA01510D           |
| INMETRO Ex i     | XA01476D           |
| INMETRO Ex ec    | XA01477D           |

| Contents    | Documentation code |
|-------------|--------------------|
|             | Measuring device   |
| NEPSI Ex i  | XA01478D           |
| NEPSI Ex nA | XA01479D           |

### Special Documentation

| Contents  | Documentation code |
|---|--------------------|
| Information on the Pressure Equipment Directive                 | SD01614D           |
| Functional Safety Manual  | SD01729D           |
| Radio approvals for WLAN interface for A309/A310 display module | SD01793D           |
| Web server  | SD01666D           |
| IloT Package/OPC-UA   | SD02040D           |
| Heartbeat Technology  | SD01643D           |
| Concentration measurement                                       | SD01645D           |
| Petroleum   | SD02013D           |
| Viscosity measurement Promass I                                 | SD01647D           |

### Installation Instructions

| Contents  | Comment   |
|---|---|
| Installation instructions for spare part sets and accessories | <ul style="list-style-type: none"> <li>▪ Access the overview of all the available spare part sets via <i>W@M Device Viewer</i> → 📄 199</li> <li>▪ Accessories available for order with Installation Instructions → 📄 201</li> </ul> |

# Index

## 0 ... 9

3-A approval . . . . . 229

## A

Access authorization to parameters  
     Read access . . . . . 72  
     Write access . . . . . 72  
 Access code . . . . . 72  
     Incorrect input . . . . . 72  
 Accuracy . . . . . 214  
 Adapting the diagnostic behavior . . . . . 184  
 Adapting the status signal . . . . . 184  
 Additional certification . . . . . 230  
 Ambient temperature  
     Influence . . . . . 216  
 AMS Device Manager . . . . . 85  
     Function . . . . . 85  
 Application . . . . . 204  
 Application packages . . . . . 231  
 Applicator . . . . . 205  
 Approvals . . . . . 229

## B

Burst Mode . . . . . 90

## C

C-Tick symbol . . . . . 229  
 Cable entries  
     Technical data . . . . . 214  
 Cable entry  
     Degree of protection . . . . . 58  
 CE mark . . . . . 11, 229  
 Certificates . . . . . 229  
 Check  
     Installation . . . . . 35  
 Checklist  
     Post-connection check . . . . . 59  
     Post-installation check . . . . . 35  
 Cleaning  
     Cleaning in place (CIP) . . . . . 198  
     Exterior cleaning . . . . . 198  
     Interior cleaning . . . . . 198  
     Sterilization in place (SIP) . . . . . 198  
 Climate class . . . . . 219  
 Commissioning . . . . . 94  
     Advanced settings . . . . . 136  
     Configuring the measuring device . . . . . 94  
 Communication-specific data . . . . . 87  
 Connecting cable . . . . . 36  
 Connecting the connecting cable  
     Proline 500 – digital transmitter . . . . . 45  
     Proline 500 terminal assignment . . . . . 48  
     Proline 500 transmitter . . . . . 51  
     Sensor connection housing, Proline 500 . . . . . 48  
     Sensor connection housing, Proline 500 - digital . . . . . 41  
     Terminal assignment of Proline 500 - digital . . . . . 41

Connecting the measuring device  
     Proline 500 . . . . . 48  
     Proline 500 – digital . . . . . 41  
 Connecting the signal cable/supply voltage cable  
     Proline 500 – digital transmitter . . . . . 46  
     Proline 500 transmitter . . . . . 52  
 Connection  
     see Electrical connection  
 Connection preparations . . . . . 40  
 Connection tools . . . . . 36  
 Context menu  
     Calling up . . . . . 69  
     Closing . . . . . 69  
     Explanation . . . . . 69  
 Current consumption . . . . . 213

## D

Declaration of Conformity . . . . . 11  
 Define access code . . . . . 155, 156  
 Degree of protection . . . . . 58, 219  
 Density . . . . . 220  
 Design fundamentals  
     Maximum measured error . . . . . 218  
     Repeatability . . . . . 218  
 Designated use . . . . . 10  
 Device components . . . . . 15  
 Device description files . . . . . 87  
 Device documentation  
     Supplementary documentation . . . . . 8  
 Device locking, status . . . . . 159  
 Device name  
     Sensor . . . . . 20  
     Transmitter . . . . . 18  
 Device repair . . . . . 199  
 Device revision . . . . . 87  
 Device type ID . . . . . 87  
 DeviceCare . . . . . 85  
     Device description file . . . . . 87  
 Diagnostic behavior  
     Explanation . . . . . 180  
     Symbols . . . . . 180  
 Diagnostic information  
     Design, description . . . . . 180, 183  
     DeviceCare . . . . . 183  
     FieldCare . . . . . 183  
     Light emitting diodes . . . . . 175  
     Onsite display . . . . . 179  
     Overview . . . . . 185  
     Remedial measures . . . . . 185  
     Web browser . . . . . 181  
 Diagnostic list . . . . . 190  
 Diagnostic message . . . . . 179  
 Diagnostics  
     Symbols . . . . . 179  
 DIP switch  
     see Write protection switch

- Direct access . . . . . 70
- Direct access code . . . . . 65
- Disabling write protection . . . . . 155
- Display
  - see Onsite display
- Display area
  - For operational display . . . . . 63
  - In the navigation view . . . . . 65
- Display values
  - For locking status . . . . . 159
- Disposal . . . . . 200
- Document
  - Function . . . . . 6
  - Symbols used . . . . . 6
- Document function . . . . . 6
- Down pipe . . . . . 24
- E**
- Editing view . . . . . 66
  - Input screen . . . . . 67
  - Using operating elements . . . . . 67, 68
- EHDEG-certified . . . . . 229
- Electrical connection
  - CommuBox FXA195 (USB) . . . . . 80
  - Computer with Web browser (e.g. Internet Explorer) . . . . . 80
  - Degree of protection . . . . . 58
  - Field Communicator 475 . . . . . 80
  - Field Xpert SFX350/SFX370 . . . . . 80
  - Measuring device . . . . . 36
  - Operating tool (e.g. FieldCare, AMS Device Manager, SIMATIC PDM) . . . . . 80
  - Operating tools
    - Via HART protocol . . . . . 80
    - Via service interface (CDI-RJ45) . . . . . 81
    - Via WLAN interface . . . . . 81
  - VIATOR Bluetooth modem . . . . . 80
  - Web server . . . . . 81
  - WLAN interface . . . . . 81
- Electromagnetic compatibility . . . . . 219
- Electronics module . . . . . 15
- Enabling write protection . . . . . 155
- Enabling/disabling the keypad lock . . . . . 73
- Endress+Hauser services
  - Maintenance . . . . . 198
  - Repair . . . . . 199
- Environment
  - Impact resistance . . . . . 219
  - Mechanical load . . . . . 219
  - Shock resistance . . . . . 219
  - Storage temperature . . . . . 219
  - Vibration resistance . . . . . 219
- Error messages
  - see Diagnostic messages
- Event list . . . . . 191
- Event logbook . . . . . 191
- Ex approval . . . . . 229
- Extended order code
  - Sensor . . . . . 20
- Transmitter . . . . . 18
- Exterior cleaning . . . . . 198
- F**
- FDA . . . . . 229, 230
- Field Communicator
  - Function . . . . . 86
- Field Communicator 475 . . . . . 86
- Field of application
  - Residual risks . . . . . 11
- Field Xpert
  - Function . . . . . 83
- Field Xpert SFX350 . . . . . 83
- FieldCare . . . . . 83
  - Device description file . . . . . 87
  - Establishing a connection . . . . . 84
  - Function . . . . . 83
  - User interface . . . . . 85
- Filtering the event logbook . . . . . 191
- Firmware
  - Release date . . . . . 87
  - Version . . . . . 87
- Firmware history . . . . . 196
- Flow direction . . . . . 24, 30
- Flow limit . . . . . 221
- Food Contact Materials Regulation . . . . . 229
- Function check . . . . . 94
- Function range
  - Field Xpert . . . . . 83
- Function scope
  - AMS Device Manager . . . . . 85
  - Field Communicator . . . . . 86
  - Field Communicator 475 . . . . . 86
  - SIMATIC PDM . . . . . 86
- Functional safety (SIL) . . . . . 230
- Functions
  - see Parameters
- G**
- Galvanic isolation . . . . . 212
- H**
- Hardware write protection . . . . . 157
- HART certification . . . . . 230
- HART protocol
  - Device variables . . . . . 87
  - Measured variables . . . . . 87
- Help text
  - Calling up . . . . . 71
  - Closing . . . . . 71
  - Explanation . . . . . 71
- HistoROM . . . . . 148
- I**
- Identifying the measuring device . . . . . 17
- Impact resistance . . . . . 219
- Incoming acceptance . . . . . 17
- Influence
  - Ambient temperature . . . . . 216
  - Medium pressure . . . . . 217

- Medium temperature . . . . . 217
  - Information on the document . . . . . 6
  - Inlet runs . . . . . 25
  - Input . . . . . 205
  - Inspection
    - Received goods . . . . . 17
  - Inspection check
    - Connection . . . . . 59
  - Installation . . . . . 23
  - Installation conditions
    - Down pipe . . . . . 24
    - Inlet and outlet runs . . . . . 25
    - Installation dimensions . . . . . 25
    - Mounting location . . . . . 23
    - Orientation . . . . . 24
    - Sensor heating . . . . . 27
    - System pressure . . . . . 26
    - Thermal insulation . . . . . 26
    - Vibrations . . . . . 27
  - Installation dimensions . . . . . 25
  - Interior cleaning . . . . . 198
- L**
- Languages, operation options . . . . . 225
  - Line recorder . . . . . 167
  - Local display
    - Navigation view . . . . . 64
    - see Operational display
  - Low flow cut off . . . . . 212
- M**
- Main electronics module . . . . . 15
  - Maintenance tasks . . . . . 198
  - Managing the device configuration . . . . . 148
  - Manufacturer ID . . . . . 87
  - Manufacturing date . . . . . 18, 20
  - Materials . . . . . 223
  - Maximum measured error . . . . . 214
  - Measured values
    - see Process variables
  - Measuring and test equipment . . . . . 198
  - Measuring device
    - Configuration . . . . . 94
    - Conversion . . . . . 199
    - Disposal . . . . . 200
    - Mounting the sensor . . . . . 30
    - Preparing for electrical connection . . . . . 40
    - Preparing for mounting . . . . . 30
    - Removing . . . . . 200
    - Repairs . . . . . 199
    - Structure . . . . . 15
    - Switch-on . . . . . 94
  - Measuring principle . . . . . 204
  - Measuring range
    - Calculation example for gas . . . . . 206
    - For gases . . . . . 205
    - For liquids . . . . . 205
  - Measuring range, recommended . . . . . 221
  - Measuring system . . . . . 204
- Mechanical load . . . . . 219
  - Medium pressure
    - Influence . . . . . 217
  - Medium temperature
    - Influence . . . . . 217
  - Menu
    - Diagnostics . . . . . 189
    - Setup . . . . . 96
  - Menus
    - For measuring device configuration . . . . . 94
    - For specific settings . . . . . 136
  - Mounting dimensions
    - see Installation dimensions
  - Mounting location . . . . . 23
  - Mounting preparations . . . . . 30
  - Mounting tools . . . . . 30
- N**
- Nameplate
    - Sensor . . . . . 20
    - Transmitter . . . . . 18
  - Navigation path (navigation view) . . . . . 64
  - Navigation view
    - In the submenu . . . . . 64
    - In the wizard . . . . . 64
  - Numeric editor . . . . . 66
- O**
- Onsite display . . . . . 226
    - Numeric editor . . . . . 66
    - see Diagnostic message
    - see In alarm condition
    - Text editor . . . . . 67
  - Operable flow range . . . . . 206
  - Operating elements . . . . . 68, 180
  - Operating keys
    - see Operating elements
  - Operating menu
    - Menus, submenus . . . . . 61
    - Structure . . . . . 61
    - Submenus and user roles . . . . . 62
  - Operating philosophy . . . . . 62
  - Operation . . . . . 159
  - Operation options . . . . . 60
  - Operational display . . . . . 63
  - Operational safety . . . . . 11
  - Order code . . . . . 18, 20
  - Orientation (vertical, horizontal) . . . . . 24
  - Outlet runs . . . . . 25
  - Output . . . . . 208
  - Output signal . . . . . 208
- P**
- Packaging disposal . . . . . 23
  - Parameter
    - Changing . . . . . 71
    - Entering values or text . . . . . 71
  - Parameter settings
    - Administration (Submenu) . . . . . 151

- Advanced setup (Submenu) . . . . . 137
  - Burst configuration 1 to n (Submenu) . . . . . 90
  - Calculated values (Submenu) . . . . . 137
  - Configuration backup (Submenu) . . . . . 148
  - Current input . . . . . 101
  - Current input (Wizard) . . . . . 101
  - Current input 1 to n (Submenu) . . . . . 163
  - Current output . . . . . 103
  - Current output (Wizard) . . . . . 103
  - Data logging (Submenu) . . . . . 167
  - Define access code (Wizard) . . . . . 150
  - Device information (Submenu) . . . . . 194
  - Diagnostics (Menu) . . . . . 189
  - Display (Submenu) . . . . . 141
  - Display (Wizard) . . . . . 127
  - Double pulse output . . . . . 126
  - Double pulse output (Submenu) . . . . . 126, 166
  - I/O configuration . . . . . 100
  - I/O configuration (Submenu) . . . . . 100
  - Low flow cut off (Wizard) . . . . . 134
  - Measured variables (Submenu) . . . . . 160
  - Partially filled pipe detection (Wizard) . . . . . 135
  - Pulse/frequency/switch output . . . . . 109
  - Pulse/frequency/switch output (Wizard) 109,  
111, . . . . . 120
  - Pulse/frequency/switch output 1 to n (Submenu) 164
  - Relay output . . . . . 123
  - Relay output 1 to n (Submenu) . . . . . 165
  - Relay output 1 to n (Wizard) . . . . . 123
  - Reset access code (Submenu) . . . . . 151
  - Select medium (Wizard) . . . . . 99
  - Sensor adjustment (Submenu) . . . . . 138
  - Setup (Menu) . . . . . 96
  - Simulation (Submenu) . . . . . 151
  - Status input . . . . . 102
  - Status input (Submenu) . . . . . 102
  - Status input 1 to n (Submenu) . . . . . 163
  - System units (Submenu) . . . . . 96
  - Totalizer (Submenu) . . . . . 162
  - Totalizer 1 to n (Submenu) . . . . . 139
  - Totalizer handling (Submenu) . . . . . 166
  - Value current output 1 to n (Submenu) . . . . . 164
  - Web server (Submenu) . . . . . 79
  - WLAN Settings (Submenu) . . . . . 147
  - Zero point adjustment (Submenu) . . . . . 139
  - Performance characteristics . . . . . 214
  - Pharmaceutical compatibility . . . . . 230
  - Post-connection check (checklist) . . . . . 59
  - Post-installation check . . . . . 94
  - Post-installation check (checklist) . . . . . 35
  - Potential equalization . . . . . 54
  - Power consumption . . . . . 213
  - Power supply failure . . . . . 213
  - Pressure Equipment Directive . . . . . 230
  - Pressure loss . . . . . 221
  - Pressure-temperature ratings . . . . . 220
  - Process connections . . . . . 225
  - Process variables
    - Calculated . . . . . 205
    - Measured . . . . . 205
  - Product safety . . . . . 11
  - Proline 500 – digital transmitter
    - Connecting the signal cable/supply voltage cable . . 46
  - Proline 500 connecting cable terminal assignment
    - Sensor connection housing . . . . . 48
  - Proline 500 transmitter
    - Connecting the signal cable/supply voltage cable . . 52
  - Protecting parameter settings . . . . . 155
- R**
- Radio approval . . . . . 230
  - Read access . . . . . 72
  - Reading measured values . . . . . 159
  - Recalibration . . . . . 198
  - reference operating conditions . . . . . 214
  - Registered trademarks . . . . . 8
  - Remedial measures
    - Calling up . . . . . 181
    - Closing . . . . . 181
  - Remote operation . . . . . 226
  - Repair of a device . . . . . 199
  - Repairs . . . . . 199
    - Notes . . . . . 199
  - Repeatability . . . . . 216
  - Replacement
    - Device components . . . . . 199
  - Requirements for personnel . . . . . 10
  - Response time . . . . . 216
  - Return . . . . . 199
- S**
- Safety . . . . . 10
  - Sanitary compatibility . . . . . 229
  - Secondary containment . . . . . 220
  - Sensor
    - Mounting . . . . . 30
  - Sensor heating . . . . . 27
  - Serial number . . . . . 18, 20
  - Setting the operating language . . . . . 94
  - Settings
    - Adapting the measuring device to the process
      - conditions . . . . . 166
    - Administration . . . . . 150
    - Advanced display configurations . . . . . 141
    - Current input . . . . . 101
    - Current output . . . . . 103
    - Device reset . . . . . 193
    - Device tag . . . . . 96
    - Double pulse output . . . . . 126
    - I/O configuration . . . . . 100
    - Low flow cut off . . . . . 134
    - Managing the device configuration . . . . . 148
    - Medium . . . . . 99
    - Onsite display . . . . . 127
    - Operating language . . . . . 94
    - Partial filled pipe detection . . . . . 135
    - Pulse output . . . . . 109
    - Pulse/frequency/switch output . . . . . 109, 111

- Relay output . . . . . 123
- Resetting the totalizer . . . . . 166
- Sensor adjustment . . . . . 138
- Simulation . . . . . 151
- Status input . . . . . 102
- Switch output . . . . . 120
- System units . . . . . 96
- Totalizer . . . . . 139
- Totalizer reset . . . . . 166
- WLAN . . . . . 147
- Shock resistance . . . . . 219
- Showing data logging . . . . . 167
- Signal on alarm . . . . . 211
- SIL (functional safety) . . . . . 230
- SIMATIC PDM . . . . . 86
  - Function . . . . . 86
- Software release . . . . . 87
- Spare part . . . . . 199
- Spare parts . . . . . 199
- Special connection instructions . . . . . 54
- Standards and guidelines . . . . . 230
- Status area
  - For operational display . . . . . 63
  - In the navigation view . . . . . 65
- Status signals . . . . . 179, 182
- Storage conditions . . . . . 22
- Storage temperature . . . . . 22
- Storage temperature range . . . . . 219
- Structure
  - Measuring device . . . . . 15
  - Operating menu . . . . . 61
- Submenu
  - Administration . . . . . 150, 151
  - Advanced setup . . . . . 136, 137
  - Burst configuration 1 to n . . . . . 90
  - Calculated values . . . . . 137
  - Configuration backup . . . . . 148
  - Current input 1 to n . . . . . 163
  - Data logging . . . . . 167
  - Device information . . . . . 194
  - Display . . . . . 141
  - Double pulse output . . . . . 126, 166
  - Event list . . . . . 191
  - I/O configuration . . . . . 100
  - Input values . . . . . 163
  - Measured values . . . . . 159
  - Measured variables . . . . . 160
  - Output values . . . . . 164
  - Overview . . . . . 62
  - Process variables . . . . . 137
  - Pulse/frequency/switch output 1 to n . . . . . 164
  - Relay output 1 to n . . . . . 165
  - Reset access code . . . . . 151
  - Sensor adjustment . . . . . 138
  - Simulation . . . . . 151
  - Status input . . . . . 102
  - Status input 1 to n . . . . . 163
  - System units . . . . . 96
  - Totalizer . . . . . 162
  - Totalizer 1 to n . . . . . 139
  - Totalizer handling . . . . . 166
  - Value current output 1 to n . . . . . 164
  - Web server . . . . . 79
  - WLAN Settings . . . . . 147
  - Zero point adjustment . . . . . 139
- Supply voltage . . . . . 213
- Surface roughness . . . . . 225
- Switch output . . . . . 210
- Symbols
  - Controlling data entries . . . . . 68
  - For communication . . . . . 63
  - For diagnostic behavior . . . . . 63
  - For locking . . . . . 63
  - For measured variable . . . . . 63
  - For measurement channel number . . . . . 63
  - For menus . . . . . 65
  - For parameters . . . . . 65
  - For status signal . . . . . 63
  - For submenu . . . . . 65
  - For wizard . . . . . 65
  - In the status area of the local display . . . . . 63
  - Input screen . . . . . 67
  - Operating elements . . . . . 67
- System design
  - Measuring system . . . . . 204
  - see Measuring device design
- System integration . . . . . 87
- System pressure . . . . . 26
- T**
  - Technical data, overview . . . . . 204
  - Temperature range
    - Ambient temperature range for display . . . . . 226
    - Medium temperature . . . . . 219
    - Storage temperature . . . . . 22
  - Terminal assignment . . . . . 40
  - Terminal assignment of connecting cable for Proline 500- digital
    - Sensor connection housing . . . . . 41
  - terminals . . . . . 213
  - Tests and certificates . . . . . 230
  - Text editor . . . . . 67
  - Thermal insulation . . . . . 26
  - Tool tip
    - see Help text
  - Tools
    - Electrical connection . . . . . 36
    - For mounting . . . . . 30
    - Transport . . . . . 22
  - Totalizer
    - Configuration . . . . . 139
  - Transmitter
    - Turning the display module . . . . . 35
    - Turning the housing . . . . . 34
  - Transporting the measuring device . . . . . 22
  - Troubleshooting
    - General . . . . . 173
  - TSE/BSE certificate of suitability . . . . . 230

- Turning the display module . . . . . 35
- Turning the electronics housing
  - see Turning the transmitter housing
- Turning the transmitter housing . . . . . 34
  
- U**
- Use of the measuring device
  - Borderline cases . . . . . 10
  - Incorrect use . . . . . 10
  - see Designated use
- User interface
  - Current diagnostic event . . . . . 189
  - Previous diagnostic event . . . . . 189
- User roles . . . . . 62
- USP Class VI . . . . . 230
  
- V**
- Version data for the device . . . . . 87
- Vibration resistance . . . . . 219
- Vibrations . . . . . 27
  
- W**
- W@M . . . . . 198, 199
- W@M Device Viewer . . . . . 17, 199
- Weight
  - SI units . . . . . 222
  - Transport (notes) . . . . . 22
  - US units . . . . . 222
- Wizard
  - Current input . . . . . 101
  - Current output . . . . . 103
  - Define access code . . . . . 150
  - Display . . . . . 127
  - Low flow cut off . . . . . 134
  - Partially filled pipe detection . . . . . 135
  - Pulse/frequency/switch output . . . . . 109, 111, 120
  - Relay output 1 to n . . . . . 123
  - Select medium . . . . . 99
- WLAN settings . . . . . 147
- Workplace safety . . . . . 11
- Write access . . . . . 72
- Write protection
  - Via access code . . . . . 155
  - Via write protection switch . . . . . 157
- Write protection switch . . . . . 157





[www.addresses.endress.com](http://www.addresses.endress.com)

---