



Level



Pressure



Flow



Temperature



Liquid
Analysis



Registration



Systems
Components



Services




Solutions

Description of Device Functions

Proline Prosonic Flow 93

Ultrasonic Flow Measuring System
HART

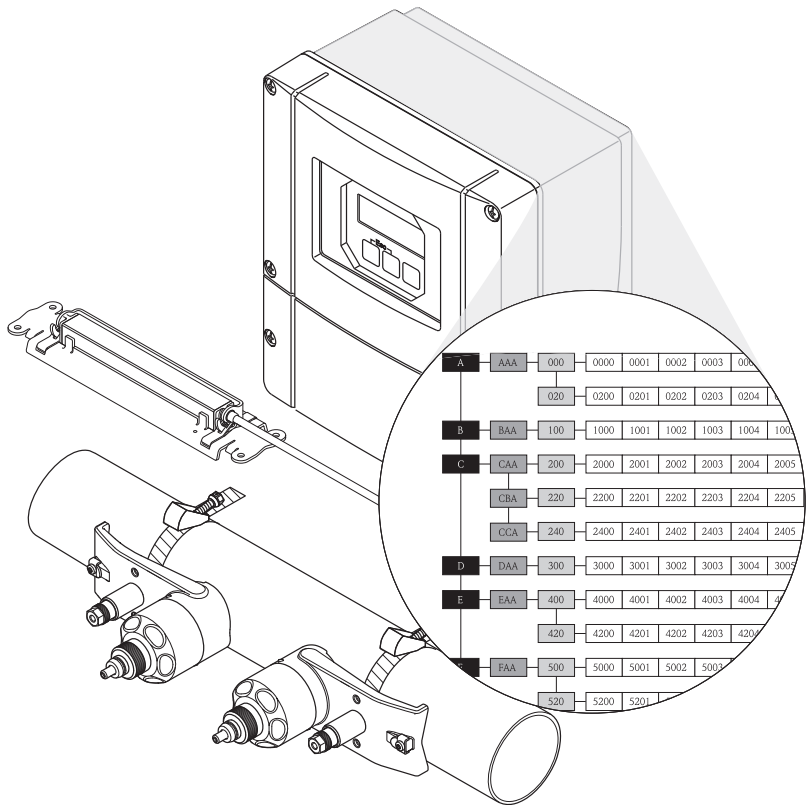

Registered trademarks

HART®

Registered trademark of the HART Communication Foundation, Austin, USA

HistoROM™, T-DAT™, F-CHIP®, FieldCare®

Registered trademarks of Endress+Hauser Flowtec AG

Table of Contents

1	Notes on using this manual	5	6.1	Group TOTALIZER (1...3)	43
1.1	Using the table of contents to locate a function description	5	6.1.1	Function group CONFIGURATION	43
1.2	Using the graphic of the function matrix to locate a function description	5	6.1.2	Function group OPERATION	45
1.3	Using the index of the function matrix to locate a function description	5	6.2	Group HANDLING TOTALIZER	46
2	Function matrix	6	7	Block OUTPUTS	47
2.1	General layout of the function matrix	6	7.1	Group CURRENT OUTPUT (1...3)	48
2.1.1	Blocks (A, B, C, etc.)	6	7.1.1	Function group CONFIGURATION	48
2.1.2	Groups (AAA, AEA, CAA, etc.)	6	7.1.2	Function group OPERATION	57
2.1.3	Function groups (000, 020, 060, etc.)	6	7.1.3	Function group INFORMATION	58
2.1.4	Functions (0000, 0001, 0002, etc.)	6	7.2	Group PULSE/FREQUENCY OUTPUT (1...2)	59
2.1.5	Codes identifying cells	7	7.2.1	Function group CONFIGURATION	59
2.2	Function matrix Proline Prosonic Flow 93	8	7.2.2	Function group OPERATION	80
3	Block MEASURED VARIABLES	9	7.2.3	Function group INFORMATION	84
3.1	Group MEASURING VALUES	10	7.3	Group RELAY OUTPUT (1...2)	85
3.1.1	Function group MAIN VALUES CH1	10	7.3.1	Function group CONFIGURATION	85
3.1.2	Function group MAIN VALUES CH2	11	7.3.2	Function group OPERATION	89
3.1.3	Function group CALCULATED MAIN VALUES	12	7.3.3	Function group INFORMATION	91
3.2	Group SYSTEM UNITS	13	7.3.4	Information on the response of the relay output	92
3.2.1	Function group CONFIGURATION	13	7.3.5	Switching action of the relay output	92
3.2.2	Function group ADDITIONAL CONFIGURATION	15	8	Block INPUTS	94
3.3	Group SPECIAL UNITS	16	8.1	Group STATUS INPUT	95
3.3.1	Function group ARBITRARY UNIT	16	8.1.1	Function group CONFIGURATION	95
4	Block QUICK SETUP	17	8.1.2	Function group OPERATION	96
4.1	Quick Setup "Sensor Installation"	19	8.1.3	Function group INFORMATION	96
4.2	Quick Setup "Commissioning"	21	9	Block BASIC FUNCTION	97
4.3	Quick Setup "Pulsating flow"	23	9.1	Group HART	98
5	Block USER INTERFACE	25	9.1.1	Function group CONFIGURATION	98
5.1	Group CONTROL	26	9.1.2	Function group INFORMATION	99
5.1.1	Function group BASIC CONFIGURATION	26	9.2	Group PROCESS PARAMETER (CH1...CH2)	100
5.1.2	Function group UNLOCKING/LOCKING	28	9.2.1	Function group CONFIGURATION	100
5.1.3	Function group OPERATION	29	9.2.2	Function group ADJUSTMENT	102
5.2	Group MAIN LINE	30	9.2.3	Function group PIPE DATA	103
5.2.1	Function group CONFIGURATION	30	9.2.4	Function group LIQUID DATA	108
5.2.2	Function group MULTIPLEX	32	9.3	Group SYSTEM PARAMETER (CH1...CH2)	111
5.3	Group ADDITIONAL LINE	34	9.3.1	Function group CONFIGURATION	111
5.3.1	Function group CONFIGURATION	34	9.4	Group SENSOR DATA (CH1...CH2)	112
5.3.2	Function group MULTIPLEX	36	9.4.1	Function group CONFIGURATION	112
5.4	Group INFORMATION LINE	38	9.4.2	Function group SENSOR PARAMETER	113
5.4.1	Function group CONFIGURATION	38	9.4.3	Function group CALIBRATION DATA	116
5.4.2	Function group MULTIPLEX	40	9.4.4	Function group ORIG. CALIBRATION.	118
6	Block TOTALIZER	42	10	Block SPECIAL FUNCTION	119
			10.1	Group ADVANCED DIAGNOSTICS (CH1,CH2,AVG)	120
			10.1.1	Function group CONFIGURATION	120
			10.1.2	Function group ACQUISITION	122
			10.1.3	Function group VOLUME FLOW	123
			10.1.4	Function group FLOW VELOCITY	124
			10.1.5	Function group SIGNAL STRENGTH	125

10.1.6	Function group SOUND VELOCITY	...	126	11.2.5	Function group I/O MODULE	138
10.1.7	Function group ACTUAL TRANSIT TIME		128	11.2.6	Function groups INPUT /OUTPUT 1...4	.	139
10.1.8	Function group ACCEPTANCE RATE	..	130	12	Factory settings	140
11	Block SUPERVISION	132	12.1	SI units	140
11.1	Group SYSTEM (SYSTEM CH2)	133	12.2	US units (for USA and Canada only)	140
11.1.1	Function group CONFIGURATION	133	12.3	Language	140
11.1.2	Function group OPERATION	135	13	Index function matrix	143
11.2	Group VERSION INFO	137	14	Index key words	147
11.2.1	Function group DEVICE	137				
11.2.2	Function group SENSOR	137				
11.2.3	Function group AMPLIFIER	137				
11.2.4	Function group F-CHIP	138				

1 Notes on using this manual

There are various ways of locating the description of a function of your choice in the manual:

1.1 Using the table of contents to locate a function description

The designations of all the cells in the function matrix are listed in the table of contents. You can use these unambiguous designations (such as USER INTERFACE, INPUTS, OUTPUTS, etc.) to choose whichever functions are applicable to a particular set of conditions. The page references show you exactly where to find the detailed descriptions of the functions in question. The table of contents is on Page 3.

1.2 Using the graphic of the function matrix to locate a function description



This step-by-step, top-down approach starts with the blocks, the highest level, and works down through the matrix to the description of the function you need:

1. All blocks available, and their related groups, are illustrated on Page 8. Select the block (or the group within the block) which you need for your application and use the page reference to locate the information corresponding to the next level.
2. The page in question contains a graphic showing of the block with all its subordinate groups, function groups and functions.
Select the function which you need for your application and use the page reference to locate the detailed function description.

1.3 Using the index of the function matrix to locate a function description

Each "cell" in the function matrix (blocks, groups, function groups, functions) has a unique identifier in the form of a code consisting of one or three letters or a three- or four-digit number. The code identifying a selected "cell" appears at the top right on the local display.

Example:

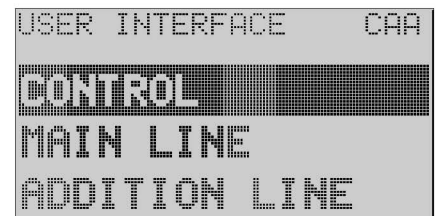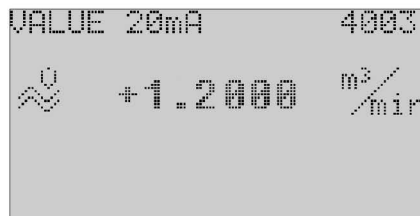

A0001653-EN


The function-matrix index lists the codes for all the available "cells" in alphabetic and consecutive order, complete with the page references for the corresponding functions. The index to the function matrix is on Page 143.

2 Function matrix

2.1 General layout of the function matrix

The function matrix consists of four levels:

Blocks -> Groups -> Function groups -> Functions

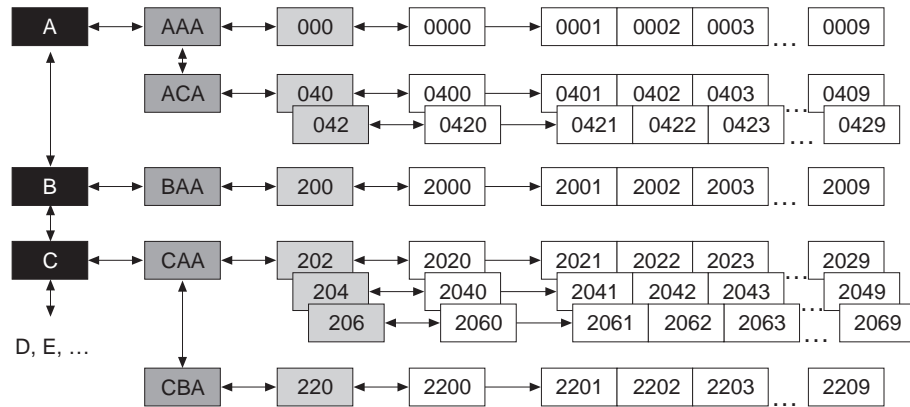

A0000961

2.1.1 Blocks (A, B, C, etc.)

The blocks are the highest-level grouping of the operation options for the device. Examples of blocks available are MEASURED VARIABLES, QUICK SETUP, USER INTERFACE, TOTALIZERS, etc.

2.1.2 Groups (AAA, AEA, CAA, etc.)

A block consists of one or more groups. Each group represents a more detailed selection of the operation options in the higher-order block. Examples of groups available in the "USER INTERFACE" block are CONTROL, MAIN LINE, ADDITIONAL LINE, etc.

2.1.3 Function groups (000, 020, 060, etc.)

A group consists of one or more function groups. Each function group represents a more detailed selection of the operation options in the higher-order group. Function groups available of group "CONTROL" are for example: BASIC CONFIGURATION, UNLOCKING/LOCKING, OPERATION, etc.

2.1.4 Functions (0000, 0001, 0002, etc.)

Each function group consists of one or more functions. The functions are used to operate and parameterize the device. Numerical values can be entered or parameters selected and saved. The functions in the "BASIC CONFIGURATION" function group include LANGUAGE, DISPLAY DAMPING, CONTRAST LCD, etc. The procedure for changing the language of the user interface, for example, is as follows:

1. Select the block "USER INTERFACE".
2. Select the group "CONTROL".
3. Select the function group "BASIC CONFIGURATION".
4. Select the function "LANGUAGE" (here you can set the language required).

2.1.5 Codes identifying cells

Each cell (block, group, function group and function) in the function matrix has an individual, unique code.

Blocks:

The code is a letter (A, B, C, etc.)

Groups:

The code consists of three letters (AAA, ABA, BAA, etc.).

The first letter matches the block code (i.e. each group in block A has a code starting with an A_ _; the codes of the groups in block B start with a B _ _, and so on). The other two letters are for identifying the group within the respective block.

Function groups:


The code consists of three digits (000, 001, 100, etc.)

Functions:

The code consists of four digits (0000, 0001, 0201, etc.).

The first three digits are the same as the code for the function group.

The last digit in the code is a counter for the functions in the function group, incrementing from 0 to 9 (e.g. function 0005 is the sixth function in group 000).

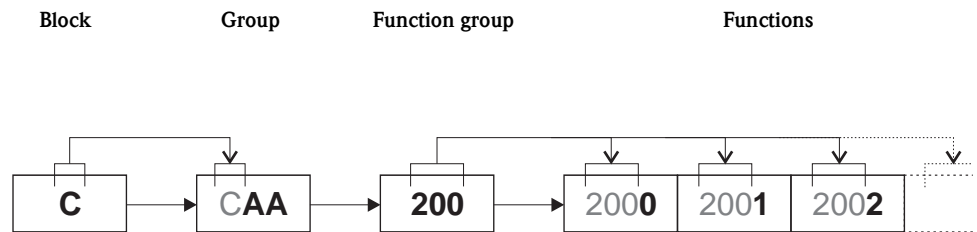

A0001251



2.2 Function matrix Proline Prosonic Flow 93

BLOCKS	GROUPS	FUNCTION GROUPS
MEASURED VARIABLES A (see P. 9)	→ MEASURING VALUES AAA	→ see P. 10
	→ SYSTEM UNITS ACA	→ see P. 13
	→ SPECIAL UNITS AEA	→ see P. 16
↓		
QUICK SETUP B (see P. 17)	→ Sensor and commissioning setups	→ see P. 17
↓		
USER INTERFACE C (see P. 25)	→ CONTROL CAA	→ see P. 26
	→ MAIN LINE CCA	→ see P. 30
	→ ADDITIONAL LINE CEA	→ see P. 34
	→ INFORMATION LINE CGA	→ see P. 38
↓		
TOTALIZER D (see P. 42)	→ TOTALIZER (1...3) DAA,B,C	→ see P. 43
	→ HANDLING TOTALIZER DJA	→ see P. 46
↓		
OUTPUTS E (see P. 47)	→ CURRENT OUTPUT (1...3) EAA,B,C	→ see P. 48
	→ PULSE/FREQUENCY OUTPUT (1...2) ECA,B	→ see P. 59
	→ RELAY OUTPUT (1...2) EGA,B	→ see P. 85
↓		
INPUTS F (see P. 94)	→ STATUS INPUT FAA	→ see P. 95
↓		
BASIC FUNCTION G (see P. 97)	→ HART GAA	→ see P. 98
	→ PROCESS PARAMETER (CH1...CH2) GIA,B	→ see P. 100
	→ SYSTEM PARAMETER (CH1...CH2) GLA,B	→ see P. 111
	→ SENSOR DATA (CH1...CH2) GNA,B	→ see P. 112
↓		
SPECIAL FUNCTION H (see P. 119)	→ ADVANCED DIAGNOSTICS (CH1,CH2, AVG) HEA,B,C	→ see P. 120
↓		
SUPERVISION J (see P. 132)	→ SYSTEM JAA	→ see P. 133
	→ SYSTEM CH2 JAB	→ see P. 133
	→ VERSION INFO JCA	→ see P. 137

3.1 Group MEASURING VALUES



3.1.1 Function group MAIN VALUES CH1

MEASURED VARIABLES A ⇒ MEASURING VALUES AAA ⇒ MAIN VALUES CH1 000

Functional description	
MEASURED VARIABLES → MEASURING VALUES → MAIN VALUES CH1	
<p>The measuring values of channel 1 currently being measured are displayed in this function group.</p> <p> Note!</p> <ul style="list-style-type: none"> ■ The engineering units of all the measured variables shown here can be set in the "SYSTEM UNITS" group. ■ If the liquid in the pipe flows backwards, a negative sign prefixes the flow reading on the display. 	
VOLUME FLOW CH1 (0001)	<p>The volume flow currently measured appears on the display (channel 1).</p> <p>User interface: 5-digit floating-point number, including unit and sign (e.g. 5.5445 dm³/min; 1.4359 m³/h; -731.63 gal/d; etc.)</p>
SOUND VELOCITY CH1 (0002)	<p>The sound velocity currently measured in the liquid appears on the display (channel 1).</p> <p>User interface: 5-digit fixed-point number, incl. units (e.g. 1400.0 m/s, 5249.3 ft/s)</p>
FLOW VELOCITY CH1 (0003)	<p>The flow velocity currently measured appears on the display (channel 1).</p> <p>User interface: 5-digit floating-point number, including unit and sign (e.g. 8.0000 m/s, 26.247 ft/s)</p>
SIGNAL STRENGTH CH1 (0007)	<p>The signal strength appears on the display (channel 1).</p> <p>User interface: 4-digit fixed-point number (e.g. 80.0)</p> <p> Note! To ensure reliable measurement takes place, Prosonic Flow requires a signal strength of > 30.</p>


3.1.2 Function group MAIN VALUES CH2

MEASURED VARIABLES A ⇒ MEASURING VALUES AAA ⇒ MAIN VALUES CH2 006

Functional description	
MEASURED VARIABLES → MEASURING VALUES → MAIN VALUES CH2	
<p>The measuring values of channel 2 currently being measured are displayed in this function group.</p> <p> Note!</p> <ul style="list-style-type: none"> ■ The engineering units of all the measured variables shown here can be set in the "SYSTEM UNITS" group. ■ If the fluid in the pipe flows backwards, a negative sign prefixes the flow reading on the display. 	
VOLUME FLOW CH2 (0061)	<p>The volume flow currently measured appears on the display (channel 2).</p> <p>User interface: 5-digit floating-point number, including unit and sign (e.g. 5.5445 dm³/min; 1.4359 m³/h; -731.63 gal/d; etc.)</p>
SOUND VELOCITY CH2 (0062)	<p>The sound velocity currently measured in the liquid appears on the display (channel 2).</p> <p>User interface: 5-digit fixed-point number, incl. units (e.g. 1400.0 m/s, 5249.3 ft/s)</p>
FLOW VELOCITY CH2 (0063)	<p>The flow velocity currently measured appears on the display (channel 2).</p> <p>User interface: 5-digit floating-point number, including unit and sign (e.g. 8.0000 m/s, 26.247 ft/s)</p>
SIGNAL STRENGTH CH2 (0067)	<p>The signal strength appears on the display (channel 2).</p> <p>User interface: 4-digit fixed-point number (e.g. 80.0)</p> <p> Note!</p> <p>To ensure reliable measurement takes place, Prosonic Flow requires a signal strength of > 30.</p>


3.1.3 Function group CALCULATED MAIN VALUES


MEASURED VARIABLES A ⇒ MEASURING VALUES AAA ⇒ CALCUL. MAIN VALUES 008


Functional description	
MEASURED VARIABLES → MEASURING VALUES → CALCULATED MAIN VALUES	
<p>The calculated measured values appear on the display. The measured values of both channels are used when calculating the values.</p> <p> Note!</p> <ul style="list-style-type: none"> ■ The units of measure of all the measured variables shown here can be set in the "SYSTEM UNITS" group. ■ If the fluid in the pipe flows backwards, a negative sign prefixes the flow reading on the display. 	
<p>VOLUME FLOW AVERAGE (0083)</p>	<p>The average volume flow appears on the display. Calculated from the measured values: (VOLUME FLOW CH1 + VOLUME FLOW CH2)/2</p> <p>User interface: 5-digit floating-point number, including unit and sign (e.g. 5.5445 dm³/min; 1.4359 m³/h; -731.63 gal/d; etc.)</p>
<p>VOLUME FLOW SUM. (0084)</p>	<p>The total volume flow appears on the display. Calculated from the measured values: VOLUME FLOW CH1 + VOLUME FLOW CH2</p> <p>User interface: 5-digit floating-point number, including unit and sign (e.g. 5.5445 dm³/min; 1.4359 m³/h; -731.63 gal/d; etc.)</p>
<p>VOLUME FLOW DIFFERENCE (0085)</p>	<p>The difference between the volume flows appears on the display. Calculated from the measured values: VOLUME FLOW CH1 - VOLUME FLOW CH2</p> <p>User interface: 5-digit floating-point number, including unit and sign (e.g. 5.5445 dm³/min; 1.4359 m³/h; -731.63 gal/d; etc.)</p>
<p>SOUND VELOCITY AVERAGE (0086)</p>	<p>The average sound velocity appears on the display. Calculated from the measured values: (SOUND VELOCITY CH1 + SOUND VELOCITY CH2)/2</p> <p>User interface: 5-digit fixed-point number, incl. units (e.g. 1400.0 m/s, 5249.3 ft/s)</p>
<p>FLOW VELOCITY AVERAGE (0087)</p>	<p>The average flow velocity appears on the display. Calculated from the measured values: (FLOW VELOCITY CH1 + FLOW VELOCITY CH2)/2</p> <p>User interface: 5-digit floating-point number, including unit and sign (e.g. 8.0000 m/s, 26.247 ft/s)</p>

3.2 Group SYSTEM UNITS


3.2.1 Function group CONFIGURATION



Functional description	
MEASURED VARIABLES → SYSTEM UNITS → CONFIGURATION	
You can select the units for measured variables in this function group.	
UNIT VOLUME FLOW (0402)	<p>Use this function to select the unit for displaying the volume flow.</p> <p>The unit you select here is also valid for:</p> <ul style="list-style-type: none"> ■ Current output ■ Frequency output ■ Relay switch points (limit value, flow direction) ■ Creepage <p>Options:</p> <p>Metric:</p> <p>Cubic centimeter → cm³/s; cm³/min; cm³/h; cm³/day Cubic decimeter → dm³/s; dm³/min; dm³/h; dm³/day Cubic meter → m³/s; m³/min; m³/h; m³/day Milliliter → ml/s; ml/min; ml/h; ml/day Liter → l/s; l/min; l/h; l/day Hectoliter → hl/s; hl/min; hl/h; hl/day Megaliter → Ml/s; Ml/min; Ml/h; Ml/day</p> <p>US:</p> <p>Cubic centimeter → cc/s; cc/min; cc/h; cc/day Acre foot → af/s; af/min; af/h; af/day Cubic foot → ft³/s; ft³/min; ft³/h; ft³/day Fluid ounce → oz f/s; oz f/min; oz f/h; oz f/day Gallon → gal/s; gal/min; gal/h; gal/day, US kgal/s; US kgal/min; US kgal/h; US kgal/day Million gallon → Mgal/s; Mgal/min; Mgal/h; Mgal/day Barrel (normal fluids: 31.5 gal/bbl) → bbl/s; bbl/min; bbl/h; bbl/day Barrel (beer: 31.0 gal/bbl) → bbl/s; bbl/min; bbl/h; bbl/day Barrel (petrochemicals: 42.0 gal/bbl) → bbl/s; bbl/min; bbl/h; bbl/day Barrel (filling tanks: 55.0 gal/bbl) → bbl/s; bbl/min; bbl/h; bbl/day</p> <p>Imperial</p> <p>Gallon → gal/s; gal/min; gal/h; gal/day Mega gallon → Mgal/s; Mgal/min; Mgal/h; Mgal/day Barrel (beer: 36.0 gal/bbl) → bbl/s; bbl/min; bbl/h; bbl/day Barrel (petrochemicals: 34.97 gal/bbl) → bbl/s; bbl/min; bbl/h; bbl/day</p> <p>Arbitrary unit, (see function group ARBITRARY UNIT on Page 16) _____ → _____/s; _____/min; _____/h; _____/day</p> <p>Factory setting: l/s</p> <p> Note! If you defined a unit of volume in the ARBITRARY UNIT (060) function group (see Page 16) the unit in question is shown here.</p>

Functional description	
MEASURED VARIABLES → SYSTEM UNITS → CONFIGURATION	
UNIT VOLUME (0403)	<p>Use this function to select the unit for displaying the volume.</p> <p>The unit you select here is also valid for:</p> <ul style="list-style-type: none"> ■ Pulse weighting (e.g. m³/p) <p>Options:</p> <p>Metric: cm³; dm³; m³; ml; l; hl; Ml MEGA</p> <p>US: cc; af; ft³; oz f; gal; kgal; Mgal; bbl (NORMAL FLUIDS); bbl (BEER); bbl (PETROCHEMICALS); bbl (FILLING TANKS)</p> <p>Imperial: gal; Mgal; bbl (BEER); bbl (PETROCHEMICALS)</p> <p>Arbitrary unit: _ _ _ _ (see function group ARBITRARY UNIT on Page 16)</p> <p>Factory setting: liter</p> <p> Note!</p> <ul style="list-style-type: none"> ■ If you defined a unit of volume in the ARBITRARY UNIT (060) function group (see Page 16) the unit in question is shown here. ■ The unit of the totalizers is independent of your choice here. The unit for each totalizer is selected separately for the totalizer in question.


3.2.2 Function group ADDITIONAL CONFIGURATION

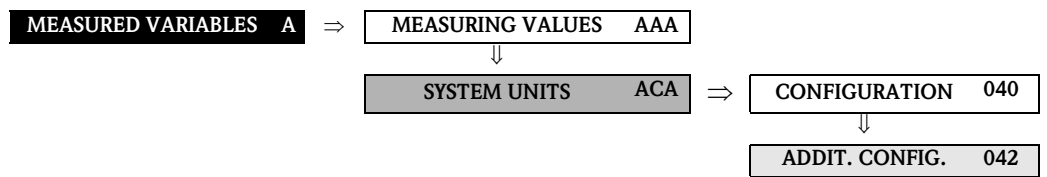

Functional description	
MEASURED VARIABLES → SYSTEM UNITS → ADDITIONAL CONFIGURATION	
UNIT TEMPERATURE (0422)	<p>Use this function to select the unit for displaying the liquid temperature.</p> <p> Note! The liquid temperature is entered in the function TEMPERATURE (see P. 108).</p> <p>Options: °C (Celsius) K (Kelvin) °F (Fahrenheit) R (Rankine)</p> <p>Factory setting: °C</p>
UNIT VISCOSITY (0423)	<p>Use this function to select the unit for liquid viscosity.</p> <p>Options: mm²/s cSt St</p> <p>Factory setting: mm²/s</p>
UNIT LENGTH (0424)	<p>Use this function to select the unit for the measure of length. The unit you select here is valid for:</p> <ul style="list-style-type: none"> ■ Nominal diameter ■ Diameter ■ Wall thickness ■ Liner thickness ■ Path length ■ Wire length ■ Sensor spacing <p>Options: MILLIMETER INCH</p> <p>Factory setting: MILLIMETER</p>
UNIT VELOCITY (0425)	<p>Use this function to select the unit for displaying the velocity. The unit you select here is valid for:</p> <ul style="list-style-type: none"> ■ Sound velocity ■ Flow velocity <p>Options: m/s ft/s</p> <p>Factory setting: m/s</p>
FORMAT DATE/TIME (0429)	<p>Use this function to select the date and time format of the calibration history.</p> <p>Options: DD.MM.YY 24 H MM/DD/YY 12 H A/P DD.MM.YY 12 H A/P MM/DD/YY 24 H</p> <p>Factory setting: DD.MM.YY 24 H</p>

3.3 Group SPECIAL UNITS

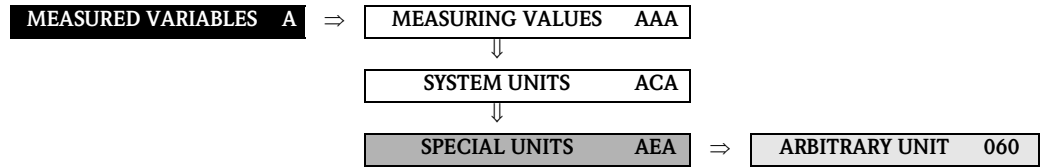


3.3.1 Function group ARBITRARY UNIT




Functional description	
MEASURED VARIABLES → SPECIAL UNITS → ARBITRARY UNIT	
Use this function group to define an arbitrary unit for the flow rate variable.	
TEXT ARBITRARY VOLUME (0602)	<p>Use this function to enter a text for the selectable volume (flow) unit. You define only the text, the unit of time is provided from a choice of options (s, min, h, day).</p> <p>User input: xxxxxx (max. 4 characters) Valid characters are A–Z, 0–9, +, –, decimal point, white space or underscore</p> <p>Factory setting: _ _ _ _ (No text)</p> <p>Example: If your text entry is "GLAS", this text string appears on the display complete with the unit of time, e.g. "GLAS/min":</p> <p>GLAS = Volume (text input) GLAS / min = Volume flow as shown (on the display)</p>
FACTOR ARBITRARY VOLUME (0603)	<p>Use this function to define a quantity factor (without time) for the free selectable unit. The volume unit on which this factor is based is one liter.</p> <p>User input: 7-digit floating-point number</p> <p>Factory setting: 1</p> <p>Reference quantity: Liter</p> <p>Example: The volume of a glass is 0.5 l → 2 glasses = 1 liter User input: 2</p>

4 Block QUICK SETUP

Block	Group	Function groups	Functions					
QUICK SETUP (B)	⇒	⇒	<table border="1"> <tr> <td>SETUP SENSOR (1001) P. 17</td> <td>⇒</td> <td>OS COMMISSION. (1002) P. 17</td> <td>OS PULSATING FLOW (1003) P. 17</td> <td>T-DAT SAVE/LOAD (1009) P. 18</td> </tr> </table>	SETUP SENSOR (1001) P. 17	⇒	OS COMMISSION. (1002) P. 17	OS PULSATING FLOW (1003) P. 17	T-DAT SAVE/LOAD (1009) P. 18
SETUP SENSOR (1001) P. 17	⇒	OS COMMISSION. (1002) P. 17	OS PULSATING FLOW (1003) P. 17	T-DAT SAVE/LOAD (1009) P. 18				


Functional description QUICK SETUP	
QUICK SETUP SENSOR (1001)	<p>Use this function to start the Quick Setup menu for assembling the ultrasonic sensors.</p> <p>Options: YES NO</p> <p>Factory setting: NO</p> <p> Note! You will find a flowchart of the Quick Setup SENSOR menu on Page 19. Please refer to the Operating Instructions Proline Prosonic Flow 93 (BA070D/06/en/....) for more information on Quick Setup menus.</p>
QUICK SETUP COMMISSIONING (1002)	<p>Use this function to start the Quick Setup menu for commissioning.</p> <p>Options: YES NO</p> <p>Factory setting: NO</p> <p> Note! You will find a flowchart of the COMMISSIONING Quick Setup menu on Page 21. Please refer to the Operating Instructions Proline Prosonic Flow 93 (BA070D/06/en/....) for more information on Quick Setup menus.</p>
QUICK SETUP PULSATING FLOW (1003)	<p>Use this function to start the application-specific Quick Setup menu for pulsating flow.</p> <p>Options: YES NO</p> <p>Factory setting: NO</p> <p> Note! You will find a flowchart of the PULSATING FLOW Quick Setup menu on Page 23. Please refer to the Operating Instructions Proline Prosonic Flow 93 (BA070D/06/en/....) for more information on Quick Setup menus.</p>

Functional description QUICK SETUP	
T-DAT SAVE/LOAD (1009)	<p>Use this function to save the parameter settings / configuration of the transmitter in a transmitter DAT (T-DAT), or to load the parameter settings from the T-DAT into the EEPROM (manual security function).</p> <p>Application examples:</p> <ul style="list-style-type: none"> ■ After commissioning, the current measuring point parameters can be saved to the T-DAT as a backup. ■ If the transmitter is replaced for some reason, the data from the T-DAT can be loaded into the new transmitter (EEPROM). <p>Options: CANCEL SAVE (from EEPROM to T-DAT) LOAD (from the T-DAT into EEPROM)</p> <p>Factory setting: CANCEL</p> <p> Note!</p> <ul style="list-style-type: none"> ■ If the power supply fails, the totalizer readings are automatically saved to the EEPROM. ■ The option "LOAD" couldn't be executed, if the T-DAT is empty or faultily. ■ The option "LOAD" and "SAVE" couldn't be executed, if no T-DAT be present.

4.1 Quick Setup "Sensor Installation"

The installation distances needed to install the sensors can be determined using the "Sensor Installation" Quick Setup menu.

In the case of measuring devices without a local display, the installation distances can be determined via the FieldCare operating devices program or with the Applicator online tool.

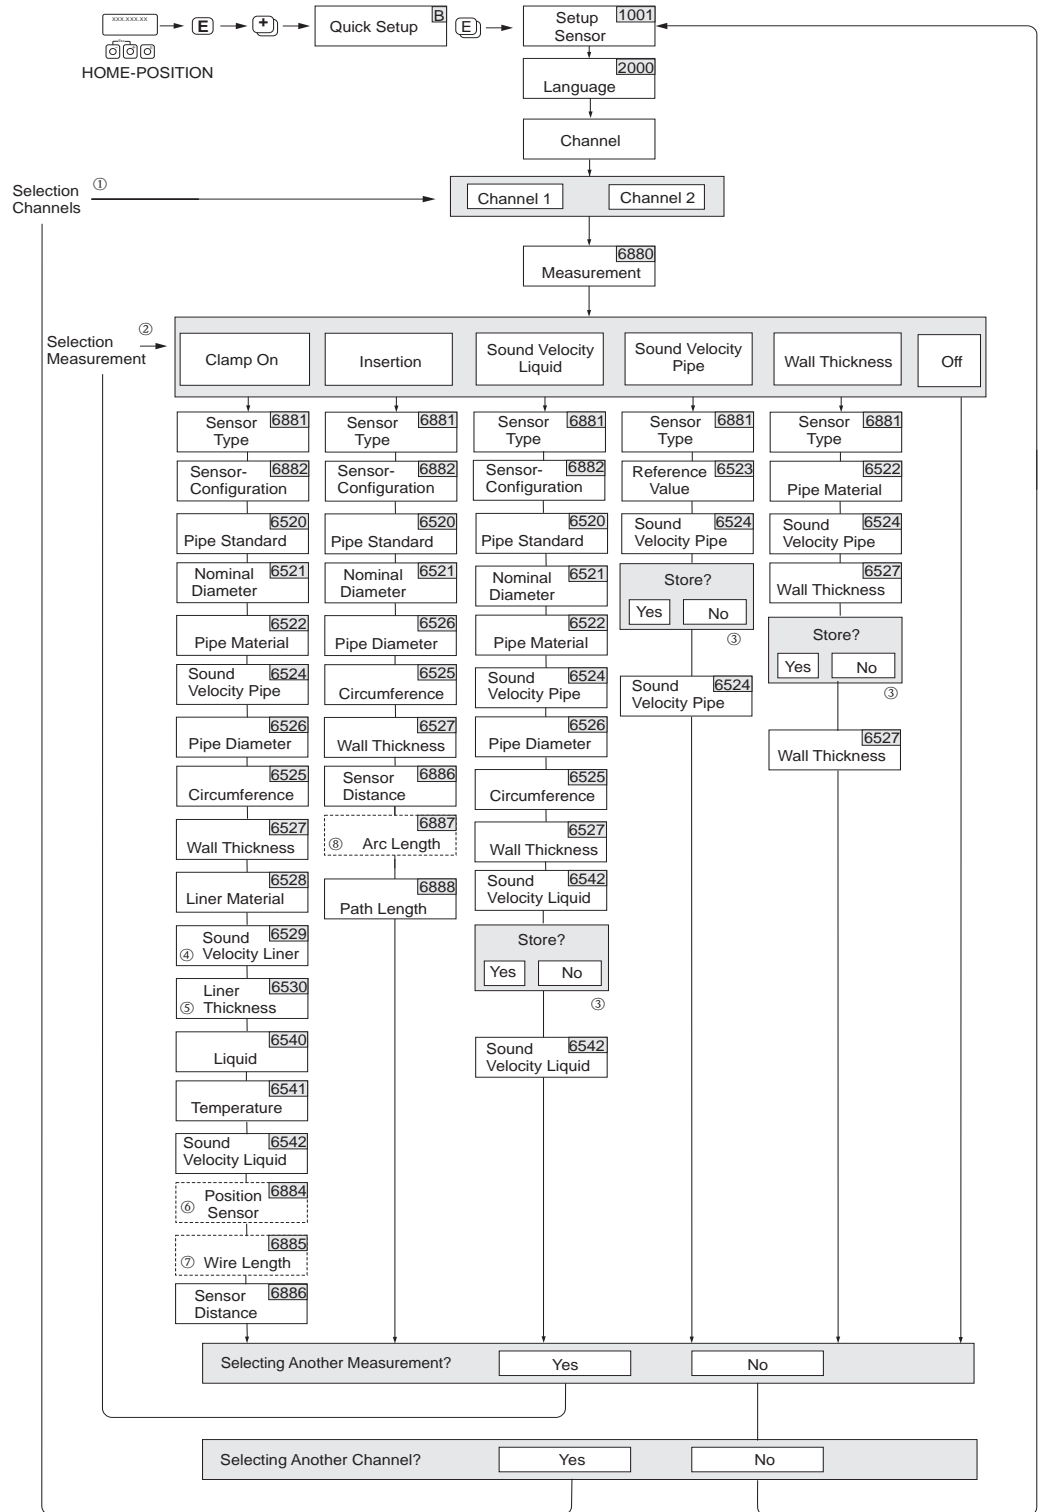

A0008714-EN


**Note!**

The display returns to the cell SETUP SENSOR (1001) if you press the ESC key combination during interrogation.

- ① If a channel is selected for which a Quick Setup has already been executed, the previous values are overwritten.
- ② During each run, all the options can be selected. If settings were made during a previous run, these are overwritten.
- ③ "Save?" prompt for pipe sound velocity:
 - YES = The value measured during Quick Setup is accepted in the appropriate function.
 - NO = The measurement is discarded and the original value remains.
- ④ The SOUND VELOCITY LINER (6529) only appears if:
 - The LINER MATERIAL is selected to something other than NONE (6528).
- ⑤ The LINER THICKNESS (6530) only appears if:
 - The LINER MATERIAL is selected to something other than NONE (6528).
- ⑥ The POSITION SENSOR function (6884) only appears if:
 - The CLAMP ON option is selected in the MEASUREMENT function (6880)
and
 - Two traverses are selected in the SENSOR CONFIGURATION function (6882)
- ⑦ The WIRE LENGTH function (6885) only appears if:
 - The CLAMP ON option is selected in the MEASUREMENT function (6880)
and
 - One traverse is selected in the SENSOR CONFIGURATION function (6882)
- ⑧ The ARC LENGTH function (6887) only appears if:
 - The INSERTION option is selected in the MEASUREMENT function (6880)
and
 - The DUAL-PATH option is selected in the SENSOR CONFIGURATION function (6882)

4.2 Quick Setup "Commissioning"

In the case of measuring devices without a local display, the individual parameters and functions must be configured via the operating program, e.g. FieldCare. If the measuring device is equipped with a local display, all the important device parameters for standard operation, as well as additional functions, can be configured quickly and easily by means of the following Quick Setup menus.

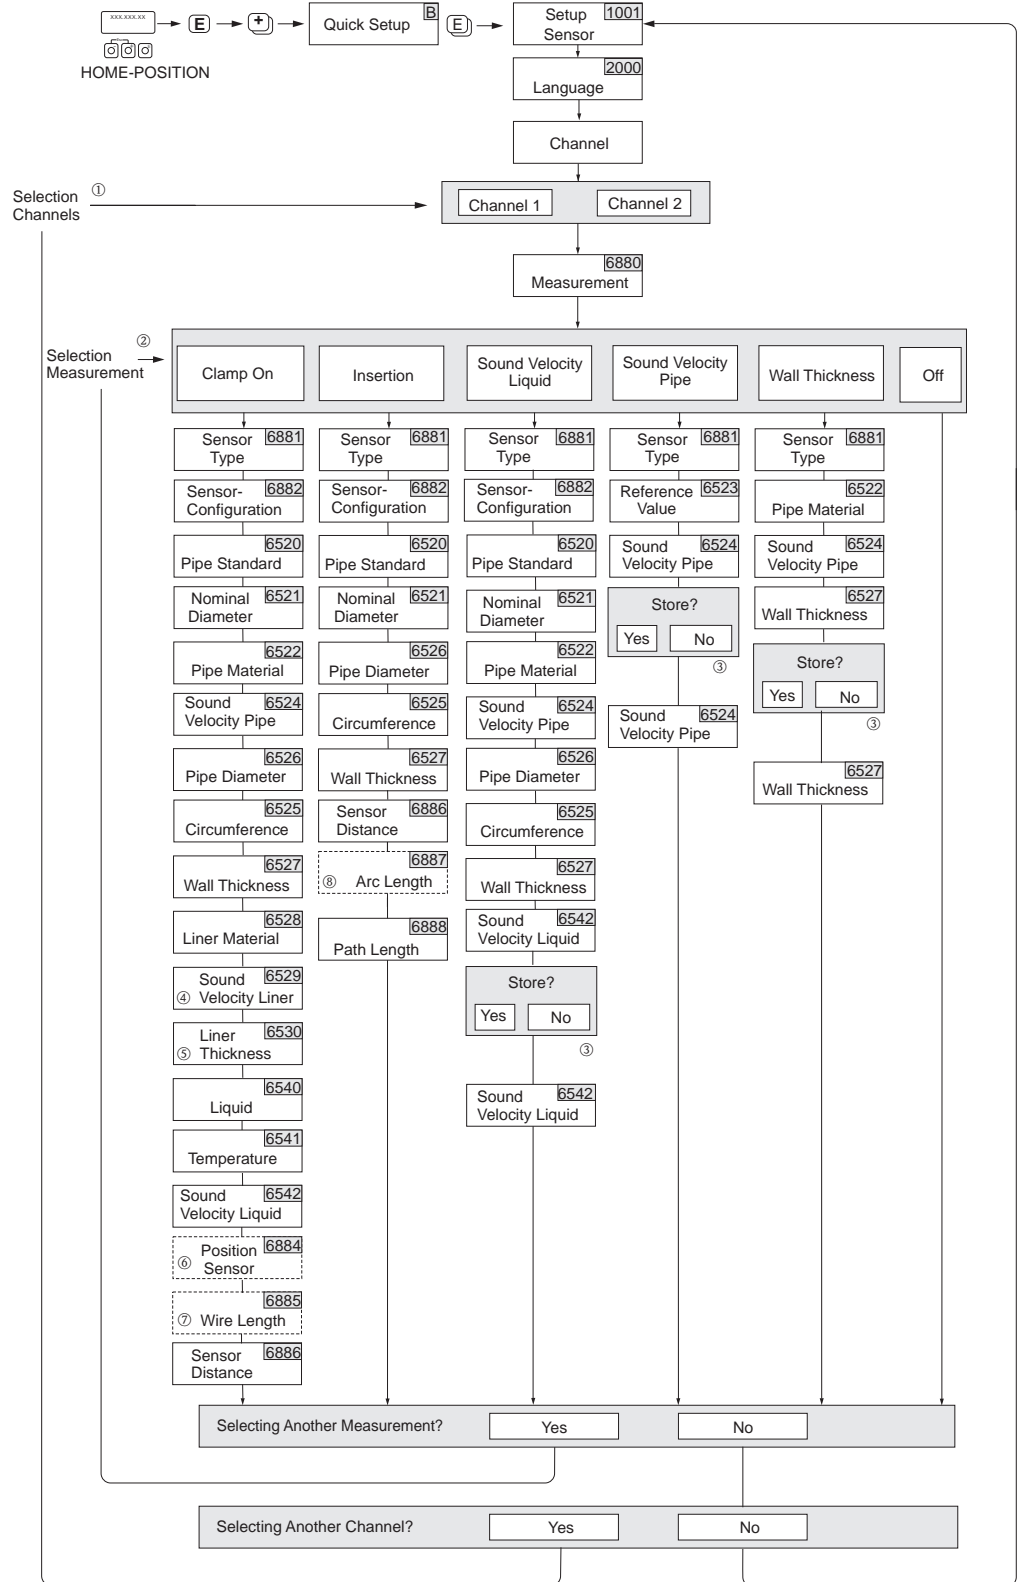


A0008714-EN

Note!

- The display returns to the function SETUP COMMISSIONING (1002) if you press the ESC key combination during parameter interrogation.
 - If you answer YES to the question regarding the "Automatic configuration of the display", the display lines are assigned as follows:
 - Main line = volume flow
 - Additional line = totalizer 1
 - Information line = operating/system condition
-
- ① Only units not yet configured in the current Quick Setup are offered for selection in each cycle. The volume unit is derived from the volume flow unit.
 - ② The "YES" option remains visible until all the units have been configured. "NO" is the only option displayed when no further units are available.
 - ③ Only outputs not yet configured in the current Quick Setup are offered for selection in each cycle.
 - ④ The "YES" option appears as long as a free output is still available. "NO" is the only option displayed when no further outputs are available.

4.3 Quick Setup "Pulsating flow"

With the aid of this Quick Setup, the user is systematically guided through all the device functions that have to be adjusted and configured for measuring operation with pulsating flow. Values that are already configured, such as the measuring range, current range or full scale value, are not changed in the process!

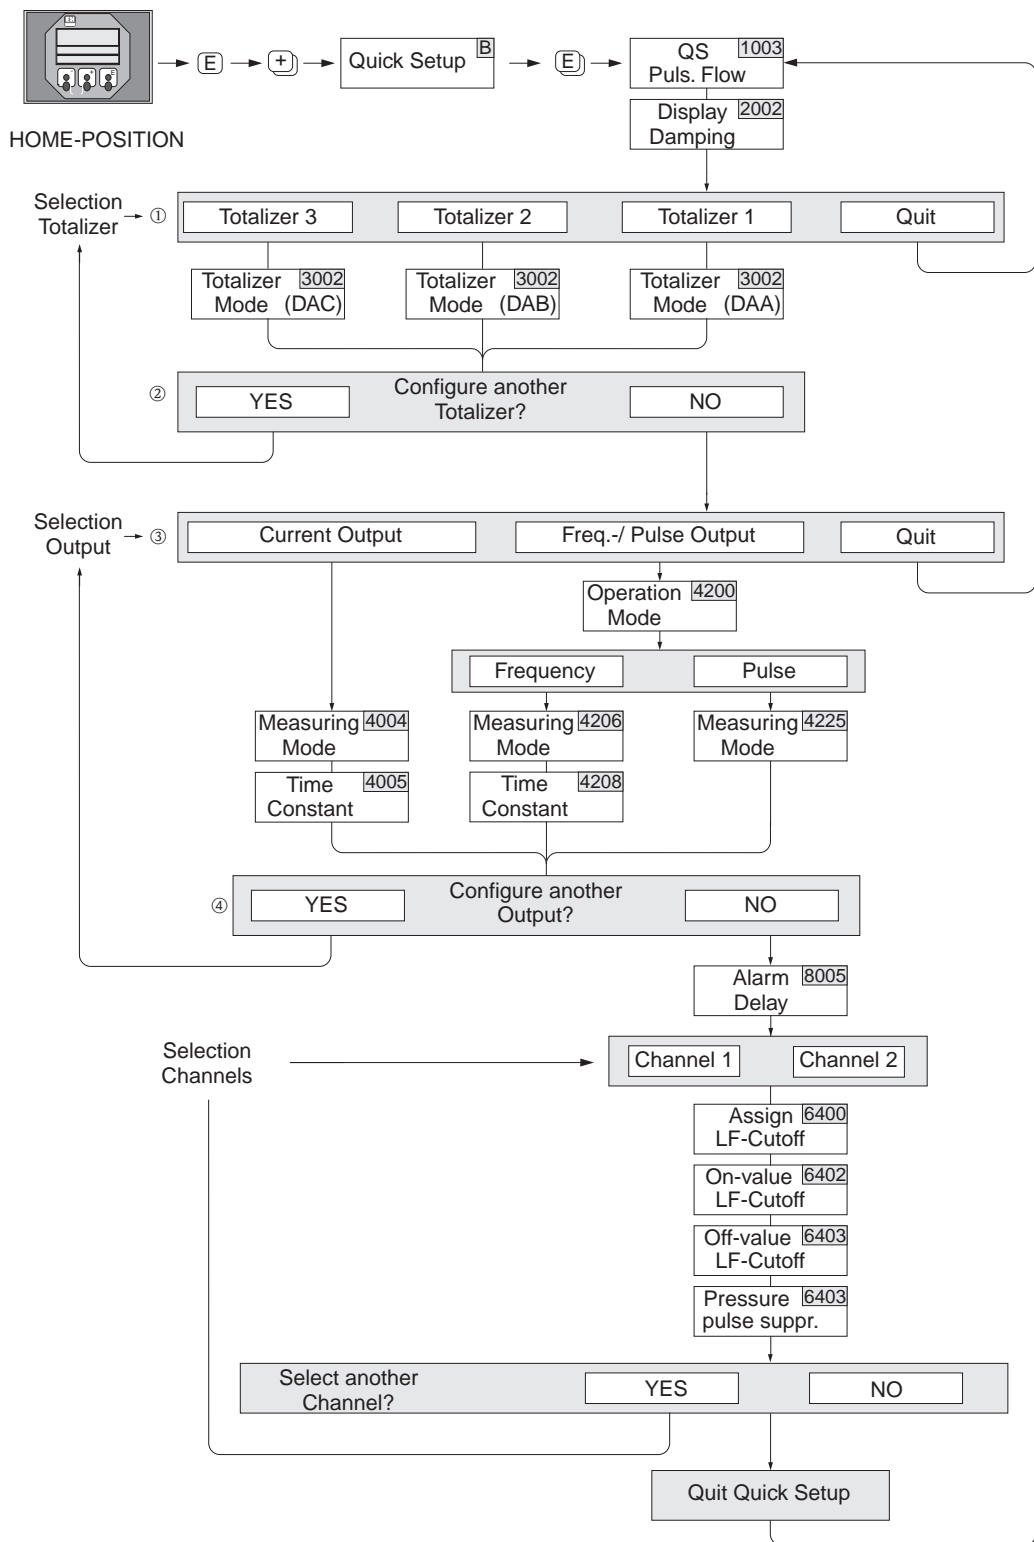

A0009839-EN

**Note!**


- The display returns to the function SETUP PULSATING FLOW (1003) if you press the ESC key combination during parameter interrogation.
- This Quick Setup can either be called up directly after the "COMMISSIONING" Quick Setup, or it can be called up manually via the SETUP PULSATING FLOW function (1003).

- ① Only counters not yet configured in the current Quick Setup are offered for selection in each cycle.
- ② The "YES" option remains visible until all the counters have been configured.
"NO" is the only option displayed when no further counters are available.
- ③ Only outputs not yet configured in the current Quick Setup are offered for selection in each cycle.
- ④ The "YES" option remains visible until all the outputs have been configured.
"NO" is the only option displayed when no further outputs are available.

Settings for the Pulsating Flow menu in Quick Setup:

Fctn. des.	Function name	Suggested settings	Description
Call up through the function matrix:			
B	QUICK SETUP	QS PULSATING FLOW	see P. 17
1003	QS PULSATING FLOW	YES	see P. 17
Basic configuration:			
2002	DISPLAY DAMPING	1 s	see P. 26
3002	TOTALIZER MODE (DAA)	BALANCE	see P. 44
3002	TOTALIZER MODE (DAB)	BALANCE	see P. 44
3002	TOTALIZER MODE (DAC)	BALANCE	see P. 44
Select the signal type: CURRENT OUTPUT (1...2)			
4004	MEASURING MODE	PULSATING FLOW	see P. 53
4005	TIME CONSTANT	1 s	see P. 55
Select the signal type: FREQ./PULSE OUTPUT (1...n) / operation mode: FREQUENCY			
4206	MEASURING MODE	PULSATING FLOW	see P. 63
4208	TIME CONSTANT	0 s	see P. 67
Select the signal type: FREQ./PULSE OUTPUT (1...n) / operation mode: PULSE			
4225	MEASURING MODE	PULSATING FLOW	see P. 71
Other settings:			
8005	ALARM DELAY	0 s	see P. 134
6400	ASSIGN LOW FLOW CUT OFF	VOLUME FLOW	see P. 100
6402	ON-VALUE LOW FLOW CUT OFF	3.0 dm ³ /min resp. 0.8 US-gal/min	see P. 100
6403	OFF-VALUE LOW FLOW CUT OFF	50%	see P. 100
6404	PRESSURE SHOCK SUPPRESSION	0 s	see P. 101



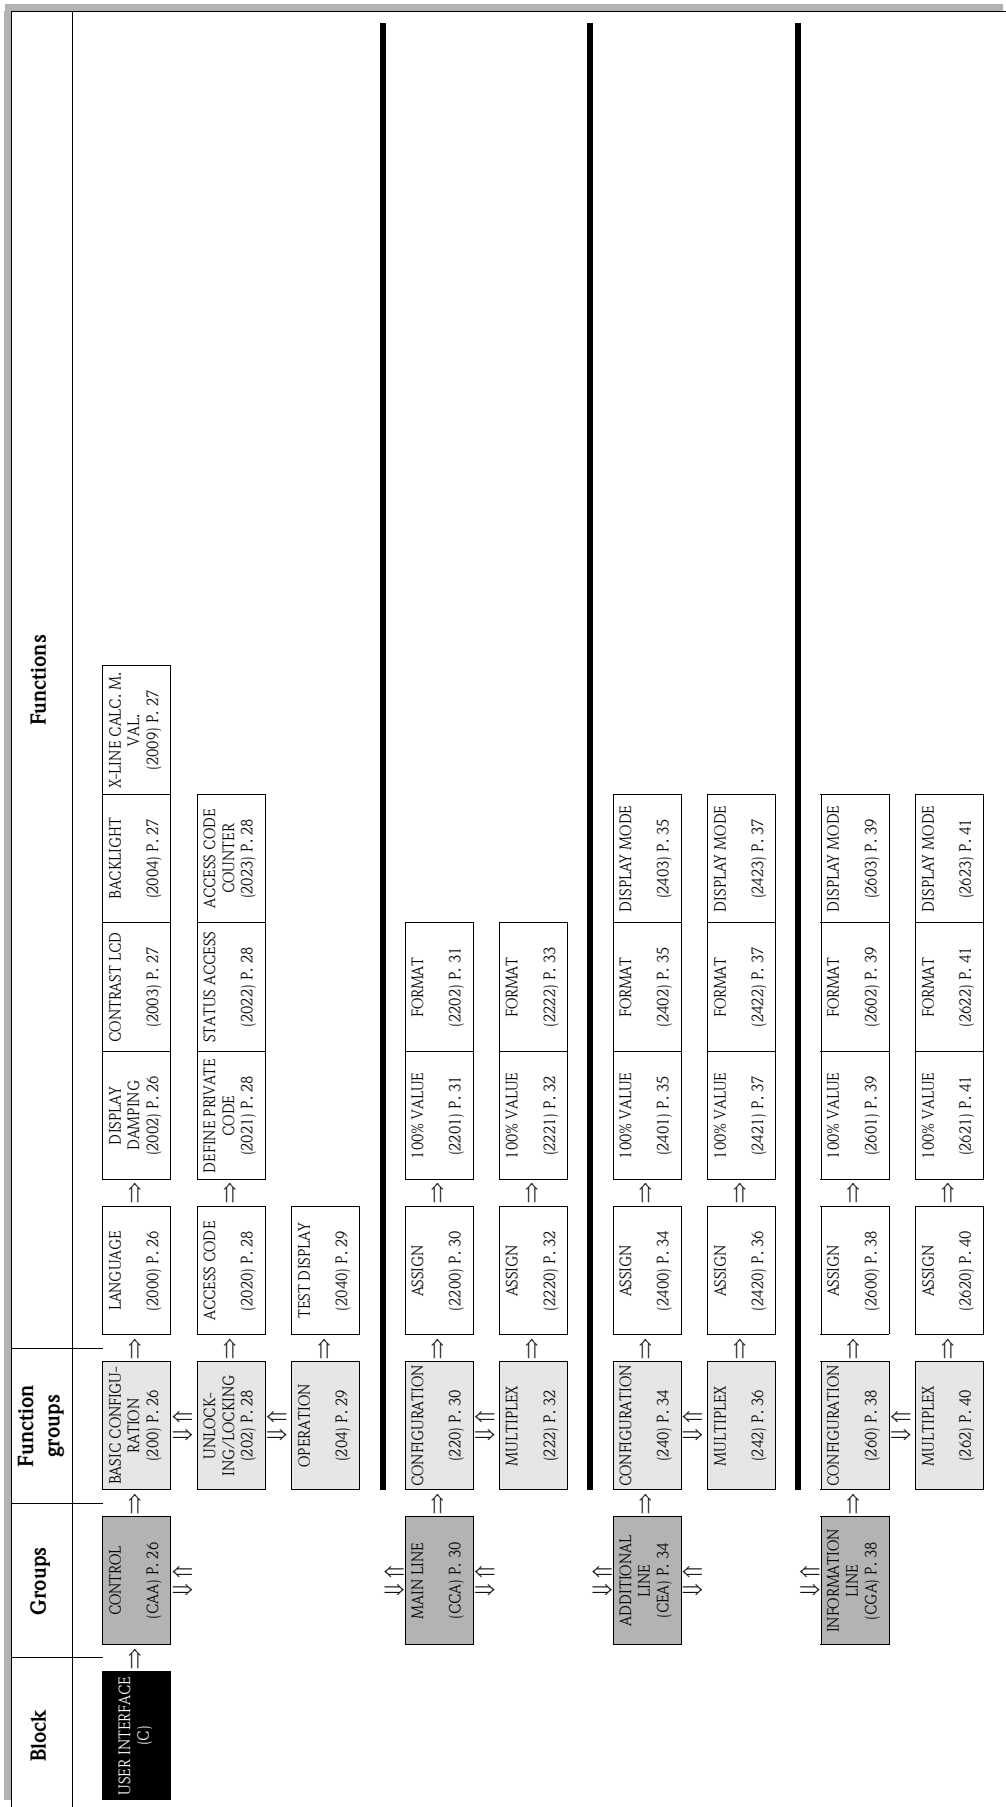

5 Block USER INTERFACE




5.1 Group CONTROL


5.1.1 Function group BASIC CONFIGURATION

USER INTERFACE C ⇒ CONTROL CAA ⇒ BASIC CONFIGURATION 200

Functional description																																													
USER INTERFACE → CONTROL → BASIC CONFIGURATION																																													
LANGUAGE (2000)	<p>Use this function to select the language for all texts, parameters and messages shown on the local display.</p> <p> Note! The displayed options depend on the available language group shown in the LANGUAGE GROUP (8226) function.</p> <p>Options:</p> <table style="width: 100%; border: none;"> <tr> <td style="width: 50%;">Language group</td> <td>ENGLISH</td> </tr> <tr> <td>WEST EU / USA</td> <td>DEUTSCH</td> </tr> <tr> <td></td> <td>FRANCAIS</td> </tr> <tr> <td></td> <td>ESPAÑOL</td> </tr> <tr> <td></td> <td>ITALIANO</td> </tr> <tr> <td></td> <td>NEDERLANDS</td> </tr> <tr> <td></td> <td>PORTUGUESE</td> </tr> <tr> <td colspan="2"> </td> </tr> <tr> <td>Language group</td> <td>ENGLISH</td> </tr> <tr> <td>EAST EU / SCAND.</td> <td>NORSK</td> </tr> <tr> <td></td> <td>SVENSKA</td> </tr> <tr> <td></td> <td>SUOMI</td> </tr> <tr> <td></td> <td>POLISH</td> </tr> <tr> <td></td> <td>CZECH</td> </tr> <tr> <td></td> <td>RUSSIAN</td> </tr> <tr> <td colspan="2"> </td> </tr> <tr> <td>Language group ASIA</td> <td>ENGLISH</td> </tr> <tr> <td></td> <td>BAHASA INDONESIA</td> </tr> <tr> <td></td> <td>JAPANESE (syllabary)</td> </tr> <tr> <td colspan="2"> </td> </tr> <tr> <td>Language group</td> <td>CHINESE</td> </tr> <tr> <td>CHINESE</td> <td>ENGLISH</td> </tr> <p>Factory setting: Country-dependent, see Page 140</p> <p> Note!</p> <ul style="list-style-type: none"> ■ If you press the  keys simultaneously during startup, the language defaults to "ENGLISH". ■ You can change the language group via the configuration software FieldCare. Please do not hesitate to contact your Endress+Hauser sales office if you have any questions. </table>	Language group	ENGLISH	WEST EU / USA	DEUTSCH		FRANCAIS		ESPAÑOL		ITALIANO		NEDERLANDS		PORTUGUESE			Language group	ENGLISH	EAST EU / SCAND.	NORSK		SVENSKA		SUOMI		POLISH		CZECH		RUSSIAN			Language group ASIA	ENGLISH		BAHASA INDONESIA		JAPANESE (syllabary)			Language group	CHINESE	CHINESE	ENGLISH
Language group	ENGLISH																																												
WEST EU / USA	DEUTSCH																																												
	FRANCAIS																																												
	ESPAÑOL																																												
	ITALIANO																																												
	NEDERLANDS																																												
	PORTUGUESE																																												
Language group	ENGLISH																																												
EAST EU / SCAND.	NORSK																																												
	SVENSKA																																												
	SUOMI																																												
	POLISH																																												
	CZECH																																												
	RUSSIAN																																												
Language group ASIA	ENGLISH																																												
	BAHASA INDONESIA																																												
	JAPANESE (syllabary)																																												
Language group	CHINESE																																												
CHINESE	ENGLISH																																												
DISPLAY DAMPING (2002)	<p>Use this function to enter a time constant defining how the display reacts to severely fluctuating flow variables, either very quickly (enter a low time constant) or with damping (enter a high time constant).</p> <p>User input: 0...100 seconds</p> <p>Factory setting: 1 s</p> <p> Note! Setting the time constant to zero seconds switches off damping.</p>																																												


Functional description	
USER INTERFACE → CONTROL → BASIC CONFIGURATION	
CONTRAST LCD (2003)	<p>Use this function to optimize display contrast to suit local operating conditions.</p> <p>User input: 10...100%</p> <p>Factory setting: 50%</p>
BACKLIGHT (2004)	<p>Use this function to optimize the backlight to suit local operating conditions.</p> <p>User input: 10...100%</p> <p>Factory setting: 50%</p>
X-LINE CALCULATED MAIN VALUES (2009)	<p>Use this function to indicate which "calculated main value" from the measured values of both channels is displayed. The option CALCULATED VOLUME FLOW must be selected in the function ASSIGN (2200, main line), (2400, additional line), (2600, information line) so that the value appears in the line desired.</p> <p> Note! This function does not appear if OFF was selected on at least one channel in the function MEASUREMENT (6880).</p> <p>Options: (CH1 + CH2)/2 CH1 + CH2 CH1 - CH2</p> <p>Factory setting: (CH1 + CH2)/2</p>

5.1.2 Function group UNLOCKING/LOCKING



Functional description	
USER INTERFACE → CONTROL → UNLOCKING/LOCKING	
ACCESS CODE (2020)	<p>All data of the measuring system are protected against inadvertent change. Programming is disabled and the settings cannot be changed until a code is entered in this function. If you press the keys in any function, the measuring system automatically goes to this function and the prompt to enter the code appears on the display (when programming is disabled).</p> <p>You can enable programming by entering your personal code (factory setting = 93, see function).</p> <p>User input: max. 4-digit number: 0...9999</p> <p> Note!</p> <ul style="list-style-type: none"> ■ The programming levels are disabled if you do not press a key within 60 seconds following automatic return to the HOME position. ■ You can also disable programming in this function by entering any number (other than the defined private code). ■ The Endress+Hauser service organization can be of assistance if you mislay your personal code.
DEFINE PRIVATE CODE (2021)	<p>Use this function to enter a personal code number for enabling programming.</p> <p>User input: 0...9999 (max. 4-digit number)</p> <p>Factory setting: 93</p> <p> Note!</p> <ul style="list-style-type: none"> ■ Programming is always enabled with the code "0". ■ Programming has to be enabled before this code can be changed. When programming is disabled this function is not available, thus preventing others from accessing your personal code.
STATUS ACCESS (2022)	<p>Use this function to check the access status for the function matrix.</p> <p>User interface: ACCESS CUSTOMER (parameterization possible) LOCKED (parameterization disabled)</p>
ACCESS CODE COUNTER (2023)	<p>The number of times the private or service code was entered to access the device appears on the display.</p> <p>Display: Integer (delivery status: 0)</p>


5.1.3 Function group OPERATION

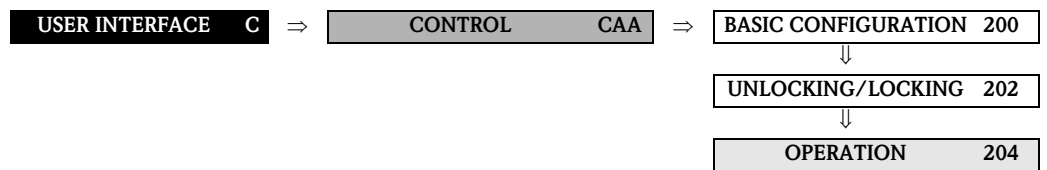

Functional description	
USER INTERFACE → CONTROL → OPERATION	
TEST DISPLAY (2040)	<p>Use this function to test the operability of the local display and its pixels.</p> <p>Options: OFF ON</p> <p>Factory setting: OFF</p> <p>Test sequence:</p> <ol style="list-style-type: none"> 1. Start the test by selecting ON. 2. All pixels of the main line, additional line and information line are darkened for minimum 0.75 seconds. 3. Main line, additional line and information line show an "8" in each field for minimum 0.75 seconds. 4. Main line, additional line and information line show a "0" in each field for minimum 0.75 seconds. 5. Main line, additional line and information line show nothing (blank display) for minimum 0.75 seconds. <p>When the test completes the local display returns to its initial state and the setting changes to OFF.</p>



5.2 Group MAIN LINE

5.2.1 Function group CONFIGURATION




Functional description	
USER INTERFACE → MAIN LINE → CONFIGURATION	
<p>1 = Main line 2 = Additional line 3 = Information line</p>	
<p>ASSIGN (2200)</p>	<p>Use this function to define the display value assigned to the main line (the top line of the local display) during normal measuring operation.</p> <p>Options: OFF VOLUME FLOW (CH1...CH2) CALCULATED VOLUME FLOW VOLUME FLOW % (CH1...CH2) CALCULATED VOLUME FLOW % SOUND VELOCITY (CH1...CH2) SOUND VELOCITY AVERAGE SIGNAL STRENGTH (CH1...CH2) FLOW VELOCITY (CH1...CH2) FLOW VELOCITY AVERAGE ACTUAL CURRENT (1...3) ACTUAL FREQUENCY (1...2) TOTALIZER (1...3)</p> <p> Note! If a channel is not visible, it does not appear in the options. Channels can be displayed or hidden by means of the function MEASUREMENT (6880).</p> <p>Factory setting: VOLUME FLOW CH1</p> <p>Advanced options with optional software package ADVANCED DIAGNOSTICS: DEVIATION VOLUME FLOW (CH1...CH2) DEVIATION VOLUME FLOW AVERAGE DEVIATION FLOW VELOCITY (CH1...CH2) DEVIATION FLOW VELOCITY AVERAGE DEVIATION SIGNAL STRENGTH (CH1...CH2) DEVIATION SOUND VELOCITY (CH1...CH2) DEVIATION SOUND VELOCITY AVERAGE DEVIATION ACTUAL TRANSIT TIME (CH1...CH2) DEVIATION ACCEPTANCE RATE (CH1...CH2)</p>


A0001253

Functional description	
USER INTERFACE → MAIN LINE → CONFIGURATION	
100% VALUE (2201)	<p> Note! This function is only available if VOLUME FLOW IN % or CALCULATED VOLUME FLOW IN % is selected in the function ASSIGN (2200).</p> <p>Use this function to define the flow value to be shown on the display as the 100% value.</p> <p>User input: 5-digit floating-point number</p> <p>Factory setting: 10l/s</p>
FORMAT (2202)	<p>Use this function to define the maximum number of places after the decimal point displayed for the reading in the main line.</p> <p>Options: XXXXX. - XXXX.X - XXX.XX - XX.XXX -X.XXXX</p> <p>Factory setting: X.XXXX</p> <p> Note!</p> <ul style="list-style-type: none"> ■ Note that this setting only affects the reading as it appears on the display, it has no influence on the accuracy of the system's calculations. ■ The places after the decimal point as computed by the measuring device cannot always be displayed, depending on this setting and the engineering unit. In such instances an arrow appears on the display between the measuring value and the engineering unit (e.g. 1.2 → m³/h), indicating that the measuring system is computing with more decimal places than can be shown on the display.

5.2.2 Function group MULTIPLEX

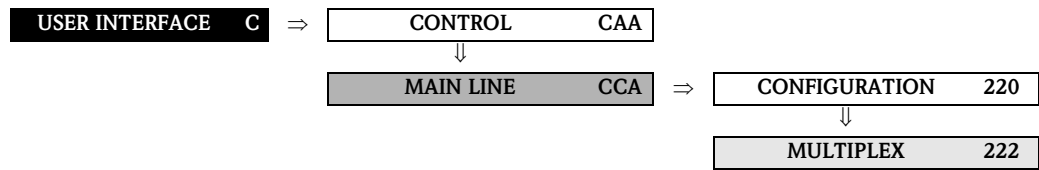


Functional description	
USER INTERFACE → MAIN LINE → MULTIPLEX	
ASSIGN (2220)	<p>Use this function to define a second reading to be displayed in the main line alternatively (every 10 seconds) with the reading defined in the function ASSIGN (2200).</p> <p>Options: OFF VOLUME FLOW (CH1...CH2) CALCULATED VOLUME FLOW VOLUME FLOW % (CH1...CH2) CALCULATED VOLUME FLOW % SOUND VELOCITY (CH1...CH2) SOUND VELOCITY AVERAGE SIGNAL STRENGTH (CH1...CH2) FLOW VELOCITY (CH1...CH2) FLOW VELOCITY AVERAGE ACTUAL CURRENT (1...3) ACTUAL FREQUENCY (1...2) TOTALIZER (1...3)</p> <p> Note! If a channel is not visible, it does not appear in the options. Channels can be displayed or hidden by means of the function MEASUREMENT (6880).</p> <p>Factory setting: OFF</p> <p>Advanced options with optional software package ADVANCED DIAGNOSTICS: DEVIATION VOLUME FLOW (CH1...CH2) DEVIATION VOLUME FLOW AVERAGE DEVIATION FLOW VELOCITY (CH1...CH2) DEVIATION FLOW VELOCITY AVERAGE DEVIATION SIGNAL STRENGTH (CH1...CH2) DEVIATION SOUND VELOCITY (CH1...CH2) DEVIATION SOUND VELOCITY AVERAGE DEVIATION ACTUAL TRANSIT TIME (CH1...CH2) DEVIATION ACCEPTANCE RATE (CH1...CH2)</p>
100% VALUE (2221)	<p> Note! This function is only available if VOLUME FLOW % or CALCULATED VOLUME FLOW % is selected in the function ASSIGN (2200).</p> <p>Use this function to define the flow value to be shown on the display as the 100% value.</p> <p>User input: 5-digit floating-point number</p> <p>Factory setting: Depends on nominal diameter and country, [value] / [dm³...m³ or US-gal...US-Mgal] Corresponds to the factory setting for the full scale value (see Page 140 ff.).</p>





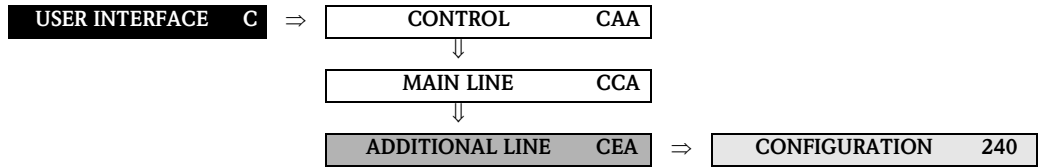

Functional description	
USER INTERFACE → MAIN LINE → MULTIPLEX	
FORMAT (2222)	<p>Use this function to define the maximum number of places after the decimal point for the second value displayed in the main line.</p> <p>Options: XXXXX. - XXXX.X - XXX.XX - XX.XXX -X.XXXX</p> <p>Factory setting: X.XXXX</p> <p> Note!</p> <ul style="list-style-type: none"> ■ Note that this setting only affects the reading as it appears on the display, it has no influence on the accuracy of the system's calculations. ■ The places after the decimal point as computed by the measuring device cannot always be displayed, depending on this setting and the engineering unit. In such instances an arrow appears on the display between the measuring value and the engineering unit (e.g. 1.2 → m³/h), indicating that the measuring system is computing with more decimal places than can be shown on the display.

5.3 Group ADDITIONAL LINE


5.3.1 Function group CONFIGURATION







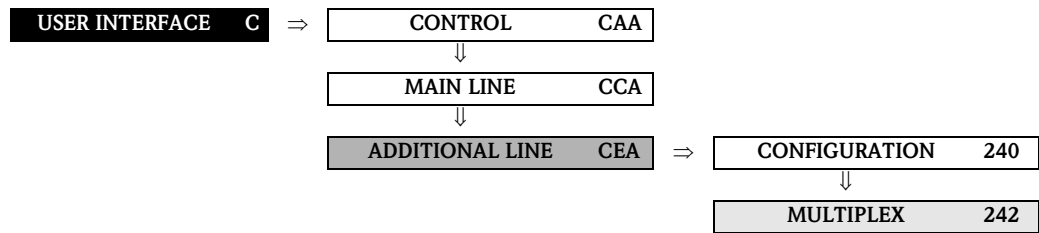

Functional description	
USER INTERFACE → ADDITIONAL LINE → CONFIGURATION	
<p>1 = Main line 2 = Additional line 3 = Information line</p>	<p style="text-align: right;">A0001253</p>
<p>ASSIGN (2400)</p>	<p>Use this function to define the display value assigned to the additional line (the middle line of the local display) during normal measuring operation.</p> <p>Options: OFF VOLUME FLOW (CH1...CH2) CALCULATED VOLUME FLOW VOLUME FLOW % (CH1...CH2) CALCULATED VOLUME FLOW % SOUND VELOCITY (CH1...CH2) SOUND VELOCITY AVERAGE SIGNAL STRENGTH (CH1...CH2) FLOW VELOCITY (CH1...CH2) FLOW VELOCITY AVERAGE VOLUME FLOW BARGRAPH IN % (CH1...CH2) CALCULATED VOLUME FLOW BARGRAPH % (CH1...CH2) SIGNAL STRENGTH BARGRAPH % (CH1...CH2) ACTUAL CURRENT (1...3) ACTUAL FREQUENCY (1...2) TOTALIZER (1...3) TAG NAME FLOW DIRECTION (CH1...CH2) CALCULATED FLOW DIRECTION</p> <p>Factory setting: TOTALIZER 1</p> <p> Note! If a channel is not visible, it does not appear in the options. Channels can be displayed or hidden by means of the function MEASUREMENT (6880).</p> <p>Advanced options with optional software package ADVANCED DIAGNOSTICS: DEVIATION VOLUME FLOW (CH1...CH2) DEVIATION VOLUME FLOW AVERAGE DEVIATION FLOW VELOCITY (CH1...CH2) DEVIATION FLOW VELOCITY AVERAGE DEVIATION SIGNAL STRENGTH (CH1...CH2) DEVIATION SOUND VELOCITY (CH1...CH2) DEVIATION SOUND VELOCITY AVERAGE DEVIATION ACTUAL TRANSIT TIME (CH1...CH2) DEVIATION ACCEPTANCE RATE (CH1...CH2)</p>

Functional description USER INTERFACE → ADDITIONAL LINE → CONFIGURATION	
100% VALUE (2401)	<p> Note! This function is not available unless one of the following was selected in the function ASSIGN (2400):</p> <ul style="list-style-type: none"> ■ VOLUME FLOW % ■ VOLUME FLOW BARGRAPH % ■ CALCULATED VOLUME FLOW % ■ CALCULATED VOLUME FLOW BARGRAPH % <p>Use this function to define the flow value to be shown on the display as the 100% value.</p> <p>User input: 5-digit floating-point number</p> <p>Factory setting: Depends on nominal diameter and country, [value] / [dm³...m³ or US-gal...US-Mgal] Corresponds to the factory setting for the full scale value (see Page 140 ff.).</p>
FORMAT (2402)	<p> Note! This function is not available unless a number was selected in the function ASSIGN (2400).</p> <p>Use this function to define the maximum number of places after the decimal point displayed for the reading in the additional line.</p> <p>Options: XXXXX. - XXXX.X - XXX.XX - XX.XXX -X.XXXX</p> <p>Factory setting: X.XXXX</p> <p> Note!</p> <ul style="list-style-type: none"> ■ Note that this setting only affects the reading as it appears on the display, it has no influence on the accuracy of the system's calculations. ■ The places after the decimal point as computed by the measuring device cannot always be displayed, depending on this setting and the engineering unit. In such instances an arrow appears on the display between the measuring value and the engineering unit (e.g. 1.2 → m³/h), indicating that the measuring system is computing with more decimal places than can be shown on the display.
DISPLAY MODE (2403)	<p> Note! This function is only available if VOLUME FLOW BARGRAPH IN % or CALCULATED VOLUME FLOW BARGRAPH IN % was selected in the function ASSIGN (2420).</p> <p>Use this function to define the format of the bar graph.</p> <p>Options: STANDARD (Simple bar graph with 25 / 50 / 75% gradations and integrated sign).</p> <div style="border: 1px solid black; padding: 5px; text-align: center; width: fit-content; margin: 10px auto;">  </div> <p style="text-align: right; font-size: small;">A0001258</p> <p>SYMMETRY (Symmetrical bar graph for positive and negative directions of flow, with -50 / 0 / +50% gradations and integrated sign).</p> <div style="border: 1px solid black; padding: 5px; text-align: center; width: fit-content; margin: 10px auto;">  </div> <p style="text-align: right; font-size: small;">A0001259</p> <p>Factory setting: STANDARD</p>

5.3.2 Function group MULTIPLEX




Functional description	
USER INTERFACE → ADDITIONAL LINE → MULTIPLEX	
ASSIGN (2420)	<p>Use this function to define the second reading to be displayed in the additional line alternately (every 10 seconds) with the value defined in the function ASSIGN (2400).</p> <p>Options: OFF VOLUME FLOW (CH1...CH2) CALCULATED VOLUME FLOW VOLUME FLOW % (CH1...CH2) CALCULATED VOLUME FLOW % SOUND VELOCITY (CH1...CH2) SOUND VELOCITY AVERAGE SIGNAL STRENGTH (CH1...CH2) FLOW VELOCITY (CH1...CH2) FLOW VELOCITY AVERAGE VOLUME FLOW BARGRAPH IN % (CH1...CH2) CALCULATED VOLUME FLOW BARGRAPH % (CH1...CH2) SIGNAL STRENGTH BARGRAPH % (CH1...CH2) ACTUAL CURRENT (1...3) ACTUAL FREQUENCY (1...2) TOTALIZER (1...3) TAG NAME FLOW DIRECTION (CH1...CH2) CALCULATED FLOW DIRECTION</p> <p>Factory setting: OFF</p> <p> Note! Multiplex mode is suspended as soon as a fault / notice message is generated. The message in question appears on the display.</p> <ul style="list-style-type: none"> ■ Fault message (identified by a lightning icon): <ul style="list-style-type: none"> – If ON was selected in the function ACKNOWLEDGE FAULTS (8004), multiplex mode is resumed as soon as the fault has been acknowledged and is no longer active. – If OFF was selected in the function ACKNOWLEDGE FAULTS (8004), multiplex mode is resumed as soon as the fault is no longer active. ■ Notice message (identified by an exclamation mark): <ul style="list-style-type: none"> – Multiplex mode is resumed as soon as the notice message is no longer active. <p>If a channel is not visible, it does not appear in the options. Channels can be displayed or hidden by means of the function MEASUREMENT (6880).</p> <p>Advanced options with optional software package ADVANCED DIAGNOSTICS: DEVIATION VOLUME FLOW (CH1...CH2) DEVIATION VOLUME FLOW AVERAGE DEVIATION FLOW VELOCITY (CH1...CH2) DEVIATION FLOW VELOCITY AVERAGE DEVIATION SIGNAL STRENGTH (CH1...CH2) DEVIATION SOUND VELOCITY (CH1...CH2) DEVIATION SOUND VELOCITY AVERAGE DEVIATION ACTUAL TRANSIT TIME (CH1...CH2) DEVIATION ACCEPTANCE RATE (CH1...CH2)</p>

Functional description	
USER INTERFACE → ADDITIONAL LINE → MULTIPLEX	
100% VALUE (2421)	<p> Note! This function is not available unless one of the following was selected in the function ASSIGN (2420):</p> <ul style="list-style-type: none"> ■ VOLUME FLOW % ■ VOLUME FLOW BARGRAPH % ■ CALCULATED VOLUME FLOW % ■ CALCULATED VOLUME FLOW BARGRAPH % <p>Use this function to define the flow value to be shown on the display as the 100% value.</p> <p>User input: 5-digit floating-point number</p> <p>Factory setting: Depends on nominal diameter and country, [value] / [dm³...m³ or US-gal...US-Mgal] Corresponds to the factory setting for the full scale value (see Page 140 ff.).</p>
FORMAT (2422)	<p> Note! This function is not available unless a number was selected in the function ASSIGN (2420).</p> <p>Use this function to define the maximum number of places after the decimal point for the second value displayed in the additional line.</p> <p>Options: XXXXX. - XXXX.X - XXX.XX - XX.XXX -X.XXXX</p> <p>Factory setting: X.XXXX</p> <p> Note!</p> <ul style="list-style-type: none"> ■ Note that this setting only affects the reading as it appears on the display, it has no influence on the accuracy of the system's calculations. ■ The places after the decimal point as computed by the measuring device cannot always be displayed, depending on this setting and the engineering unit. In such instances an arrow appears on the display between the measuring value and the engineering unit (e.g. 1.2 → m³/h), indicating that the measuring system is computing with more decimal places than can be shown on the display.
DISPLAY MODE (2423)	<p> Note! This function is only available if VOLUME FLOW BARGRAPH IN % or CALCULATED VOLUME FLOW BARGRAPH IN % was selected in the function ASSIGN (2420).</p> <p>Use this function to define the format of the bar graph.</p> <p>Options: STANDARD (Simple bar graph with 25 / 50 / 75% gradations and integrated sign).</p> <div style="border: 1px solid black; padding: 5px; text-align: center; width: fit-content; margin: 10px auto;">  </div> <p style="text-align: right; font-size: small;">A0001258</p> <p>SYMMETRY (Symmetrical bar graph for positive and negative directions of flow, with -50 / 0 / +50% gradations and integrated sign).</p> <div style="border: 1px solid black; padding: 5px; text-align: center; width: fit-content; margin: 10px auto;">  </div> <p style="text-align: right; font-size: small;">A0001259</p> <p>Factory setting: STANDARD</p>



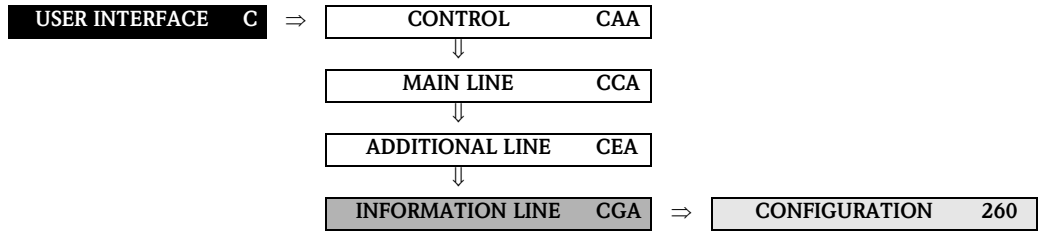

5.4 Group INFORMATION LINE

5.4.1 Function group CONFIGURATION




Functional description	
USER INTERFACE → INFORMATION LINE → CONFIGURATION	
<p>1 = Main line 2 = Additional line 3 = Information line</p>	
<p>ASSIGN (2600)</p>	<p>Use this function to define the display value assigned to the information line (the bottom line of the local display) during normal measuring operation.</p> <p>Options: OFF VOLUME FLOW (CH1...CH2) CALCULATED VOLUME FLOW VOLUME FLOW % (CH1...CH2) CALCULATED VOLUME FLOW IN % SOUND VELOCITY (CH1...CH2) SOUND VELOCITY AVERAGE SIGNAL STRENGTH (CH1...CH2) FLOW VELOCITY (CH1...CH2) FLOW VELOCITY AVERAGE VOLUME FLOW BARGRAPH % (CH1...CH2) CALCULATED VOLUME FLOW BARGRAPH % (CH1...CH2) SIGNAL STRENGTH BARGRAPH % (CH1...CH2) ACTUAL CURRENT (1...3) ACTUAL FREQUENCY (1...2) TOTALIZER (1...3) TAG NAME OPERATING/SYSTEM CONDITIONS FLOW DIRECTION (CH1...CH2) CALCULATED FLOW DIRECTION</p> <p>Factory setting: OPERATING/SYSTEM CONDITIONS</p> <p> Note! If a channel is not visible, it does not appear in the options. Channels can be displayed or hidden by means of the function MEASUREMENT (6880).</p> <p>Advanced options with optional software package ADVANCED DIAGNOSTICS: DEVIATION VOLUME FLOW (CH1...CH2) DEVIATION VOLUME FLOW AVERAGE DEVIATION FLOW VELOCITY (CH1...CH2) DEVIATION FLOW VELOCITY AVERAGE DEVIATION SIGNAL STRENGTH (CH1...CH2) DEVIATION SOUND VELOCITY (CH1...CH2) DEVIATION SOUND VELOCITY AVERAGE DEVIATION ACTUAL TRANSIT TIME (CH1...CH2) DEVIATION ACCEPTANCE RATE (CH1...CH2)</p>





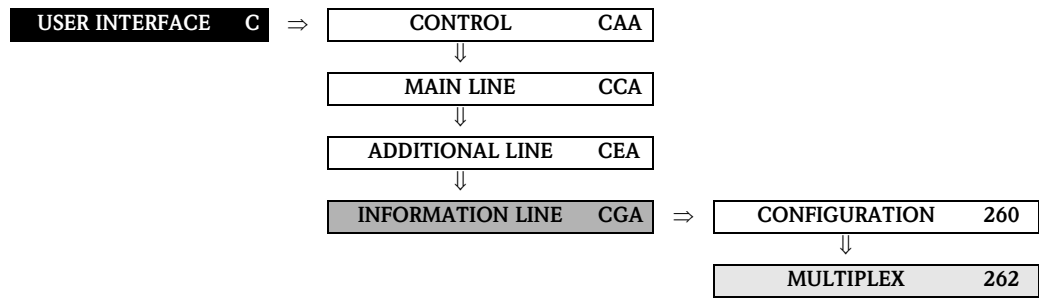

A0001253

Functional description USER INTERFACE → INFORMATION LINE → CONFIGURATION	
100% VALUE (2601)	<p> Note! This function is not available unless one of the following was selected in the function ASSIGN (2400):</p> <ul style="list-style-type: none"> ■ VOLUME FLOW % ■ VOLUME FLOW BARGRAPH % ■ CALCULATED VOLUME FLOW % ■ CALCULATED VOLUME FLOW BARGRAPH % <p>Use this function to define the flow value to be shown on the display as the 100% value.</p> <p>User input: 5-digit floating-point number</p> <p>Factory setting: Depends on nominal diameter and country, [value] / [dm³...m³ or US-gal...US-Mgal] Corresponds to the factory setting for the full scale value (see Page 140 ff.).</p>
FORMAT (2602)	<p> Note! This function is not available unless a number was selected in the function ASSIGN (2600).</p> <p>Use this function to define the maximum number of places after the decimal point displayed for the reading in the information line.</p> <p>Options: XXXXX. - XXXX.X - XXX.XX - XX.XXX -X.XXXX</p> <p>Factory setting: X.XXXX</p> <p> Note!</p> <ul style="list-style-type: none"> ■ Note that this setting only affects the reading as it appears on the display, it has no influence on the accuracy of the system's calculations. ■ The places after the decimal point as computed by the measuring device cannot always be displayed, depending on this setting and the engineering unit. In such instances an arrow appears on the display between the measuring value and the engineering unit (e.g. 1.2 → m³/h), indicating that the measuring system is computing with more decimal places than can be shown on the display.
DISPLAY MODE (2603)	<p> Note! This function is only available if VOLUME FLOW BARGRAPH IN % or CALCULATED VOLUME FLOW BARGRAPH IN % was selected in the function ASSIGN (2600).</p> <p>Use this function to define the format of the bar graph.</p> <p>Options: STANDARD (Simple bar graph with 25 / 50 / 75% gradations and integrated sign).</p> <div style="border: 1px solid black; padding: 5px; display: inline-block; text-align: center;"> </div> <p style="text-align: right; font-size: small;">A0001258</p> <p>SYMMETRY (Symmetrical bar graph for positive and negative directions of flow, with -50 / 0 / +50% gradations and integrated sign).</p> <div style="border: 1px solid black; padding: 5px; display: inline-block; text-align: center;"> </div> <p style="text-align: right; font-size: small;">A0001259</p> <p>Factory setting: STANDARD</p>


5.4.2 Function group MULTIPLEX



Functional description	
USER INTERFACE → INFORMATION LINE → MULTIPLEX	
ASSIGN (2620)	<p>Use this function to define the second reading to be displayed in the information line alternately (every 10 seconds) with the value defined in the function ASSIGN (2600).</p> <p>Options: OFF VOLUME FLOW (CH1...CH2) CALCULATED VOLUME FLOW VOLUME FLOW % (CH1...CH2) CALCULATED VOLUME FLOW IN % SOUND VELOCITY (CH1...CH2) SOUND VELOCITY AVERAGE SIGNAL STRENGTH (CH1...CH2) FLOW VELOCITY (CH1...CH2) FLOW VELOCITY AVERAGE VOLUME FLOW BARGRAPH % (CH1...CH2) CALCULATED VOLUME FLOW BARGRAPH % (CH1...CH2) SIGNAL STRENGTH BARGRAPH % (CH1...CH2) ACTUAL CURRENT (1...3) ACTUAL FREQUENCY (1...2) TOTALIZER (1...3) TAG NAME OPERATING/SYSTEM CONDITIONS FLOW DIRECTION (CH1...CH2) CALCULATED FLOW DIRECTION</p> <p>Factory setting: OFF</p> <p> Note! Multiplex mode is suspended as soon as a fault / notice message is generated. The message in question appears on the display.</p> <ul style="list-style-type: none"> ■ Fault message (identified by a lightning icon): <ul style="list-style-type: none"> – If ON was selected in the function ACKNOWLEDGE FAULTS (8004), multiplex mode is resumed as soon as the fault has been acknowledged and is no longer active. – If OFF was selected in the function ACKNOWLEDGE FAULTS (8004), multiplex mode is resumed as soon as the fault is no longer active. ■ Notice message (identified by an exclamation mark): <ul style="list-style-type: none"> – Multiplex mode is resumed as soon as the notice message is no longer active. <p>Advanced options with optional software package ADVANCED DIAGNOSTICS: DEVIATION VOLUME FLOW (CH1...CH2) DEVIATION VOLUME FLOW AVERAGE DEVIATION FLOW VELOCITY (CH1...CH2) DEVIATION FLOW VELOCITY AVERAGE DEVIATION SIGNAL STRENGTH (CH1...CH2) DEVIATION SOUND VELOCITY (CH1...CH2) DEVIATION SOUND VELOCITY AVERAGE DEVIATION ACTUAL TRANSIT TIME (CH1...CH2) DEVIATION ACCEPTANCE RATE (CH1...CH2)</p>


Functional description	
USER INTERFACE → INFORMATION LINE → MULTIPLEX	
100% VALUE (2621)	<p> Note! This function is not available unless one of the following was selected in the function ASSIGN (2400):</p> <ul style="list-style-type: none"> ■ VOLUME FLOW % ■ VOLUME FLOW BARGRAPH % ■ CALCULATED VOLUME FLOW % ■ CALCULATED VOLUME FLOW BARGRAPH % <p>Use this function to define the flow value to be shown on the display as the 100% value.</p> <p>User input: 5-digit floating-point number</p> <p>Factory setting: Depends on nominal diameter and country, [value] / [dm³...m³ or US-gal...US-Mgal] Corresponds to the factory setting for the full scale value (see Page 140 ff.).</p>
FORMAT (2622)	<p> Note! This function is not available unless a number was selected in the function ASSIGN (2600).</p> <p>Use this function to define the maximum number of places after the decimal point for the second value displayed in the information line.</p> <p>Options: XXXXX. - XXXX.X - XXX.XX - XX.XXX -X.XXXX</p> <p>Factory setting: X.XXXX</p> <p> Note!</p> <ul style="list-style-type: none"> ■ Note that this setting only affects the reading as it appears on the display, it has no influence on the accuracy of the system's calculations. ■ The places after the decimal point as computed by the measuring device cannot always be displayed, depending on this setting and the engineering unit. In such instances an arrow appears on the display between the measuring value and the engineering unit (e.g. 1.2 → m³/h), indicating that the measuring system is computing with more decimal places than can be shown on the display.
DISPLAY MODE (2623)	<p> Note! This function is only available if VOLUME FLOW BARGRAPH IN % or CALCULATED VOLUME FLOW BARGRAPH IN % was selected in the function ASSIGN (2620).</p> <p>Use this function to define the format of the bar graph.</p> <p>Options: STANDARD (Simple bar graph with 25 / 50 / 75% gradations and integrated sign).</p> <div style="border: 1px solid black; padding: 5px; text-align: center; margin: 10px 0;">  </div> <p style="text-align: right; font-size: small;">A0001258</p> <p>SYMMETRY (Symmetrical bar graph for positive and negative directions of flow, with -50 / 0 / +50% gradations and integrated sign).</p> <div style="border: 1px solid black; padding: 5px; text-align: center; margin: 10px 0;">  </div> <p style="text-align: right; font-size: small;">A0001259</p> <p>Factory setting: STANDARD</p>

6 Block TOTALIZER

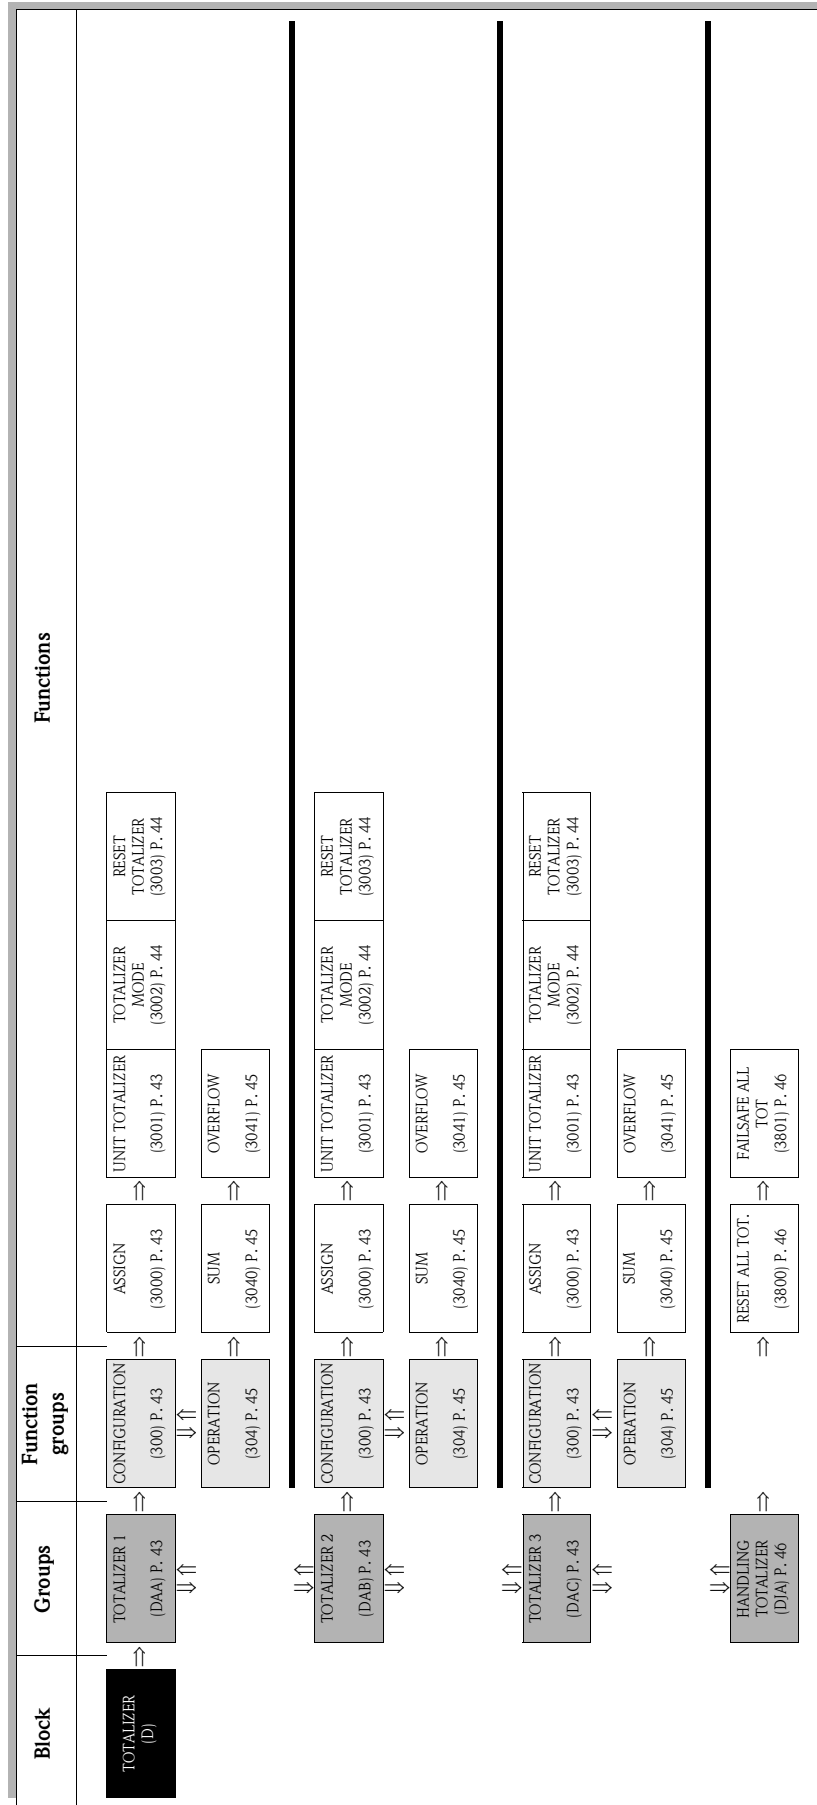


6.1 Group TOTALIZER (1...3)


6.1.1 Function group CONFIGURATION

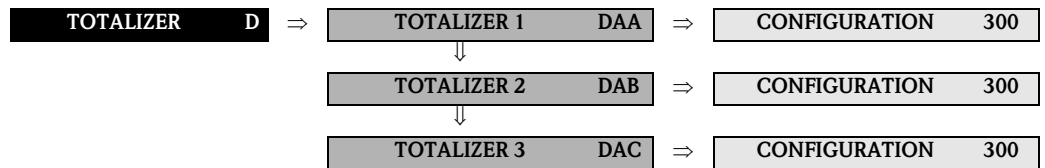

Functional description	
TOTALIZER → TOTALIZER (1...3) → CONFIGURATION	
The function descriptions below apply to totalizers 1...3; the totalizers are independently configurable.	
ASSIGN (3000)	<p>Use this function to assign a measured variable to the totalizer in question.</p> <p>Options: OFF VOLUME FLOW (CH1...CH2) VOLUME FLOW AVERAGE VOLUME FLOW SUM (CH1+CH2) VOLUME FLOW DIFFERENCE (CH1-CH2)</p> <p>Factory setting: CH1 VOLUME FLOW</p> <p> Note!</p> <ul style="list-style-type: none"> ■ The totalizer is reset to "0" as soon as the selection is changed. ■ If you select OFF in the function group CONFIGURATION of the totalizer in question, only the ASSIGN (3000) function remains visible.
UNIT TOTALIZER (3001)	<p>Use this function to define the unit for the totalizer's measured variable, as selected beforehand.</p> <p>Options: Metric cm³; dm³; m³; ml; l; hl; Ml</p> <p>US cc; af; ft³; oz f; gal; Mgal; bbl (normal fluids); bbl (beer); bbl (petrochemicals); bbl (filling tanks); US Kgal</p> <p>Imperial gal; Mgal; bbl (beer); bbl (petrochemicals)</p> <p>Arbitrary unit _ _ _ _ (see function group ARBITRARY UNIT on Page 16)</p> <p>Factory setting: m³</p>


Functional description	
TOTALIZER → TOTALIZER (1...3) → CONFIGURATION	
TOTALIZER MODE (3002)	<p>Use this function to define how the flow components are to be totaled by the totalizer in question.</p> <p>Options: BALANCE Positive and negative flow components. The positive and negative flow components are balanced. In other words, net flow in the flow direction is registered.</p> <p>FORWARD Positive flow components only</p> <p>REVERSE Negative flow components only</p> <p>Factory setting: Totalizer 1 = BALANCE Totalizer 2 = FORWARD Totalizer 3 = REVERSE</p>
RESET TOTALIZER (3003)	<p>Use this function to reset the sum and the overflow of the totalizer in question (1...3) to zero.</p> <p>Options: NO YES</p> <p>Factory setting: NO</p> <p> Note! If the device is equipped with a status input, with the appropriate configuration a reset for each individual totalizer can also be triggered by a pulse (see function ASSIGN STATUS INPUT (5000) on page 95).</p>


6.1.2 Function group OPERATION

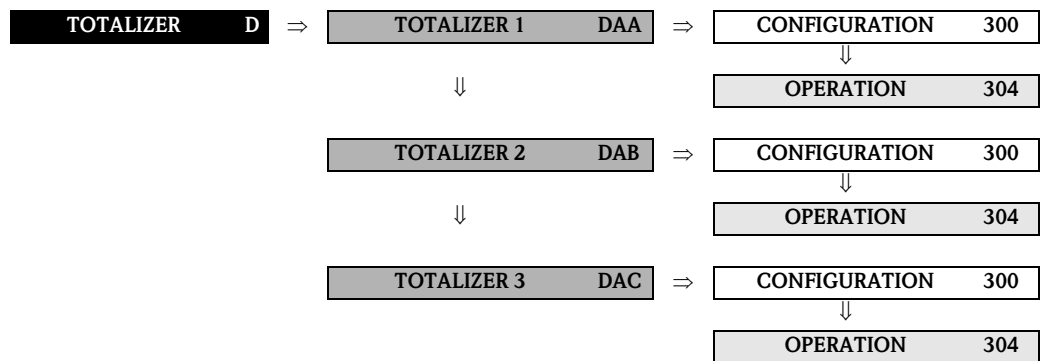


Functional description	
TOTALIZER → TOTALIZER (1...3) → OPERATION	
The function descriptions below apply to totalizers 1...3; the totalizers are independently configurable.	
SUM (3040)	<p>Use this function to view the total for the particular totalizer's measured variable aggregated since measuring commenced. The value can be positive or negative, depending on the setting selected in the "TOTALIZER MODE" function (3002), and the direction of flow.</p> <p>User interface: max. 7-digit floating-point number, including sign and unit (e.g. 15467.04 m³);</p> <p> Note!</p> <ul style="list-style-type: none"> ■ The effect of the setting in the "TOTALIZER MODE" function (see Page 44) is as follows: <ul style="list-style-type: none"> – If the setting is "BALANCE", the totalizer balances flow in the positive and negative directions. – If the setting is "POSITIVE", the totalizer registers only flow in the positive direction. – If the setting is "NEGATIVE", the totalizer registers only flow in the negative direction. ■ The totalizer's response to faults is defined in the "FAILSAFE ALL TOTALIZERS" function (3801) (see Page 46).
OVERFLOW (3041)	<p>Use this function to view the totaled overflow for the particular totalizer aggregated since measuring commenced.</p> <p>Total flow quantity is represented by a floating-point number consisting of max. 7 digits. You can use this function to view higher numerical values (>9,999,999) as overflows. The effective quantity is thus the total of OVERFLOW plus the value returned by the SUM function.</p> <p>Example: Reading for 2 overflows: 2 10⁷ dm³ (= 20,000,000 dm³) The value displayed in the function SUM = 196 dm³ Effective total quantity = 20,196,845.7 dm³</p> <p>User interface: Integer with exponent, including sign and unit, e.g. 2 10⁷ dm³</p>

6.2 Group HANDLING TOTALIZER

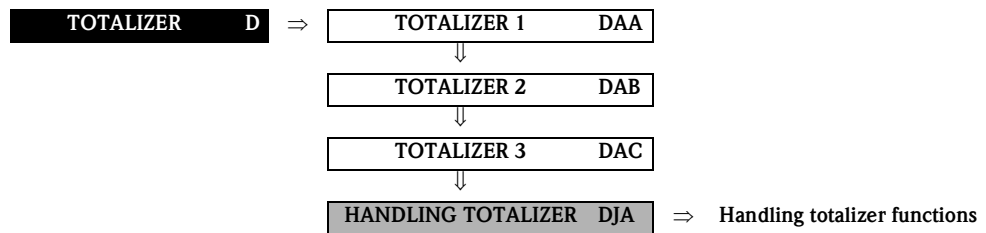


Functional description	
TOTALIZER → HANDLING TOTALIZER → Handling totalizer functions	
RESET ALL TOTALIZERS (3800)	<p>Use this function to reset the totals (including all overflows) of the totalizers (1...3) to "zero" (= RESET).</p> <p>Options: NO YES</p> <p>Factory setting: NO</p> <p> Note! If the device is equipped with a status input and if it is appropriately configured, a reset for the totalizer (1...3) can also be triggered by a pulse (see function ASSIGN STATUS INPUT (5000) on page 95).</p>
FAILSAFE ALL TOTALIZERS (3801)	<p>Use this function to define the common response of all totalizers (1...3) in case of error.</p> <p>Options: STOP The totalizer is paused until the fault is rectified.</p> <p>ACTUAL VALUE The totalizer continues to count based on the current flow measuring value. The fault is ignored.</p> <p>HOLD VALUE The totalizer continues to count the flow is based on the last valid flow value (before the fault occurred).</p> <p>Factory setting: STOP</p>

7 Block OUTPUTS

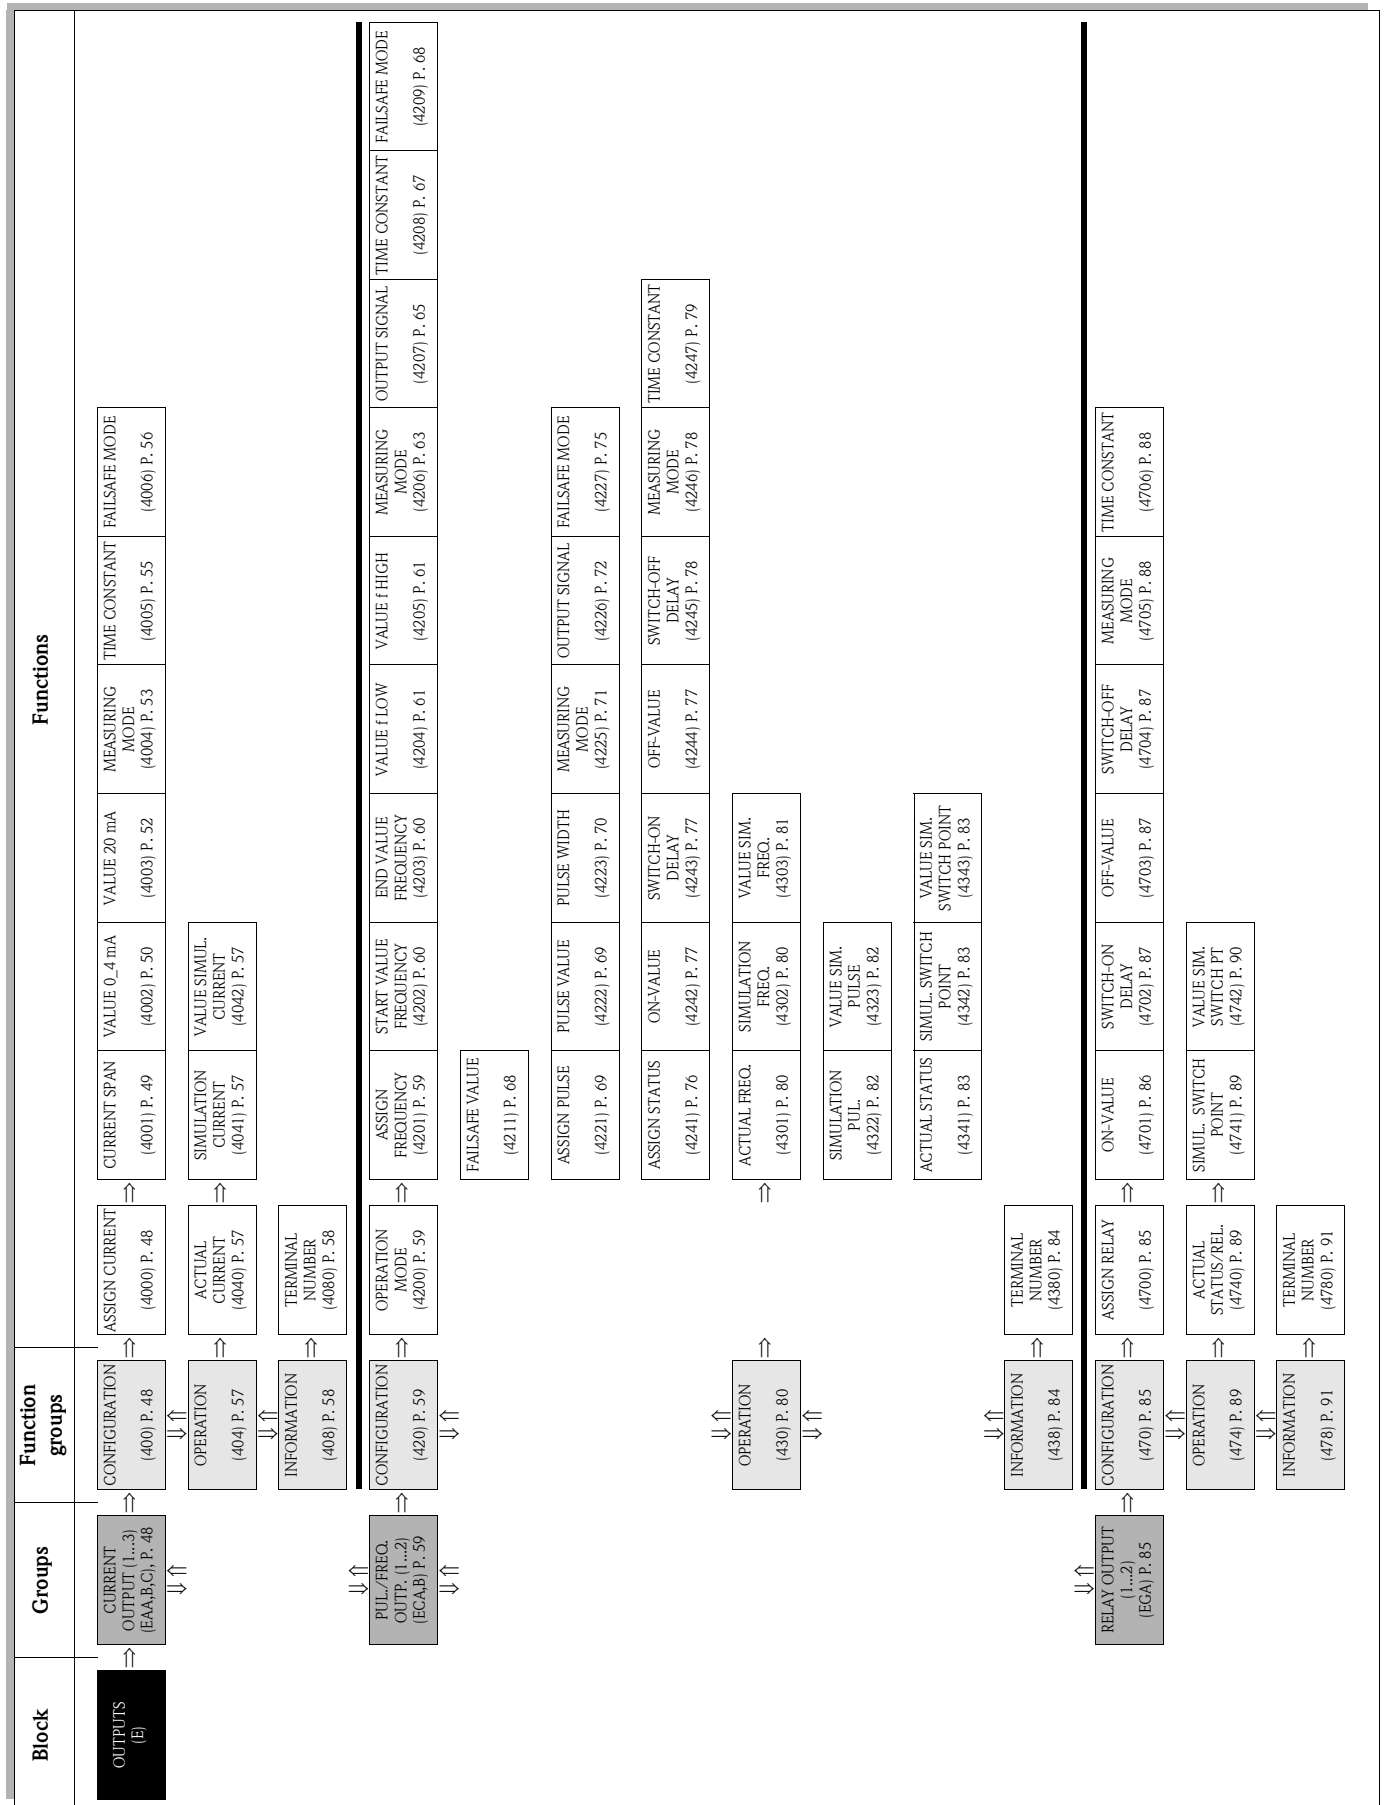

7.1 Group CURRENT OUTPUT (1...3)

7.1.1 Function group CONFIGURATION

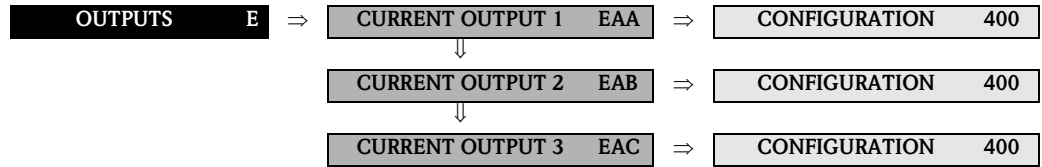


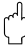
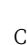
Functional description	
OUTPUTS → CURRENT OUTPUT (1...3) → CONFIGURATION	
ASSIGN CURRENT OUTPUT (4000)	<p>Use this function to assign a measured variable to the current output.</p> <p>Options: OFF VOLUME FLOW (CH1...CH2) VOLUME FLOW AVERAGE VOLUME FLOW SUM (CH1+CH2) VOLUME FLOW DIFFERENCE (CH1-CH2) SOUND VELOCITY (CH1...CH2) SOUND VELOCITY AVERAGE SIGNAL STRENGTH (CH1...CH2) FLOW VELOCITY (CH1...CH2) FLOW VELOCITY AVERAGE</p> <p>Factory setting: VOLUME FLOW CH1</p> <p> Note! If you select OFF, the only function shown in the function group CONFIGURATION (400) is this function, in other words, ASSIGN CURRENT OUTPUT (4000).</p> <p>Advanced options with optional software package ADVANCED DIAGNOSTICS: DEVIATION VOLUME FLOW (CH1...CH2) DEVIATION VOLUME FLOW AVERAGE DEVIATION FLOW VELOCITY (CH1...CH2) DEVIATION FLOW VELOCITY AVERAGE DEVIATION SIGNAL STRENGTH (CH1...CH2) DEVIATION SOUND VELOCITY (CH1...CH2) DEVIATION SOUND VELOCITY AVERAGE DEVIATION ACTUAL TRANSIT TIME (CH1...CH2) DEVIATION ACCEPTANCE RATE (CH1...CH2)</p>

Functional description OUTPUTS → CURRENT OUTPUT (1...3) → CONFIGURATION																													
CURRENT SPAN (4001)	<p>Use this function to define the current span. The selection specifies the operational range and the lower and upper signal on alarm. For the current output 1 the option HART can be defined additionally.</p> <p>Options: 0–20 mA 4–20 mA 4–20 mA HART (only current output 1) 4–20 mA NAMUR 4–20 mA HART NAMUR (only current output 1) 4–20 mA US 4–20 mA HART US (only current output 1) 0–20 mA (25 mA) 4–20 mA (25 mA) 4–20 mA (25 mA) HART (only current output 1)</p> <p>Factory setting: 4–20 mA HART NAMUR (für current output 1) 4–20 mA NAMUR (für current output 2)</p> <p> Note!</p> <ul style="list-style-type: none"> ■ The option HART is only supported by the current output designated as current output 1 in the device software, (terminals 26 and 27, see function TERMINAL NUMBER (4080) on Page 58). ■ When switching the hardware from an active (factory setting) to a passive output signal select a current span of 4–20 mA, (Operating Instructions Proline Prosonic Flow 93, BA070D/06/en/.) <p>Current span, operational range and signal on alarm level</p> <div style="text-align: center; margin: 10px 0;"> <p style="margin: 0;">The diagram shows a horizontal axis labeled I[mA]. Three points are marked: 2, 1, and 3. Point 1 is between 2 and 3. A double-headed arrow labeled '1' spans from 2 to 3. A single-headed arrow labeled '2' points to 2, and another labeled '3' points to 3.</p> </div> <table border="1" style="width: 100%; border-collapse: collapse; margin: 10px 0;"> <thead> <tr> <th style="text-align: center;">a</th> <th style="text-align: center;">1</th> <th style="text-align: center;">2</th> <th style="text-align: center;">3</th> </tr> </thead> <tbody> <tr> <td>0-20 mA</td> <td>0 - 20.5 mA</td> <td>0</td> <td>22</td> </tr> <tr> <td>4-20 mA</td> <td>4 - 20.5 mA</td> <td>2</td> <td>22</td> </tr> <tr> <td>4-20 mA NAMUR</td> <td>3.8 - 20.5 mA</td> <td>3.5</td> <td>22.6</td> </tr> <tr> <td>4-20 mA US</td> <td>3.9 - 20.8 mA</td> <td>3.75</td> <td>22.6</td> </tr> <tr> <td>0-20 mA (25 mA)</td> <td>0 - 24 mA</td> <td>0</td> <td>25</td> </tr> <tr> <td>4-20 mA (25 mA)</td> <td>4 - 24 mA</td> <td>2</td> <td>25</td> </tr> </tbody> </table>	a	1	2	3	0-20 mA	0 - 20.5 mA	0	22	4-20 mA	4 - 20.5 mA	2	22	4-20 mA NAMUR	3.8 - 20.5 mA	3.5	22.6	4-20 mA US	3.9 - 20.8 mA	3.75	22.6	0-20 mA (25 mA)	0 - 24 mA	0	25	4-20 mA (25 mA)	4 - 24 mA	2	25
a	1	2	3																										
0-20 mA	0 - 20.5 mA	0	22																										
4-20 mA	4 - 20.5 mA	2	22																										
4-20 mA NAMUR	3.8 - 20.5 mA	3.5	22.6																										
4-20 mA US	3.9 - 20.8 mA	3.75	22.6																										
0-20 mA (25 mA)	0 - 24 mA	0	25																										
4-20 mA (25 mA)	4 - 24 mA	2	25																										
	<p style="text-align: right; font-size: small;">A0001222</p> <p><i>A = Current span</i> <i>1 = Operational range (measuring information)</i> <i>2 = Lower signal on alarm level</i> <i>3 = Upper signal on alarm level</i></p> <p> Note!</p> <ul style="list-style-type: none"> ■ If the measured value exceeds the measuring range (as defined in the functions VALUE 0_4 mA (4002) and VALUE 20 mA (4003)) a notice message is generated (#351–354, current span). ■ In case of a fault the behaviour of the current output is according to the selected option in the function FAILSAFE MODE (4006.) Change the error category in the function ASSIGN SYSTEM ERROR (8000) to generate a fault message instead of a notice message. 																												

Functional description	
OUTPUTS → CURRENT OUTPUT (1...3) → CONFIGURATION	
VALUE 0_4 mA (4002)	<p>Use this function to assign the 0/4 mA current a value. The value can be greater or less than the value assigned to 20 mA (function VALUE 20 mA (4003)). Positive and negative values are permissible, depending on the measured variable in question (e.g. CH1 volume flow).</p> <p>Example: 4 mA assigned value = - 250 l/h 20 mA assigned value = +750 l/h Calculated current value = 8 mA (at zero flow)</p> <p>Note that values with different signs cannot be entered for 0/4 mA and 20 mA (function 4003) if SYMMETRY is the setting selected for the MEASURING MODE function (4004). In this case the message "INPUT RANGE EXCEEDED" appears on the display.</p> <p>Example for STANDARD measuring mode:</p> <div style="text-align: center;"> </div> <p>① = Initial value (0...20 mA) ② = Lower signal on alarm level: depends on the setting in the function CURRENT SPAN ③ = Initial value (4...20 mA): depends on the setting in the function CURRENT SPAN ④ = Full scale value (0/4...20 mA): depends on the setting in the function CURRENT SPAN ⑤ = Maximum current value: depends on the setting in the function CURRENT SPAN ⑥ = Failsafe mode (upper signal on alarm level): depends on the setting in the functions CURRENT SPAN (see Page 49) and FAILSAFE MODE, (see Page 56)</p> <p><i>A = Measuring range (the minimum measuring range has to exceed the value that correlates with a flow velocity of 0.3 m/s)</i></p> <p>User input: 5-digit floating-point number, with sign</p> <p>Factory setting: 0 [unit]</p> <p> Note!</p> <ul style="list-style-type: none"> ■ The appropriate unit is taken from the function UNIT VOLUME FLOW (0402) (see Page 13). ■ For details on current span, operational range and signal on alarm level see Page 49. <p> Caution!</p> <p>The current output responds differently, depending on the parameters set in the various functions. Some examples of parameter settings and their effect on the current output are given in the following section.</p> <p>(Continued on next page)</p>





A0001223

Functional description	
OUTPUTS → CURRENT OUTPUT (1...3) → CONFIGURATION	
<p>VALUE 0_4 mA (Continued)</p>	<p>Parameter setting example A:</p> <ol style="list-style-type: none"> VALUE 0_4 mA (4002) = not equal to zero flow (e.g. $-5 \text{ m}^3/\text{h}$) VALUE 20 mA (4003) = not equal to zero flow (e.g. $10 \text{ m}^3/\text{h}$) or VALUE 0_4 mA (4002) = not equal to zero flow (e.g. $100 \text{ m}^3/\text{h}$) VALUE 20 mA (4003) = not equal to zero flow (e.g. $-40 \text{ m}^3/\text{h}$) <p>and MEASURING MODE (4004) = STANDARD</p> <p>When you enter the values for 0/4 mA and 20 mA, the working range of the measuring device is defined. If the effective flow drops below or exceeds this working range (see ①), a fault/notice message is generated (#351-354, current range) and the current output responds in accordance with the parameter settings in the function FAILSAFE MODE (4006).</p> <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>1)</p> </div> <div style="text-align: center;"> <p>2)</p> </div> </div> <p style="text-align: right; font-size: small;">A0001262</p> <p>Parameter setting example B:</p> <ol style="list-style-type: none"> VALUE 0_4 mA (4002) = equal to zero flow (e.g. $0 \text{ m}^3/\text{h}$) VALUE 20 mA (4003) = not equal to zero flow (e.g. $10 \text{ m}^3/\text{h}$) or VALUE 0_4 mA (4002) = not equal to zero flow (e.g. $100 \text{ m}^3/\text{h}$) VALUE 20 mA (4003) = equal to zero flow (e.g. $0 \text{ m}^3/\text{h}$) <p>and MEASURING MODE (4004) = STANDARD</p> <p>When you enter the values for 0/4 mA and 20 mA, the working range of the measuring device is defined. In doing so, one of the two values is parameterised as zero flow (e.g. $0 \text{ m}^3/\text{h}$).</p> <p>If the effective flow drops below or exceeds the value parameterised as the zero flow, no fault/notice message is generated and the current output retains its value.</p> <p>If the effective flow drops below or exceeds the other value, a fault/notice message is generated (#351-354, current range) and the current output responds in accordance with the parameter settings in the function FAILSAFE MODE (4006).</p> <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>1)</p> </div> <div style="text-align: center;"> <p>2)</p> </div> </div> <p style="text-align: right; font-size: small;">A0001264</p> <p>Deliberately only one flow direction is output with this setting and flow values in the other flow direction are suppressed.</p> <p>Parameter setting example C: MEASURING MODE (4004) = SYMMETRY</p> <p>The current output signal is independent of the direction of flow (absolute amount of the measured variable). The 0_4 mA value ① and the 20 mA value ② must have the same sign (+ or -). The "20 mA VALUE" ③ (e.g. backflow) corresponds to the mirrored 20 mA VALUE ② (e.g. flow).</p> <div style="text-align: center;"> </div> <p style="text-align: right; font-size: small;">A0001249</p> <p>ASSIGN RELAY (4700) = FLOW DIRECTION</p> <p>With this setting e.g. the flow direction output via a switching contact can be made.</p> <p>Parameter setting example D: MEASURING MODE (4004) = PULSATING FLOW</p>

Functional description	
OUTPUTS → CURRENT OUTPUT (1...3) → CONFIGURATION	
VALUE 20 mA (4003)	<p>Use this function to assign the 20 mA current a value. The value can be greater or less than the value assigned to 0/4 mA, (function VALUE 0_4 mA (4002)). Positive and negative values are permissible, depending on the measured variable in question (e.g. volume flow). The assignment applies for both flow directions for measuring mode SYMMETRY (see Page 53) and only for the selected flow direction for measuring mode STANDARD.</p> <p>Example: 4 mA assigned value = - 250 l/h 20 mA assigned value = +750 l/h Calculated current value = 8 mA (at zero flow)</p> <p>Note that values with different signs cannot be entered for 0/4 mA (function 4002) and 20 mA if SYMMETRY is the setting selected in the function MEASURING MODE (4004). In this case the message "INPUT AREA EXCEEDED" appears.</p> <p>User input: 5-digit floating-point number, with sign</p> <p>Factory setting: depends on the setting in the function ASSIGN CURRENT OUTPUT (4000): volume flow: 20 l/s sound velocity: 1800 m/s flow velocity: 10 m/s corresponds to the factory setting for the final value.</p> <p> Note!</p> <ul style="list-style-type: none"> ■ The appropriate unit is taken from the function UNIT VOLUME FLOW (0402) (see Page 13). ■ For an example for STANDARD measuring mode see Page 50. ■ If a channel is not visible, it does not appear in the options. Channels can be displayed or hidden by means of the function MEASUREMENT (6880). <p> Caution!</p> <p>It is very important to read and comply with the information in the function VALUE 0_4 mA (under "  Caution"; Examples of parameterization) on Page 50.</p>


Functional description OUTPUTS → CURRENT OUTPUT (1...3) → CONFIGURATION	
MEASURING MODE (4004)	<p>Use this function to define the measuring mode for the current output.</p> <p>Options: STANDARD SYMMETRY PULSATING FLOW</p> <p>The current output signal is proportional to the measured variable. The flow components outside the scaled measuring range (defined by the 0_4 mA VALUE ① and the 20 mA VALUE ②) are taken into account as follows for signal output:</p> <ul style="list-style-type: none"> ■ If one of the values is defined as equal to the zero flow (e.g. VALUE 0_4 mA = 0 m³/h), no message is given if this value is exceeded or not achieved and the current output retains its value (4 mA in the example). If the other value is exceeded or not achieved, the message "CURRENT OUTPUT AT FULL SCALE VALUE" appears and the current output responds in accordance with the parameter setting in the function FAILSAFE MODE (4006). ■ If both values are defined as not equal to the zero flow (e.g. VALUE 0_4 mA = -5 m³/h, VALUE 20 mA = 10 m³/h) the message "CURRENT OUTPUT AT FULL SCALE VALUE" appears if the measuring range is exceeded or not achieved and the current output responds in accordance with the parameter setting in the function FAILSAFE MODE (4006). <div style="text-align: center;"> </div> <p style="text-align: right;">A0001248</p> <p>SYMMETRY</p> <p>The current output signal is independent of the direction of flow (absolute amount of the measured variable). The 0_4 mA VALUE ① and the 20 mA VALUE ② must have the same sign (+ or -). The "20 mA VALUE" ③ (e.g. backflow) corresponds to the mirrored 20 mA VALUE ② (e.g. flow).</p> <div style="text-align: center;"> </div> <p style="text-align: right;">A0001249</p> <p> Note!</p> <ul style="list-style-type: none"> ■ The direction of flow can be output via the configurable relay or status outputs. ■ SYMMETRY cannot be selected unless the values in the VALUE 0_4 mA (4002) and VALUE 20 mA (4003) functions have the same sign or one of the values is zero. If the signs of the two values differ, SYMMETRY cannot be selected and an "ASSIGNMENT NOT POSSIBLE" message is issued. <p>(Continued on next page)</p>

Functional description OUTPUTS → CURRENT OUTPUT (1...3) → CONFIGURATION	
MEASURING MODE (Continued)	<p>PULSATING FLOW</p> <p>If flow is characterized by severe fluctuations as is the case, for example, with reciprocating pumps, flow components outside the measuring range are buffered, balanced and output after a maximum delay of 60 seconds. If the data cannot be buffered within approx. 60 seconds, a fault or notice message appears.</p> <p>Under certain plant conditions, flow values can aggregate in the buffer, for example in the case of prolonged and unwanted fluid backflow. However, this buffer is reset in all relevant programming adjustments which affect the current output.</p> <p>Factory setting: STANDARD</p>
Detailed explanations and information	<p>How the current output responds under the following postulated conditions:</p> <p>1. Defined measuring range (①–②): ① and ② have the same sign</p> <div style="text-align: center;"> </div> <p style="text-align: right;">A0001248</p> <p>and the following flow behaviour:</p> <div style="text-align: center;"> </div> <p style="text-align: right;">A0001265</p> <p>■ STANDARD</p> <p>The current output signal is proportional to the measured variable. The flow components outside the scaled measuring range are not taken into account for signal output.</p> <div style="text-align: center;"> </div> <p style="text-align: right;">A0001267</p> <p>■ SYMMETRY</p> <p>The current output signal is independent of the direction of flow.</p> <div style="text-align: center;"> </div> <p style="text-align: right;">A0001268</p> <p>■ PULSATING FLOW</p> <p>Flow components outside the measuring range are buffered, balanced and output after a maximum delay of 60 seconds.</p> <div style="text-align: center;"> </div> <p style="text-align: right;">A0001269</p> <p>(Continued on next page)</p>

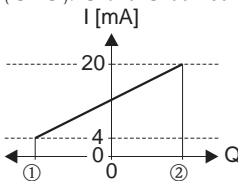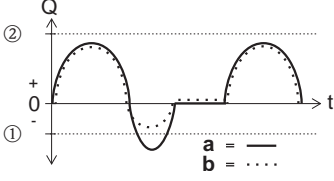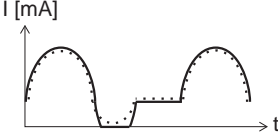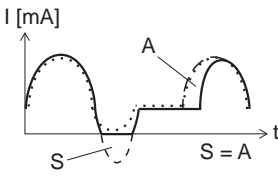Functional description OUTPUTS → CURRENT OUTPUT (1...3) → CONFIGURATION	
Detailed explanations and information (Continued)	<p>2. Defined measuring range (①–②): ① and ② do not have the same sign.</p>  <p style="text-align: right;">A0001272</p> <p>3. Flow a (—) outside, b (-) within the measuring range.</p>  <p style="text-align: right;">A0001273</p> <ul style="list-style-type: none"> ■ STANDARD <ul style="list-style-type: none"> a (—): The flow components outside the scaled measuring range cannot be taken into account for signal output. A fault message is generated (# 351...354, current range) and the current output responds in accordance with the parameter settings in the function FAILSAFE MODE (4006). b (-): The current output signal is proportional to the measured variable assigned.  <p style="text-align: right;">A0001274</p> <ul style="list-style-type: none"> ■ SYMMETRY <p>This option is not available under these circumstances, because the 0_4 mA value and the 20 mA value have different signs.</p> ■ PULSATING FLOW <p>Flow components outside the measuring range are buffered, balanced and output after a maximum delay of 60 seconds.</p>  <p style="text-align: right;">A0001275</p>
TIME CONSTANT (4005)	<p>Use this function to enter a time constant defining how the current output signal reacts to severely fluctuating measured variables, either very quickly (enter a low time constant) or with damping (enter a high time constant).</p> <p>User input: fixed-point number 0.01...100.00 s</p> <p>Factory setting: 1.00 s</p>


Functional description	
OUTPUTS → CURRENT OUTPUT (1...3) → CONFIGURATION	
FAILSAFE MODE (4006)	<p>For safety reasons it is advisable to ensure that the current output assumes a predefined state in the event of a fault. The setting you select here affects only the current output. It has no effect on other outputs and the display (e.g. totalizers).</p> <p>Options:</p> <p>MIN. CURRENT The current output adopts the value of the lower signal on alarm level (as defined in the function CURRENT SPAN (4001))</p> <p>MAX. CURRENT The current output adopts the value of the upper signal on alarm level (as defined in the function CURRENT SPAN (4001))</p> <p>HOLD VALUE (not recommended) Measuring value output is based on the last measuring value saved before the error occurred .</p> <p>ACTUAL VALUE Measured value output is based on the current flow measurement. The fault is ignored .</p> <p>Factory setting: MIN. CURRENT</p>

7.1.2 Function group OPERATION

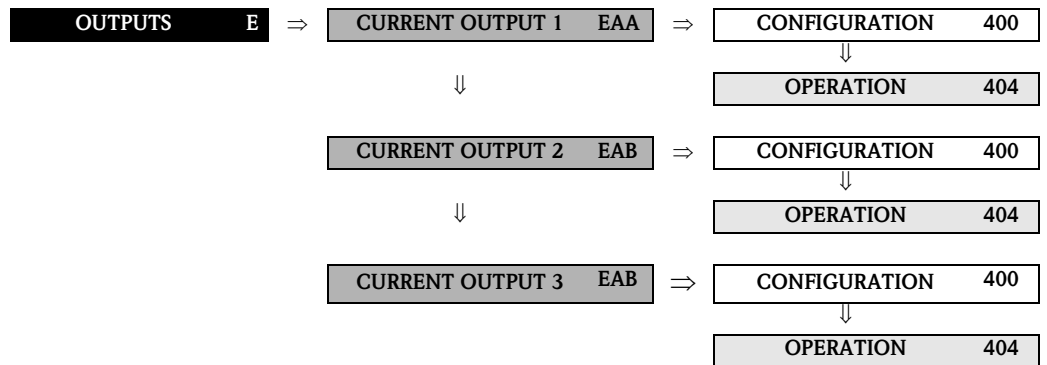

Functional description	
OUTPUTS → CURRENT OUTPUT (1...3) → OPERATION	
ACTUAL CURRENT (4040)	<p>Use this function to view the computed actual value of the output current.</p> <p>User interface: 0.00...25.00 mA</p>
SIMULATION CURRENT (4041)	<p>Use this function to activate simulation of the current output.</p> <p>Options: OFF ON</p> <p>Factory setting: OFF</p> <p> Note! <ul style="list-style-type: none"> ■ The "SIMULATION CURRENT OUTPUT" message indicates that simulation is active. ■ The measuring device continues to measure while simulation is in progress, i.e. the current measuring values are output correctly via the other outputs. </p> <p> Caution! The setting is not saved if the power supply fails.</p>
VALUE SIMULATION CURRENT (4042)	<p> Note! The function is not visible unless the function SIMULATION CURRENT (4041) is active (= ON).</p> <p>Use this function to define a freely selectable value (e.g. 12 mA) to be output at the current output. This value is used to test downstream devices and the measuring device itself.</p> <p>User input: Floating-point number: 0.00...25.00 mA</p> <p>Factory setting: 0.00 mA</p> <p> Caution! The setting is not saved if the power supply fails.</p>


7.1.3 Function group INFORMATION

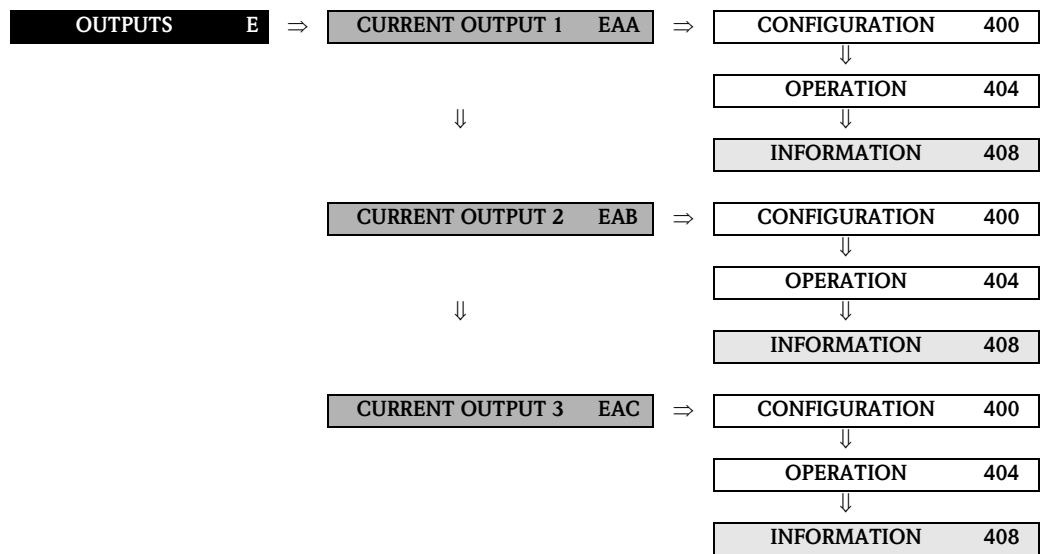




Functional description	
OUTPUTS → CURRENT OUTPUT (1...3) → INFORMATION	
TERMINAL NUMBER (4080)	Use this function to display the numbers of the terminals (in the connection compartment) which are used by the current output.

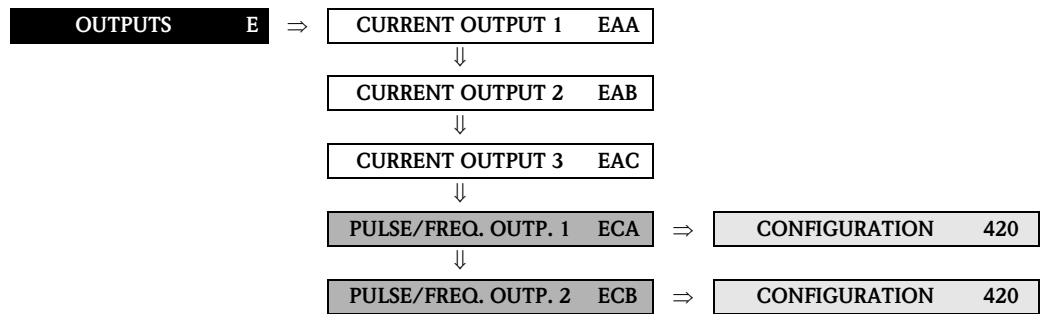


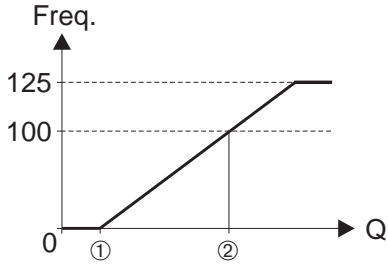


7.2 Group PULSE/FREQUENCY OUTPUT (1...2)

7.2.1 Function group CONFIGURATION




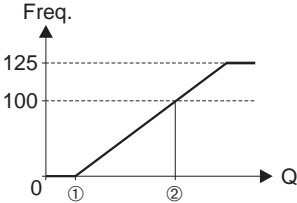
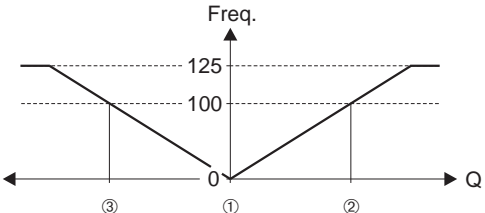

Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (GENERAL/FREQUENCY)	
OPERATION MODE (4200)	<p>Use this function to configure the output as a pulse output, frequency output or status output. The functions available in this function group vary, depending on which option you select here.</p> <p>Options: PULSE FREQUENCY STATUS</p> <p>Factory setting: PULSE</p>
ASSIGN FREQUENCY (4201)	<p> Note! This function is not available unless the FREQUENCY setting was selected in the function OPERATION MODE (4200).</p> <p>Use this function to assign a measured variable to the frequency output.</p> <p>Options: VOLUME FLOW (CH1...CH2) VOLUME FLOW AVERAGE VOLUME FLOW SUM (CH1+CH2) VOLUME FLOW DIFFERENCE (CH1-CH2) SOUND VELOCITY (CH1...CH2) SOUND VELOCITY AVERAGE SIGNAL STRENGTH (CH1...CH2) FLOW VELOCITY (CH1...CH2) FLOW VELOCITY AVERAGE</p> <p>Factory setting: CH1 VOLUME FLOW</p> <p> Note! If you select OFF, the only function shown in the CONFIGURATION function group is this function, in other words ASSIGN FREQUENCY (4201).</p> <p>Advanced options with optional software package ADVANCED DIAGNOSTICS: DEVIATION VOLUME FLOW (CH1...CH2) DEVIATION VOLUME FLOW AVERAGE DEVIATION FLOW VELOCITY (CH1...CH2) DEVIATION FLOW VELOCITY AVERAGE DEVIATION SIGNAL STRENGTH (CH1...CH2) DEVIATION SOUND VELOCITY (CH1...CH2) DEVIATION SOUND VELOCITY AVERAGE DEVIATION ACTUAL TRANSIT TIME (CH1...CH2) DEVIATION ACCEPTANCE RATE (CH1...CH2)</p>





Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (GENERAL/FREQUENCY)	
START VALUE FREQUENCY (4202)	<p> Note! This function is not available unless the FREQUENCY setting was selected in the OPERATION MODE function (4200).</p> <p>Use this function to define an initial frequency for the frequency output. You define the associated measuring value of the measuring range in the function VALUE f LOW (4204) described on Page 61.</p> <p>User input: 5-digit fixed-point number 0...10000 Hz</p> <p>Factory setting: 0 Hz</p> <p>Example:</p> <ul style="list-style-type: none"> ■ VALUE f LOW. = 0 l/h, initial frequency = 0 Hz: i.e. for a flow of 0 l/h, the frequency output is 0 Hz. ■ VALUE f LOW = 1 l/h, initial frequency = 10 Hz: i.e. for a flow of 1 l/h, the frequency output is 10 Hz.
END VALUE FREQUENCY (4203)	<p> Note! This function is not available unless the FREQUENCY setting was selected in the OPERATION MODE function (4200).</p> <p>Use this function to define an end frequency for the frequency output. You define the associated measuring value of the measuring range in the function VALUE f HIGH (4205) described on Page 61.</p> <p>User input: 5-digit fixed-point number 2...10000 Hz</p> <p>Factory setting: 10000 Hz</p> <p>Example:</p> <ul style="list-style-type: none"> ■ VALUE f HIGH = 1000 l/h, full scale frequency = 1000 Hz: i.e. at a flow of 1000 l/h, a frequency of 1000 Hz is output. ■ VALUE f HIGH = 3600 l/h, full scale frequency = 1000 Hz: i.e. at a flow of 3600 l/h, a frequency of 1000 Hz is output. <p> Note! In the FREQUENCY operating mode the output signal is symmetrical (on/off ratio = 1:1). At low frequencies the pulse duration is limited to a maximum of 2 seconds, i.e. the on/off ratio is no longer symmetrical.</p>

Functional description OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (GENERAL/FREQUENCY)	
<p>VALUE f LOW (4204)</p>	<p> Note! This function is not available unless the FREQUENCY setting was selected in the OPERATION MODE function (4200).</p> <p>Use this function to assign a variable to the start value frequency (4202). The value can be greater or less than the value assigned to the VALUE f HIGH. Positive and negative values are permissible, depending on the measured variable in question (e.g. volume flow). You define a measuring range by defining the VALUE f LOW and VALUE f HIGH values.</p> <p>User input: 5-digit floating-point number</p> <p>Factory setting: 0 [unit]</p> <p> Note!</p> <ul style="list-style-type: none"> ■ Graphic illustration of VALUE f LOW see function VALUE f HIGH (4205) on page 61. ■ The appropriate unit is taken from the group SYSTEM UNITS (ACA) (see Page 13).
<p>VALUE f HIGH (4205)</p>	<p> Note! This function is not available unless the FREQUENCY setting was selected in the OPERATION MODE function (4200).</p> <p>Use this function to assign a variable to the end value frequency (4203). The value can be greater or less than the value assigned to the VALUE f LOW. Positive and negative values are permissible, depending on the measured variable in question (e.g. volume flow). You define a measuring range by defining the VALUE f LOW and VALUE f HIGH values.</p> <p>The assignment applies for both flow directions for measuring mode SYMMETRY (see Page 53) and only for the selected flow direction for measuring mode STANDARD.</p> <p>User input: 5-digit floating-point number</p> <p>Factory setting: depends on the setting in the function ASSIGN FREQUENCY (4201): volume flow: 20 l/s sound velocity: 1800 m/s flow velocity: 10 m/s corresponds to the factory setting for the final value.</p> <div style="text-align: center;">  </div> <p>① = Value f min ② = Value f max</p> <p> Caution! The frequency output responds differently, depending on the parameters set in the various functions. Some examples of parameter settings and their effect on the frequency output are given in the following section.</p> <p> Note! The appropriate unit is taken from the group SYSTEM UNITS (ACA) (see Page 13). (Continued on next page)</p>

A0001279





Functional description OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (GENERAL/FREQUENCY)	
<p>VALUE f HIGH (Continued)</p>	<p>Parameter setting example A:</p> <ol style="list-style-type: none"> VALUE f LOW (4204) = not equal to zero flow (e.g. $-5 \text{ m}^3/\text{h}$) VALUE f HIGH (4205) = not equal to zero flow (e.g. $10 \text{ m}^3/\text{h}$) or VALUE f LOW (4204) = not equal to zero flow (e.g. $100 \text{ m}^3/\text{h}$) VALUE f HIGH (4205) = not equal to zero flow s (e.g. $-40 \text{ m}^3/\text{h}$) <p>and MEASURING MODE (4206) = STANDARD</p> <p>When you enter the values for VALUE f LOW and VALUE f HIGH the working range of the measuring device is defined. If the effective flow drops below or exceeds this working range (see ①), a fault or notice message is generated (#351-354, frequency area) and the frequency output responds in accordance with the parameter settings in the function FAILSAFE MODE (4209).</p> <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>1)</p> </div> <div style="text-align: center;"> <p>2)</p> </div> </div> <p style="text-align: right; font-size: small;">A0001262</p> <p>Parameter setting example B:</p> <ol style="list-style-type: none"> VALUE f LOW (4204) = equal to zero flow (e.g. $0 \text{ m}^3/\text{h}$) VALUE f HIGH (4205) = not equal to zero flow (e.g. $10 \text{ m}^3/\text{h}$) or VALUE f LOW (4204) = not equal to zero flow (e.g. $100 \text{ m}^3/\text{h}$) VALUE f HIGH (4205) = equal to zero flow s (e.g. $0 \text{ m}^3/\text{h}$) <p>and MEASURING MODE (4206) = STANDARD</p> <p>When you enter the values for VALUE f LOW and VALUE f HIGH the working range of the measuring device is defined. In doing so, one of the two values is parameterised as zero flow (e.g. $0 \text{ m}^3/\text{h}$).</p> <p>If the effective flow drops below or exceeds the value parameterised as the zero flow, no fault/notice message is generated and the frequency output retains its value.</p> <p>If the effective flow drops below or exceeds the other value, a fault/notice message is generated (#351-354, frequency area) and the frequency output responds in accordance with the parameters set in the function FAILSAFE MODE (4209).</p> <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>1)</p> </div> <div style="text-align: center;"> <p>2)</p> </div> </div> <p style="text-align: right; font-size: small;">A0001264</p> <p>Deliberately only one flow direction is output with this setting and flow values in the other flow direction are suppressed.</p> <p>Parameter setting example C: MEASURING MODE (4206) = SYMMETRY</p> <p>The frequency output signal is independent of the direction of flow (absolute amount of the measured variable). The VALUE f LOW ① and VALUE f HIGH ② must have the same sign (+ or -). The "VALUE f HIGH" ③ (e.g. backflow) corresponds to the mirrored VALUE f HIGH ② (e.g. flow).</p> <div style="text-align: center;"> </div> <p style="text-align: right; font-size: small;">A0001249</p> <p>ASSIGN RELAY (4700) = FLOW DIRECTION Flow direction output via a switching contact.</p> <p>Parameter setting example D: MEASURING MODE (4206) = PULSATING FLOW</p>

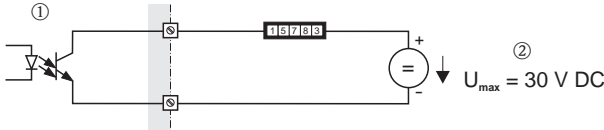

Functional description OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (GENERAL/FREQUENCY)	
MEASURING MODE (4206)	<p> Note! This function is not available unless the FREQUENCY setting was selected in the OPERATION MODE function (4200).</p> <p>Use this function to define the measuring mode for the frequency output.</p> <p>Options: STANDARD SYMMETRY PULSATING FLOW</p> <p>Factory setting STANDARD</p> <p>Description of the individual options:</p> <ul style="list-style-type: none"> ■ STANDARD The frequency output signal is proportional to the measured variable. The flow components outside the scaled measuring range (defined by the VALUE f LOW, ① and VALUE f HIGH, ②) are not taken into account for signal output. <ul style="list-style-type: none"> – If one of the values is defined as equal to the zero flow (e.g. = VALUE f LOW = 0 m³/h), no message is given if this value is exceeded or not achieved and the frequency output retains its value (0 Hz in the example). If the other value is exceeded or not achieved, the message "FREQUENCY OUTPUT AT FULL SCALE VALUE" appears and the frequency output responds in accordance with the parameter setting in the function FAILSAFE MODE (4209). – If both values are defined as not equal to the zero flow (e.g. VALUE f LOW = -5 m³/h; VALUE f HIGH = 10 m³/h), the message "FREQUENCY OUTPUT AT FULL SCALE VALUE" appears if the measuring range is exceeded or not achieved and the frequency output responds in accordance with the parameter setting in the function FAILSAFE MODE (4209). <div style="text-align: center;">  </div> <p style="text-align: right; font-size: small;">A0001279</p> <p>SYMMETRY The frequency output signal is independent of the direction of flow (absolute amount of the measured variable). The VALUE f LOW ① and VALUE f HIGH ② must have the same sign (+ or -). The VALUE f HIGH ③ (e.g. backflow) corresponds to the mirrored VALUE f HIGH ② (e.g. forward flow).</p> <div style="text-align: center;">  </div> <p style="text-align: right; font-size: small;">A0001280</p> <p> Note!</p> <ul style="list-style-type: none"> ■ The direction of flow can be output via the configurable relay or status outputs. ■ SYMMETRY cannot be selected unless the values in the VALUE f LOW (4204) and VALUE f HIGH (4205) functions have the same sign or one of the values is zero. If the values have different signs, SYMMETRY cannot be selected and an "ASSIGNMENT NOT POSSIBLE" message is displayed. <p>(Continued on next page)</p>



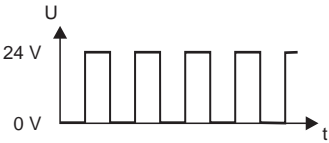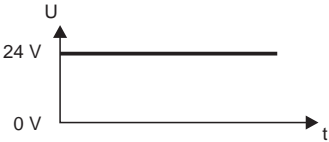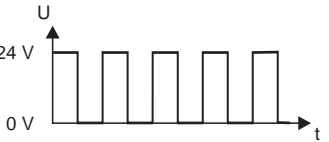

Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (GENERAL/FREQUENCY)	
<p>MEASURING MODE (Continued)</p>	<ul style="list-style-type: none"> ■ PULSATING FLOW If flow is characterized by severe fluctuations as is the case, for example, with reciprocating pumps, flow components outside the measuring range are buffered, balanced and output after a maximum delay of 60 seconds. If the buffered data cannot be processed within approx. 60 seconds, a fault/notice message appears. Hinweismeldung. Under certain plant conditions, flow values can aggregate in the buffer, for example in the case of prolonged and unwanted fluid backflow. However, this buffer is reset in all relevant programming adjustments which affect the frequency output.
<p>OUTPUT SIGNAL (4207)</p>	<p> Note! Function is not available unless the FREQUENCY setting was selected in the OPERATING MODE (4200) function.</p> <p>For selecting the output configuration of the frequency output.</p> <p>Options: 0 = PASSIVE - POSITIVE 1 = PASSIVE - NEGATIVE 2 = ACTIVE - POSITIVE 3 = ACTIVE - NEGATIVE</p> <p>Factory setting: PASSIVE - POSITIVE</p> <p>Explanation</p> <ul style="list-style-type: none"> ■ PASSIVE = power is supplied to the frequency output by means of an external power supply. ■ ACTIVE = power is supplied to the frequency output by means of the device-internal power supply. <p>Configuring the output signal level (POSITIVE or NEGATIVE) determines the quiescent behaviour (at zero flow) of the frequency output. The internal transistor is activated as follows:</p> <ul style="list-style-type: none"> ■ If POSITIVE is selected, the internal transistor is activated with a positive signal level. ■ If NEGATIVE is selected, the internal transistor is activated with a negative signal level (0 V). <p> Note! With the passive output configuration, the output signal levels of the frequency output depend on the external circuit (see examples).</p> <p>Example for passive output circuit (PASSIVE) If PASSIVE is selected, the frequency output is configured as an open collector.</p> <div style="text-align: center;">  </div> <p style="text-align: right; font-size: small;">A0001225</p> <p>① = Open Collector, ② = External power supply</p> <p> Note! For continuous currents up to 25 mA ($I_{max} = 250 \text{ mA} / 20 \text{ ms}$).</p> <p>(continued on next page)</p>


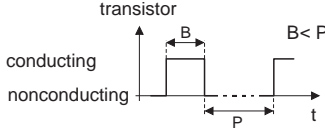
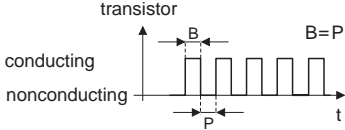


Functional description OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (GENERAL/FREQUENCY)	
<p>OUTPUT SIGNAL (4207)</p>	<p>Example for output configuration PASSIVE-POSITIVE: Output configuration with an external pull-up resistance. In the quiescent state (at zero flow), the output signal level at the terminals is 0 V.</p> <p style="text-align: center;">+ $U_{max} = 30\text{ V DC}$</p> <p>① = Open Collector, ② = Pull-Up-Resistance ③ = Transistor activation in "POSITIVE" quiescent state (at zero flow) ④ = Output signal level in quiescent state (at zero flow)</p> <p>In the operating status (flow present), the output signal level changes from 0 V to a positive voltage level.</p> <p style="text-align: right;">A0004687</p>
	<p>Example for output configuration PASSIVE-NEGATIVE: Output configuration with an external pull-down resistance. In the quiescent state (at zero flow), a positive voltage level is measured via the pull-down resistance.</p> <p style="text-align: center;">+ $U_{max} = 30\text{ V DC}$</p> <p>① = Open Collector ② = Pull-Down-Resistance ③ = Transistor activation in "POSITIVE" quiescent state (at zero flow) ④ = Output signal level in quiescent state (at zero flow)</p> <p>In the operating status (flow present), the output signal level changes from a positive voltage level to 0 V.</p> <p style="text-align: right;">A0004689</p>
	<p style="text-align: right;">A0001975</p> <p style="text-align: right;">A0001981</p>
	<p>(continued on next page)</p>



Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (GENERAL/FREQUENCY)	
<p>OUTPUT SIGNAL (Continued)</p>	<p>Example for output configuration PASSIVE-NEGATIVE: Output configuration with an external pull-up resistance. In the quiescent state (at zero flow), the output signal level at the terminals is at a positive voltage level.</p> <div style="text-align: center;"> <p>+ U_{max} = 30 V DC</p> </div> <p>① = Open Collector ② = Pull-Up-Resistance ③ = Transistor activation in "NEGATIVE" quiescent state (at zero flow) ④ = Output signal level in quiescent state (at zero flow)</p> <p>In the operating status (flow present), the output signal level changes from a positive voltage level to 0 V.</p> <div style="text-align: center;"> </div> <p>Example for active output circuit (ACTIVE): With an active circuit, the internal power supply is 24 V. The frequency output is short-circuit proof.</p> <div style="text-align: center;"> </div> <p>① = 24 V DC internal power supply ② = Short-circuit proof output</p> <p>The signal levels are to be seen as analogous to the passive circuit.</p> <p>The following applies for the output configuration ACTIVE-POSITIVE: In the quiescent state (at zero flow), the output signal level at the terminals is 0 V.</p> <div style="text-align: center;"> </div> <p style="text-align: right;">(continued on next page)</p>




Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (GENERAL/FREQUENCY)	
<p>OUTPUT SIGNAL (Continued)</p>	<p>In the operating status (flow present), the output signal level changes from 0 V to a positive voltage level.</p>  <p style="text-align: right;">A0004692</p> <p>The following applies for the output configuration ACTIVE-NEGATIVE: In the quiescent state (at zero flow), the output signal level at the terminals is at a positive voltage level.</p>  <p style="text-align: right;">A0004693</p> <p>In the operating status (flow present), the output signal level changes from a positive voltage level to 0 V.</p>  <p style="text-align: right;">A0004710</p>
<p>TIME CONSTANT (4208)</p>	<p> Note! This function is not available unless the FREQUENCY setting was selected in the OPERATION MODE function (4200).</p> <p>Use this function to enter a time constant defining how the frequency output signal reacts to severely fluctuating measured variables, either very quickly (enter a low time constant) or with damping (enter a high time constant).</p> <p>User input: fixed-point number 0.00...100.00 s</p> <p>Factory setting: 1.00 s</p>

Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (GENERAL/FREQUENCY)	
FAILSAFE MODE (4209)	<p> Note! This function is not available unless the FREQUENCY setting was selected in the OPERATION MODE function (4200).</p> <p>For safety reasons it is advisable to ensure that the frequency output assumes a predefined state in the event of a fault. The setting you select here affects only the frequency output. It has no effect on other outputs and the display (e.g. totalizers).</p> <p>Options:</p> <p>FALLBACK VALUE Output is 0 Hz.</p> <p>FAILSAFE LEVEL Output is the frequency specified in the FAILSAFE VALUE function (4211).</p> <p>HOLD VALUE Measuring value output is based on the last measuring value saved before the error occurred.</p> <p>ACTUAL VALUE Measuring value output is based on the current flow measurement (fault is ignored).</p> <p>Factory setting: FALLBACK VALUE</p>
FAILSAFE VALUE (4211)	<p> Note! This function is not available unless FREQUENCY was selected in the function OPERATION MODE (4200) and FAILSAFE LEVEL was selected in the function FAILSAFE MODE (4209).</p> <p>Use this function to define the frequency that the measuring device outputs in the event of an error.</p> <p>User input: max. 5-digit number: 0...12500 Hz</p> <p>Factory setting: 12500 Hz</p>

Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (PULSE)	
ASSIGN PULSE (4221)	<p> Note! This function is not available unless the PULSE setting was selected in the function OPERATION MODE (4200).</p> <p>Use this function to assign a measured variable to the pulse output.</p> <p>Options: OFF VOLUME FLOW (CH1...CH2) VOLUME FLOW AVERAGE VOLUME FLOW SUM (CH1+CH2) VOLUME FLOW DIFFERENCE (CH1-CH2)</p> <p>Factory setting: CH1 VOLUME FLOW</p> <p> Note! If you select OFF, the only function shown in the CONFIGURATION function group is this function, in other words ASSIGN PULSE (4221).</p>
PULSE VALUE (4222)	<p> Note! This function is not available unless the PULSE setting was selected in the function OPERATION MODE (4200).</p> <p>Use this function to define the flow at which a pulse is triggered. These pulses can be totalled by an external totalizer and in this way the total flow since measuring commenced can be registered.</p> <p>User input: 5-digit floating-point number, [unit]</p> <p>Factory setting: 1 l/pulse</p> <p> Note! The appropriate unit is taken from the function UNIT VOLUME (0403), (see Page 14)</p>

Functional description OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (PULSE)	
<p>PULSE WIDTH (4223)</p>	<p> Note! This function is not available unless the PULSE setting was selected in the function OPERATION MODE (4200).</p> <p>Use this function to enter the pulse width of the output pulse.</p> <p>User input: 0.05...2000 ms</p> <p>Factory setting: 100 ms</p> <p>Pulse output is always with the pulse width (B) entered in this function. The pauses (P) between the individual pulses are automatically configured. However, they must at least correspond to the pulse width (B = P).</p> <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>transistor</p>  </div> <div style="text-align: center;"> <p>transistor</p>  </div> </div> <p style="text-align: right; font-size: small;">A0001233</p> <p>B = Pulse width entered (the illustration applies to positive pulses) P= Intervals between the individual pulses</p> <p> Note! When entering the pulse width, select a value that can still be processed by an external totalizer (e.g. mechanical totalizer, PLC, etc.) .</p> <p> Caution! If the pulse number or frequency resulting from the pulse value entered, (see function PULSE VALUE (4222) on Page 69) and from the current flow is too large to maintain the pulse width selected (the interval P is smaller than the pulse width B entered), a system error message (# 359...362, pulse memory) is generated after buffering/balancing has occurred.</p>

Functional description OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (PULSE)	
MEASURING MODE (4225)	<p> Note! This function is not available unless the PULSE setting was selected in the function OPERATION MODE (4200).</p> <p>Use this function to define the measuring mode for the pulse output.</p> <p>Options: STANDARD Only positive flow components are totalled. Negative components are not taken into account.</p> <p>STANDARD REVERSE Only negative flow components are totalled. Positive components are not taken into account.</p> <p>SYMMETRY Positive and negative flow components are taken into account.</p> <p> Note! The direction of flow can be output via the relay output.</p> <p>PULSATING FLOW If flow is characterized by severe fluctuations as is the case, for example, with reciprocating pumps, the positive and negative flow components are totalled, with the signs taken into account (e.g. -10 l and +25 l = 15 l).</p> <p>Flow components outside the maximum pulse number per second (value/width) are buffered, balanced and output after a maximum delay of 60 seconds. If the buffered data cannot be processed within approx. 60 seconds, a fault/notice message appears.</p> <p>Under certain plant conditions, flow values can aggregate in the buffer, for example in the case of prolonged and unwanted fluid backflow. However, this buffer is reset in all relevant programming adjustments which affect the pulse output.</p> <p>Factory setting: STANDARD</p>

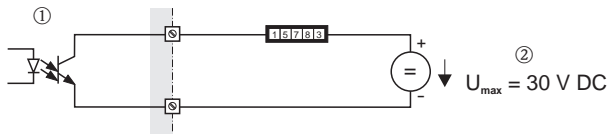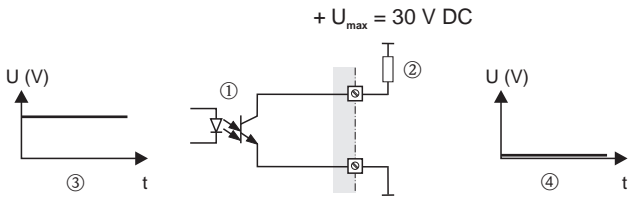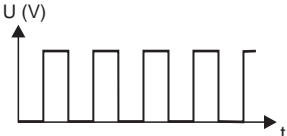Functional description OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (PULSE)	
OUTPUT SIGNAL (4226)	<p> Note! Function is not available unless the PULSE setting was selected in the OPERATION MODE (4200) function.</p> <p>For selecting the output configuration of the pulse output.</p> <p>Options: 0 = PASSIVE - POSITIVE 1 = PASSIVE - NEGATIVE 2 = ACTIVE - POSITIVE 3 = ACTIVE - NEGATIVE</p> <p>Factory setting: PASSIVE - POSITIVE</p> <p>Explanation</p> <ul style="list-style-type: none"> ■ PASSIVE = power is supplied to the pulse output by means of an external power supply. ■ ACTIVE = power is supplied to the pulse output by means of the device-internal power supply. <p>Configuring the output signal level (POSITIVE or NEGATIVE) determines the quiescent behaviour (at zero flow) of the pulse output. The internal transistor is activated as follows:</p> <ul style="list-style-type: none"> ■ If POSITIVE is selected, the internal transistor is activated with a positive signal level. ■ If NEGATIVE is selected, the internal transistor is activated with a negative signal level (0 V). <p> Note! With the passive output configuration, the output signal levels of the pulse output depend on the external circuit (see examples).</p> <p>Example for passive output circuit (PASSIVE) If PASSIVE is selected, the pulse output is configured as an open collector.</p>  <p style="text-align: right;">A0001225</p> <p>① = Open Collector, ② = External power supply</p> <p> Note! For continuous currents up to 25 mA ($I_{max} = 250 \text{ mA} / 20 \text{ ms}$).</p> <p>Example for output configuration PASSIVE-POSITIVE: Output configuration with an external pull-up resistance. In the quiescent state (at zero flow), the output signal level at the terminals is 0 V.</p>  <p style="text-align: right;">A0004687</p> <p>① = Open Collector, ② = Pull-Up-Resistance ③ = Transistor activation in "POSITIVE" quiescent state (at zero flow) ④ = Output signal level in quiescent state (at zero flow)</p> <p>In the operating status (flow present), the output signal level changes from 0 V to a positive voltage level.</p>  <p style="text-align: right;">A0001975</p> <p>(continued on next page)</p>

Functional description OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (PULSE)	
<p>OUTPUT SIGNAL (Continued)</p>	<p>Example for output configuration PASSIVE-POSITIVE: Output configuration with an external pull-down resistance. In the quiescent state (at zero flow), a positive voltage level is measured via the pull-down resistance.</p> <div style="text-align: center;"> </div> <p> ① = Open Collector ② = Pull-Down-Resistance ③ = Transistor activation in "POSITIVE" quiescent state (at zero flow) ④ = Output signal level in quiescent state (at zero flow) </p> <p>In the operating status (flow present), the output signal level changes from a positive voltage level to 0 V.</p> <div style="text-align: center;"> </div> <p style="text-align: right;">A0004689</p>
	<p>Example for output configuration PASSIVE-NEGATIVE: Output configuration with an external pull-up resistance. In the quiescent state (at zero flow), the output signal level at the terminals is at a positive voltage level.</p> <div style="text-align: center;"> </div> <p> ① = Open Collector ② = Pull-Up-Resistance ③ = Transistor activation in "NEGATIVE" quiescent state (at zero flow) ④ = Output signal level in quiescent state (at zero flow) </p> <p>In the operating status (flow present), the output signal level changes from a positive voltage level to 0 V.</p> <div style="text-align: center;"> </div> <p style="text-align: right;">A0004690</p>
	<p style="text-align: right;">A0001981</p> <p style="text-align: right;">A0001981</p> <p>(continued on next page)</p>

Functional description OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (PULSE)	
OUTPUT SIGNAL (Continued)	<p>Example for active output circuit (ACTIVE): With an active circuit, the internal power supply is 24 V. The pulse output is short-circuit proof.</p> <div style="text-align: center;"> </div> <p>① = 24 V DC internal power supply ② = Short-circuit proof output</p> <p>The signal levels are to be seen as analogous to the passive circuit.</p> <p>The following applies for the output configuration ACTIVE-POSITIVE: In the quiescent state (at zero flow), the output signal level at the terminals is 0 V.</p> <div style="text-align: center;"> </div> <p>In the operating status (flow present), the output signal level changes from 0 V to a positive voltage level.</p> <div style="text-align: center;"> </div> <p>The following applies for the output configuration ACTIVE-NEGATIVE: In the quiescent state (at zero flow), the output signal level at the terminals is at a positive voltage level.</p> <div style="text-align: center;"> </div> <p>In the operating status (flow present), the output signal level changes from a positive voltage level to 0 V.</p> <div style="text-align: center;"> </div>


A0004691




A0004694






A0004692





A0004693


A0004710

Functional description OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (PULSE)	
FAILSAFE MODE (4227)	<p> Note! This function is not available unless the PULSE setting was selected in the function OPERATION MODE (4200).</p> <p>For safety reasons it is advisable to ensure that the pulse output assumes a predefined state in the event of a fault. The setting you select here affects only the pulse output. It has no effect on other outputs and the display (e.g. totalizers).</p> <p>Options: FALLBACK VALUE Output is 0 pulse.</p> <p>HOLD VALUE Measuring value output is based on the last measuring value saved before the error occurred.</p> <p>ACTUAL VALUE Measuring value output is based on the current flow measurement The fault is ignored.</p> <p>Factory setting: FALL BACK VALUE</p>


Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (STATUS)	
ASSIGN STATUS (4241)	<p> Note! This function is not available unless the STATUS setting was selected in the function OPERATION MODE (4200).</p> <p>Use this function to assign a switching function to the status output.</p> <p>Options: OFF ON (operation) FAULT MESSAGE FAILURE (CH1...CH2) NOTICE MESSAGE FAULT MESSAGE & NOTICE MESSAGE LIMIT TOTALIZER (1...3) FLOW DIRECTION (CH1...CH2) AVERAGE FLOW DIRECTION FLOW DIRECTION SUM FLOW DIRECTION DIFFERENCE VOLUME FLOW LIMIT VALUE (CH1...CH2) LIMIT AVERAGE VOLUME FLOW LIMIT VOLUME FLOW SUM LIMIT VOLUME FLOW DIFFERENCE LIMIT SOUND VELOCITY (CH1...CH2) LIMIT SOUND VELOCITY AVERAGE LIMIT SIGNAL STRENGTH (CH1..CH2) LIMIT FLOW VELOCITY (CH1...CH2) LIMIT AVERAGE FLOW VELOCITY</p> <p> Note!</p> <ul style="list-style-type: none"> ■ The following settings/entries must be made to ensure correct and immediate signal output: <ul style="list-style-type: none"> – Function SWITCH-ON DELAY (4243) = 0 ms (see Page 77) – Function SWITCH-OFF DELAY (4245) = 0 ms (see Page 78) – Function TIME CONSTANT (4247) = 0 ms (see Page 79) ■ The ASSIGN operating mode contains a channel-specific option for the fault messages: <ul style="list-style-type: none"> – FAULT MESSAGE - all faults are displayed (gen. faults, channel-specific faults for CH1 and channel-specific faults for CH2) – FAULT CH1 - faults affecting channel 2 are not displayed (only gen. faults and channel-specific faults for CH1) – FAULT CH2 - faults affecting channel 1 are not displayed (only gen. faults and channel-specific faults for CH2) <p>Factory setting: FAULT MESSAGE</p> <p> Note!</p> <ul style="list-style-type: none"> ■ The behaviour of the status output is a normally closed behaviour, in other words the output is closed (transistor conductive) when normal, error-free measuring is in progress. ■ If you select OFF, the only function shown in the CONFIGURATION function group is the function (4241)ASSIGN STATUS). <p>Advanced options with optional software package ADVANCED DIAGNOSTICS: DEVIATION VOLUME FLOW (CH1...CH2) DEVIATION VOLUME FLOW AVERAGE DEVIATION FLOW VELOCITY (CH1...CH2) DEVIATION FLOW VELOCITY AVERAGE DEVIATION SIGNAL STRENGTH (CH1...CH2) DEVIATION SOUND VELOCITY (CH1...CH2) DEVIATION SOUND VELOCITY AVERAGE DEVIATION ACTUAL TRANSIT TIME (CH1...CH2) DEVIATION ACCEPTANCE RATE (CH1...CH2)</p>

Functional description OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (STATUS)	
ON-VALUE (4242)	<p> Note! This function is not available unless STATUS was selected in the function OPERATION MODE (4200) and LIMIT VALUE or FLOW DIRECTION was selected in the function ASSIGN STATUS (4241).</p> <p>Use this function to assign a value to the switch-on point (activation of the status output). The value can be equal to, greater than or less than the switch-off point. Positive or negative values are permissible, depending on the measured variable in question (e.g. volume flow, totalizer reading).</p> <p>User input: 5-digit floating-point number, [unit]</p> <p>Factory setting: 0 [unit]</p> <p> Note!</p> <ul style="list-style-type: none"> ■ The appropriate unit is taken from the function UNIT VOLUME FLOW (0402). ■ Only the switch-on point is available for flow direction output (no switch-off point). If you enter a value not equal to the zero flow (e.g. 5), the difference between the zero flow and the value entered corresponds to half the switchover hysteresis.
SWITCH-ON DELAY (4243)	<p> Note! This function is not available unless STATUS was selected in the function OPERATION MODE (4200) and LIMIT VALUE or FLOW DIRECTION was selected in the function ASSIGN STATUS (4241).</p> <p>Use this function to specify a delay (0...100 seconds) for switching on the status output (i.e. signal changes from 0 to 1). The delay starts when the limit value is reached. The status output does switch when the delay has timed out and the switch condition has been valid over the delay time.</p> <p>User input: fixed-point number 0.0...100.0 s</p> <p>Factory setting: 0.0 s</p>
OFF-VALUE (4244)	<p> Note! This function is not available unless STATUS was selected in the function OPERATION MODE (4200) and a LIMIT VALUE was selected in the function ASSIGN STATUS (4241).</p> <p>Use this function to assign a value to the switch-off point (deactivation of the status output). The value can be equal to, greater than or less than the switch-on point. Positive and negative values are permissible, depending on the measured variable in question (e.g. volume flow, totalizer reading).</p> <p>User input: 5-digit floating-point number, [unit]</p> <p>Factory setting: 0 [unit]</p> <p> Note!</p> <ul style="list-style-type: none"> ■ The appropriate unit is taken from the function UNIT VOLUME FLOW (0402). ■ If SYMMETRY is the setting selected in the MEASURING MODE function (4246) and values with different signs are entered for the switch-on and switch-off points, an "INPUT RANGE EXCEEDED" message is issued.

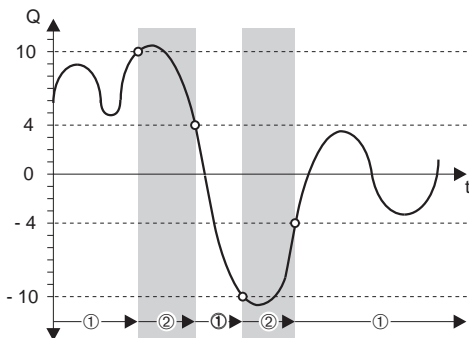

Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (STATUS)	
<p>SWITCH-OFF DELAY (4245)</p>	<p> Note!</p> <p>This function is not available unless the STATUS setting was selected in the function OPERATION MODE (4200).</p> <p>Use this function to define a delay (0...100 seconds) for switching off the status output (i.e. signal changes from 1 to 0). The delay starts when the limit value is reached. The status output does switch when the delay has timed out and the switch condition has been valid over the delay time.</p> <p>User input: fixed-point number 0.0...100.0 s</p> <p>Factory setting: 0.0 s</p>
<p>MEASURING MODE (4246)</p>	<p> Note!</p> <ul style="list-style-type: none"> ■ This function is not available unless the STATUS setting was selected in the function OPERATION MODE (4200). ■ This function is not visible unless a limit value was assigned to the status output. <p>Use this function to define the measuring mode for the status output.</p> <p>Options: STANDARD The status output signal switches at the defined switch points.</p> <p>SYMMETRY The status output signal switches at the defined switch points, irrespective of the sign. If you define a switch point with a positive sign, the status output signal switches as soon as the value is reached in the negative direction (negative sign), see illustration.</p> <p>Factory setting: STANDARD</p> <p>Example for the SYMMETRY measuring mode: Switch-on point: Q = 4 Switch-off point: Q = 10 ① = Status output switched on (conductive) ② = Status output switched off (not conductive)</p>  <p style="text-align: right;">A0001247</p> <p> Note!</p> <ul style="list-style-type: none"> ■ SYMMETRY cannot be selected unless the values in the ON-VALUE (4242) and OFF-VALUE (4244) functions have the same sign or one of the values is zero. ■ If the signs of the two values differ, SYMMETRY cannot be selected and an "ASSIGNMENT NOT POSSIBLE" message is issued.



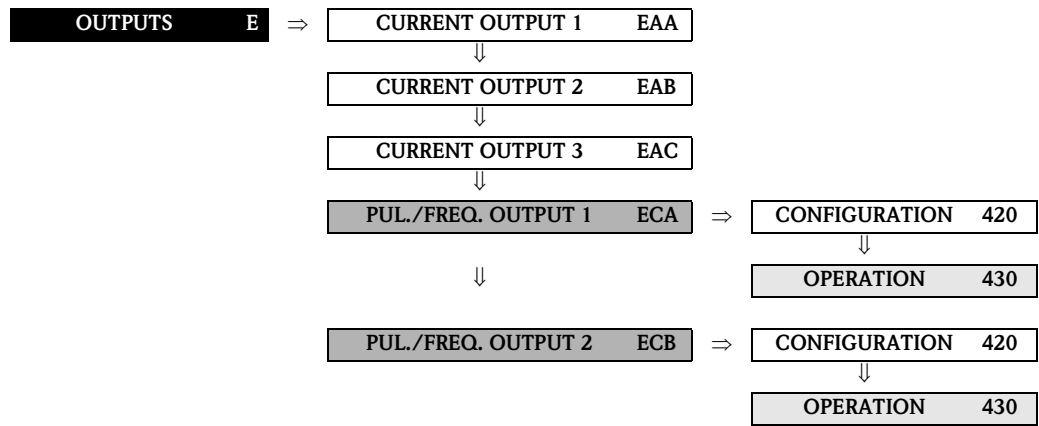






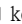

Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → CONFIGURATION (STATUS)	
<p>TIME CONSTANT (4247)</p>	<p> Note! This function is not available unless the STATUS setting was selected in the function OPERATION MODE (4200).</p> <p>Use this function to enter a time constant defining how the measuring signal reacts to severely fluctuating measured variables, either very quickly (enter a low time constant) or with damping (enter a high time constant). Damping acts on the measuring signal before the switch status changes, and consequently before switch-on or switch-off delay is activated. The purpose of damping, therefore, is to prevent the status output changing state continuously in response to fluctuations in flow.</p> <p>User input: fixed-point number 0.00...100.00 s</p> <p>Factory setting: 0.00 s</p>







7.2.2 Function group OPERATION




Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → OPERATION (FREQUENCY)	
ACTUAL FREQUENCY (4301)	<p> Note! This function is not available unless the FREQUENCY setting was selected in the OPERATION MODE function (4200).</p> <p>Use this function to view the computed value of the output frequency.</p> <p>User interface: 0...12500 Hz</p>
SIMULATION FREQUENCY (4302)	<p> Note! This function is not available unless the FREQUENCY setting was selected in the OPERATION MODE function (4200).</p> <p>Use this function to activate simulation of the frequency output.</p> <p>Options: OFF ON</p> <p>Factory setting: OFF</p> <p> Note!</p> <ul style="list-style-type: none"> ■ The "SIMULATION FREQUENCY OUTPUT" message indicates that simulation is active. ■ The measuring device continues to measure while simulation is in progress, i.e. the current measuring values are output correctly via the other outputs. <p> Caution! The setting is not saved if the power supply fails</p>

Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → OPERATION (FREQUENCY)	
<p>VALUE SIMULATION FREQUENCY (4303)</p>	<p> Note! This function is not available unless FREQUENCY was selected in the function OPERATION MODE (4200) and the function SIMULATION FREQUENCY (4302) is active (= ON).</p> <p>Use this function to define a selectable frequency value (e.g. 500 Hz) to be output at the frequency output. This value is used to test downstream devices and the measuring device itself.</p> <p>User input: 0...12500 Hz</p> <p>Factory setting: 0 Hz</p> <p> Caution! The setting is not saved if the power supply fails.</p>

Functional description OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → OPERATION (PULSE)	
SIMULATION PULSE (4322)	<p> Note! This function is not available unless the PULSE option was selected in the OPERATING MODE function.</p> <p>Use this function to activate simulation of the pulse output.</p> <p>Options: OFF</p> <p>COUNTDOWN The pulses specified in the VALUE SIMULATION PULSE function are output.</p> <p>CONTINUOUSLY Pulses are continuously output with the pulse width specified in the PULSE WIDTH function. Simulation is started once the CONTINUOUSLY option is confirmed with the  key.</p> <p> Note! Simulation is started by confirming the CONTINUOUSLY option with the  key. The simulation can be switched off again via the SIMULATION PULSE function.</p> <p>Factory setting: OFF</p> <p> Note!</p> <ul style="list-style-type: none"> ■ The notice message #631 "SIM. PULSE" indicates that simulation is active. ■ The on/off ratio is 1:1 for both types of simulation. ■ The measuring device continues to measure while simulation is in progress, i.e. the current measured values are output correctly via the other outputs. <p> Caution! The setting is not saved if the power supply fails.</p>
VALUE SIMULATION PULSE (4323)	<p> Note! This function is not available unless the COUNTDOWN option was selected in the SIMULATION PULSE function.</p> <p>Use this function to specify the number of pulses (e.g. 50) which are output during the simulation. This value is used to test downstream devices and the measuring device itself. The pulses are output with the pulse width specified in the PULSE WIDTH function. The on/off ratio is 1:1.</p> <p>Simulation is started once the specified value is confirmed with the  key. The display remains at 0 if the specified pulses have been output.</p> <p>User input: 0...10,000</p> <p>Factory setting: 0</p> <p> Note! Simulation is started by confirming the simulation value with the  key. The simulation can be switched off again via the SIMULATION PULSE function.</p> <p> Caution! The setting is not saved if the power supply fails.</p>

Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → OPERATION (STATUS)	
ACTUAL STATUS (4341)	<p> Note! This function is not available unless the STATUS setting was selected in the function OPERATION MODE (4200).</p> <p>Use this function to check the current status of the status output.</p> <p>User interface: NOT CONDUCTIVE CONDUCTIVE</p>
SIMULATION SWITCH POINT (4342)	<p> Note! This function is not available unless the STATUS setting was selected in the function OPERATION MODE (4200).</p> <p>Use this function to activate simulation of the status output.</p> <p>Options: OFF ON</p> <p>Factory setting: OFF</p> <p> Note!</p> <ul style="list-style-type: none"> ■ The "SIMULATION SWITCH POINT" message indicates that simulation is active. ■ The measuring device continues to measure while simulation is in progress, i.e. the current measuring values are output correctly via the other outputs. <p> Caution! The setting is not saved if the power supply fails</p>
VALUE SIMULATION SWITCH POINT (4343)	<p> Note! This function is not available unless STATUS was selected in the function OPERATION MODE (4200) and the function SIMULATION SWITCH POINT (4342) is active (= ON).</p> <p>Use this function to define the switching response of the status output during the simulation. This value is used to test downstream devices and the measuring device itself.</p> <p>Options: NOT CONDUCTIVE CONDUCTIVE</p> <p>Factory setting: NOT CONDUCTIVE</p> <p> Caution! The setting is not saved if the power supply fails.</p>


7.2.3 Function group INFORMATION

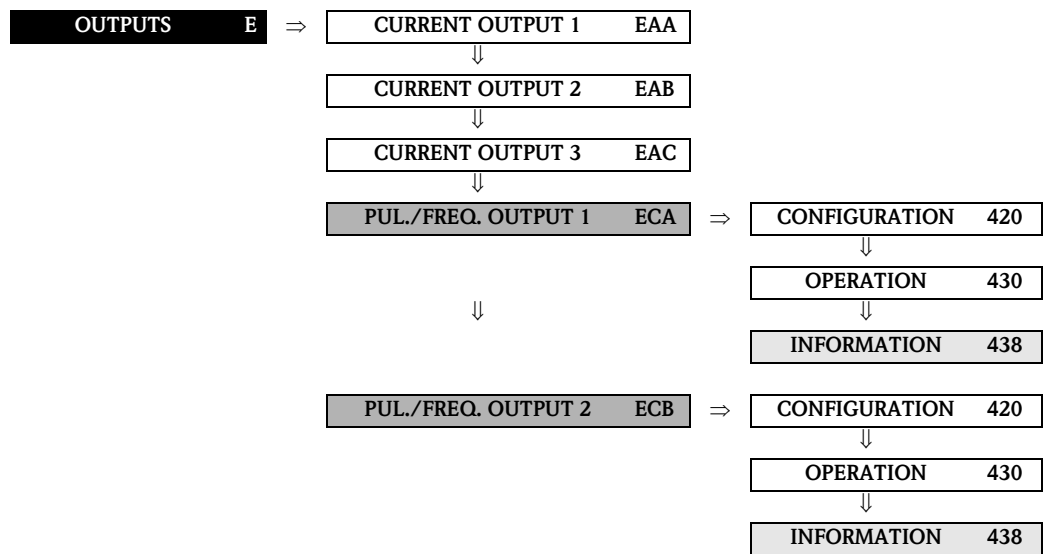




Functional description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1...2) → INFORMATION	
TERMINAL NUMBER (4380)	Use this function to display the numbers of the terminals (in the connection compartment) which are used by the pulse/frequency output.



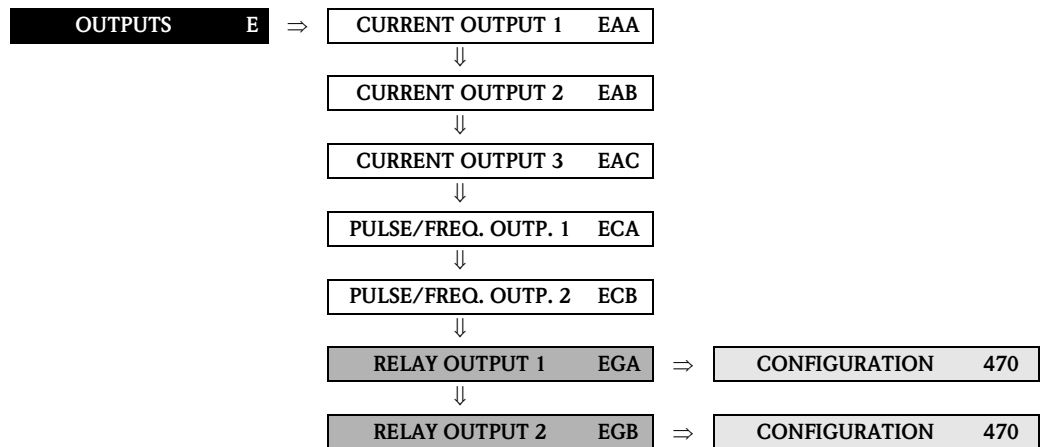

7.3 Group RELAY OUTPUT (1...2)


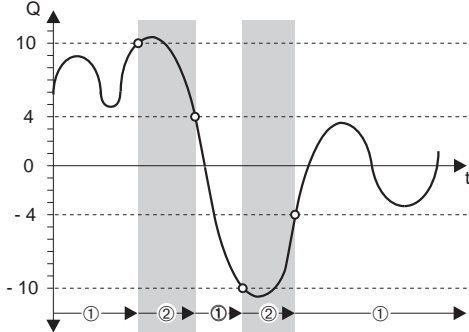

7.3.1 Function group CONFIGURATION




Functional description	
OUTPUTS → RELAY OUTPUT (1...2) → CONFIGURATION	
ASSIGN RELAY (4700)	<p>Use this function to assign a switching function to the relay output.</p> <p>Options: OFF ON (operation) FAULT MESSAGE NOTICE MESSAGE FAULT MESSAGE & NOTICE MESSAGE LIMIT TOTALIZER (1...3) FAILURE (CH1...CH2) FLOW DIRECTION (CH1...CH2) FLOW DIRECTION AVERAGE FLOW DIRECTION SUM FLOW DIRECTION DIFFERENCE LIMIT VOLUME FLOW (CH1...CH2) LIMIT VOLUME FLOW AVERAGE LIMIT VOLUME FLOW SUM LIMIT VOLUME FLOW DIFFERENCE LIMIT SOUND VELOCITY (CH1...CH2) LIMIT SOUND VELOCITY AVERAGE LIMIT FLOW VELOCITY (CH1..CH2) LIMIT AVERAGE FLOW VELOCITY</p> <p>Factory setting: FAULT MESSAGE</p> <p style="text-align: right;">(Continued on next page)</p>

Functional description OUTPUTS → RELAY OUTPUT (1...2) → CONFIGURATION	
ASSIGN RELAY (Continued)	<p> Note!</p> <ul style="list-style-type: none"> ■ It is very important to read and comply with the information on the switching characteristics of the relay output (see Page 92). ■ It is advisable to configure at least one relay output as a fault output and define the outputs' response to error. ■ The relay output is configured as a normally open (NO or make) contact by default. It can be reconfigured as a normally closed (NC or break) contact by means of a jumper on the relay module, (Operating Instructions Proline Prosonic Flow 93, BA070D/06/en/). ■ If you select OFF, the only function shown in the CONFIGURATION function group is this function, ASSIGN RELAY (4700). ■ The following settings/entries must be made to ensure correct and immediate signal output: <ul style="list-style-type: none"> – Function SWITCH-ON DELAY (4243) = 0 ms, (see Page 77) – Function SWITCH-OFF DELAY (4245) = 0 ms, (see Page 78) – Function TIME CONSTANT (4247) = 0 ms, (see Page 79) ■ The ASSIGN operating mode contains a channel-specific option for the fault messages: <ul style="list-style-type: none"> – FAULT MESSAGE - all faults are displayed (gen. faults, channel-specific faults for CH1 and channel-specific faults for CH2) – FAULT CH1 - faults affecting channel 2 are not displayed (only gen. faults and channel-specific faults for CH1) – FAULT CH2 - faults affecting channel 1 are not displayed (only gen. faults and channel-specific faults for CH2) <p>Advanced options with optional software package ADVANCED DIAGNOSTICS: DEVIATION VOLUME FLOW (CH1...CH2) DEVIATION VOLUME FLOW AVERAGE DEVIATION FLOW VELOCITY (CH1...CH2) DEVIATION FLOW VELOCITY AVERAGE DEVIATION SIGNAL STRENGTH (CH1...CH2) DEVIATION SOUND VELOCITY (CH1...CH2) DEVIATION SOUND VELOCITY AVERAGE DEVIATION ACTUAL TRANSIT TIME (CH1...CH2) DEVIATION ACCEPTANCE RATE (CH1...CH2)</p>
ON-VALUE (4701)	<p> Note!</p> <p>This function is not available unless LIMIT VALUE or FLOW DIRECTION was selected in the function ASSIGN RELAY (4700).</p> <p>Use this function to assign a value to the switch-on point (relay output pulls up). The value can be equal to, greater than or less than the switch-off point. Positive or negative values are permissible, depending on the measured variable in question (e.g. volume flow, totalizer reading).</p> <p>User input: 5-digit floating-point number, [unit]</p> <p>Factory setting: 0 [unit]</p> <p> Note!</p> <ul style="list-style-type: none"> ■ The appropriate unit is taken from the function UNIT VOLUME FLOW (0402). ■ Only the switch-on point is available for flow direction output (no switch-off point). If you enter a value not equal to the zero flow (e.g. 5), the difference between the zero flow and the value entered corresponds to half the switching hysteresis.



Functional description	
OUTPUTS → RELAY OUTPUT (1...2) → CONFIGURATION	
SWITCH-ON DELAY (4702)	<p> Note! This function is not available unless LIMIT VALUE or FLOW DIRECTION was selected in the function ASSIGN RELAY (4700).</p> <p>Use this function to define a delay (0...100 seconds) for pull-up (i.e. signal changes from 0 to 1) of the relay output. The delay starts when the limit value is reached. The relay output does switch when the delay has timed out and the switch condition has been valid throughout the delay time.</p> <p>User input: fixed-point number 0.0...100.0 s</p> <p>Factory setting: 0.0 s</p>
OFF-VALUE (4703)	<p> Note! This function is not available unless LIMIT VALUE was selected in the function ASSIGN RELAY (4700).</p> <p>Use this function to assign a value to the switch-off point (relay drops out). The value can be equal to, greater than or less than the switch-on point. Positive or negative values are permissible, depending on the measured variable in question (e.g. volume flow, totalizer reading).</p> <p>User input: 5-digit floating-point number, [unit]</p> <p>Factory setting: 0 [unit]</p> <p> Note!</p> <ul style="list-style-type: none"> ■ The appropriate unit is taken from the function UNIT VOLUME FLOW (0402). ■ If SYMMETRY is the setting selected in the MEASURING MODE function (4705) and values with different signs are entered for the switch-on and switch-off points, an "INPUT RANGE EXCEEDED" message is issued.
SWITCH-OFF DELAY (4704)	<p> Note! This function is not available unless LIMIT VALUE was selected in the function ASSIGN RELAY (4700).</p> <p>Use this function to define a delay (0...100 seconds) for drop-out (i.e. signal changes from 1 to 0) of the relay output. The delay starts when the limit value is reached. The relay output does switch when the delay has timed out and the switch condition has been valid throughout the delay time.</p> <p>User input: fixed-point number 0.0...100.0 s</p> <p>Factory setting: 0.0 s</p>

Functional description	
OUTPUTS → RELAY OUTPUT (1...2) → CONFIGURATION	
<p>MEASURING MODE (4705)</p>	<p> Note! This function is not visible unless a limit value was assigned to the relay output.</p> <p>Use this function to define the measuring mode for the relay output.</p> <p>Options: STANDARD The relay output signal switches at the defined switch points.</p> <p>SYMMETRY The relay output signal switches at the defined switching points, irrespective of the sign. If you define a switch point with a positive sign, the relay output switches as soon as the value is reached in the negative direction (negative sign), (see illustration).</p> <p>Factory setting: STANDARD</p> <p>Example for the SYMMETRY measuring mode: Switch-on point Q = 4 Switch-off point Q = 10 ① = Relay energised ② = Relay de-energised</p>  <p style="text-align: right; font-size: small;">A0001247</p> <p> Note!</p> <ul style="list-style-type: none"> ■ SYMMETRY cannot be selected unless the values in the ON-VALUE (4701) and OFF-VALUE (4703) functions have the same sign or one of the values is zero. ■ If the signs of the two values differ, SYMMETRY cannot be selected and an "ASSIGNMENT NOT POSSIBLE" message is issued.
<p>TIME CONSTANT (4706)</p>	<p>Use this function to enter a time constant defining how the measuring signal reacts to severely fluctuating measured variables, either very quickly (enter a low time constant) or with damping (enter a high time constant). Damping acts on the measuring signal before the switch status changes, and consequently before switch-on or switch-off delay is activated. The purpose of damping, therefore, is to prevent the relay output changing state continuously in response to fluctuations in flow.</p> <p>User input: fixed-point number 0.00...100.00 s</p> <p>Factory setting: 0.00 s</p>

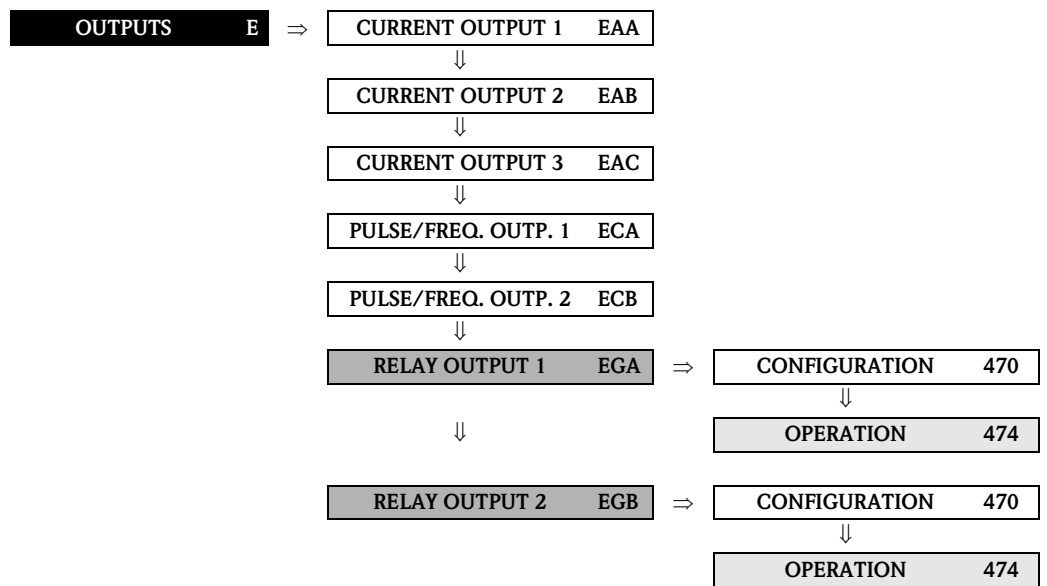
7.3.2 Function group OPERATION



Functional description	
OUTPUTS → RELAY OUTPUT (1..2) → OPERATION	
ACTUAL STATUS RELAY (4740)	<p>Use this function to check the current status of the relay output.</p> <p>A jumper on the contact side defines the relay output as a normally open (NO or make) or normally closed (NC or break) contact Operating Instructions Proline Prosonic Flow 93, BA070D/06/en/.</p> <p>User interface: BREAK CONTACT OPEN BREAK CONTACT CLOSED MAKE CONTACT OPEN MAKE CONTACT CLOSED</p>
SIMULATION SWITCH POINT (4741)	<p>Use this function to activate simulation of the relay output.</p> <p>Options: OFF ON</p> <p>Factory setting: OFF</p> <p> Note!</p> <ul style="list-style-type: none"> ■ The "SIMULATION RELAY" message indicates that simulation is active. ■ The measuring device continues to measure while simulation is in progress, i.e. the current measuring values are output correctly via the other outputs. <p> Caution! The setting is not saved if the power supply fails.</p>

Functional description	
OUTPUTS → RELAY OUTPUT (1...2) → OPERATION	
VALUE SIMULATION SWITCH POINT (4742)	<p> Note! The function is not visible unless the function SIMULATION SWITCH POINT (4741) is active (= ON).</p> <p>Use this function to define the status of the relay output during the simulation. This value is used to test downstream devices and the measuring device itself. Depending on the relay configuration (as make or break contact) the following selections are available.</p> <p>Options: Relay output configured as normally open (make) contact: NO OPEN NO CLOSED</p> <p>Relay output configured as normally closed (break) contact: NC OPEN NC CLOSED</p> <p> Caution! The setting is not saved if the power supply fails.</p>

7.3.3 Function group INFORMATION

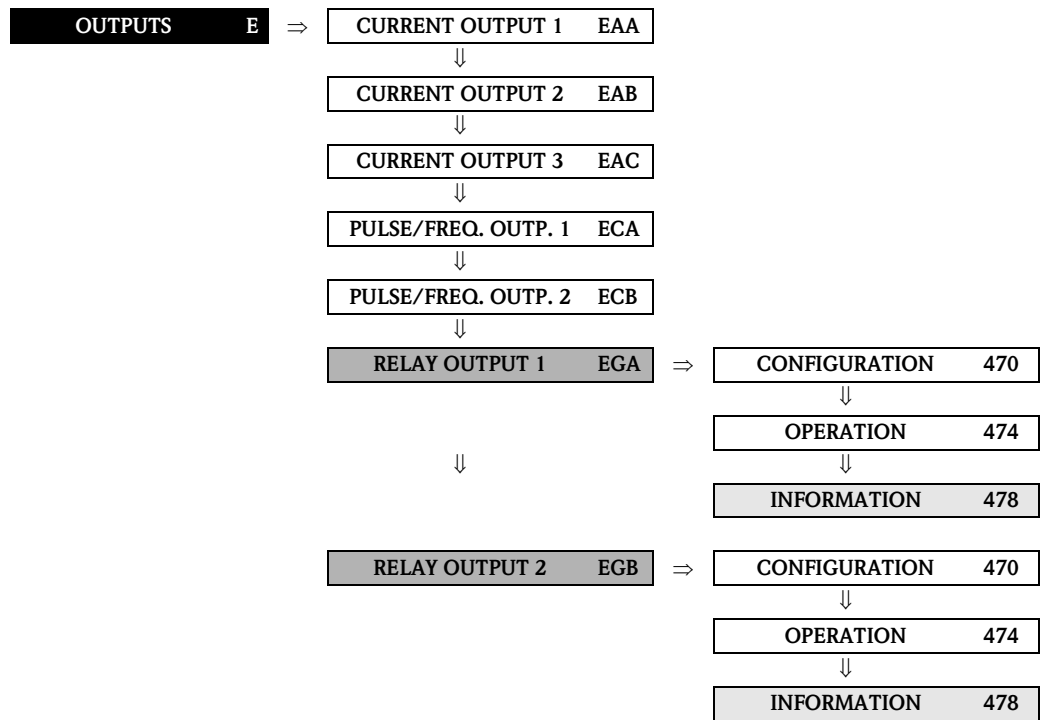

Functional description	
OUTPUTS → RELAY OUTPUT (1...2) → INFORMATION	
TERMINAL NUMBER (4780)	Use this function to display the numbers of the terminals (in the connection compartment) which are used by the relay output.

7.3.4 Information on the response of the relay output


General

If you have configured the relay output signal for "LIMIT-VALUE" or "FLOW DIRECTION", you can define the requisite switching points in the ON-VALUE and OFF-VALUE functions. When the measured variable in question reaches one of these predefined values, the relay output switches as shown in the illustrations below.

Relay output configured for "flow direction"

The value you entered in the function ON-VALUE defines the switching point for the positive and negative directions of flow.

If, for example, the switch point you define is $1 \text{ m}^3/\text{h}$, the relay drops out at $-1 \text{ m}^3/\text{h}$ and pulls up at $+1 \text{ m}^3/\text{h}$. Set the switch point to 0 if your process calls for direct switchover (no switching hysteresis). If low flow cut off is used, it is advisable to set hysteresis to a value greater than or equal to the low flow cut off rate.

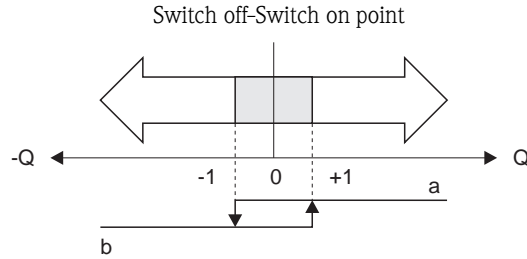


- a Relay energized
- b Relay de-energized

A0001236

Relay output configured for limit value

The relay output signal switches as soon as the measured variable undershoots or overshoots a defined switch point. Application: Monitoring flow or process-related boundary conditions.

Measured variable












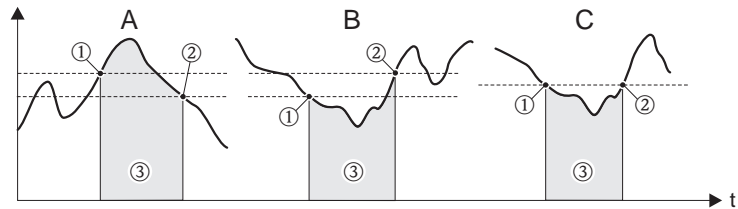

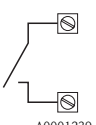
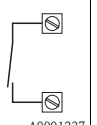

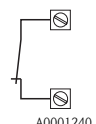
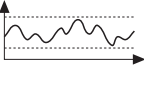
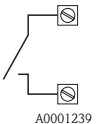
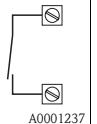
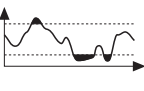
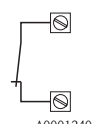



- A = Maximum safety → ① = SWITCH-OFF POINT > ② SWITCH-ON POINT
- B = Minimum safety → ① = SWITCH-OFF POINT < ② SWITCH-ON POINT
- C = Minimum safety → ① = SWITCH-OFF POINT = ② SWITCH-ON POINT (this configuration is to avoid)
- ③ = Relay de-energized


A0001235

7.3.5 Switching action of the relay output

Function	Status	Relais coil	Contact*	
			NC	NO
ON (operation)	System in measuring mode	energized		
	System not in measuring mode (power supply failed)	de-energized		

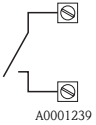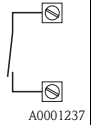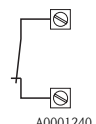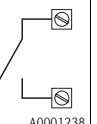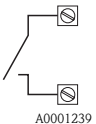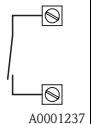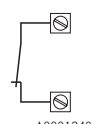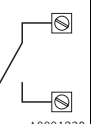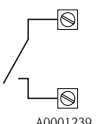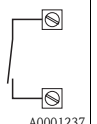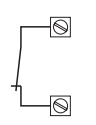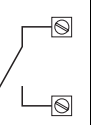Function	Status	Relais coil	Contact*		
			NC	NO	
Fault message	System OK	energized			
	(System or process error) Fault → Response to error Outputs /inputs and totalizers		de-energized		
Notice message	System OK	energized			
	(System or process error) Fault → Continuation of measuring		de-energized		
Fault message or notice message	System OK	energized			
	(System or process error) Fault → Response to error or Note → Continuation of measuring		de-energized		
Flow direction (CH1, CH2 AVG. SUM DIFFERENCE)	forward		energized		
	reverse			de-energized	
Limit value – Volume flow – Totalizer – Sound velocity – Flow velocity (CH1, CH2 AVG. SUM DIFFERENCE)	Limit value not overshoot or undershot		energized		
	Limit value overshoot or undershot			de-energized	
<p>* Terminal numbers in accordance with the TERMINAL NUMBER function (4780) on Page 91.</p> <p> Note! If the measuring device has two relays, the factory setting is: <ul style="list-style-type: none"> ■ Relay 1 → normally open contact ■ Relay 2 → normally closed contact </p>					

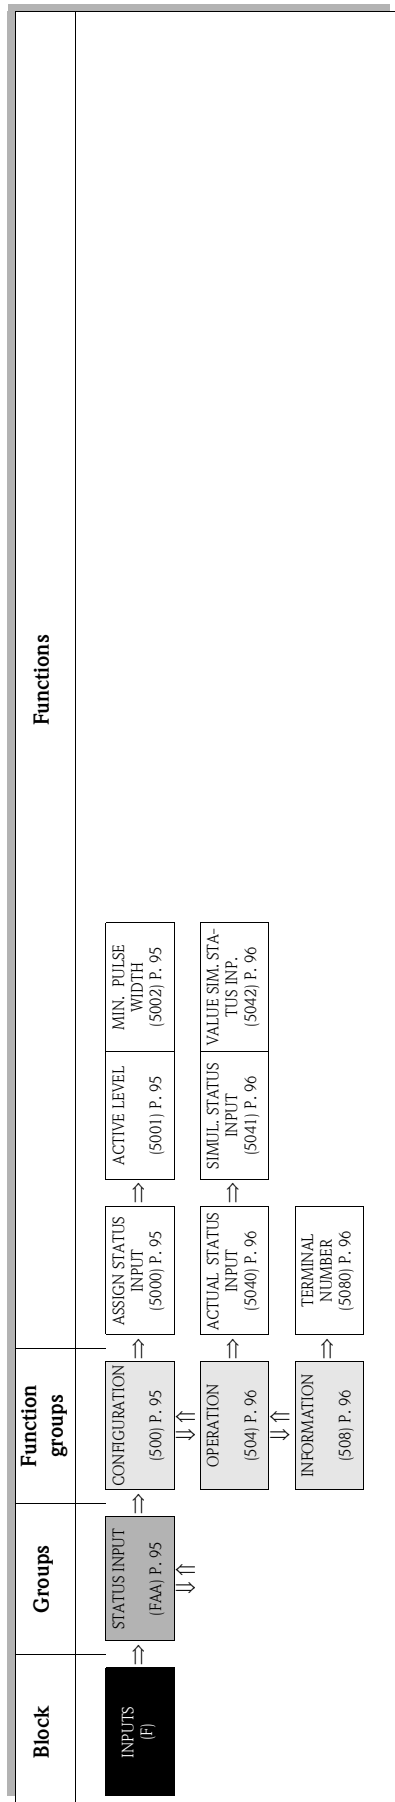

8 Block INPUTS




8.1 Group STATUS INPUT





8.1.1 Function group CONFIGURATION

INPUTS	F	⇒	STATUS INPUT	FAA	⇒	CONFIGURATION	500
--------	---	---	--------------	-----	---	---------------	-----


Functional description	
INPUTS → STATUS INPUT → CONFIGURATION	
<p>ASSIGN STATUS INPUT (5000)</p>	<p>Use this function to assign a switching function to the status input.</p> <p>Options: OFF RESET TOTALIZER (1...3) RESET ALL TOTALIZERS POSITIVE ZERO RETURN (CH1...CH2) POSITIVE ZERO RETURN CH1&CH2 RESET FAULT MESSAGE ZERO ADJUST (CH1...CH2) ACQUISITION (CH1...CH2) ACQUISITION AVG</p> <p>Factory setting: OFF</p> <p> Caution! Positive zero return is active as long as the level is available at the status input (continuous signal). All other assignments react to a change in level (pulse) at the status input.</p> <p>You can configure the status input for the record of process and device parameters in the "Advanced Diagnostics" group via the options ACQUISITION CH1, ACQUISITION CH2 and ACQUISITION AVG. With each change of the level state, an additional value for each diagnosis parameter will be recorded.</p> <ul style="list-style-type: none"> ■ ACQUISITION CH1: record of process and device parameters for channel 1 ■ ACQUISITION CH2: record of process and device parameters for channel 2 ■ ACQUISITION AVG: record of the average process and device parameters of channel 1 and channel 2 <p> Note! The options ACQUISITION CH1, ACQUISITION CH2 and ACQUISITION AVG are not available unless the SINGLE SHOT setting was selected in the ACQUISITION MODE function.</p>
<p>ACTIVE LEVEL (5001)</p>	<p>Use this function to define whether the assigned switch function is released or sustained when the signal level is present (HIGH) or not present (LOW).</p> <p>Options: HIGH LOW</p> <p>Factory setting: HIGH</p>
<p>MINIMUM PULSE WIDTH (5002)</p>	<p>Use this function to define a minimum pulse width which the input pulse must achieve in order to trigger the selected switching function (see function ASSIGN STATUS INPUT (5000) on page 95).</p> <p>User input: 20...100 ms</p> <p>Factory setting: 50 ms</p>

8.1.2 Function group OPERATION




Functional description	
INPUTS → STATUS INPUT → OPERATION	
ACTUAL STATUS INPUT (5040)	<p>Use this function to view the current level of the status input.</p> <p>User interface: HIGH LOW</p>
SIMULATION STATUS INPUT (5041)	<p>Use this function to simulate the status input, i.e. to trigger the function (see function ASSIGN STATUS INPUT (5000) on page 95) assigned to the status input.</p> <p>Options: OFF ON</p> <p>Factory setting: OFF</p> <p> Note!</p> <ul style="list-style-type: none"> ■ The "SIMULATION STATUS INPUT" message indicates that simulation is active. ■ The measuring device continues to measure while simulation is in progress, i.e. the current measuring values are output correctly via the other outputs. <p> Caution! The setting is not saved if the power supply fails.</p>
VALUE SIMULATION STATUS INPUT (5042)	<p> Note! The function is not visible unless the function SIMULATION STATUS INPUT (5041) is active (= ON).</p> <p>Use this function to define the level to be assumed at the status output during the simulation. This value is used to test downstream devices and the measuring device itself.</p> <p>Options: HIGH LOW</p> <p>Factory setting: LOW</p> <p> Caution! The setting is not saved if the power supply fails.</p>

8.1.3 Function group INFORMATION

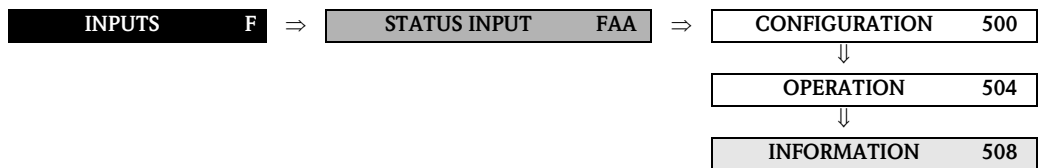

Functional description	
INPUTS → STATUS INPUT → INFORMATION	
TERMINAL NUMBER (5080)	<p>Use this function to display the numbers of the terminals (in the connection compartment) which are used by the status input.</p>

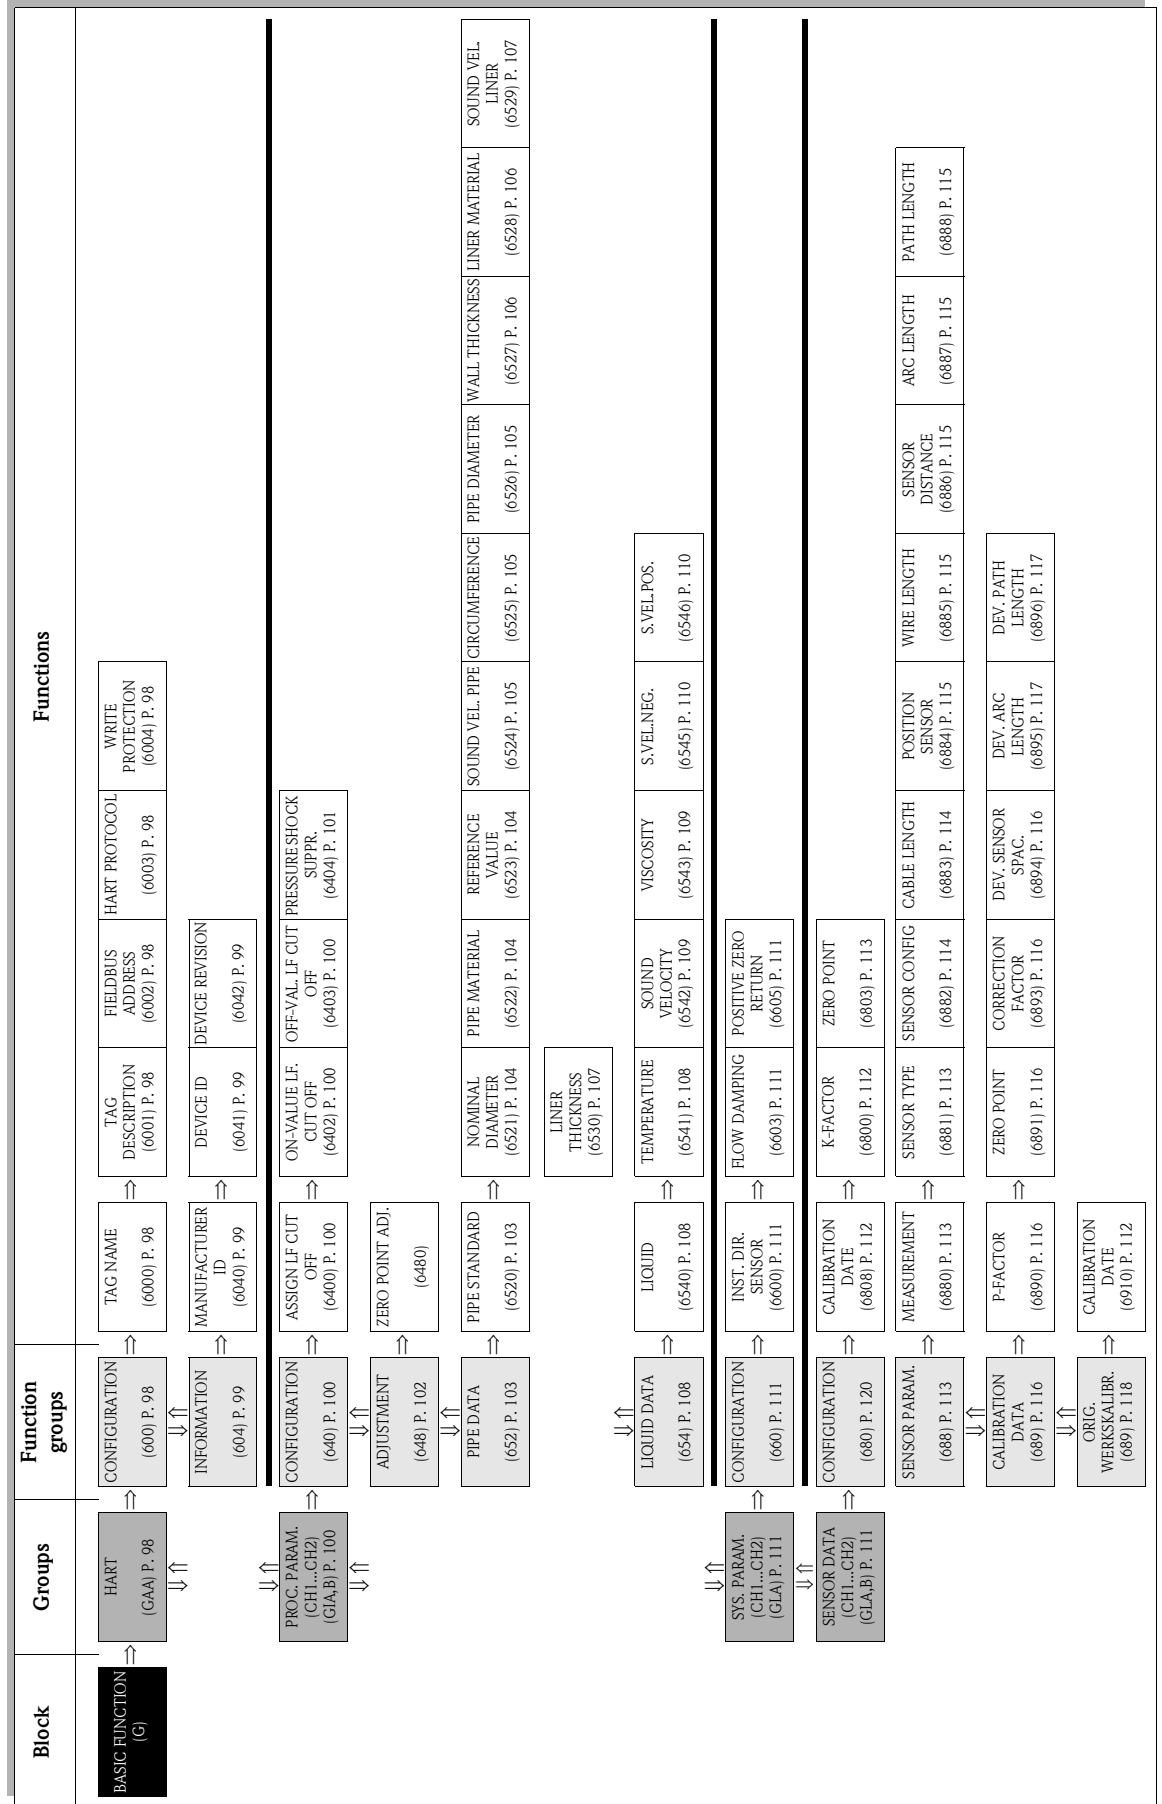


9 Block BASIC FUNCTION




9.1 Group HART

9.1.1 Function group CONFIGURATION

BASIC FUNCTION	G	⇒	HART	GAA	⇒	CONFIGURATION	600
----------------	---	---	------	-----	---	---------------	-----

Functional description	
BASIC FUNCTION → HART → CONFIGURATION	
TAG NAME (6000)	<p>Use this function to enter a tag name for the measuring device. You can edit and read this tag name at the local display or via the HART protocol.</p> <p>User input: max. 8-character text, permitted characters are: A–Z, 0–9, +, –, punctuation marks</p> <p>Factory setting: " _ _ _ _ _ _ _ _ " (without text)</p>
TAG DESCRIPTION (6001)	<p>Use this function to enter a tag description for the measuring device. You can edit and read this tag description at the local display or via the HART protocol.</p> <p>User input: max. 16-character text, permitted characters are: A–Z, 0–9, +, –, punctuation marks</p> <p>Factory setting: " _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ " (without text)</p>
FIELD BUS ADDRESS (6002)	<p>Use this function to define the address for the exchange of data with the HART protocol.</p> <p>User input: 0...15</p> <p>Factory setting: 0</p> <p> Note! Addresses 1...15: a constant 4 mA current is applied.</p>
HART PROTOCOL (6003)	<p>Use this function to display if the HART protocol is active.</p> <p>User interface: OFF = HART protocol not active ON = HART protocol active</p> <p> Note! The HART protocol is activated by selecting 4–20 mA HART or 4–20 mA (25 mA) HART in the function CURRENT SPAN, (see Page 49).</p>
WRITE PROTECTION (6004)	<p>Use this function to check whether the measuring device can be write-accessed.</p> <p>User interface: OFF (Data exchange is possible) ON (Data exchange is disabled)</p> <p>Factory setting: OFF</p> <p> Note! Write protection is activated and deactivated by means of a jumper on the I/O module Operating Instructions Proline Prosonic Flow 93, BA070D/06/en/.</p>


9.1.2 Function group INFORMATION

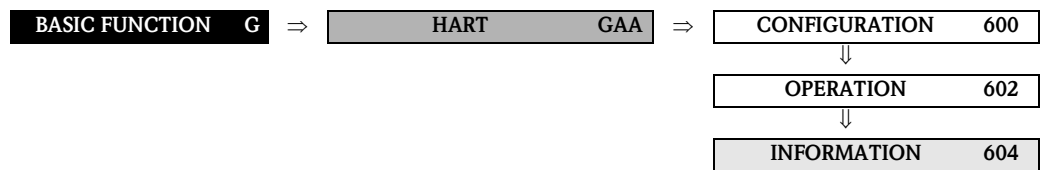
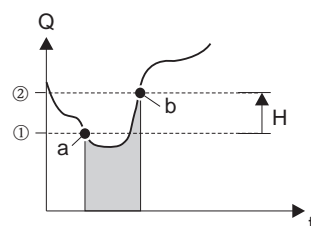


Functional description BASIC FUNCTION → HART → OPERATION	
MANUFACTURER ID (6040)	<p>Use this function to view the manufacturer number in decimal numerical format.</p> <p>User interface: 17 (≅ 11 hex) for Endress+Hauser</p>
DEVICE ID (6041)	<p>Use this function to view the device ID in hexadecimal numerical format.</p> <p>User interface: 59 (≅ 89 dez) for Prosonic Flow 93</p>
DEVICE REVISION (6042)	<p>Use this function to view the device-specific revision of the HART-command-interface.</p> <p>Display: e.g.: 7</p>




9.2 Group PROCESS PARAMETER (CH1...CH2)

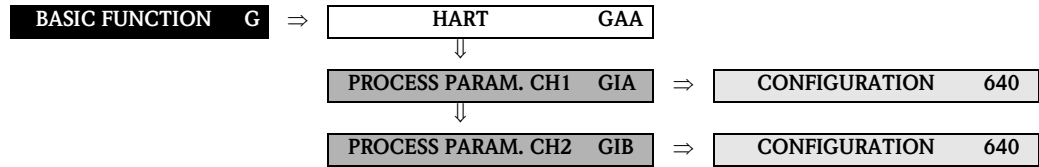9.2.1 Function group CONFIGURATION






Functional description	
BASIC FUNCTION → PROCESS PARAMETER (CH1...CH2) → CONFIGURATION	
ASSIGN LOW FLOW CUT OFF (6400)	Use this function to assign the switch point for low flow cut off rate suppression. Options: OFF VOLUME FLOW Factory setting: VOLUME FLOW
ON-VALUE LOW FLOW CUT OFF (6402)	Use this function to assign a value to the switch-on point for low flow cut off. Low flow cut off is active if the value entered is not equal to 0. The sign of the flow value is highlighted on the display to indicate that low flow cut off is active. User input: 5-digit floating-point number Factory setting: 0 l/s  Note! The appropriate unit is taken from the function UNIT VOLUME FLOW (0402) (see Page 13)
OFF-VALUE LOW FLOW CUT OFF (6403)	Use this function to enter the switch-off (b) point for low flow cut off. Enter the switch-off point as a positive hysteresis (H) from the switch-on point (a). User input: Integer 0...100% Factory setting: 50% Example: <div style="text-align: center;">  </div> <p>① = switch-on point ② switch-off point</p> <p>a = low flow cutoff is switched on b = low flow cutoff is switched off (a + a · H) H = Hysteresis value: 0 to 100% ■ low flow cutoff active Q = Flow</p>

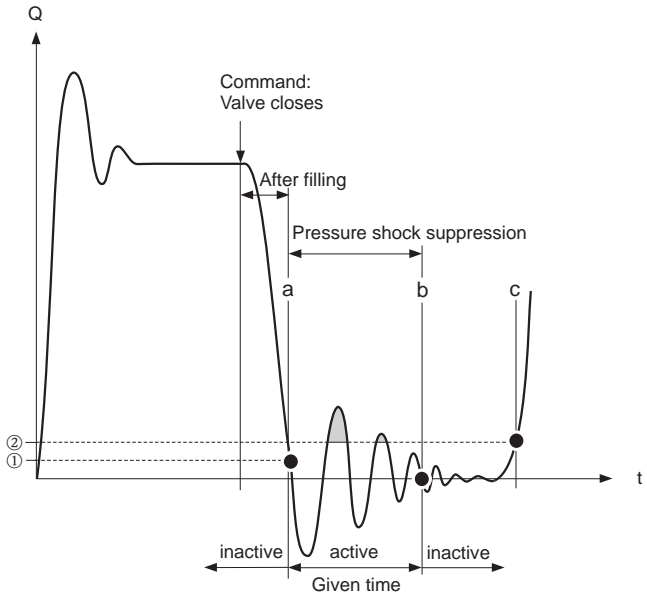A0003882


Functional description BASIC FUNCTION → PROCESS PARAMETER (CH1...CH2) → CONFIGURATION	
<p>PRESSURE SHOCK SUPPRESSION (6404)</p>	<p>The closure of a valve can cause brief but severe movements of the fluid in the piping system, movements which the measuring system registers. The pulses totalled in this way result in a totalizer reading error, particularly in the case of batching processes. For this reason, the measuring device is equipped with pressure shock suppression (= short-term signal suppression) which can eliminate system-related "disruptions".</p> <p> Note! Note that pressure shock suppression cannot be used unless the low flow cut off is active, (see function ON-VALUE LOW FLOW CUT OFF on Page 100).</p> <p>Use this function to define the time span for active pressure shock suppression.</p> <p>Activation of the pressure shock suppression Pressure shock suppression is activated after the flow falls below the switch-on point of the low flow cut off (see point 1 in graphic).</p> <p>While pressure shock suppression is active, the following conditions apply:</p> <ul style="list-style-type: none"> ■ Current output → outputs the current corresponding to zero flow. ■ Pulse/Freq.-output → outputs the frequency corresponding to zero flow. ■ Flow reading on display = → 0. ■ Totalizer reading → the totalizers are pegged at the last correct value. <p>Deactivation of the pressure shock suppression The pressure shock suppression is deactivated after the time interval, set in this function, has passed (see point 2 in graphic).</p> <p> Note! The actual flow value is displayed and output, when the time interval for the pressure shock suppression has passed and the flow exceeds the switch-off point of the low flow cut off (see point 3 in graphic).</p> <div style="text-align: center;">  </div> <p style="text-align: right; font-size: small;">A0001285-EN</p> <p>① On-value (creepage) ② Off-value (creepage) a = Active when value falls below the on-value of the low flow cut off b = Deactivated after specified time expires c = Flow values are again used to calculate the pulses ■ = Suppressed values Q = Flow</p> <p>User input: max. 4-digit number, incl. unit: 0.00...100.0 s</p> <p>Factory setting: 0.00 s</p>

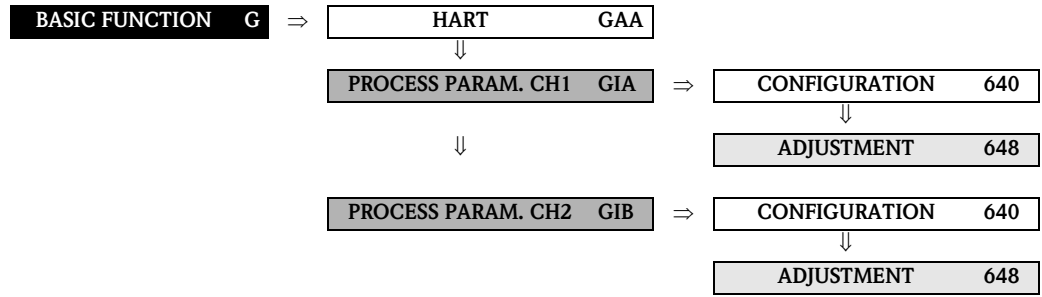9.2.2 Function group ADJUSTMENT





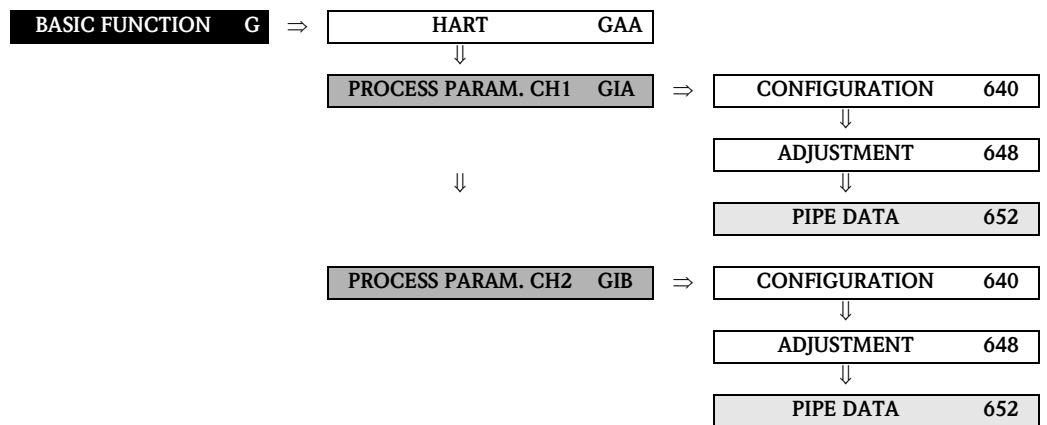

Functional description	
BASIC FUNCTION → PROCESS PARAMETER (CH1...CH2) → ADJUSTMENT	
<p>ZERO POINT ADJUSTMENT (6480)</p>	<p>This function enables a zero point adjustment to be automatically carried out. The new zero point determined by the measuring system is adopted by the ZERO POINT function (see Page 116).</p> <p>Options: CANCEL START</p> <p>Factory setting: CANCEL</p> <p> Caution! Before carrying this out, please refer to the Operating Instructions Proline Prosonic Flow 93 (BA 070D/06/en/...), for a detailed description of the procedure for zero point adjustment.</p> <p> Note!</p> <ul style="list-style-type: none"> ■ Programming is locked during zero point adjustment The message "ZERO ADJUST RUNNING" appears on the display. ■ If the zero point adjustment is not possible, e.g. with a flow velocity > 0.1 m/s, or has been canceled, then the alarm message "ZERO ADJUST NOT POSSIBLE" is shown on the display. ■ If the Prosonic Flow 93 measuring electronics are fitted with a status input, then the zero point can also be activated by using this input.





9.2.3 Function group PIPE DATA





Functional description	
BASIC FUNCTION → PROCESS PARAMETER (CH1...CH2) → PIPE DATA	
PIPE STANDARD (6520)	<p>Use this function to select a pipe standard.</p> <p>Options: OTHERS DIN: PN10, PN16, 28610, 28614, 28615, 28619 ANSI: SS SCH 40S SS SCH 80S SS SCH 5S SS SCH 10S CS SCH 20 CS SCH 40 CS SCH 80 CS SCH 120 AWWA: CLASS 50, CLASS 53, CLASS 55</p> <p> Note! The selection specifies the values for the following functions: ■ PIPE MATERIAL (6522) ■ SOUND VELOCITY PIPE (6524) ■ LINER MATERIAL (6528) If you edit these functions the pipe standard will be reset to the option OTHERS.</p> <p>Factory setting: DIN PN10</p>


Functional description	
BASIC FUNCTION → PROCESS PARAMETER (CH1...CH2) → PIPE DATA	
NOMINAL DIAMETER (6521)	<p> Note! This function does not appear if the option OTHERS was selected in the function PIPE STANDARD (6520).</p> <p>Use this function to select the nominal diameter of the pipe.</p> <p>Options: OTHERS DN: 15/½", 25/1", 40/1½", 50/2", 80/3", 100/4", 150/6", 200/8", 250/10", 300/12", 400/16", 450/18", 500/20", 600/24", 700/28", 750/30", 800/32", 900/36", 1000/40", 1200/48", 1400/54", 1500/60", 1600/64", 1800/72", 2000/80"</p> <p> Note! The selection specifies the values for the following functions:</p> <ul style="list-style-type: none"> ■ CIRCUMFERENCE (6525) ■ PIPE DIAMETER (6526) ■ WALL THICKNESS (6527) <p>If you edit these functions the pipe standard will be reset to the option OTHERS and the function NOMINAL DIAMETER (6521) does not appear.</p> <p>Factory setting: 80/3"</p>
PIPE MATERIAL (6522)	<p>This function displays the pipe material determined via the value entered in the function PIPE STANDARD (6520). If you edit the predetermined value the pipe standard will be reset to the option OTHERS and the function NOMINAL DIAMETER (6521) does not appear.</p> <p>If a pipe standard was not available for selection and the selection OTHER was made in the function PIPE STANDARD (6520) the pipe material must be entered here.</p> <p>Options: CARBON STEEL, DUCTILE IRON, STAINLESS STEEL, SS ANSI 304, SS ANSI 316, SS ANSI 347, SS ANSI 410, SS ANSI 430, ALLOY C, PVC, PE, LDPE, HDPE, GRP, PVDF, PA, PP, PTFE, GLASS PYREX, ASBESTOS CEMENT, COPPER, OTHER</p> <p>Factory setting: STAINLESS STEEL</p>
REFERENCE VALUE (6523)	<p>Use this function to enter the thickness of the reference component (e.g. flange) as the basis for measuring the sound velocity of the pipe.</p> <p> Note! This function does not appear unless the option SOUND VELOCITY PIPE was selected in the function MEASUREMENT (6880, Page 113).</p> <p>User input: 5-digit floating-point number, [unit]</p> <p>Factory setting: 5 mm</p>

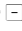Functional description	
BASIC FUNCTION → PROCESS PARAMETER (CH1...CH2) → PIPE DATA	
SOUND VELOCITY PIPE (6524)	<p>This function displays the sound velocity in the pipe determined via the value entered in the function PIPE STANDARD (6520). If you edit the predetermined value the pipe standard will be reset to the option OTHERS and the function NOMINAL DIAMETER (6521) does not appear.</p> <p>If a pipe standard was not available for selection and the selection OTHER was made in the function PIPE STANDARD (6520) the sound velocity must be entered here.</p> <p>Measuring the sound velocity in the pipe If the sound velocity in the pipe is unknown, it can be measured. To do so, select the option SOUND VELOCITY PIPE in the function MEASUREMENT (6880, Page 113). The sound velocity in the pipe is measured by calling up the function SOUND VELOCITY PIPE (6524). The measured sound velocity, the signal strength and a bar graph appear on the local display. The measurement is valid if 100% is achieved in the bar graph. If you confirm the function with the <input type="checkbox"/> key, the SAVE prompt appears. To accept the measured sound velocity, select the option YES by means of the <input type="checkbox"/> or <input type="checkbox"/> key.</p> <p> Note!</p> <ul style="list-style-type: none"> ■ To measure the sound velocity, you require the ultrasonic sensors "DDU18" which you can order as an accessory from Endress+Hauser. ■ A reference value is used as a basis for measuring the sound velocity. This reference value can be edited. (see function REFERENCE VALUE (6523), page 104) <p>User input: Fixed-point number 800...6500 m/s</p> <p>Factory setting: 3120 m/s</p>
CIRCUMFERENCE (6525)	<p>This function displays the outer circumference of the pipe determined via the value entered in the function NOMINAL DIAMETER (6521). If you edit the predetermined value the pipe standard will be reset to the option OTHERS and the function NOMINAL DIAMETER (6521) does not appear.</p> <p>If a nominal diameter was not available for selection and the selection OTHER was made in the function NOMINAL DIAMETER (6521) the outer circumference must be entered here.</p> <p>User input: Fixed-point number 31.4...15708.0 mm</p> <p>Factory setting: 279.3 mm</p>
PIPE DIAMETER (6526)	<p>This function displays the outer diameter of the pipe determined via the value entered in the function NOMINAL DIAMETER (6521). If you edit the predetermined value the pipe standard will be reset to the option OTHERS and the function NOMINAL DIAMETER (6521) does not appear.</p> <p>If a nominal diameter was not available for selection and the selection OTHER was made in the function NOMINAL DIAMETER (6521) the outer diameter must be entered here.</p> <p>User input: Fixed-point number 10.0...5000.0 mm</p> <p>Factory setting: 88.9 mm</p>




Functional description	
BASIC FUNCTION → PROCESS PARAMETER (CH1...CH2) → PIPE DATA	
WALL THICKNESS (6527)	<p>This function displays the thickness of the pipe walls determined via the value entered in the function NOMINAL DIAMETER (6521). If you edit the predetermined value the pipe standard will be reset to the option OTHERS and the function NOMINAL DIAMETER (6521) does not appear.</p> <p>If a nominal diameter was not available for selection and the selection OTHER was made in the function NOMINAL DIAMETER (6521) the thickness of the pipe wall must be entered here.</p> <p>Measuring the wall thickness</p> <p>If the wall thickness is unknown, it can be measured. To do so, select the option WALL THICKNESS in the function MEASUREMENT (6880, Page 113). The wall thickness is measured by calling up the function WALL THICKNESS (6527). The measured wall thickness, the signal strength and a bar graph appear on the local display. The measurement is valid if 100% is achieved in the bar graph. If you confirm the function with the  key, the SAVE prompt appears. To accept the measured wall thickness, select the option YES by means of the  or  key.</p> <p> Note!</p> <p>To measure the wall thickness, you require the ultrasonic sensors "DDU19" which you can order as an accessory from Endress+Hauser.</p> <p>User input: Fixed-point number 0.1...100.0 mm</p> <p>Factory setting: 3.2 mm</p>
LINER MATERIAL (6528)	<p>This function displays the liner material of the pipe determined via the value entered in the function PIPE STANDARD (6520). the pipe standard will be reset to the option OTHERS and the function NOMINAL DIAMETER (6521) does not appear.</p> <p>If a pipe standard was not available for selection and the selection OTHER was made in the function PIPE STANDARD (6520) the liner material must be entered here.</p> <p>Options: LINER NONE MORTAR RUBBER TAR EPOXY OTHERS</p> <p>Factory setting: LINER NONE</p>

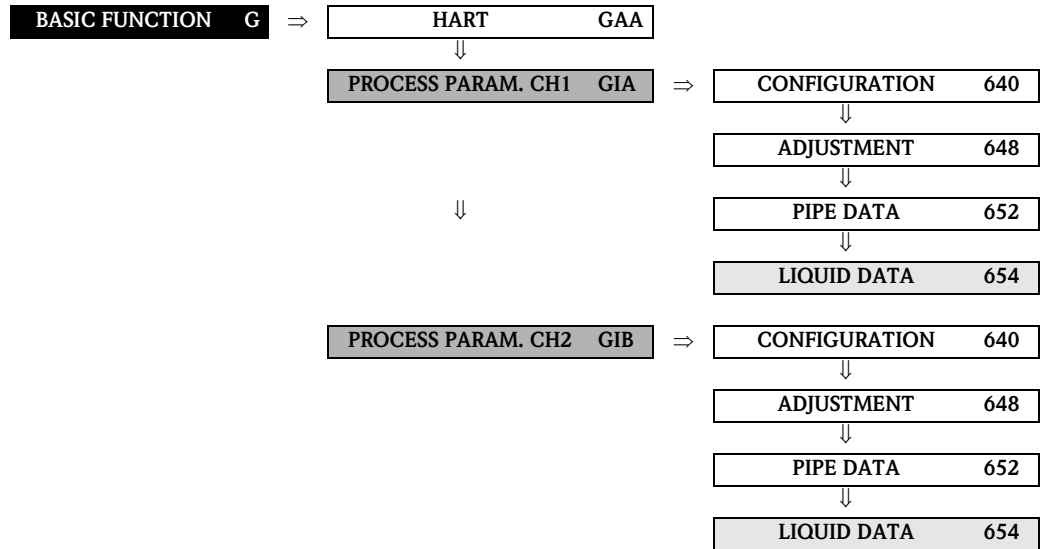

Functional description	
BASIC FUNCTION → PROCESS PARAMETER (CH1...CH2) → PIPE DATA	
SOUND VELOCITY LINER (6529)	<p> Note! This function does not appear if the option LINER NONE was selected in the function LINER MATERIAL (6528).</p> <p>This function displays the sound velocity of the liner determined via the value entered in the function LINER MATERIAL (6520). If you edit the predetermined value the liner material will be reset to the option OTHERS.</p> <p>If a liner material was not available for selection and the selection OTHER was made in the function LINER MATERIAL (6528) the sound velocity of the liner must be entered here.</p> <p>User input: Fixed-point number 800...6500 m/s</p> <p>Factory setting: Depending on the selection in the function LINER MATERIAL (6528)</p>
LINER THICKNESS (6530)	<p> Note! This function does not appear if the option LINER NONE was selected in the function LINER MATERIAL (6528).</p> <p>Use this function to enter the thickness of the liner.</p> <p>User input: Fixed-point number 0.1...100.0 mm</p> <p>Factory setting: 0 mm</p>

9.2.4 Function group LIQUID DATA

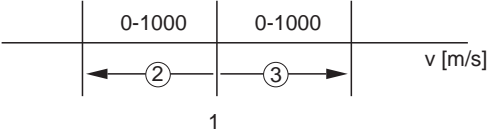


Functional description	
BASIC FUNCTION → PROCESS PARAMETER (CH1...CH2) → LIQUID DATA	
LIQUID (6540)	<p>Use this function to select the liquid in the pipe.</p> <p> Note! The selection specifies the values for the sound velocity and viscosity. If OTHER is selected, these must be entered via the SOUND VELOCITY LIQUID (6542) and VISCOSITY (6543) functions.</p> <p>Options: WATER, SEAWATER, DISTILLED WATER, AMMONIA, ALCOHOL, BENZENE, BROMIDE, ETHANOL, GLYCOL, KEROSENE, MILK, METHANOL, TOLUOL, LUBRICATING OIL, FUEL OIL, PETROL, OTHER</p> <p>Factory setting: WATER</p>
TEMPERATURE (6541)	<p>Use this function to enter the process temperature of the liquid. Via the sound velocity, the value influences the determination of the sensor distance. Enter the process temperature at normal operating conditions to achieve an optimum configuration of the measuring system.</p> <p>User input: Fixed-point number -273.15...726.85 °C (0...1000 K)</p> <p>Factory setting: 20 °C</p>

Functional description BASIC FUNCTION → PROCESS PARAMETER (CH1...CH2) → LIQUID DATA	
<p>SOUND VELOCITY LIQUID (6542)</p>	<p>This function displays the sound velocity of the liquid determined via the values entered in the functions LIQUID (6540) and TEMPERATURE (6541). If you edit the predetermined value the function LIQUID (6540) will be reset to the option OTHERS. If a liquid was not available for selection and the selection OTHER was made in the function LIQUID (6540) the sound velocity must be entered here.</p> <p>Measuring the sound velocity of the liquid If the sound velocity of the liquid is unknown, it can be measured. To do so, select the option SOUND VELOCITY LIQUID in the function MEASUREMENT (6880, Page 113). The sound velocity in the liquid is measured by calling up the function SOUND VELOCITY LIQUID (6542). The result of the measurement appears on the local display. If you confirm the function with the \square key, the SAVE prompt appears. To accept the measured sound velocity, select the option YES by means of the \square or \square key.</p> <p> Note! To measure the sound velocity, you require the ultrasonic sensors "DDU18" which you can order as an accessory from Endress+Hauser.</p> <p>Transmitter search range: The measuring device searches for the measuring signal within a defined sound velocity range. You specify the search range in the SOUND VELOCITY NEGATIVE (6545) and SOUND VELOCITY POSITIVE (6546) functions. An error message is displayed if the sound velocity of the liquid exceeds the search range.</p> <p> Note! We recommend you select a smaller search range by unfavourable signal conditions (signal strength < 50%).</p> <div style="text-align: center;">  </div> <p style="text-align: right; font-size: small;">A0001246</p> <p>1 = Sound velocity of the liquid ② = Lower search range: is specified in the SOUND VELOCITY NEGATIVE (6545) function ③ = Upper search range: is specified in the SOUND VELOCITY POSITIVE (6546) function</p> <p>User input: Fixed-point number 400...3000 m/s</p> <p>Factory setting: 1485 m/s</p>
<p>VISCOSITY (6543)</p>	<p>This function displays the viscosity of the liquid. This is determined via the values entered in the LIQUID (6540) and TEMPERATURE (6541) functions. If you edit the predetermined value the function LIQUID (6540) will be reset to the option OTHERS. If the liquid is not available for selection in the LIQUID (6540) function and the OTHER option was selected the viscosity must be entered here.</p> <p>User input: Fixed-point number 0.0...5000.0 cSt</p> <p>Factory setting: 1 mm²/s</p>

Functional description	
BASIC FUNCTION → PROCESS PARAMETER (CH1...CH2) → LIQUID DATA	
SOUND VELOCITY NEGATIVE (6545)	<p>Use this function to specify the lower search range for the sound velocity of the liquid.</p> <p>User input: Fixed-point number 0...1000 m/s</p> <p>Factory setting: 500 m/s</p> <p> Note! Pay particular attention to the information in the SOUND VELOCITY LIQUID (6542) function.</p>
SOUND VELOCITY POSITIVE (6546)	<p>Use this function to specify the upper search range for the sound velocity of the liquid.</p> <p>User input: Fixed-point number 0...1000 m/s</p> <p>Factory setting: 300 m/s</p> <p> Note! Pay particular attention to the information in the SOUND VELOCITY LIQUID (6542) function.</p>

9.3 Group SYSTEM PARAMETER (CH1...CH2)


9.3.1 Function group CONFIGURATION

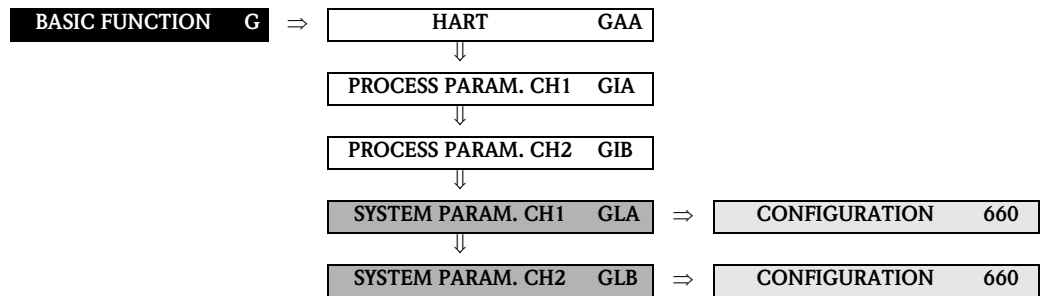

Functional description	
BASIC FUNCTION → SYSTEM PARAMETER CH1 → CONFIGURATION	
INSTALLATION DIRECTION SENSOR (6600)	<p>Use this function to reverse the sign of the flow quantity, if necessary.</p> <p>Options: NORMAL INVERSE</p> <p>Factory setting: NORMAL</p>
FLOW DAMPING (6603)	<p> Note! The system damping acts on all functions and outputs of the measuring device.</p> <p>Use this function to set the filter depth of the digital filter. This reduces the sensitivity of the measuring signal to interference peaks (e.g. high solids content, gas bubbles in the fluid, etc.). The system reaction time increases with the filter setting.</p> <p>User input: 0...100 s</p> <p>Factory setting: 0</p>
POSITIVE ZERO RETURN (6605)	<p>Use this function to interrupt evaluation of measured variables. This is necessary when a piping system is being cleaned, for example. This setting acts on all function and outputs of the measuring device.</p> <p>Options: OFF ON → Signal output is set to the "ZERO FLOW" value.</p> <p>Factory setting: OFF</p>


9.4 Group SENSOR DATA (CH1...CH2)

9.4.1 Function group CONFIGURATION

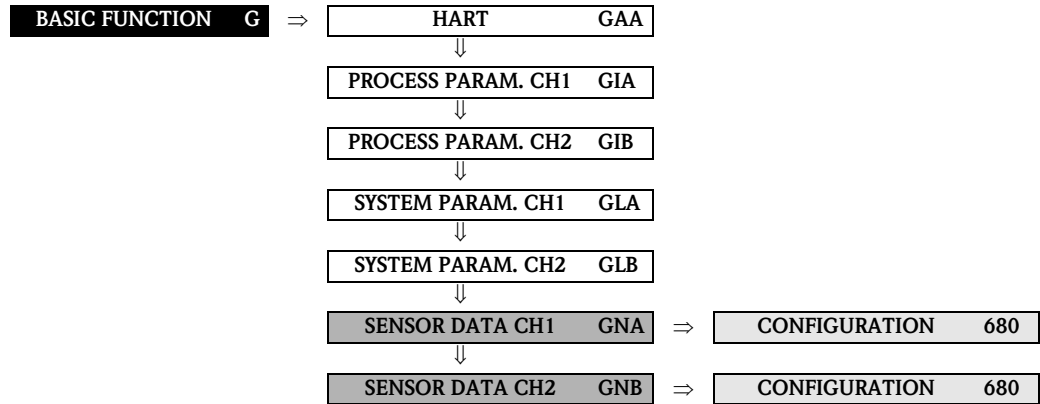





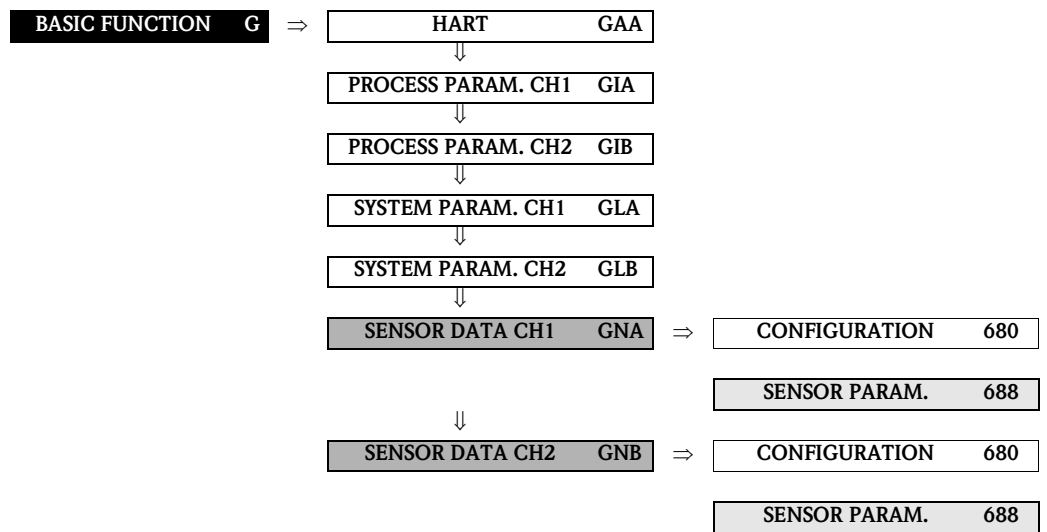

Functional description	
BASIC FUNCTION → SENSOR DATA (CH1...CH2) → CONFIGURATION	
<p> Note! The function group is only available for measuring devices in "Clamp on" version..</p>	
<p>CALIBRATION DATE (6808)</p>	<p>Use this function to view the calibration date (last calibration).</p> <p> Note!</p> <ul style="list-style-type: none"> ■ If the measuring device is delivered without calibration, the display shows the value 1.0. ■ If the calibration is reset via the function CALIBRATION DATE (6910), the date is overwritten. <p>Factory setting: Format depends on the selection in function FORMAT DATE/TIME (0429)</p>
<p>K-FACTOR (6800)</p>	<p>Use this function to view the current calibration factor for the measuring pipe and the measuring sensors.</p> <p>Display: 5-digit floating-point number, (including sign)</p> <p>Factory setting: depends on the nominal diameter and the calibration</p>
<p>ZERO POINT (6803)</p>	<p>Use this function to view the zero-point correction value for the measuring pipe and the measuring sensors The calibration at the factory determines the zero-point correction value.</p> <p> Note! If the measuring device is delivered without calibration, the display shows the value 0</p> <p>Display: 5-digit floating-point number, (including sign)</p> <p>Factory setting: depends on the nominal diameter and the calibration</p>

9.4.2 Function group SENSOR PARAMETER




Functional description	
BASIC FUNCTION → SENSOR DATA (CH1...CH2) → SENSOR PARAMETER	
MEASUREMENT (6880)	<p>Options: OFF CLAMP ON INSERTION SOUND VELOCITY LIQUID SOUND VELOCITY PIPE WALL THICKNESS</p> <p>Factory setting: CLAMP ON for channel 1 OFF for channel 2</p>
SENSOR TYPE (6881)	<p> Note! This function is only available if the OFF setting was not selected in the function MEASUREMENT.</p> <p>Select the appropriate type of measuring sensor. As a rule, a selection is not necessary as the type of measuring sensor has already been set according to the order data (order code).</p> <p>Options: (CLAMP ON in the function MEASUREMENT) W-CL-05F-L-B W-CL-1F-L-B W-CL-1F-L-C W-CL-2F-L-B P-CL-05F-L-B P-CL-05F-M-B P-CL-1F-L-B P-CL-1F-M-B P-CL-2F-L-B P-CL-2F-M-B P-CL-6F-L-C P-CL-6F-M-C U-CL-2F-L-A W-CL-6F-L-C</p> <p>Options: (INSERTION in the function MEASUREMENT) W-IN-1F-L-B</p> <p>Options: (SOUND VELOCITY LIQUID in the function MEASUREMENT) P-CL-1S-L-B P-CL-1S-M-B</p> <p>Options: (SOUND VELOCITY PIPE / WALL THICKNESS in function MEASUREMENT) P-CL-4W-L-B</p> <p>Factory setting: depends on the order code</p>



Functional description	
BASIC FUNCTION → SENSOR DATA (CH1...CH2) → SENSOR PARAMETER	
SENSOR CONFIGURATION (6882)	<p>Use this function to select the configuration for the ultrasonic sensors, e.g. the number of traverses (in the clamp-on design) or whether single-path or dual-path configuration is present (in the insertion design).</p> <p> Note! This function is not available unless one of the following options was selected in the function MEASUREMENT (6880):</p> <ul style="list-style-type: none"> ■ CLAMP ON ■ SOUND VELOCITY LIQUID ■ INSERTION <p>Options: NO. TRAVERSE: 1 ¹⁾ NO. TRAVERSE: 2 ²⁾ NO. TRAVERSE: 3 ¹⁾ NO. TRAVERSE: 4 ²⁾ SINGLE PATH ³⁾ DUAL PATH ³⁾</p> <p>Factory setting: NO. TRAVERSE: 2</p> <p> Note!</p> <ul style="list-style-type: none"> ■ In principle, setting "NO. TRAVERSE: 2" is for the P-sensor DN15 ... DN 65 necessary. ■ For sound velocity measurement it is always required to set this function to "NO. TRAVERSE: 1" or "NO. TRAVERSE: 3". ■ For flow measurement it is basically not recommended to set this function to "NO. TRAVERSE: 3". <p>¹⁾ This option is not available unless CLAMP ON or SOUND VELOCITY LIQUID was selected in the function MEASUREMENT. ²⁾ This option is not available unless CLAMP ON was selected in the function MEASUREMENT. ³⁾ This option is not available unless INSERTION was selected in the function MEASUREMENT.</p>
CABLE LENGTH (6883)	<p>Select the length of the appropriate connecting cable. As a rule, a selection is not necessary as the length has already been set according to the order data (order code).</p> <p>Options: LENGTH 5 m/15 feet LENGTH 10 m/30 feet LENGTH 15 m/45 feet LENGTH 30 m/90 feet LENGTH 60 m/180 feet</p> <p>Factory setting: depends on the order code</p>

Functional description	
BASIC FUNCTION → SENSOR DATA (CH1...CH2) → SENSOR PARAMETER	
POSITION SENSOR (6884)	<p>Use this function to view the position of both sensors on the rail.</p> <p> Note! This option is not available unless CLAMP ON is set in the function MEASUREMENT and the number of traverses is 2 or 4 (see function SENSOR CONFIGURATION (6882)).</p> <p>Display: 5-digit number combination</p>
WIRE LENGTH (6885)	<p>The wire length for assembling the sensors at the correct distance apart appears on the display.</p> <p> Note! This option is not available unless CLAMP ON was set in the function MEASUREMENT and the number of traverses is 1 or 3, (see function SENSOR CONFIGURATION (6882)).</p> <p>Display: max. 5-digit number, including unit (e.g. 200 mm)</p>
SENSOR DISTANCE (6886)	<p>The distance between sensor 1 and sensor 2 as a length measurement appears on the display.</p> <p>Display: max. 5-digit number, including unit (e.g. 200 mm)</p>
ARC LENGTH (6887)	<p>The arc length on the pipe appears on the display.</p> <p> Note! This function is not available unless INSERTION was set in the function MEASUREMENT (6880) and the DUAL PATH option was selected in the function SENSOR CONFIGURATION (6882).</p> <p>Display: max. 5-digit number, including unit (e.g. 200 mm)</p>
PATH LENGTH (6888)	<p>The path length appears on the display.</p> <p> Note! This function is not available unless INSERTION was selected in the function MEASUREMENT.</p> <p>Display: max. 5-digit number, including unit (e.g. 200 mm)</p>

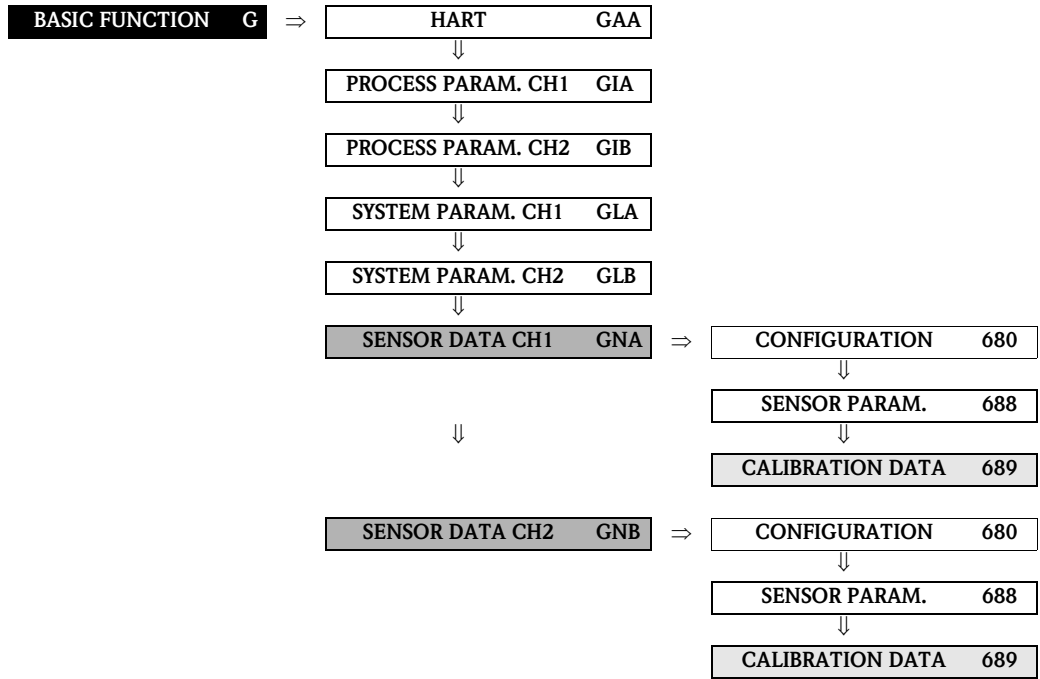
9.4.3 Function group CALIBRATION DATA




Functional description	
BASIC FUNCTION → SENSOR DATA (CH1...CH2) → CALIBRATION DATA	
P-FACTOR (6890)	<p>This function displays the p-factor.</p> <p>The p-factor indicates the influence of the velocity distribution of the flow profile inside the pipe; it is dependent on the reynolds number. The p-factor varies in the range 0.75...0.95. If the displayed value ranges 0.75...0.94 the measurement will have a reduced linearity.</p>
ZERO POINT (6891)	<p>Use this function to call up or manually change the zero point correction currently being used.</p> <p>User input: 5-digit floating-point number, including unit and sign (e.g. +10.0 ns)</p>
CORRECTION FACTOR (6893)	<p>Use this function to enter a correction factor at the client's site.</p> <p>User input: 1.0000 (= no correction)</p>
DEVIATION SENSOR DISTANCE (6894)	<p>Use this function to enter a deviation value for the sensor distance.</p> <p> Note! This option is not available unless INSERTION was selected in the function MEASUREMENT (6880).</p> <p>User input: 5-digit floating-point number, including unit and sign (e.g. +2.000 mm)</p> <p>Factory setting: 0 mm</p>

Functional description	
BASIC FUNCTION → SENSOR DATA (CH1...CH2) → CALIBRATION DATA	
<p>DEVIATION ARC LENGTH (6895)</p>	<p>Use this function to enter a deviation value for the arc length.</p> <p> Note! This function is not available unless INSERTION was set in the function MEASUREMENT (6880) and the DUAL PATH option was selected in the function SENSOR CONFIGURATION (6882).</p> <p>User input: 5-digit floating-point number, including unit and sign (e.g. +2.0000 mm)</p> <p>Factory setting: 0 mm</p>
<p>DEVIATION PATH LENGTH (6896)</p>	<p>Use this function to enter a deviation value for the path length.</p> <p> Note! This option is not available unless INSERTION was selected in the function MEASUREMENT (6880).</p> <p>User input: 5-digit floating-point number, including unit and sign (e.g. +2.0000 mm)</p> <p>Factory setting: 0 mm</p>

9.4.4 Function group ORIG. CALIBRATION.

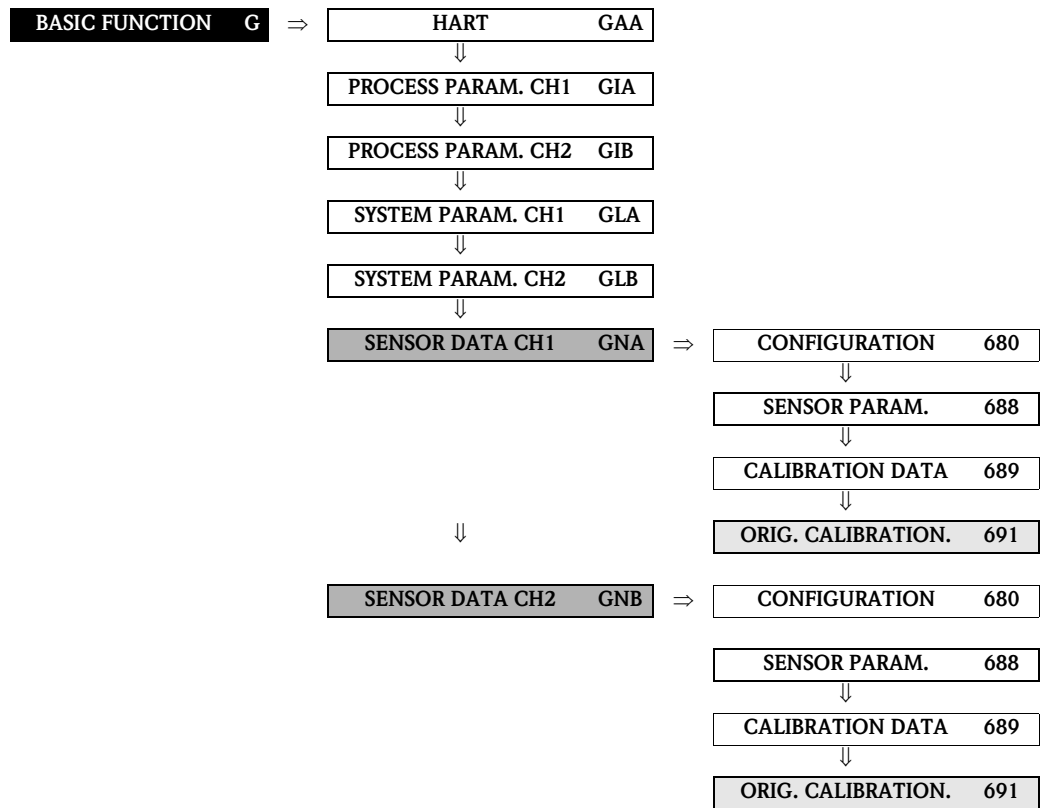


Functional description	
BASIC FUNCTION → SENSOR DATA (CH1...CH2) → ORIG. CALIBRATION.	
CALIBRATION DATE (6910)	<p>This function resets the calibration data of the measuring device to the factory settings.</p> <p>Procedure:</p> <ol style="list-style-type: none"> 1. Enter current date. 2. Store it. <p>The measuring device resets the calibration data to the factory settings and restarts automatically.</p> <p> Note!</p> <ul style="list-style-type: none"> ■ The reset of the calibration data is record in the calibration history. ■ The date of the function CALIBRATION DATE (6910) is overwritten. <p>User input: Format depends on the selection in function FORMAT DATE/TIME (0429)</p>

10 Block SPECIAL FUNCTION

Block	Groups	Function groups	Functions
SPECIAL FUNCTION (F)	ADV. DIAG (CH1,CH2,AVG.) (HEA,B,C,P. 120)	CONFIGURATION (760) P. 120 ACQUISITION (761) P. 122 VOLUME FLOW (763) P. 123 FLOW VELOCITY (766) P. 124 SIGNAL STRENGTH (765) P. 125 SOUND VELOCITY (766) P. 126 ACT. TRANSIT TIME (767) P. 128 ACCEPTANCE RATE (768) P. 130	REF. COND. USER (7601) P. 120 SELECT. REF. COND (7602) P. 120 WARNING MODE (7603) P. 121
			ACQUISITION MOD. (7610) P. 122 ACQUIS. PERIODE (7611) P. 122 DO ACQUISITION (7612) P. 122 RESET HISTORY (7613) P. 122
			REFERENCE VALUE (7630) P. 123 ACTUAL VALUE (7631) P. 123 MINIMUM VALUE (7632) P. 123 MAXIMUM VALUE (7633) P. 123 HISTORY X (7634) P. 123 ACTUAL DEVIATION (7635) P. 123 WARNING LEVEL (7636) P. 123
			REFERENCE VALUE (7640) P. 124 ACTUAL VALUE (7641) P. 124 MINIMUM VALUE (7642) P. 124 MAXIMUM VALUE (7643) P. 124 HISTORY X (7644) P. 124 ACTUAL DEVIATION (7645) P. 124 WARNING LEVEL (7646) P. 124
			REFERENCE VALUE (7650) P. 125 ACTUAL VALUE (7651) P. 125 MINIMUM VALUE (7652) P. 125 MAXIMUM VALUE (7653) P. 125 HISTORY X (7654) P. 125 ACTUAL DEVIATION (7655) P. 125 WARNING LEVEL (7656) P. 125
			REFERENCE VALUE (7660) P. 126 ACTUAL VALUE (7661) P. 126 MINIMUM VALUE (7662) P. 126 MAXIMUM VALUE (7663) P. 126 HISTORY X (7664) P. 126 ACTUAL DEVIATION (7665) P. 126 WARNING LEVEL (7666) P. 126
			REFERENCE VALUE (7670) P. 128 ACTUAL VALUE (7671) P. 128 MINIMUM VALUE (7672) P. 128 MAXIMUM VALUE (7673) P. 128 HISTORY 0 (7674) P. 128 ACTUAL DEVIATION (7675) P. 128 WARNING LEVEL (7676) P. 129
			REFERENCE VALUE (7680) P. 130 ACTUAL VALUE (7681) P. 130 MINIMUM VALUE (7682) P. 130 MAXIMUM VALUE (7683) P. 130 HISTORY X (7684) P. 130 ACTUAL DEVIATION (7685) P. 131 WARNING LEVEL (7686) P. 131

10.1 Group ADVANCED DIAGNOSTICS (CH1,CH2,AVG)


10.1.1 Function group CONFIGURATION

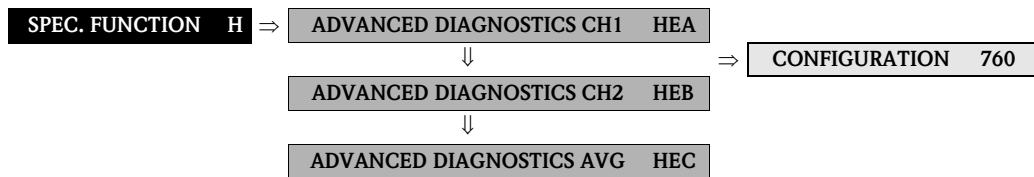






Functional description	
SPECIAL FUNCTION → ADVANCED DIAGNOSTICS (CH1,CH2,AVG) → CONFIGURATION	
<p>In this function group you define the settings for the additional software functionality "Advanced Diagnostics". The functionality is available for channel 1 (ADVANCED DIAGNOSTICS CH1) and channel 2 (ADVANCED DIAGNOSTICS CH2) as well as for the average values of the parameters volume flow, flow velocity and sound velocity (ADVANCED DIAGNOSTICS AVG).</p> <p> Note! For further information on the functional concept of the "Advanced Diagnostics" menu please refer to the Operating Instructions Proline Prosonic Flow 93, BA070D/06/en/, chapter "Commissioning"</p>	
<p>REFERENCE CONDITION USER (7601)</p>	<p>Use this function to start determining the user reference status. The following values are determined:</p> <ul style="list-style-type: none"> ■ VOLUME FLOW ■ FLOW VELOCITY ■ SIGNAL STRENGTH ■ SOUND VELOCITY ■ ACTUAL TRANSIT TIME ■ ACCEPTANCE RATE <p>Option: CANCEL START</p> <p>Factory setting: CANCEL</p> <p> Note!</p> <ul style="list-style-type: none"> ■ The values of the user reference status can each be entered manually. These are entered in the REFERENCE VALUE function in the appropriate function group (→ page 123 ff.) ■ We recommend to determine the user reference status in the REFERENCE CONDITION USER (7601) function. If entering the reference values manually, you should have good knowledge of the "Advanced Diagnostics" functionality. ■ If you have entered reference values manually via the REFERENCE VALUE function, these are overwritten if START is selected.
<p>SELECT REFERENCE CONDITION (7602)</p>	<p>Use this function to select the reference status which should be used to compare the advanced diagnostics parameters (see function ACQUISITION MODE (7610) on Page 122).</p> <p>Option: USER</p> <p>Factory setting: USER</p>

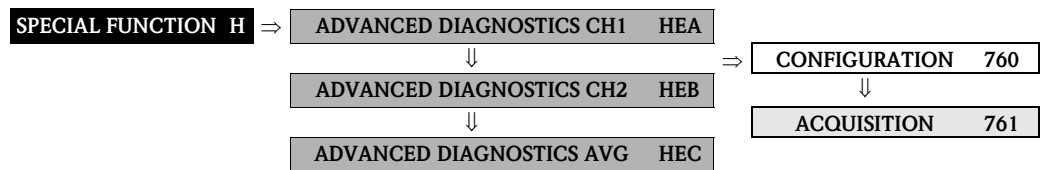
Functional description	
SPECIAL FUNCTION → ADVANCED DIAGNOSTICS (CH1,CH2,AVG) → CONFIGURATION	
WARNING MODE (7603)	<p>Use this function to determine whether a warning should be generated when there is a deviation between the reference status (USER, see function SELECT REFERENCE CONDITION (7602)) and the current measuring values.</p> <p>The values of the following functions are compared to the reference status :</p> <ul style="list-style-type: none">■ ACTUAL VALUE (Volume flow) (7631)■ ACTUAL VALUE (Flow velocity) (7641)■ ACTUAL VALUE (Signal strength) (7651)■ ACTUAL VALUE (Sound velocity) (7661)■ ACTUAL VALUE (Actual transit time) (7671)■ ACTUAL VALUE (Acceptance rate) (7681) <p>Option: OFF ON</p> <p>Factory setting: OFF</p>

10.1.2 Function group ACQUISITION




Functional description	
SPECIAL FUNCTION → ADVANCED DIAGNOSTICS (CH1,CH2,AVG) → ACQUISITION	
ACQUISITION MODE (7610)	<p>Use this function to specify whether the advanced diagnostics parameters should be determined on a periodical or single-shot basis.</p> <p>Option: OFF PERIODICAL SINGLE SHOT</p> <p>Factory setting: OFF</p> <p> Note!</p> <ul style="list-style-type: none"> ■ The option SINGLE SHOT permits the record of process and device parameters either via the DO ACQUISITION (7612) function or via the status input (see function ASSIGN STATUS INPUT (5000) on page 95). ■ See the Chapter on "Commissioning" in the Operating Instructions Proline Prosonic Flow 93, BA070D/06/en/ for more information on advanced diagnostics.
ACQUISITION PERIODE (7611)	<p> Note!</p> <p>This function is not available unless PERIODICAL was selected in the ACQUISITION MODE function (7610).</p> <p>Use this function to specify the time interval after which the advanced diagnostics parameters should be taken. The time interval starts with the confirmation of the input.</p> <p>User input: 0...99999 s</p> <p>Factory setting: 3600 s</p> <p> Note!</p> <p>A reference status must be defined prior to determining the diagnostics parameters, see function SELECT REFERENCE CONDITION (7602).</p>
DO ACQUISITION (7612)	<p> Note!</p> <p>This function is not available unless SINGLE SHOT was selected in the ACQUISITION MODE (7610) function</p> <p>Use this function to start determining the advanced diagnostics parameters on a single-shot basis.</p> <p>Option: START – CANCEL</p> <p>Factory setting: CANCEL</p> <p> Note!</p> <p>A reference status must be defined prior to determining the diagnostics parameters, see function SELECT REFERENCE CONDITION (7602).</p>
RESET HISTORY (7613)	<p>Use this function to delete all history values.</p> <p>Option: NO – YES</p> <p>Factory setting: NO</p>

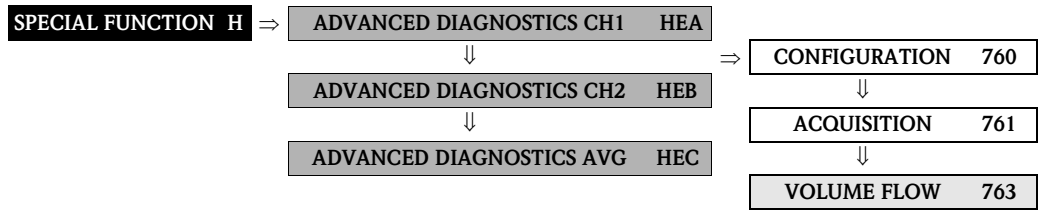



10.1.3 Function group VOLUME FLOW




Functional description	
SPECIAL FUNCTION → ADVANCED DIAGNOSTICS (CH1,CH2,AVG) → VOLUME FLOW	
<p>The volume flow can be monitored in this function group and compared with a reference value.</p> <p> Note! The appropriate unit is taken from the function UNIT VOLUME FLOW (0402) (see Page 13).</p>	
<p>REFERENCE VALUE (7630)</p>	<p>The reference value for the volume flow appears on the display.</p> <p>User Interface: 5-digit floating-point number, including unit and sign</p> <p> Note! The reference value is taken from the REFERENCE CONDITION USER (7601) function. It can also be entered manually here. The reference value entered is overwritten if you select the START option in the REFERENCE CONDITION USER (7601) function.</p>
<p>ACTUAL VALUE (7631)</p>	<p>The measured volume flow appears on the display</p> <p>User Interface: 5-digit floating-point number, including unit and sign</p>
<p>MINIMUM VALUE (7632)</p>	<p>The lowest volume flow value since the saved values were last reset appears on the display.</p> <p>User Interface: 5-digit floating-point number, including unit and sign</p>
<p>MAXIMUM VALUE (7633)</p>	<p>The lowest volume flow value since the saved values were last reset appears on the display</p> <p>User Interface: 5-digit floating-point number, including unit and sign</p>
<p>HISTORY X (7634)</p>	<p>Three of the last ten stored volume flow values appear on the display. Please use the -keys to scroll through the list. 'X' indicates the position. E.g. HISTORY 0 shows the latest value at the first position in the display. To reset the list use the function RESET HISTORY (7613).</p> <p>User Interface: 5-digit floating-point number, including unit and sign</p>
<p>ACTUAL DEVIATION (7635)</p>	<p>This function displays deviation between the measured volume flow and the reference values (USER), see Page 120, selected in the function SELECT REFERENCE CONDITION (7602).</p> <p>User Interface: 5-digit floating-point number, including unit and sign</p>
<p>WARNING LEVEL (7636)</p>	<p> Note! This function is not available unless ON was selected in the WARNING MODE (7603) function.</p> <p>Use this function to specify a limit value for the volume flow. A notice message is generated if the limit value is exceeded.</p> <p>User input: 0...99999%</p> <p>Factory setting: 100%</p>

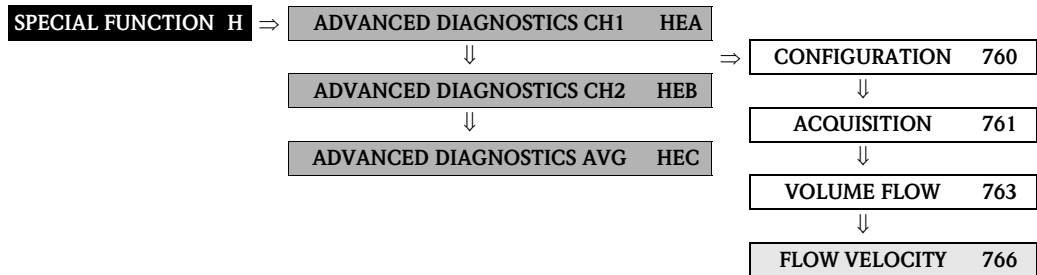10.1.4 Function group FLOW VELOCITY

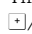


Functional description	
SPECIAL FUNCTION → ADVANCED DIAGNOSTICS (CH1,CH2,AVG) → FLOW VELOCITY	
<p>The flow velocity can be monitored in this function group and compared with a reference value.</p> <p> Note! The appropriate unit is taken from the function UNIT VELOCITY (0425) (see Page 15).</p>	
<p>REFERENCE VALUE (7640)</p>	<p>The reference value for the flow velocity appears on the display.</p> <p>User Interface: 5-digit floating-point number, including unit and sign</p> <p> Note! The reference value is taken from the REFERENCE CONDITION USER (7601) function. It can also be entered manually here. The reference value entered is overwritten if you select the START option in the REFERENCE CONDITION USER (7601) function.</p>
<p>ACTUAL VALUE (7641)</p>	<p>The measured flow velocity appears on the display</p> <p>User Interface: 5-digit floating-point number, including unit and sign</p>
<p>MINIMUM VALUE (7642)</p>	<p>The lowest flow velocity value since the saved values were last reset appears on the display.</p> <p>User Interface: 5-digit floating-point number, including unit and sign</p>
<p>MAXIMUM VALUE (7643)</p>	<p>The lowest flow velocity value since the saved values were last reset appears on the display</p> <p>User Interface: 5-digit floating-point number, including unit and sign</p>
<p>HISTORY X (7644)</p>	<p>Three of the last ten stored flow velocity values appear on the display. Please use the -keys to scroll through the list. 'X' indicates the position. E.g. HISTORY 0 shows the latest value at the first position in the display. To reset the list use the function RESET HISTORY (7613).</p> <p>User Interface: 5-digit floating-point number, including unit and sign</p>
<p>ACTUAL DEVIATION (7645)</p>	<p>This function displays deviation between the measured flow velocity and the reference values (USER), see Page 120, selected in the function SELECT REFERENCE CONDITION (7602).</p> <p>User Interface: 5-digit floating-point number, including unit and sign</p>
<p>WARNING LEVEL (7646)</p>	<p> Note! This function is not available unless ON was selected in the WARNING MODE (7603) function.</p> <p>Use this function to specify a limit value for the volume flow. A notice message is generated if the limit value is exceeded..</p> <p>User input: 0...99999%</p> <p>Factory setting: 100%</p>

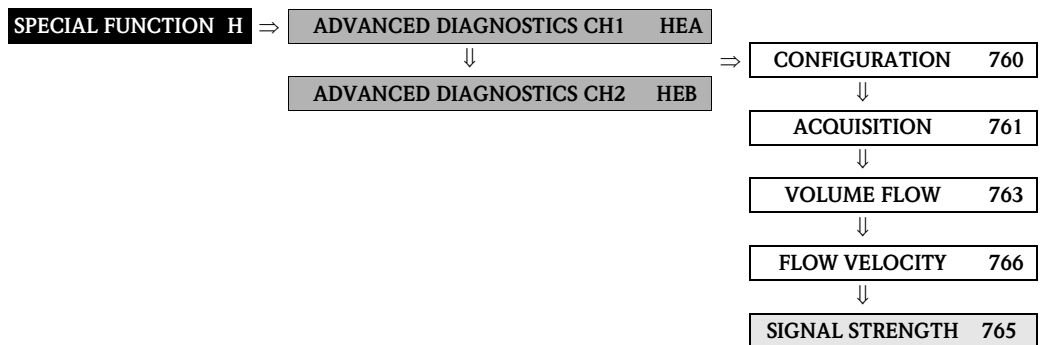


10.1.5 Function group SIGNAL STRENGTH




Functional description	
SPECIAL FUNCTION → ADVANCED DIAGNOSTICS (CH1,CH2,AVG) → SIGNAL STRENGTH	
The signal strength can be monitored in this function group and compared with a reference value.	
REFERENCE VALUE (7650)	<p>The reference value for the signal strength appears on the display.</p> <p>User Interface: 5-digit floating-point number</p> <p> Note! The reference value is taken from the REFERENCE CONDITION USER (7601) function. It can also be entered manually here. The reference value entered is overwritten if you select the START option in the REFERENCE CONDITION USER (7601) function.</p>
ACTUAL VALUE (7651)	<p>The measured signal strength appears on the display</p> <p>User Interface: 5-digit floating-point number</p>
MINIMUM VALUE (7652)	<p>The lowest signal strength value since the saved values were last reset appears on the display.</p> <p>User Interface: 5-digit floating-point number</p>
MAXIMUM VALUE (7653)	<p>The lowest signal strength value since the saved values were last reset appears on the display</p> <p>User Interface: 5-digit floating-point number</p>
HISTORY X (7654)	<p>Three of the last ten stored signal strength values appear on the display. Please use the -keys to scroll through the list. 'X' indicates the position. E.g. HISTORY 0 shows the latest value at the first position in the display. To reset the list use the function RESET HISTORY (7613).</p> <p>User Interface: 5-digit floating-point number</p>
ACTUAL DEVIATION (7655)	<p>This function displays deviation between the measured signal strength and the reference values (USER), see Page 120, selected in the function SELECT REFERENCE CONDITION (7602).</p> <p>User Interface: 5-digit floating-point number, including unit and sign</p>
WARNING LEVEL (7656)	<p> Note! This function is not available unless ON was selected in the WARNING MODE (7603) function.</p> <p>Use this function to specify a limit value for the volume flow. A notice message is generated if the limit value is exceeded.</p> <p>User input: 0...99999%</p> <p>Factory setting: 100%</p>

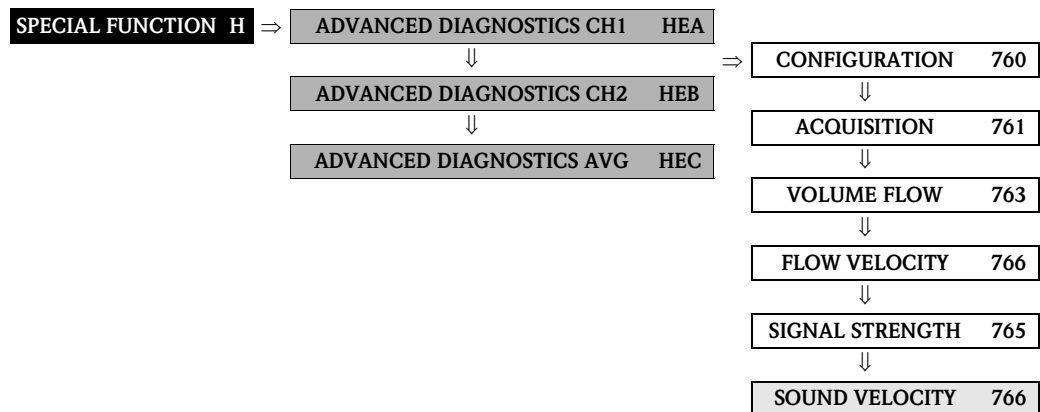
10.1.6 Function group SOUND VELOCITY



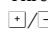


Functional description	
SPECIAL FUNCTION → ADVANCED DIAGNOSTICS (CH1,CH2,AVG) → SOUND VELOCITY	
<p>The sound velocity can be monitored in this function group and compared with a reference value.</p> <p> Note! The appropriate unit is taken from the function UNIT VELOCITY (0425) (see Page 15).</p>	
REFERENCE VALUE (7660)	<p>The reference value for the sound velocity appears on the display.</p> <p>User Interface: 5-digit floating-point number, including unit</p> <p> Note! The reference value is taken from the REFERENCE CONDITION USER (7601) function. It can also be entered manually here. The reference value entered is overwritten if you select the START option in the REFERENCE CONDITION USER (7601) function.</p>
ACTUAL VALUE (7661)	<p>The measured sound velocity appears on the display</p> <p>User Interface: 5-digit floating-point number, including unit</p>
MINIMUM VALUE (7662)	<p>The lowest sound velocity value since the saved values were last reset appears on the display.</p> <p>User Interface: 5-digit floating-point number, including unit</p>
MAXIMUM VALUE (7663)	<p>The lowest sound velocity value since the saved values were last reset appears on the display</p> <p>User Interface: 5-digit floating-point number, including unit</p>
HISTORY X (7664)	<p>Three of the last ten stored sound velocity values appear on the display. Please use the -keys to scroll through the list. 'X' indicates the position. E.g. HISTORY 0 shows the latest value at the first position in the display. To reset the list use the function RESET HISTORY (7613).</p> <p>User Interface: 5-digit floating-point number, including unit</p>
ACTUAL DEVIATION (7665)	<p>This function displays deviation between the measured sound velocity and the reference values (USER), see Page 120, selected in the function SELECT REFERENCE CONDITION (7602).</p> <p>User Interface: 5-digit floating-point number, including unit</p>

Functional description	
SPECIAL FUNCTION → ADVANCED DIAGNOSTICS (CH1,CH2,AVG) → SOUND VELOCITY	
WARNING LEVEL (7666)	<p> Note! This function is not available unless ON was selected in the WARNING MODE (7603) function.</p> <p>Use this function to specify a limit value for the volume flow. A notice message is generated if the limit value is exceeded.</p> <p>User input: 0...99999%</p> <p>Factory setting: 100%</p>

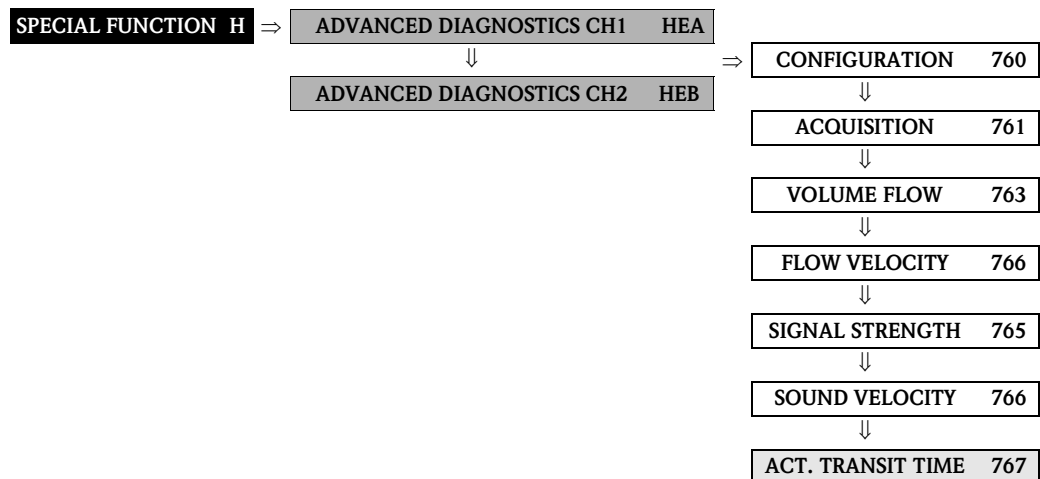
10.1.7 Function group ACTUAL TRANSIT TIME


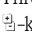



Functional description	
SPECIAL FUNCTION → ADVANCED DIAGNOSTICS CH1 → ACTUAL TRANSIT TIME	
The actual transit time can be monitored in this function group and compared with a reference value.	
REFERENCE VALUE (7670)	<p>The reference value for the actual transition time appears on the display.</p> <p>User Interface: 5-digit floating-point number, including unit</p> <p> Note! The reference value is taken from the REFERENCE CONDITION USER (7601) function. It can also be entered manually here. The reference value entered is overwritten if you select the START option in the REFERENCE CONDITION USER (7601) function.</p>
ACTUAL VALUE (7671)	<p>The measured actual transition time appears on the display</p> <p>User Interface: 5-digit floating-point number, including unit</p>
MINIMUM VALUE (7672)	<p>The lowest actual transition time value since the saved values were last reset appears on the display.</p> <p>User Interface: 5-digit floating-point number, including</p>
MAXIMUM VALUE (7673)	<p>The lowest actual transition time value since the saved values were last reset appears on the display</p> <p>User Interface: 5-digit floating-point number, including</p>
HISTORY X (7674)	<p>Three of the last ten stored actual transition time values appear on the display. Please use the -keys to scroll through the list. 'X' indicates the position. E.g. HISTORY 0 shows the latest value at the first position in the display. To reset the list use the function RESET HISTORY (7613).</p> <p>User Interface: 5-digit floating-point number, including unit</p>
ACTUAL DEVIATION (7675)	<p>This function displays deviation between the measured actual transition time and the reference values (USER), see Page 120, selected in the function SELECT REFERENCE CONDITION (7602).</p> <p>User Interface: 5-digit floating-point number, including unit and sign</p>

Functional description	
SPECIAL FUNCTION → ADVANCED DIAGNOSTICS CH1 → ACTUAL TRANSIT TIME	
WARNING LEVEL (7676)	<p> Note! This function is not available unless ON was selected in the WARNING MODE (7603) function.</p> <p>Use this function to specify a limit value for the volume flow. A notice message is generated if the limit value is exceeded..</p> <p>User input: 0...99999%</p> <p>Factory setting: 100%</p>


10.1.8 Function group ACCEPTANCE RATE

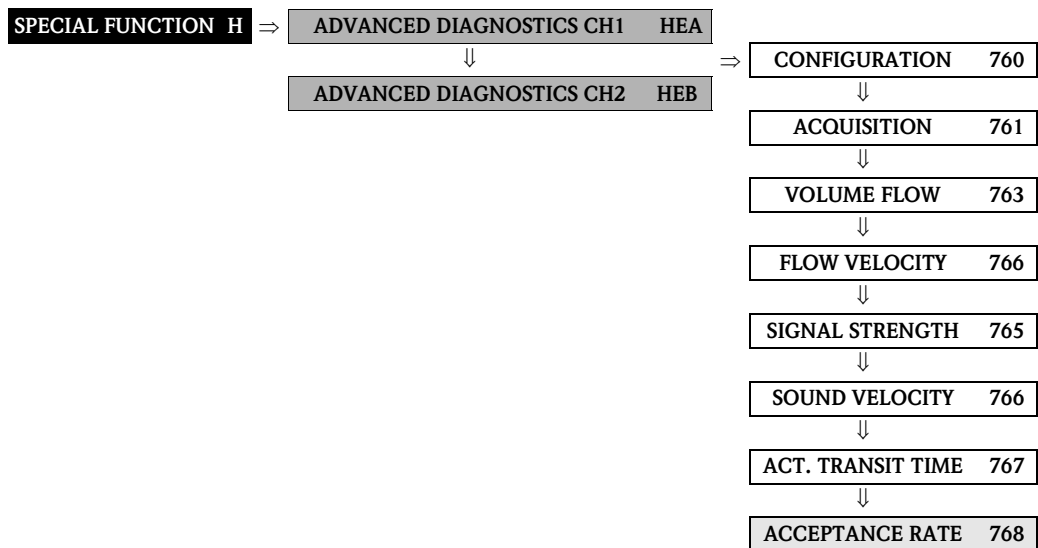

Functional description	
SPECIAL FUNCTION → ADVANCED DIAGNOSTICS CH1 → ACCEPTANCE RATE	
<p>The acceptance rate can be monitored in this function group and compared with a reference value. The acceptance rate indicates the proportion of measurements which are used in flow calculation.</p>	
<p>REFERENCE VALUE (7680)</p>	<p>The reference value for the acceptance rate appears on the display.</p> <p>User Interface: 5-digit floating-point number</p> <p> Note! The reference value is taken from the REFERENCE CONDITION USER (7601) function. It can also be entered manually here. The reference value entered is overwritten if you select the START option in the REFERENCE CONDITION USER (7601) function.</p>
<p>ACTUAL VALUE (7681)</p>	<p>The measured acceptance rate appears on the display</p> <p>User Interface: 5-digit floating-point number</p>
<p>MINIMUM VALUE (7682)</p>	<p>The lowest acceptance rate value since the saved values were last reset appears on the display.</p> <p>User Interface: 5-digit floating-point number</p>
<p>MAXIMUM VALUE (7683)</p>	<p>The lowest acceptance rate value since the saved values were last reset appears on the display</p> <p>User Interface: 5-digit floating-point number</p>
<p>HISTORY X (7684)</p>	<p>Three of the last ten stored acceptance rate values appear on the display. Please use the -keys to scroll through the list. 'X' indicates the position. HISTORY 0 shows the latest value at the first position in the display. To reset the list use the function RESET HISTORY (7613).</p> <p>User Interface: 5-digit floating-point number</p>

Functional description	
SPECIAL FUNCTION → ADVANCED DIAGNOSTICS CH1 → ACCEPTANCE RATE	
ACTUAL DEVIATION (7685)	<p>This function displays deviation between the measured acceptance rate and the reference values (USER), see Page 120, selected in the function SELECT REFERENCE CONDITION (7602).</p> <p>User Interface: 5-digit floating-point number, including unit and sign</p>
WARNING LEVEL (7686)	<p> Note! This function is not available unless ON was selected in the WARNING MODE (7603) function.</p> <p>Use this function to specify a limit value for the volume flow. A notice message is generated if the limit value is exceeded..</p> <p>User input: 0...99999%</p> <p>Factory setting: 100%</p>



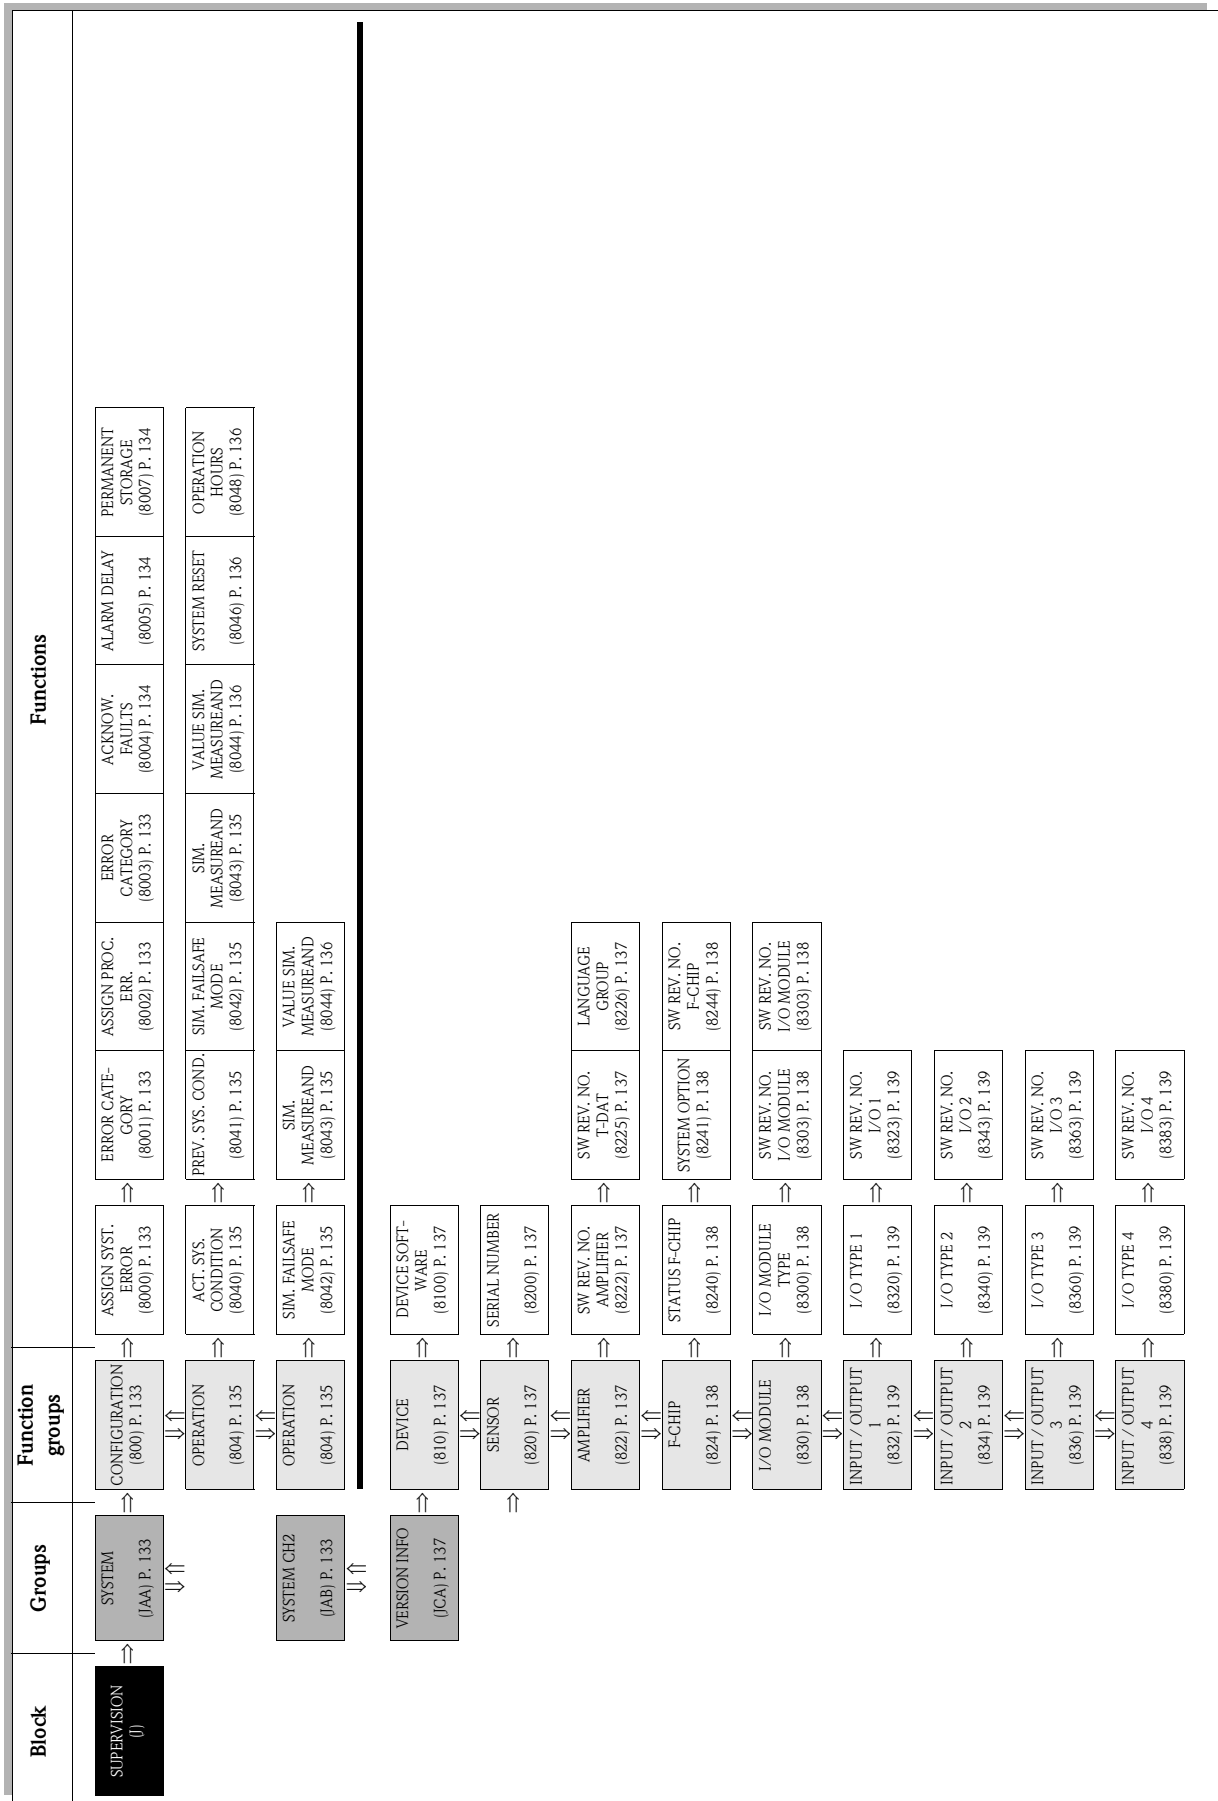

11 Block SUPERVISION





11.1 Group SYSTEM (SYSTEM CH2)


11.1.1 Function group CONFIGURATION






Functional description SUPERVISION → SYSTEM → CONFIGURATION	
ASSIGN SYSTEM ERROR (8000)	Use this function to view all system errors and the associated error categories (fault message or notice message). If you select a single system error you can change its error category. User interface: CANCEL List of system errors with an icon preceding each entry.  Note! <ul style="list-style-type: none"> ■ Press the □ key twice to call up the function ERROR CATEGORY (8001). ■ Use the □/□ key combination or select "CANCEL" in the system error list to exit the function. ■ A list of possible system errors is provided in the Operating Instructions Proline Prosonic Flow 93, BA070D/06/en/.
ERROR CATEGORY (8001)	Use this function to define whether a system error triggers a notice message or a fault message. If you select "FAULT MESSAGES", all outputs respond to an error in accordance with their defined error response patterns. Options: NOTICE MESSAGES (display only) FAULT MESSAGES (outputs and display)  Note! Press the □ key twice to call up the function ASSIGN SYSTEM ERROR (8000).
ASSIGN PROCESS ERROR (8002)	Use this function to view all process errors and the associated error categories (fault message or notice message). If you select a single process error you can change its error category. User interface: CANCEL List of process errors with an icon preceding each entry.  Note! <ul style="list-style-type: none"> ■ Press the □ key twice to call up the function ERROR CATEGORY (8003). ■ Use the □/□ key combination or select "CANCEL" in the process error list to exit the function. ■ A list of possible process errors is provided in the Operating Instructions Proline Prosonic Flow 93, BA070D/06/en/.
ERROR CATEGORY (8003)	Use this function to define whether a process error triggers a notice message or a fault message. If you select "FAULT MESSAGES", all outputs respond to an error in accordance with their defined error response patterns. Options: NOTICE MESSAGES (display only) FAULT MESSAGES (outputs and display)  Note! Press the □ key twice to call up the function ASSIGN PROCESS ERROR (8002).

Functional description SUPERVISION → SYSTEM → CONFIGURATION	
ACKNOWLEDGE FAULTS (8004)	<p>Use this function to define the measuring device's response to fault messages.</p> <p>Options: OFF The measuring device resumes normal operation when the fault is rectified. The fault message disappears automatically.</p> <p>ON The measuring device resumes normal operation when the fault is rectified. The fault message has to be acknowledged by pressing the  key on the local display.</p> <p>Factory setting: OFF</p>
ALARM DELAY (8005)	<p>Use this function to specify a time period for suppressing the appearance of fault or notice messages .</p> <p>Depending on the setting and the type of error, this suppression acts on:</p> <ul style="list-style-type: none"> ■ Display ■ Relay output ■ Current output ■ Frequency output <p>User input: 0...100 s (in steps of one second)</p> <p>Factory setting: 0 s</p> <p> Caution! If this function is activated, error and notice messages are delayed by the time corresponding to the setting before being forwarded to the higher-order controller (process controller, etc.). It is therefore imperative to check in advance in order to make sure whether a delay of this nature could affect the safety requirements of the process. If error and notice messages cannot be suppressed, a value of 0 seconds must be entered here.</p>
PERMANENT STORAGE (8007)	<p>This function displays wheter permanent storage of all parameters in the EEPROM is switched on or off.</p> <p>Options: OFF ON</p> <p>Factory setting: ON</p>

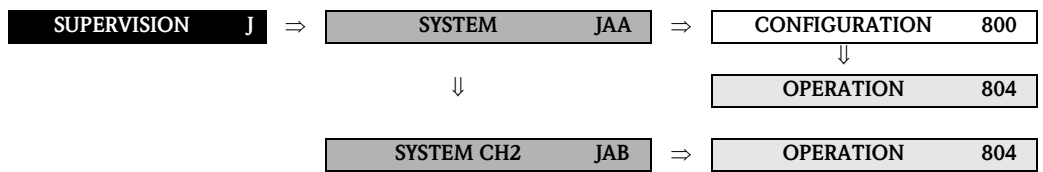11.1.2 Function group OPERATION




Functional description	
SUPERVISION → [CH2] SYSTEM → OPERATION	
ACTUAL SYSTEM CONDITION (8040)	<p>Use this function to check the present system condition.</p> <p>User interface: "SYSTEM OK" or the fault / notice message with the highest priority.</p>
PREVIOUS SYSTEM CONDITIONS (8041)	<p>Use this function to view the fifteen most recent error and notice messages since measuring last started.</p> <p>User interface: The last 15 fault/notice messages appear on the display.</p>
SIMULATION FAILSAFE MODE (8042)	<p> Note! This function is available in groups SYSTEM+SYSTEM CH2.</p> <p>Use this function to set all inputs, outputs and totalizers to their defined failsafe modes, in order to check whether they respond correctly. During this time, the words "SIMULATION FAILSAFE MODE" appear on the display.</p> <p>Options: ON OFF FAILURE (CH1...CH2)</p> <p>Factory setting: OFF</p> <p> Note! The option FAILURE (CH1...CH2) enables the channel specific simulation of a failure.</p>
SIMULATION MEASURAND (8043)	<p> Note! This function is available in groups SYSTEM+SYSTEM CH2.</p> <p>Use this function to set all inputs, outputs and totalizers to their defined flow-response modes, in order to check whether they respond correctly. During this time, the words "SIMULATION MEASURAND" appear on the display.</p> <p>Options: OFF VOLUME FLOW (CH1...CH2) SOUND VELOCITY (CH1...CH2) SIGNAL STRENGTH (CH1...CH2)</p> <p>Factory setting: OFF</p> <p> Caution! <ul style="list-style-type: none"> ■ The measuring device cannot be used for measuring while this simulation is in progress. ■ The setting is not saved if the power supply fails. </p>

Functional description	
SUPERVISION → [CH2] SYSTEM → OPERATION	
VALUE SIMULATION MEASURAND (8044)	<p> Note! This function is available in groups SYSTEM+SYSTEM CH2.</p> <p> Note! The function is not visible unless the function SIMULATION MEASURAND (8043) is active.</p> <p>Use this function to specify a selectable value (e.g. 12 m³/s). This is used to test the associated functions in the device itself and downstream signal loops.</p> <p>User input: 5-digit floating-point number, [unit]</p> <p>Factory setting: 0 [unit]</p> <p> Caution!</p> <ul style="list-style-type: none"> ■ The setting is not saved if the power supply fails. ■ The appropriate unit is taken from the function group SYSTEM UNITS (ACA), (see Page 13).
SYSTEM RESET (8046)	<p>Use this function to perform a reset of the measuring system.</p> <p>Options: NO RESTART SYSTEM (restart without interrupting power supply)</p> <p>Factory setting: NO</p>
OPERATION HOURS (8048)	<p>The hours of operation of the device appear on the display.</p> <p>Display: Depends on the number of hours of operation elapsed: Hours of operation < 10 hours → display format = 00:00:00 (hr:min:sec) Hours of operation 10...10,000 hours → display format = 0000:00 (hr:min) Hours of operation > 10,000 hours → display format = 000000 (hr)</p>


11.2 Group VERSION INFO

11.2.1 Function group DEVICE




Functional description	
SUPERVISION → VERSION INFO → DEVICE	
DEVICE SOFTWARE (8100)	Displays the current device software version.

11.2.2 Function group SENSOR

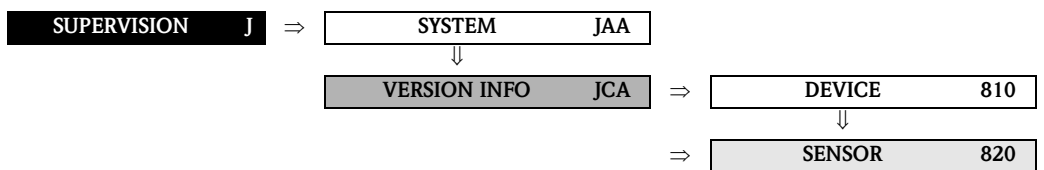


Functional description	
SUPERVISION → VERSION INFO → SENSOR	
SERIAL NUMBER (8200)	Use this function to view the serial number of the sensor.

11.2.3 Function group AMPLIFIER

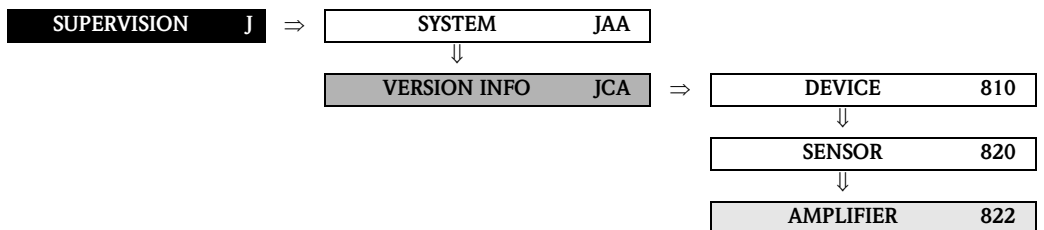


Functional description	
SUPERVISION → VERSION INFO → AMPLIFIER	
SOFTWARE REVISION NUMBER AMPLIFIER (8222)	Use this function to view the software revision number of the amplifier.
SOFTWARE REVISION NUMBER T-DAT (8225)	Use this function to view the software revision number of the software used to create the content of the T-DAT.
LANGUAGE GROUP (8226)	<p>Use this function to view the language group.</p> <p>The following language groups can be ordered: WEST EU / USA, EAST EU / SCAND., ASIA, CHINESE.</p> <p>Display: available language group</p> <p> Note!</p> <ul style="list-style-type: none"> The language options of the available language group are displayed in the LANGUAGE (2000) function. You can change the language group via the configuration software FieldCare. Please do not hesitate to contact your Endress+Hauser sales office if you have any questions.

11.2.4 Function group F-CHIP

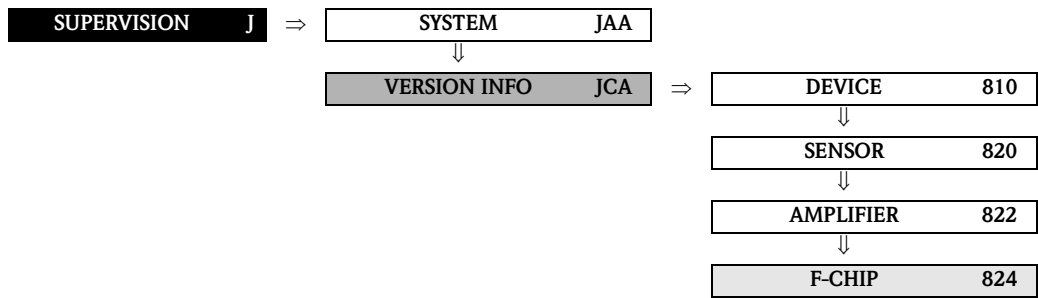


Functional description	
SUPERVISION → VERSION INFO → F-CHIP	
STATUS F-CHIP (8240)	Use this function to check whether an F-CHIP is installed.
SYSTEM OPTION (8241)	<p> Note! This function is not available unless the measuring device is equipped an F-CHIP.</p> <p>Use this function to check which system option is installed.</p>
SOFTWARE REVISION NUMBER F-CHIP (8244)	<p> Note! This function is not available unless the measuring device is equipped an F-CHIP.</p> <p>Use this function to view the software revision number of the F-CHIP.</p>

11.2.5 Function group I/O MODULE

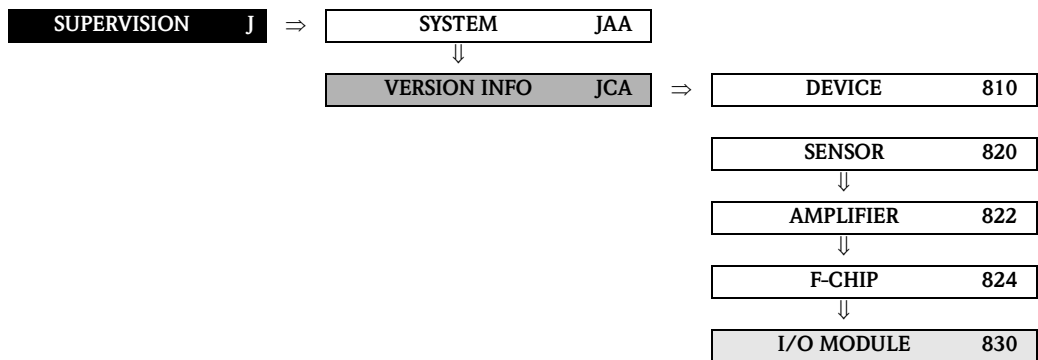

Functional description	
SUPERVISION → VERSION INFO → I/O MODULE	
I/O MODULE TYPE (8300)	Use this function to view the configuration of the I/O module complete with terminal numbers.
SOFTWARE REVISION NUMBER I/O MODULE (8303)	Use this function to view the software revision number of the I/O module.

11.2.6 Function groups INPUT /OUTPUT 1...4

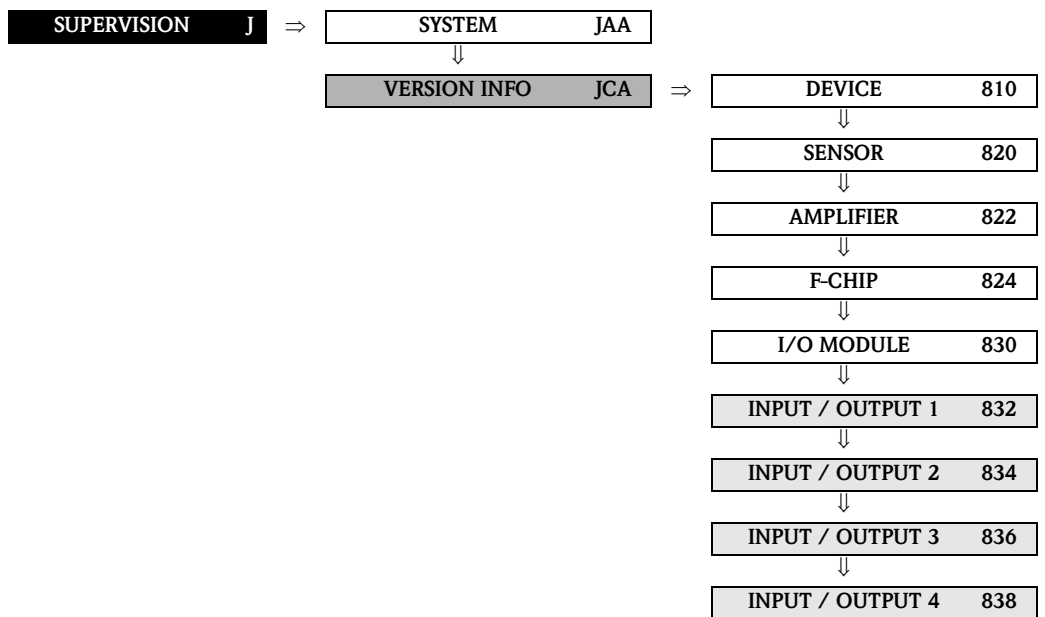

Functional description	
SUPERVISION → VERSION INFO → INPUT / OUTPUT 1...4	
TYPE INPUT/OUTPUT: 1 = (8320) 2 = (8340) 3 = (8360) 4 = (8380)	Use this function to view the assembly of the I/O sub-module.
SOFTWARE REVISION NUMBER I/O SUB-MODULE: 1 = (8323) 2 = (8343) 3 = (8363) 4 = (8383)	Use this function to view the software revision number of the I/O sub-module.

12 Factory settings

12.1 SI units

Parameter	Factory setting
Nominal diameter	80 [mm]
Low flow cut off ($v \approx 0,04$ m/s)	12 [dm ³ /min]
Full scale value ($v \approx 2,5$ m/s)	750 [dm ³ /min]
Pulse value	5.0 [dm ³]
Unit totalizer	dm ³
Unit length	mm
Unit temperature	° C

12.2 US units (for USA and Canada only)

Parameter	Factory setting
Nominal diameter	3"
Low flow cut off ($v \approx 0,04$ m/s)	2.5 [gal/min]
Full scale value ($v \approx 2,5$ m/s)	200 [gal/min]
Pulse value	2.0 [gal]
Unit totalizer	gal
Unit length	mm
Unit temperature	° C

12.3 Language

Country	Language
Australia	English
Austria	Deutsch
Belgium	English
Canada	English
China	Chinese
Czech Republic	Czech
Denmark	English
England	English
Finland	Suomi
France	Francais
Germany	Deutsch
Hong Kong	English
Hungary	English
India	English
Indonesia	Bahasa Indonesia
Instruments International	English
Italy	Italiano
Japan	Japanese
Malaysia	English
Netherlands	Nederlands
Norway	Norsk
Poland	Polish
Portugal	Portuguese
Russia	Russian
Singapore	English
South Africa	English
Spain	Espanol
Sweden	Svenska
Switzerland	Deutsch
Thailand	English
USA	English

13 Index function matrix

Blocks

A = MEASURED VARIABLES 9
 B = QUICK SETUP 17
 C = USER INTERFACE 25
 D = TOTALIZER 42
 E = OUTPUT 47
 F = INPUT 94
 G = BASIC FUNCTION 97
 H = SPECIAL FUNCTION 119
 J = SUPERVISION 132

Groups

AAA = MEASURING VALUES 10
 ACA = SYSTEM UNITS 13
 AEA = SPECIAL UNITS 16
 CAA = CONTROL 26
 CCA = MAIN LINE 30
 CEA = ADDITIONAL LINE 34
 CGA = INFORMATION LINE 38
 DAA, DAB, DAC = TOTALIZER (1...3) 43
 DJA = HANDLING TOTALIZER 46
 EAA, EAB, EAC = CURRENT OUTPUT (1...3) 48
 EGA, ECB = PULSE/FREQ. OUTPUT (1...2) 59
 EGA, EGB = STATUS/RELAY OUTPUT (1...2) 85
 FAA = STATUS INPUT 95
 GAA = HART 98
 GIA, GIB = PROCESS PARAMETER (CH1...CH2) 100
 GLA, GLB = SYSTEM PARAMETER (CH1...CH2) 111
 GNA, GNB = SENSOR DATA (CH1...CH2) 112
 HEA,HEB,HEC = ADV. DIAG. (CH1,CH2,AVG) 120
 JAA = SYSTEM 133
 JAB = SYSTEM CH2 135
 JCA = VERSION INFO 137

Function groups

000 = MAIN VALUES CH1 10
 006 = MAIN VALUES CH2 11
 008 = CALCULATED MAIN VALUES 12
 040 = CONFIGURATION 13
 042 = ADDITIONAL CONFIGURATION 15
 060 = ARBITRARY UNIT 16
 200 = BASIC CONFIGURATION 26
 202 = UNLOCKING/LOCKING 28
 204 = OPERATION 29
 220 = CONFIGURATION 30
 222 = MULTIPLEX 32
 240 = CONFIGURATION 34
 242 = MULTIPLEX 36
 260 = CONFIGURATION 38
 262 = MULTIPLEX 40
 300 = CONFIGURATION 43
 304 = OPERATION 45
 400 = CONFIGURATION 48
 404 = OPERATION 57
 408 = INFORMATION 58
 420 = CONFIGURATION 59

430 = OPERATION 80
 438 = INFORMATION 84
 470 = CONFIGURATION 85
 474 = OPERATION 89
 478 = INFORMATION 91
 500 = CONFIGURATION 95
 504 = OPERATION 96
 508 = INFORMATION 96
 600 = CONFIGURATION 98
 604 = INFORMATION 99
 640 = CONFIGURATION 100
 648 = ADJUSTMENT 102
 652 = PIPE DATA 103
 654 = LIQUID DATA 108
 660 = CONFIGURATION 111
 680 = EINSTELLUNGEN 112
 688 = SENSOR PARAMATER 113
 689 = CALIBRATION DATA 116
 760 = CONFIGURATION 120
 761 = ACQUISITION 122
 763 = VOLUME FLOW 123
 764 = FLOW VELOCITY 124
 765 = SIGNAL STRENGTH 125
 766 = SOUND VELOCITY 126
 767 = ACTUAL TRANSITION TIME 128
 768 = ACCEPTANCE RATE 130
 800 = CONFIGURATION 133
 804 = OPERATION 135
 820 = AUFNEHMER 137
 820 = SENSOR 137
 822 = AMPLIFIER 137
 824 = F-CHIP 138
 830 = I/O MODULE 138
 832 = INPUT/OUTPUT 1 139
 834 = INPUT/OUTPUT 2 139
 836 = INPUT/OUTPUT 3 139
 838 = INPUT/OUTPUT 4 139

Functions 0...

0001 = VOLUME FLOW CH1 10
 0002 = SOUND VELOCITY CH1 10
 0003 = FLOW VELOCITY CH1 10
 0007 = SIGNAL STRENGTH CH1 10
 0061 = VOLUME FLOW CH2 11
 0062 = SOUND VELOCITY CH2 11
 0063 = FLOW VELOCITY CH2 11
 0067 = SIGNAL STRENGTH CH2 11
 0083 = AVERAGE VOLUME FLOW 12
 0084 = VOLUME FLOW SUM 12
 0085 = VOLUME FLOW DIFFERENCE 12
 0086 = AVERAGE SOUND VELOCITY 12
 0087 = AVERAGE FLOW VELOCITY 12
 0402 = UNIT VOLUME FLOW 13
 0403 = UNIT VOLUME 14
 0422 = UNIT TEMPERATURE 15
 0423 = UNIT VISCOSITY 15
 0424 = UNIT LENGTH 15
 0425 = UNIT VELOCITY 15
 0602 = TEXT ARBITRARY VOLUME 16

0603 = FACTOR ARBITRARY VOLUME	16	4041 = SIMULATION CURRENT	57
1...		4042 = VALUE SIMULATION CURRENT	57
1001 = QUICK SETUP SENSOR	17	4080 = TERMINAL NUMBER	58
1002 = QUICK SETUP COMMISSIONING	17	4200 = OPERATION MODE	59
1003 = QUICK SETUP PULSATING FLOW	17	4201 = ASSIGN FREQUENCY	59
1009 = T-DAT SAVE/LOAD	18	4202 = START VALUE FREQUENCY	60
2...		4203 = END VALUE FREQUENCY	60
2000 = LANGUAGE	26	4204 = VALUE-F LOW	61
2002 = DISPLAY DAMPING	26	4205 = VALUE-F HIGH	61
2003 = CONTRAST LCD	27	4206 = MEASURING MODE	63
2004 = X-LINE CALCULATED MAIN VALUES	27	4207 = OUTPUT SIGNAL	65
2020 = ACCESS CODE	28	4208 = TIME CONSTANT	67
2021 = DEFINE PRIVATE CODE	28	4209 = FAILSAFE MODE	68
2022 = STATUS ACCESS	28	4211 = FAILSAFE VALUE	68
2040 = TEST DISPLAY	29	4221 = ASSIGN PULSE	69
2200 = ASSIGN	30	4222 = PULSE VALUE	69
2201 = 100% VALUE	31	4223 = PULSE WIDTH	70
2202 = FORMAT	31	4225 = MEASURING MODE	71
2220 = ASSIGN	32	4226 = OUTPUT SIGNAL	72
2221 = 100% VALUE	32	4227 = FAILSAFE MODE	75
2222 = FORMAT	33	4241 = ASSIGN STATUS	76
2400 = ASSIGN	34	4242 = ON-VALUE	77
2401 = 100% VALUE	35	4243 = SWITCH-ON DELAY	77
2402 = FORMAT	35	4244 = OFF-VALUE	77
2403 = DISPLAY MODE	35	4245 = SWITCH-OFF DELAY	78
2420 = ASSIGN	36	4246 = MEASURING MODE	78
2421 = 100% VALUE	37	4247 = TIME CONSTANT	79
2422 = FORMAT	37	4301 = ACTUAL FREQUENCY	80
2423 = DISPLAY MODE	37	4302 = SIMULATION FREQUENCY	80
2600 = ASSIGN	38	4303 = VALUE SIMULATION FREQUENCY	81
2601 = 100% VALUE	39	4341 = ACTUAL STATUS	83
2602 = FORMAT	39	4342 = SIMULATION SWITCH POINT	83
2603 = DISPLAY MODE	39	4343 = VALUE SIMULATION SWITCH POINT	83
2620 = ASSIGN	40	4380 = TERMINAL NUMBER	84
2621 = 100% VALUE	41	4700 = ASSIGN RELAY	85
2622 = FORMAT	41	4701 = ON-VALUE	86
2623 = DISPLAY MODE	41	4702 = SWITCH-ON DELAY	87
4700 = ASSIGN RELAY	86	4703 = OFF-VALUE	87
3...		4704 = SWITCH-OFF DELAY	87
3000 = ASSIGN	43	4705 = MEASURING MODE	88
3001 = UNIT TOTALIZER	43	4706 = TIME CONSTANT	88
3002 = TOTALIZER MODE	44	4740 = ACTUAL STATUS RELAY	89
3003 = RESET TOTALIZER	44	4741 = SIMULATION SWITCH POINT	89
3040 = SUM	45	4742 = VALUE SIMULATION SWITCH POINT	90
3041 = OVERFLOW	45	4780 = TERMINAL NUMBER	91
3800 = RESET ALL TOTALIZERS	46	5...	
3801 = FAILSAFE ALL TOTALIZERS	46	5000 = ASSIGN STATUS INPUT	95
4...		5001 = ACTIVE LEVEL	95
4000 = ASSIGN CURRENT OUTPUT	48	5002 = MINIMUM PULSE WIDTH	95
4001 = CURRENT SPAN	49	5040 = ACTUAL STATUS INPUT	96
4002 = VALUE 0_4 mA	50,51	5041 = SIMULATION STATUS INPUT	96
4003 = VALUE 20 mA	52	5042 = VALUE SIMULATION STATUS INPUT	96
4004 = MEASURING MODE	53,54	5080 = TERMINAL NUMBER	96
4005 = TIME CONSTANT	55	6...	
4006 = FAILSAFE MODE	56	6000 = TAG NAME	98
4040 = ACTUAL CURRENT	57	6001 = TAG DESCRIPTION	98
		6002 = BUS ADDRESS	98

6003 = HART PROTOCOL	98	7630 = REFERENCE VALUE (Volume flow)	123
6004 = WRITE PROTECTION	98	7631 = ACTUAL VALUE (Volume flow)	123
6040 = MANUFACTURER ID.	99	7632 = MINIMUM VALUE (Volume flow)	123
6041 = DEVICE ID.	99	7633 = MAXIMUM VALUE (Volume flow)	123
6042 = DEVICE REVISION.	99	7634 = HISTORY X (Volume flow)	123
6400 = ASSIGN LOW FLOW CUT OFF	100	7635 = ACTUAL DEVIATION (Volume flow)	123
6402 = ON-VALUE LOW FLOW CUT OFF.	100	7636 = WARNING LEVEL(Volume flow).	123
6403 = OFF-VALUE LOW FLOW CUT OFF	100	7640 = REFERENCE VALUE (Flow velocity)	124
6404 = PRESSURE SHOCK SUPPRESSION	101	7641 = ACTUAL VALUE (Flow velocity)	124
6480 = ZEROPOINT ADJUSTMENT.	102	7642 = MINIMUM VALUE (Flow velocity)	124
6520 = STANDARD PIPE	103	7643 = MAXIMUM VALUE (Flow velocity)	124
6521 = NOMINAL DIAMETER.	104	7644 = HISTORY X (Flow velocity)	124
6522 = PIPE MATERIAL.	104	7645 = ACTUAL DEVIATION (Flow velocity)	124
6523 = REFERENCE VALUE.	104	7646 = WARNING LEVEL (Flow velocity)	124
6524 = SOUND VELOCITY PIPE	105	7650 = REFERENCE VALUE (Signal strength)	125
6525 = CIRCUMFERENCE.	105	7651 = ACTUAL VALUE (Signal strength)	125
6526 = PIPE DIAMETER	105	7652 = MINIMUM VALUE (Signal strength)	125
6527 = WALL THICKNESS.	106	7653 = MAXIMUM VALUE (Signal strength).	125
6528 = LINER MATERIAL	106	7654 = HISTORY X (Signal strength)	125
6529 = SOUND VELOCITY LINER.	107	7655 = ACTUAL DEVIATION (Signal strength)	125
6530 = LINER THICKNESS	107	7656 = WARNING LEVEL (Signal strength)	125
6540 = LIQUID	108	7660 = REFERENCE VALUE (Sound velocity)	126
6541 = TEMPERATURE	108	7661 = ACTUAL VALUE (Sound velocity)	126
6542 = SOUND VELOCITY LIQUID.	109	7662 = MINIMUM VALUE (Sound velocity)	126
6543 = VISCOSITY.	109	7663 = MAXIMUM VALUE (Sound velocity).	126
6545 = SOUND VELOCITY NEGATIVE	110	7664 = HISTORY X (Sound velocity)	126
6546 = SOUND VELOCITY POSITIVE	110	7665 = ACTUAL DEVIATION (Sound velocity)	126
6600 = INSTALLATION DIRECTION SENSOR.	111	7666 = WARNING LEVEL (Sound velocity)	127
6603 = FLOW DAMPING.	111	7670 = REFERENCE VALUE (Act. transit time)	128
6605 = POSITIVE ZERO RETURN	111	7671 = ACTUAL VALUE (Act. transit time)	128
6800 = K-FAKTOR	112	7672 = MINIMUM VALUE (Act. transit time)	128
6803 = NULLPUNKT	112	7673 = MAXIMUM VALUE (Act. transit time).	128
6808 = KALIBRIERDATUM	112	7674 = HISTORY X (Act. transit time)	128
6880 = MEASUREMENT	113	7675 = ACTUAL DEVIATION (Act. transit time)	128
6881 = SENSOR TYPE	113	7676 = WARNING LEVEL (Act. transit time).	129
6882 = SENSOR CONFIGURATION.	114	7680 = REFERENCE VALUE (Acceptance rate)	130
6883 = CABLE LENGTH	114	7681 = ACTUAL VALUE (Acceptance rate)	130
6884 = POSITION SENSOR	115	7682 = MINIMUM VALUE (Acceptance rate)	130
6885 = WIRE LENGTH	115	7683 = MAXIMUM VALUE (Acceptance rate).	130
6886 = SENSOR DISTANCE.	115	7684 = HISTORY X (Acceptance rate)	130
6887 = ARC LENGTH	115	7685 = ACTUAL DEVIATION (Acceptance rate)	131
6888 = PATH LENGTH	115	7686 = WARNING LEVEL (Acceptance rate)	131
6890 = P-FACTOR	116		
6891 = ZERO POINT	116	8...	
6893 = CORRECTION FACTOR.	116	8000 = ASSIGN SYSTEM ERROR	133
6894 = DEVIATION SENSOR SPACING.	116	8001 = ERROR CATEGORY	133
6895 = DEVIATION ARC LENGTH	117	8002 = ASSIGN PROCESS ERROR	133
6896 = DEVIATION PATH LENGTH	117	8003 = ERROR CATEGORY	133
6910 = KALIBRIERDATUM	118	8004 = ACKNOWLEDGE FAULTS	134
681 = ORIG. WERKSKALIBRIER.	118	8005 = ALARM DELAY.	134
		8007 = PERMANENT STORAGE	134
7...		8040 = CURRENT SYSTEM CONDITION.	135
7601 = REFERENCE CONDITION USER	120	8041 = PREVIOUS SYSTEM CONDITIONS.	135
7602 = SELECT REFERENCE CONDITION	120	8042 = SIMULATION FAILSAFE MODE.	135
7603 = WARNING MODE	121	8043 = SIMULATION MEASURAND	135
7610 = ACQUISITION MODE	122	8044 = VALUE SIMULATION MEASURAND	136
7611 = ACQUISITION PERIODE	122	8046 = SYSTEM RESET	136
7612 = DO ACQUISITION	122	8100 = DEVICE SOFTWARE.	137
7613 = RESET HISTORY.	122	8200 = SERIAL NUMBER	137

8222 = SOFTWARE REVISION NUMBER	
AMPLIFIER	137
8225 = SOFTWARE REVISION NUMBER T-DAT	137
8240 = STATUS F-CHIP	138
8244 = SOFTWARE REVISION NUMBER F-CHIP	138
8300 = I/O MODULE TYPE	138

8303 = SOFTWARE REVISION NUMBER	
I/O MODULE	138
8320 = TYPE INPUT/OUTPUT 1	139
8340 = TYPE INPUT/OUTPUT 2	139
8360 = TYPE INPUT/OUTPUT 3	139
8380 = TYPE INPUT/OUTPUT 4	139

14 Index key words

A

Acceptance rate	130
Access code	28
Acknowledge faults	134
Acquisition	
Function group (Adv. diagnostics)	122
Mode	122
Periode	122
Single shot	122
Active level	95
Actual	
Current (current output)	57
Frequency	80
Actual deviation	
Acceptance rate (Advanced diagnostics)	131
Actual transit time (Adv. diagnostics)	128
Flow velocity (Advanced diagnostics)	124
Signal strength (Advanced diagnostics)	125
Sound velocity (Advanced diagnostics)	126
Volume flow(Advanced diagnostics)	123
Actual status	
Relay output	89
Status input	96
Status (pulse/frequency output)	83
Actual system condition	135
Actual transit time	128
Actual value	
Acceptance rate (Advanced diagnostics)	130
Act. transit time (Advanced diagnostics)	128
Flow velocity (Advanced diagnostics)	124
Signal strength (Advanced diagnostics)	125
Sound velocity (Advanced diagnostics)	126
Volume flow (Advanced diagnostics)	123
Additional configuration (system units)	15
Additional line (group CEA)	
Configuration	34
Additional line (Gruppe CEA)	
Multiplex	36
Adjustment	
Function group	102
Zero point	102
Advanced diagnostics (Group HEA,HEB)	
Acceptance rate	130
Actual transit time	128
Signal strength	125
Advanced diagnostics (Group HEA,HEB,HEC)	
Acquisition (Function group)	122
Configuration	120
Flow velocity	124
Sound velocity	126
Volume flow	123
Alarm delay	134
Amplifier (version info)	137
Arbitrary unit	16
Assign	
Additional line	34
Additional line (Multiplex)	36

Current output	48
Frequency (Pulse/freq. output)	59
Information line	38
Information line (Multiplex)	40
Low flow cut off	100
Main line	30
Main line (Multiplex)	32
Process error	133
Pulse output	69
Relay (relay output)	85
Status input	95
Status (pulse/frequency output)	76
System error	133
Totalizer	43
Aufnehmer (Version-Info)	137
Average flow velocity	12
Average sound velocity	12
Average volume flow	12
B	
Basic configuration (user interface)	26
Basic function (block G)	97
Block	
Basic functions	97
Inputs	94
Measured variables	9
Outputs	47
Quick Setup	17
Special function	119
Supervision	132
Totalizer	42
User interface	25
Bus address	98
C	
Calculated main values (displaying)	27
Calibration data	
Arc length deviation	117
Correction factor	116
Path length deviation	117
Sensor data	116
Sensor spacing deviation	116
Zero Point	116
Circumference (Pipe)	105
Configuration	
Additional line	34
Advanced diagnostics	120
Current output (1...3)	48
HART	98
Information line	38
Main line	30
Process parameter (CH1...CH2)	100
Pulse/frequency output	59
Relay output	85
Sensor data (CH1...CH2)	112
Status input	95
System	133
System parameter (CH1...CH2)	111
System units	13

Totalizer (1...3)	43
Contrast LCD	27
Control (group CAA)	
Basic configuration	26
Operation	29
Unlocking/locking	28
Correction factor	116
Current output 1...3 (Group EAA-EAC)	
Configuration	48
Information	58
Operation	57
Current span	49
D	
Define private code	28
Deviation	
Arc length	117
Path length	117
Sensor spacing	116
Device ID	99
Device Revision	99
Device software	137
Diagram	
Quick Setup Commissioning	21
Quick Setup Pulsating flow	23
Quick Setup Sensor	19
Diameter (Pipe)	105
Difference	
Volume flow	12
Display	
Calculated main values	27
Display damping	26
Display mode	
Additional line	35
Additional line (Multiplex)	37
Information Line	39
Information line (Multiplex)	41
E	
End value frequency	60
Error category	
Process error	133
System error	133
F	
Factor volume unit	16
Failsafe mode	
All totalizers	46
Current output	56
Frequency output	68
Pulse output	75
F-CHIP (version info)	138
Flow damping	111
Flow direction	
see Installation direction sensor	
Flow velocity	
Advanced diagnostics	124
Channel 1	10

Channel 2	11
Format	
Additional line	35
Additional line (Multiplex)	37
Date/Time	15
Information line	39
Information line (Multiplex)	41
Main line	31
Main line (Multiplex)	33
Function group	
Acceptance rate	130
Acquisition	122
Actual transit time	128
Additional configuration (system units)	15
Adjustment	102
Amplifier	137
Arbitrary unit (special units)	16
Basic configuration (user interface)	26
Calculated main values	12
Configuration	
Additional line	34
Advanced diagnostics	120
Calibration data	116
Current output (1...3)	48
HART	98
Information line	38
Main line	30
Process parameter (CH1...CH2)	100
Pulse/freq. output	59
Relay output	85
Sensor data (CH1...CH2)	112
Sensor parameter	113
Status input	95
System	133
System parameter (CH1...CH2)	111
System units	13
Totalizer (1...3)	43
F-CHIP	138
Flow velocity	124
Information	
Current output	58
HART	99
Pulse/Frequency output	84
Relay output	91
Status input	96
Input/output (1...4)	139
I/O Module	138
Liquid data	108
Measuring values	
Main values CH1	10
Main values CH2	11
Multiplex	
Additional line	36
Information line	40
Main line	32

Operation

- Current output 57
- Pulse/frequency output 80
- Relay output 89
- Status input 96
- System 135
- Totalizer 45
- User interface 29

Orig. Werkskalibrierung

- Sensor data (CH1...CH2) 118

Pipe data 103

Sensor 137

Signal strength 125

Sound velocity 126

Unlocking/locking (user interface) 28

Volume flow (Adv. diagnostics) 123

Function matrix

- General layout 6
- Identification code 7
- Overview 8

Funktionsgruppe

- Aufnehmer 137

G

Group

- Additional line 34
- Advanced Diagnostics 120
- Control (User interface) 26
- Current output 48
- Handling Totalizer 46
- HART 98
- Information line 38
- Main line 30
- Measuring values 10
- Process parameter (CH1...CH2) 100
- Pulse/frequency output 59
- Relay output 85
- Sensor data (CH1...CH2) 112
- Special units 16
- Status input 95
- System 133
- System parameter (CH1...CH2) 111
- System units 13
- Totalizer (1...3) 43
- Version info 137

H

Handling Totalizer (group DJA) 46

HART (group GAA)

- Configuration 98
- Information 99

History

- Acceptance rate (Advanced Diagnostics) 130
- Actual transit time (Advanced Diagnostics) 128
- Flow velocity (Advanced Diagnostics) 124
- Signal strength (Advanced Diagnostics) 125
- Sound velocity (Advanced Diagnostics) 126
- Volume flow (Advanced Diagnostics) 123

I

Information

- Current output 58
- Pulse/frequency output 84
- Relay output 91
- Status input 96

Information line (group CGA)

- Configuration 38
- Multiplex 40

Inputs (block F) 94

Input/Output 1...4 139

Installation direction sensor 111

I/O Module 138

K

Kalibrierdatum 112,118

K-Faktor 112

L

Language 26

Liner

- Material 106
- Sound velocity 107
- Thickness 107

Liquid

- Sound velocity 109
- Sound velocity negative 110
- Sound velocity positive 110

Liquid data (function group) 108

Low flow cut off 100

M

Main line (group CCA)

- Configuration 30
- Multiplex 32

Manufacturer number 99

Maximum value

- Acceptance rate (Advanced Diagnostics) 130
- Actual transit time (Advanced Diagnostics) 128
- Flow velocity (Advanced Diagnostics) 124
- Signal strength (Advanced Diagnostics) 125
- Sound velocity (Advanced Diagnostics) 126
- Volume flow (Advanced Diagnostics) 123

Measured variables (block A) 9

Measurement 113

Measuring mode

- Current output 53
- Frequency (Pulse/freq. output) 63,64
- Pulse output 71
- Relay output 88
- Status (pulse/frequency output) 78

Measuring values

- Calculated main values 12
- Main values CH1 10
- Main values CH2 11

Measuring values (group AAA) 10

Minimum pulse width 95

Minimum value

- Acceptance rate (Advanced Diagnostics) 130

Actual transit time (Advanced Diagnostics)	128	Pipe data	103
Flow velocity (Advanced Diagnostics)	124	Temperature	108
Signal strength (Advanced Diagnostics)	125	Pulsating flow	17
Sound velocity (Advanced Diagnostics)	126	Pulse value	69
Volume flow (Advanced Diagnostics)	123	Pulse width	70
Multiplex		Pulse/Frequency output (group ECA)	
Additional line	36	Configuration	59
Information line	40	Information	84
Main line	32	Operation	80
N		Q	
Nominal diameter	104	Quick Setup (Block B)	
Nullpunkt	112	Commissioning	21
O		Overview	17
Off-value		Pulsating flow	23
Low flow cut off	100	Sensor	19
Relay output	87	R	
Status (pulse/frequency output)	77	Reference condition user	120
On-value		Reference value	
Relay output	86	Acceptance rate (Advanced diagnostics)	130
Status (pulse/frequency output)	77	Actual transit time (Advanced diagnostics)	128
Operation		Flow velocity (Advanced diagnostics)	124
Current output	57	Signal strength (Advanced diagnostics)	125
Pulse/frequency output	80	Sound velocity (Advanced diagnostics)	126
Relay output	89	Volume flow (Advanced diagnostics)	123
Status input	96	Relay output (group EGA)	
System	135	Configuration	85
Totalizer	45	Flow direction	92
User interface	29	General	92
Operation mode		Information	91
Pulse/frequency output	59	Limit value	92
Orig. Werkskalibrierung		Operation	89
Sensor data (CH1...CH2)	118	Reset	
Output signal		All Totalizers	46
Frequency output	64,65	Historie	122
Pulse output	72	Totalizer	44
Outputs (block E)	47	S	
Overflow		Select reference condition	120
Totalizer	45	Sensor configuration	114
P		Sensor data (group GNA, GNB)	
Path length deviation	117	Configuration	112
Permanent storage	134	Sensor configuration	114
P-factor	116	Sensor type	113
Pipe circumference	105	Sensor parameter	113
Pipe data	103	Sensor type	113
Sound velocity liquid	109	Sensor (version info)	137
Sound velocity negative	110	Serial number sensor	137
Sound velocity positive	110	Signal strength	125
Pipe diameter	105	Channel 1	10
Pipe material	104	Channel 2	11
Positive zero return	111	Simulation	
Pressure shock suppression	101	Current (current output)	57
Previous system conditions	135	Failsafe mode	135
Process parameter (CH1...CH2), (Group GIA, GIB)		Frequency	80
Adjustment	102	Measured variable	135
Configuration	100	Relay output switch point	89
Fluid	108	Status input	96
Liquid data	108	Status (pulse/frequency output)	83

Software revision number		Current output.	55
Amplifier	137	Frequency output.	67
F-CHIP	138	Relay output.	88
I/O Module.	138	Status (pulse/frequency output)	79
T-DAT.	137	Totalizer Mode	44
Sound velocity	126	Totalizer Reset.	44
Channel 1	10	Totalizer (block D).	42
Channel 2	11	Totalizer 1...3 (Group DAA-DAC)	
Liner	107	Configuration.	43
Liquid	109	Operation.	45
Negative	110	Type	
Pipe.	104,105	Input/Output 1...4.	139
Positive	110	I/O Module.	138
Special function(Block H)	119	U	
Special units (group AEA)		Unit	
Arbitrary unit.	16	Length	15
Standard pipe	103	Temperature	15
Start value frequency.	60	Totalizer	43
Status access	28	Velocity	15
Status F-CHIP.	138	Viscosity	15
Status input (group FAA)		Volume	14
Configuration	95	Volume flow	13
Information	96	Unlocking/locking (user interface)	28
Operation	96	User interface (block C)	25
Sum		V	
Totalizer	45	Value	
Supervision (Block J)	132	Failsafe level.	68
Switching action of the relay output.	92	Value simulation	
Switch-off delay		Current (current output)	57
Relay output	87	Frequency	81
Status (pulse/frequency output)	78	Measured variable	136
Switch-on delay		Relay output switch point.	90
Relay output	87	Status input	96
Status (pulse/frequency output)	77	Status (pulse/frequency output)	83
System condition		Value 0_4 mA	50
Actual	135	Value 20 mA	52
Previous	135	Value-f high.	61
System parameter (Group GLA, GLB)		Value-f low	61
Configuration	111	Version-Info (group JCA)	
System units (group ACA)		Amplifier	137
Additional configuration.	15	F-CHIP	138
Configuration	13	Input/output 1...4	139
System (group JAA)		I/O Module.	138
Configuration	133	Sensor	137
Operation	135	Viscosity	109
Reset	136	Volume flow	
T		Advanced diagnostics	123
Tag description	98	Average	12
Tag name	98	Channel 1	10
T-DAT Save/Load.	18	Channel 2	11
Terminal number		Difference	12
Current output	58	Sum.	12
Pulse/Frequency output.	84	W	
Relay output	91	Wall thickness	106
Status input	96	Warning level	
Test display.	29	Acceptance rate (Advanced diagnostics)	131
Text volume unit	16	Actual transit time (Advanced diagnostics)	129
Time constant			

Flow velocity (Advanced diagnostics)	124
Signal strength (Advanced diagnostics)	125
Sound velocity (Advanced diagnostics)	127
Volume flow (Advanced diagnostics)	123
Warning mode	121
Write protection	98

Z

Zero Point	116
Zero point adjustment	102

Numerics

0_4 mA value	50
100% value flow	
Additional line	35
Additional line (Multiplex)	37
Information line	39
Information line (Multiplex)	41
Main line	31
Main line (Multiplex)	32
20 mA value	52

www.endress.com/worldwide

Endress + Hauser 
People for Process Automation