



Operating Instructions

Levelflex FMP55

HART

Guided wave radar

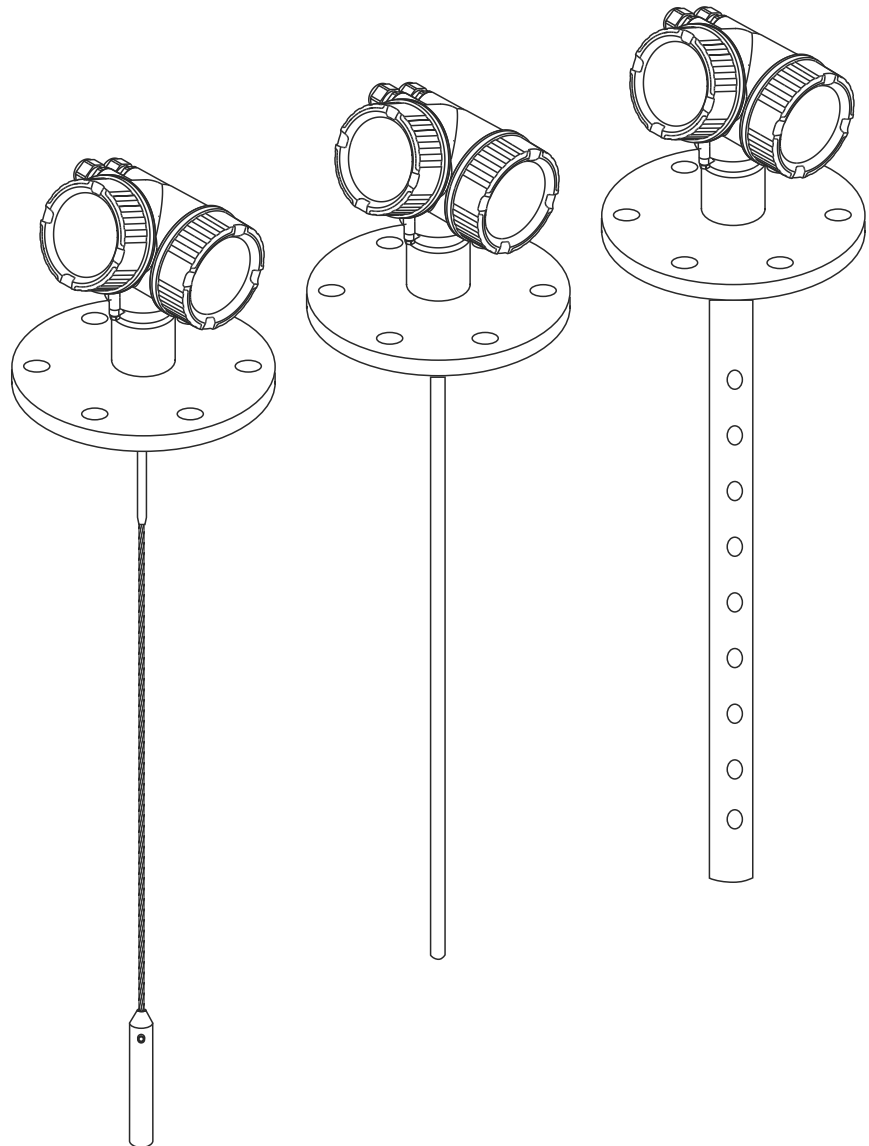

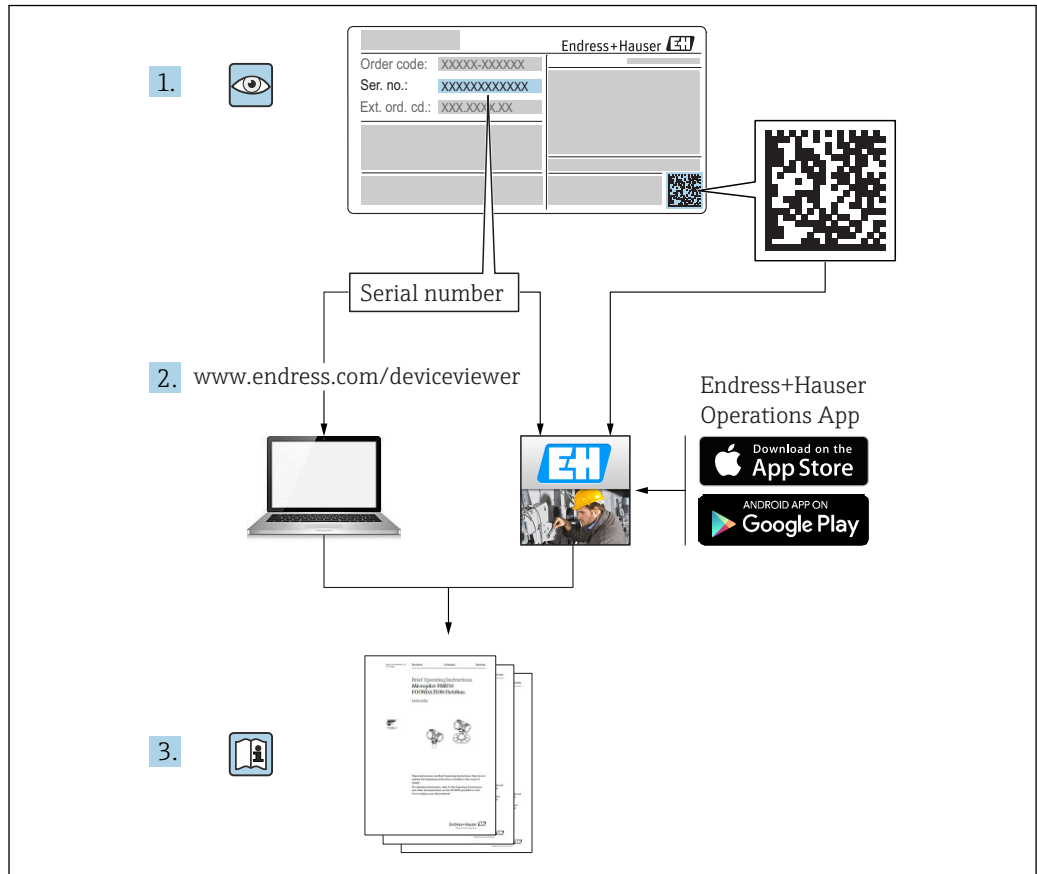

A0023555

Table of contents

| | | | | |
|----------|--|-----------|--|--|
| 1 | Important document information | 5 | | |
| 1.1 | Document function | 5 | | |
| 1.2 | Symbols | 5 | | |
| 1.2.1 | Safety symbols | 5 | | |
| 1.2.2 | Electrical symbols | 5 | | |
| 1.2.3 | Tool symbols | 6 | | |
| 1.2.4 | Symbols for certain types of information | 6 | | |
| 1.2.5 | Symbols in graphics | 6 | | |
| 1.2.6 | Symbols at the device | 7 | | |
| 1.3 | Supplementary documentation | 8 | | |
| 1.3.1 | Safety Instructions (XA) | 9 | | |
| 2 | Basic safety instructions | 12 | | |
| 2.1 | Requirements for the personnel | 12 | | |
| 2.2 | Designated use | 12 | | |
| 2.3 | Workplace safety | 13 | | |
| 2.4 | Operational safety | 13 | | |
| 2.5 | Product safety | 13 | | |
| 2.5.1 | CE mark | 13 | | |
| 2.5.2 | EAC conformity | 13 | | |
| 3 | Product description | 14 | | |
| 3.1 | Product design | 14 | | |
| 3.1.1 | Levelflex FMP51/FMP52/FMP54/ FMP55 | 14 | | |
| 3.1.2 | Electronics housing | 15 | | |
| 3.2 | Registered trademarks | 16 | | |
| 4 | Incoming acceptance and product identification | 17 | | |
| 4.1 | Incoming acceptance | 17 | | |
| 4.2 | Product identification | 17 | | |
| 4.2.1 | Nameplate | 18 | | |
| 5 | Storage, Transport | 19 | | |
| 5.1 | Storage conditions | 19 | | |
| 5.2 | Transport product to the measuring point | 19 | | |
| 6 | Mounting | 21 | | |
| 6.1 | Mounting requirements | 21 | | |
| 6.1.1 | Suitable mounting position | 21 | | |
| 6.1.2 | Applications with restricted mounting space | 22 | | |
| 6.1.3 | Notes on the mechanical load of the probe | 23 | | |
| 6.1.4 | Mounting cladded flanges | 24 | | |
| 6.1.5 | Securing the probe | 25 | | |
| 6.1.6 | Special mounting conditions | 26 | | |
| 6.2 | Mounting the device | 30 | | |
| 6.2.1 | Required mounting tools | 30 | | |
| 6.2.2 | Mounting the device | 30 | | |
| 6.2.3 | Mounting the "Sensor remote" version | 30 | | |
| 6.2.4 | Turning the transmitter housing | 32 | | |
| 6.2.5 | Turning the display module | 33 | | |
| 6.3 | Post-installation check | 34 | | |
| 7 | Electrical connection | 35 | | |
| 7.1 | Connection conditions | 35 | | |
| 7.1.1 | Terminal assignment | 35 | | |
| 7.1.2 | Cable specification | 41 | | |
| 7.1.3 | Device plug connectors | 42 | | |
| 7.1.4 | Power supply | 43 | | |
| 7.1.5 | Overvoltage protection | 45 | | |
| 7.2 | Connecting the device | 45 | | |
| 7.2.1 | Pluggable spring-force terminals | 46 | | |
| 7.3 | Post-connection check | 47 | | |
| 8 | Operation options | 48 | | |
| 8.1 | Overview | 48 | | |
| 8.1.1 | Local operation | 48 | | |
| 8.1.2 | Operation with remote display and operating module FHX50 | 49 | | |
| 8.1.3 | Remote operation | 49 | | |
| 8.2 | Structure and function of the operating menu | 51 | | |
| 8.2.1 | Structure of the operating menu | 51 | | |
| 8.2.2 | User roles and related access authorization | 53 | | |
| 8.2.3 | Write protection via access code | 54 | | |
| 8.2.4 | Disabling write protection via access code | 55 | | |
| 8.2.5 | Deactivation of the write protection via access code | 55 | | |
| 8.2.6 | Write protection via write protection switch | 56 | | |
| 8.2.7 | Enabling and disabling the keypad lock | 58 | | |
| 8.3 | Display and operating module | 59 | | |
| 8.3.1 | Display appearance | 59 | | |
| 8.3.2 | Operating elements | 62 | | |
| 8.3.3 | Entering numbers and text | 63 | | |
| 8.3.4 | Opening the context menu | 65 | | |
| 8.3.5 | Envelope curve on the display and operating module | 66 | | |
| 9 | Device integration via the HART protocol | 67 | | |
| 9.1 | Overview of the Device Description files (DD) | 67 | | |
| 9.2 | HART device variables and measuring values | 67 | | |

| | | | | |
|-----------|---|------------|--|--|
| 10 | Commissioning via wizard | 68 | | |
| 11 | Commissioning via operating menu | 69 | | |
| 11.1 | Installation and function check | 69 | | |
| 11.2 | Setting the operating language | 69 | | |
| 11.3 | Configuration of an interface measurement .. | 70 | | |
| 11.4 | Recording the reference curve | 72 | | |
| 11.5 | Configuration of the on-site display | 73 | | |
| 11.5.1 | Factory settings of the on-site display for interface measurements .. | 73 | | |
| 11.5.2 | Adjustment of the on-site display ... | 73 | | |
| 11.6 | Configuration of the current outputs | 74 | | |
| 11.6.1 | Factory setting of the current outputs for interface measurements .. | 74 | | |
| 11.6.2 | Adjustment of the current outputs ... | 74 | | |
| 11.7 | Configuration management | 75 | | |
| 11.8 | Protection of the settings against unauthorized changes | 76 | | |
| 12 | Diagnostics and troubleshooting ... | 77 | | |
| 12.1 | General trouble shooting | 77 | | |
| 12.1.1 | General errors | 77 | | |
| 12.1.2 | Parametrization errors | 78 | | |
| 12.2 | Diagnostic information on local display | 79 | | |
| 12.2.1 | Diagnostic message | 79 | | |
| 12.2.2 | Calling up remedial measures | 81 | | |
| 12.3 | Diagnostic event in the operating tool | 82 | | |
| 12.4 | Diagnostic list | 82 | | |
| 12.5 | List of diagnostic events | 83 | | |
| 12.6 | Event logbook | 85 | | |
| 12.6.1 | Event history | 85 | | |
| 12.6.2 | Filtering the event logbook | 85 | | |
| 12.6.3 | Overview of information events | 85 | | |
| 12.7 | Firmware history | 87 | | |
| 13 | Maintenance | 88 | | |
| 13.1 | Exterior cleaning | 88 | | |
| 13.2 | Cleaning coax probes | 88 | | |
| 14 | Repairs | 89 | | |
| 14.1 | General information on repairs | 89 | | |
| 14.1.1 | Repair concept | 89 | | |
| 14.1.2 | Repairs to Ex-approved devices | 89 | | |
| 14.1.3 | Replacement of an electronics module | 89 | | |
| 14.1.4 | Replacement of a device | 89 | | |
| 14.2 | Spare parts | 90 | | |
| 14.3 | Return | 90 | | |
| 14.4 | Disposal | 90 | | |
| 15 | Accessories | 91 | | |
| 15.1 | Device-specific accessories | 91 | | |
| 15.1.1 | Weather protection cover | 91 | | |
| 15.1.2 | Mounting bracket for the electronics housing | 92 | | |
| 15.1.3 | Centering star | 92 | | |
| 15.1.4 | Remote display FHX50 | 93 | | |
| 15.1.5 | Overvoltage protection | 94 | | |
| 15.2 | Communication-specific accessories | 95 | | |
| 15.3 | Service-specific accessories | 96 | | |
| 15.4 | System components | 96 | | |
| 16 | Operating menu | 97 | | |
| 16.1 | Overview of the operating menu (display module) | 97 | | |
| 16.2 | Overview of the operating menu (operating tool) | 104 | | |
| 16.3 | "Setup" menu | 111 | | |
| 16.3.1 | "Mapping" wizard | 121 | | |
| 16.3.2 | "Advanced setup" submenu | 122 | | |
| 16.4 | "Diagnostics" menu | 172 | | |
| 16.4.1 | "Diagnostic list" submenu | 174 | | |
| 16.4.2 | "Event logbook" submenu | 175 | | |
| 16.4.3 | "Device information" submenu | 176 | | |
| 16.4.4 | "Measured values" submenu | 179 | | |
| 16.4.5 | "Data logging" submenu | 182 | | |
| 16.4.6 | "Simulation" submenu | 185 | | |
| 16.4.7 | "Device check" submenu | 190 | | |
| 16.4.8 | "Heartbeat" submenu | 192 | | |
| | Index | 193 | | |





1 Important document information

1.1 Document function







These Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.

1.2 Symbols






1.2.1 Safety symbols

| Symbol | Meaning |
|---|--|
|  | DANGER! This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury. |
|  | WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury. |
|  | CAUTION! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury. |
|  | NOTE! This symbol contains information on procedures and other facts which do not result in personal injury. |













1.2.2 Electrical symbols

| Symbol | Meaning |
|---|--|
|  | Direct current |
|  | Alternating current |
|  | Direct current and alternating current |
|  | Ground connection A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system. |
|  | Protective ground connection A terminal which must be connected to ground prior to establishing any other connections. |
|  | Equipotential connection A connection that has to be connected to the plant grounding system: This may be a potential equalization line or a star grounding system depending on national or company codes of practice. |


1.2.3 Tool symbols



| Symbol | Meaning |
|---|------------------------|
|  A0013442 | Torx screwdriver |
|  A0011220 | Flat blade screwdriver |
|  A0011219 | Cross-head screwdriver |
|  A0011221 | Allen key |
|  A0011222 | Hexagon wrench |

1.2.4 Symbols for certain types of information



| Symbol | Meaning |
|---|--|
|  | Permitted Procedures, processes or actions that are permitted. |
|  | Preferred Procedures, processes or actions that are preferred. |
|  | Forbidden Procedures, processes or actions that are forbidden. |
|  | Tip Indicates additional information. |
|  | Reference to documentation |
|  | Reference to page |
|  | Reference to graphic |
|  | Notice or individual step to be observed |
|  | Series of steps |
|  | Result of a step |
|  | Help in the event of a problem |
|  | Visual inspection |

1.2.5 Symbols in graphics

| Symbol | Meaning |
|---|-----------------|
| 1, 2, 3 ... | Item numbers |
|  | Series of steps |
| A, B, C, ... | Views |
| A-A, B-B, C-C, ... | Sections |


| Symbol | Meaning |
|---|--|
|  | Hazardous area Indicates a hazardous area. |
|  | Safe area (non-hazardous area) Indicates the non-hazardous area. |

1.2.6 Symbols at the device

| Symbol | Meaning |
|---|---|
|  | Safety instructions Observe the safety instructions contained in the associated Operating Instructions. |
|  | Temperature resistance of the connection cables Specifies the minimum value of the temperature resistance of the connection cables. |

1.3 Supplementary documentation

| Document | Purpose and content of the document |
|--|--|
| Technical Information TI01003F (FMP55) | Planning aid for your device The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device. |
| Brief Operating Instructions KA01060F (FMP55, HART) | Guide that takes you quickly to the 1st measured value The Brief Operating Instructions contain all the essential information from incoming acceptance to initial commissioning. |
| Description of Device Parameters GP01000F (FMP5x, HART) | Reference for your parameters The document provides a detailed explanation of each individual parameter in the operating menu. The description is aimed at those who work with the device over the entire life cycle and perform specific configurations. |
| Special documentation SD00326F | Functional Safety Manual The document is part of the Operating Instructions and serves as a reference for application-specific parameters and notes. |
| Special documentation SD01872F | Manual for Heartbeat Verification and Heartbeat Monitoring The document contains descriptions of the additional parameters and technical data which are available with the Heartbeat Verification and Heartbeat Monitoring application packages. |

 For an overview of the scope of the associated Technical Documentation, refer to the following:

- The *W@M Device Viewer* : Enter the serial number from the nameplate (www.endress.com/deviceviewer)
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

1.3.1 Safety Instructions (XA)

Depending on the approval, the following Safety Instructions (XA) are supplied with the device. They are an integral part of the Operating Instructions.

| Feature 010 | Approval | Available for | Feature 020: "Power Supply; Output" | | | | |
|-------------|--|---------------|-------------------------------------|-----------------|-----------------|----------------------------------|----------------------------------|
| | | | A ¹⁾ | B ²⁾ | C ³⁾ | E ⁴⁾ /G ⁵⁾ | K ⁶⁾ /L ⁷⁾ |
| BA | ATEX II 1G Ex ia IIC T6 Ga | FMP55 | XA00496F | XA01125F | XA01126F | XA00516F | - |
| BB | ATEX II 1/2G Ex ia IIC T6 Ga/Gb | FMP55 | XA00496F | XA01125F | XA01126F | XA00516F | - |
| BC | ATEX II 1/2G Ex d[ia] IIC T6 Ga/Gb | FMP55 | XA00499F | XA00499F | XA00499F | XA00519F | XA01133F |
| BD | ATEX II 1/3G Ex ic[ia] IIC T6 Ga/Gc | FMP55 | XA00497F | XA01127F | XA01128F | XA00517F | - |
| BG | ATEX II 3G Ex nA IIC T6 Gc | FMP55 | XA00498F | XA01130F | XA01131F | XA00518F | XA01132F |
| BH | ATEX II 3G Ex ic IIC T6 Gc | FMP55 | XA00498F | XA01130F | XA01131F | XA00518F | - |
| BL | ATEX II 1/3G Ex nA[ia] IIC T6 Ga/Gc | FMP55 | XA00497F | XA01127F | XA01128F | XA00517F | XA01129F |
| B2 | ATEX II 1/2G Ex ia IIC T6 Ga/Gb, 1/2D Ex ia IIIC Da/Db | FMP55 | XA00502F | XA00502F | XA00502F | XA00522F | - |
| B3 | ATEX II 1/2G Ex d[ia] IIC T6 Ga/Gb, 1/2 D Ex t IIIC Da/Db | FMP55 | XA00503F | XA00503F | XA00503F | XA00523F | XA01136F |
| B4 | ATEX II 1/2G Ex ia IIC T6 Ga/Gb, Ex d[ia] IIC T6 Ga/Gb | FMP55 | XA00500F | XA01134F | XA01135F | XA00520F | - |
| C2 | CSA C/US IS Cl.I,II,III Div.1 Gr.A-G, NI Cl.1 Div.2, Ex ia | FMP55 | XA00530F | XA00530F | XA00530F | XA00571F | XA00530F |
| C3 | CSA C/US XP Cl.I,II,III Div.1 Gr.A-G, NI Cl.1 Div.2, Ex d | FMP55 | XA00529F | XA00529F | XA00529F | XA00570F | XA00529F |
| FB | FM IS Cl.I,II,III Div.1 Gr.A-G, AEx ia, NI Cl.1 Div.2 | FMP55 | XA00531F | XA00531F | XA00531F | XA00573F | XA00531F |
| FD | FM XP Cl.I,II,III Div.1 Gr.A-G, AEx d, NI Cl.1 Div.2 | FMP55 | XA00532F | XA00532F | XA00532F | XA00572F | XA00532F |
| GA | EAC Ex ia IIC T6 Ga | FMP55 | XA01380F | XA01380F | XA01380F | XA01381F | XA01380F |
| GB | EAC Ex ia IIC T6 Ga/Gb | FMP55 | XA01380F | XA01380F | XA01380F | XA01381F | XA01380F |
| GC | EAC Ex d[ia] IIC T6 Ga/Gb | FMP55 | XA01382F | XA01382F | XA01382F | XA01383F | XA01382F |
| IA | IEC Ex ia IIC T6 Ga | FMP55 | XA00496F | XA01125F | XA01126F | XA00516F | - |
| IB | IEC Ex ia IIC T6 Ga/Gb | FMP55 | XA00496F | XA01125F | XA01126F | XA00516F | - |
| IC | IEC Ex d[ia] IIC T6 Ga/Gb | FMP55 | XA00499F | XA00499F | XA00499F | XA00519F | XA01133F |
| ID | IEC Ex ic[ia] IIC T6 Ga/Gc | FMP55 | XA00497F | XA01127F | XA01128F | XA00517F | - |
| IG | IEC Ex nA IIC T6 Gc | FMP55 | XA00498F | XA01130F | XA01131F | XA00518F | XA01132F |
| IH | IEC Ex ic IIC T6 Gc | FMP55 | XA00498F | XA01130F | XA01131F | XA00518F | - |
| IL | IEC Ex nA[ia] IIC T6 Ga/Gc | FMP55 | XA00497F | XA01127F | XA01128F | XA00517F | XA01129F |
| I2 | IEC Ex ia IIC T6 Ga/Gb, Ex ia IIIC Da/Db | FMP55 | XA00502F | XA00502F | XA00502F | XA00522F | - |
| I3 | IEC Ex d [ia] IIC T6 Ga/Gb, Ex t IIIC Da/Db | FMP55 | XA00503F | XA00503F | XA00503F | XA00523F | XA01136F |
| I4 | IEC Ex II 1/2G Ex ia IIC T6 Ga/Gb, Ex d[ia] IIC T6 Ga/Gb | FMP55 | XA00500F | XA01134F | XA01135F | XA00520F | - |
| KA | KC Ex ia IIC T6 Ga | FMP55 | XA01169F | - | XA01169F | - | - |
| KB | KC Ex ia IIC T6 Ga/Gb | FMP55 | XA01169F | - | XA01169F | - | - |
| KC | KC Ex d[ia] IIC T6 | FMP55 | - | - | XA01170F | - | - |
| MA | INMETRO Ex ia IIC T6 Ga | FMP55 | XA01038F | XA01038F | XA01038F | - | XA01038F |
| MC | INMETRO Ex d[ia] IIC T6 Ga/Gb | FMP55 | XA01041F | XA01041F | XA01041F | - | XA01041F |
| MH | INMETRO Ex ic IIC T6 Gc | FMP55 | XA01040F | XA01040F | XA01040F | - | XA01040F |
| NA | NEPSI Ex ia IIC T6 Ga | FMP55 | XA00634F | XA00634F | XA00634F | XA00640F | XA00634F |
| NB | NEPSI Ex ia IIC T6 Ga/Gb | FMP55 | XA00634F | XA00634F | XA00634F | XA00640F | XA00634F |
| NC | NEPSI Ex d[ia] IIC T6 Ga/Gb | FMP55 | XA00636F | XA00636F | XA00636F | XA00642F | XA00636F |
| NG | NEPSI Ex nA II T6 Gc | FMP55 | XA00635F | XA00635F | XA00635F | XA00641F | XA00635F |
| NH | NEPSI Ex ic IIC T6 Gc | FMP55 | XA00635F | XA00635F | XA00635F | XA00641F | XA00635F |

| Feature 010 | Approval | Available for | Feature 020: "Power Supply; Output" | | | | |
|-------------|--|---------------|-------------------------------------|----------------------|----------------------|----------------------------------|----------------------------------|
| | | | A ¹⁾ | B ²⁾ | C ³⁾ | E ⁴⁾ /G ⁵⁾ | K ⁶⁾ /L ⁷⁾ |
| N2 | NEPSI Ex ia IIC T6 Ga/Gb, Ex iaD 20/21 T85...90°C | FMP55 | XA00638F | XA00638F | XA00638F | XA00644F | XA00638F |
| N3 | NEPSI Ex d ia IIC T6 Ga/Gb, DIP A20/21 T85...90°C IP66 | FMP55 | XA00639F | XA00639F | XA00639F | XA00645F | XA00639F |
| 8A | FM/CSA IS+XP Cl.I,II,III Div.1 Gr.A-G | FMP55 | XA00531F XA00532F | XA00531F XA00532F | XA00531F XA00532F | XA00572F XA00573F | XA00531F XA00532F |

- 1) A: 2-wire; 4-20mA HART
- 2) B: 2-wire; 4-20mA HART, switch output
- 3) C: 2-wire; 4-20mA HART, 4-20mA
- 4) E: 2-wire; FOUNDATION Fieldbus, switch output
- 5) G: 2-wire; PROFIBUS PA, switch output
- 6) K: 4-wire 90-253VAC; 4-20mA HART
- 7) L: 4-wire 10,4-48VDC; 4-20mA HART



For certified devices the relevant Safety Instructions (XA) are indicated on the nameplate.

Ex-marking in case of connected FHX50 remote display

If the device is prepared for the remote display FHX50 (product structure: feature 030: "Display, Operation", option L or M), the Ex marking of some certificates changes according to the following table ¹⁾:

| Feature 010 ("Approval") | Feature 030 ("Display, Operation") | Ex-marking |
|--------------------------|------------------------------------|---|
| BG | L or M | ATEX II 3G Ex nA [ia Ga] IIC T6 Gc |
| BH | L or M | ATEX II 3G Ex ic [ia Ga] IIC T6 Gc |
| B3 | L or M | ATEX II 1/2G Ex d [ia] IIC T6 Ga/Gb, ATEX II 1/2D Ex ta [ia Db] IIIC Txx°C Da/Db |
| IG | L or M | IECEX Ex nA [ia Ga] IIC T6 Gc |
| IH | L or M | IECEX Ex ic [ia Ga] IIC T6 Gc |
| I3 | L or M | IECEX Ex d [ia] IIC T6 Ga/Gb, IECEX Ex ta [ia Db] IIIC Txx°C Da/Db |

1) The marking of certificates not mentioned in this table are not affected by the FHX50.

2 Basic safety instructions

2.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- ▶ Trained, qualified specialists must have a relevant qualification for this specific function and task.
- ▶ Are authorized by the plant owner/operator.
- ▶ Are familiar with federal/national regulations.
- ▶ Before starting work, read and understand the instructions in the manual and supplementary documentation as well as the certificates (depending on the application).
- ▶ Follow instructions and comply with basic conditions.

The operating personnel must fulfill the following requirements:

- ▶ Are instructed and authorized according to the requirements of the task by the facility's owner-operator.
- ▶ Follow the instructions in this manual.

2.2 Designated use

Application and measured materials

The measuring device described in these Operating Instructions is intended only for level and interface measurement of liquids. Depending on the version ordered the device can also measure potentially explosive, flammable, poisonous and oxidizing materials.

Observing the limit values specified in the "Technical data" and listed in the Operating Instructions and supplementary documentation, the measuring device may be used for the following measurements only:

- ▶ Measured process variable: Level and/or interface
- ▶ Calculated process variable: Volume oder mass in arbitrarily shaped vessels (calculated from the level by the linearization functionality)

To ensure that the measuring device remains in proper condition for the operation time:

- ▶ Use the measuring device only for measured materials against which the process-wetted materials are adequately resistant.
- ▶ Observe the limit values in "Technical data".

Incorrect use

The manufacturer is not liable for damage caused by improper or non-designated use.

Verification for borderline cases:

- ▶ For special measured materials and cleaning agents, Endress+Hauser is glad to provide assistance in verifying the corrosion resistance of wetted materials, but does not accept any warranty or liability.

Residual risk

The electronics housing and its built-in components such as display module, main electronics module and I/O electronics module may heat to 80 °C (176 °F) during operation through heat transfer from the process as well as power dissipation within the electronics. During operation the sensor may assume a temperature near the temperature of the measured material.

Danger of burns due to heated surfaces!

- ▶ For high process temperatures: Install protection against contact in order to prevent burns.

2.3 Workplace safety

For work on and with the device:

- ▶ Wear the required personal protective equipment according to federal/national regulations.

2.4 Operational safety

Risk of injury.

- ▶ Operate the device in proper technical condition and fail-safe condition only.
- ▶ The operator is responsible for interference-free operation of the device.

Conversions to the device

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers.

- ▶ If, despite this, modifications are required, consult with the manufacturer.

Repair

To ensure continued operational safety and reliability,

- ▶ Carry out repairs on the device only if they are expressly permitted.
- ▶ Observe federal/national regulations pertaining to repair of an electrical device.
- ▶ Use original spare parts and accessories from the manufacturer only.

Hazardous area

To eliminate a danger for persons or for the facility when the device is used in the hazardous area (e.g. explosion protection, pressure vessel safety):

- ▶ Based on the nameplate, check whether the ordered device is permitted for the intended use in the hazardous area.
- ▶ Observe the specifications in the separate supplementary documentation that is an integral part of these Instructions.

2.5 Product safety

This measuring device is designed in accordance with good engineering practice to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate. It meets general safety standards and legal requirements.

2.5.1 CE mark

The measuring system meets the legal requirements of the applicable EC guidelines. These are listed in the corresponding EC Declaration of Conformity together with the standards applied.

Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.

2.5.2 EAC conformity


The measuring system meets the legal requirements of the applicable EAC guidelines. These are listed in the corresponding EAC Declaration of Conformity together with the standards applied.

Endress+Hauser confirms successful testing of the device by affixing to it the EAC mark.

3 Product description

3.1 Product design

3.1.1 Levelflex FMP51/FMP52/FMP54/FMP55

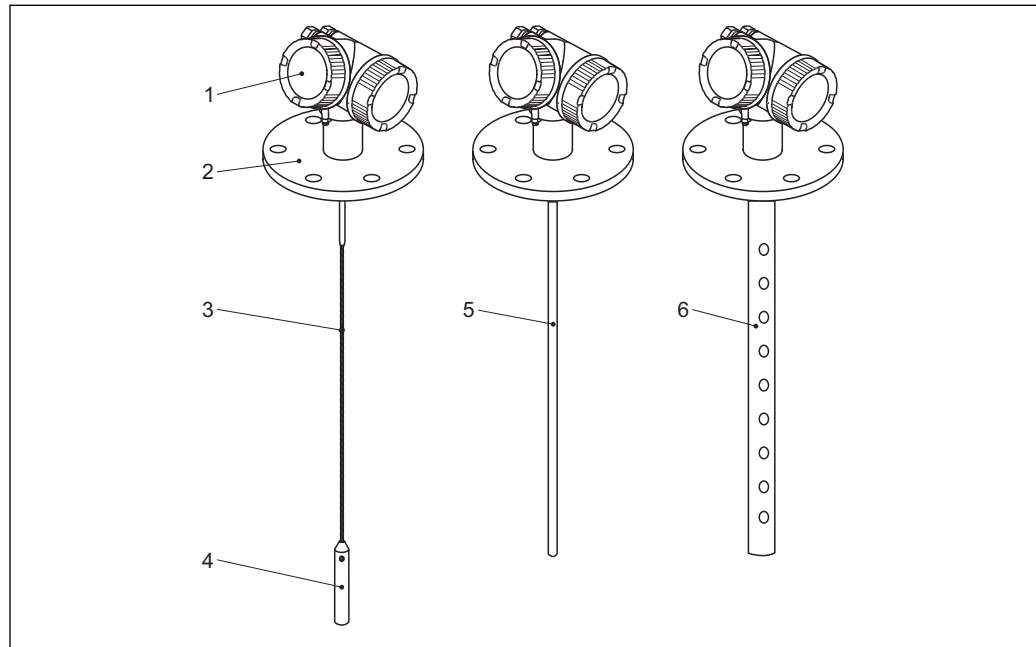


A0012399

1 Design of the Levelflex

- 1 Electronics housing
- 2 Process connection (here as an example: flange)
- 3 Rope probe
- 4 End-of-probe weight
- 5 Rod probe
- 6 Coax probe

3.1.2 Electronics housing

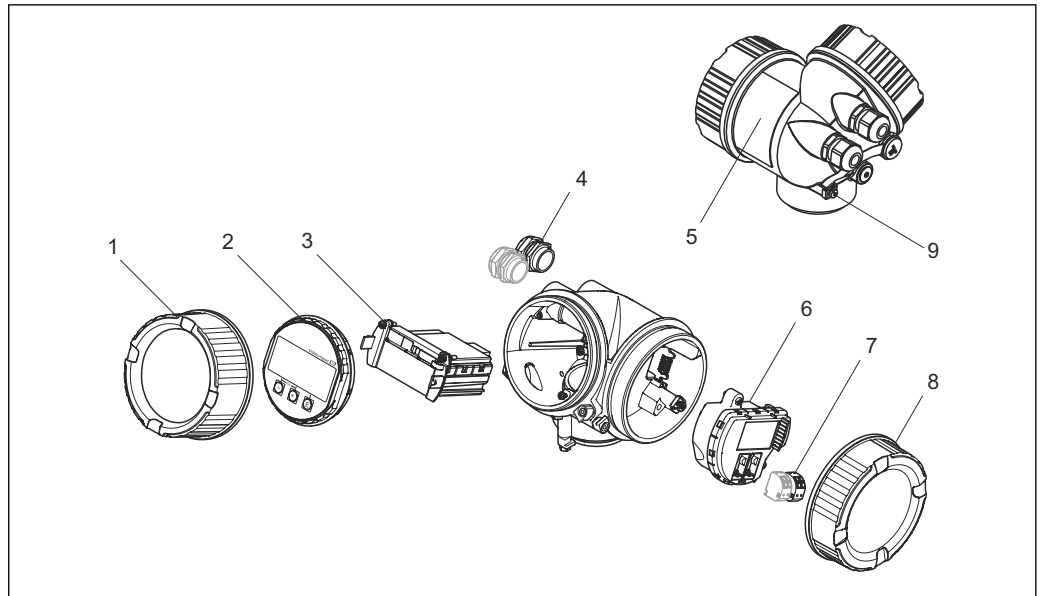

A0012422

2 *Design of the electronics housing*

- 1 *Electronics compartment cover*
- 2 *Display module*
- 3 *Main electronics module*
- 4 *Cable glands (1 or 2, depending on instrument version)*
- 5 *Nameplate*
- 6 *I/O electronics module*
- 7 *Terminals (pluggable spring terminals)*
- 8 *Connection compartment cover*
- 9 *Grounding terminal*

3.2 Registered trademarks

HART®

Registered trademark of the FieldComm Group, Austin, USA

KALREZ®, VITON®

Registered trademark of DuPont Performance Elastomers L.L.C., Wilmington, USA

TEFLON®


Registered trademark of E.I. DuPont de Nemours & Co., Wilmington, USA

TRI CLAMP®


Registered trademark of Alfa Laval Inc., Kenosha, USA

4 Incoming acceptance and product identification


4.1 Incoming acceptance

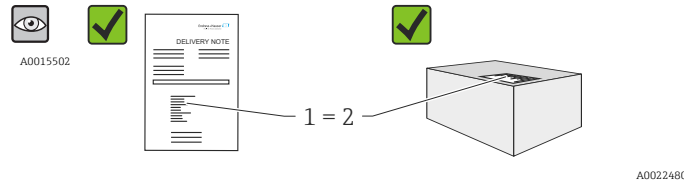

Is the order code on the delivery note (1) identical to the order code on the product sticker (2)?

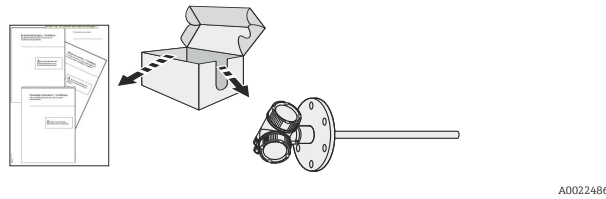


A0022486

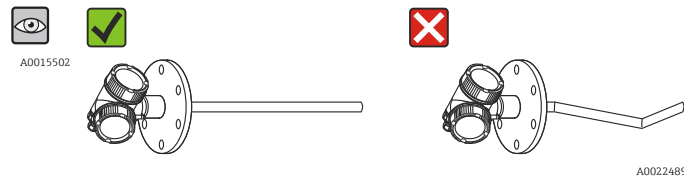


Are the goods undamaged?

A0022489

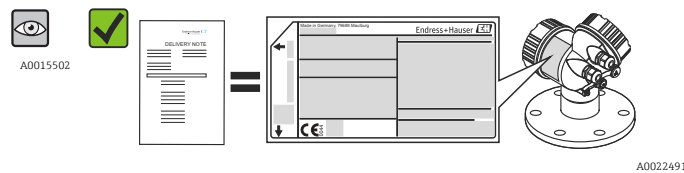


Do the nameplate data match the ordering information on the delivery note?

A0022491

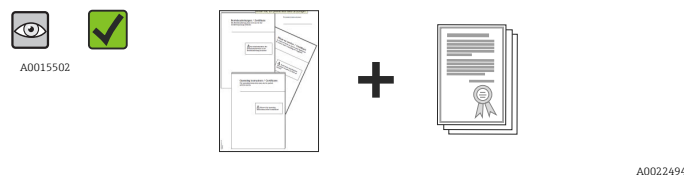

Is the DVD (operating tool) present?
If required (see nameplate): Are the Safety Instructions (XA) present?

A0022494


 If one of the conditions does not comply, contact your Endress+Hauser distributor.

4.2 Product identification

The following options are available for identification of the measuring device:

- Nameplate specifications
- Order code with breakdown of the device features on the delivery note
- Enter serial numbers from nameplates in *W@M Device Viewer* (www.endress.com/deviceviewer): All information about the measuring device is displayed.
- Enter the serial number from the nameplates into the *Endress+Hauser Operations App* or scan the 2-D matrix code (QR code) on the nameplate with the *Endress+Hauser Operations App*: all the information for the measuring device is displayed.


4.2.1 Nameplate

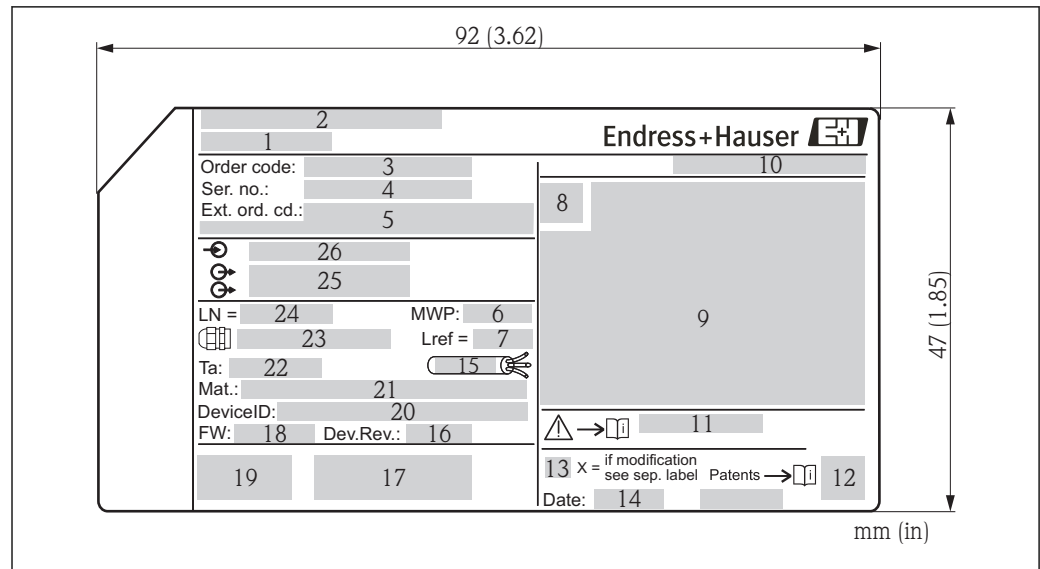

A0010725

 3 Nameplate of the Levelflex

- 1 Device name
- 2 Address of manufacturer
- 3 Order code
- 4 Serial number (Ser. no.)
- 5 Extended order code (Ext. ord. cd.)
- 6 Process pressure
- 7 Gas phase compensation: reference distance
- 8 Certificate symbol
- 9 Certificate and approval relevant data
- 10 Degree of protection: e.g. IP, NEMA
- 11 Document number of the Safety Instructions: e.g. XA, ZD, ZE
- 12 2-D matrix code (QR code)
- 13 Modification mark
- 14 Manufacturing date: year-month
- 15 Permitted temperature range for cable
- 16 Geräterevision (Dev.Rev.)
- 17 Additional information about the device version (certificates, approvals, communication): e.g. SIL, PROFIBUS
- 18 Firmware version (FW)
- 19 CE mark, C-Tick
- 20 DeviceID
- 21 Material in contact with process
- 22 Permitted ambient temperature (T_a)
- 23 Size of the thread of the cable glands
- 24 Length of probe
- 25 Signal outputs
- 26 Operating voltage

 Only 33 digits of the extended order code can be indicated on the nameplate. If the extended order code exceeds 33 digits, the rest will not be shown. However, the complete extended order code can be viewed in the operating menu of the device in the **Extended order code 1 to 3** parameter.

5 Storage, Transport

5.1 Storage conditions

- Permitted storage temperature: -40 to +80 °C (-40 to +176 °F)
- Use the original packaging.


5.2 Transport product to the measuring point

⚠ WARNING

Housing or probe may be damaged or break away.

Risk of injury!

- ▶ Transport the measuring device to the measuring point in its original packaging or at the process connection.
- ▶ Do not fasten lifting devices (hoisting slings, lifting eyes etc.) at the housing or the probe but at the process connection. Take into account the mass center of the device in order to avoid unintended tilting.
- ▶ Comply with the safety instructions, transport conditions for devices over 18kg (39.6lbs) (IEC61010).

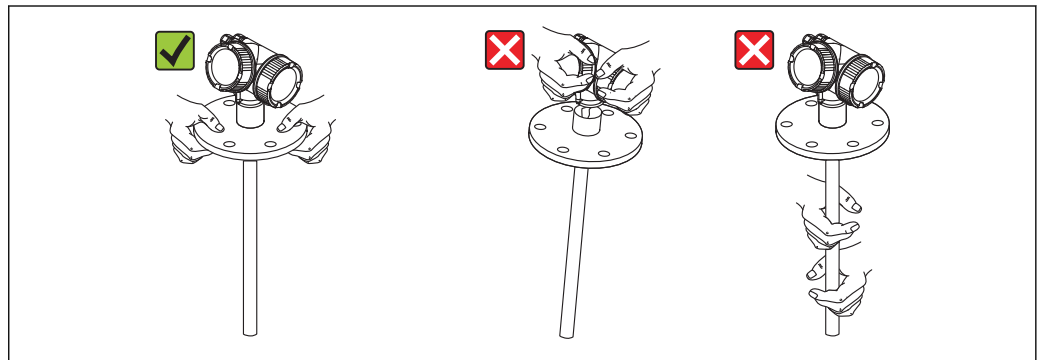


A0013920

NOTICE

Shipping lock for FMP5x with coax probe

- ▶ For FMP5x with coax probe the coax tube is not fixed permanently to the electronics housing. For shipping and transport it is secured with two cable ties. In order to prevent the spacer at the probe rod from moving along the probe, these cable ties must not be loosened when transporting and mounting the device. They may only be undone directly before screwing the device flange to the process connection.

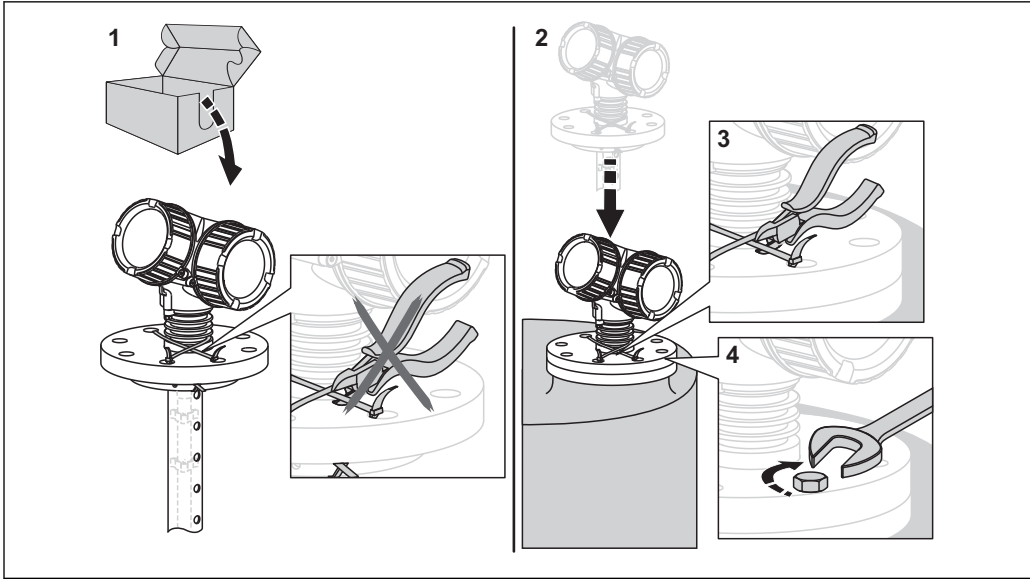


A0015471

6 Mounting

6.1 Mounting requirements

6.1.1 Suitable mounting position

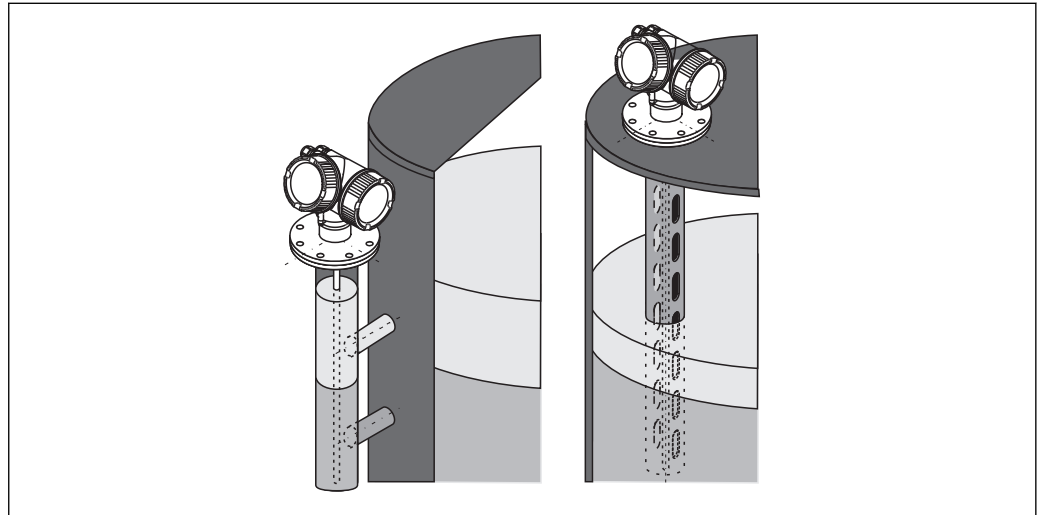

4 Mounting position of Levelflex FMP55


A0011281

- Rod probes / rope probes: must be mounted in a stilling well or bypass → 26.
- Coax probes: can be mounted at an arbitrary distance from the wall of the vessel.
- When mounting in the open, a weather protection cover may be installed to protect the device against extreme weather conditions.
- Minimum distance from the end of probe to the bottom of the vessel: 10 mm (0.4 in)

6.1.2 Applications with restricted mounting space

Mounting with remote sensor

The device version with a remote sensor is suited for applications with restricted mounting space. In this case the electronics housing is mounted at a separate position from which it is easier accessible.

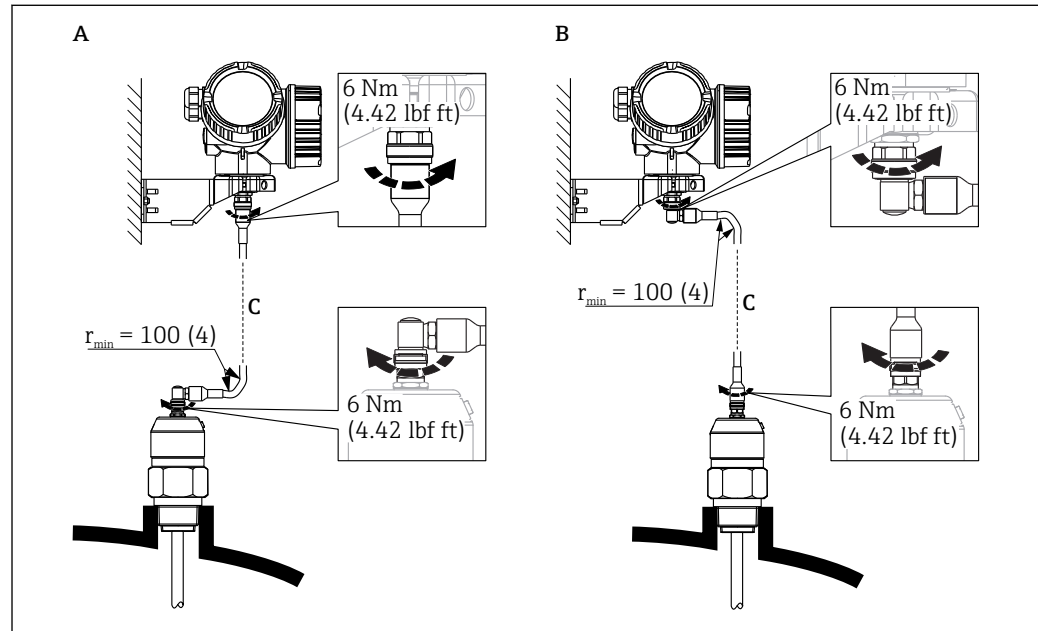

- A Angled plug at the probe
 B Angled plug at the electronics housing
 C Length of the remote cable as ordered

- Product structure, feature 600 "Probe Design":
 Option MB "Sensor remote, 3m/9ft cable"
 - The remote cable is supplied with these device versions
 Minimum bending radius: 100 mm (4 inch)
 - A mounting bracket for the electronics housing is supplied with these device versions.
 Mounting options:
 - Wall mounting
 - Pipe mounting; diameter: 42 to 60 mm (1-1/4 to 2 inch)
 - The connection cable has got one straight and one angled plug (90°). Depending on the local conditions the angled plug can be connected at the probe or at the electronics housing.
- i** Probe, electronics and connection cable are adjusted to match each other. They are marked by a common serial number. Only components with the same serial number shall be connected to each other.

6.1.3 Notes on the mechanical load of the probe

Tensile load limit of rope probes

| Sensor | Feature 060 | Probe | Tensile load limit [kN] |
|--------|-------------|-------------------------|-------------------------|
| FMP55 | NA, ND | Rope 4mm (1/6") PFA>316 | 2 |






Bending strength of rod probes

| Sensor | Feature 060 | Probe | Bending strength [Nm] |
|--------|-------------|---------------------------|-----------------------|
| FMP55 | CA, CB | Rod 16mm (0.63") PFA>316L | 30 |

Bending strength of coax probes

| Sensor | Feature 060 | Process connection | Probe | Bending strength [Nm] |
|--------|-------------|--------------------|----------------------|-----------------------|
| FMP55 | UA, UB | Flange | Coax 316L, Ø 42,4 mm | 300 |

6.1.4 Mounting cladded flanges


-  Use flange screws according to the number of flange holes.
 -  Tighten the screws with the required torque (see table).
 -  Retighten the screws after 24 hours or after the first temperature cycle.
 -  Depending on process pressure and process temperature check and retighten the screws at regular intervals.
-  Usually, the PTFE flange cladding also serves as a seal between the nozzle and the device flange.

| Flange size | Number of screws | Recommended torque [Nm] | |
|-------------|------------------|-------------------------|---------|
| | | minimum | maximum |
| EN | | | |
| DN40/PN40 | 4 | 35 | 55 |
| DN50/PN16 | 4 | 45 | 65 |
| DN50/PN40 | 4 | 45 | 65 |
| DN80/PN16 | 8 | 40 | 55 |
| DN80/PN40 | 8 | 40 | 55 |
| DN100/PN16 | 8 | 40 | 60 |
| DN100/PN40 | 8 | 55 | 80 |
| DN150/PN16 | 8 | 75 | 115 |
| DN150/PN40 | 8 | 95 | 145 |
| ASME | | | |
| 1½"/150lbs | 4 | 20 | 30 |
| 1½"/300lbs | 4 | 30 | 40 |
| 2"/150lbs | 4 | 40 | 55 |
| 2"/300lbs | 8 | 20 | 30 |
| 3"/150lbs | 4 | 65 | 95 |
| 3"/300lbs | 8 | 40 | 55 |
| 4"/150lbs | 8 | 45 | 70 |
| 4"/300lbs | 8 | 55 | 80 |
| 6"/150lbs | 8 | 85 | 125 |
| 6"/300lbs | 12 | 60 | 90 |
| JIS | | | |
| 10K 40A | 4 | 30 | 45 |
| 10K 50A | 4 | 40 | 60 |
| 10K 80A | 8 | 25 | 35 |
| 10K 100A | 8 | 35 | 55 |
| 10K 100A | 8 | 75 | 115 |

6.1.5 Securing the probe

Securing coax probes

For WHG approvals: For probe lengths ≥ 3 m (10 ft) a support is required.

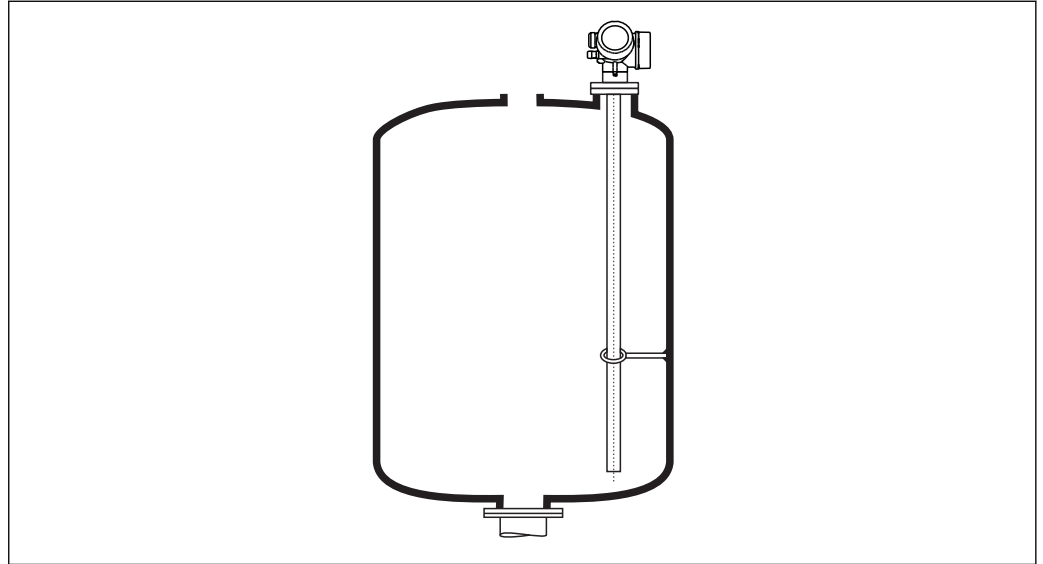


A0012608

Coax probes can be supported at any point of the outer tube.

6.1.6 Special mounting conditions

Bypasses and stilling wells

i In bypass and stilling well applications it is recommended to use a centering disks or stars.

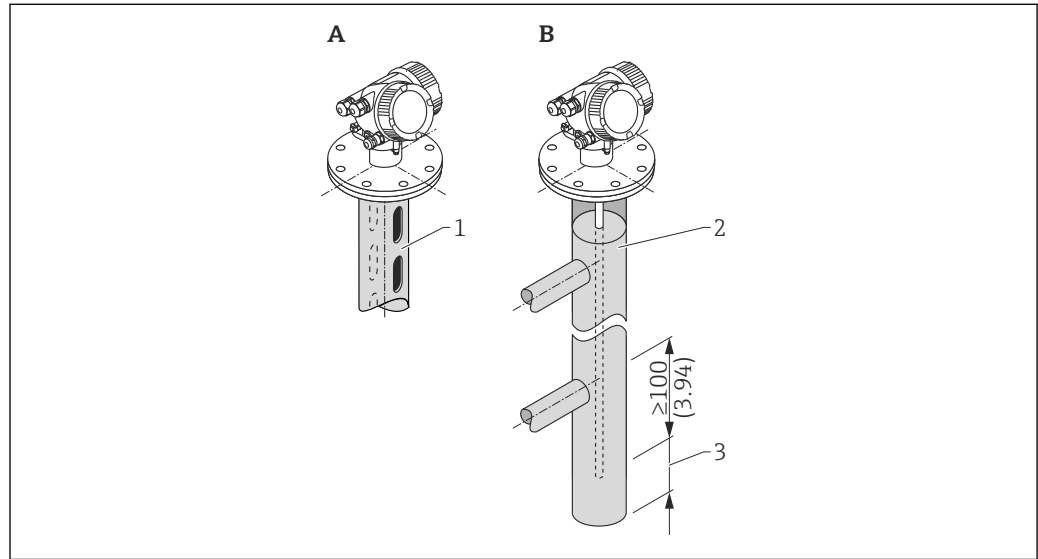


A0014129


- 1 Mounting in a stilling well
- 2 Mounting in a bypass
- 3 Minimum distance between end of probe and lower edge of the bypass; see table below

Minimum distance between end of probe and lower edge of the bypass


| Type of probe | Minimum distance |
|---------------|------------------|
| Rope | 10 mm (0.4 in) |
| Rod | 10 mm (0.4 in) |
| Coax | 10 mm (0.4 in) |


- Pipe diameter: > 40 mm (1.6") for rod probes
- Rod probe installation can take place up to a diameter size of 150 mm (6 in). In the event of larger diameters, a coax probe is recommended.
- Side disposals, holes or slits and welded joints that protrude up to approx. 5 mm (0.2") inwards do not influence the measurement.
- The pipe may not exhibit any steps in diameter.
- The probe must be 100 mm longer than the lower disposal.

- Within the measuring range, the probe must not get into contact with the pipe wall. If necessary, secure the probe by retaining or tensioning. All rope probes are prepared for tensioning in containers (tensioning weight with anchor hole).
- Within the measuring range, the probe must not get into contact with the pipe wall. If necessary, use a PFA centering star (see feature 610 of the product structure). The spacer is also available as an accessory: →  91.
- Coax probes can always be applied if there is enough mounting space.


 For bypasses with condensate formation (water) and a medium with low dielectric constant (e.g. hydrocarbons):

In the course of time the bypass is filled with condensate up to the lower disposal and for low levels the the level echo is superimposed by the condensate echo. Thus in this range the condensate level is measured instead of the correct level. Only higher levels are measured correctly. To prevent this, position the lower disposal 100 mm (4 in) below the lowest level to be measured and apply a metallic centering disk at the height of the lower edge of the lower disposal.

 With heat insulated tanks the bypass should also be insulated in order to prevent condensate formation.

 For information on bypass solutions from Endress+Hauser please contact your Endress+Hauser sales representative.

Underground tanks

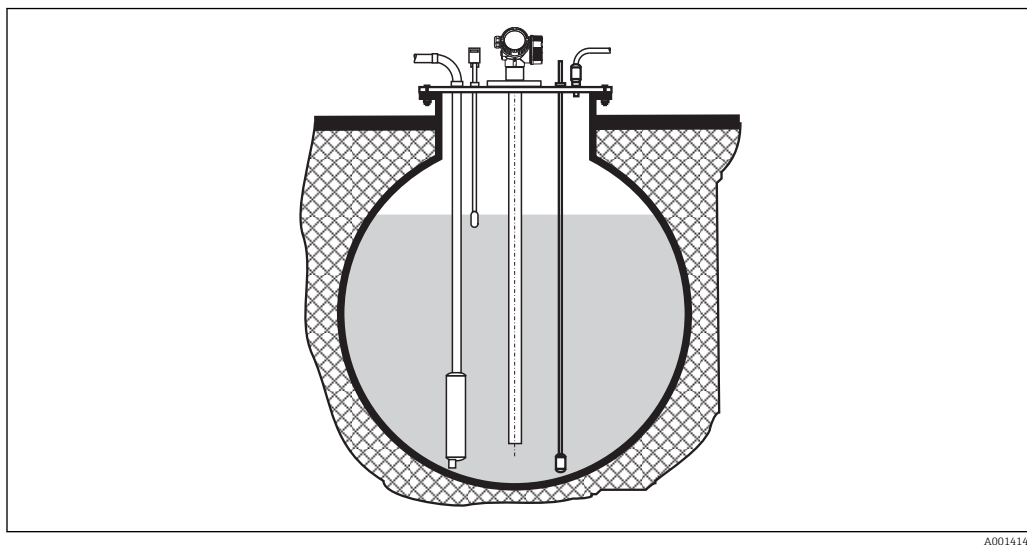

A0014142


Use a coax probe for nozzles with large diameters in order to avoid reflections at the nozzle wall.

Non-metallic vessels

When mounting Levelflex in a non-metallic vessel, use a coax probe.

Vessels with heat insulation

i If process temperatures are high, the device must be included in normal tank insulation to prevent the electronics heating up as a result of heat radiation or convection. The insulation may not exceed beyond the points labeled "MAX" in the drawings.

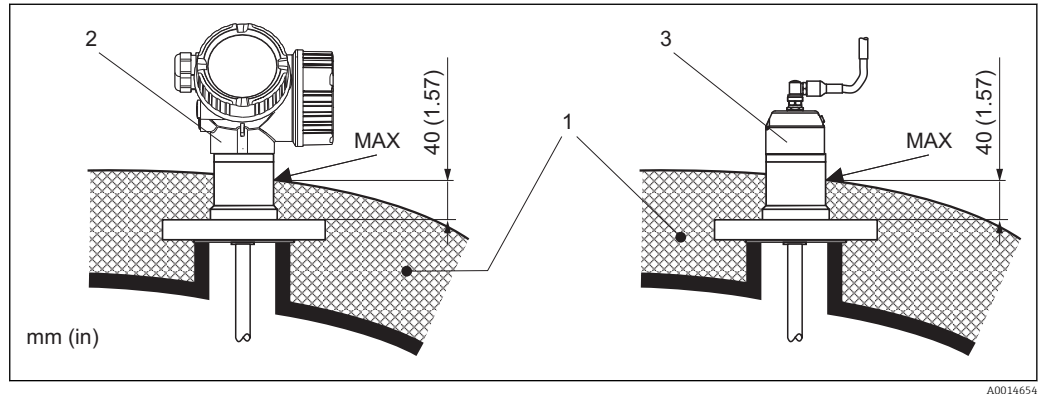

5 Process connection with flange - FMP55

- 1 Tank insulation
- 2 Compact device
- 3 Sensor remote (feature 600)

6.2 Mounting the device

6.2.1 Required mounting tools

- For flanges and other process connections: appropriate mounting tools
- To turn the housing: Hexagonal wrench 8 mm

6.2.2 Mounting the device

Flange mounting


If a seal is used, be sure to use unpainted metal bolts to ensure good electrical contact between probe flange and process flange.

Mounting rope probes

NOTICE

Electrostatic discharges may damage the electronics.

- ▶ Earth the housing before lowering the rope into the vessel.

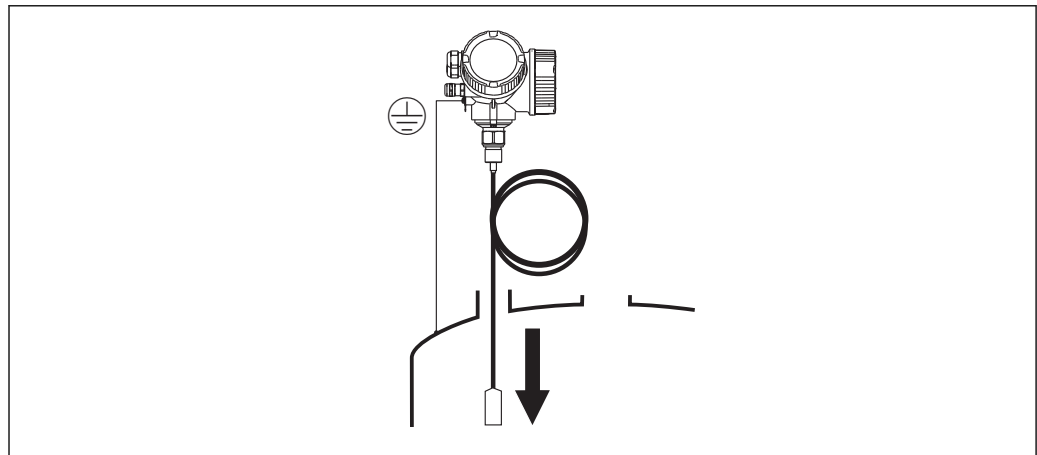

A0012852

When lowering the rope probe into the vessel, observe the following:

- Uncoil rope and lower it slowly and carefully into the vessel.
- Do not kink the rope.
- Avoid any backlash, since this might damage the probe or the vessel fittings.

6.2.3 Mounting the "Sensor remote" version

i This section is only valid for devices of the version "Probe Design" = "Sensor remote" (feature 600, option MB/MC/MD).

For the version "Probe design" = "Sensor remote" the following is supplied:

- The probe with the process connection
- The electronics housing
- The mounting bracket for wall or pipe mounting of the electronics housing
- The connection cable (length as ordered). The cable has got one straight and one angled plug (90°). Depending on the local conditions the angled plug can be connected at the probe or at the electronics housing.

⚠ CAUTION


The plugs of the connection cable may be damaged by mechanical stress.

- ▶ Mount the probe and the electronics housing tightly before connecting the cable.
- ▶ Lay the cable such that it is not exposed to mechanical stress. Minimum bending radius: 100 mm (4").
- ▶ When connecting the cable: Connect the straight plug before the angled one. Torque for both coupling nuts: 6 Nm.

i Probe, electronics and connection cable are adjusted to match each other. They are marked by a common serial number. Only components with the same serial number shall be connected to each other.

i If the measuring point is exposed to strong vibrations, an additional locking compound (e.g. Loctite 243) can be applied at the plug connectors.

Mounting the electronics housing

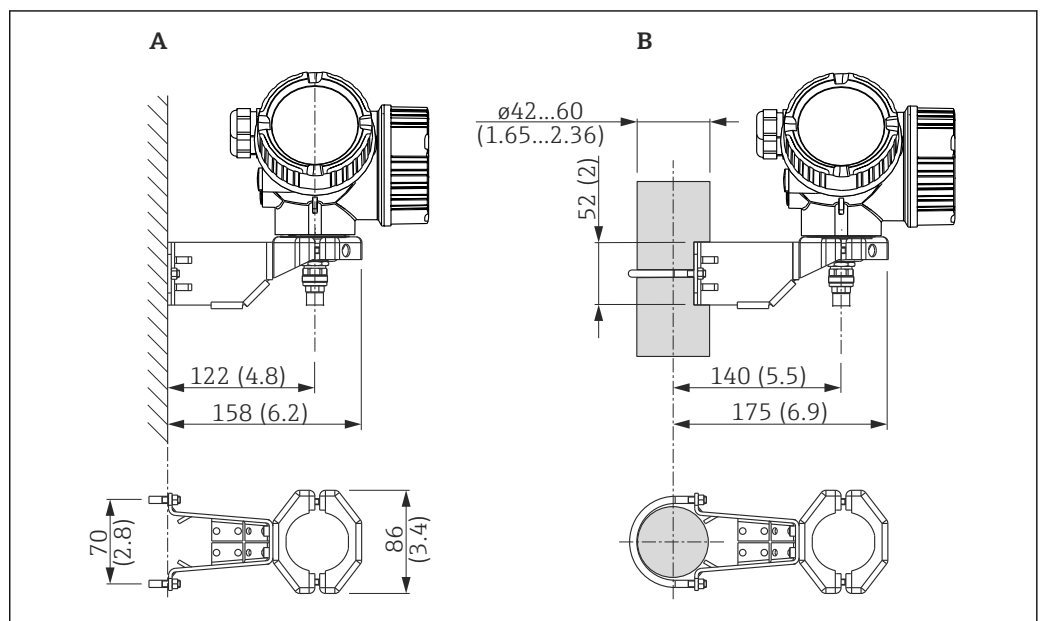

6 Mounting the electronics housing using the mounting bracket; dimensions: mm (in)


A Wall mounting

B Pipe mounting

Connecting the cable

Required tools:

Open-end wrench 18AF

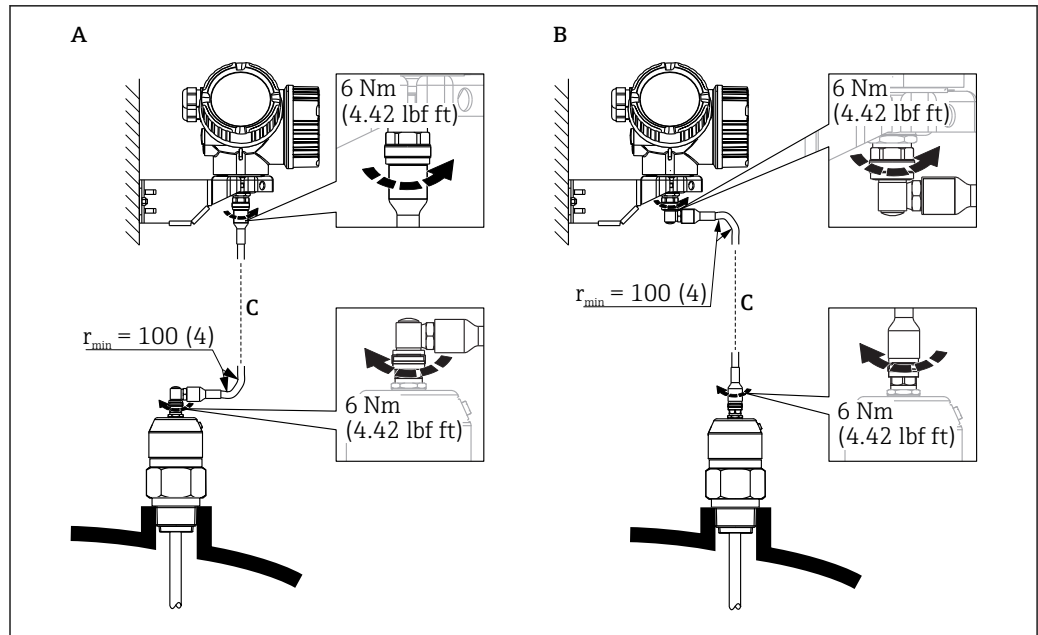


A0014794

7 Connecting the cable. There are the following possibilities:

- A Angled plug at the probe
- B Angled plug at the electronics housing
- C Length of the remote cable as ordered

6.2.4 Turning the transmitter housing


To provide easier access to the connection compartment or display module, the transmitter housing can be turned:

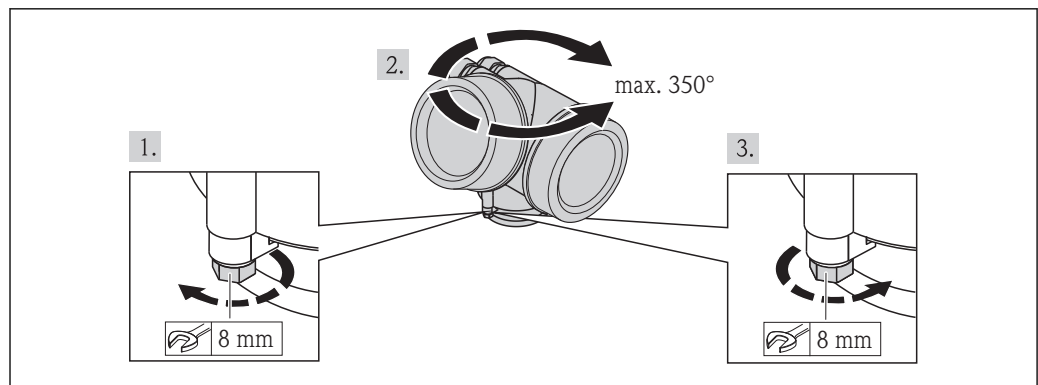

A0013713

1. Unscrew the securing screw using an open-ended wrench.
2. Rotate the housing in the desired direction.
3. Tighten the securing screw (1,5 Nm for plastics housing; 2,5 Nm for aluminium or stainless steel housing).

6.2.5 Turning the display module

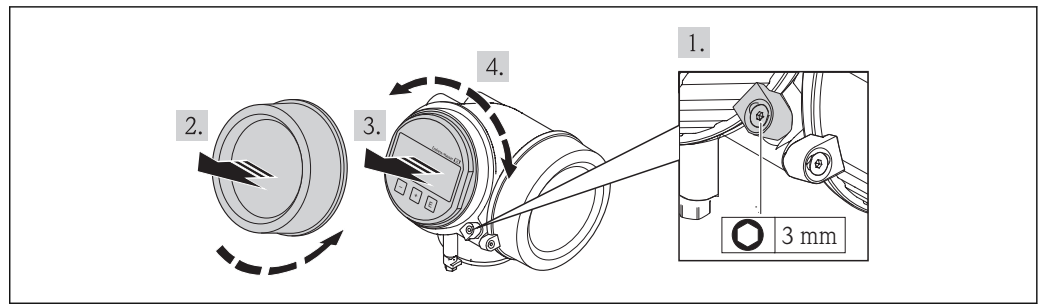

A0013905

1. If present: Loosen the screw of the securing clamp of the electronics compartment cover using an Allen key and turn the clamp 90° counterclockwise.
2. Unscrew cover of the electronics compartment from the transmitter housing.
3. Pull out the display module with a gentle rotation movement.
4. Rotate the display module into the desired position: Max. $8 \times 45^\circ$ in each direction.
5. Feed the spiral cable into the gap between the housing and main electronics module and plug the display module into the electronics compartment until it engages.
6. Screw the cover of the electronics compartment firmly back onto the transmitter housing.
7. Tighten the securing clamp again using the Allen key (Torque: 2.5 Nm).

6.3 Post-installation check


| | |
|-----------------------|--|
| <input type="radio"/> | Is the device undamaged (visual inspection)? |
| <input type="radio"/> | Does the device conform to the measuring point specifications? For example: <ul style="list-style-type: none">▪ Process temperature▪ Process pressure (refer to the chapter on "Material load curves" of the "Technical Information" document)▪ Ambient temperature range▪ Measuring range |
| <input type="radio"/> | Are the measuring point identification and labeling correct (visual inspection)? |
| <input type="radio"/> | Is the device adequately protected from precipitation and direct sunlight? |
| <input type="radio"/> | Are the securing screw and securing clamp tightened securely? |

7 Electrical connection

7.1 Connection conditions

7.1.1 Terminal assignment

2-wire: 4-20mA HART

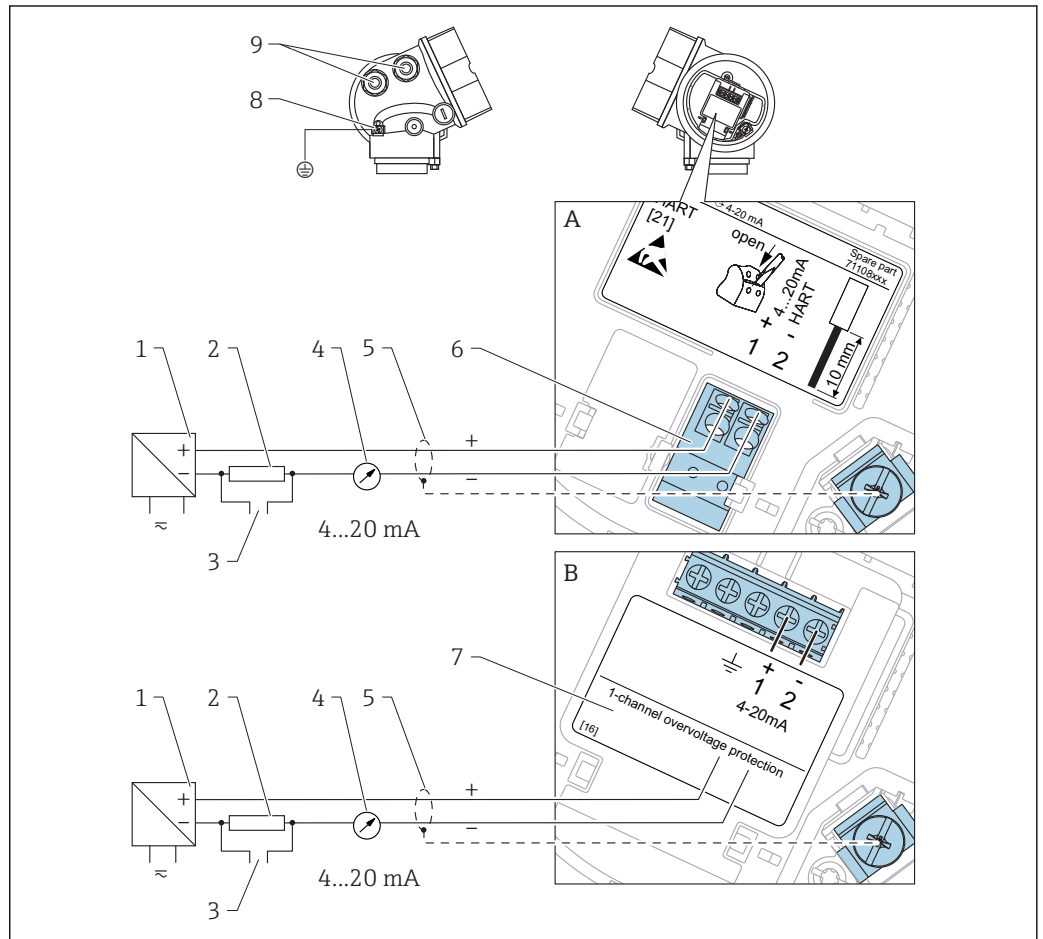

A0011294

8 Terminal assignment 2-wire; 4-20mA HART

A Without integrated overvoltage protection

B With integrated overvoltage protection

1 Active barrier with power supply (e.g. RN221N): Observe terminal voltage

2 HART communication resistor ($\geq 250 \Omega$): Observe maximum load

3 Connection for Commubox FXA195 or FieldXpert SFX350/SFX370 (via VIATOR Bluetooth modem)

4 Analog display device: Observe maximum load

5 Cable screen; observe cable specification


6 4-20mA HART (passive): Terminals 1 and 2

7 Overvoltage protection module

8 Terminal for potential equalization line

9 Cable entry

2-wire: 4-20mA HART, switch output

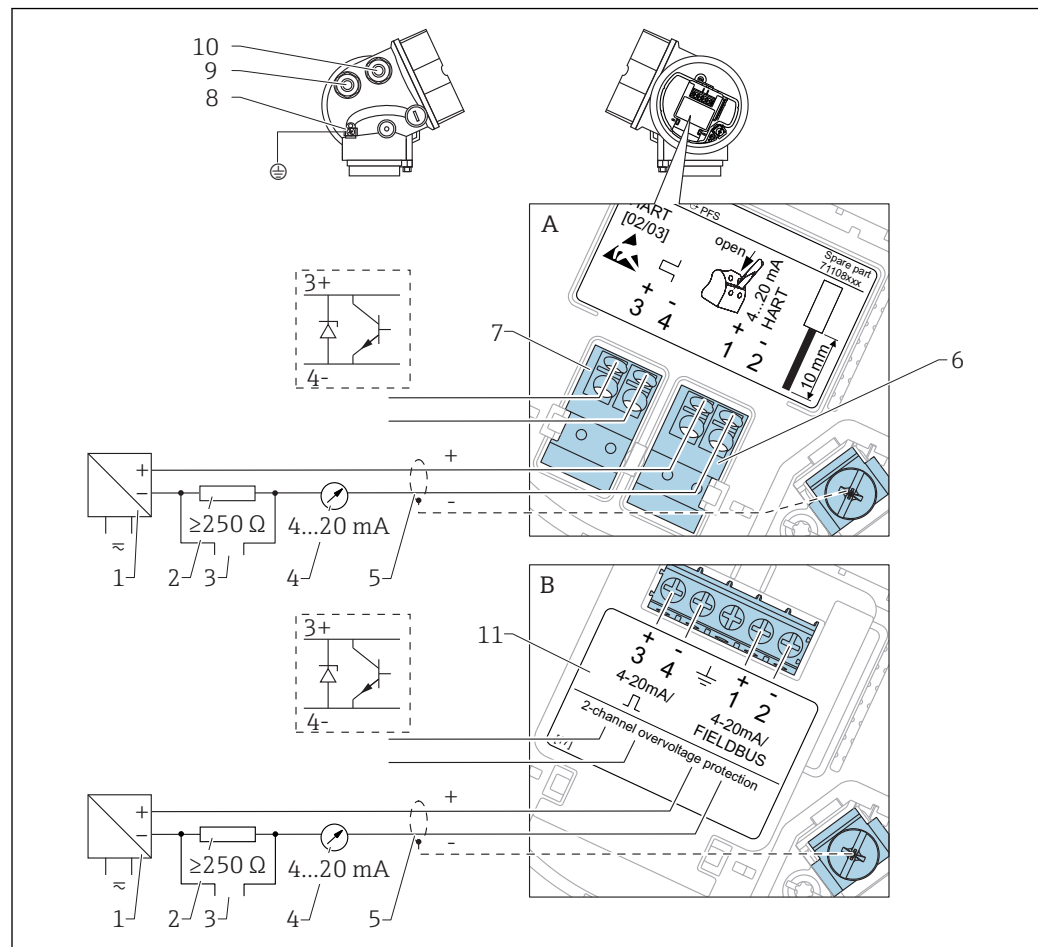


A0013759

9 Terminal assignment 2-wire; 4-20mA HART, switch output

- A Without integrated overvoltage protection
- B With integrated overvoltage protection
- 1 Active barrier with power supply (e.g. RN221N): Observe terminal voltage
- 2 HART communication resistor ($\geq 250 \Omega$): Observe maximum load
- 3 Connection for Commubox FXA195 or FieldXpert SFX350/SFX370 (via VIATOR Bluetooth modem)
- 4 Analog display device: Observe maximum load
- 5 Cable screen; observe cable specification
- 6 4-20mA HART (passive): Terminals 1 and 2
- 7 Switch output (open collector): Terminals 3 and 4
- 8 Terminal for potential equalization line
- 9 Cable entry for 4-20mA HART line
- 10 Cable entry for switch output line
- 11 Overvoltage protection module

2-wire: 4-20mA HART, 4-20mA

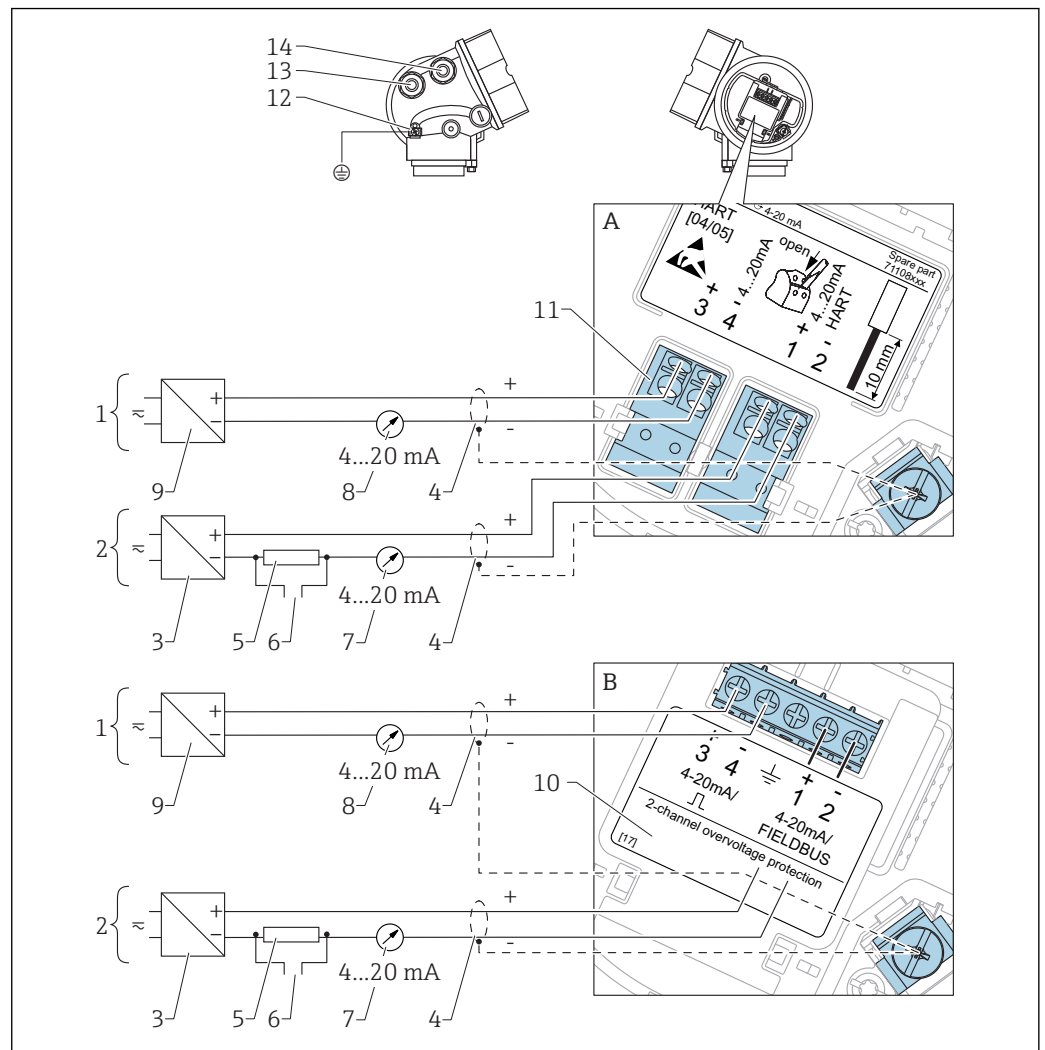


A0013923

10 Terminal assignment 2-wire, 4-20 mA HART, 4...20mA

- A Without integrated overvoltage protection
- B With integrated overvoltage protection
- 1 Connection current output 2
- 2 Connection current output 1
- 3 Supply voltage for current output 1 (e.g. RN221N); Observe terminal voltage
- 4 Cable screen; observe cable specification
- 5 HART communication resistor ($\geq 250 \Omega$); Observe maximum load
- 6 Connection for Commubox FXA195 or FieldXpert SFX350/SFX370 (via VIATOR Bluetooth modem)
- 7 Analog display device ; observe maximum load
- 8 Analog display device ; observe maximum load
- 9 Supply voltage for current output 2 (e.g. RN221N); Observe terminal voltage
- 10 Overvoltage protection module
- 11 Current output 2: Terminals 3 and 4
- 12 Terminal for the potential equalization line
- 13 Cable entry for current output 1
- 14 Cable entry for current output 2

i This version is also suited for single-channel operation. In this case, current output 1 (terminals 1 and 2) must be used.

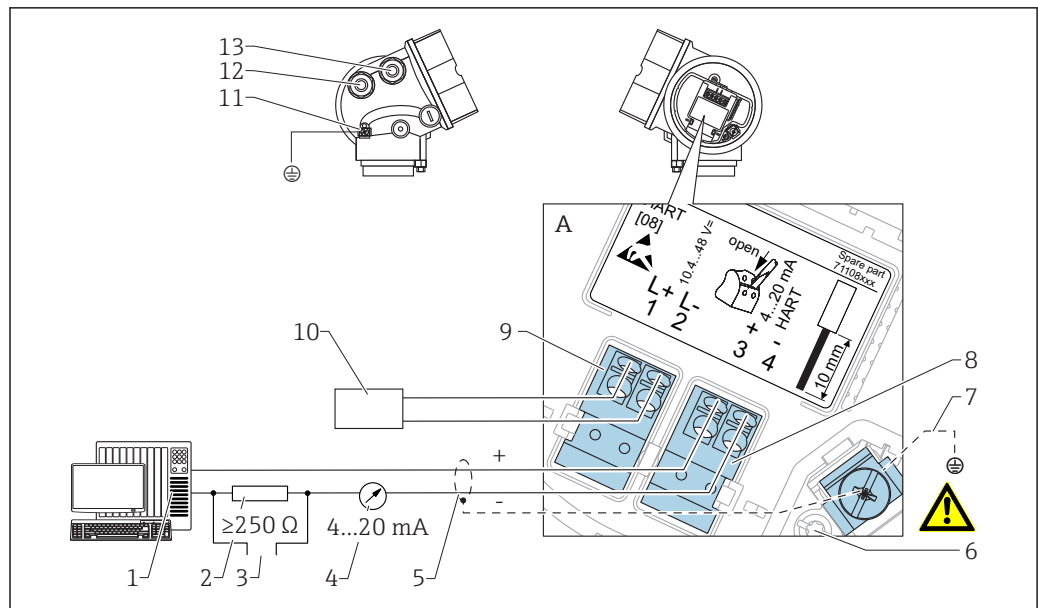
4-wire: 4-20mA HART (10.4 to 48 V_{DC})

A0011340

11 Terminal assignment 4-wire; 4-20mA HART (10.4 to 48 V_{DC})

- 1 Evaluation unit, e.g. PLC
- 2 HART communication resistor ($\geq 250 \Omega$): Observe maximum load
- 3 Connection for Commubox FXA195 or FieldXpert SFX350/SFX370 (via VIATOR Bluetooth modem)
- 4 Analog display device: Observe maximum load
- 5 Signal cable including screening (if required), observe cable specification
- 6 Protective connection; do not disconnect!
- 7 Protective earth, observe cable specification
- 8 4...20mA HART (active): Terminals 3 and 4
- 9 Supply voltage: Terminals 1 and 2
- 10 Supply voltage: Observe terminal voltage, observe cable specification
- 11 Terminal for potential equalization
- 12 Cable entry for signal line
- 13 Cable entry for power supply

4-wire: 4-20mA HART (90 to 253 V_{AC})

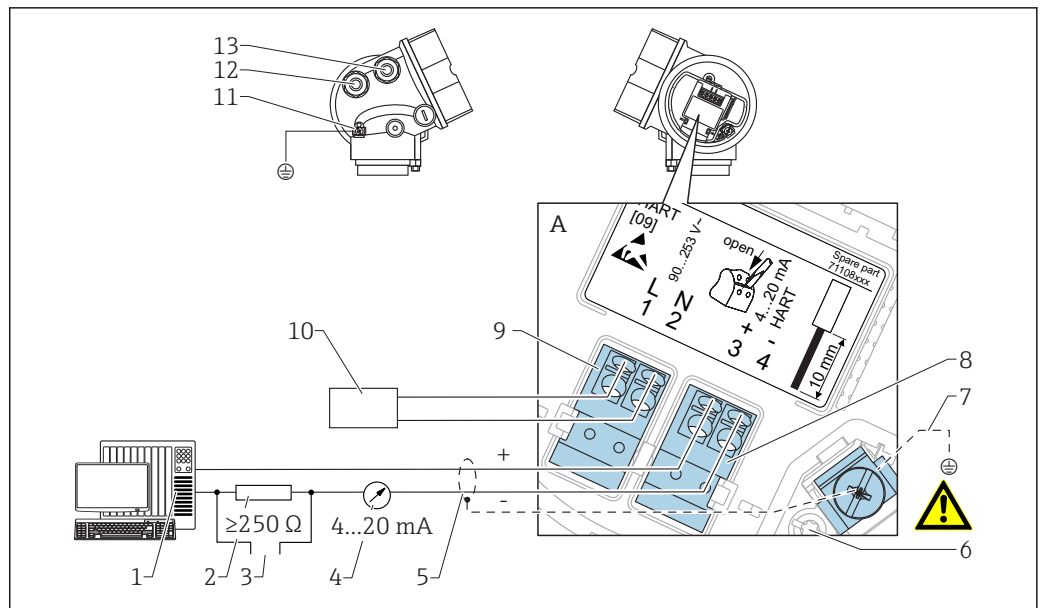

A0018965

12 Terminal assignment 4-wire; 4-20mA HART (90 to 253 V_{AC})



- 1 Evaluation unit, e.g. PLC
- 2 HART communication resistor ($\geq 250 \Omega$): Observe maximum load
- 3 Connection for Commubox FXA195 or FieldXpert SFX350/SFX370 (via VIATOR Bluetooth modem)
- 4 Analog display device: Observe maximum load
- 5 Signal cable including screening (if required), observe cable specification
- 6 Protective connection; do not disconnect!
- 7 Protective earth, observe cable specification
- 8 4...20mA HART (active): Terminals 3 and 4
- 9 Supply voltage: Terminals 1 and 2
- 10 Supply voltage: Observe terminal voltage, observe cable specification
- 11 Terminal for potential equalization
- 12 Cable entry for signal line
- 13 Cable entry for power supply

CAUTION

To ensure electrical safety:

- ▶ Do not disconnect the protective connection (6).
 - ▶ Disconnect the supply voltage before disconnecting the protective earth (7).
- i** Connect protective earth to the internal ground terminal (7) before connecting the supply voltage. If necessary, connect the potential matching line to the external ground terminal (11).
 - i** In order to ensure electromagnetic compatibility (EMC): Do not only ground the device via the protective earth conductor of the supply cable. Instead, the functional grounding must also be connected to the process connection (flange or threaded connection) or to the external ground terminal.
 - i** An easily accessible power switch must be installed in the proximity of the device. The power switch must be marked as a disconnecter for the device (IEC/EN61010).


Connection examples for the switch output
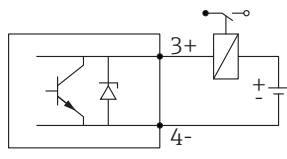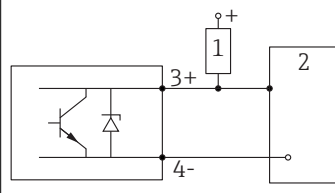
| | |
|--|--|
|  <p>13 Connection of a relay</p> <p>Suitable relays (examples):</p> <ul style="list-style-type: none"> ■ Solid-state relay: Phoenix Contact OV-24DC/480AC/5 with mounting rail connector UMK-1 OM-R/AMS ■ Electromechanical relay: Phoenix Contact PLC-RSC-12DC/21 |  <p>14 Connection of a digital input</p> <p>1 Pull-up resistor 2 Digital input</p> |
|--|--|

i For optimum interference immunity we recommend to connect an external resistor (internal resistance of the relay or Pull-up resistor) of $< 1\,000\ \Omega$.

HART loop converter HMX50

The dynamic variables of the HART protocol can be converted into individual 4 to 20 mA sections using the HART loop converter HMX50. The variables are assigned to the current output and the measuring ranges of the individual parameters are defined in the HMX50.

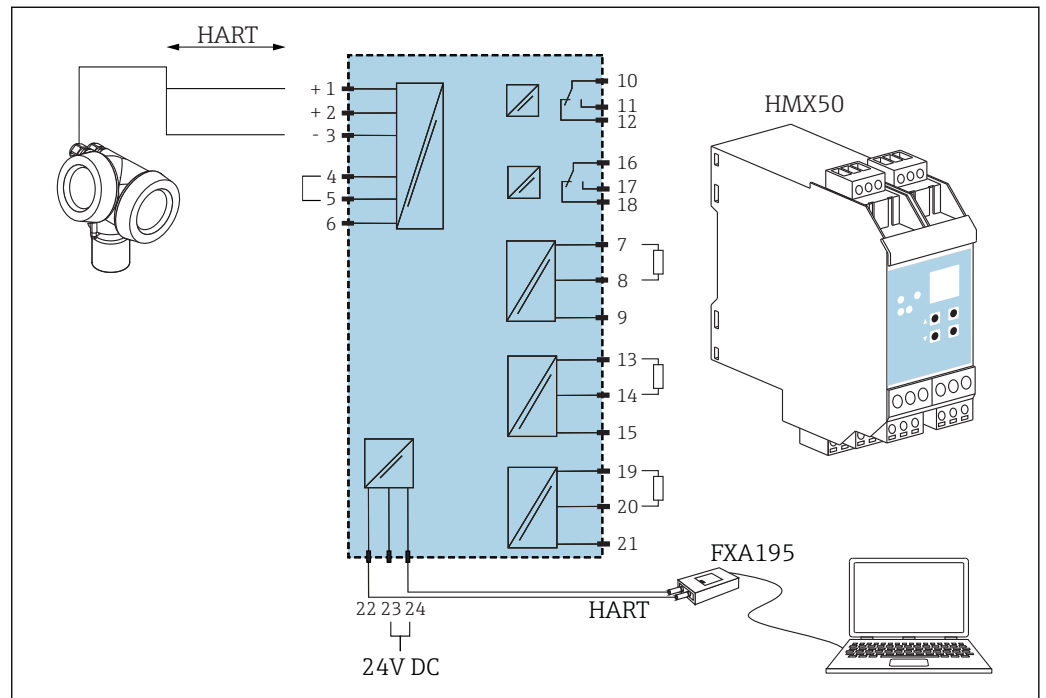

15 Connection diagram for HART loop converter HMX50 (example: passive 2-wire device and current outputs connected as power source)

The HART loop converter HMX50 can be acquired using the order number 71063562.

Additional documentation: TI00429F and BA00371F.

7.1.2 Cable specification

- **Devices without integrated overvoltage protection**
Pluggable spring-force terminals for wire cross-sections 0.5 to 2.5 mm² (20 to 14 AWG)
- **Devices with integrated overvoltage protection**
Screw terminals for wire cross-sections 0.2 to 2.5 mm² (24 to 14 AWG)
- For ambient temperature $T_U \geq 60^\circ\text{C}$ (140 °F): use cable for temperature $T_U + 20\text{ K}$.


HART

- A normal device cable suffices if only the analog signal is used.
- A shielded cable is recommended if using the HART protocol. Observe grounding concept of the plant.
- For 4-wire devices: Standard device cable is sufficient for the power line.


7.1.3 Device plug connectors

i For the versions with fieldbus plug connector (M12 or 7/8"), the signal line can be connected without opening the housing.

Pin assignment of the M12 plug connector
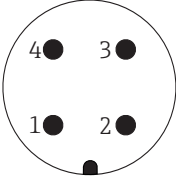
| | | |
|--|-----|---------------|
|  <p style="text-align: right; margin-right: 20px;">A0011175</p> | Pin | Meaning |
| | 1 | Signal + |
| | 2 | not connected |
| | 3 | Signal - |
| | 4 | Ground |

Pin assignment of the 7/8" plug connector
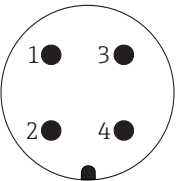
| | | |
|--|-----|---------------|
|  <p style="text-align: right; margin-right: 20px;">A0011176</p> | Pin | Meaning |
| | 1 | Signal - |
| | 2 | Signal + |
| | 3 | Not connected |
| | 4 | Screen |

7.1.4 Power supply

2-wire, 4-20mA HART, passive

2-wire; 4-20mA HART¹⁾

| "Approval" ²⁾ | Terminal voltage U at the device | Maximum load R, depending on the supply voltage U ₀ at the supply unit |
|---|----------------------------------|---|
| <ul style="list-style-type: none"> ▪ Non-Ex ▪ Ex nA ▪ CSA GP | 17.5 to 35 V | <p style="text-align: right; font-size: small;">A0014079</p> |
| Ex ic | 17.5 to 32 V | |
| Ex ia / IS | 17.5 to 30 V | |
| <ul style="list-style-type: none"> ▪ Ex d / XP ▪ Ex ic[ia] ▪ Ex tD / DIP | 18.5 to 30 V | <p style="text-align: right; font-size: small;">A0014080</p> |



- 1) Feature 020 of the product structure: option A
- 2) Feature 010 of the product structure

2-wire; 4-20 mA HART, switch output¹⁾

| "Approval" ²⁾ | Terminal voltage U at the device | Maximum load R, depending on the supply voltage U ₀ at the supply unit |
|--|----------------------------------|---|
| <ul style="list-style-type: none"> ▪ Non-Ex ▪ Ex nA ▪ Ex nA[ia] ▪ Ex ic ▪ Ex ic[ia] ▪ Ex d[ia] / XP ▪ Ex ta / DIP ▪ CSA GP | 12 to 35 V ³⁾ | <p style="text-align: right; font-size: small;">A0019136</p> |
| <ul style="list-style-type: none"> ▪ Ex ia / IS ▪ Ex ia + Ex d[ia] / IS + XP | 12 to 30 V ³⁾ | |

- 1) Feature 020 of the product structure: option B
- 2) Feature 010 of the product structure
- 3) For ambient temperatures $T_a \leq -30\text{ °C}$ (-22 °F) a minimum voltage of 14 V is required for the startup of the device at the MIN error current (3.6 mA).

2-wire; 4-20mA HART, 4-20mA¹⁾
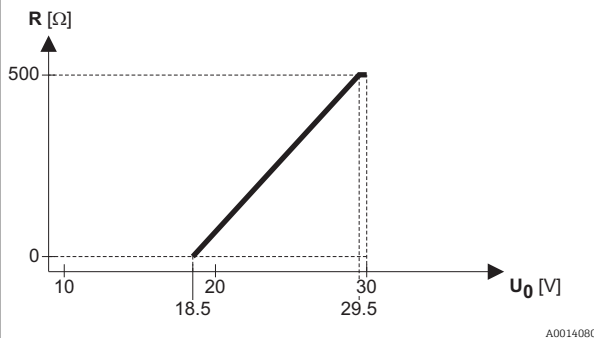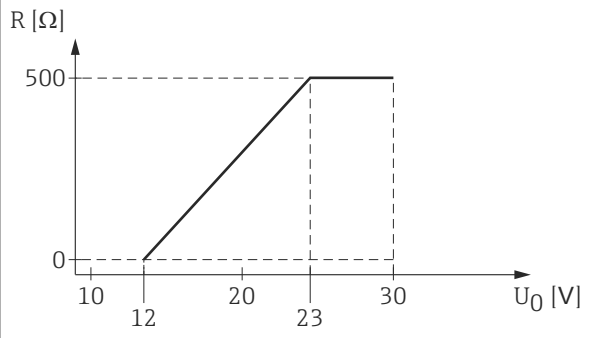
| "Approval" ²⁾ | Terminal voltage U at the device | Maximum load R, depending on the supply voltage U ₀ at the supply unit |
|--------------------------|-----------------------------------|--|
| any | Channel 1: 18.5 to 30 V |  <p style="text-align: right; font-size: small;">A0014080</p> |
| | Channel 2: 12 to 30 V |  <p style="text-align: right; font-size: small;">A0022583</p> |

1) Feature 020 of the product structure: option C

2) Feature 010 of the product structure

| | |
|--|-------------------------|
| Polarity reversal protection | Yes |
| Admissible residual ripple at f = 0 to 100 Hz | U _{SS} < 1 V |
| Admissible residual ripple at f = 100 to 10000 Hz | U _{SS} < 10 mV |

4-wire, 4-20mA HART, active

| "Power supply; Output" ¹⁾ | Terminal voltage | Maximum load R _{max} |
|--------------------------------------|--|-------------------------------|
| K: 4-wire 90-253VAC; 4-20mA HART | 90 to 253 V _{AC} (50 to 60 Hz), overvoltage category II | 500 Ω |
| L: 4-wire 10,4-48VDC; 4-20mA HART | 10.4 to 48 V _{DC} | |

1) Feature 020 of the product structure

7.1.5 Overvoltage protection

If the measuring device is used for level measurement in flammable liquids which requires the use of overvoltage protection according to DIN EN 60079-14, standard for test procedures 60060-1 (10 kA, pulse 8/20 μs), overvoltage protection has to be ensured by an integrated or external overvoltage protection module.

Integrated overvoltage protection


An integrated overvoltage protection module is available for 2-wire HART as well as PROFIBUS PA and FOUNDATION Fieldbus devices.

Product structure: Feature 610 "Accessory mounted", option NA "Overvoltage protection".

| Technical data | |
|--|----------------|
| Resistance per channel | 2 × 0.5 Ω max. |
| Threshold DC voltage | 400 to 700 V |
| Threshold impulse voltage | < 800 V |
| Capacitance at 1 MHz | < 1.5 pF |
| Nominal arrest impulse voltage (8/20 μs) | 10 kA |

External overvoltage protection

HAW562 or HAW569 from Endress+Hauser are suited as external overvoltage protection.

-  For detailed information please refer to the following documents:
- HAW562: TI01012K
 - HAW569: TI01013K

7.2 Connecting the device




Explosion hazard!

- ▶ Comply with the relevant national standards.
- ▶ Observe the specifications in the Safety Instructions (XA).
- ▶ Only use the specified cable glands.
- ▶ Check whether the supply voltage matches the specifications on the nameplate.
- ▶ Before connecting the device: Switch the supply voltage off.
- ▶ Before switching on the supply voltage: Connect the potential bonding line to the exterior ground terminal.


Required tools and accessories:

- For instruments with safety pin for the lid: AF 3 Allen key
- Wire stripping pliers
- When using stranded wires: Wire end sleeves.

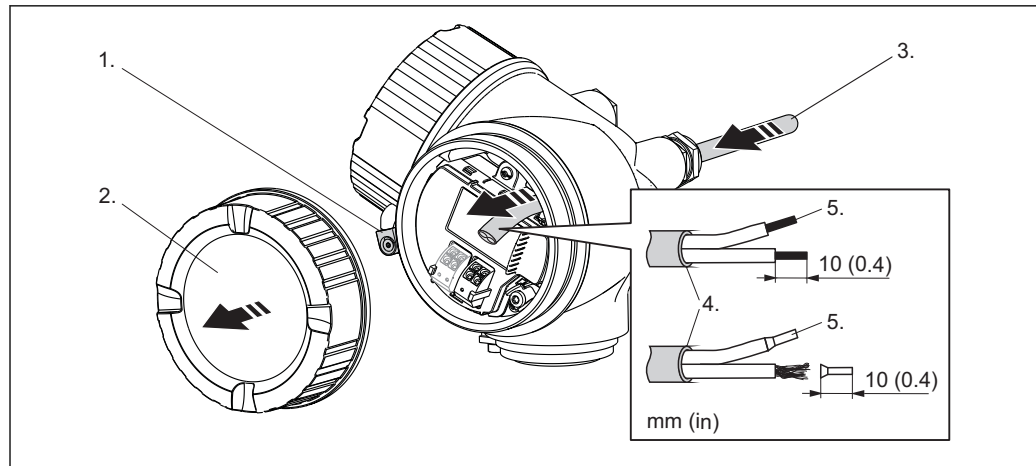

A0012619

1. Loosen the screw of the securing clamp of the connection compartment cover and turn the clamp 90° counterclockwise.
2. Unscrew the connection compartment cover.
3. Push the cable through the cable entry. To ensure tight sealing, do not remove the sealing ring from the cable entry.
4. Strip the cable.
5. Strip the cable ends 10 mm (0.4 in). For stranded cables, also attach wire end ferrules.
6. Firmly tighten the cable glands.
- 7.

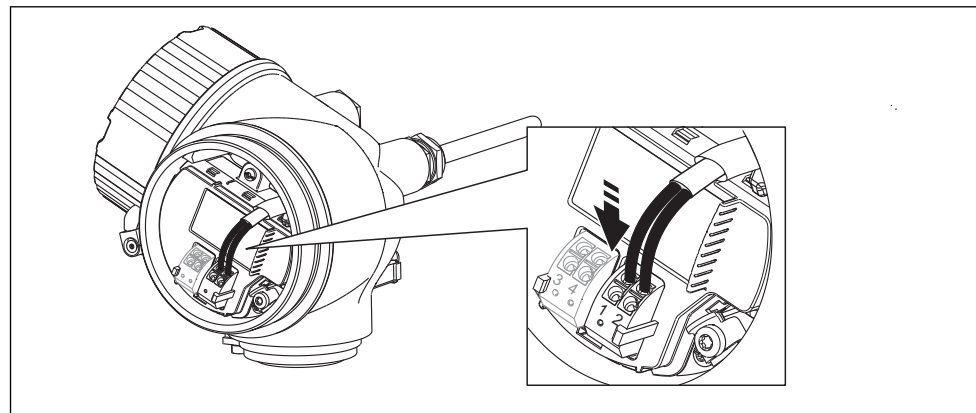

A0013837


Connect the cable in accordance with the terminal assignment → 35.

8. When using screened cable: Connect the cable screen to the ground terminal.
9. Screw the cover onto the connection compartment.
10. For instruments with safety pin for the lid: Adjust the safety pin so that its edge is over the edge of the display lid. Tighten the safety pin.

7.2.1 Pluggable spring-force terminals

Instruments without integrated overvoltage protection have pluggable spring-force terminals. Rigid conductors or flexible conductors with cable sleeve can directly be inserted and are contacted automatically.

To remove cables from the terminal: Press on the groove between the terminals using a flat-tip screwdriver ≤ 3 mm (0.12 inch) while pulling the cables out of the terminals.

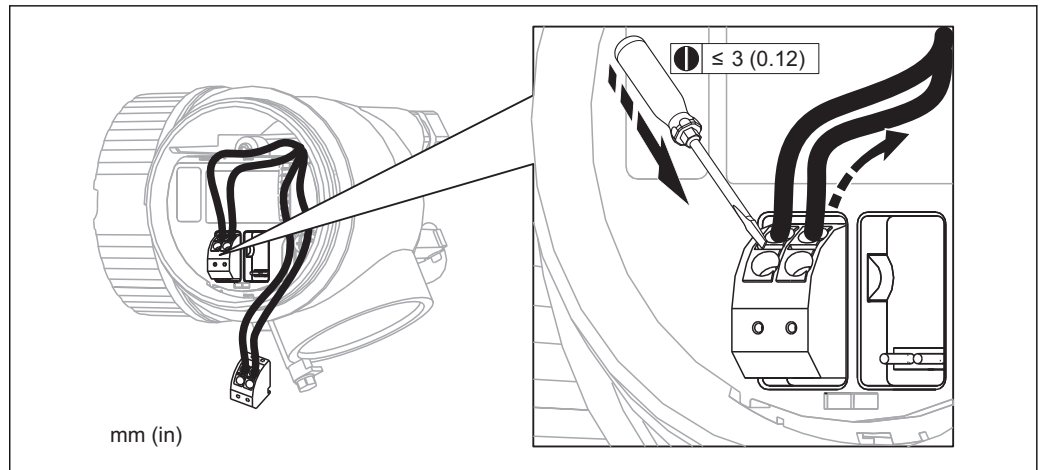



7.3 Post-connection check

| | |
|-----------------------|---|
| <input type="radio"/> | Are cables or the device undamaged (visual inspection)? |
| <input type="radio"/> | Do the cables comply with the requirements? |
| <input type="radio"/> | Do the cables have adequate strain relief? |
| <input type="radio"/> | Are all cable glands installed, firmly tightened and correctly sealed? |
| <input type="radio"/> | Does the supply voltage match the specifications on the transmitter nameplate? |
| <input type="radio"/> | Is the terminal assignment correct → 35? |
| <input type="radio"/> | If required: Is the protective earth connected correctly ? |
| <input type="radio"/> | If supply voltage is present: Is the device ready for operation and do values appear on the display module? |
| <input type="radio"/> | Are all housing covers installed and firmly tightened? |
| <input type="radio"/> | Is the securing clamp tightened correctly? |


8 Operation options

8.1 Overview

8.1.1 Local operation
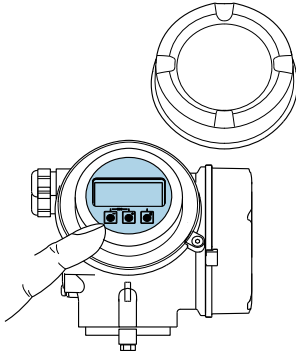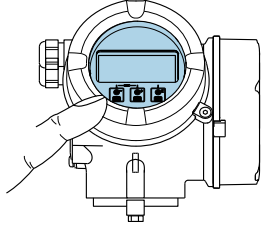
| Operation with | Pushbuttons | Touch Control |
|-------------------------------------|---|---|
| Order code for "Display; Operation" | Option C "SD02" | Option E "SD" |
| |  |  |
| Display elements | 4-line display | 4-line display white background lighting; switches to red in event of device error |
| | Format for displaying measured variables and status variables can be individually configured | |
| | Permitted ambient temperature for the display: -20 to +70 °C (-4 to +158 °F) The readability of the display may be impaired at temperatures outside the temperature range. | |
| Operating elements | local operation with 3 push buttons (⊕, ⊖, ⊞) | external operation via touch control; 3 optical keys: ⊕, ⊖, ⊞ |
| | Operating elements also accessible in various hazardous areas | |
| Additional functionality | Data backup function The device configuration can be saved in the display module. | |
| | Data comparison function The device configuration saved in the display module can be compared to the current device configuration. | |
| | Data transfer function The transmitter configuration can be transmitted to another device using the display module. | |

8.1.2 Operation with remote display and operating module FHX50

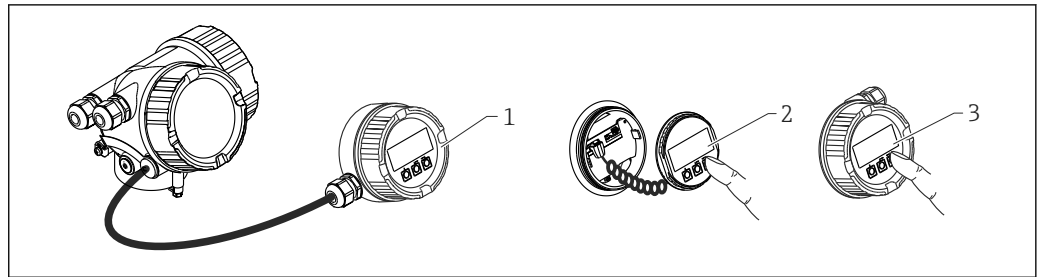


A0013137

16 FHX50 operating options

- 1 Housing of the remote display and operating module FHX50
- 2 Display and operating module SD02, push buttons; cover must be removed
- 3 Display and operating module SD03, optical keys; can be operated through the glass of the cover

8.1.3 Remote operation

Via HART protocol

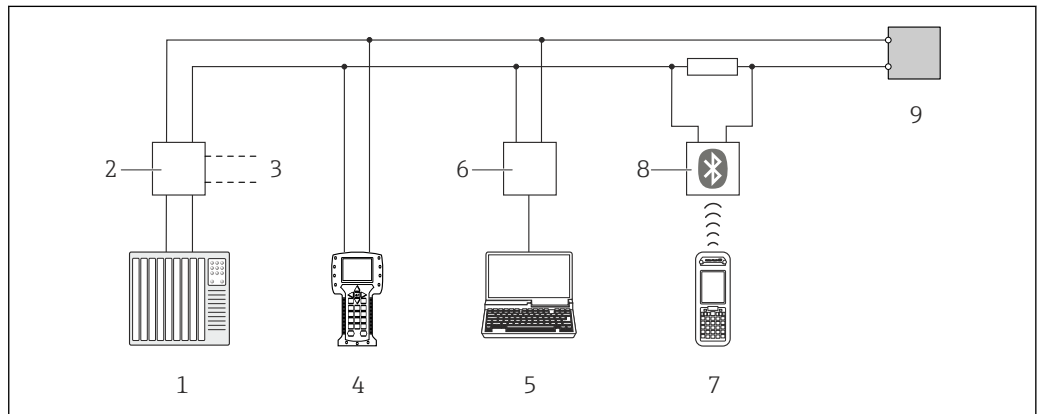


A0013764

17 Options for remote operation via HART protocol

- 1 PLC (programmable logic controller)
- 2 Transmitter power supply unit, e.g. RN221N (with communication resistor)
- 3 Connection for Commubox FXA191, FXA195 and Field Communicator 375, 475
- 4 Field Communicator 475
- 5 Computer with operating tool (e.g. FieldCare, AMS Device Manager, SIMATIC PDM)
- 6 Commubox FXA191 (RS232) or FXA195 (USB)
- 7 Field Xpert SFX350/SFX370
- 8 VIATOR Bluetooth modem with connecting cable
- 9 Transmitter

Via service interface (CDI)

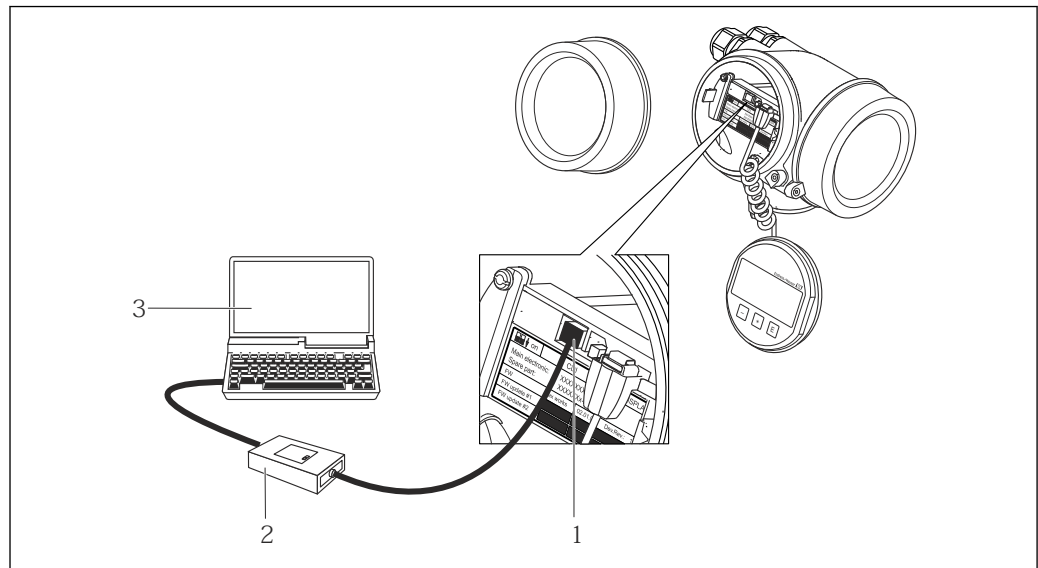

A0014019

- 1 Service interface (CDI) of the measuring device (= Endress+Hauser Common Data Interface)
- 2 Commubox FXA291
- 3 Computer with "FieldCare" operating tool

8.2 Structure and function of the operating menu


8.2.1 Structure of the operating menu

| Menu | Submenu / parameter | Meaning |
|---|------------------------------------|--|
| | Language ¹⁾ | Defines the operating language of the on-site display. |
| Commissioning ²⁾ | | Opens the interactive wizard for a guided commissioning of the device. As a rule, no additional settings in the other menus are required after the completion of the wizard. |
| Setup | Parameter 1 ... Parameter N | When all these parameters have been assigned appropriate values, the measured should be completely configured in a standard application. |
| | Advanced setup | Contains further submenus and parameters: <ul style="list-style-type: none"> ▪ to adapt the device to special measuring conditions. ▪ to process the measured value (scaling, linearization). ▪ to configure the signal output. |
| Diagnostics | Diagnostic list | Contains up to 5 currently active error messages. |
| | Event logbook ³⁾ | Contains the last 20 messages (which are no longer active). |
| | Device information | Contains information needed to identify the device. |
| | Measured values | Contains all current measured values. |
| | Data logging | Contains the history of the individual measuring values. |
| | Simulation | Used to simulate measured values or output values. |
| | Device check | Contains all parameters needed to check the measurement capability of the device. |
| | Heartbeat ⁴⁾ | Contains all wizards for the Heartbeat Verification and Heartbeat Monitoring application packages. |
| Expert ⁵⁾ Contains all parameters of the device (including those which are already contained in one of the above submenus). This menu is organized according to the function blocks of the device. The parameter of the Expert menu are described in: GP01014F (HART) | System | Contains all general device parameters which do not affect the measurement or the communication interface. |
| | Sensor | Contains all parameters needed to configure the measurement. |
| | Output | <ul style="list-style-type: none"> ▪ Contains all parameters needed to configure the current output. ▪ Contains all parameters needed to configure the switch output (PFS). |

| Menu | Submenu / parameter | Meaning |
|------|----------------------|--|
| | Communication | Contains all parameters needed to configure the digital communication interface. |
| | Diagnostics | Contains all parameters needed to detect and analyze operational errors. |

- 1) In case of operation via operating tools (e.g. FieldCare), the "Language" parameter is located at "Setup → Advanced setup → Display"
- 2) only for operation via a FDT/DTM system
- 3) only available with local operation
- 4) only available for operation via DeviceCare or FieldCare
- 5) On entering the "Expert" menu, an access code is always requested. If a customer specific access code has not been defined, "0000" has to be entered.


8.2.2 User roles and related access authorization

The two user roles **Operator** and **Maintenance** have different write access to the parameters if a device-specific access code has been defined. This protects the device configuration via the local display from unauthorized access →  54.

Access authorization to parameters

| User role | Read access | | Write access | |
|-------------|---|------------------|---|------------------|
| | Without access code (from the factory) | With access code | Without access code (from the factory) | With access code |
| Operator | ✓ | ✓ | ✓ | -- |
| Maintenance | ✓ | ✓ | ✓ | ✓ |


If an incorrect access code is entered, the user obtains the access rights of the **Operator** role.

 The user role with which the user is currently logged on is indicated by the **Access status display** parameter (for display operation) or **Access status tooling** parameter (for tool operation).

8.2.3 Write protection via access code

Using the device-specific access code, the parameters for the measuring device configuration are write-protected and their values can no longer be changed via local operation.

Define access code via local display

1. Navigate to: Setup → Advanced setup → Administration → Define access code → Define access code
2. Define a max. 4-digit numeric code as an access code.
3. Repeat the same code in **Confirm access code** parameter.
 - ↳ The -symbol appears in front of all write-protected parameters.




Define access code via operating tool (e.g. FieldCare)

1. Navigate to: Setup → Advanced setup → Administration → Define access code
2. Define a max. 4-digit numeric code as an access code.
 - ↳ Write protection is active.



Parameters that can always be changed

The write protection does not include certain parameters that do not affect the measurement. Despite the defined access code, they can always be modified, even if the other parameters are locked.



If no key is pressed for 10 minutes in the navigation and editing mode, the device automatically locks the write-protected parameters. If the user goes from the navigation and editing mode back to the measured value display mode, the device automatically locks the write-protected parameters after 60 s.

-  If write access is activated via access code, it can be also be deactivated only via the access code →  55.
- In the "Description of Device Parameters" documents, each write-protected parameter is identified with the -symbol.

8.2.4 Disabling write protection via access code

If the -symbol appears on the local display in front of a parameter, the parameter is write-protected by a device-specific access code and its value cannot be changed at the moment using the local display →  54.

The locking of the write access via local operation can be disabled by entering the device-specific access code.

1. After you press , the input prompt for the access code appears.
2. Enter the access code.
 - ↳ The -symbol in front of the parameters disappears; all previously write-protected parameters are now re-enabled.

8.2.5 Deactivation of the write protection via access code

Via local display

1. Navigate to Setup → Advanced setup → Administration → Define access code → Define access code
2. Enter **0000**.
3. Repeat **0000** in **Confirm access code** parameter.
 - ↳ The write protection is deactivated. Parameters can be changed without entering an access code.

Via operating tool (e.g. FieldCare)


1. Navigate to Setup → Advanced setup → Administration → Define access code
2. Enter **0000**.
 - ↳ The write protection is deactivated. Parameters can be changed without entering an access code.

8.2.6 Write protection via write protection switch

Unlike parameter write protection via a user-specific access code, this allows write access to the entire operating menu - except for the **"Contrast display" parameter** - to be locked.


The parameter values are now read only and cannot be edited any more (exception **"Contrast display" parameter**):

- Via local display
- Via service interface (CDI)
- Via HART protocol

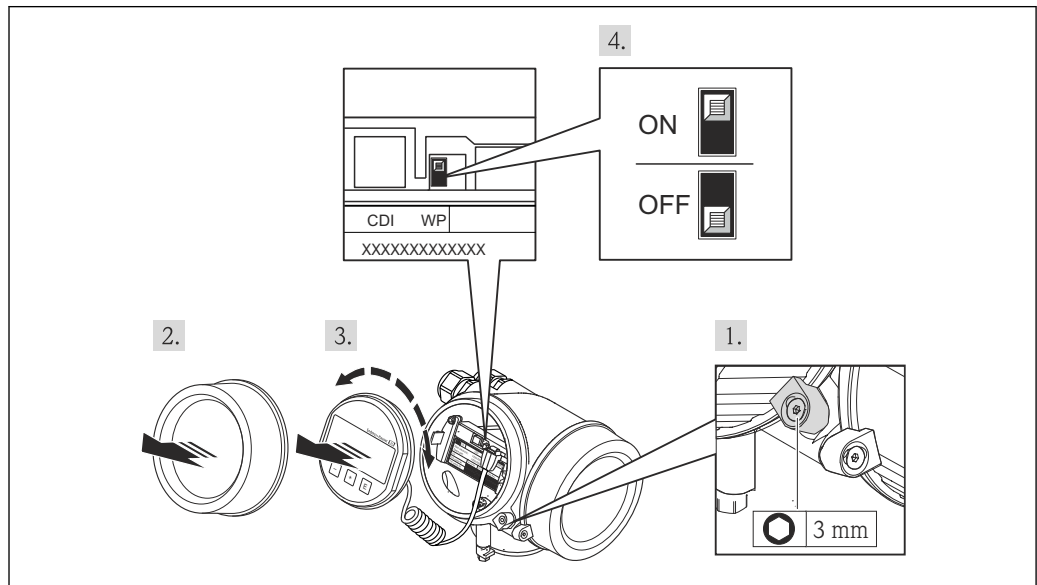


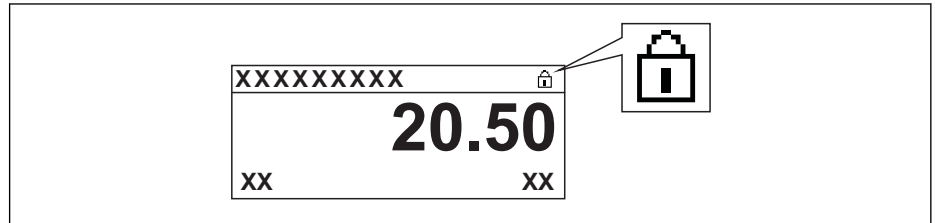
A0026157

1. Loosen the securing clamp.
2. Unscrew the housing cover.
3. Pull out the display module with a gentle rotation movement. To make it easier to access the lock switch, attach the display module to the edge of the electronics compartment.
 - ↳ Display module is attached to the edge of the electronics compartment.

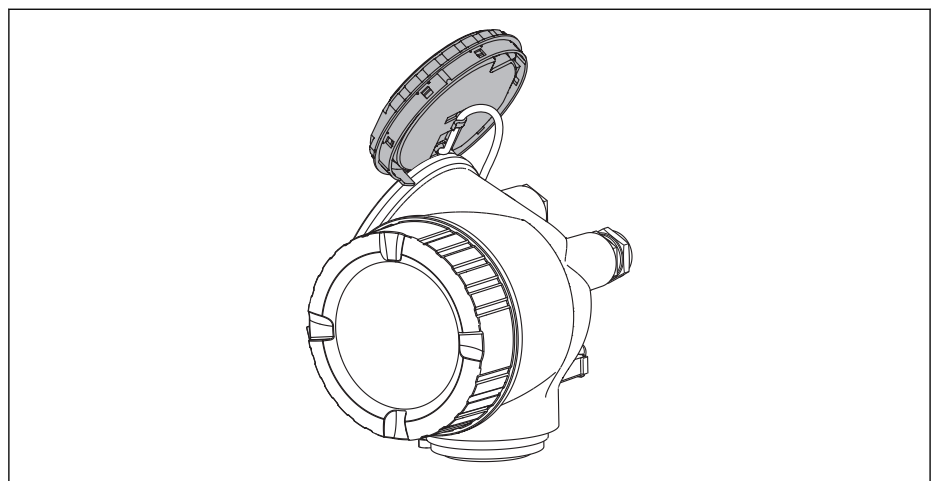


A0013909

4. Installing the lock switch (WP) on the main electronics module in the **ON** position enables the hardware write protection. Installing the lock switch (WP) on the main electronics module in the **OFF** position (factory setting) disables the hardware write protection.
 - ↳ If the hardware write protection is enabled: The **Hardware locked** option is displayed in the **Locking status** parameter. In addition to this, the -symbol appears in the header of the measured value display and in the navigation view in front of the parameters.



A0015870

If the hardware write protection is disabled: No option is displayed in the **Locking status** parameter. The -symbol disappears in the header of the measured value display and in the navigation view in front of the parameters.

5. Feed the spiral cable into the gap between the housing and main electronics module and plug the display module into the electronics compartment in the desired direction until it engages.
6. Screw the electronics compartment cover closed and tighten the securing clamp.

8.2.7 Enabling and disabling the keypad lock

The keypad lock allows to disable access to the entire operating menu via local operation. Thus navigating through the operating menu or modifying the values of individual parameters is no longer possible. Only the measured values on the measured value display can be read off.

The keylock is enabled and disabled via a context menu.

Enabling the keylock



For the SD03 display:

The keylock is automatically activated:

- If the device has not been operated via the display for > 1 minute.
- After a restart of the device.

To activate the keylock manually:

1. The device is in the measured value display.
Press for at least 2 seconds.
↳ A context menu appears.
2. Select **Keylock on** from the context menu.
↳ The keylock is enabled.




When attempting to access the operating menu while the keylock is enabled, the **Keylock on** message appears.

Disabling the keylock

1. The keylock is enabled.
Press for at least 2 seconds.
↳ A context menu appears.
2. Select **Keylock off** from the context menu.
↳ The keylock is disabled.

8.3 Display and operating module

8.3.1 Display appearance

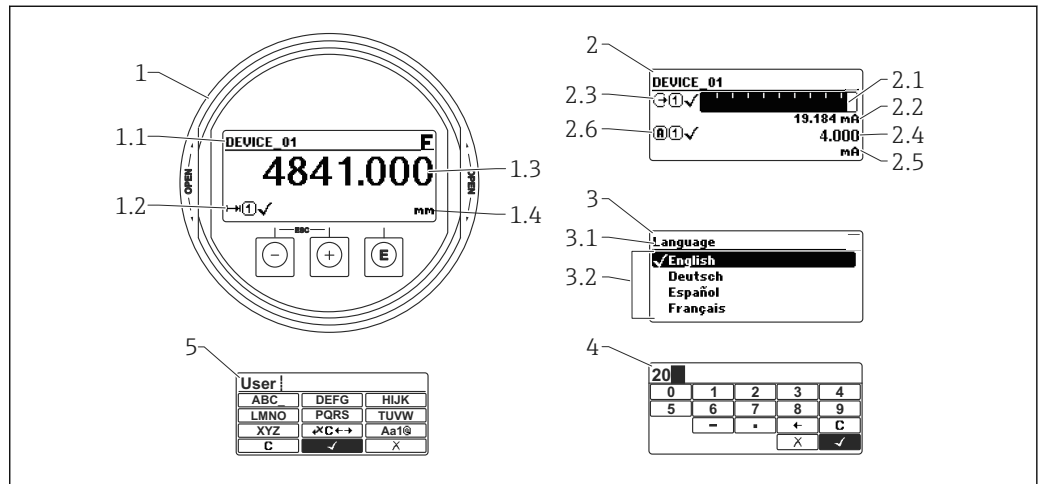





A0012635

18 Appearance of the display and operation module for on-site operation

- 1 Measured value display (1 value max. size)
- 1.1 Header containing tag and error symbol (if an error is active)
- 1.2 Measured value symbols
- 1.3 Measured value
- 1.4 Unit
- 2 Measured value display (1 bargraph + 1 value)
- 2.1 Bargraph for measured value 1
- 2.2 Measured value 1 (including unit)
- 2.3 Measured value symbols for measured value 1
- 2.4 Measured value 2
- 2.5 Unit for measured value 2
- 2.6 Measured value symbols for measured value 2
- 3 Representation of a parameter (here: a parameter with selection list)
- 3.1 Header containing parameter name and error symbol (if an error is active)
- 3.2 Selection list; marks the current parameter value.
- 4 Input matrix for numbers
- 5 Input matrix for alphanumeric and special characters



Display symbols for the submenus

| Symbol | Meaning |
|---|---|
|  A0011975 | Display/operation Is displayed: <ul style="list-style-type: none"> in the main menu next to the selection "Display/operation" in the header, if you are in the "Display/operation" menu |
|  A0011974 | Setup Is displayed: <ul style="list-style-type: none"> in the main menu next to the selection "Setup" in the header, if you are in the "Setup" menu |
|  A0011976 | Expert Is displayed: <ul style="list-style-type: none"> in the main menu next to the selection "Expert" in the header, if you are in the "Expert" menu |
|  A0011977 | Diagnostics Is displayed: <ul style="list-style-type: none"> in the main menu next to the selection "Diagnostics" in the header, if you are in the "Diagnostics" menu |











Status signals

| | |
|----------------------|---|
| F A0013956 | "Failure" A device error is present. The measured value is no longer valid. |
| C A0013959 | "Function check" The device is in service mode (e.g. during a simulation). |
| S A0013958 | "Out of specification" The device is operated: <ul style="list-style-type: none"> Outside of its technical specifications (e.g. during startup or a cleaning) Outside of the configuration carried out by the user (e.g. level outside configured span) |
| M A0013957 | "Maintenance required" Maintenance is required. The measured value is still valid. |








Display symbols for the locking state

| Symbol | Meaning |
|---|---|
|  A0011978 | Display parameter Marks display-only parameters which can not be edited. |
|  A0011979 | Device locked <ul style="list-style-type: none"> In front of a parameter name: The device is locked via software and/or hardware. In the header of the measured value screen: The device is locked via hardware. |


Measured value symbols

| Symbol | Meaning |
|---|---|
| Measured values | |
|  A0011995 | Level |
|  A0011996 | Distance |
|  A0011998 | Current output |
|  A0011999 | Measured current |
|  A0012106 | Terminal voltage |
|  A0012104 | Temperature of the electronics or the sensor |
| Measuring channels | |
|  A0012000 | Measuring channel 1 |
|  A0012107 | Measuring channel 2 |
| Status of the measured value | |
|  A0012102 | Status "Alarm" The measurement is interrupted. The output assumes the defined alarm value. A diagnostic message is generated. |
|  A0012103 | Status "Warning" The device continues measuring. A diagnostic message is generated. |

8.3.2 Operating elements

| Key | Meaning |
|---|--|
|  A0013969 | <p>Minus key</p> <p><i>For menu, submenu</i> Moves the selection bar upwards in a picklist.</p> <p><i>For text and numeric editor</i> In the input mask, moves the selection bar to the left (backwards).</p> |
|  A0013970 | <p>Plus key</p> <p><i>For menu, submenu</i> Moves the selection bar downwards in a picklist.</p> <p><i>For text and numeric editor</i> In the input mask, moves the selection bar to the right (forwards).</p> |
|  A0013952 | <p>Enter key</p> <p><i>For measured value display</i></p> <ul style="list-style-type: none"> ▪ Pressing the key briefly opens the operating menu. ▪ Pressing the key for 2 s opens the context menu. <p><i>For menu, submenu</i></p> <ul style="list-style-type: none"> ▪ Pressing the key briefly Opens the selected menu, submenu or parameter. ▪ Pressing the key for 2 s for parameter: If present, opens the help text for the function of the parameter. <p><i>For text and numeric editor</i></p> <ul style="list-style-type: none"> ▪ Pressing the key briefly <ul style="list-style-type: none"> - Opens the selected group. - Carries out the selected action. ▪ Pressing the key for 2 s confirms the edited parameter value. |
|  A0013971 | <p>Escape key combination (press keys simultaneously)</p> <p><i>For menu, submenu</i></p> <ul style="list-style-type: none"> ▪ Pressing the key briefly <ul style="list-style-type: none"> - Exits the current menu level and takes you to the next higher level. - If help text is open, closes the help text of the parameter. ▪ Pressing the key for 2 s returns you to the measured value display ("home position"). <p><i>For text and numeric editor</i> Closes the text or numeric editor without applying changes.</p> |
|  A0013953 | <p>Minus/Enter key combination (press and hold down the keys simultaneously)</p> <p>Reduces the contrast (brighter setting).</p> |
|  A0013954 | <p>Plus/Enter key combination (press and hold down the keys simultaneously)</p> <p>Increases the contrast (darker setting).</p> |
|  A0013955 | <p>Minus/Plus/Enter key combination (press and hold down the keys simultaneously)</p> <p><i>For measured value display</i> Enables or disables the keypad lock.</p> |






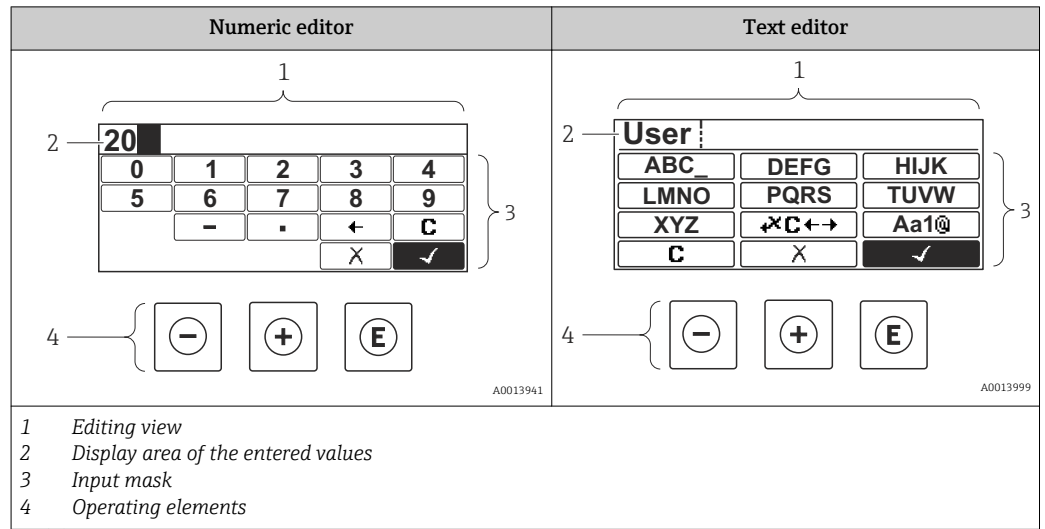

8.3.3 Entering numbers and text





Input mask










The following input symbols are available in the input mask of the numeric and text editor:

Numeric editor symbols

| Symbol | Meaning |
|---|--|
|  A0013998 | Selection of numbers from 0 to 9. |
|  A0016619 | Inserts decimal separator at the input position. |
|  A0016620 | Inserts minus sign at the input position. |
|  A0013985 | Confirms selection. |
|  A0016621 | Moves the input position one position to the left. |
|  A0013986 | Exits the input without applying the changes. |
|  A0014040 | Clears all entered characters. |

Text editor symbols

| Symbol | Meaning |
|---|---|
|  A0013997 | Selection of letters from A to Z |
|  A0013981 | Toggle <ul style="list-style-type: none"> Between upper-case and lower-case letters For entering numbers For entering special characters |

| | |
|---|--|
|  <small>A0013985</small> | Confirms selection. |
|  <small>A0013987</small> | Switches to the selection of the correction tools. |
|  <small>A0013986</small> | Exits the input without applying the changes. |
|  <small>A0014040</small> | Clears all entered characters. |
| Correction symbols under  | |
|  <small>A0013989</small> | Clears all entered characters. |
|  <small>A0013991</small> | Moves the input position one position to the right. |
|  <small>A0013990</small> | Moves the input position one position to the left. |
|  <small>A0013988</small> | Deletes one character immediately to the left of the input position. |


8.3.4 Opening the context menu


Using the context menu, the user can call up the following menus quickly and directly from the operational display:

- Setup
- Conf. backup disp.
- Simulation



Calling up and closing the context menu

The user is in the operational display.

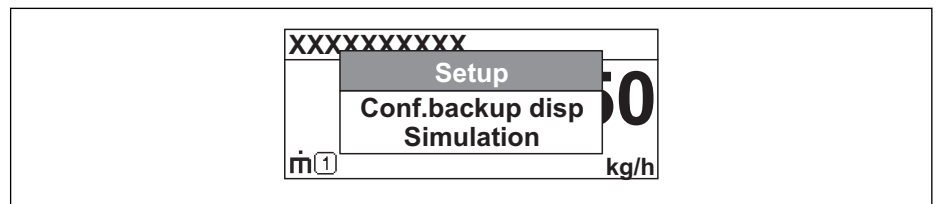

1. Press  for 2 s.
 - ↳ The context menu opens.



A0014003-EN


2. Press  +  simultaneously.
 - ↳ The context menu is closed and the operational display appears.

Calling up the menu via the context menu

1. Open the context menu.
2. Press  to navigate to the desired menu.
3. Press  to confirm the selection.
 - ↳ The selected menu opens.

8.3.5 Envelope curve on the display and operating module

In order to assess the measuring signal, the envelope curve and - if a mapping has been recorded - the mapping curve can be displayed:

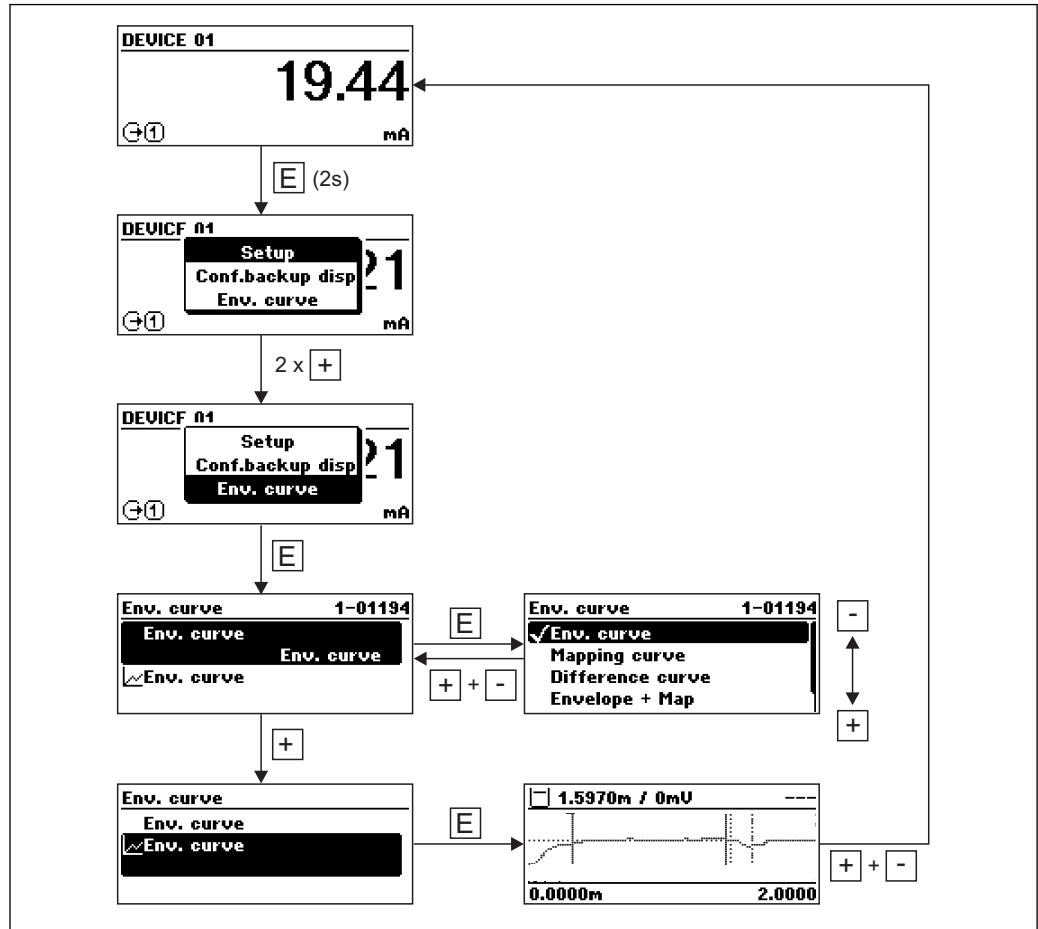

A0014277

9 Device integration via the HART protocol

9.1 Overview of the Device Description files (DD)

HART

| | |
|--------------------|---|
| Manufacturer ID | 0x11 |
| Device type | 0x1122 |
| HART specification | 7.0 |
| DD files | For information and files see: <ul style="list-style-type: none"> ▪ www.endress.com ▪ www.hartcomm.org |

9.2 HART device variables and measuring values

On delivery the following measuring values are assigned to the HART device variables:

Device variables for interface measurements

| Device variable | Measuring value |
|--------------------------|------------------------------|
| Primary variable (PV) | Interface linearized |
| Secondary variable (SV) | Level linearized |
| Tertiary variable (TV) | Thickness upper layer |
| Quaternary variable (QV) | Absolute interface amplitude |




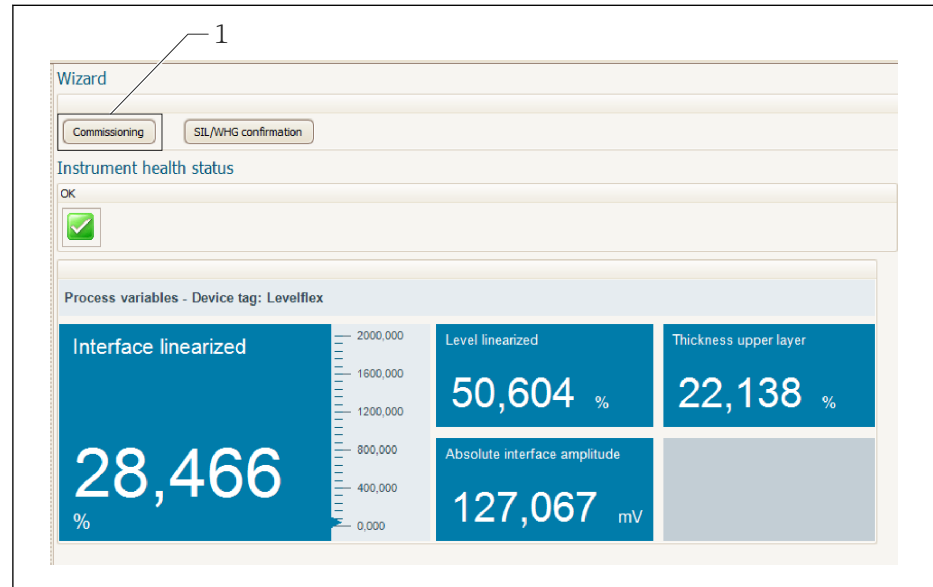
The allocation of the measuring values to the device variables can be changed in the following submenu:

Expert → Communication → Output

10 Commissioning via wizard

A wizard guiding the user through the initial setup is available in FieldCare and DeviceCare.

1. Connect the device to FieldCare or DeviceCare →  49.
2. Open the device in FieldCare or DeviceCare.
 - ↳ The dashboard (home page) of the device appears:



1 "Commissioning" button calls up the wizard.

3. Click on "Commissioning" to call up the wizard.
 4. Enter or select the appropriate value for each parameter. These values are immediately written to the device.
 5. Click "Next" to switch to the next page.
 6. After finishing the last page, click "End of sequence" to close the wizard.
- i** If the wizard is cancelled before all necessary parameters have been set, the device may be in an undefined state. A reset to the default settings is recommended in this case.

11 Commissioning via operating menu


11.1 Installation and function check

Make sure that all final checks have been completed before you start up your measuring point:

- Checklist "Post-installation check" → 34
- Checklist "Post-connection check" → 47

11.2 Setting the operating language


Factory setting: English or ordered local language

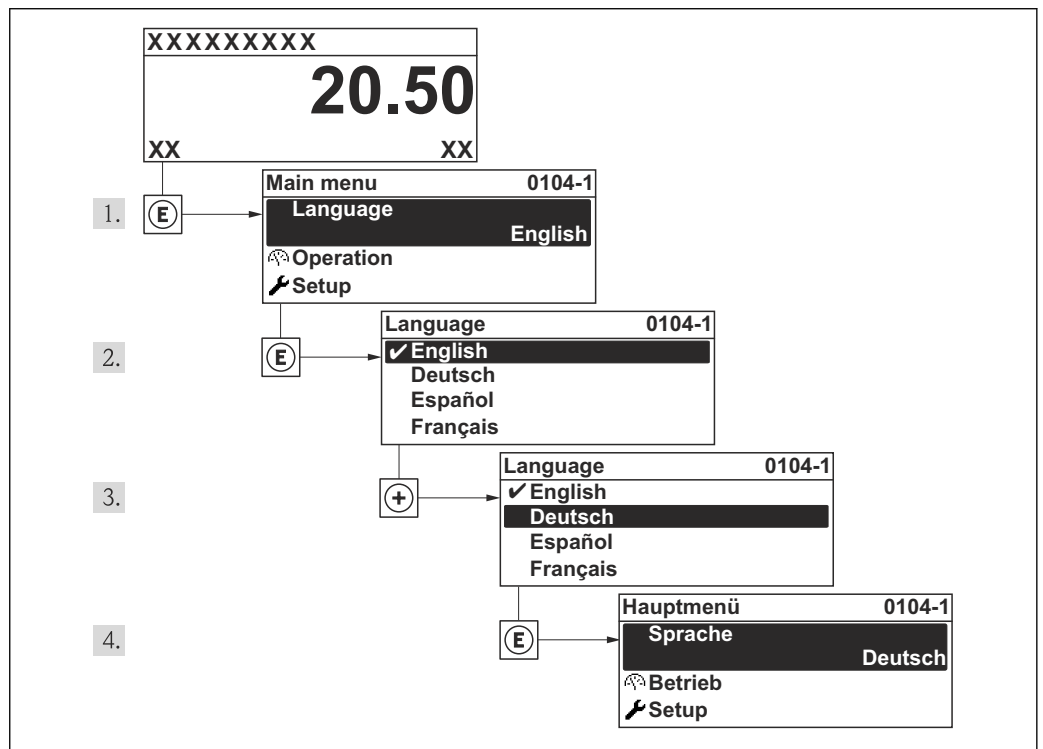

19 Using the example of the local display

A0013996

11.3 Configuration of an interface measurement

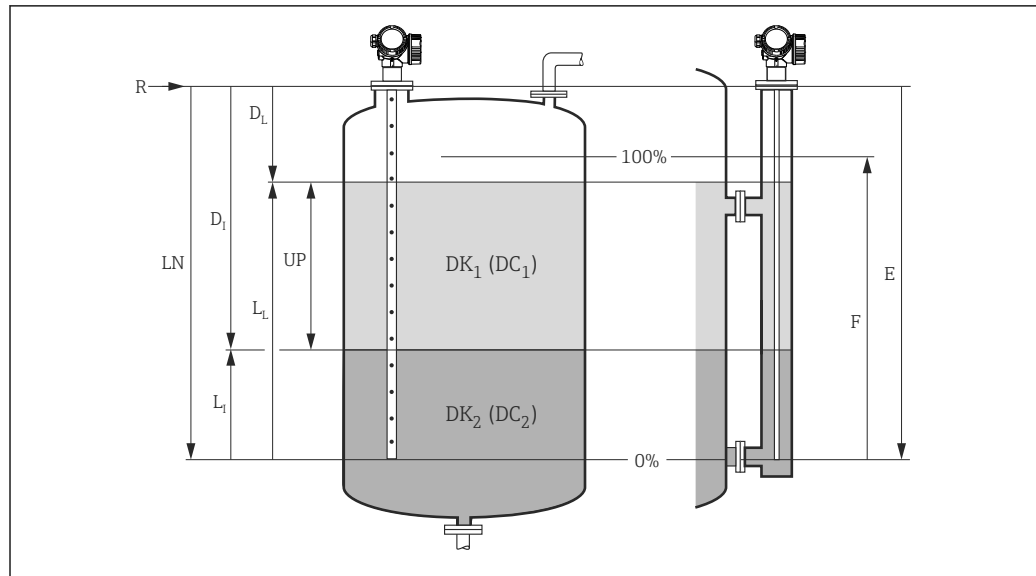

A0011177

20 Configuration parameters for interface measurements

- LN Length of probe
- R Reference point of the measurement
- DI "Interface distance" parameter (Distance from reference point to lower medium)
- LI Interface
- DL Distance
- LL Level
- UP Thickness upper layer
- E "Empty calibration" parameter (= zero point)
- F "Full calibration" parameter (= span)

1. Navigate to: Setup → Device tag
 - ↳ Enter tag for measuring point.
2. Navigate to: Setup → Operating mode
 - ↳ Select **Interface with capacitance** option.
3. Navigate to: Setup → Distance unit
 - ↳ Select distance unit.
4. Navigate to: Setup → Tank type
 - ↳ Select tank type.
5. For Tank type = Bypass / pipe:
 - Navigate to: Setup → Tube diameter
 - ↳ Enter the diameter of the bypass or stilling well.
6. Navigate to: Setup → DC value
 - ↳ Enter relative dielectric constant (ϵ_r) of the upper medium.
7. Navigate to: Setup → Empty calibration
 - ↳ Enter the distance E between the reference point R and the minimum level (0%).
8. Navigate to: Setup → Full calibration
 - ↳ Enter distance F between the minimum (0%) and maximum (100%) level.
9. Navigate to: Setup → Level
 - ↳ Displays the measured level L_L .
10. Navigate to: Setup → Interface
 - ↳ Displays the interface height L_I .

11. Navigate to: Setup → Distance
 - ↳ Displays the distance D_L between the reference point R and the level L_L .
12. Navigate to: Setup → Interface distance
 - ↳ Displays the distance D_I between the reference point R and the interface L_I .
13. Navigate to: Setup → Signal quality
 - ↳ Displays the signal quality of the level echo.
14. For operation via local display:
Navigate to: Setup → Mapping → Confirm distance
 - ↳ Make sure the vessel is completely empty. Then select Tank empty option.
15. For operation via operating tool (e.g. FieldCare):
Navigate to: Setup → Confirm distance
 - ↳ Make sure the vessel is completely empty. Then select Tank empty option.

NOTICE**Wrong dielectric constant of the lower medium may cause a measuring error.**

- ▶ If, in the case of **Operating mode = Interface with capacitance**, the lower medium is not water, it is necessary to specify its dielectric constant (DC value): Setup → Advanced setup → Interface → DC value lower medium

NOTICE**Wrong empty capacitance may cause a measuring error.**

- ▶ For rod and rope probes with **Operating mode = Interface with capacitance** a correct measurement is only possible if the empty capacitance has been determined. To do so, make sure that the vessel is completely empty and set **Confirm distance = Tank empty**. Only in exceptional cases (if the tank can not be emptied during the commissioning) the empty capacitance of rod probes may be entered manually: Expert → Sensor → Interface → Empty capacitance.



- For coax probes the correct empty capacitance is always set on delivery.

11.4 Recording the reference curve

After the configuration of the measurement it is recommended to record the current envelope curve as a reference curve. The reference curve can be used later on in the process for diagnostic purposes. To record the reference curve use the **Save reference curve** parameter.


Navigation in the menu

Expert → Diagnostics → Envelope diagnostics → Save reference curve

Meaning of the options

- No
No action
- Yes
The current envelope curve is saved as reference curve.

 In devices which have been delivered with software version 01.00.zz or 01.01.zz, this submenu is only visible for the "Service" user role.

 The reference curve can only be displayed in the envelope curve diagram of FieldCare after it has been loaded from the device into FieldCare. This is performed by the "Load Reference Curve" function in FieldCare:



 21 The "Load Reference Curve" function

11.5 Configuration of the on-site display

11.5.1 Factory settings of the on-site display for interface measurements

| Parameter | Factory setting for devices with 1 current output | Factory setting for devices with 2 current outputs |
|-----------------|---|--|
| Format display | 1 value, max. size | 1 value, max. size |
| Value 1 display | Interface linearized | Interface linearized |
| Value 2 display | Level linearized | Level linearized |
| Value 3 display | Thickness upper layer | Current output 1 |
| Value 4 display | Current output 1 | Current output 2 |

11.5.2 Adjustment of the on-site display

The on-site display can be adjusted in the following menu:
Setup → Advanced setup → Display

11.6 Configuration of the current outputs

11.6.1 Factory setting of the current outputs for interface measurements

| Current output | Allocated measuring value | 4mA value | 20mA value |
|-----------------|---------------------------|--|--|
| 1 | Interface linearized | 0% or the corresponding linearized value | 100% or the corresponding linearized value |
| 2 ¹⁾ | Level linearized | 0% or the corresponding linearized value | 100% or the corresponding linearized value |

1) for devices with 2 current outputs

11.6.2 Adjustment of the current outputs

The current outputs can be adjusted in the following submenus:

Basic settings

Setup → Advanced setup → Current output 1 to 2

Advanced settings

Expert → Output 1 to 2 → Current output 1 to 2

See "Description of Device Parameters" GP01000F

11.7 Configuration management

After commissioning, you can save the current device configuration, copy it to another measuring point or restore the previous device configuration. You can do so using the **Configuration management** parameter and its options.

Navigation path in the operating menu

Setup → Advanced setup → Configuration backup display → Configuration management

Meaning of the options

■ **Cancel**

No action is executed and the user exits the parameter.

■ **Execute backup**

A backup copy of the current device configuration in the HistoROM (built-in in the device) is saved to the display module of the device. The backup copy comprises the transmitter and sensor data of the device.

■ **Restore**

The last backup copy of the device configuration is copied from the display module to the HistoROM of the device. The backup copy comprises the transmitter and sensor data of the device.

■ **Duplicate**

The transmitter configuration is duplicated to another device using the transmitter display module. The following parameters, which characterize the individual measuring point are **not** included in the transmitted configuration:


- HART date code
- HART short tag
- HART message
- HART descriptor
- HART address
- Device tag
- Medium type



■ **Compare**

The device configuration saved in the display module is compared to the current device configuration of the HistoROM. The result of this comparison is displayed in the **Comparison result** parameter.

■ **Clear backup data**

The backup copy of the device configuration is deleted from the display module of the device.



 While this action is in progress, the configuration cannot be edited via the local display and a message on the processing status appears on the display.

 If an existing backup is restored to a different device using the **Restore** option, it may occur that some device functionalities are no longer available. In some cases even a device reset →  169 will not restore the original status.

In order to transmit a configuration to a different device, the **Duplicate** option should always be used.

11.8 Protection of the settings against unauthorized changes







There are two ways to protect the settings against unauthorized changes:

- Via parameter settings (software locking) →  54
- Via locking switch (hardware locking) →  56

12 Diagnostics and troubleshooting

12.1 General trouble shooting

12.1.1 General errors

| Error | Possible cause | Remedial action |
|--|---|--|
| Device does not respond. | Supply voltage does not match the value indicated on the nameplate. | Connect the correct voltage. |
| | The polarity of the supply voltage is wrong. | Correct the polarity. |
| | The cables do not contact the terminals properly. | Ensure electrical contact between the cable and the terminal. |
| Values on the display invisible | Contrast setting is too weak or too strong. | <ul style="list-style-type: none"> ▪ Increase contrast by pressing  and  simultaneously. ▪ Decrease contrast by pressing  and  simultaneously. |
| | The plug of the display cable is not connected correctly. | Connect the plug correctly. |
| | Display is defective. | Replace display. |
| "Communication error" is indicated on the display when starting the device or connecting the display | Electromagnetic interference | Check grounding of the device. |
| | Broken display cable or display plug. | Exchange display. |
| Output current < 3.6 mA | Signal cable connection incorrect. | Check connection. |
| | Electronics is defective. | Replace electronics. |
| HART communication does not function. | Communication resistor missing or incorrectly installed. | Install the communication resistor (250 Ω) correctly →  35. |
| | Commubox connected incorrectly. | Connect Commubox correctly →  49. |
| | Commubox not switched to HART mode. | Set the selection switch of the Commubox to the HART position. |
| CDI communication does not work. | Wrong setting of the COM port on the computer. | Check the setting of the COM port on the computer and change it if necessary. |
| Device measures incorrectly. | Parametrization error | Check and adjust parameterization. |

12.1.2 Parametrization errors

Parametrization errors for level measurements

| Error | Possible cause | Remedial action |
|--|--|--|
| Measured value wrong | If measured distance (Setup → Distance) matches the real distance: Calibration error | <ul style="list-style-type: none"> ■ Check and adjust the Empty calibration parameter (→ 113) if necessary. ■ Check and adjust the Full calibration parameter (→ 114) if necessary. ■ Check and adjust linearization if necessary (Linearization submenu (→ 132)). |
| | If measured distance (Setup → Distance) does not match the real distance: An interference echo affects the measurement. | Perform mapping (Confirm distance parameter (→ 118)). |
| No change of the measured value when emptying/filling the tank | An interference echo affects the measurement. | Perform mapping (Confirm distance parameter (→ 118)). |
| | Build-up at the probe. | Clean the probe. |
| | Error in the echo tracking | Deactivate echo tracking: Expert → Sensor → Echo tracking → Evaluation mode = History off). |
| The diagnostic message Echo lost appears after switching on the supply voltage. | Echo threshold too high. | Check the Medium group parameter (→ 113). If necessary select a more detailed setting in the Medium property parameter. |
| | Level echo suppressed. | Delete mapping and record new mapping curve if required (Record map parameter (→ 120)). |
| Device displays a level when the tank is empty. | Incorrect probe length | Carry out probe length correction (Confirm probe length parameter (→ 148)). |
| | Interference echo | Carry out mapping over entire probe while the tank is empty (Confirm distance parameter (→ 118)). |
| Wrong slope of the level in the entire measuring range | Wrong tank type selected. | Set Tank type parameter (→ 112) correctly. |


Parametrization errors for interface measurements

| Error | Possible cause | Remedial action |
|---|---|--|
| Wrong slope of the measured interface level | Wrong dielectric constant (DC value). | Enter the correct dielectric constant (DC value) of the upper medium (DC value parameter (→ 116)). |
| The measured values for the interface and the total level are identical | Echo threshold for the total level too high due to a wrong dielectric constant. | Enter the correct dielectric constant (DC value) of the upper medium (DC value parameter (→ 116)). |
| If the interface layers are thin, the total level jumps to the interface level. | The thickness of the upper medium is less than 60 mm (2.4 in). | Interface measurement is only possible if the thickness of the interface is greater than 60 mm (2.4 in). |

12.2 Diagnostic information on local display

12.2.1 Diagnostic message

Faults detected by the self-monitoring system of the measuring device are displayed as a diagnostic message in alternation with the measured value display.

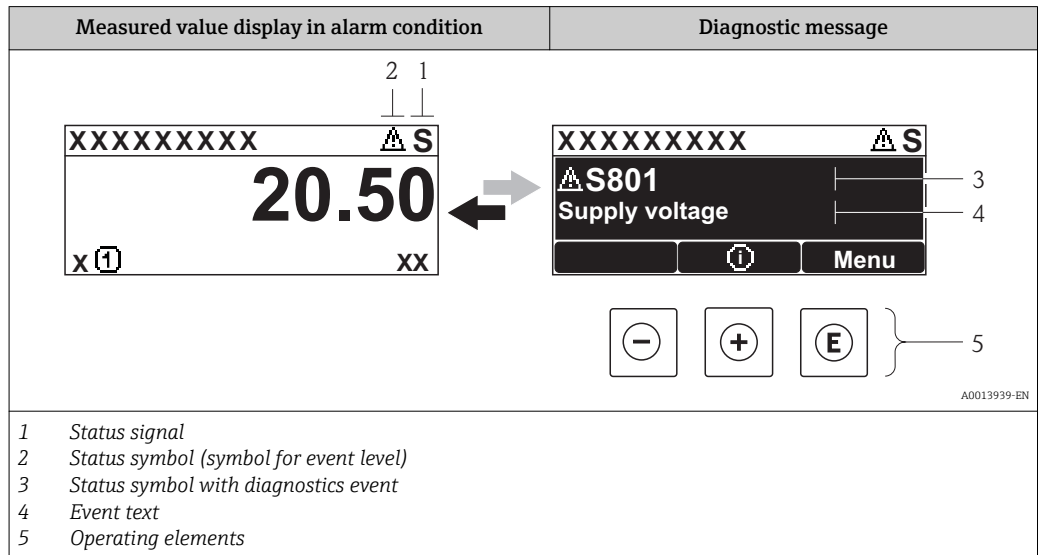

Status signals


| | |
|-------------------------------------|---|
| F <small>A0013956</small> | "Failure" A device error is present. The measured value is no longer valid. |
| C <small>A0013959</small> | "Function check" The device is in service mode (e.g. during a simulation). |
| S <small>A0013958</small> | "Out of specification" The device is operated: <ul style="list-style-type: none"> ▪ Outside of its technical specifications (e.g. during startup or a cleaning) ▪ Outside of the configuration carried out by the user (e.g. level outside configured span) |
| M <small>A0013957</small> | "Maintenance required" Maintenance is required. The measured value is still valid. |


Status symbol (symbol for event level)



| | |
|-----------------------------|---|
| <small>A0013961</small> | "Alarm" status The measurement is interrupted. The signal outputs take on the defined alarm condition. A diagnostic message is generated. |
| <small>A0013962</small> | "Warning" status The device continues to measure. A diagnostic message is generated. |

Diagnostics event and event text

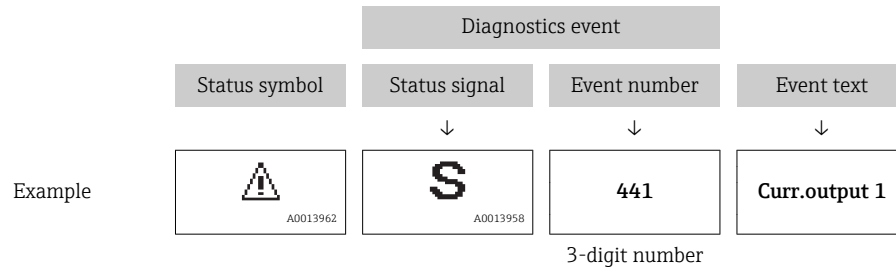

The fault can be identified using the diagnostics event. The event text helps you by providing information about the fault. In addition, the corresponding symbol is displayed before the diagnostics event.




If two or more diagnostic messages are pending simultaneously, only the message with the highest priority is shown. Additional pending diagnostic messages can be shown in **Diagnostic list** submenu (→  174).

-  Past diagnostic messages that are no longer pending are shown as follows:
- On the local display:
 - in **Event logbook** submenu (→  175)
 - in FieldCare:
 - via the "Event List /HistoROM" function.

Operating elements

| Operating functions in menu, submenu | |
|---|---|
|  A0013970 | Plus key Opens the message about the remedial measures. |
|  A0013952 | Enter key Opens the operating menu. |

12.2.2 Calling up remedial measures

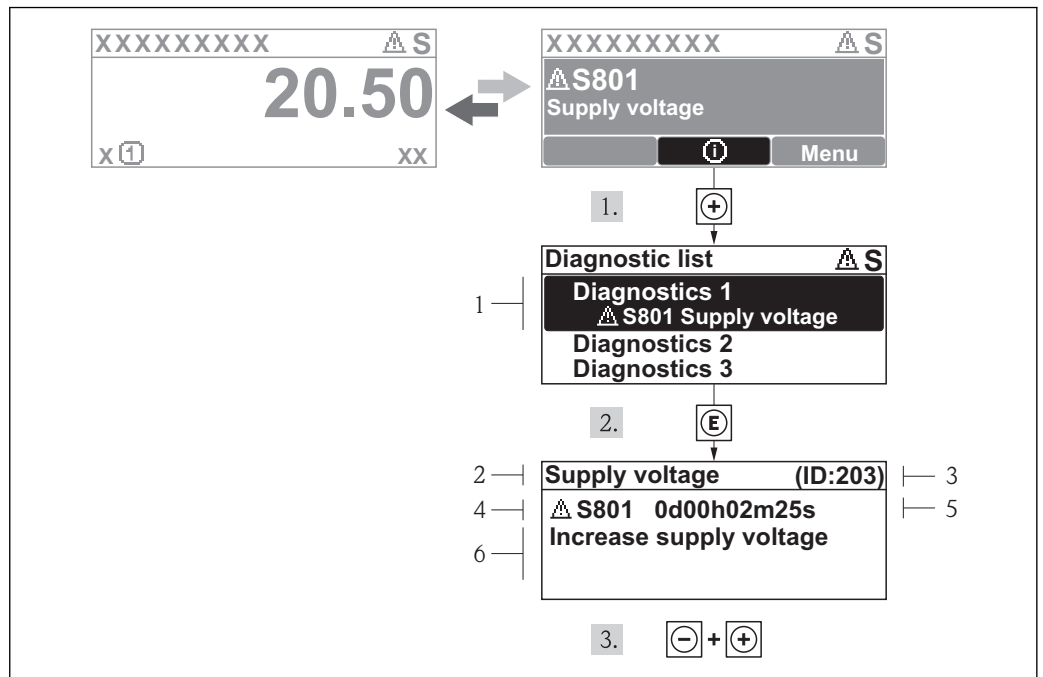

A0013940-EN

22 Message for remedial measures

- 1 Diagnostic information
- 2 Short text
- 3 Service ID
- 4 Diagnostic behavior with diagnostic code
- 5 Operation time of occurrence
- 6 Remedial measures

The user is in the diagnostic message.

1. Press **+** (**i** symbol).
 - ↳ **Diagnostic list** submenu opens.
2. Select the desired diagnostic event with **+** or **-** and press **E** .
 - ↳ The message for the remedial measures for the selected diagnostic event opens.
3. Press **-** + **+** simultaneously.
 - ↳ The message for the remedial measures closes.

The user is in the **Diagnostics** menu at an entry for a diagnostics event, e.g. in **Diagnostic list** submenu or in **Previous diagnostics**.

1. Press **E**.
 - ↳ The message for the remedial measures for the selected diagnostic event opens.
2. Press **-** + **+** simultaneously.
 - ↳ The message for the remedial measures closes.

12.3 Diagnostic event in the operating tool

If a diagnostic event is present in the device, the status signal appears in the top left status in the operating tool along with the corresponding symbol for event level in accordance with NAMUR NE 107:

- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)

Calling up remedial measures

1. Navigate to the **Diagnostics** menu.
 - ↳ In the **Actual diagnostics** parameter, the diagnostic event is shown with event text.
2. On the right in the display range, hover the cursor over the **Actual diagnostics** parameter.
 - ↳ A tool tip with remedial measures for the diagnostic event appears.




12.4 Diagnostic list

In the Diagnostic list submenu, up to 5 currently pending diagnostic messages can be displayed. If more than 5 messages are pending, the messages with the highest priority are shown on the display.

Navigation path

Diagnostics → Diagnostic list

Calling up and closing the remedial measures

1. Press .
- ↳ The message for the remedial measures for the selected diagnostic event opens.
2. Press  +  simultaneously.
- ↳ The message about the remedial measures closes.

12.5 List of diagnostic events

| Diagnostic number | Short text | Remedy instructions | Status signal [from the factory] | Diagnostic behavior [from the factory] |
|------------------------------------|-------------------------|---|----------------------------------|--|
| Diagnostic of sensor | | | | |
| 003 | Broken probe detected | 1. Check map 2. Check sensor | F | Alarm |
| 046 | Build-up detected | Clean sensor | F | Alarm |
| 104 | HF cable | and check sealing 1. Dry HF cable connection 2. Change HF cable | F | Alarm |
| 105 | HF cable | 1. Tighten HF cable connection 2. Check sensor 3. Change HF cable | F | Alarm |
| 106 | Sensor | 1. Check sensor 2. Check HF cable 3. Contact service | F | Alarm |
| Diagnostic of electronic | | | | |
| 242 | Software incompatible | 1. Check software 2. Flash or change main electronics module | F | Alarm |
| 252 | Modules incompatible | 1. Check electronic modules 2. Change I/O or main electronic module | F | Alarm |
| 261 | Electronic modules | 1. Restart device 2. Check electronic modules 3. Change I/O Modul or main electronics | F | Alarm |
| 262 | Module connection | 1. Check module connections 2. Change electronic modules | F | Alarm |
| 270 | Main electronic failure | Change main electronic module | F | Alarm |
| 271 | Main electronic failure | 1. Restart device 2. Change main electronic module | F | Alarm |
| 272 | Main electronic failure | 1. Restart device 2. Contact service | F | Alarm |
| 273 | Main electronic failure | 1. Emergency operation via display 2. Change main electronics | F | Alarm |
| 275 | I/O module defective | Change I/O module | F | Alarm |
| 276 | I/O module faulty | 1. Restart device 2. Change I/O module | F | Alarm |
| 276 | I/O module failure | | F | Alarm |
| 282 | Data storage | 1. Restart device 2. Contact service | F | Alarm |
| 283 | Memory content | 1. Transfer data or reset device 2. Contact service | F | Alarm |
| 311 | Electronic failure | Maintenance required! 1. Do not perform reset 2. Contact service | M | Warning |
| Diagnostic of configuration | | | | |
| 410 | Data transfer | 1. Check connection 2. Retry data transfer | F | Alarm |
| 411 | Up-/download active | Up-/download active, please wait | C | Warning |
| 412 | Processing download | Download active, please wait | C | Warning |

| Diagnostic number | Short text | Remedy instructions | Status signal [from the factory] | Diagnostic behavior [from the factory] |
|------------------------------|-------------------------------------|--|----------------------------------|--|
| 431 | Trim 1 to 2 | Carry out trim | C | Warning |
| 435 | Linearization | Check linearization table | F | Alarm |
| 437 | Configuration incompatible | 1. Restart device 2. Contact service | F | Alarm |
| 438 | Dataset | 1. Check data set file 2. Check device configuration 3. Up- and download new configuration | M | Warning |
| 441 | Current output 1 to 2 | 1. Check process 2. Check current output settings | S | Warning |
| 484 | Failure mode simulation | Deactivate simulation | C | Alarm |
| 485 | Simulation measured value | Deactivate simulation | C | Warning |
| 491 | Current output 1 to 2 simulation | Deactivate simulation | C | Warning |
| 494 | Switch output simulation | Deactivate simulation switch output | C | Warning |
| 495 | Diagnostic event simulation | Deactivate simulation | C | Warning |
| 585 | Simulation distance | Deactivate simulation | C | Warning |
| Diagnostic of process | | | | |
| 801 | Energy too low | Increase supply voltage | S | Warning |
| 803 | Current loop | 1. Check wiring 2. Change I/O module | F | Alarm |
| 825 | Operating temperature | 1. Check ambient temperature 2. Check process temperature | S | Warning |
| 825 | Operating temperature | | F | Alarm |
| 921 | Change of reference | 1. Check reference configuration 2. Check pressure 3. Check sensor | S | Warning |
| 936 | EMC interference | Check installation on EMC | F | Alarm |
| 941 | Echo lost | Check parameter 'DC value' | F | Alarm ¹⁾ |
| 942 | In safety distance | 1. Check level 2. Check safety distance 3. Reset self holding | S | Alarm ¹⁾ |
| 943 | In blocking distance | Reduced accuracy Check level | S | Warning |
| 944 | Level range | Reduced accuracy Level at process connection | S | Warning |
| 950 | Advanced diagnostic 1 to 2 occurred | Maintain your diagnostic event | M | Warning ¹⁾ |

1) Diagnostic behavior can be changed.

12.6 Event logbook

12.6.1 Event history

A chronological overview of the event messages that have occurred is provided in the **Event list** submenu ²⁾.

Navigation path




Diagnostics → Event logbook → Event list

A maximum of 100 event messages can be displayed in chronological order.




The event history includes entries for:

- Diagnostic events
- Information events

In addition to the operation time of its occurrence, each event is also assigned a symbol that indicates whether the event has occurred or is ended:

- Diagnostic event
 - : Event has occurred
 - : Event has ended
- Information event
 - : Event has occurred

Calling up and closing the remedial measures

1. Press .
 - ↳ The message for the remedial measures for the selected diagnostic event opens.
2. Press  +  simultaneously.
 - ↳ The message about the remedial measures closes.

12.6.2 Filtering the event logbook

Using the **Filter options** parameter, you can define which category of event messages is displayed in the **Event list** submenu angezeigt werden.

Navigation path

Diagnostics → Event logbook → Filter options

Filter categories

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information

12.6.3 Overview of information events

| Info number | Info name |
|-------------|-----------------------|
| I1000 | ----- (Device ok) |
| I1089 | Power on |
| I1090 | Configuration reset |
| I1091 | Configuration changed |

2) This submenu is only available for operation via local display. In the case of operation via FieldCare, the event list can be displayed with the "Event List / HistoROM" functionality of FieldCare.

| Info number | Info name |
|-------------|----------------------------------|
| I1092 | Embedded HistoROM deleted |
| I1110 | Write protection switch changed |
| I1137 | Electronic changed |
| I1151 | History reset |
| I1154 | Reset terminal voltage min/max |
| I1155 | Reset electronic temperature |
| I1156 | Memory error trend |
| I1157 | Memory error event list |
| I1184 | Display connected |
| I1185 | Display backup done |
| I1186 | Restore via display done |
| I1187 | Settings downloaded with display |
| I1188 | Display data cleared |
| I1189 | Backup compared |
| I1256 | Display: access status changed |
| I1264 | Safety sequence aborted |
| I1335 | Firmware changed |
| I1397 | Fieldbus: access status changed |
| I1398 | CDI: access status changed |
| I1512 | Download started |
| I1513 | Download finished |
| I1514 | Upload started |
| I1515 | Upload finished |
| I1554 | Safety sequence started |
| I1555 | Safety sequence confirmed |
| I1556 | Safety mode off |

12.7 Firmware history

| Date | Software version | Modifications | Documentation (FMP55, HART) | | |
|---------|------------------|--|--|--|--|
| | | | Operating Instructions | Description of Parameters | Technical Information |
| 07.2010 | 01.00.zz | Original software | BA01003F/00/EN/05.10 | GP01000F/00/EN/05.10 | TI01003F/00/EN/05.10 |
| 01.2011 | 01.01.zz | <ul style="list-style-type: none"> ▪ SIL integrated ▪ Improvements and bugfixes ▪ additional languages | <ul style="list-style-type: none"> ▪ BA01003F/00/EN/10.10 ▪ BA01003F/00/EN/13.11 ▪ BA01003F/00/EN/14.12 | <ul style="list-style-type: none"> ▪ GP01000F/00/EN/10.10 ▪ GP01000F/00/EN/13.11 | <ul style="list-style-type: none"> ▪ TI01003F/00/EN/10.10 ▪ TI01003F/00/EN/13.11 ▪ TI01003F/00/EN/14.12 ▪ TI01003F/00/EN/15.12 |
| 02.2014 | 01.02.zz | <ul style="list-style-type: none"> ▪ Support of SD03 ▪ additional languages ▪ HistoROM functionality enhanced ▪ "Advanced Diagnostic" function block integrated ▪ Improvements and bugfixes | <ul style="list-style-type: none"> ▪ BA01003F/00/EN/15.13 ▪ BA01003F/00/EN/16.14 | <ul style="list-style-type: none"> ▪ GP01000F/00/EN/14.13 ▪ GP01000F/00/EN/15.14 | <ul style="list-style-type: none"> ▪ TI01003F/00/EN/16.13 ▪ TI01003F/00/EN/17.14 |
| 04.2016 | 01.03.zz | <ul style="list-style-type: none"> ▪ Update to HART 7 ▪ All 17 operating languages available in the device ▪ Improvements and bugfixes | <ul style="list-style-type: none"> ▪ BA01003F/00/EN/17.16 ▪ BA01003F/00/EN/18.16¹⁾ | GP01000F/00/EN/16.16 | <ul style="list-style-type: none"> ▪ TI01003F/00/EN/18.16 ▪ TI01003F/00/EN/20.16¹⁾ |

1) contains information on the Heartbeat wizards which are available in the latest DTM version for DeviceCare and FieldCare.



The firmware version can explicitly be ordered via the product structure. In this way it is possible to ensure compatibility of the firmware version with an existing or planned system integration.

13 Maintenance

The measuring device requires no special maintenance.

13.1 Exterior cleaning

When exterior-cleaning the device, always use cleaning agents that do not attack the surface of the housing and the seals.

13.2 Cleaning coax probes

For cleaning purposes the ground tube can be stripped of the coaxial probe. When unmounting and remounting the tube, make sure that the PFA spacers do not get out of space. A first spacer is positioned at about 10 cm (4 in) from the end of the probe. Depending of the length of the probe there may be additional spacers evenly spaced along the probe.

14 Repairs

14.1 General information on repairs

14.1.1 Repair concept

The Endress+Hauser repair concept assumes that the devices have a modular design and that repairs can be done by the Endress+Hauser service or specially trained customers.

Spare parts are contained in suitable kits. They contain the related replacement instructions.

For more information on service and spare parts, contact the Service Department at Endress+Hauser.

14.1.2 Repairs to Ex-approved devices

When carrying out repairs to Ex-approved devices, please note the following:


- Repairs to Ex-approved devices may only be carried out by trained personnel or by the Endress+Hauser Service.
- Comply with the prevailing standards, national Ex-area regulations, safety instructions (XA) and certificates.
- Only use original spare parts from Endress+Hauser.
- When ordering a spare part, please note the device designation on the nameplate. Only replace parts with identical parts.
- Carry out repairs according to the instructions. On completion of repairs, carry out the specified routine test on the device.
- Only Endress+Hauser Service may convert a certified device into a different certified variant.
- Document all repair work and conversions.

14.1.3 Replacement of an electronics module

If an electronics module has been replaced, it is not necessary to perform a new basic setup as the calibration parameters are stored in the HistoROM which is located in the housing. However, after exchanging the main electronics module it may be necessary to record a new mapping (interference echo suppression).

14.1.4 Replacement of a device


After a complete device or electronic module has been replaced, the parameters can be downloaded into the instrument again in one of the following ways:

- Via the display module
Condition: The configuration of the old device has been saved in the display module
→  166.
- Via FieldCare
Condition: The configuration of the old device has been saved to the computer via FieldCare.

You can continue to measure without carrying out a new setup. Only a linearization and a tank map (interference echo suppression) have to be recorded again.

14.2 Spare parts

- A few interchangeable measuring device components are identified by a spare part nameplate. This contains information about the spare part.
- The connection compartment cover of the device contains a spare part nameplate that includes the following information:
 - A list of the most important spare parts for the measuring device, including their ordering information.
 - The URL for the *W@M Device Viewer* (www.endress.com/deviceviewer): There, all spare parts for the measuring device are listed, including the order code, and can be ordered. If available, the corresponding Installation Instructions can also be downloaded there.

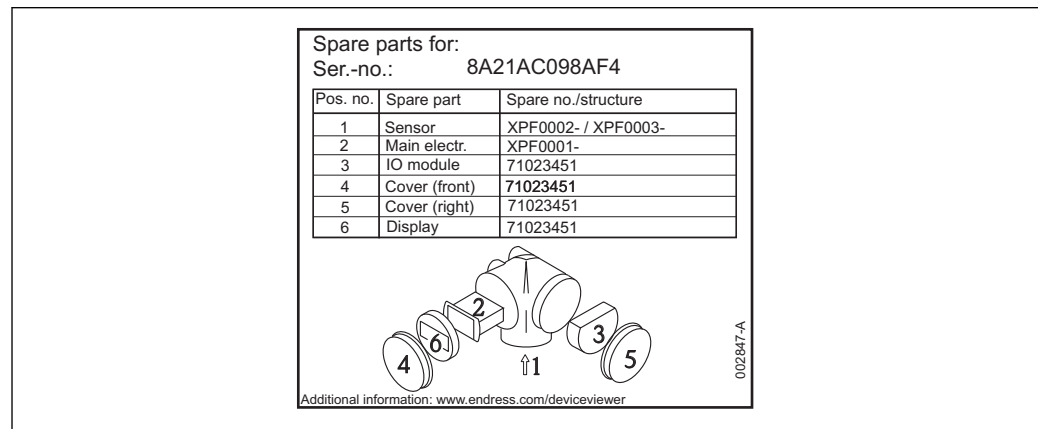

23 Example for spare part nameplate in connection compartment cover

- i** Measuring device serial number:
 - Is located on the device and spare part nameplate.
 - Can be read out via the "Serial number" parameter in the "Device information" submenu.

14.3 Return

The measuring device must be returned if it is need of repair or a factory calibration, or if the wrong measuring device has been delivered or ordered. Legal specifications require Endress+Hauser, as an ISO-certified company, to follow certain procedures when handling products that are in contact with the medium.

To ensure safe, swift and professional device returns, please refer to the procedure and conditions for returning devices provided on the Endress+Hauser website at <http://www.endress.com/support/return-material>

14.4 Disposal



Observe the following notes during disposal:

- Observe valid federal/national regulations.
- Ensure proper separation and reuse of the device components.





15 Accessories

15.1 Device-specific accessories


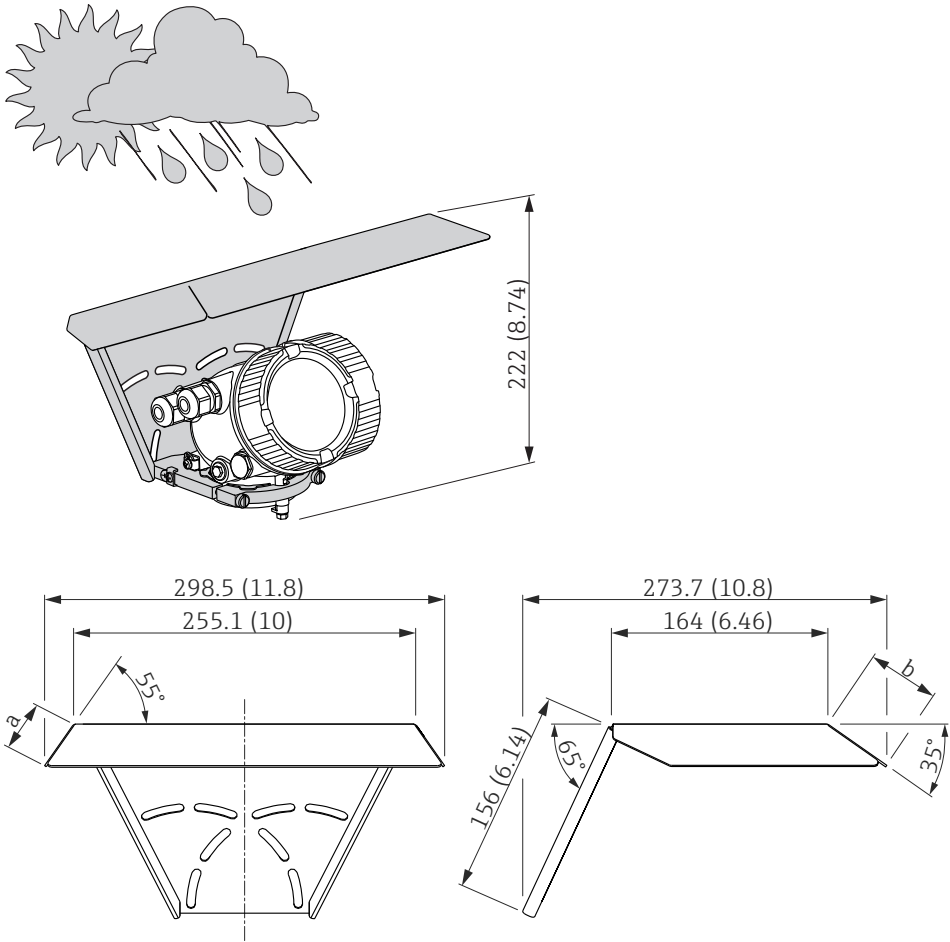

15.1.1 Weather protection cover

| Accessory | Description |
|--------------------------|---|
| Weather protection cover |  <p data-bbox="1476 1059 1528 1075">A0015466</p> <p data-bbox="1476 1473 1528 1489">A0015472</p> <p data-bbox="416 1503 925 1529">☑ 24 Weather protection cover; Dimensions: mm (in)</p> <p data-bbox="416 1541 622 1568">a 37,8 mm (1,5 in)</p> <p data-bbox="416 1568 606 1594">b 54 mm (2,1 in)</p> <p data-bbox="416 1621 1492 1697">  The weather protection cover can be ordered together with the device (product structure, feature 620 "Accessory Enclosed", option PB "Weather Protection Cover"). Alternatively, it can be separately ordered as an accessory; order code 71162242. </p> |

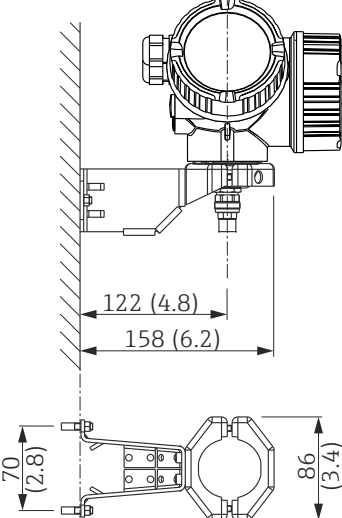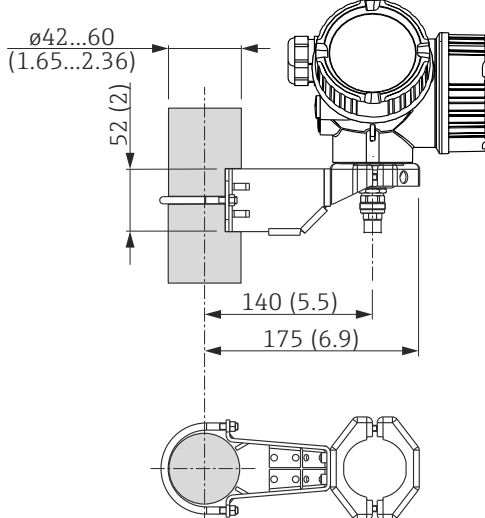
15.1.2 Mounting bracket for the electronics housing

| Accessory | Description |
|--|--|
| Mounting bracket for the electronics housing | <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>A</p>  </div> <div style="text-align: center;"> <p>B</p>  </div> </div> <p> 25 Mounting bracket for the electronics housing; Dimensions: mm (in)</p> <p>A Wall mounting B Pipe mounting</p> <p> For the "Sensor remote" device version (see feature 060 of the product structure), the mounting bracket is part of the delivery. If required, it can also be ordered as an accessory (order code 71102216).</p> <p style="text-align: right; font-size: small;">A0014793</p> |

15.1.3 Centering star
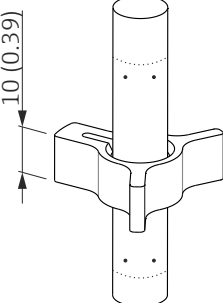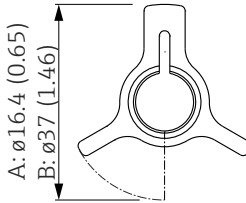
| Accessory | Description |
|---|--|
| Centering star PFA <ul style="list-style-type: none"> ■ ϕ 16.4 mm (0.65 in) ■ ϕ 37 mm (1.46 in) can be used for FMP55 | <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;">  </div> <div style="text-align: center;">  </div> </div> <p>A For 8 mm (0.3 in) probes B: For 12 mm (0.47 in) and 16 mm (0.63 in) probes</p> <p>The centering star is suitable for probes with a rod diameter of 8 mm (0.3 in), 12 mm (0.47 in) and 16 mm (0.63 in) (also coated rod probes) and can be used in pipes from DN40 (1½") up to DN50 (2"). See also Operating Instructions BA00378F/00/A2.</p> <ul style="list-style-type: none"> ■ Material: PFA ■ Admissible process temperature: -200 to +200 °C (-382 to +392 °F) ■ Order code <ul style="list-style-type: none"> - Probe 8 mm (0.3 in): 71162453 - Probe 12 mm (0.47 in): 71157270 - Probe 16 mm (0.63 in): 71069065 <p> The PFA centering star can also be ordered directly with the device (see the Levelflex product structure, feature 610 "Accessory mounted", option OE).</p> <p style="text-align: right; font-size: small;">A0014577</p> |


15.1.4 Remote display FHX50

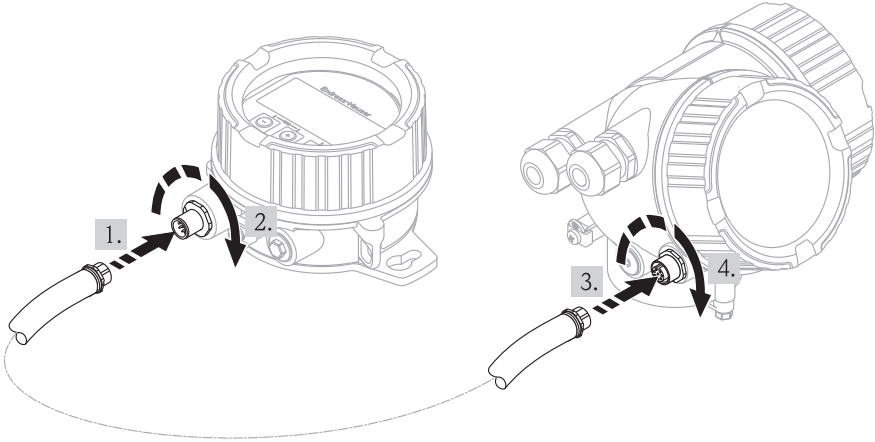
| Accessory | Description |
|-----------------------------|---|
| <p>Remote display FHX50</p> | <div style="text-align: center;">  </div> <p style="text-align: right; font-size: small;">A0019128</p> <ul style="list-style-type: none"> ▪ Material: <ul style="list-style-type: none"> - Plastics PBT - CF3M (similar to 316L/1.4404) - Aluminum (in preparation) ▪ Ingress protection: IP68 / NEMA 6P and IP66 / NEMA 4x ▪ Suitable for the display modules: <ul style="list-style-type: none"> - SD02 (push buttons) - SD03 (touch control) ▪ Connection cable: <ul style="list-style-type: none"> - Cable with M12 plug; supplied with the FHX50; up to 30 m (98 ft) - Customer supplied standard cable; up to 60 m (196 ft) ▪ Ambient temperature: -40 to 80 °C (-40 to 176 °F) <p>i ▪ If the remote display is to be used, the device must be ordered in the version "Prepared for display FHX50" (feature 030, option L or M). For the FHX50, on the other hand, the option A: "Prepared for display FHX50" has to be selected in feature 050: "Option Measurement Device".</p> <p>▪ If a device has not been ordered in the version "Prepared for display FHX50", but is nevertheless to be equipped with an FHX50, it is essential to select the option B: "Not prepared for display FHX50" in feature 050: "Option Measurement Device" of the FHX50. In this case, a retrofit kit, needed to prepare the device for the remote display, is supplied together with the FHX50.</p> <p>i For transmitters with approval, application of the FHX50 may be restricted. A device may only be retrofitted with the FHX50 if option L or M ("Prepared for FHX50") is quoted under <i>Basic specifications</i>, position 4 "Display, operation" in the associated Safety Instructions (XA). In addition to this, observe the Safety Instructions (XA) of the FHX50.</p> <p>i Do not retrofit transmitters with:</p> <ul style="list-style-type: none"> ▪ approval for use in areas with combustible dusts (Dust-Ex approval) ▪ type of protection Ex nA <p>i For details refer to the document SD01007F.</p> |


15.1.5 Overvoltage protection


| Accessory | Description |
|---|--|
| Overvoltage protection for 2-wire-devices OVP10 (1 channel) OVP20 (2 channel) | <div data-bbox="327 324 715 660" style="text-align: center;"> </div> <div data-bbox="1380 667 1436 683" style="text-align: right; font-size: small;">A0021734</div> <p>Technical data</p> <ul style="list-style-type: none"> ▪ Resistance per channel: $2 * 0.5 \Omega_{max}$ ▪ Threshold DC voltage: 400 to 700 V ▪ Threshold impulse voltage: < 800 V ▪ Capacitance at 1 MHz: < 1.5 pF ▪ Nominal arrest impulse voltage (8/20 μs): 10 kA ▪ Suited for wire cross-sections: 0.2 to 2.5 mm² (24 to 14 AWG) <p>i Ordering with device The overvoltage protection module is preferably ordered with the device. See product structure, feature 610 "Accessory mounted", option NA "Overvoltage protection". Separate ordering of the module is only necessary if a device is to be retrofitted with the overvoltage protection.</p> <p>i Order code for retrofitting</p> <ul style="list-style-type: none"> ▪ For 1-channel devices (feature 020, option A) OVP10: 71128617 ▪ For 2-channel devices (feature 020, option B, C, E or G) OVP20 : 71128619 <p>Housing lid for retrofitting In order to keep the necessary safety distances, the housing lid needs to be replaced if the device is retrofitted with the overvoltage protection. Depending on the housing type, the order code of the suitable lid is as follows:</p> <ul style="list-style-type: none"> ▪ GT18 housing: Lid 71185516 ▪ GT19 housing: Lid 71185518 ▪ GT20 housing: Lid 71185516 <p>i Restrictions for retrofitting Depending on the approval of the transmitter the usage of the OVP module may be restricted. A device may only be retrofitted with an OVP module if the option NA (overvoltage protection) is quoted under <i>Optional Specifications</i> in the Safety Instructions (XA) pertaining to the device.</p> <p>i For details refer to SD01090F.</p> |


15.2 Communication-specific accessories


| Accessory | Description |
|-------------------------|--|
| Commubox FXA195 HART | For intrinsically safe HART communication with FieldCare via the USB interface.  For details refer to Technical Information TI00404F |


| Accessory | Description |
|-----------------|--|
| Commubox FXA291 | Connects Endress+Hauser field devices with CDI interface (= Endress+Hauser Common Data Interface) to the USB interface of a computer. Order code: 51516983  For details refer to Technical Information TI00405C |


| Accessory | Description |
|------------------------------|--|
| HART Loop Converter HMX50 | Evaluates the dynamic HART variables and converts them to analog current signals or limit values. Order code: 71063562  For details refer to Technical Information TI00429F and Operating Instructions BA00371F |

| Accessory | Description |
|-------------------------------|--|
| WirelessHART Adapter SWA70 | Connects field devices to a WirelessHART network. The WirelessHART adapter can be mounted directly at a HART device and is easily integrated into an existing HART network. It ensures safe data transmission and can be operated in parallel with other wireless networks.  For details refer to Operating Instructions BA00061S |


| Accessory | Description |
|------------------|---|
| Fieldgate FXA320 | Gateway for remote monitoring of connected 4-20mA measuring devices via web browser.  For details refer to Technical Information TI00025S and Operating Instructions BA00053S |

| Accessory | Description |
|------------------|--|
| Fieldgate FXA520 | Gateway for remote diagnosis and parametrization of connected HART measuring devices via web browser.  For details refer to Technical Information TI00025S and Operating Instructions BA00051S |




| Accessory | Description |
|--------------------|---|
| Field Xpert SFX350 | Field Xpert SFX350 is a mobile computer for commissioning and maintenance. It enables efficient device configuration and diagnostics for HART and FOUNDATION fieldbus devices in the non-Ex area .  For details, see Operating Instructions BA01202S |

| Accessory | Description |
|--------------------|--|
| Field Xpert SFX370 | Field Xpert SFX370 is a mobile computer for commissioning and maintenance. It enables efficient device configuration and diagnostics for HART and FOUNDATION fieldbus devices in the non-Ex area and the Ex area .  For details, see Operating Instructions BA01202S |

15.3 Service-specific accessories

| Accessory | Description |
|------------------------|---|
| FieldCare / DeviceCare | Endress+Hauser's FDT-based Plant Asset Management tool. Helps to configure and maintain all field devices of your plant. By supplying status information it also supports the diagnosis of the devices.  For details refer to Operating Instructions BA00027S and BA00059S. |




















15.4 System components


























| Accessory | Description |
|----------------------------------|--|
| Graphic Data Manager Memograph M | The graphic data manager Memograph M provides information on all the relevant process variables. Measured values are recorded correctly, limit values are monitored and measuring points analyzed. The data are stored in the 256 MB internal memory and also on an SD card or USB stick.  For details refer to Technical Information TI00133R and Operating Instructions BA00247R |
| RN221N | Active barrier with power supply for safe separation of 4 to 20 mA current circuits. Provides bi-directional HART transmission.  For details refer to Technical Information TI00073R and Operating Instructions BA00202R |
| RNS221 | Transmitter supply for 2-wire sensors or transmitters exclusively for non-Ex areas. Provides bi-directional communication using the HART communication sockets.  For details refer to Technical Information TI00081R and Operating Instructions KA00110R |

16 Operating menu


























16.1 Overview of the operating menu (display module)



























Navigation  Operating menu


























| | |
|--------------------|---|
| Language | →  160 |
| Setup | →  111 |
| Device tag | →  111 |
| Operating mode | →  111 |
| Distance unit | →  111 |
| Tank type | →  112 |
| Tube diameter | →  112 |
| DC value | →  116 |
| Medium group | →  113 |
| Empty calibration | →  113 |
| Full calibration | →  114 |
| Level | →  115 |
| Interface | →  117 |
| Distance | →  115 |
| Interface distance | →  118 |
| Signal quality | →  116 |
| Mapping | →  121 |
| Confirm distance | →  121 |
| Mapping end point | →  121 |

| | |
|-----------------------------------|---|
| Record map | →  121 |
| Distance | →  121 |
| ▶ Advanced setup | →  122 |
| Locking status | →  122 |
| Access status display | →  123 |
| Enter access code | →  123 |
| ▶ Interface | →  124 |
| Process property | →  124 |
| Interface property | →  124 |
| DC value lower medium | →  125 |
| Level unit | →  126 |
| Blocking distance | →  126 |
| Level correction | →  127 |
| ▶ Automatic DC calculation | →  130 |
| Manual thickness upper layer | →  130 |
| DC value | →  130 |
| Use calculated DC value | →  130 |
| ▶ Linearization | →  132 |
| Linearization type | →  134 |
| Unit after linearization | →  135 |
| Free text | →  136 |
| Maximum value | →  137 |
| Diameter | →  137 |
| Intermediate height | →  138 |
| Table mode | →  138 |

| | | |
|-------------------------|---------------------------|-------|
| ▶ Edit table | | |
| | Level | → 140 |
| | Customer value | → 140 |
| | Activate table | → 140 |
| ▶ Safety settings | | → 142 |
| | Output echo lost | → 142 |
| | Value echo lost | → 142 |
| | Ramp at echo lost | → 143 |
| | Blocking distance | → 143 |
| ▶ SIL/WHG confirmation | | → 145 |
| ▶ Deactivate SIL/WHG | | → 146 |
| | Reset write protection | → 146 |
| | Code incorrect | → 146 |
| ▶ Probe settings | | → 147 |
| | Probe grounded | → 147 |
| | ▶ Probe length correction | → 149 |
| | | |
| | Confirm probe length | → 149 |
| | Present probe length | → 149 |
| ▶ Current output 1 to 2 | | → 150 |
| | Assign current output | → 150 |
| | Current span | → 151 |
| | Fixed current | → 152 |
| | Damping output | → 152 |
| | Failure mode | → 152 |

| | |
|----------------------------|---|
| Failure current | →  153 |
| Output current 1 to 2 | →  153 |
| ► Switch output | →  154 |
| Switch output function | →  154 |
| Assign status | →  154 |
| Assign limit | →  155 |
| Assign diagnostic behavior | →  155 |
| Switch-on value | →  156 |
| Switch-on delay | →  157 |
| Switch-off value | →  157 |
| Switch-off delay | →  158 |
| Failure mode | →  158 |
| Switch status | →  158 |
| Invert output signal | →  158 |
| ► Display | →  160 |
| Language | →  160 |
| Format display | →  160 |
| Value 1 to 4 display | →  162 |
| Decimal places 1 to 4 | →  162 |
| Display interval | →  163 |
| Display damping | →  163 |
| Header | →  163 |
| Header text | →  164 |
| Separator | →  164 |
| Number format | →  164 |

| | |
|--|---|
| Decimal places menu | →  164 |
| Backlight | →  165 |
| Contrast display | →  165 |
| ► Configuration backup display | →  166 |
| Operating time | →  166 |
| Last backup | →  166 |
| Configuration management | →  166 |
| Comparison result | →  167 |
| ► Administration | →  169 |
| ► Define access code | →  171 |
| Define access code | →  171 |
| Confirm access code | →  171 |
| Device reset | →  169 |
|  Diagnostics | →  172 |
| Actual diagnostics | →  172 |
| Previous diagnostics | →  172 |
| Operating time from restart | →  173 |
| Operating time | →  166 |
| ► Diagnostic list | →  174 |
| Diagnostics 1 to 5 | →  174 |
| ► Event logbook | →  175 |
| Filter options | →  175 |
| ► Event list | →  175 |
| ► Device information | →  176 |
| Device tag | →  176 |

| | |
|---------------------------------|---|
| Serial number | →  176 |
| Firmware version | →  176 |
| Device name | →  176 |
| Order code | →  177 |
| Extended order code 1 to 3 | →  177 |
| Device revision | →  177 |
| Device ID | →  177 |
| Device type | →  178 |
| Manufacturer ID | →  178 |
| ▶ Measured values | →  179 |
| Distance | →  115 |
| Level linearized | →  136 |
| Interface distance | →  118 |
| Interface linearized | →  137 |
| Thickness upper layer | →  180 |
| Output current 1 to 2 | →  153 |
| Measured current 1 | →  181 |
| Terminal voltage 1 | →  181 |
| ▶ Data logging | →  182 |
| Assign channel 1 to 4 | →  182 |
| Logging interval | →  183 |
| Clear logging data | →  183 |
| ▶ Display channel 1 to 4 | →  184 |
| ▶ Simulation | →  186 |
| Assign measurement variable | →  187 |

| | |
|----------------------------------|-------|
| Process variable value | → 187 |
| Current output 1 to 2 simulation | → 188 |
| Value current output 1 to 2 | → 188 |
| Switch output simulation | → 188 |
| Switch status | → 189 |
| Device alarm simulation | → 189 |
| ► Device check | → 190 |
| Start device check | → 190 |
| Result device check | → 190 |
| Last check time | → 190 |
| Level signal | → 191 |
| Launch signal | → 191 |
| Interface signal | → 191 |


























16.2 Overview of the operating menu (operating tool)

Navigation



Operating menu

























| | |
|-------------------------|-------|
| Setup | → 111 |
| Device tag | → 111 |
| Operating mode | → 111 |
| Distance unit | → 111 |
| Tank type | → 112 |
| Tube diameter | → 112 |
| Medium group | → 113 |
| Empty calibration | → 113 |
| Full calibration | → 114 |
| Level | → 115 |
| Distance | → 115 |
| Signal quality | → 116 |
| DC value | → 116 |
| Interface | → 117 |
| Interface distance | → 118 |
| Confirm distance | → 118 |
| Present mapping | → 119 |
| Mapping end point | → 120 |
| Record map | → 120 |
| ▶ Advanced setup | → 122 |
| Locking status | → 122 |
| Access status tooling | → 122 |
| Enter access code | → 123 |

| | |
|--------------------------------|---|
| ► Interface | →  124 |
| Process property | →  124 |
| Interface property | →  124 |
| DC value lower medium | →  125 |
| Level unit | →  126 |
| Blocking distance | →  126 |
| Level correction | →  127 |
| Manual thickness upper layer | →  127 |
| Measured thickness upper layer | →  128 |
| DC value | →  128 |
| Calculated DC value | →  128 |
| Use calculated DC value | →  129 |
| ► Linearization | →  132 |
| Linearization type | →  134 |
| Unit after linearization | →  135 |
| Free text | →  136 |
| Level linearized | →  136 |
| Interface linearized | →  137 |
| Maximum value | →  137 |
| Diameter | →  137 |
| Intermediate height | →  138 |
| Table mode | →  138 |
| Table number | →  139 |
| Level | →  140 |
| Level | →  140 |

| | |
|--------------------------------|-------|
| Customer value | → 140 |
| Activate table | → 140 |
| ► Safety settings | → 142 |
| Output echo lost | → 142 |
| Value echo lost | → 142 |
| Ramp at echo lost | → 143 |
| Blocking distance | → 143 |
| ► SIL/WHG confirmation | → 145 |
| ► Deactivate SIL/WHG | → 146 |
| Reset write protection | → 146 |
| Code incorrect | → 146 |
| ► Probe settings | → 147 |
| Probe grounded | → 147 |
| Present probe length | → 147 |
| Confirm probe length | → 148 |
| ► Current output 1 to 2 | → 150 |
| Assign current output | → 150 |
| Current span | → 151 |
| Fixed current | → 152 |
| Damping output | → 152 |
| Failure mode | → 152 |
| Failure current | → 153 |
| Output current 1 to 2 | → 153 |
| ► Switch output | → 154 |
| Switch output function | → 154 |






| | |
|----------------------------|-------|
| Assign status | → 154 |
| Assign limit | → 155 |
| Assign diagnostic behavior | → 155 |
| Switch-on value | → 156 |
| Switch-on delay | → 157 |
| Switch-off value | → 157 |
| Switch-off delay | → 158 |
| Failure mode | → 158 |
| Switch status | → 158 |
| Invert output signal | → 158 |
| ► Display | → 160 |
| Language | → 160 |
| Format display | → 160 |
| Value 1 to 4 display | → 162 |
| Decimal places 1 to 4 | → 162 |
| Display interval | → 163 |
| Display damping | → 163 |
| Header | → 163 |
| Header text | → 164 |
| Separator | → 164 |
| Number format | → 164 |
| Decimal places menu | → 164 |
| Backlight | → 165 |
| Contrast display | → 165 |

| | |
|---|-------|
| <ul style="list-style-type: none"> ▶ Configuration backup display | → 166 |
| <ul style="list-style-type: none"> <ul style="list-style-type: none"> Operating time | → 166 |
| <ul style="list-style-type: none"> <ul style="list-style-type: none"> Last backup | → 166 |
| <ul style="list-style-type: none"> <ul style="list-style-type: none"> Configuration management | → 166 |
| <ul style="list-style-type: none"> <ul style="list-style-type: none"> Backup state | → 167 |
| <ul style="list-style-type: none"> <ul style="list-style-type: none"> Comparison result | → 167 |
| <ul style="list-style-type: none"> ▶ Administration | → 169 |
| <ul style="list-style-type: none"> <ul style="list-style-type: none"> Define access code | → 171 |
| <ul style="list-style-type: none"> <ul style="list-style-type: none"> Device reset | → 169 |
| <ul style="list-style-type: none"> 🔍 Diagnostics | → 172 |
| <ul style="list-style-type: none"> <ul style="list-style-type: none"> Actual diagnostics | → 172 |
| <ul style="list-style-type: none"> <ul style="list-style-type: none"> Timestamp | → 172 |
| <ul style="list-style-type: none"> <ul style="list-style-type: none"> Previous diagnostics | → 172 |
| <ul style="list-style-type: none"> <ul style="list-style-type: none"> Timestamp | → 173 |
| <ul style="list-style-type: none"> <ul style="list-style-type: none"> Operating time from restart | → 173 |
| <ul style="list-style-type: none"> <ul style="list-style-type: none"> Operating time | → 166 |
| <ul style="list-style-type: none"> ▶ Diagnostic list | → 174 |
| <ul style="list-style-type: none"> <ul style="list-style-type: none"> Diagnostics 1 to 5 | → 174 |
| <ul style="list-style-type: none"> <ul style="list-style-type: none"> Timestamp 1 to 5 | → 174 |
| <ul style="list-style-type: none"> ▶ Device information | → 176 |
| <ul style="list-style-type: none"> <ul style="list-style-type: none"> Device tag | → 176 |
| <ul style="list-style-type: none"> <ul style="list-style-type: none"> Serial number | → 176 |
| <ul style="list-style-type: none"> <ul style="list-style-type: none"> Firmware version | → 176 |
| <ul style="list-style-type: none"> <ul style="list-style-type: none"> Device name | → 176 |
| <ul style="list-style-type: none"> <ul style="list-style-type: none"> Order code | → 177 |










| | |
|----------------------------------|---|
| Extended order code 1 to 3 | →  177 |
| Device revision | →  177 |
| Device ID | →  177 |
| Device type | →  178 |
| Manufacturer ID | →  178 |
| ► Measured values | →  179 |
| Distance | →  115 |
| Level linearized | →  136 |
| Interface distance | →  118 |
| Interface linearized | →  137 |
| Thickness upper layer | →  180 |
| Output current 1 to 2 | →  153 |
| Measured current 1 | →  181 |
| Terminal voltage 1 | →  181 |
| ► Data logging | →  182 |
| Assign channel 1 to 4 | →  182 |
| Logging interval | →  183 |
| Clear logging data | →  183 |
| ► Simulation | →  186 |
| Assign measurement variable | →  187 |
| Process variable value | →  187 |
| Current output 1 to 2 simulation | →  188 |
| Value current output 1 to 2 | →  188 |
| Switch output simulation | →  188 |

| | |
|-------------------------|-------|
| Switch status | → 189 |
| Device alarm simulation | → 189 |
| ▶ Device check | → 190 |
| Start device check | → 190 |
| Result device check | → 190 |
| Last check time | → 190 |
| Level signal | → 191 |
| Launch signal | → 191 |
| Interface signal | → 191 |
| ▶ Heartbeat | → 192 |

16.3 "Setup" menu

- 
 -  : Marks the navigation path to the parameter via the display and operating module.
 -  : Marks the navigation path to the parameter via an operating tool (e.g. FieldCare).
 -  : Marks parameters which can be locked via the software locking →  54.

Navigation   Setup

| | | |
|-------------------------------|--|---|
| Device tag | |  |
| Navigation |   Setup → Device tag | |
| Description | Enter a unique name for the measuring point to identify the device quickly within the plant. | |
| Factory setting | FMP5x | |
| Operating mode | |  |
| Navigation |   Setup → Operating mode | |
| Prerequisite | The device has the "interface measurement" application package (available for FMP51, FMP52, FMP54) ³⁾ . FMP55 always contains this package. | |
| Description | Select operating mode. | |
| Selection | <ul style="list-style-type: none"> ■ Level ■ Interface with capacitance * ■ Interface * | |
| Factory setting | <ul style="list-style-type: none"> ■ FMP51/FMP52/FMP54: Level ■ FMP55: Interface with capacitance | |
| Additional information | The Interface with capacitance option is only available for FMP55. | |
| Distance unit | |  |
| Navigation |   Setup → Distance unit | |
| Description | Select distance unit. | |

3) Product structure: Feature 540 "Application Package", Option EB "Interface measurement"
 * Visibility depends on order options or device settings

| | | |
|------------------|---|--|
| Selection | <i>SI units</i> | <i>US units</i> |
| | <ul style="list-style-type: none"> ■ mm ■ m | <ul style="list-style-type: none"> ■ ft ■ in |

Factory setting m

Tank type

Navigation   Setup → Tank type

Prerequisite **Medium type = Liquid**

Description Select tank type.

Selection

- Metallic
- Bypass / pipe
- Non metallic
- Mounted outside
- Coaxial

Factory setting Depending on the probe


Additional information

- Depending on the probe some of the options mentioned above may not be available or there may be additional options.
- For coax probes, the default setting is **Tank type = Coaxial** and can not be changed.
- For probes with metallic center washer, **Tank type = Bypass / pipe** is preset and can not be changed.

Tube diameter

Navigation   Setup → Tube diameter

Prerequisite

- **Tank type** (→  112) = **Bypass / pipe**
- The probe is coated.

Description Specify diameter of bypass or stilling well.

User entry 0 to 9.999 m

Factory setting 0.0384 m

Medium group



Navigation Setup → Medium group

Prerequisite
 ■ For FMP51/FMP52/FMP54/FMP55: **Operating mode** (→ 111) = **Level**
 ■ **Medium type** = **Liquid**

Description Select medium group.

Selection
 ■ Others
 ■ Water based (DC >= 4)

Factory setting Others

Additional information This parameter roughly specifies the dielectric constant (DC) of the medium. For a more detailed definition of the DC use the **Medium property** parameter.

The **Medium group** parameter presets the **Medium property** parameter as follows:

| Medium group | Medium property |
|-----------------------|-----------------|
| Others | Unknown |
| Water based (DC >= 4) | DC 4 ... 7 |

The **Medium property** parameter can be changed at a later point of time. However, when doing so, the **Medium group** parameter retains its value. Only the **Medium property** parameter is relevant for the signal evaluation.

The measuring range may be reduced for small dielectric constants. For details refer to the Technical Information (TI) of the respective device.

Empty calibration




Navigation Setup → Empty calibr.

Description Specify the distance E between the process connection and the minimum level (0%). This defines the starting point of the measuring range.

User entry Depending on the probe

Factory setting Depending on the probe

Additional information

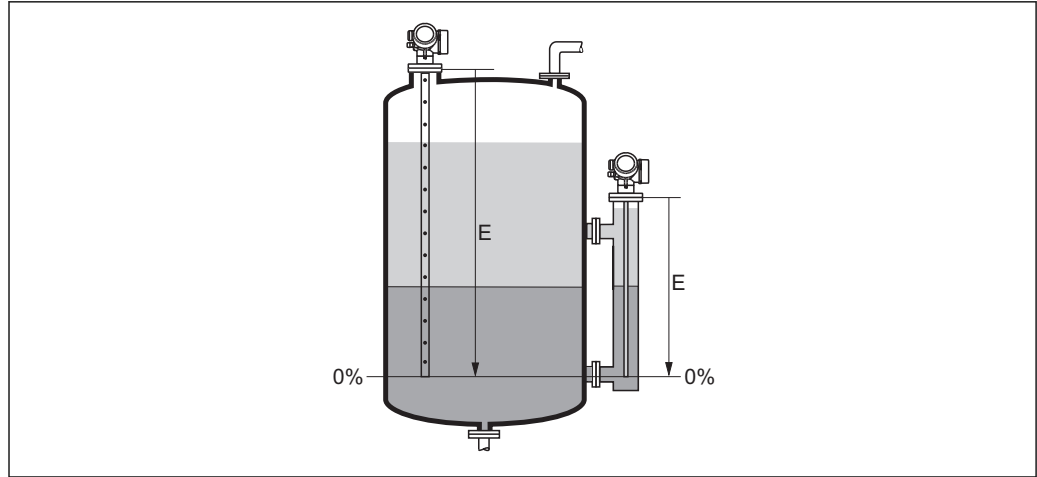

A0013177

26 Empty calibration (E) for interface measurements

i In the case of interface measurements the **Empty calibration** parameter is valid for both, the total and the interface level.

Full calibration



Navigation

Setup → Full calibr.

Description

Specify the distance F between the minimum level (0%) and the maximum level (100%).


User entry

Depending on the probe

Factory setting

Depending on the probe

Additional information

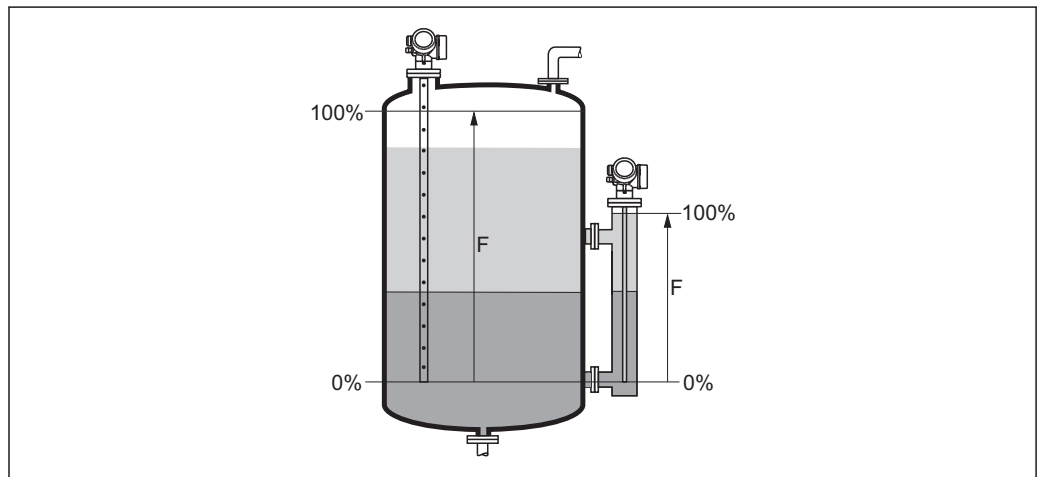

A0013188

27 Full calibration (F) for interface measurements


i In the case of interface measurements the **Full calibration** parameter is valid for both, the total and the interface level.


Level



Navigation   Setup → Level

Description Displays measured level L_L (before linearization).

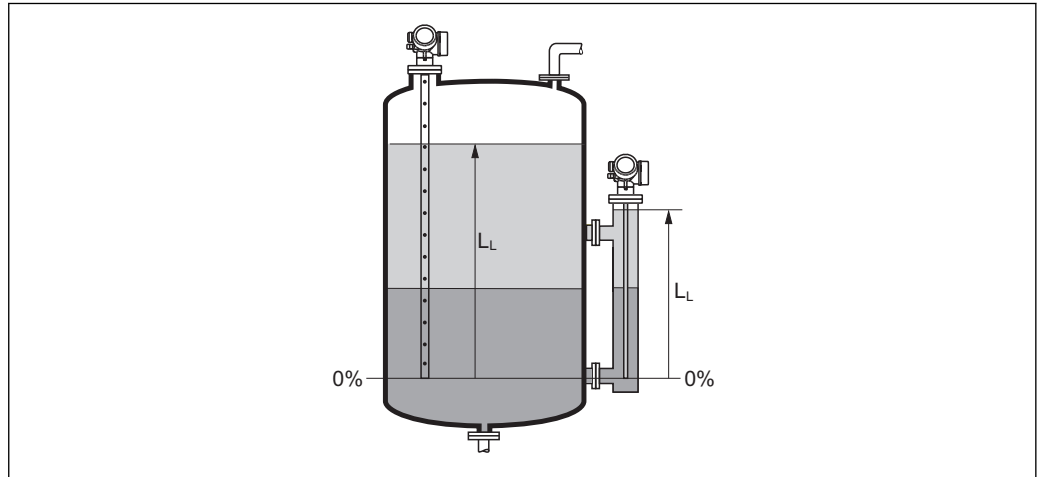Additional information



 28 *Level in case of interface measurements*


-  The unit is defined in the **Level unit** parameter (→  126).
- In case of interface measurements, this parameter always refers to the total level.


Distance

Navigation   Setup → Distance

Description Displays the measured distance D_L between the reference point (lower edge of the flange or threaded connection) and the level.

Additional information

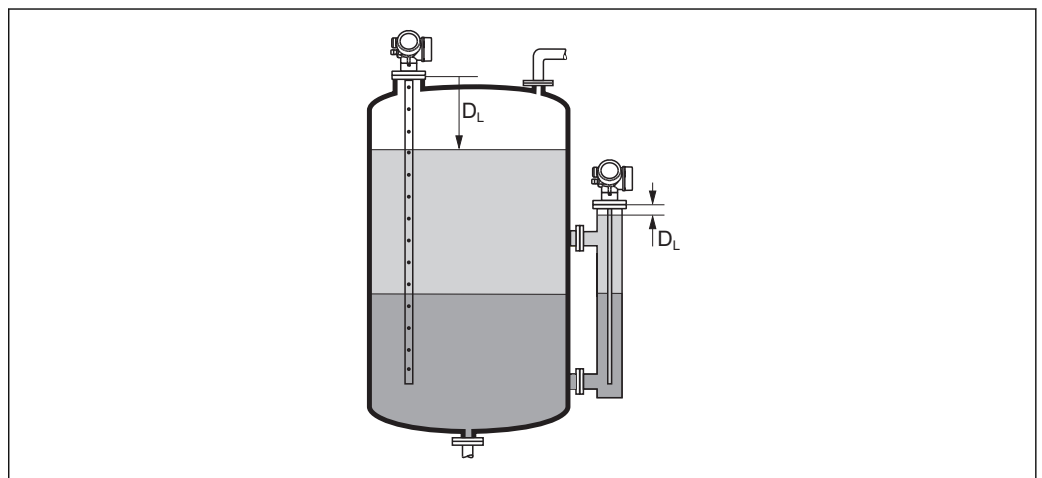

 29 *Distance for interface measurements*

-  The unit is defined in the **Distance unit** parameter (→  111).

Signal quality

Navigation  Setup → Signal quality

Description Displays the signal quality of the evaluated echo.

Additional information **Meaning of the display options**

- **Strong**

The evaluated echo exceeds the threshold by at least 10 mV.

- **Medium**

The evaluated echo exceeds the threshold by at least 5 mV.

- **Weak**

The evaluated echo exceeds the threshold by less than 5 mV.



- **No signal**

The device does not find a usable echo.

The signal quality indicated in this parameter always refers to the currently evaluated echo: either the level/interface echo ⁴⁾ or the end-of-probe echo. To differentiate between these two, the quality of the end-of-probe echo is always displayed in brackets.



In case of a lost echo (**Signal quality = No signal**) the device generates the following error message:

- F941, for **Output echo lost** (→  142) = **Alarm**.
- S941, if another option has been selected in **Output echo lost** (→  142).

DC value



Navigation  Setup → DC value

Prerequisite The device has the "interface measurement" application package ⁵⁾.

Description Specify relative dielectric constant ϵ_r of the upper medium (DC_1).


User entry 1.0 to 100

Factory setting 2.0

4) Of these two echos the one with the lower quality is indicated.

5) Product structure: Feature 540 "Application Package", Option EB "Interface measurement"

Additional information

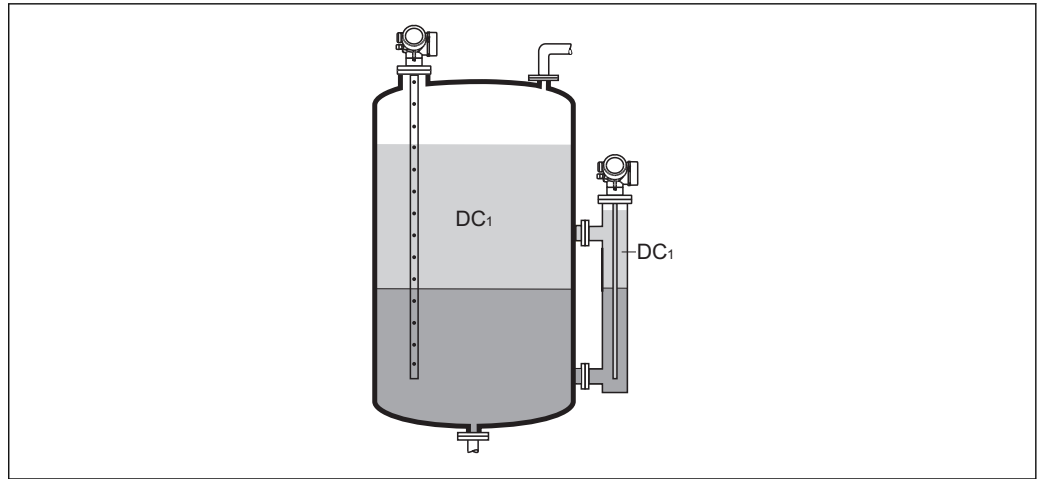

A0013181

DC1 Relative dielectric constant of the upper medium.

- i** For dielectric constants (DC values) of many media commonly used in various industries refer to:
 - the Endress+Hauser DC manual (CP01076F)
 - the Endress+Hauser "DC Values App" (available for Android and iOS)

Interface

Navigation

Setup → Interface


Prerequisite

Operating mode (→ 111) = **Interface** or **Interface with capacitance**

Description

Displays the measured interface level L_I (before linearization).


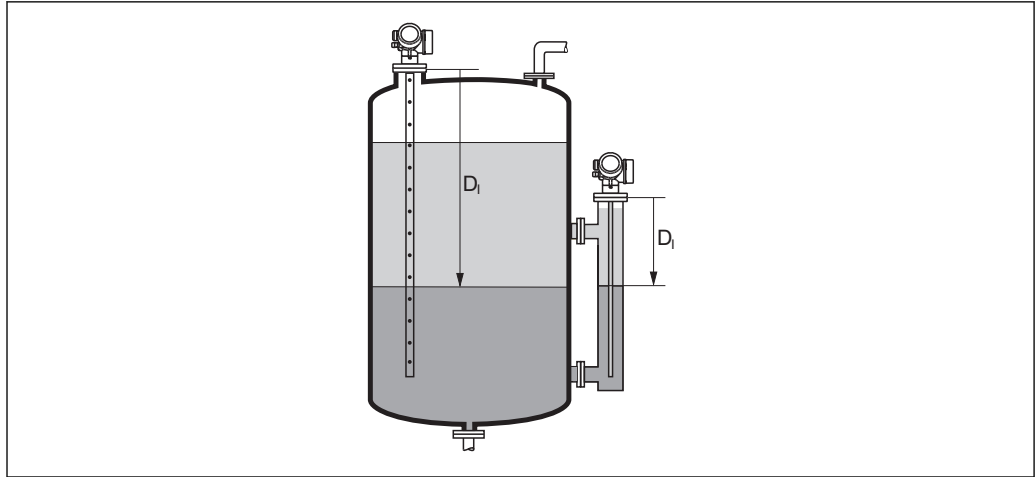
Additional information

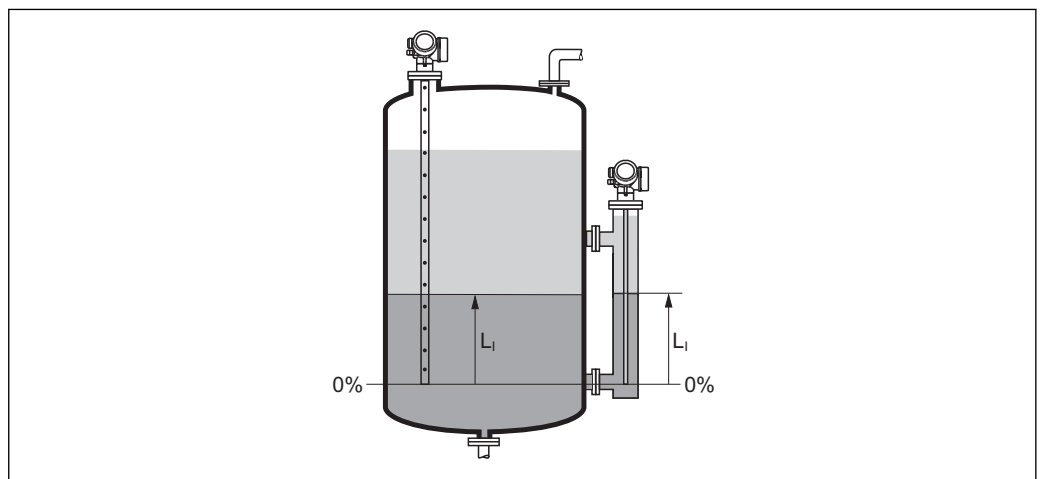

A0013197

- i** The unit is defined in the **Level unit** parameter (→ 126).


Interface distance

Navigation
 Setup → Interface dist.
Prerequisite
Operating mode (→  111) = **Interface** or **Interface with capacitance**
Description
 Displays the measured distance D_1 between the reference point (lower edge of flange or threaded connection) and the interface.
Additional information

A0013202

 The unit is defined in the **Distance unit** parameter (→  111).

Confirm distance

**Navigation**
 Setup → Confirm distance
Description
 Specify, whether the measured distance matches the real distance.
 Depending on the selection the device automatically sets the range of mapping.
Selection

- Manual map
- Distance ok
- Distance unknown
- Distance too small*
- Distance too big*
- Tank empty
- Delete map


Factory setting

Distance unknown

 * Visibility depends on order options or device settings

Additional information**Meaning of the options**

- **Manual map**

To be selected if the range of mapping is to be defined manually in the **Mapping end point** parameter (→  120). In this case it is not necessary to confirm the distance.

- **Distance ok**

To be selected if the measured distance matches the actual distance. The device performs a mapping.

- **Distance unknown**

To be selected if the actual distance is unknown. A mapping can not be performed in this case.

- **Distance too small**

To be selected if the measured distance is smaller than the actual distance. The device searches for the next echo and returns to the **Confirm distance** parameter. The distance is recalculated and displayed. The comparison must be repeated until the displayed distance matches the actual distance. After this, the recording of the map can be started by selecting **Distance ok**.

- **Distance too big⁶⁾**

To be selected if the measured distance exceeds the actual distance. The device adjusts the signal evaluation and returns to the **Confirm distance** parameter. The distance is recalculated and displayed. The comparison must be repeated until the displayed distance matches the actual distance. After this, the recording of the map can be started by selecting **Distance ok**.

- **Tank empty**

To be selected if the tank is completely empty. The device records a mapping covering the complete measuring range.

To be selected if the tank is completely empty. The device records a mapping covering the complete measuring range minus **Map gap to LN**.

- **Factory map**

To be selected if the present mapping curve (if one exists) is to be deleted. The device returns to the **Confirm distance** parameter and a new mapping can be recorded.




When operating via the display module, the measured distance is displayed together with this parameter for reference purposes.



For interface measurements the distance always refers to the total level (not the interface level).



For FMP55 with rope probes and **Operating mode** (→  111) = **Interface with capacitance** the mapping must be recorded with the tank being empty, and the **Tank empty** option must be selected. Otherwise the device can not register the correct empty capacitance.


For FMP55 with coax probes a mapping must be recorded at least in the upper part of the probe, as tightening the flange has an influence on the envelope curve. However, even with coax probes it is recommended to record the mapping with the tank being completely empty (and selecting the **Tank empty** option).



If the teaching procedure with the **Distance too small** option or the **Distance too big** option is quit before the distance has been confirmed, a map is **not** recorded and the teaching procedure is reset after 60 s.

Present mapping


Navigation





 Setup → Present mapping


Description



Indicates up to which distance a mapping has already been recorded.

6) Only available for "Expert → Sensor → Echo tracking → **Evaluation mode** parameter" = "Short time history" or "Long time history"




Mapping end point


| | |
|-------------------------------|---|
| Navigation |  Setup → Map. end point |
| Prerequisite | Confirm distance (→  118) = Manual map or Distance too small |
| Description | Specify new end of the mapping. |
| User entry | 0 to 200 000.0 m |
| Factory setting | 0.1 m |
| Additional information | <p>This parameter defines up to which distance the new mapping is to be recorded. The distance is measured from the reference point, i.e. from the lower edge of the mounting flange or the threaded connection.</p> <p> For reference purposes the Present mapping parameter (→  119) is displayed together with this parameter. It indicates up to which distance a mapping has already been recorded.</p> |

Record map



| | |
|-------------------------------|--|
| Navigation |  Setup → Record map |
| Prerequisite | Confirm distance (→  118) = Manual map or Distance too small |
| Description | Start recording of the map. |
| Selection | <ul style="list-style-type: none"> ▪ No ▪ Record map ▪ Delete map |
| Factory setting | No |
| Additional information | <p>Meaning of the options</p> <ul style="list-style-type: none"> ▪ No The map is not recorded. ▪ Record map The map is recorded. After the recording is completed, the new measured distance and the new mapping range appear on the display. When operating via the local display, these values must be confirmed by pressing <input checked="" type="checkbox"/>. ▪ Delete map The mapping (if one exists) is deleted and the device displays the recalculated measured distance and the mapping range. When operating via the local display, these values must be confirmed by pressing <input checked="" type="checkbox"/>. |

16.3.1 "Mapping" wizard

-  The **Mapping** wizard is only available when operating via the local display. When operating via an operating tool, all parameters concerning the mapping are located directly in the **Setup** menu (→  111).
-  In the **Mapping** wizard two parameters are displayed simultaneously on the display module at any one time. The upper parameter can be edited, whereas the lower parameter is displayed for reference purposes only.


Navigation  Setup → Mapping

Confirm distance

Navigation  Setup → Mapping → Confirm distance

Description →  118

Mapping end point

Navigation  Setup → Mapping → Map. end point

Description →  120

Record map

Navigation  Setup → Mapping → Record map

Description →  120

Distance





Navigation  Setup → Mapping → Distance

Description →  115






16.3.2 "Advanced setup" submenu

Navigation  Setup → Advanced setup








Locking status

| | |
|-------------------------------|--|
| Navigation |   Setup → Advanced setup → Locking status |
| Description | Indicates the write protection with the highest priority that is currently active. |
| User interface | <ul style="list-style-type: none"> ▪ Hardware locked ▪ SIL locked ▪ CT active - defined parameters ▪ WHG locked ▪ Temporarily locked |
| Additional information | <p>Meaning and priorities of the types of write protection</p> <ul style="list-style-type: none"> ▪ Hardware locked (priority 1) The DIP switch for hardware locking is activated on the main electronics module. This locks write access to the parameters. ▪ SIL locked (priority 2) The SIL mode is activated. Writing access to the relevant parameters is denied. ▪ WHG locked (priority 3) The WHG mode is activated. Writing access to the relevant parameters is denied. ▪ Temporarily locked (priority 4) Write access to the parameters is temporarily locked on account of internal processes in progress in the device (e.g. data upload/download, reset etc.). The parameters can be modified as soon as the processes are complete. <p> On the display module, the -symbol appears in front of parameters that cannot be modified since they are write-protected.</p> |







Access status tooling

| | |
|-------------------------------|--|
| Navigation |  Setup → Advanced setup → Access stat.tool |
| Description | Indicates access authorization to parameters via operating tool (e.g. FieldCare). |
| User interface | <ul style="list-style-type: none"> ▪ Operator ▪ Maintenance ▪ Service |
| Additional information | <p> The access authorization can be changed via the Enter access code parameter (→  123).</p> <p> If additional write protection is active, this restricts the current access authorization even further. The write protection status can be viewed via the Locking status parameter (→  122).</p> |


Access status display


| | |
|-------------------------------|---|
| Navigation |  Setup → Advanced setup → Access stat.disp |
| Prerequisite | The device has a local display. |
| Description | Indicates access authorization to parameters via local display. |
| User interface | <ul style="list-style-type: none"> ▪ Operator ▪ Maintenance ▪ Service |
| Additional information | <p> If a  symbol appears in front of a parameter, the parameter cannot be changed via the local display with the current access authorization.</p> <p> The access authorization can be changed via the Enter access code parameter (→  123).</p> <p> If additional write protection is active, this restricts the current access authorization even further. The write protection status can be viewed via the Locking status parameter (→  122).</p> |


Enter access code

| | |
|-------------------------------|---|
| Navigation |   Setup → Advanced setup → Ent. access code |
| Description | Enter access code to disable write protection of parameters. |
| User entry | 0 to 9999 |
| Additional information | <ul style="list-style-type: none"> ▪ For local operation, the customer-specific access code, which has been defined in the Define access code parameter (→  169), has to be entered. ▪ If an incorrect access code is entered, the user retains his current access authorization. ▪ The write protection affects all parameters marked with the -symbol in this document. On the local display, the -symbol in front of a parameter indicates that the parameter is write-protected. ▪ If no key is pressed for 10 min, or the user switches from the navigation and editing mode back to the measured value display mode, the device automatically locks the write-protected parameters after another 60 s. <p> Please contact your Endress+Hauser Sales Center if you lose your access code.</p> |

"Interface" submenu

Navigation  Setup → Advanced setup → Interface

Process property 

Navigation  Setup → Advanced setup → Interface → Process property


Description Specify typical rate of change for the interface position.


- Selection**
- Fast > 1 m (40 in)/min
 - Standard < 1 m (40in) /min
 - Medium < 10 cm (4in) /min
 - Slow < 1 cm (0.4in) /min
 - No filter / test


Factory setting Standard < 1 m (40in) /min

Additional information The device adjusts the signal evaluation filters and the damping of the output signal to the typical rate of level change defined in this parameter:

| Process property | Step response time / s |
|----------------------------|------------------------|
| Fast > 1 m (40 in)/min | 5 |
| Standard < 1 m (40in) /min | 15 |
| Medium < 10 cm (4in) /min | 40 |
| Slow < 1 cm (0.4in) /min | 74 |
| No filter / test | 2.2 |

Interface property 

Navigation  Setup → Advanced setup → Interface → Interface prop.

Prerequisite **Operating mode (→  111) = Interface with capacitance**

Description Select interface property.
The interface property determines how the Guided Radar and the Capacitance Measurement interact.

- Selection**
- Special: automatic DC
 - Build up
 - Standard
 - Emulsion layer

Factory setting Standard

Additional information

Meaning of the options

■ **Special: automatic DC**

– Condition:

The specific capacitance (pF/m) is known. ⁷⁾

– Signal evaluation:

As long as a clear interface is detected, both the total and the interface level are determined via the Guided Radar. The dielectric constant of the upper medium is continuously adjusted. If an emulsion layer is present, the total level is determined via the Guided Radar whereas the interface level is determined via the Capacitance Measurement.

■ **Build up**

– Condition:

The dielectric constant of the upper medium and the specific capacitance (pF/m) are known. ⁷⁾

– Signal evaluation:

As long as a clear interface is detected, the interface level is determined via the Guided Radar as well as via the Capacitance Measurement. If these two values start to diverge from each other due to build-up formation, an error message is generated. If an emulsion layer is present, the total level is determined via the Guided Radar whereas the interface level is determined via the Capacitance Measurement.

■ **Standard**

– Condition:

The dielectric constant of the upper medium is known.

– Signal evaluation:

As long as a clear interface is detected, the specific capacitance (pF/m) is continuously adjusted. Therefore build-up has only little influence on the measurement. If an emulsion layer is present, the total level is determined via the Guided Radar whereas the interface level is determined via the Capacitance Measurement.

■ **Oil/Water condensate**

– Condition:

The dielectric constant of the upper medium and the specific capacitance (pF/m) are known. ⁷⁾

– Signal evaluation:

The total level is always determined via the Guided Radar. The interface level is always determined via the Capacitance Measurement.

DC value lower medium



Navigation

Setup → Advanced setup → Interface → DC lower medium

Prerequisite

Operating mode (→ 111) = **Interface** or **Interface with capacitance**

Description

Specify the relative dielectric constant ϵ_r of the lower medium.

User entry

1 to 100

Factory setting

80.0

⁷⁾ The specific capacitance of the media depends on the DC value and the geometry of the probe, which may differ noticeably. For rod probes < 2 m, the probe geometry is measured after production and the resulting specific capacitance for conductive media is preset on delivery.

Additional information



For dielectric constants (DC values) of many media commonly used in various industries refer to:

- the Endress+Hauser DC manual (CP01076F)
- the Endress+Hauser "DC Values App" (available for Android and iOS)



The factory setting, $\epsilon_r = 80$, is valid for water at 20 °C (68 °F).

Level unit



Navigation

Setup → Advanced setup → Interface → Level unit

Description

Select level unit.

Selection

SI units

- %
- m
- mm

US units

- ft
- in

Factory setting

%

Additional information

The level unit may differ from the distance unit defined in the **Distance unit** parameter (→ 111):

- The unit defined in the **Distance unit** parameter is used for the basic calibration (**Empty calibration** (→ 113) and **Full calibration** (→ 114)).
- The unit defined in the **Level unit** parameter is used to display the (nonlinearized) level and interface position.

Blocking distance



Navigation

Setup → Advanced setup → Interface → Blocking dist.

Description

Specify upper blocking distance UB.

User entry

0 to 200 m


Factory setting

- For coax probes: 100 mm (3.9 in)
- For rod and rope probes up to 8 m (26 ft): 200 mm (8 in)
- For rod and rope probes above 8 m (26 ft): 0.025 * length of probe

Additional information

Echoes from within the blocking distance are not taken into account in the signal evaluation. The upper blocking distance is used

- to suppress interference echoes at the top end of the probe.
- to suppress the echo of the total level in the case of flooded bypasses.

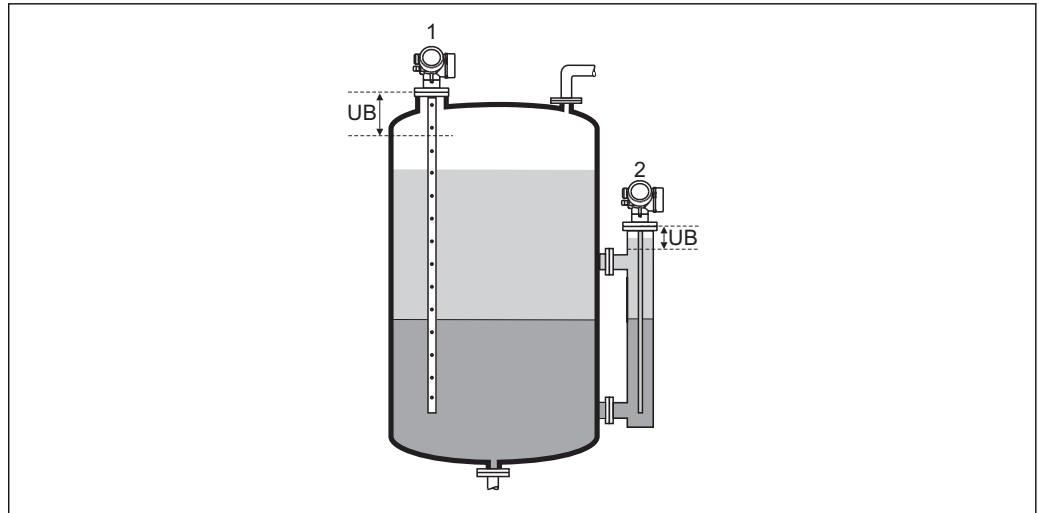

A0013220

- 1 Suppression of interference echoes at the top end of the probe.
- 2 Suppression of the level signal in case of a flooded bypass.
- UB Upper blocking distance

Level correction




| | |
|-------------------------------|---|
| Navigation | ☰☰ Setup → Advanced setup → Interface → Level correction |
| Description | Specify level correction (if required). |
| User entry | -200 000.0 to 200 000.0 % |
| Factory setting | 0.0 % |
| Additional information | The value specified in this parameter is added to the measured total and interface levels (before linearization). |

Manual thickness upper layer




| | |
|------------------------|--|
| Navigation | ☰ Setup → Advanced setup → Interface → Man.thick.up.lay |
| Description | Specify the manually determined interface thickness UP (i.e. the thickness of the upper medium). |
| User entry | 0 to 200 m |
| Factory setting | 0 m |

Additional information

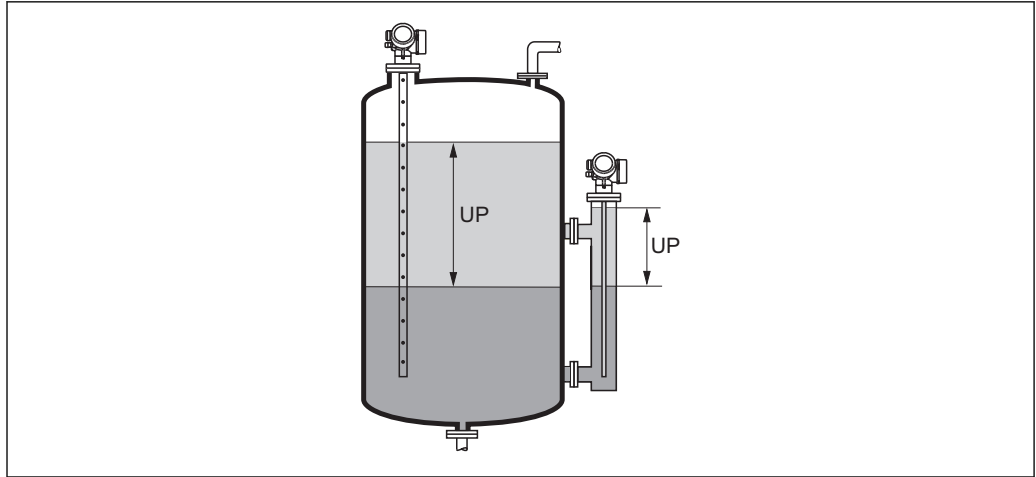


A0013313

UP Interface thickness (= thickness of upper medium)

 On the local display, the measured interface thickness is indicated together with the manual interface thickness. By comparing these two values the device can automatically adjust the dielectric constant of the upper medium.


Measured thickness upper layer

Navigation  Setup → Advanced setup → Interface → Meas.thick.u.lay

Description Displays the measured interface thickness. (Thickness UP of the upper medium).


DC value



Navigation  Setup → Advanced setup → Interface → DC value

Description Displays relative dielectric constant ϵ_r of the upper medium (DC₁) before correction.

Calculated DC value

Navigation  Setup → Advanced setup → Interface → Calc. DC value

Description Displays calculated (i.e. corrected) relative dielectric constant ϵ_r (DC1) of the upper medium.

Use calculated DC value

**Navigation**

Setup → Advanced setup → Interface → Use calc. DC

Description

Specify whether the calculated dielectric constant is to be used.

Selection

- Save and exit
- Cancel and exit

Factory setting

Cancel and exit



Additional information**Meaning of the options**


- Save and exit
The calculated constant is assumed to be the correct one.
- Cancel and exit
The calculated dielectric constant is rejected; the previous dielectric constant remains active.




On the local display, the **Calculated DC value** parameter (→ 128) is displayed together with this parameter.


"Automatic DC calculation" wizard


 The **Automatic DC calculation** wizard is only available when operating via the local display. When operating via an operating tool, all parameters concerning the automatic DC calculation are located directly in the **Interface** submenu (→  124)


 In the **Automatic DC calculation** wizard two parameters are displayed simultaneously on the display module at any one time. The upper parameter can be edited, whereas the lower parameter is displayed for reference purposes only.


Navigation  Setup → Advanced setup → Interface → Autom. DC calc.

Manual thickness upper layer 

Navigation  Setup → Advanced setup → Interface → Autom. DC calc. → Man.thick.up.lay

Description →  127

DC value 

Navigation  Setup → Advanced setup → Interface → Autom. DC calc. → DC value


Description →  128

Use calculated DC value 

Navigation  Setup → Advanced setup → Interface → Autom. DC calc. → Use calc. DC

Description →  129

"Linearization" submenu

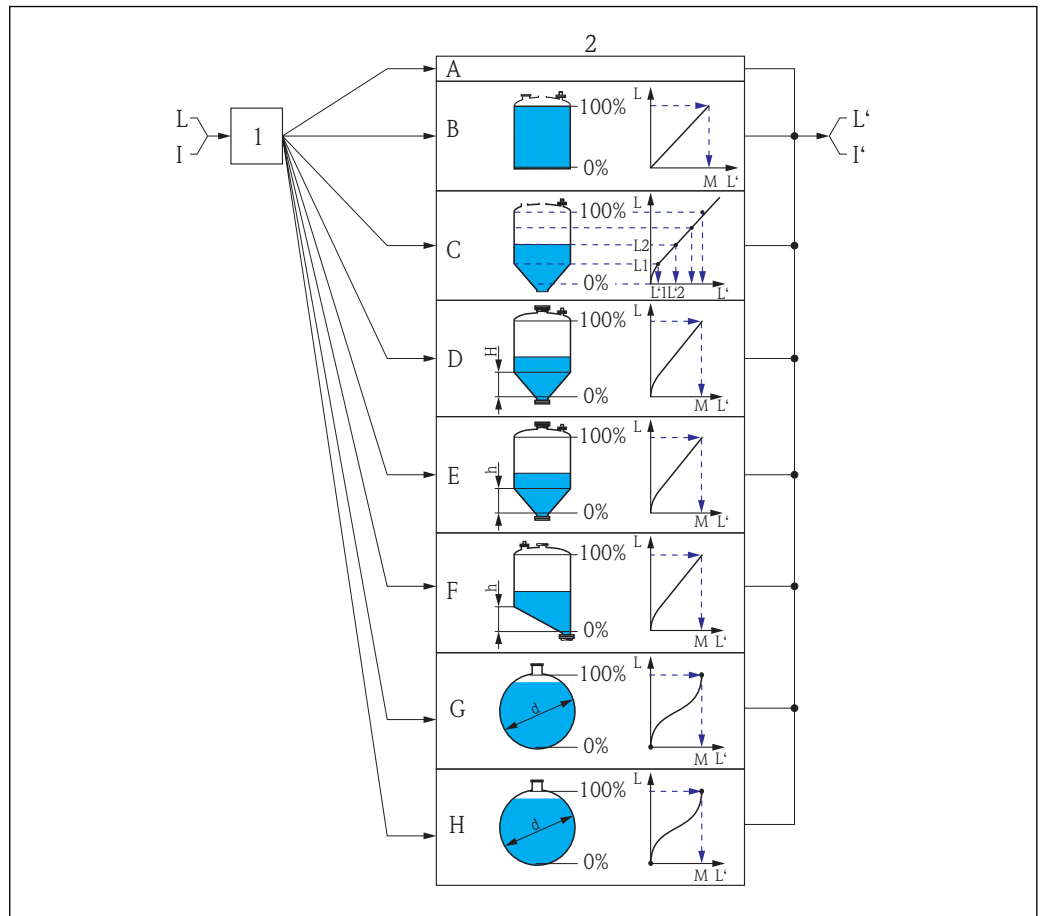












A0016084

30 Linearization: Transformation of the level and (if relevant) the interface height into a volume or weight; the transformation is dependent on the shape of the vessel.


- 1 Selection of linearization type and unit
- 2 Configuration of the linearization
- A Linearization type (→ 134) = None
- B Linearization type (→ 134) = Linear
- C Linearization type (→ 134) = Table
- D Linearization type (→ 134) = Pyramid bottom
- E Linearization type (→ 134) = Conical bottom
- F Linearization type (→ 134) = Angled bottom
- G Linearization type (→ 134) = Horizontal cylinder
- H Linearization type (→ 134) = Sphere
- I For "Operating mode (→ 111)" = "Interface" or "Interface with capacitance": Interface before linearization (measured in distance units)
- I' For "Operating mode (→ 111)" = "Interface" or "Interface with capacitance": Interface after linearization (corresponds to volume or weight)
- L Level before linearization (measured in distance units)
- L' Level linearized (→ 136) (corresponds to volume or weight)
- M Maximum value (→ 137)
- d Diameter (→ 137)
- h Intermediate height (→ 138)















Structure of the submenu on the display module

Navigation  Setup → Advanced setup → Linearization


| | | |
|--------------------------|----------------|---|
| ► Linearization | | |
| Linearization type | | →  134 |
| Unit after linearization | | →  135 |
| Free text | | →  136 |
| Maximum value | | →  137 |
| Diameter | | →  137 |
| Intermediate height | | →  138 |
| Table mode | | →  138 |
| ► Edit table | | |
| | Level | →  140 |
| | Customer value | →  140 |
| | Activate table | →  140 |


Structure of the submenu in an operating tool (e.g. FieldCare)

Navigation  Setup → Advanced setup → Linearization


| | |
|--------------------------|---|
| ► Linearization | |
| Linearization type | →  134 |
| Unit after linearization | →  135 |
| Free text | →  136 |
| Level linearized | →  136 |
| Interface linearized | →  137 |
| Maximum value | →  137 |
| Diameter | →  137 |
| Intermediate height | →  138 |
| Table mode | →  138 |
| Table number | →  139 |
| Level | →  140 |
| Level | →  140 |
| Customer value | →  140 |
| Activate table | →  140 |

Description of parameters

Navigation  Setup → Advanced setup → Linearization

Linearization type 

Navigation

 Setup → Advanced setup → Linearization → Lineariz. type

Description

Select linearization type.


Selection

- None
- Linear
- Table
- Pyramid bottom
- Conical bottom
- Angled bottom
- Horizontal cylinder
- Sphere


Factory setting

None

Additional information

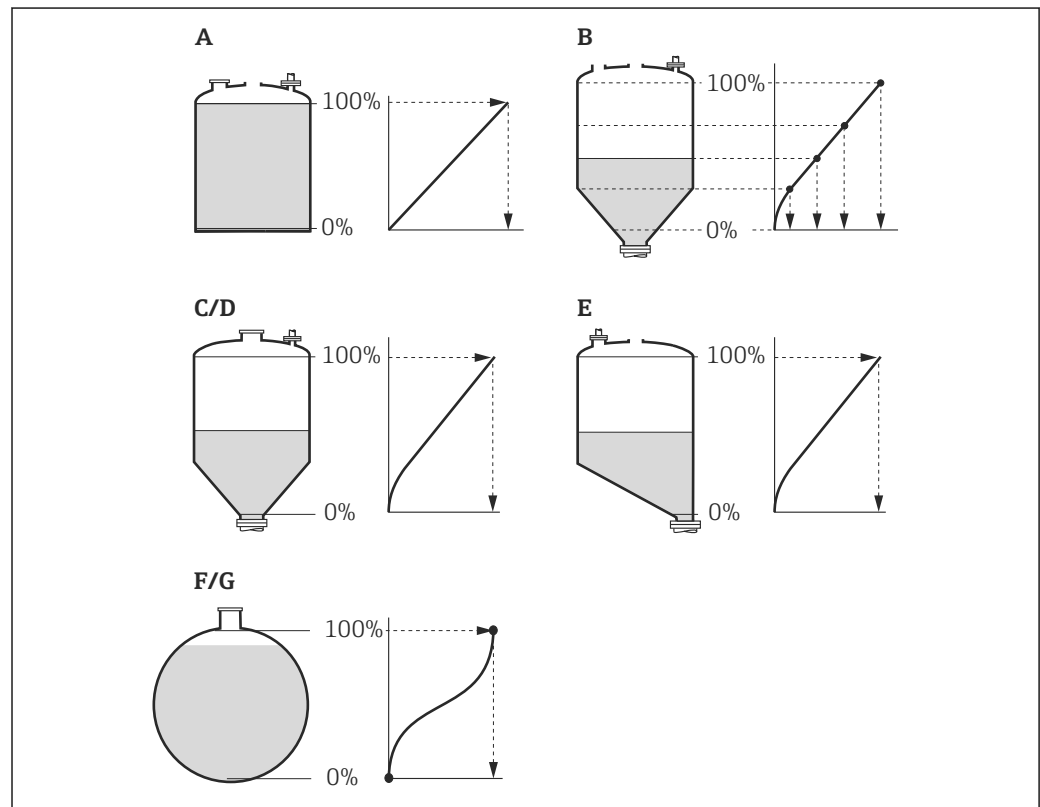

A0021476

 31 Linearization types



- A None
- B Table
- C Pyramid bottom
- D Conical bottom
- E Angled bottom
- F Sphere
- G Horizontal cylinder

Meaning of the options**■ None**

The level is transmitted in the level unit without linearization.






■ Linear

The output value (volume/weight) is directly proportional to the level L. This is valid, for example, for vertical cylinders. The following additional parameters have to be specified:

- **Unit after linearization** (→  135)
- **Maximum value** (→  137): Maximum volume or weight




■ Table

The relationship between the measured level L and the output value (volume/weight) is given by a linearization table consisting of up to 32 pairs of values "level - volume" or "level - weight", respectively. The following additional parameters have to be specified:

- **Unit after linearization** (→  135)
- **Table mode** (→  138)
- For each table point: **Level** (→  140)
- For each table point: **Customer value** (→  140)
- **Activate table** (→  140)




■ Pyramid bottom

The output value corresponds to the volume or weight in a silo with pyramid bottom. The following additional parameters have to be specified:

- **Unit after linearization** (→  135)
- **Maximum value** (→  137): Maximum volume or weight
- **Intermediate height** (→  138): The height of the pyramid




■ Conical bottom

The output value corresponds to the volume or weight in a tank with conical bottom. The following additional parameters have to be specified:

- **Unit after linearization** (→  135)
- **Maximum value** (→  137): Maximum volume or weight
- **Intermediate height** (→  138): The height of the conical part of the tank




■ Angled bottom

The output value corresponds to the volume or weight in a silo with an angled bottom. The following additional parameters have to be specified:

- **Unit after linearization** (→  135)
- **Maximum value** (→  137): Maximum volume or weight
- **Intermediate height** (→  138): Height of the angled bottom




■ Horizontal cylinder

The output value corresponds to the volume or weight in a horizontal cylinder. The following additional parameters have to be specified:



- **Unit after linearization** (→  135)
- **Maximum value** (→  137): Maximum volume or weight
- **Diameter** (→  137)

■ Sphere


The output value corresponds to the volume or weight in a spherical tank. The following additional parameters have to be specified:

- **Unit after linearization** (→  135)
- **Maximum value** (→  137): Maximum volume or weight
- **Diameter** (→  137)

Unit after linearization**Navigation**

  Setup → Advanced setup → Linearization → Unit lineariz.

Prerequisite

Linearization type (→  134) ≠ None



Description

Select unit of the linearized value.



| | | | |
|------------------|--|---|---------------------------------|
| Selection | <i>SI units</i> <ul style="list-style-type: none"> ■ STon ■ t ■ kg ■ cm³ ■ dm³ ■ m³ ■ hl ■ l ■ % <i>Custom-specific units</i> Free text | <i>US units</i> <ul style="list-style-type: none"> ■ lb ■ UsGal ■ ft³ | <i>Imperial units</i> impGal |
|------------------|--|---|---------------------------------|

Factory setting %

Additional information The selected unit is only used to be indicated on the display. The measured value is **not** transformed according to the selected unit.

 It is also possible to configure a distance-to-distance linearization, i.e. a transformation from the level unit to a different distance unit. To do so, select the **Linear** linearization mode. In order to define the new level unit, select the **Free text** option in the **Unit after linearization** parameter and enter the required unit into the **Free text** parameter (→  136).

Free text 

Navigation   Setup → Advanced setup → Linearization → Free text

Prerequisite **Unit after linearization** (→  135) = **Free text**

Description Enter unit symbol.


User entry Up to 32 alphanumerical characters (letters, numbers, special characters)


Factory setting Free text

Level linearized





Navigation  Setup → Advanced setup → Linearization → Level linearized

Description Displays linearized level.


Additional information 




- The unit is defined by the **Unit after linearization** parameter →  135.
- For interface measurements, this parameter always refers to the total level.

Interface linearized

| | |
|-------------------------------|---|
| Navigation |  Setup → Advanced setup → Linearization → Interf. lineariz |
| Prerequisite | Operating mode (→  111) = Interface or Interface with capacitance |
| Description | Displays the linearized interface height. |
| Additional information |  The unit is defined in the Unit after linearization parameter (→  135). |





Maximum value



| | |
|------------------------|---|
| Navigation |   Setup → Advanced setup → Linearization → Maximum value |
| Prerequisite | Linearization type (→  134) has one of the following values: <ul style="list-style-type: none"> ▪ Linear ▪ Pyramid bottom ▪ Conical bottom ▪ Angled bottom ▪ Horizontal cylinder ▪ Sphere |
| Description | Specify the maximum content of the vessel (100%) measured in the units after linearization. |
| User entry | -50 000.0 to 50 000.0 % |
| Factory setting | 100.0 % |

Diameter



| | |
|-------------------------------|--|
| Navigation |   Setup → Advanced setup → Linearization → Diameter |
| Prerequisite | Linearization type (→  134) has one of the following values: <ul style="list-style-type: none"> ▪ Horizontal cylinder ▪ Sphere |
| Description | Specify tank diameter. |
| User entry | 0 to 9 999.999 m |
| Factory setting | 2 m |
| Additional information | The unit is defined in the Distance unit parameter (→  111). |

Intermediate height



Navigation

Setup → Advanced setup → Linearization → Intermed. height

Prerequisite

Linearization type (→ 134) has one of the following values:

- Pyramid bottom
- Conical bottom
- Angled bottom

Description

Specify intermediate height H.


User entry

0 to 200 m

Factory setting

0 m

Additional information

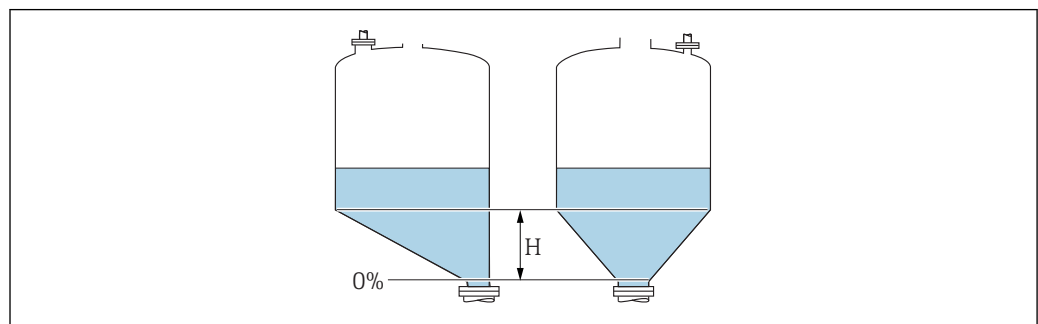

A0013264

H Intermediate height

The unit is defined in the **Distance unit** parameter (→ 111).

Table mode



Navigation

Setup → Advanced setup → Linearization → Table mode

Prerequisite

Linearization type (→ 134) = Table

Description

Select editing mode of the linearization table.

Selection

- Manual
- Semiautomatic
- Clear table
- Sort table

Factory setting

Manual




Additional information


Meaning of the options

- **Manual**
The level and the associated linearized value are entered manually for each linearization point.
- **Semiautomatic**
The level is measured by the device for each linearization point. The associated linearized value is entered manually.
- **Clear table**
Deletes the existing linearization table.
- **Sort table**
Rearranges the linearization points into an ascending order.




Conditions the linearization table must meet:



- The table may consist of up to 32 pairs of values "Level - Linearized Value".
- The table must be monotonic (monotonically increasing or decreasing).
- The first linearization point must refer to the minimum level.
- The last linearization point must refer to the maximum level.


 Before entering a linearization table, the values for **Empty calibration** (→  113) and **Full calibration** (→  114) must be set correctly.




If values of the table need to be changed after the full or empty calibration have been changed, a correct evaluation is only ensured if the existing table is deleted and the complete table is entered again. To do so delete the existing table (**Table mode** (→  138) = **Clear table**). Then enter a new table.

How to enter the table




- **Via FieldCare**
The table points can be entered via the **Table number** (→  139), **Level** (→  140) and **Customer value** (→  140) parameters. As an alternative, the graphic table editor may be used: Device Operation → Device Functions → Additional Functions → Linearization (Online/Offline)
- **Via local display**
Select the **Edit table** submenu to call up the graphic table editor. The table is displayed and can be edited line by line.

 The factory setting for the level unit is "%". If you want to enter the linearization table in physical units, you must select the appropriate unit in the **Level unit** parameter (→  126) beforehand.




 If a decreasing table is entered, the values for 20 mA and 4 mA of the current output are interchanged. That means: 20 mA refers to the lowest level, whereas 4 mA refers to the highest level. If required, the current output can be inverted in the **Measuring mode** parameter.

| | |
|------------------------|---|
| Table number |  |
| Navigation |  Setup → Advanced setup → Linearization → Table number |
| Prerequisite | Linearization type (→  134) = Table |
| Description | Select table point you are going to enter or change. |
| User entry | 1 to 32 |
| Factory setting | 1 |



Level (Manual) 

| | |
|------------------------|---|
| Navigation |  Setup → Advanced setup → Linearization → Level |
| Prerequisite | <ul style="list-style-type: none"> ▪ Linearization type (→  134) = Table ▪ Table mode (→  138) = Manual |
| Description | Enter level value of the table point (value before linearization). |
| User entry | Signed floating-point number |
| Factory setting | 0 % |




Level (Semiautomatic)

| | |
|---------------------|--|
| Navigation |  Setup → Advanced setup → Linearization → Level |
| Prerequisite | <ul style="list-style-type: none"> ▪ Linearization type (→  134) = Table ▪ Table mode (→  138) = Semiautomatic |
| Description | Displays measured level (value before linearization). This value is transmitted to the table. |

Customer value 

| | |
|------------------------|---|
| Navigation |  Setup → Advanced setup → Linearization → Customer value |
| Prerequisite | Linearization type (→  134) = Table |
| Description | Enter linearized value for the table point. |
| User entry | Signed floating-point number |
| Factory setting | 0 % |

Activate table 

| | |
|---------------------|---|
| Navigation |   Setup → Advanced setup → Linearization → Activate table |
| Prerequisite | Linearization type (→  134) = Table |
| Description | Activate (enable) or deactivate (disable) the linearization table. |
| Selection | <ul style="list-style-type: none"> ▪ Disable ▪ Enable |

Factory setting Disable

Additional information

Meaning of the options

■ **Disable**

The measured level is not linearized.

If **Linearization type** (→  **134**) = **Table** at the same time, the device issues error message F435.


■ **Enable**


The measured level is linearized according to the table.








When editing the table, the **Activate table** parameter is automatically reset to **Disable** and must be reset to **Enable** after the table has been entered.





"Safety settings" submenu

Navigation  Setup → Advanced setup → Safety sett.

Output echo lost 

| | |
|-------------------------------|--|
| Navigation |  Setup → Advanced setup → Safety sett. → Output echo lost |
| Description | Define the behavior of the output signal in case of a lost echo. |
| Selection | <ul style="list-style-type: none"> ▪ Last valid value ▪ Ramp at echo lost ▪ Value echo lost ▪ Alarm |
| Factory setting | Last valid value |
| Additional information | <p>Meaning of the options</p> <ul style="list-style-type: none"> ▪ Last valid value The last valid value is kept in the case of a lost echo. ▪ Ramp at echo lost In the case of a lost echo the output value is continuously shifted towards 0% or 100%. The slope of the ramp is defined in the Ramp at echo lost parameter (→  143). ▪ Value echo lost In the case of a lost echo the output assumes the value defined in the Value echo lost parameter (→  142). ▪ Alarm In the case of a lost echo the device generates an alarm; see the Failure mode parameter (→  152) |

Value echo lost 

| | |
|-------------------------------|--|
| Navigation |  Setup → Advanced setup → Safety sett. → Value echo lost |
| Prerequisite | Output echo lost (→  142) = Value echo lost |
| Description | Define output value in case of a lost echo. |
| User entry | 0 to 200 000.0 % |
| Factory setting | 0.0 % |
| Additional information | <p>Use the unit which has been defined for the measured value output:</p> <ul style="list-style-type: none"> ▪ without linearization: Level unit (→  126) ▪ with linearization: Unit after linearization (→  135) |

Ramp at echo lost



Navigation Setup → Advanced setup → Safety sett. → Ramp echo lost


Prerequisite **Output echo lost (→ 142) = Ramp at echo lost**

Description Define the slope of the ramp in the case of a lost echo.

User entry Signed floating-point number

Factory setting 0.0 %/min

Additional information

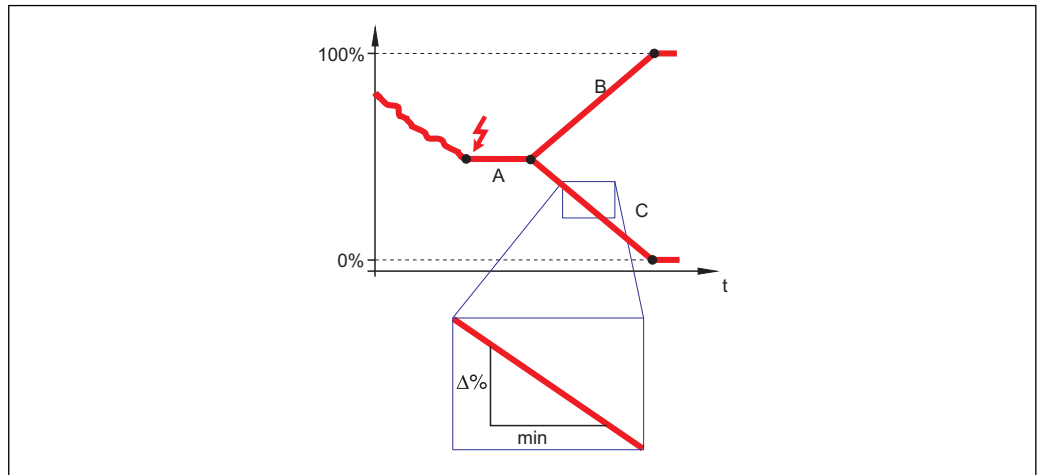

A0013269

- A Delay time echo lost
- B Ramp at echo lost (→ 143) (positive value)
- C Ramp at echo lost (→ 143) (negative value)

- The unit for the slope of the ramp is "percentage of the measuring range per minute" (%/min).
- For a negative slope of the ramp: The measured value is continuously decreased until it reaches 0%.
- For a positive slope of the ramp: The measured value is continuously increased until it reaches 100%.

Blocking distance



Navigation Setup → Advanced setup → Safety sett. → Blocking dist.

Description Specify upper blocking distance UB.

User entry 0 to 200 m

- Factory setting**
- For coax probes: 0 mm (0 in)
 - For rod and rope probes up to 8 m (26 ft): 200 mm (8 in)
 - For rod and rope probes above 8 m (26 ft): 0.025 * Sondenlänge

Additional information Signals in the upper blocking distance are only evaluated if they have been outside the blocking distance when the device was switched on and move into the blocking distance


due to a level change during operation. Signals which are already in the blocking distance when the device is switched on, are ignored.

- i** This behavior is only valid if the following two conditions are met:
- Expert → Sensor → Echo tracking → Evaluation mode = **Short time history** or **Long time history**)
 - Expert → Sensor → Gas phase comp. → GPC mode= **On, Without correction** or **External correction**

If one of these conditions is not met, signals in the blocking distance will always be ignored.

- i** A different behavior for signals in the blocking distance can be defined in the **Blocking distance evaluation mode** parameter.


- i** If required, a different behavior for signals in the blocking distance can be defined by the Endress+Hauser service.

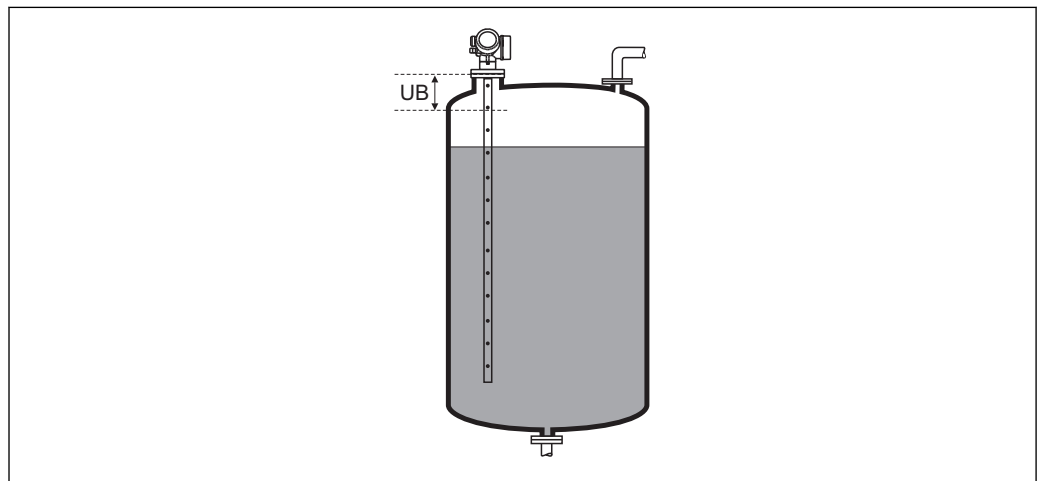


A0013219

32 Blocking distance (UB) for liquid measurements


"SIL/WHG confirmation" wizard

 The **SIL/WHG confirmation** wizard is only available for devices with SIL or WHG approval (Feature 590: "Additional Approval", option LA: "SIL" or LC: "WHG overflow prevention") which are currently **not** in the SIL- or WHG-locked state.


The **SIL/WHG confirmation** wizard is required to lock the device according to SIL or WHG. For details refer to the "Functional Safety Manual" of the respective device, which describes the locking procedure and the parameters of the sequence.


Navigation  Setup → Advanced setup → SIL/WHG confirm.


"Deactivate SIL/WHG" wizard

Navigation  Setup → Advanced setup → Deactiv. SIL/WHG


Reset write protection 








| | |
|------------------------|--|
| Navigation |  Setup → Advanced setup → Deactiv. SIL/WHG → Res. write prot. |
| Description | Enter unlocking code. |
| User entry | 0 to 65 535 |
| Factory setting | 0 |



Code incorrect 





| | |
|------------------------|--|
| Navigation |  Setup → Advanced setup → Deactiv. SIL/WHG → Code incorrect |
| Description | Indicates that a wrong unlocking code has been entered. Select procedure. |
| Selection | <ul style="list-style-type: none">■ Reenter code■ Abort sequence |
| Factory setting | Reenter code |




"Probe settings" submenu

The **Probe settings** submenu helps to ensure that the end of probe signal within the envelope curve is correctly assigned by the evaluation algorithm. The assignment is correct if the length of probe indicated by the device matches the actual length of the probe. The automatic probe length correction can only be performed if the probe is installed in the vessel and is completely uncovered (no medium). For partially filled vessels and if the probe length is known, select **Confirm probe length** (→  148) = **Manual input** in order to enter the value manually.

-  If a mapping (interference echo suppression) has been recorded after shortening the probe, it is no longer possible to perform an automatic probe length correction. In this case there are two options:
 - Delete the map using the **Record map** parameter (→  120) before performing the automatic probe length correction. After the probe length correction, a new map can be recorded using the **Record map** parameter (→  120).
 - Alternative: Select **Confirm probe length** (→  148) = **Manual input** and enter the probe length manually into the **Present probe length** parameter →  147.
-  An automatic probe length correction is only possible after the correct option has been selected in the **Probe grounded** parameter (→  147).

Navigation   Setup → Advanced setup → Probe settings

| | |
|------------------------|--|
| Probe grounded |  |
| <hr/> | |
| Navigation |   Setup → Advanced setup → Probe settings → Probe grounded |
| Prerequisite | Operating mode (→  111) = Level |
| Description | Specify whether the probe is grounded. |
| Selection | <ul style="list-style-type: none"> ▪ No ▪ Yes |
| Factory setting | No |

| | |
|-----------------------------|--|
| Present probe length |  |
| <hr/> | |
| Navigation |  Setup → Advanced setup → Probe settings → Pres. length |
| Description | <ul style="list-style-type: none"> ▪ In most cases: Displays the length of the probe according to the currently measured end-of-probe signal. ▪ For Confirm probe length (→  148) = Manual input: Enter actual length of probe. |
| User entry | 0 to 200 m |
| Factory setting | 4 m |

Confirm probe length
**Navigation**

Setup → Advanced setup → Probe settings → Confirm length

Description

Select, whether the value displayed in the **Present probe length** parameter → 147 matches the actual length of the probe. Based on this input, the device performs a probe length correction.

Selection

- Probe length OK
- Probe length too small
- Probe length too big
- Probe covered
- Manual input
- Probe length unknown

Factory setting



Probe length OK


Additional information**Meaning of the options**

- **Probe length OK**
To be selected if the indicated length is correct. An adjustment is not required. The device quits the sequence.
- **Probe length too small**
To be selected if the displayed length is smaller than the actual length of the probe. A different end of probe signal is allocated and the newly calculated length is displayed in the **Present probe length** parameter → 147. This procedure has to be repeated until the displayed value matches the actual length of the probe.
- **Probe length too big**
To be selected if the displayed length is bigger than the actual length of the probe. A different end of probe signal is allocated and the newly calculated length is indicated in the **Present probe length** parameter → 147. This procedure has to be repeated until the displayed value matches the actual length of the probe.
- **Probe covered**
To be selected if the probe is (partially or completely) covered. A probe length correction is impossible in this case. The device quits the sequence.
- **Manual input**
To be selected if no automatic probe length correction is to be performed. Instead, the actual length of the probe must be entered manually into the **Present probe length** parameter → 147⁸⁾.
- **Probe length unknown**
To be selected if the actual length of the probe is unknown. A probe length correction is impossible in this case and the device quits the sequence.

8) When operated via FieldCare, the **Manual input** option needs not to be selected explicitly. In FieldCare the length of the probe can always be edited.

"Probe length correction" wizard

 The **Probe length correction** wizard is only available when operating via the local display. When operating via an operating tool, all parameters concerning the probe length correction are located directly in the **Probe settings** submenu (→  147).

Navigation  Setup → Advanced setup → Probe settings → Prob.length corr


Confirm probe length**Navigation**

 Setup → Advanced setup → Probe settings → Prob.length corr → Confirm length

Description

→  148



Present probe length**Navigation**


 Setup → Advanced setup → Probe settings → Prob.length corr → Pres. length


Description


→  147

"Current output 1 to 2" submenu

 The **Current output 2** submenu (→  150) is only available for devices with two current outputs.

Navigation  Setup → Advanced setup → Curr.output 1 to 2

Assign current output 1 to 2 

Navigation  Setup → Advanced setup → Curr.output 1 to 2 → Assign curr.

Description Select process variable for current output.



- Selection**
- Level linearized
 - Distance
 - Electronic temperature
 - For FMP55: Measured capacitance
 - Relative echo amplitude
 - Analog output adv. diagnostics 1
 - Analog output adv. diagnostics 2

Additionally for Operating mode = "Interface" or "Interface with capacitance":

- Interface linearized
- Interface distance
- Thickness upper layer
- Relative interface amplitude

- Factory setting**
- For interface measurements**
- Current output 1: Interface linearized
 - Current output 2 ⁹⁾: Level linearized


Additional information *Definition of the current range for the process variables*

| Process variable | 4 mA value | 20 mA value |
|------------------------------------|--|---|
| Level linearized | 0 % ¹⁾ or the associated linearized value | 100 % ²⁾ or the associated linearized value |
| Distance | 0 (i.e. level is at the reference point) | Empty calibration (→  113) (i.e. level is at 0 %) |
| Electronic temperature | -50 °C (-58 °F) | 100 °C (212 °F) |
| Measured capacitance | 0 pF | 4 000 pF |
| Relative echo amplitude | 0 mV | 2 000 mV |
| Analog output adv. diagnostics 1/2 | depending on the parametrization of the Advanced Diagnostics | |
| Interface linearized | 0 % ¹⁾ or the associated linearized value | 100 % ²⁾ or the associated linearized value |
| Interface distance | 0 (i.e. interface at the reference point) | Empty calibration (→  113) (i.e. interface is at 0 %) |

9) only for devices with two current outputs

| Process variable | 4 mA value | 20 mA value |
|------------------------------|--|--|
| Thickness upper layer | 0 % ¹⁾ or the associated linearized value | 100 % ²⁾ or the associated linearized value |
| Relative interface amplitude | 0 mV | 2 000 mV |

- 1) the 0% level is defined by **Empty calibration** parameter (→ ⓘ 113)
- 2) The 100% level is defined by **Full calibration** parameter (→ ⓘ 114)


 It may be necessary to adjust the 4mA and 20mA values to the application (especially in the case of the **Analog output adv. diagnostics 1/2** option).

This can be done by the following parameters:

- Expert → Output → Curr.output 1 to 2 → Turn down
- Expert → Output → Curr.output 1 to 2 → 4 mA value
- Expert → Output → Curr.output 1 to 2 → 20 mA value

Current span

Navigation

 Setup → Advanced setup → Curr.output 1 to 2 → Current span

Description

Select current range for process variable and alarm signal.

Selection

- 4...20 mA
- 4...20 mA NAMUR
- 4...20 mA US
- Fixed current


Factory setting


4...20 mA NAMUR


Additional information




Meaning of the options


| Option | Current range for process variable | Lower alarm signal level | Upper alarm signal level |
|-----------------|--|--------------------------|--------------------------|
| 4...20 mA | 4 to 20.5 mA | < 3.6 mA | > 21.95 mA |
| 4...20 mA NAMUR | 3.8 to 20.5 mA | < 3.6 mA | > 21.95 mA |
| 4...20 mA US | 3.9 to 20.8 mA | < 3.6 mA | > 21.95 mA |
| Fixed current | Constant current, defined in the Fixed current parameter (→ ⓘ 152). | | |



-  In the case of an error, the output current assumes the value defined in the **Failure mode** parameter (→ ⓘ 152).
- If the measured value is out of the measuring range, diagnostic message **Current output** is issued.


-  In a HART multidrop loop only one device can use the analog current to transmit a signal. For all other devices one must set:
 - **Current span = Fixed current**
 - **Fixed current (→ ⓘ 152) = 4 mA**




Fixed current


| | |
|------------------------|---|
| Navigation |   Setup → Advanced setup → Curr.output 1 to 2 → Fixed current |
| Prerequisite | Current span (→  151) = Fixed current |
| Description | Define constant value of the current. |
| User entry | 4 to 22.5 mA |
| Factory setting | 4 mA |

Damping output





| | |
|-------------------------------|---|
| Navigation |   Setup → Advanced setup → Curr.output 1 to 2 → Damping out. |
| Description | Define time constant τ for the damping of the output current. |
| User entry | 0.0 to 999.9 s |
| Factory setting | 0.0 s |
| Additional information | Fluctuations of the measured value affect the output current with an exponential delay, the time constant τ of which is defined in this parameter. With a small time constant the output reacts immediately to changes of the measured value. With a big time constant the reaction of the output is more delayed. For $\tau = 0$ (factory setting) there is no damping. |

Failure mode


| | |
|------------------------|--|
| Navigation |   Setup → Advanced setup → Curr.output 1 to 2 → Failure mode |
| Prerequisite | Current span (→  151) ≠ Fixed current |
| Description | Select behavior of the output current in case of an error. |
| Selection | <ul style="list-style-type: none"> ■ Min. ■ Max. ■ Last valid value ■ Actual value ■ Defined value |
| Factory setting | Max. |

Additional information

Meaning of the options



- **Min.**
The current output adopts the value of the lower alarm level according to the **Current span** parameter (→  151).
- **Max.**
The current output adopts the value of the upper alarm level according to the **Current span** parameter (→  151).
- **Last valid value**
The current remains constant at the last value it had before the error occurred.
- **Actual value**
The output current follows the actual measured value; the error is ignored.
- **Defined value**
The output current assumes the value defined in the **Failure current** parameter (→  153).

 The error behavior of other output channels is not influenced by these settings but is defined in separate parameters.


Failure current



Navigation

  Setup → Advanced setup → Curr.output 1 to 2 → Failure current

Prerequisite

Failure mode (→  152) = **Defined value**

Description

Enter current output value in alarm condition.

User entry



3.59 to 22.5 mA

Factory setting

22.5 mA

Output current 1 to 2


Navigation


  Setup → Advanced setup → Curr.output 1 to 2 → Output curr. 1 to 2








Description


Displays calculated output current.



"Switch output" submenu

Navigation  Setup → Advanced setup → Switch output

Switch output function 

| | |
|-------------------------------|--|
| Navigation |  Setup → Advanced setup → Switch output → Switch out funct |
| Description | Select function for switch output. |
| Selection | <ul style="list-style-type: none"> ▪ Off ▪ On ▪ Diagnostic behavior ▪ Limit ▪ Digital Output |
| Factory setting | Off |
| Additional information | <p>Meaning of the options</p> <ul style="list-style-type: none"> ▪ Off The output is always open (non-conductive). ▪ On The output is always closed (conductive). ▪ Diagnostic behavior The output is normally closed and is only opened if a diagnostic event is present. The Assign diagnostic behavior parameter (→  155) determines for which type of event the output is opened. ▪ Limit The output is normally closed and is only opened if a measured variable exceeds or falls below a defined limit. The limit values are defined by the following parameters: <ul style="list-style-type: none"> - Assign limit (→  155) - Switch-on value (→  156) - Switch-off value (→  157) ▪ Digital Output The switching state of the output tracks the output value of a DI function block. The function block is selected in the Assign status parameter (→  154). <p> The Off and On options can be used to simulate the switch output.</p> |


Assign status 


| | |
|---------------------|---|
| Navigation |  Setup → Advanced setup → Switch output → Assign status |
| Prerequisite | Switch output function (→  154) = Digital Output |
| Description | Select device status for switch output. |
| Selection | <ul style="list-style-type: none"> ▪ Off ▪ Digital output AD 1 ▪ Digital output AD 2 |

Factory setting Off

Additional information The **Digital output AD 1** and **Digital output AD 2** options refer to the Advanced Diagnostic Blocks. A switch signal generated in these blocks can be transmitted via the switch output.

Assign limit

Navigation   Setup → Advanced setup → Switch output → Assign limit

Prerequisite **Switch output function** (→  154) = **Limit**

Description Select process variable for limit monitoring.


Selection

- Off
- Level linearized
- Distance
- Interface linearized *
- Interface distance *
- Thickness upper layer *
- Terminal voltage
- Electronic temperature
- Measured capacitance *
- Relative echo amplitude
- Relative interface amplitude *
- Absolute echo amplitude
- Absolute interface amplitude *

Factory setting Off

Assign diagnostic behavior

Navigation   Setup → Advanced setup → Switch output → Assign diag. beh

Prerequisite **Switch output function** (→  154) = **Diagnostic behavior**

Description Select diagnostic behavior for switch output.

Selection

- Alarm
- Alarm or warning
- Warning

Factory setting Alarm

* Visibility depends on order options or device settings

Switch-on value



Navigation

Setup → Advanced setup → Switch output → Switch-on value

Prerequisite

Switch output function (→ 154) = Limit

Description

Enter measured value for the switch-on point.

User entry

Signed floating-point number

Factory setting


0

Additional information

The switching behavior depends on the relative position of the **Switch-on value** and **Switch-off value** parameters:

Switch-on value > Switch-off value

- The output is closed if the measured value is larger than **Switch-on value**.
- The output is opened if the measured value is smaller than **Switch-off value**.

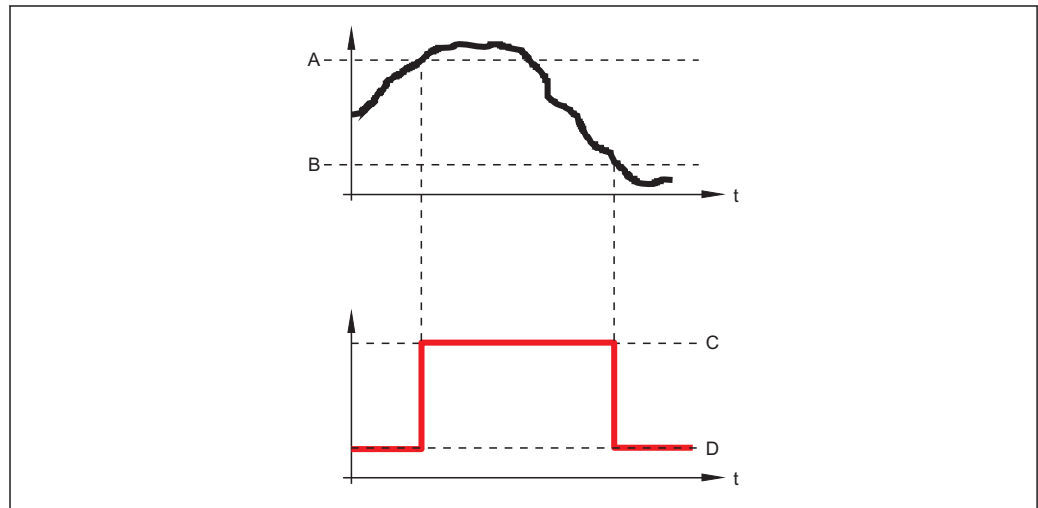


A0015585

- A *Switch-on value*
- B *Switch-off value*
- C *Output closed (conductive)*
- D *Output opened (non-conductive)*

Switch-on value < Switch-off value

- The output is closed if the measured value is smaller than **Switch-on value**.
- The output is opened if the measured value is larger than **Switch-off value**.

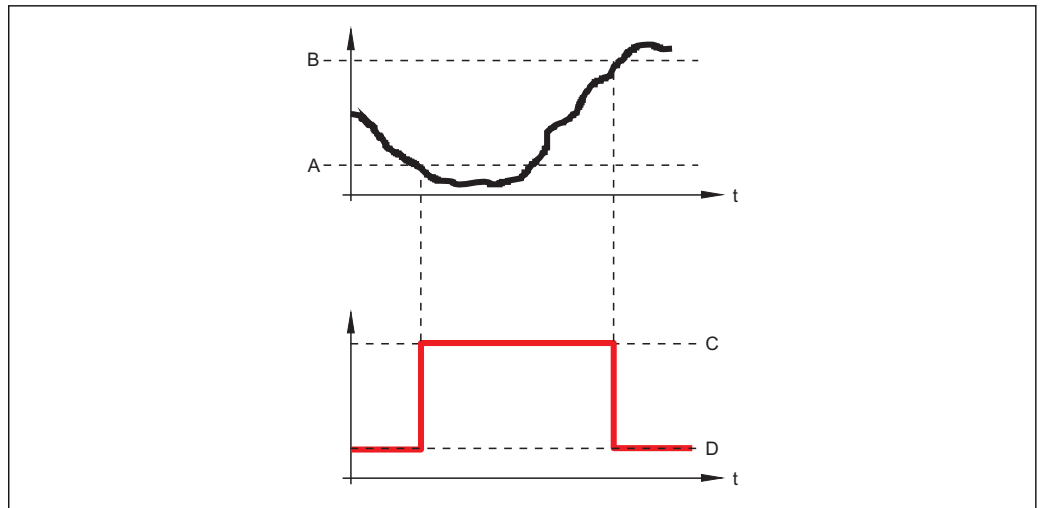

A0015586

- A Switch-on value
- B Switch-off value
- C Output closed (conductive)
- D Output opened (non-conductive)

Switch-on delay




| | |
|------------------------|--|
| Navigation | ☰☰ Setup → Advanced setup → Switch output → Switch-on delay |
| Prerequisite | <ul style="list-style-type: none"> ▪ Switch output function (→ ☰ 154) = Limit ▪ Assign limit (→ ☰ 155) ≠ Off |
| Description | Define switch-on delay. |
| User entry | 0.0 to 100.0 s |
| Factory setting | 0.0 s |





Switch-off value




| | |
|-------------------------------|--|
| Navigation | ☰☰ Setup → Advanced setup → Switch output → Switch-off value |
| Prerequisite | Switch output function (→ ☰ 154) = Limit |
| Description | Enter measured value for the switch-off point. |
| User entry | Signed floating-point number |
| Factory setting | 0 |
| Additional information | The switching behavior depends on the relative position of the Switch-on value and Switch-off value parameters; description: see the Switch-on value parameter (→ ☰ 156). |



Switch-off delay





| | |
|------------------------|--|
| Navigation |   Setup → Advanced setup → Switch output → Switch-off delay |
| Prerequisite | <ul style="list-style-type: none"> ▪ Switch output function (→  154) = Limit ▪ Assign limit (→  155) ≠ Off |
| Description | Define switch-off delay. |
| User entry | 0.0 to 100.0 s |
| Factory setting | 0.0 s |

Failure mode






| | |
|------------------------|---|
| Navigation |   Setup → Advanced setup → Switch output → Failure mode |
| Description | Define output behavior in alarm condition. |
| Selection | <ul style="list-style-type: none"> ▪ Actual status ▪ Open ▪ Closed |
| Factory setting | Open |

Switch status

| | |
|--------------------|--|
| Navigation |   Setup → Advanced setup → Switch output → Switch status |
| Description | Displays the current state of the switch output. |

Invert output signal




| | |
|------------------------|---|
| Navigation |   Setup → Advanced setup → Switch output → Invert outp.sig. |
| Description | Specify whether the output signal is to be inverted. |
| Selection | <ul style="list-style-type: none"> ▪ No ▪ Yes |
| Factory setting | No |

Additional information**Meaning of the options**


- **No**
The behavior of the switch output is as described above.
- **Yes**
The states **Open** and **Closed** are inverted as compared to the description above.

"Display" submenu

 The **Display** submenu is only visible if a display module is connected to the device.

Navigation  Setup → Advanced setup → Display

Language**Navigation**

 Setup → Advanced setup → Display → Language

Description

Set display language.

Selection

- English
- Deutsch *
- Français *
- Español *
- Italiano *
- Nederlands *
- Portuguesa *
- Polski *
- русский язык (Russian) *
- Svenska *
- Türkçe *
- 中文 (Chinese) *
- 日本語 (Japanese) *
- 한국어 (Korean) *
- Bahasa Indonesia *
- tiếng Việt (Vietnamese) *
- čeština (Czech) *

Factory setting

The language selected in feature 500 of the product structure.
If no language has been selected: **English**

Format display**Navigation**

 Setup → Advanced setup → Display → Format display

Description

Select how measured values are shown on the display.

Selection


- 1 value, max. size
- 1 bargraph + 1 value
- 2 values
- 1 value large + 2 values
- 4 values

Factory setting

1 value, max. size


* Visibility depends on order options or device settings

Additional information

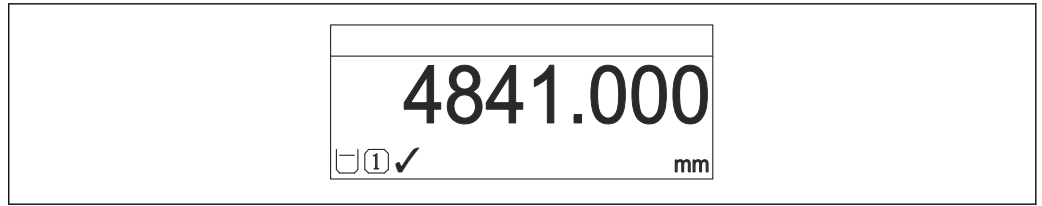


A0019963

33 "Format display" = "1 value, max. size"

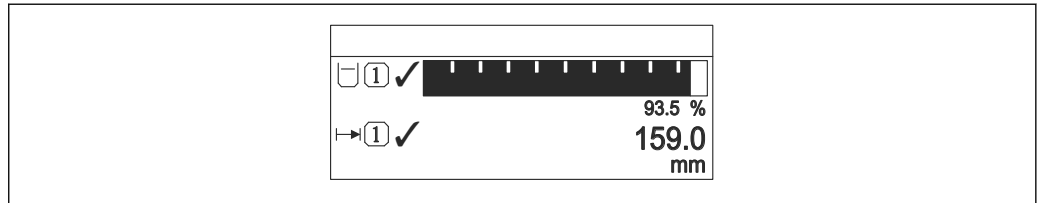


A0019964

34 "Format display" = "1 bargraph + 1 value"

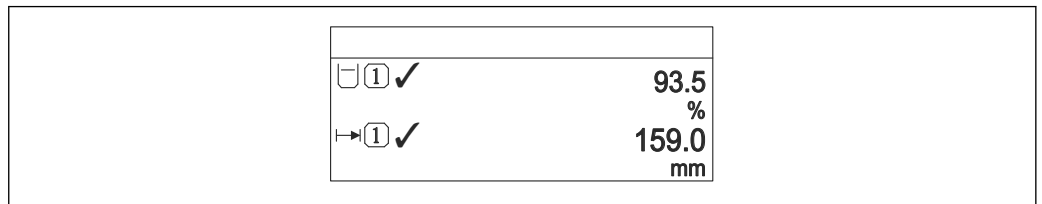


A0019965

35 "Format display" = "2 values"

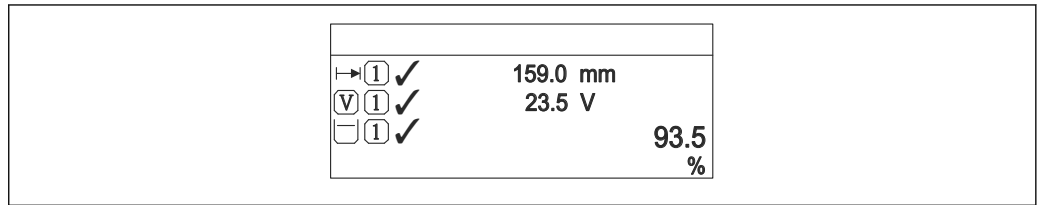

A0019966

36 "Format display" = "1 value large + 2 values"

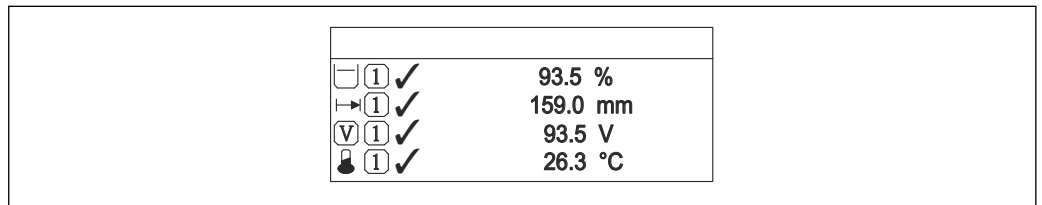

A0019968

37 "Format display" = "4 values"

- i
■
The Value 1 to 4 display → 162 parameters specify which measured values are shown on the display and in which order.
- If more measured values are specified than the current display mode permits, the values alternate on the device display. The display time until the next change is configured in the **Display interval** parameter (→ 163).

Value 1 to 4 display


Navigation Setup → Advanced setup → Display → Value 1 display

Description Select the measured value that is shown on the local display.

- Selection**
- None ¹⁰⁾
 - Level linearized
 - Distance
 - Interface linearized
 - Interface distance
 - Thickness upper layer
 - Current output 1 ¹¹⁾
 - Measured current
 - Current output 2
 - Terminal voltage
 - Electronic temperature
 - Measured capacitance
 - Analog output adv. diagnostics 1
 - Analog output adv. diagnostics 2

- Factory setting**
- For interface measurements and one current output**
- Value 1 display: Interface linearized
 - Value 2 display: Level linearized
 - Value 3 display: Thickness upper layer
 - Value 4 display: Current output 1
- For interface measurements and two current outputs**
- Value 1 display: Interface linearized
 - Value 2 display: Level linearized
 - Value 3 display: Current output 1
 - Value 4 display: Current output 2

Decimal places 1 to 4


Navigation Setup → Advanced setup → Display → Decimal places 1

Description Select the number of decimal places for the display value.

- Selection**
- x
 - x.x
 - x.xx
 - x.xxx
 - x.xxxx

Factory setting x.xx

Additional information The setting does not affect the measuring or computational accuracy of the device.

10) can not be selected for the 'Value 1 display' parameter.

11) Visibility depends on order options or device settings

Display interval

| | |
|-------------------------------|---|
| Navigation | ☰☰ Setup → Advanced setup → Display → Display interval |
| Description | Set time measured values are shown on display if display alternates between values. |
| User entry | 1 to 10 s |
| Factory setting | 5 s |
| Additional information | This parameter is only relevant if the number of selected measuring values exceeds the number of values the selected display format can display simultaneously. |

Display damping




| | |
|------------------------|---|
| Navigation | ☰☰ Setup → Advanced setup → Display → Display damping |
| Description | Define display reaction time to fluctuations in the measured value. |
| User entry | 0.0 to 999.9 s |
| Factory setting | 0.0 s |

Header



| | |
|------------------------|---|
| Navigation | ☰☰ Setup → Advanced setup → Display → Header |
| Description | Select header contents on local display. |
| Selection | <ul style="list-style-type: none"> ■ Device tag ■ Free text |
| Factory setting | Device tag |

Additional information

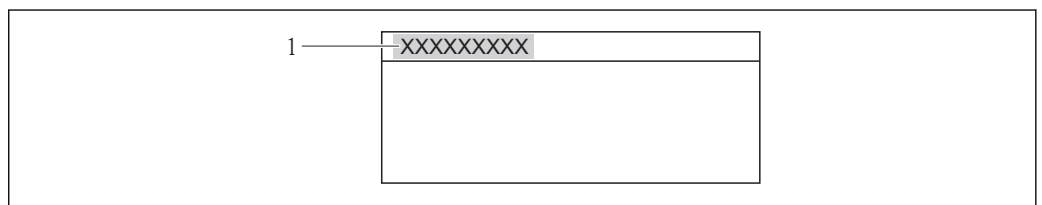



A0013375


1 Position of the header text on the display

Meaning of the options

- **Device tag**
Is defined in the **Device tag** parameter (→ ☰ 111).
- **Free text**
Is defined in the **Header text** parameter (→ ☰ 164).

Header text 

Navigation   Setup → Advanced setup → Display → Header text



Prerequisite **Header (→  163) = Free text**

Description Enter display header text.

Factory setting -----

Additional information The number of characters which can be displayed depends on the characters used.

Separator 

Navigation   Setup → Advanced setup → Display → Separator



Description Select decimal separator for displaying numerical values.

Selection

- .
- ,

Factory setting .

Number format 

Navigation   Setup → Advanced setup → Display → Number format

Description Choose number format for the display.



Selection

- Decimal
- ft-in-1/16"


Factory setting Decimal

Additional information The **ft-in-1/16"** option is only valid for distance units.




Decimal places menu 

Navigation   Setup → Advanced setup → Display → Dec. places menu








Description Select number of decimal places for the representation of numbers within the operating menu.

| | |
|-------------------------------|---|
| Selection | <ul style="list-style-type: none"> ■ X ■ X.X ■ X.XX ■ X.XXX ■ X.XXXX |
| Factory setting | x.xxxx |
| Additional information | <ul style="list-style-type: none"> ■ Is only valid for numbers in the operating menu (e.g. Empty calibration, Full calibration), but not for the measured value display. The number of decimal places for the measured value display is defined in the Decimal places 1 to 4 →  162 parameters. ■ The setting does not affect the accuracy of the measurement or the calculations. |


Backlight

| | |
|-------------------------------|--|
| Navigation |   Setup → Advanced setup → Display → Backlight |
| Prerequisite | The device has the SD03 local display (with optical keys). |
| Description | Switch the local display backlight on and off. |
| Selection | <ul style="list-style-type: none"> ■ Disable ■ Enable |
| Factory setting | Disable |
| Additional information | <p>Meaning of the options</p> <ul style="list-style-type: none"> ■ Disable Switches the backlight off. ■ Enable Switches the backlight on. <p> Regardless of the setting in this parameter the backlight may be automatically switched off by the device if the supply voltage is too low.</p> |



Contrast display



| | |
|-------------------------------|--|
| Navigation |   Setup → Advanced setup → Display → Contrast display |
| Description | Adjust local display contrast setting to ambient conditions (e.g. lighting or reading angle). |
| User entry | 20 to 80 % |
| Factory setting | Dependent on the display. |
| Additional information | <p> Setting the contrast via push-buttons:</p> <ul style="list-style-type: none"> ■ Darker: press the  and  buttons simultaneously. ■ Brighter: press the  and  buttons simultaneously. |

"Configuration backup display" submenu



 This submenu is only visible if a display module is connected to the device.

The configuration of the device can be saved to the display module at a certain point of time (backup). The saved configuration can be restored to the device if required, e.g. in order to bring the device back into a defined state. The configuration can also be transferred to a different device of the same type using the display module.



 Configurations can only be exchanged between devices which are in the same operating mode (see the **Operating mode** parameter (→  111)).

Navigation   Setup → Advanced setup → Conf.backup disp

Operating time



| | |
|-------------------------------|--|
| Navigation |   Setup → Advanced setup → Conf.backup disp → Operating time |
| Description | Indicates how long the device has been in operation. |
| User interface | Days (d), hours (h), minutes (m), seconds (s) |
| Additional information | <i>Maximum time</i> 9 999 d (≈ 27 years) |

Last backup

| | |
|-----------------------|---|
| Navigation |   Setup → Advanced setup → Conf.backup disp → Last backup |
| Description | Indicates when the last data backup was saved to the display module. |
| User interface | Days (d), hours (h), minutes (m), seconds (s) |




Configuration management



| | |
|------------------------|--|
| Navigation |   Setup → Advanced setup → Conf.backup disp → Config. managem. |
| Description | Select action for managing the device data in the display module. |
| Selection | <ul style="list-style-type: none"> ▪ Cancel ▪ Execute backup ▪ Restore ▪ Duplicate ▪ Compare ▪ Clear backup data |
| Factory setting | Cancel |



Additional information

Meaning of the options

- **Cancel**
No action is executed and the user exits the parameter.
 - **Execute backup**
A backup copy of the current device configuration in the HistoROM (built-in in the device) is saved to the display module of the device.
 - **Restore**
The last backup copy of the device configuration is copied from the display module to the HistoROM of the device.
 - **Duplicate**
The transmitter configuration is duplicated to another device using the transmitter display module. The following parameters, which characterize the individual measuring point are **not** included in the transmitted configuration:
 - HART date code
 - HART short tag
 - HART message
 - HART descriptor
 - HART address
 - Device tag
 - Medium type
 - **Compare**
The device configuration saved in the display module is compared to the current device configuration of the HistoROM. The result of this comparison is displayed in the **Comparison result** parameter (→  167).
 - **Clear backup data**
The backup copy of the device configuration is deleted from the display module of the device.
-  While this action is in progress, the configuration cannot be edited via the local display and a message on the processing status appears on the display.
-  If an existing backup is restored to a different device using the **Restore** option, it may occur that some device functionalities are no longer available. In some cases even a device reset will not restore the original status.
- In order to transmit a configuration to a different device, the **Duplicate** option should always be used.

Backup state

Navigation



  Setup → Advanced setup → Conf.backup disp → Backup state

Description

Displays which backup action is currently in progress.

Comparison result

Navigation

  Setup → Advanced setup → Conf.backup disp → Compar. result

Description

Displays the comparison result between the device and the display.

Additional information**Meaning of the display options****■ Settings identical**

The current device configuration of the HistoROM is identical to the backup copy in the display module.

■ Settings not identical

The current device configuration of the HistoROM is not identical to the backup copy in the display module.

■ No backup available

There is no backup copy of the device configuration of the HistoROM in the display module.

■ Backup settings corrupt

The current configuration of the HistoROM is corrupt or not compatible with the backup copy in the display module.


■ Check not done

The device configuration of the HistoROM has not yet been compared to the backup copy in the display module.


■ Dataset incompatible

The data sets are incompatible and can not be compared.





To start the comparison, set **Configuration management** (→  166) = **Compare**.













If the transmitter configuration has been duplicated from a different device by **Configuration management** (→  166) = **Duplicate**, the new device configuration in the HistoROM is only partially identical to the configuration stored in the display module: Sensor specific properties (e.g. the mapping curve) are not duplicated. Thus, the result of the comparison will be **Settings not identical**.



"Administration" submenu

Navigation  Setup → Advanced setup → Administration

Define access code 

| | |
|-------------------------------|--|
| Navigation |  Setup → Advanced setup → Administration → Def. access code |
| Description | Define release code for write access to parameters. |
| User entry | 0 to 9999 |
| Factory setting | 0 |
| Additional information | <p> If the factory setting is not changed or 0 is defined as the access code, the parameters are not write-protected and the configuration data of the device can then always be modified. The user is logged on in the <i>Maintenance</i> role.</p> <p> The write protection affects all parameters marked with the  symbol in this document. On the local display, the  symbol in front of a parameter indicates that the parameter is write-protected.</p> <p> Once the access code has been defined, write-protected parameters can only be modified if the access code is entered in the Enter access code parameter (→  123).</p> <p> Please contact your Endress+Hauser Sales Center if you lose your access code.</p> <p> For display operation: The new access code is only valid after it has been confirmed in the Confirm access code parameter (→  171).</p> |

Device reset 

| | |
|------------------------|--|
| Navigation |   Setup → Advanced setup → Administration → Device reset |
| Description | Select to which state the device is to be reset. |
| Selection | <ul style="list-style-type: none"> ■ Cancel ■ To factory defaults ■ To delivery settings ■ Of customer settings ■ To transducer defaults ■ Restart device |
| Factory setting | Cancel |

Additional information**Meaning of the options****■ Cancel**

No action

■ To factory defaults

All parameters are reset to the order-code specific factory setting.

■ To delivery settings

All parameters are reset to the delivery setting. The delivery setting may differ from the factory default if customer specific settings have been ordered.

This option is only visible if customer specific settings have been ordered.

■ Of customer settings

All customer parameters are reset to their factory setting. Service parameters, however, remain unchanged.


■ To transducer defaults


Every measurement-related parameter is reset to its factory setting. Service parameters and communication-related parameters, however, remain unchanged.


■ Restart device

The restart resets every parameter which is stored in the volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.

"Define access code" wizard


 The **Define access code** wizard is only available when operating via the local display. When operating via an operating tool, the **Define access code** parameter is located directly in the **Administration** submenu. The **Confirm access code** parameter is not available for operation via operating tool.


Navigation  Setup → Advanced setup → Administration → Def. access code

Define access code 

Navigation  Setup → Advanced setup → Administration → Def. access code → Def. access code

Description →  169

Confirm access code 

Navigation  Setup → Advanced setup → Administration → Def. access code → Confirm code

Description Confirm the entered access code.





User entry 0 to 9999

Factory setting 0



16.4 "Diagnostics" menu

Navigation  Diagnostics




Actual diagnostics

| | |
|-------------------------------|---|
| Navigation |  Diagnostics → Actual diagnos. |
| Description | Displays current diagnostic message. |
| Additional information | <p>The display consists of:</p> <ul style="list-style-type: none"> ▪ Symbol for event behavior ▪ Code for diagnostic behavior ▪ Operating time of occurrence ▪ Event text <p> If several messages are active at the same time, the messages with the highest priority is displayed.</p> <p> Information on what is causing the message, and remedy measures, can be viewed via the  symbol on the display.</p> |



Timestamp

| | |
|-----------------------|---|
| Navigation |  Diagnostics → Timestamp |
| Description | Displays timestamp for the Actual diagnostics parameter (→  172). |
| User interface | Days (d), hours (h), minutes (m), seconds (s) |



Previous diagnostics

| | |
|-------------------------------|---|
| Navigation |  Diagnostics → Prev.diagnostics |
| Description | Displays the last diagnostic message which has been active before the current message. |
| Additional information | <p>The display consists of:</p> <ul style="list-style-type: none"> ▪ Symbol for event behavior ▪ Code for diagnostic behavior ▪ Operating time of occurrence ▪ Event text <p> The condition displayed may still apply. Information on what is causing the message, and remedy measures, can be viewed via the  symbol on the display.</p> |



Timestamp

| | |
|-----------------------|---|
| Navigation |  Diagnostics → Timestamp |
| Description | Displays timestamp for the Previous diagnostics parameter (→  172). |
| User interface | Days (d), hours (h), minutes (m), seconds (s) |

Operating time from restart

| | |
|-----------------------|--|
| Navigation |   Diagnostics → Time fr. restart |
| Description | Displays the time the device has been in operation since the last device restart. |
| User interface | Days (d), hours (h), minutes (m), seconds (s) |

Operating time

| | |
|-------------------------------|--|
| Navigation |   Diagnostics → Operating time |
| Description | Indicates how long the device has been in operation. |
| User interface | Days (d), hours (h), minutes (m), seconds (s) |
| Additional information | <i>Maximum time</i> 9 999 d (≈ 27 years) |

16.4.1 "Diagnostic list" submenu

Navigation  Diagnostics → Diagnostic list

Diagnostics 1 to 5


Navigation  Diagnostics → Diagnostic list → Diagnostics 1 to 5


Description Display the current diagnostics messages with the highest to fifth-highest priority.

Additional information The display consists of:

- Symbol for event behavior
- Code for diagnostic behavior
- Operating time of occurrence
- Event text


Timestamp 1 to 5

Navigation  Diagnostics → Diagnostic list → Timestamp

Description Displays timestamp for the **Diagnostics 1 to 5** parameter (→  174).



User interface Days (d), hours (h), minutes (m), seconds (s)

16.4.2 "Event logbook" submenu


 The **Event logbook** submenu is only available when operating via the local display. When operating via FieldCare, the event list can be displayed in the FieldCare function "Event List / HistoROM".

Navigation  Diagnostics → Event logbook



Filter options



| | |
|-------------------------------|---|
| Navigation |  Diagnostics → Event logbook → Filter options |
| Description | Select category (status signal) whose event messages are displayed in the events list. |
| Selection | <ul style="list-style-type: none"> ▪ All ▪ Failure (F) ▪ Function check (C) ▪ Out of specification (S) ▪ Maintenance required (M) ▪ Information (I) |
| Factory setting | All |
| Additional information |  <ul style="list-style-type: none"> ▪ This parameter is only used for operation via the local display. ▪ The status signals are categorized according to NAMUR NE 107. |

"Event list" submenu

The **Event list** submenu displays the history of past events of the category selected in the **Filter options** parameter (→  175). A maximum of 100 events are displayed in chronological order.

The following symbols indicate whether an event has occurred or has ended:

- : Event has occurred
- : Event has ended

 Information on what is causing the message, and remedy instructions, can be viewed via the -button.

Display format

- For event messages in category I: information event, event text, "recording event" symbol and time the event occurred
- For event messages in category F, M, C, S (status signal): diagnostics event, event text, "recording event" symbol and time the event occurred

Navigation  Diagnostics → Event logbook → Event list

16.4.3 "Device information" submenu

Navigation  Diagnostics → Device info

Device tag

Navigation  Diagnostics → Device info → Device tag


Description Enter the name for the measuring point.

Factory setting FMP5x

Serial number

Navigation  Diagnostics → Device info → Serial number

Description Displays serial number of the device.

Additional information  **Uses of the serial number**

- To identify the device quickly, e.g. when contacting Endress+Hauser.
- To obtain specific information on the device using the Device Viewer:
www.endress.com/deviceviewer


 The serial number is also indicated on the nameplate.

Firmware version

Navigation  Diagnostics → Device info → Firmware version

Description Indicates the installed Firmware version.




User interface xx.yy.zz




Additional information  For firmware versions differing only in the last two digits ("zz") there is no difference concerning functionality or operation.



Device name



Navigation  Diagnostics → Device info → Device name

Description Displays device name.

| | | |
|-------------------------------|--|---|
| Order code | |  |
| Navigation |   Diagnostics → Device info → Order code | |
| Description | Displays order code of the device. | |
| Additional information | The order code is generated from the extended order code, which defines all device features of the product structure. In contrast, the device features can not be read directly from the order code. | |

| | | |
|-----------------------------------|---|---|
| Extended order code 1 to 3 | |  |
| Navigation |   Diagnostics → Device info → Ext. order cd. 1 to 3 | |
| Description | Displays the three parts of the extended order code. | |
| Additional information | The extended order code indicates the version of all the features of the product structure and thus uniquely identifies the device. | |

| | | |
|-------------------------------|---|--|
| Device revision | | |
| Navigation |   Diagnostics → Device info → Device revision | |
| Description | Displays the device revision registered for this device at the HART Communication Foundation. | |
| Additional information | The device revision is used to allocate the correct Device Description file (DD) to the device. | |

| | | |
|-------------------------------|---|--|
| Device ID | | |
| Navigation |   Diagnostics → Device info → Device ID | |
| Description | Displays Device ID. | |
| Additional information | In addition to the Device type and Manufacturer ID, the Device ID is part of the unique device identification (Unique ID) which characterizes each HART device unambiguously. | |

Device type

Navigation Diagnostics → Device info → Device type**Description**

Displays the device type with which the device is registered with the the HART Communication Foundation.

Additional information

The device type is needed to allocate the correct Device Description file (DD) to the device.

Manufacturer ID

Navigation Diagnostics → Device info → Manufacturer ID**Description**

Displays the manufactured ID with which the device is registered with the HART Communication Foundation.

16.4.4 "Measured values" submenu


Navigation   Diagnostics → Measured val.

Distance


Navigation   Diagnostics → Measured val. → Distance

Description Displays the measured distance D_L between the reference point (lower edge of the flange or threaded connection) and the level.

Additional information

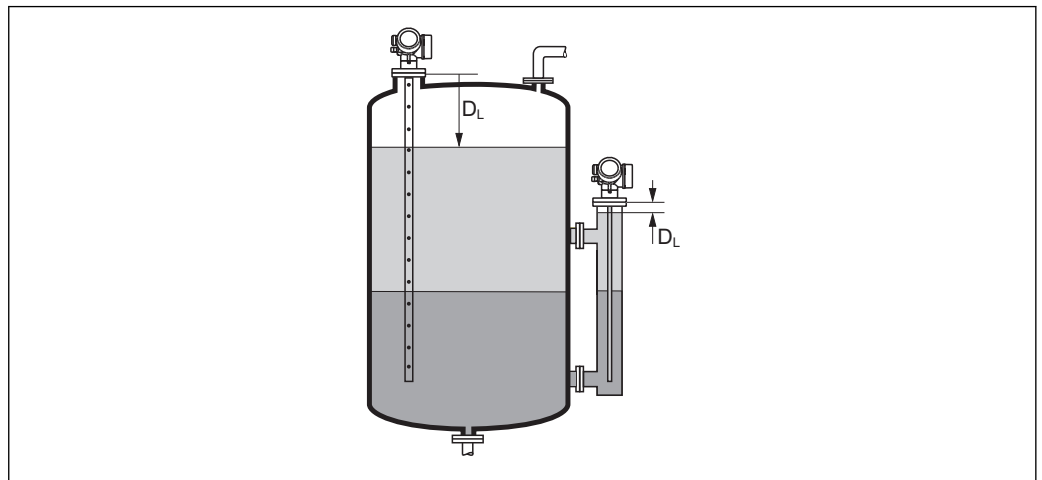

A0013199


 38 Distance for interface measurements


 The unit is defined in the **Distance unit** parameter (→  111).

Level linearized

Navigation   Diagnostics → Measured val. → Level linearized


Description Displays linearized level.

Additional information 

- The unit is defined by the **Unit after linearization** parameter →  135.
- For interface measurements, this parameter always refers to the total level.


Interface distance

Navigation   Diagnostics → Measured val. → Interface dist.

Prerequisite **Operating mode** (→  111) = **Interface** or **Interface with capacitance**

Description

Displays the measured distance D_1 between the reference point (lower edge of flange or threaded connection) and the interface.

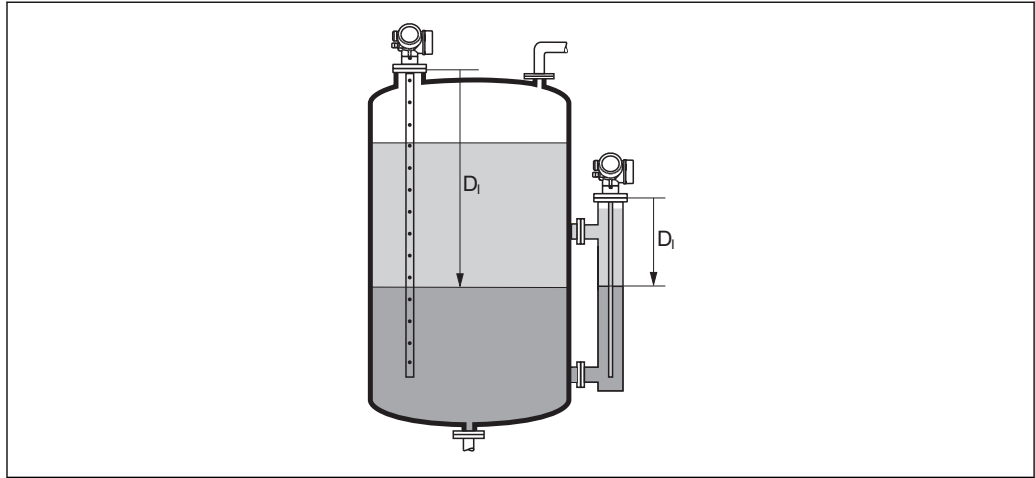

Additional information

A0013202



The unit is defined in the **Distance unit** parameter (→  111).

Interface linearized**Navigation**

  Diagnostics → Measured val. → Interf. lineariz

Prerequisite

Operating mode (→  111) = **Interface** or **Interface with capacitance**



Description

Displays the linearized interface height.

Additional information

The unit is defined in the **Unit after linearization** parameter →  135.

Thickness upper layer**Navigation**


  Diagnostics → Measured val. → Thickn.upp.layer

Prerequisite

Operating mode (→  111) = **Interface** or **Interface with capacitance**



Description

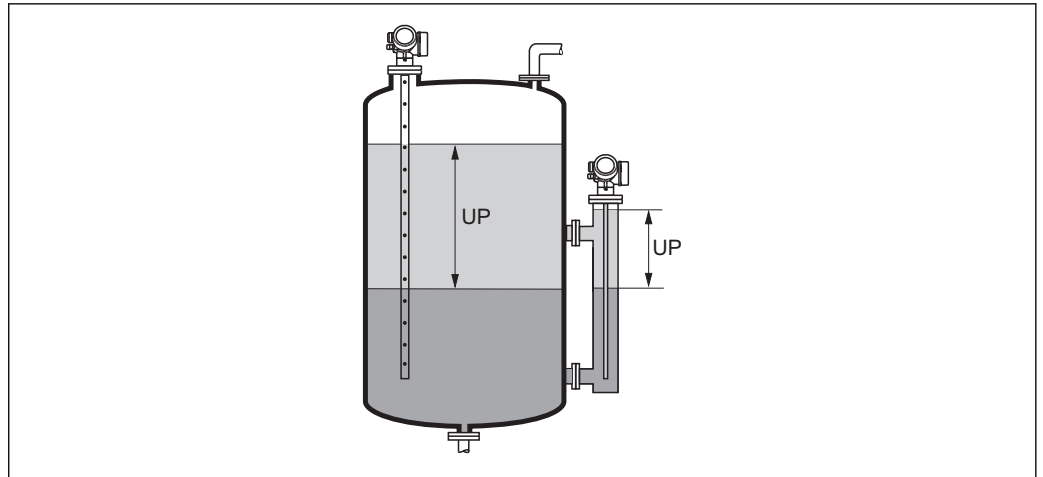Displays the upper interface thickness (UP).



Additional information

A0013313

UP Thickness upper layer

 The unit is defined by the **Unit after linearization** parameter →  135.



Output current 1 to 2**Navigation**

  Diagnostics → Measured val. → Output curr. 1 to 2

Description

Displays calculated output current.

Measured current 1**Navigation**

  Diagnostics → Measured val. → Measur. curr. 1



Prerequisite

Only available for current output 1

Description

Displays the measured value of the output current.

Terminal voltage 1**Navigation**

  Diagnostics → Measured val. → Terminal volt. 1



Description

Displays terminal voltage at the current output.

16.4.5 "Data logging" submenu

Navigation  Diagnostics → Data logging

Assign channel 1 to 4

| | |
|-------------------------------|---|
| Navigation |  Diagnostics → Data logging → Assign chan. 1 to 4 |
| Description | Allocate a process variable to the respective data logging channel. |
| Selection | <ul style="list-style-type: none"> ■ Off ■ Level linearized ■ Distance ■ Unfiltered distance ■ Interface linearized * ■ Interface distance * ■ Unfiltered interface distance ■ Thickness upper layer * ■ Current output 1 ■ Measured current ■ Current output 2 * ■ Terminal voltage ■ Electronic temperature ■ Measured capacitance * ■ Absolute echo amplitude ■ Relative echo amplitude ■ Absolute interface amplitude * ■ Relative interface amplitude * ■ Absolute EOP amplitude ■ EOP shift ■ Noise of signal ■ Calculated DC value * ■ Analog output adv. diagnostics 1 ■ Analog output adv. diagnostics 2 |
| Factory setting | Off |
| Additional information | <p>A total of 1000 measured values can be logged. This means:</p> <ul style="list-style-type: none"> ■ 1000 data points if 1 logging channel is used ■ 500 data points if 2 logging channels are used ■ 333 data points if 3 logging channels are used ■ 250 data points if 4 logging channels are used <p>If the maximum number of data points is reached, the oldest data points in the data log are cyclically overwritten in such a way that the last 1000, 500, 333 or 250 measured values are always in the log (ring memory principle).</p> <p> The logged data are deleted if a new option is selected in this parameter.</p> |

* Visibility depends on order options or device settings

Logging interval


| | |
|-------------------------------|---|
| Navigation | Diagnostics → Data logging → Logging interval |
| Description | Define logging interval t_{\log} . |
| User entry | 1.0 to 3 600.0 s |
| Factory setting | 30.0 s |
| Additional information | <p>This parameter defines the interval between the individual data points in the data log, and thus the maximum loggable process time T_{\log}:</p> <ul style="list-style-type: none"> ■ If 1 logging channel is used: $T_{\log} = 1000 \cdot t_{\log}$ ■ If 2 logging channels are used: $T_{\log} = 500 \cdot t_{\log}$ ■ If 3 logging channels are used: $T_{\log} = 333 \cdot t_{\log}$ ■ If 4 logging channels are used: $T_{\log} = 250 \cdot t_{\log}$ <p>Once this time elapses, the oldest data points in the data log are cyclically overwritten such that a time of T_{\log} always remains in the memory (ring memory principle).</p> <p> The logged data are deleted if this parameter is changed.</p> |

*Example***When using 1 logging channel**

- $T_{\log} = 1000 \cdot 1 \text{ s} = 1000 \text{ s} \approx 16.5 \text{ min}$
- $T_{\log} = 1000 \cdot 10 \text{ s} = 1000 \text{ s} \approx 2.75 \text{ h}$
- $T_{\log} = 1000 \cdot 80 \text{ s} = 80000 \text{ s} \approx 22 \text{ h}$
- $T_{\log} = 1000 \cdot 3600 \text{ s} = 3600000 \text{ s} \approx 41 \text{ d}$


Clear logging data


| | |
|------------------------|--|
| Navigation | Diagnostics → Data logging → Clear logging |
| Description | Initiate a deletion of the complete logging memory. |
| Selection | <ul style="list-style-type: none"> ■ Cancel ■ Clear data |
| Factory setting | Cancel |

"Display channel 1 to 4" submenu

i The **Display channel 1 to 4** submenus are only available for operation via the local display. When operating via FieldCare, the logging diagram can be displayed in the FieldCare function "Event List / HistoROM" .

The **Display channel 1 to 4** submenus invoke a diagram of the logging history of the respective channel.

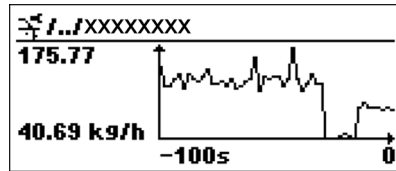

- x-axis: depending on the number of selected channels, 250 to 1000 measured values of a process variable are displayed.
- y-axis: covers the approximate measured value span and constantly adapts this to the measurement.









i To return to the operating menu, press **⏏** and **⏏** simultaneously.

Navigation **⏏** **⏏** Diagnostics → Data logging → Displ.channel 1 to 4

16.4.6 "Simulation" submenu









The **Simulation** submenu is used to simulate specific measuring values or other conditions. This helps to check the correct configuration of the device and connected control units.

Conditions which can be simulated

| Condition to be simulated | Associated parameters |
|--|---|
| Specific value of a process variable | <ul style="list-style-type: none"> ▪ Assign measurement variable (→  187) ▪ Process variable value (→  187) |
| Specific value of the output current | <ul style="list-style-type: none"> ▪ Current output simulation (→  188) ▪ Value current output (→  188) |
| Specific state of the switch output | <ul style="list-style-type: none"> ▪ Switch output simulation (→  188) ▪ Switch status (→  189) |
| Existence of an alarm | Device alarm simulation (→  189) |
| Existence of a specific diagnostic message | Diagnostic event simulation (→  189) |

Structure of the submenu



Navigation  Expert → Diagnostics → Simulation

| | |
|----------------------------------|---|
| ▶ Simulation | |
| Assign measurement variable | →  187 |
| Process variable value | →  187 |
| Current output 1 to 2 simulation | →  188 |
| Value current output 1 to 2 | →  188 |
| Switch output simulation | →  188 |
| Switch status | →  189 |
| Device alarm simulation | →  189 |
| Diagnostic event simulation | →  189 |



Description of parameters

Navigation  Expert → Diagnostics → Simulation

Assign measurement variable

| | |
|-------------------------------|--|
| Navigation |  Expert → Diagnostics → Simulation → Assign meas.var. |
| Description | Select process variable to be simulated. |
| Selection | <ul style="list-style-type: none"> ■ Off ■ Level ■ Interface * ■ Thickness upper layer * ■ Level linearized ■ Interface linearized ■ Thickness linearized |
| Factory setting | Off |
| Additional information | <ul style="list-style-type: none"> ■ The value of the variable to be simulated is defined in the Process variable value parameter (→  187). ■ If Assign measurement variable ≠ Off, a simulation is active. This is indicated by a diagnostic message of the <i>Function check (C)</i> category. |

Process variable value

| | |
|-------------------------------|---|
| Navigation |  Expert → Diagnostics → Simulation → Proc. var. value |
| Prerequisite | Assign measurement variable (→  187) ≠ Off |
| Description | Specify value of the process value being simulated. |
| User entry | Signed floating-point number |
| Factory setting | 0 |
| Additional information | Downstream measured value processing and the signal output use this simulation value. In this way, users can verify whether the measuring device has been configured correctly. |

* Visibility depends on order options or device settings

Current output 1 to 2 simulation


| | |
|-------------------------------|--|
| Navigation | Expert → Diagnostics → Simulation → Curr.out. 1 to 2 sim. |
| Description | Switch the simulation of the current output on or off. |
| Selection | <ul style="list-style-type: none"> ■ Off ■ On |
| Factory setting | Off |
| Additional information | An active simulation is indicated by a diagnostic message of the <i>Function check (C)</i> category. |

Value current output 1 to 2


| | |
|-------------------------------|---|
| Navigation | Expert → Diagnostics → Simulation → Value curr.out 1 to 2 |
| Prerequisite | Current output simulation (→ 188) = On |
| Description | Enter current value for the simulation |
| User entry | 3.59 to 22.5 mA |
| Factory setting | 3.59 mA |
| Additional information | The current output assumes the value specified in this parameter. In this way, users can verify the correct adjustment of the current output and the correct function of connected control units. |

Switch output simulation


| | |
|------------------------|---|
| Navigation | Expert → Diagnostics → Simulation → Switch sim. |
| Description | Switch the simulation of the switch output on or off. |
| Selection | <ul style="list-style-type: none"> ■ Off ■ On |
| Factory setting | Off |

Switch status


| | |
|-------------------------------|--|
| Navigation | Expert → Diagnostics → Simulation → Switch status |
| Prerequisite | Switch output simulation (→ 188) = On |
| Description | Define the switch state to be simulated. |
| Selection | <ul style="list-style-type: none"> ▪ Open ▪ Closed |
| Factory setting | Open |
| Additional information | The switch status assumes the value defined in this parameter. This helps to check correct operation of connected control units. |

Device alarm simulation


| | |
|-------------------------------|--|
| Navigation | Expert → Diagnostics → Simulation → Dev. alarm sim. |
| Description | Switch alarm simulation on or off. |
| Selection | <ul style="list-style-type: none"> ▪ Off ▪ On |
| Factory setting | Off |
| Additional information | <p>When selecting the On option, the device generates an alarm. This helps to check the correct output behavior of the device in the case of an alarm.</p> <p>An active simulation is indicated by the diagnostic message ⊗C484 Failure mode simulation.</p> |


Diagnostic event simulation


| | |
|-------------------------------|--|
| Navigation | Expert → Diagnostics → Simulation → Diag. event sim. |
| Prerequisite | Access status display (→ 123)/Access status tooling (→ 122) = Service |
| Description | Select diagnostic event to be simulated. |
| Factory setting | Off |
| Additional information | When operated via the local display, the selection list can be filtered according to the event categories (Diagnostic event category parameter). |


16.4.7 "Device check" submenu

Navigation  Diagnostics → Device check


Start device check

| | |
|-------------------------------|---|
| Navigation |  Diagnostics → Device check → Start dev. check |
| Description | Start a device check. |
| Selection | <ul style="list-style-type: none"> ■ No ■ Yes |
| Factory setting | No |
| Additional information | In the case of a lost echo a device check can not be performed. |



Result device check

| | |
|-------------------------------|---|
| Navigation |  Diagnostics → Device check → Result dev.check |
| Description | Displays the result of the device check. |
| Additional information | <p>Meaning of the display options</p> <ul style="list-style-type: none"> ■ Installation ok Measurement possible without restrictions. ■ Accuracy reduced A measurement is possible. However, the measuring accuracy may be reduced due to the signal amplitudes. ■ Measurement capability reduced A measurement is currently possible. However, there is the risk of an echo loss. Check the mounting position of the device and the dielectric constant of the medium. ■ Check not done No device check has been performed. |



Last check time

| | |
|--------------------|--|
| Navigation |  Diagnostics → Device check → Last check time |
| Description | Displays the operating time at which the last device check has been performed. |




Level signal

| | |
|-------------------------------|---|
| Navigation |   Diagnostics → Device check → Level signal |
| Prerequisite | Device check has been performed. |
| Description | Displays result of the device check for the level signal. |
| User interface | <ul style="list-style-type: none"> ■ Check not done ■ Check not OK ■ Check OK |
| Additional information | For Level signal = Check not OK : Check the mounting position of the device and the dielectric constant of the medium. |


Launch signal

| | |
|-------------------------------|--|
| Navigation |   Diagnostics → Device check → Launch signal |
| Prerequisite | Device check has been performed. |
| Description | Displays result of the display check for the launch signal. |
| User interface | <ul style="list-style-type: none"> ■ Check not done ■ Check not OK ■ Check OK |
| Additional information | For Launch signal = Check not OK : Check the mounting position of the device. In non-metallic vessels use a metal plate or a metal flange. |

Interface signal

| | |
|-----------------------|---|
| Navigation |   Diagnostics → Device check → Interface signal |
| Prerequisite | <ul style="list-style-type: none"> ■ Operating mode (→  111) = Interface or Interface with capacitance ■ Device check has been performed. |
| Description | Displays result of the device check for the interface signal. |
| User interface | <ul style="list-style-type: none"> ■ Check not done ■ Check not OK ■ Check OK |


16.4.8 "Heartbeat" submenu

 The **Heartbeat** submenu is only available via **FieldCare** or **DeviceCare**. It contains the wizards which are part of the **Heartbeat Verification** and **Heartbeat Monitoring** application packages.

Detailed description

SD01872F

Navigation

 Diagnostics → Heartbeat

Index

A

| | |
|---|-----|
| Access authorization to parameters | |
| Read access | 53 |
| Write access | 53 |
| Access code | 53 |
| Incorrect input | 53 |
| Access status display (Parameter) | 123 |
| Access status tooling (Parameter) | 122 |
| Accessories | |
| Communication specific | 95 |
| Device specific | 91 |
| Service specific | 96 |
| Activate table (Parameter) | 140 |
| Actual diagnostics (Parameter) | 172 |
| Administration (Submenu) | 169 |
| Advanced setup (Submenu) | 122 |
| Application | 12 |
| Residual risk | 12 |
| Assign channel 1 to 4 (Parameter) | 182 |
| Assign current output (Parameter) | 150 |
| Assign diagnostic behavior (Parameter) | 155 |
| Assign limit (Parameter) | 155 |
| Assign measurement variable (Parameter) | 187 |
| Assign status (Parameter) | 154 |
| Automatic DC calculation (Wizard) | 130 |

B

| | |
|-------------------------------|----------|
| Backlight (Parameter) | 165 |
| Backup state (Parameter) | 167 |
| Blocking distance (Parameter) | 126, 143 |
| Bypass | 26 |

C

| | |
|--|----------|
| Calculated DC value (Parameter) | 128 |
| CE mark | 13 |
| Cleaning | 88 |
| Clear logging data (Parameter) | 183 |
| Coax probe | |
| Design | 14 |
| Coax probes | |
| Bending strength | 23 |
| Code incorrect (Parameter) | 146 |
| Comparison result (Parameter) | 167 |
| Configuration backup display (Submenu) | 166 |
| Configuration management (Parameter) | 166 |
| Configuration of an interface measurement | 70 |
| Confirm access code (Parameter) | 171 |
| Confirm distance (Parameter) | 118, 121 |
| Confirm probe length (Parameter) | 148, 149 |
| Context menu | 65 |
| Contrast display (Parameter) | 165 |
| Current output 1 to 2 (Submenu) | 150 |
| Current output 1 to 2 simulation (Parameter) | 188 |
| Current span (Parameter) | 151 |
| Customer value (Parameter) | 140 |

D

| | |
|---|---------------|
| Damping output (Parameter) | 152 |
| Data logging (Submenu) | 182 |
| DC value (Parameter) | 116, 128, 130 |
| DC value lower medium (Parameter) | 125 |
| DD | 67 |
| Deactivate SIL/WHG (Wizard) | 146 |
| Decimal places 1 (Parameter) | 162 |
| Decimal places menu (Parameter) | 164 |
| Declaration of Conformity | 13 |
| Define access code | 54 |
| Define access code (Parameter) | 169, 171 |
| Define access code (Wizard) | 171 |
| Designated use | 12 |
| Device alarm simulation (Parameter) | 189 |
| Device check (Submenu) | 190 |
| Device Descriptions | 67 |
| Device ID (Parameter) | 177 |
| Device information (Submenu) | 176 |
| Device name (Parameter) | 176 |
| Device replacement | 89 |
| Device reset (Parameter) | 169 |
| Device revision (Parameter) | 177 |
| Device tag (Parameter) | 111, 176 |
| Device type (Parameter) | 178 |
| Diagnostic event | |
| In the operating tool | 82 |
| Diagnostic event simulation (Parameter) | 189 |
| Diagnostic events | 79 |
| Diagnostic list | 82 |
| Diagnostic list (Submenu) | 174 |
| Diagnostic message | 79 |
| Diagnostics | |
| Symbols | 79 |
| Diagnostics (Menu) | 172 |
| Diagnostics 1 to 5 (Parameter) | 174 |
| Diagnostics event | 80 |
| Diameter (Parameter) | 137 |
| DIP switch | |
| see Write protection switch | |
| Display (Submenu) | 160 |
| Display and operating module FHX50 | 49 |
| Display channel 1 to 4 (Submenu) | 184 |
| Display damping (Parameter) | 163 |
| Display interval (Parameter) | 163 |
| Display module | 59 |
| Display symbols for submenus | 60 |
| Display symbols for the locking state | 60 |
| Disposal | 90 |
| Distance (Parameter) | 115, 121, 179 |
| Distance unit (Parameter) | 111 |
| Document | |
| Function | 5 |
| Document function | 5 |

E

| | |
|--|-----|
| Electrical connection | |
| Commubox FXA291 | 50 |
| Operating tools | |
| Via service interface (CDI) | 50 |
| Electronics housing | |
| Design | 15 |
| Turning | |
| see Turning the transmitter housing | |
| Empty calibration (Parameter) | 113 |
| Enter access code (Parameter) | 123 |
| Envelope curve display | 66 |
| Event history | 85 |
| Event level | |
| Explanation | 79 |
| Symbols | 79 |
| Event list (Submenu) | 175 |
| Event logbook (Submenu) | 175 |
| Event text | 80 |
| Events list | 85 |
| Extended order code 1 to 3 (Parameter) | 177 |
| Exterior cleaning | 88 |

F

| | |
|------------------------------|----------|
| Failure current (Parameter) | 153 |
| Failure mode (Parameter) | 152, 158 |
| FHX50 | 49 |
| Filter options (Parameter) | 175 |
| Filtering the event logbook | 85 |
| Firmware version (Parameter) | 176 |
| Fixed current (Parameter) | 152 |
| Flange | 30 |
| Format display (Parameter) | 160 |
| Free text (Parameter) | 136 |
| Full calibration (Parameter) | 114 |
| FV (HART device variable) | 67 |

H

| | |
|---------------------------|-----|
| Hardware write protection | 56 |
| HART device variables | 67 |
| HART loop converter HMX50 | 41 |
| HART protocol | 49 |
| HART-Integration | 67 |
| Header (Parameter) | 163 |
| Header text (Parameter) | 164 |
| Heartbeat (Submenu) | 192 |
| Heat insulation | 29 |
| HMX50 | 41 |
| Housing | |
| Design | 15 |

I

| | |
|-------------------------------------|----------|
| Input mask | 63 |
| Interface (Parameter) | 117 |
| Interface (Submenu) | 124 |
| Interface distance (Parameter) | 118, 179 |
| Interface linearized (Parameter) | 137, 180 |
| Interface measurement configuration | 70 |
| Interface property (Parameter) | 124 |

| | |
|----------------------------------|-----|
| Interface signal (Parameter) | 191 |
| Intermediate height (Parameter) | 138 |
| Invert output signal (Parameter) | 158 |

K

| | |
|-------------|----|
| Keypad lock | |
| Disabling | 58 |
| Switch-on | 58 |

L

| | |
|--------------------------------|---------------|
| Language (Parameter) | 160 |
| Last backup (Parameter) | 166 |
| Last check time (Parameter) | 190 |
| Launch signal (Parameter) | 191 |
| Level (Parameter) | 115, 140 |
| Level correction (Parameter) | 127 |
| Level linearized (Parameter) | 136, 179 |
| Level signal (Parameter) | 191 |
| Level unit (Parameter) | 126 |
| Linearization (Submenu) | 132, 133, 134 |
| Linearization type (Parameter) | 134 |
| Local display | 48 |
| see Diagnostics message | |
| see In alarm condition | |
| Locking status (Parameter) | 122 |
| Logging interval (Parameter) | 183 |

M

| | |
|--|----------|
| Maintenance | 88 |
| Manage device configuration | 75 |
| Manual thickness upper layer (Parameter) | 127, 130 |
| Manufacturer ID (Parameter) | 178 |
| Mapping (Wizard) | 121 |
| Mapping end point (Parameter) | 120, 121 |
| Maximum value (Parameter) | 137 |
| Measured current 1 (Parameter) | 181 |
| Measured materials | 12 |
| Measured thickness upper layer (Parameter) | 128 |
| Measured value symbols | 61 |
| Measured values (Submenu) | 179 |
| Medium group (Parameter) | 113 |
| Menu | |
| Diagnostics | 172 |
| Setup | 111 |
| Mounting position for interface measurements | 21 |

N

| | |
|---------------------------|-----|
| Number format (Parameter) | 164 |
|---------------------------|-----|

O

| | |
|---|----------|
| Operating elements | |
| Diagnostics message | 80 |
| Operating mode (Parameter) | 111 |
| Operating module | 59 |
| Operating time (Parameter) | 166, 173 |
| Operating time from restart (Parameter) | 173 |
| Operational safety | 13 |
| Order code (Parameter) | 177 |
| Output current 1 to 2 (Parameter) | 153, 181 |
| Output echo lost (Parameter) | 142 |

- Overvoltage protection
 General information 45
- P**
- Present mapping (Parameter) 119
Present probe length (Parameter) 147, 149
Previous diagnostics (Parameter) 172
Probe grounded (Parameter) 147
Probe length correction (Wizard) 149
Probe settings (Submenu) 147
Process property (Parameter) 124
Process variable value (Parameter) 187
Product safety 13
PV (HART device variable) 67
- R**
- Ramp at echo lost (Parameter) 143
Read access 53
Record map (Parameter) 120, 121
Registered trademarks 16
Remedial measures
 Calling up 81
 Closing 81
Remote operation 49
Repair concept 89
Replacing a device 89
Requirements for personnel 12
Reset write protection (Parameter) 146
Result device check (Parameter) 190
Return 90
Rod probe
 Design 14
Rod probes
 Bending strength 23
Rope probe
 Design 14
Rope probes
 Tensile load 23
- S**
- Safety instructions
 Basic 12
Safety Instructions (XA) 9
Safety settings (Submenu) 142
Securing coax probes 25
Seilsonden
 Montage 30
Separator (Parameter) 164
Serial number (Parameter) 176
Setting the operating language 69
Settings
 Manage device configuration 75
 Operating language 69
Setup (Menu) 111
Signal quality (Parameter) 116
SIL/WHG confirmation (Wizard) 145
Simulation (Submenu) 186, 187
Spare parts 90
 Nameplate 90
- Start device check (Parameter) 190
Status signals 60, 79
Stilling well 26
Submenu
 Administration 169
 Advanced setup 122
 Configuration backup display 166
 Current output 1 to 2 150
 Data logging 182
 Device check 190
 Device information 176
 Diagnostic list 174
 Display 160
 Display channel 1 to 4 184
 Event list 175
 Event logbook 175
 Events list 85
 Heartbeat 192
 Interface 124
 Linearization 132, 133, 134
 Measured values 179
 Probe settings 147
 Safety settings 142
 Simulation 186, 187
 Switch output 154
SV (HART device variable) 67
Switch output (Submenu) 154
Switch output function (Parameter) 154
Switch output simulation (Parameter) 188
Switch status (Parameter) 158, 189
Switch-off delay (Parameter) 158
Switch-off value (Parameter) 157
Switch-on delay (Parameter) 157
Switch-on value (Parameter) 156
- Symbols
 For correction 63
 In the text and numeric editor 63
System components 96
- T**
- Table mode (Parameter) 138
Table number (Parameter) 139
Tank type (Parameter) 112
Terminal voltage 1 (Parameter) 181
Thickness upper layer (Parameter) 180
Timestamp (Parameter) 172, 173, 174
Tools 30
Transmitter
 Turning the display module 33
 Turning the housing 32
Transmitter housing
 Turning 32
Trouble shooting 77
Tube diameter (Parameter) 112
Turning the display module 33
TV (HART device variable) 67
- U**
- Underground tanks 28

Unit after linearization (Parameter) 135
Use calculated DC value (Parameter) 129, 130

V

Value 1 display (Parameter) 162
Value current output 1 to 2 (Parameter) 188
Value echo lost (Parameter) 142

W

W@M Device Viewer 90
Wizard
 Automatic DC calculation 130
 Deactivate SIL/WHG 146
 Define access code 171
 Mapping 121
 Probe length correction 149
 SIL/WHG confirmation 145
Workplace safety 13
Write access 53
Write protection
 Via access code 54
 Via write protection switch 56
Write protection switch 56



71344071

www.addresses.endress.com
