


# Brief Operating Instructions

## Prosonic S FMU90

Flow Measurement  
Backwater and Dirt Detection  
Totalizers and Counters

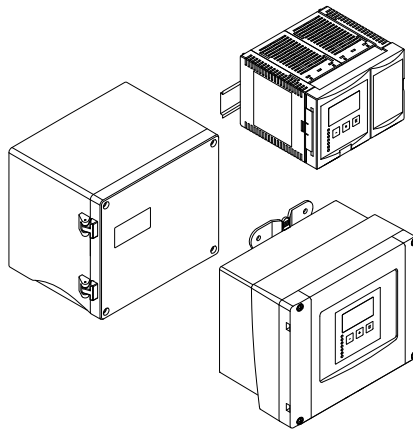


These Instructions are Brief Operating Instructions; they are not a substitute for the Operating Instructions pertaining to the device.

Detailed information about the device can be found in the Operating Instructions and the other documentation:

Available for all device versions via:

- Internet: [www.endress.com/deviceviewer](http://www.endress.com/deviceviewer)
- Smart phone/tablet: *Endress+Hauser Operations App*

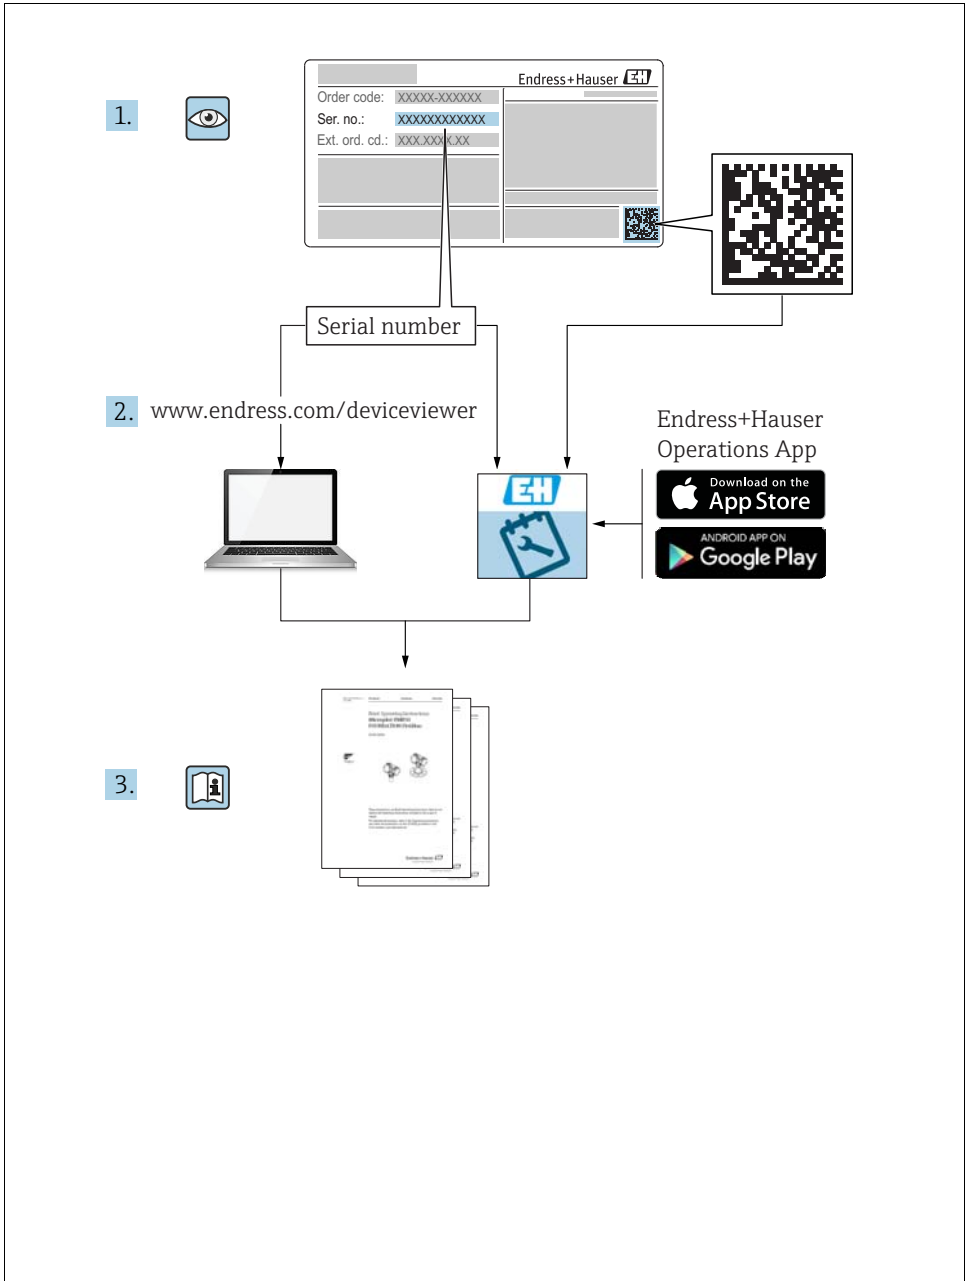

# Table of contents

1	Safety Instructions	4
1.1	Designated use	4
1.2	Installation, commissioning, operation	4
1.3	Operational safety and process safety	4
1.4	Return	4
1.5	Safety symbols	5
2	Mounting	6
2.1	Incoming acceptance, storage	6
2.2	Installation	6
2.3	Mounting the remote display and operating module	11
2.4	Mounting of the sensors	13
2.5	Installation check	13
3	Wiring	14
3.1	Terminal compartment of the field housing polycarbonate	14
3.2	Terminal compartment of the field housing aluminium	15
3.3	Terminal compartment of the DIN-rail housing	16
3.4	Terminal assignment	18
3.5	Sensor connection	22
3.6	Connection of the sensor heater (for FDU90/FDU91)	23
3.7	Connection of external switches (for FMU90-*****B***)	26
3.8	Connection of a temperature sensor	26
3.9	Synchronization line	30
3.10	Connection of the separate display and operating module	31
3.11	Potential equalization	31
3.12	Post-connection check	35
4	Operation	36
4.1	Operating options	36
4.2	Operation via the display and operating module	36
5	Commissioning	41
5.1	First setup	41
5.2	Basic setup	42
5.3	Overview basic setup for a flow measurement	43
5.4	Overview basic setup for level measurement	49

# 1 Safety Instructions

## 1.1 Designated use

The Prosonic S FMU90 is a transmitter for the ultrasonic sensors FDU90, FDU91, FDU91F, FDU92, FDU93 and FDU95<sup>1)</sup>. The sensors of the class FDU8x can be connected as well.

## 1.2 Installation, commissioning, operation

The Prosonic S is fail-safe and constructed to the state-of-the-art. It meets the appropriate standards and EC directives. However, if you use it improperly or other than for its designated use, it may pose application-specific hazards, e.g. product overflow due to incorrect installation or configuration. Installation, electrical connection, start-up, operation and maintenance of the measuring device must therefore be carried out exclusively by trained specialists authorised by the system operator. Technical personnel must have read and understood these operating instructions and must adhere to them. You may only undertake modifications or repair work to the device when it is expressly permitted by the operating instructions.

## 1.3 Operational safety and process safety

- Alternative monitoring measures must be taken to ensure operational safety and process safety during configuration, testing and maintenance work on the device.
- The device is safely built and tested according to state-of-the-art technology and has left the factory in perfect condition as regards technical safety. The applicable regulations and European standards have been taken into account.
- Pay particular attention to the technical data on the nameplate.
- If the device is to be installed in an explosion hazardous area, then the specifications in the certificate as well as all national and local regulations must be observed. The device is accompanied by separate "Ex documentation", which is an integral part of this Operating Instructions. The installation regulations, connection values and Safety Instructions listed in this Ex document must be observed. The documentation number of the related Safety Instructions is also indicated.
- If using devices for applications with safety integrity level, the separate manual on functional safety must be observed thoroughly.



The sensors FDU83, FDU84, FDU85 and FDU86 with an ATEX, FM or CSA certificate are not certified for connection to the FMU90 transmitter.





## 1.4 Return




Follow the instructions on returning the device as outlined in the Operating Instructions BA00289F or on [www.endress.com](http://www.endress.com).

---

1) The sensors FDU80/80F/81/81F/82/83/84/85/86/96 are not available anymore.

## 1.5 Safety symbols

Symbol	Meaning
 A0011189-DE	<b>DANGER!</b> This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.
 A0011190-DE	<b>WARNING!</b> This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.
 A0011191-DE	<b>CAUTION!</b> This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.
 A0011192-DE	<b>NOTICE!</b> This symbol contains information on procedures and other facts which do not result in personal injury.

Explosion protection	Meaning
	<b>Device certified for use in explosion hazardous area</b> If the device has this symbol embossed on its name plate it can be installed in an explosion hazardous area
	<b>Explosion hazardous area</b> Symbol used in drawings to indicate explosion hazardous areas. Devices located in and wiring entering areas with the designation "explosion hazardous areas" must conform with the stated type of protection.
	<b>Safe area (non-explosion hazardous area)</b> Symbol used in drawings to indicate, if necessary, non-explosion hazardous areas. Devices located in safe areas still require a certificate if their outputs run into explosion hazardous areas

## 2 Mounting

### 2.1 Incoming acceptance, storage

#### 2.1.1 Incoming acceptance

Check the packing and contents for any signs of damage. Check the shipment, make sure nothing is missing and that the scope of supply matches your order.

#### 2.1.2 Storage

Pack the measuring instrument so that is protected against impacts for storage and transport. The original packing material provides the optimum protection for this. The permissible storage temperature is -40 to +60 °C (-40 to +140 °F).

### 2.2 Installation

#### 2.2.1 Installation conditions of the field housing polycarbonate

##### **Weather protection**

In order to avoid excessive sunlight exposure, the instrument should be mounted in a position which is protected against direct sunlight or a protection cover should be applied.

##### **Overvoltage protection**


In order to protect the Prosonic against overvoltages (especially if mounted outdoors), connection of an overvoltage protection is recommended.

##### **Pipe mounting**

A mounting plate is available for mounting of the field housing to 1" to 2" pipes.

##### **Wall mounting**

A mounting help for wall mounting is supplied. It also serves as drilling template. The mounting help should be mounted on a flat surface and may not become distorted.

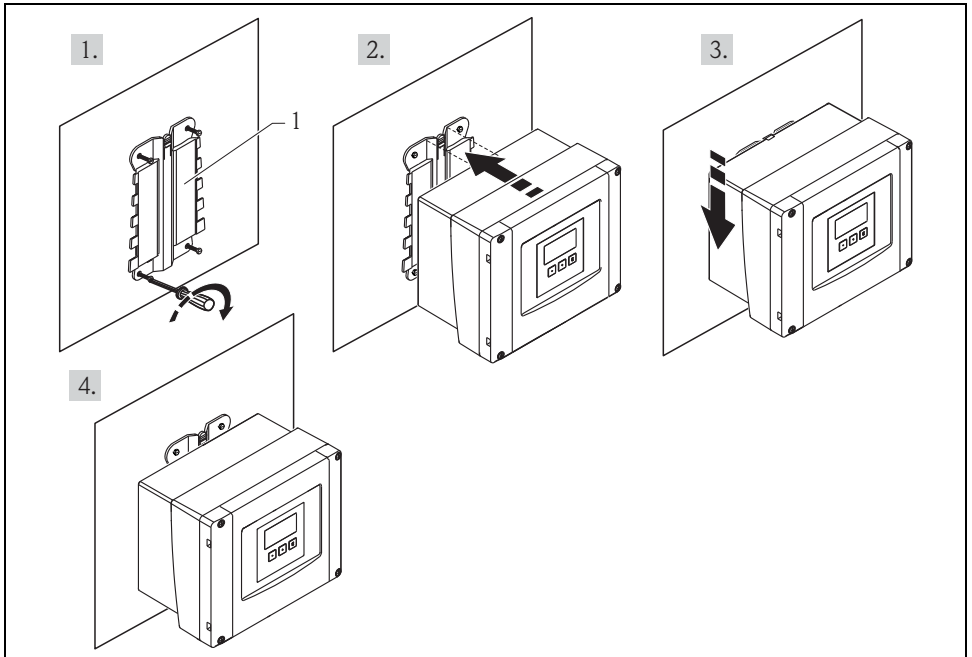

L00-FMU90xxx-17-00-00-xx-003

Wall mounting with mounting help (1)



Further information: Operating Instructions for Prosonic S FMU90, document number BA00289F.

You will find this document in the Download Area of the Endress+Hauser Internet site.

## 2.2.2 Installation conditions of the field housing aluminium

### Weather protection

In order to avoid excessive sunlight exposure, the instrument should be mounted in a position which is protected against direct sunlight.

### Installation height

Maximum installation height for the device is 2000 m above sea level.


### Overvoltage protection

In order to protect the Prosonic against overvoltages (especially if mounted outdoors), connection of an overvoltage protection is recommended.

**Wall mounting**

The housing should be mounted on a flat surface and may not become distorted.

**Dimensions of the field housing aluminium**

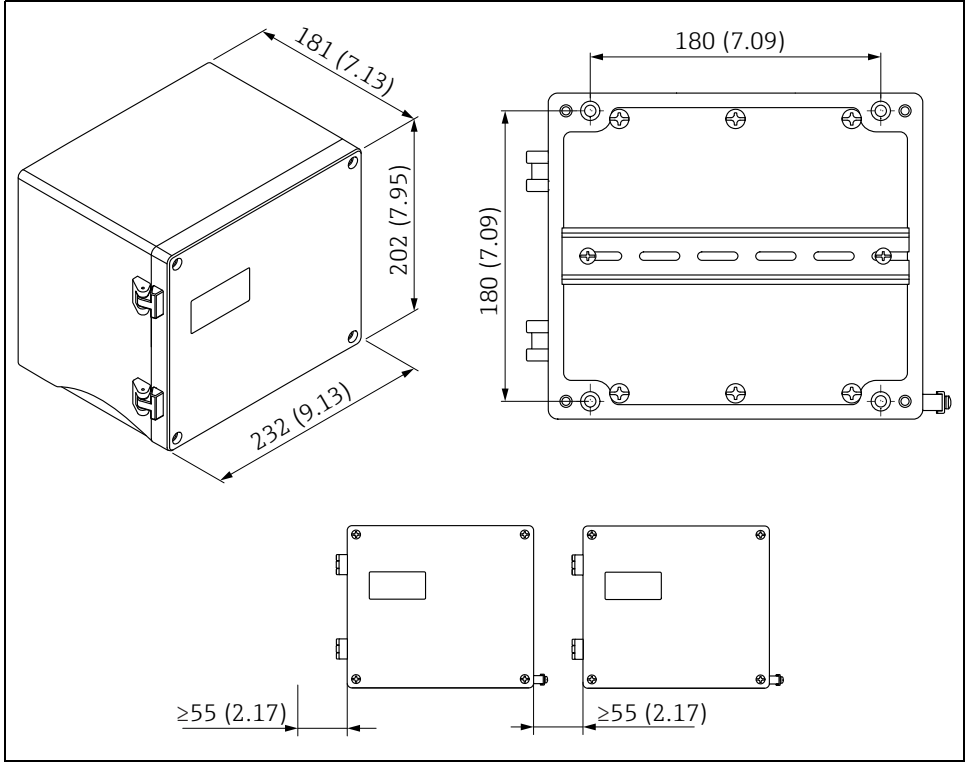


Dimensions in mm (in)

A0033258

The dimensions of the field housing aluminium are the same for all instrument versions. To open the housing, a minimum mounting distance of 55 mm (2.17 in) is required on the left.



## Installation

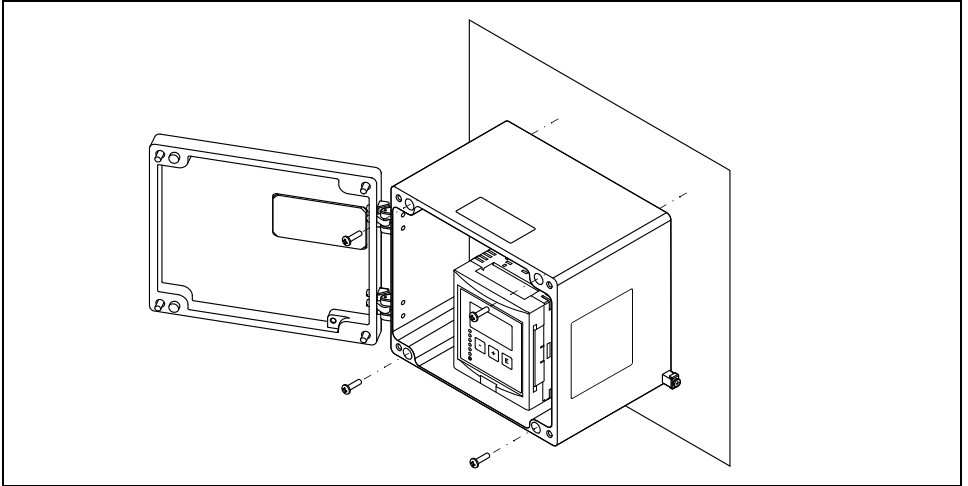


1 Mounting the field housing aluminium to a wall

A0033331


### 2.2.3 Installation conditions of the DIN-rail housing

- The DIN-rail housing must be mounted outside hazardous areas in a cabinet.
- The housing is mounted on a DIN rail EN 60715 TH 35 x 7.5 or TH 37 x 15.
- Do not install the instrument in the vicinity of high-voltage lines, motor lines, contactors or frequency converters. The installation regulations for high-voltage lines, motor lines, contactors or frequency converters must be observed.
- To ensure easy mounting and opening of the housing, a distance of approx. 10 mm (0.39 in) should be kept between the instruments.
- In order to avoid interference, do not route the sensor cables parallel to high-voltage or electric power lines and not close to frequency converters.

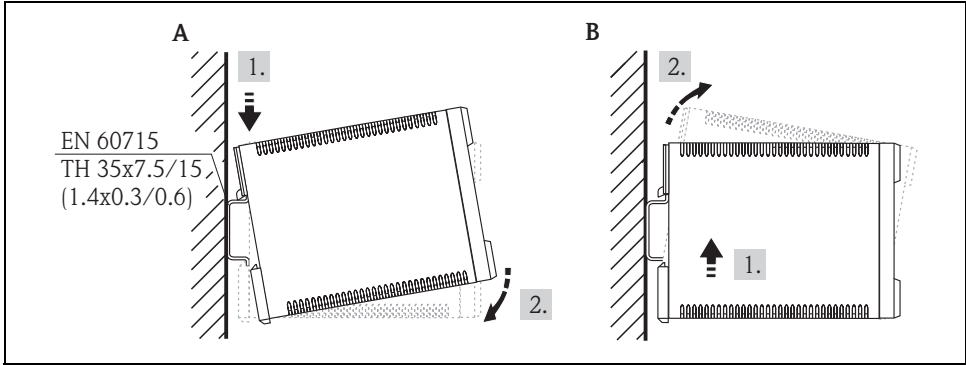

L00-FMU90xxx-17-00-00-xx-001

- A *Mounting*
- B *Demounting*

 The dimensions are described in this document: Technical Information for Prosonic S FMU90, document number TI00397F. You will find this document in the Download Area of the Endress+Hauser Internet site.


## 2.3 Mounting the remote display and operating module

### 2.3.1 Scope of delivery

If the Prosonic S is ordered with the display for cabinet door mounting, the following is contained in the scope of delivery:


- Display and operating module 96 x 96 mm (3.78 x 3.78 in)
- 4 retainers (with nuts and screws) → 6 "Mounting"
- Connection cable (3 m (9.8 ft) ) for connection to the transmitter (preassembled with suitable plugs).

### 2.3.2 Dimensions

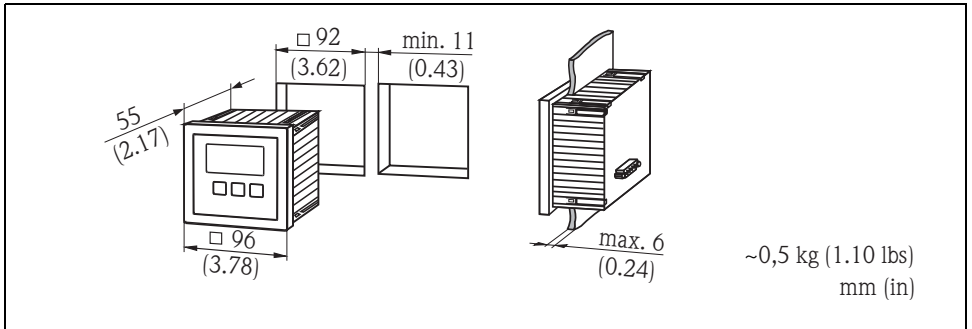

L00-FMU90xxxx-06-00-00-xx-004

### 2.3.3 Mounting

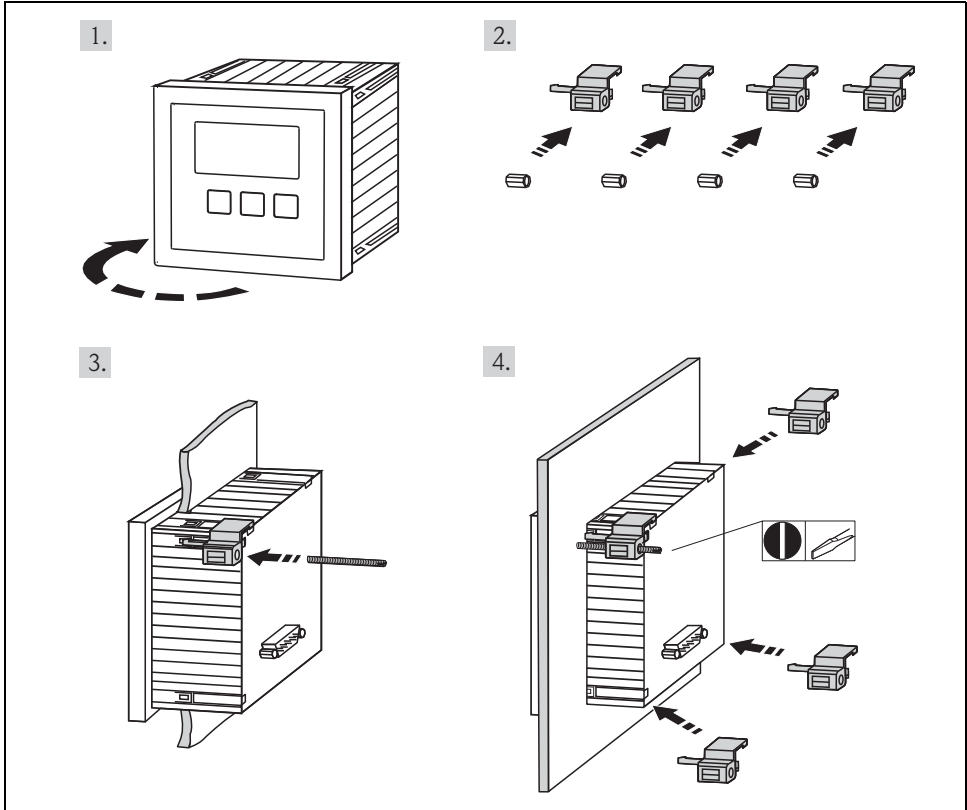


L00-FMU90xxx-17-00-00-sx-002

**i** Further information: Operating Instructions for Prosonic S FMU90, document number BA00289F.  
You will find this document in the Download Area of the Endress+Hauser Internet site.

### 2.3.4 Adaption plate

If an opening of 138 x 138 mm (5.43 x 5.43 in) and the remote display of the Prosonic FMU860/861/862 are already present, you can use the adaption plate (Order Code: 52027441). The adapter plate can be mounted directly in the housing of the old remote display of the FMU86x series.

**i** The housing of the remote display of the FMU86x is the holder for the adapter plate and the new remote display of the FMU90/FMU95 in the format 96 x 96 mm (3.78 x 3.78 in).

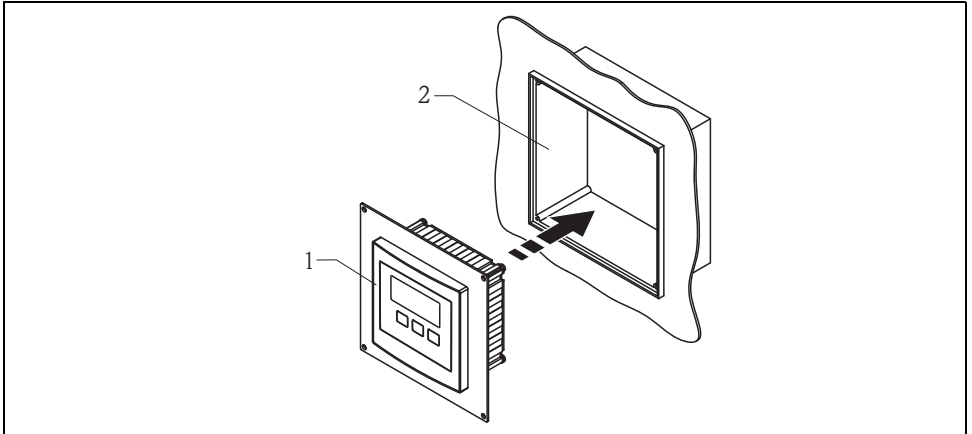

L00-FMU90xxx-06-00-00-xx-006

- 1 Remote display of the FMU90 with adaption plate
- 2 Opening of the remote display of the FMU860/861/862

## 2.4 Mounting of the sensors

Information on the mounting of the sensors<sup>2)</sup> can be found in the following documents:

- Technical Information TI00189F (for FDU8x)
- Technical Information TI00396F (for FDU9x)

These documents are supplied with the sensors.

## 2.5 Installation check

After installing the device, carry out the following checks:

- Is the device damaged (visual inspection)?
- Does the device correspond to the measuring point specifications such as process temperature, process pressure, ambient temperature, measuring range, etc.?
- If available: Are the measuring point number and labelling correct?
- Is the instrument sufficiently protected against rainfall and direct sunlight?
- For the field housing: Are the cable glands tightened correctly?
- Is the instrument securely mounted to the DIN rail or the mounting help (visual inspection)?
- For the field housing: Are the screws of the terminal compartment cover securely tightened (visual inspection)?

2) The sensors FDU80/80F/81/81F/82/83/84/85/86/96 are not available anymore.

## 3 Wiring

### ⚠ WARNING


#### Risk of electric shock!

Voltage at the terminals.

- ▶ Switch off the supply voltage before connecting the device.
- ▶ In a wet environment, do not open the cover if voltage is present.


### 3.1 Terminal compartment of the field housing polycarbonate

The field housing has a separate terminal compartment. It can be opened after loosening the 4 screws of the lid.

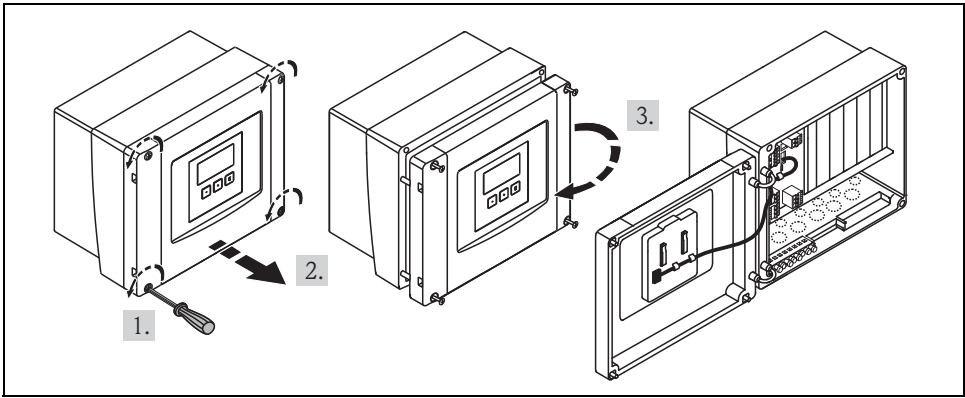

L00-FMU90xxx-04-00-00-xx-002

For easier wiring, the lid can be completely removed by unplugging the display plug and loosening the hinges:

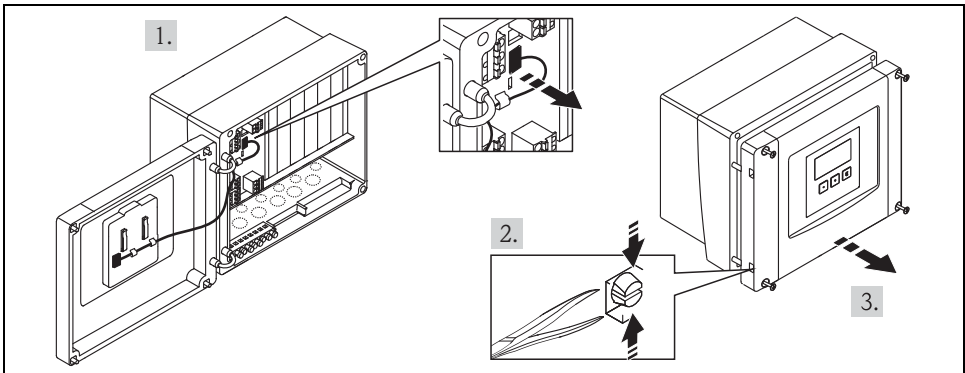

L00-FMU90xxx-04-00-00-xx-009

### 3.1.1 Cable entries of the field housing polycarbonate

The following openings for cable entries are prestamped on the bottom of the housing: M20x1.5 (10 openings), M16x1.5 (5 openings), M25x1.5 (1 opening).

The required number and types of cable entries depend on the application at hand.

## 3.2 Terminal compartment of the field housing aluminium

### HINWEIS

Pay attention to special documentation (XA) that accompanies devices for explosion-hazardous areas.

The field housing aluminium is wired almost the same way as the FMU90 in the DIN-rail housing → 16.

Pay attention to the following differences:

- In explosion-hazardous areas, all connections must be located inside the field housing aluminium. . Exception: For potential equalization, there's a terminal block inside the housing that is wired to the FMU90 ex works. The terminal block is connected to the protective earth terminal, which is accessible on the outside of the field housing aluminium.


For wiring inside the housing, the cables are routed into the housing through the cable entries in the bottom and are connected there with either the device or a terminal block. When routing the cables through the cable entries, use cable glands that are appropriate for the ignition protection type!

- If the distance to the sensors is greater than 30 m (98 ft), an extension cable must be used.

### ⚠ WARNING

#### Hazard of electric shock and explosion!

- ▶ It is imperative that the housing of the FMU90 for use in explosion-hazardous areas is earthed. Therefore, connect the housing with protective earth and/or local earth potential.

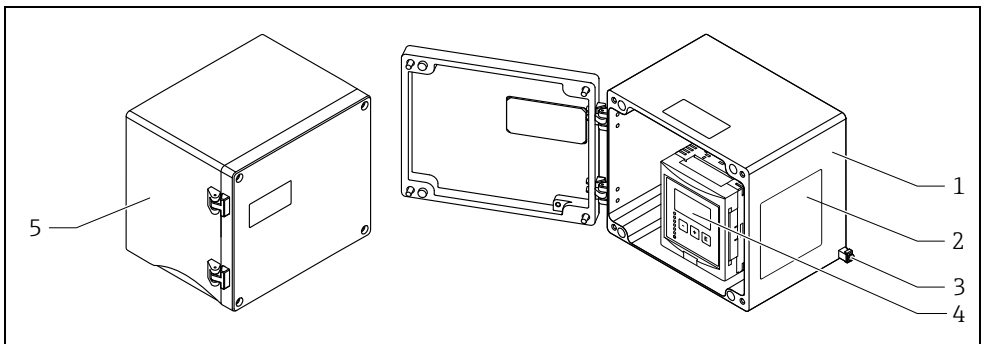

- 1 Field housing aluminium, housing opened
- 2 Nameplate
- 3 Protective earth terminal
- 4 Display and operating module
- 5 Field housing aluminium, housing closed

### 3.2.1 Cable entries


#### HINWEIS

When routing the cables through the cable entries, use cable glands that are appropriate for the ignition protection type!

At the bottom of the housing are 12 openings M20x1,5 for cable entries located. The required number and types of cable entries depend on the application at hand.

## 3.3 Terminal compartment of the DIN-rail housing


### 3.3.1 Single instrument

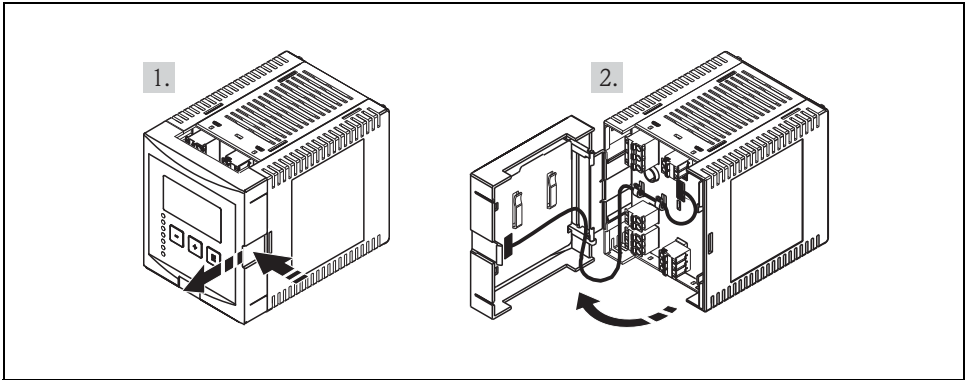

L00-FMU90xxx-04-00-00-xx-003



### 3.3.2 Several instruments mounted side by side

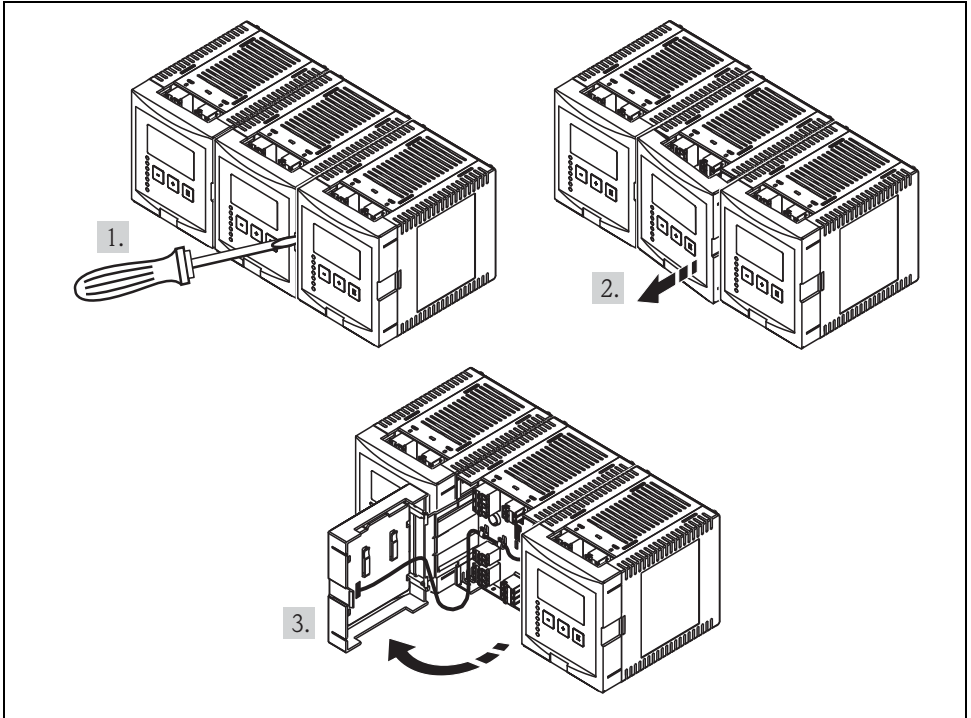

L00-FMU90xxx-04-00-00-xx-012

- The cables can be inserted into the housing from above or from below.
- The pictures show the smallest housing version but are valid for the larger versions as well.
- If the instruments are mounted next to each other and if the sensor cables run in parallel, the synchronization terminals (39 and 40) must be interconnected (→ 18, "Terminal assignment" and → 30, "Synchronization line").


### 3.4 Terminal assignment

Pluggable spring-force terminals for connection of the cables are supplied in the terminal compartment. Rigid conductors or flexible conductors with cable sleeve can directly be inserted and are contacted automatically.

Feature	Value
Conductor cross section	0.2 mm <sup>2</sup> to 2.5 mm <sup>2</sup> (26 to 14 AWG)
Cable and sleeve cross section	0.25 mm <sup>2</sup> to 2.5 mm <sup>2</sup> (26 to 14 AWG)
Min. stripping length	10 mm (0.39 in)

The terminal configuration depends on the instrument version ordered. There is a basic terminal area, which is present in every instrument version. Additional optional terminal areas are only present if the respective option has been selected in the product structure.

Terminal area	present for the following instrument versions	
Basic area	A	For all versions
Optional areas	B	For instrument versions with 2 sensor inputs and/or 2 analogue outputs (FMU90 - *****2***** and/or FMU90 - *****2*****)
	C	For instrument versions with 3 or 6 relays (FMU90 - *****3***** oder FMU90 - *****6*****)
	D	For instruments with external switch inputs and external temperature input (FMU90 - *****B*****)
	E	For instrument versions with PROFIBUS DP interface (FMU90 - *****3*****)

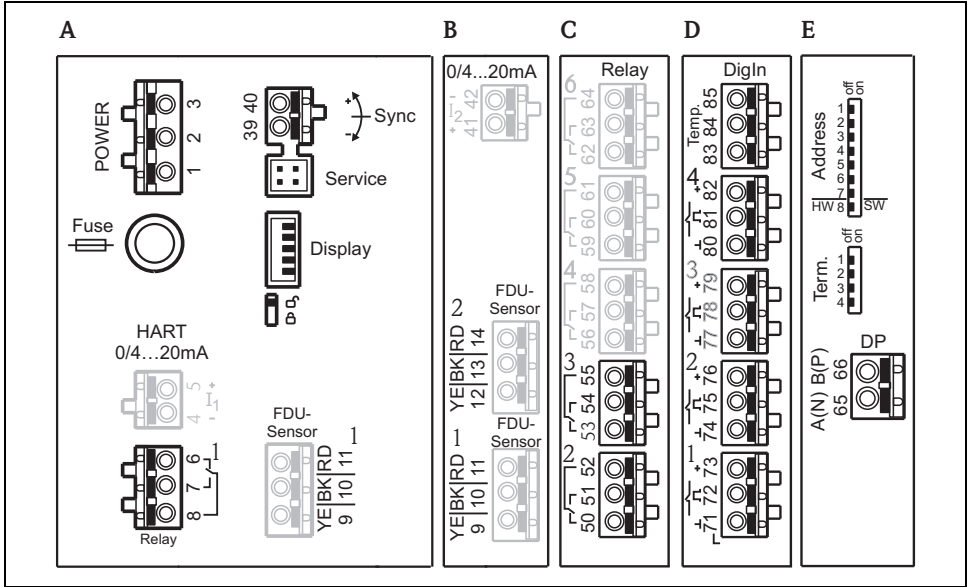

L00-FMU90xxx-04-00-00-xx-001

Terminals of the Prosonic S (the terminals depicted in grey are not present in every instrument version)


A Basic terminal area

B-E Optional terminal areas (present if the respective option has been selected in the product structure)



The depicted switching states of the relays refer to the de-energized state.

Terminals	Meaning	Terminal area	Remarks
<b>Auxiliary energy</b>			
1	<ul style="list-style-type: none"> <li>▪ L (for AC version)</li> <li>▪ L+ (for DC version)</li> </ul>	A	Depending on instrument version: <ul style="list-style-type: none"> <li>▪ 90 to 253 V<sub>AC</sub></li> <li>▪ 10.5 to 32 V<sub>DC</sub></li> </ul>
2	<ul style="list-style-type: none"> <li>▪ N (for AC version)</li> <li>▪ L- (for DC version)</li> </ul>	A	
3	Potential equalization	A	
Fuse		A	Depending on instrument version: <ul style="list-style-type: none"> <li>▪ 400 mA T (for AC)</li> <li>▪ 2 A T (for DC)</li> </ul>
<b>Analog outputs (not available for Profibus DP instruments)</b>			
4, 5	Analog output 1; 4 to 20 mA with HART/ 0 to 20 mA w/o HART	A	<b>Not present for the PROFIBUS DP version</b>
41, 42	Analog output 2 (optional); 4 to 20 mA/ 0 to 20 mA	B	Only for the version with two analog outputs; no HART signal at this output
<b>Relay outputs</b>			
6, 7, 8	Relay 1	A	
50, 51, 52	Relay 2 (optional)	C	Only for the versions with 3 or 6 relays
53, 54, 55	Relay 3 (optional)	C	Only for the versions with 3 or 6 relays
56, 57, 58	Relay 4 (optional)	C	Only for the version with 6 relays
59, 60, 61	Relay 5 (optional)	C	Only for the version with 6 relays
62, 63, 64	Relay 6 (optional)	C	Only for the version with 6 relays
<b>Bus communication (only available for Profibus DP instruments)</b>			
65	PROFIBUS A (RxT/TxD - N)	D	Only for the PROFIBUS DP version
66	PROFIBUS B (RxT/TxD - P)	D	
<b>Synchronization</b>			
39, 40	Synchronization	A	→ 30, "Synchronization line"
<b>Level inputs</b>			
9 (YE), 10 (BK), 11 (RD)	Sensor 1 (FDU8x/9x) YE: yellow strand BK: black strand RD: red strand		<ul style="list-style-type: none"> <li>▪ A: for versions with 1 sensor input</li> <li>▪ B: for versions with 2 sensor inputs<sup>1)</sup></li> </ul>
12 (YE), 13 (BK), 14 (RD)	Sensor 2 (FDU8x/9x) (optional) YE: yellow strand BK: black strand RD: red strand	B	Only for the version with 2 sensor inputs

Terminals	Meaning	Terminal area	Remarks
<b>external switch inputs</b>			
71, 72, 73	External switch input 1	D	0: < 8 V or 72 and 73 interconnected 1: > 16 V or 72 and 73 not interconnected
74, 75, 76	External switch input 2	D	0: < 8 V or 75 and 76 interconnected 1: > 16 V or 75 and 76 not interconnected
77, 78, 79	External switch input 3	D	0: < 8 V or 78 and 79 interconnected 1: > 16 V or 78 and 79 not interconnected
80, 81, 82	External switch input 4	D	0: < 8 V or 81 and 82 interconnected 1: > 16 V or 81 and 82 not interconnected
<b>temperature input</b>			
83, 84, 85	Temperature input: <ul style="list-style-type: none"> <li>▪ PT100</li> <li>▪ Omnigrad S TR61 (Endress+Hauser)</li> </ul>	D	→  26, "Connection of a temperature sensor"

1) In this case, terminals 9/10/11 are not present on terminal area A.

### CAUTION


#### Limitation of electrical safety.

- ▶ When using the public supply mains, an easily accessible power switch must be installed in the proximity of the device. The power switch must be marked as a disconnecter for the device (IEC/EN 61010).



In order to avoid interference, do not route the sensor cables parallel to high-voltage or electric power lines and not close to frequency converters.

### Additional elements on the terminal areas

Designation	Meaning/Remarks
Fuse	Fuse: 2 A T /DC or 400 mA T/AC
Display	Connection of the display or the remote display and operating module
Service	Service interface for connection of a PC/Notebook via Commubox FXA291
	Locking switch
Term.	Bus termination (only applicable for instruments with PROFIBUS interface)
Address	Bus address (only applicable for instruments with PROFIBUS interface)

### **⚠ WARNING**

#### Risk of electric shock!

Voltage at the terminals.

- ▶ Switch off the supply voltage before connecting the device.
- ▶ In a wet environment, do not open the cover if voltage is present.

## 3.5 Sensor connection

Information on the mounting of the sensors<sup>3)</sup> can be found in the following documents:

- Technical Information TI00189F (for FDU8x)
- Technical Information TI00396F (for FDU9x)

These documents are supplied with the sensors.


3) The sensors FDU80/80F/81/81F/82/83/84/85/86/96 are not available anymore.

### 3.6 Connection of the sensor heater (for FDU90/FDU91)

The FDU90 and FDU91 sensors are available in a version with heater. For more information and details, see the Technical Information TI00396F that is delivered with the sensors.

#### 3.6.1 Connection in the field housing polycarbonate

For the sensor with heater, a special terminal module is supplied for the connection of the supply voltage. This terminal module can be inserted into the field housing:

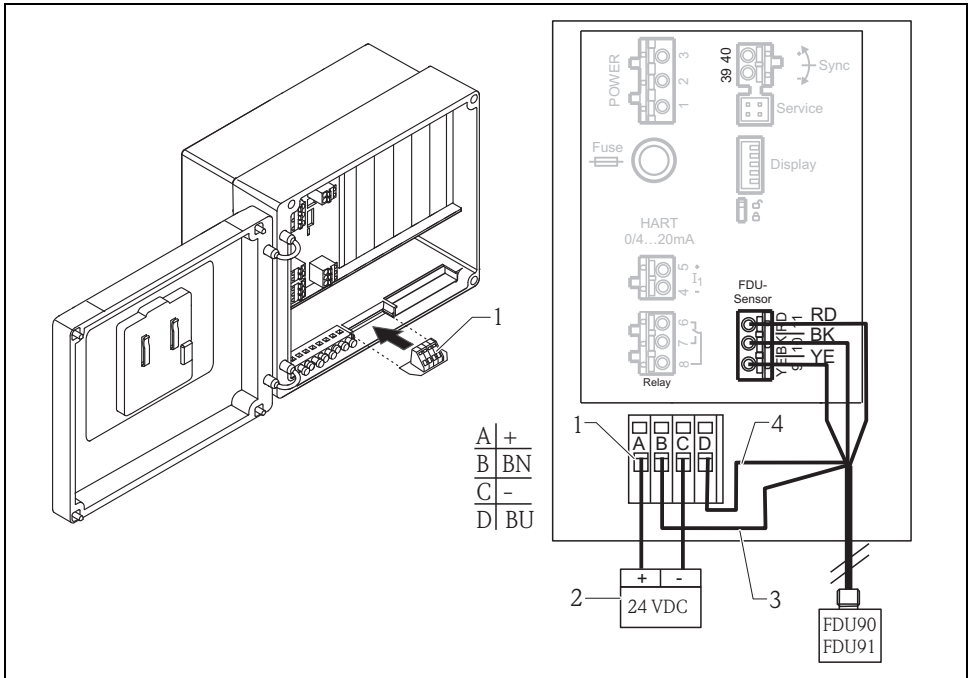

L00-FMU90xxx-04-00-00-xx-013

- 1 Terminal module for the sensor heater
- 2 External power supply unit
- 3 Brown strand (BN)
- 4 Blue strand (BU)

### 3.6.2 Connection to field housing aluminium

The power supply for the sensor heater must be provided by an external voltage supply which must be located outside the explosion hazardous area.

For power supply, a cable must be used that fulfills the requirements of the zone where the field housing aluminium is installed.

#### **▲ GEFAHR**

Explosion hazard!


- ▶ In explosion-hazardous areas: Always disconnect the device from power supply before opening the housing.
- ▶ Always disconnect the power supply of the sensor heater before opening the field housing aluminium.

The sensor heater must be connected to the power supply inside the field housing aluminium (or in another explosion-safe housing). For this purpose, additional terminal blocks must be installed on the DIN-rail inside the housing.

#### **HINWEIS**

Depending on the selected product variant it is possible that there is not sufficient space for additional terminal blocks inside the field housing aluminium. Therefore, it is recommended to confirm the wiring options for the sensor heater before ordering the chosen device combination. Please contact your Endress+Hauser sales representative.

Note!

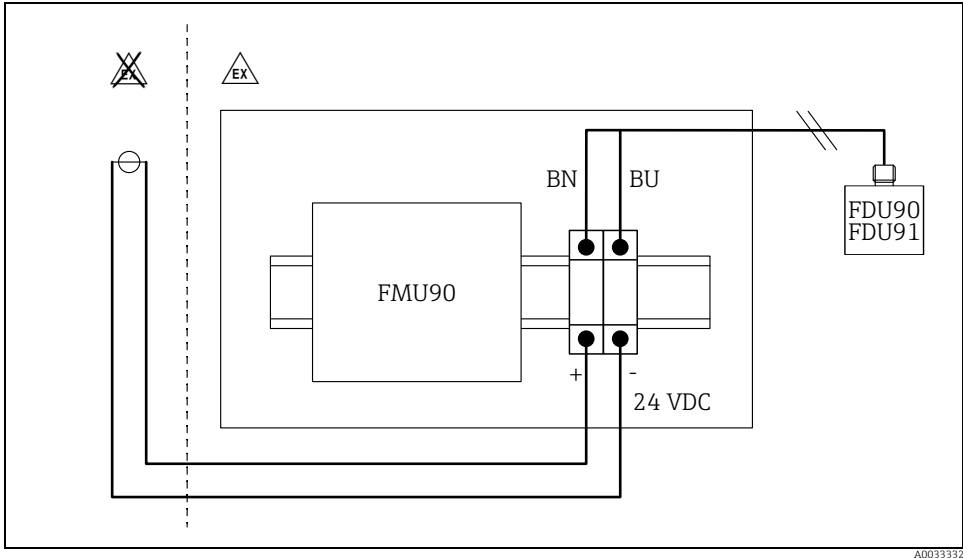


A0033332



### 3.6.3 Connection in the DIN-rail housing

The supply voltage must be provided in the cabinet, e.g. by a terminal on the DIN-rail:

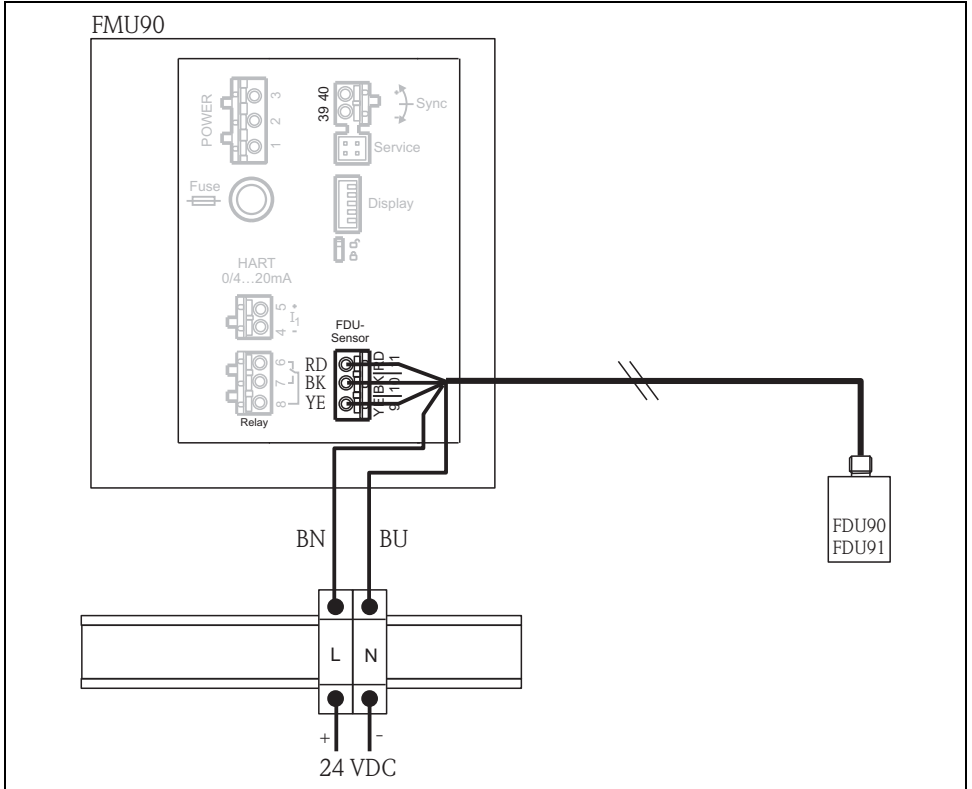


L00-FMU90xxx-04-00-00-xx-014



The terminal module supplied with the sensor can also be used for connection of the supply voltage. For the terminal assignment on this module see → 23.

### 3.7 Connection of external switches (for FMU90-\*\*\*\*\*B\*\*\*)

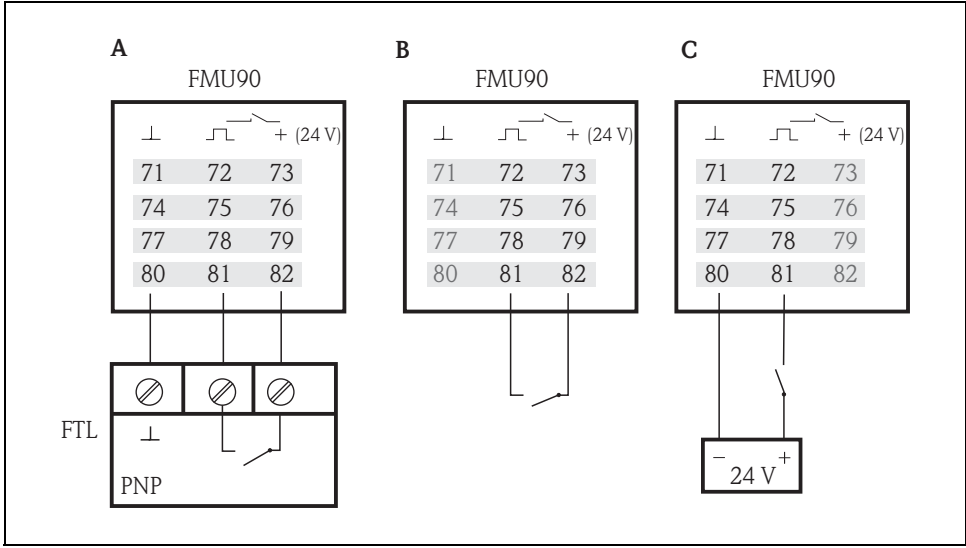

L00-FMU90xxx-04-00-00-xx-021

- A *Liquiphant*
- B *External switch*
- C *External switch with external supply voltage*

The maximum short-circuit current at 24 V is 20 mA.

### 3.8 Connection of a temperature sensor

The Prosonic S FMU90 transmitter has an optional input for an external temperature probe (in the product structure: feature 90 "Additional input", option B). The following probes can be connected:

- A Omnigrad S TR61 temperature probe from Endress+Hauser
- A Pt100 temperature probe


**i** Further information: Operating Instructions for Prosonic S FMU90, document number BA00289F.

#### 3.8.1 Omnigrad S TR61 (Endress+Hauser) (connectable to FMU90-\*\*\*\*\*B\*\*\*)

In case an external temperature sensor is needed, an Omnigrad S TR61 can be used.

Outside of explosion-hazardous areas, the following types of Omnigrad S TR61 with ceramic terminal block (no head transmitter) can be used:

- TR61-A\*\*\*\*\*

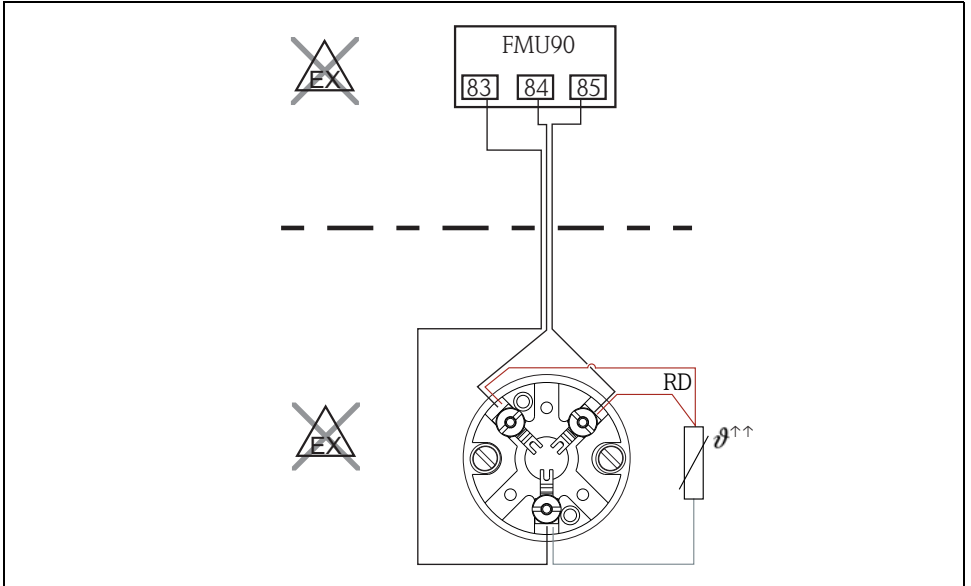

*RD* Cable color = Red

A0033412

More information can be found in the following documents:

- TI01029T

### 3.8.2 Omnigrad S TR61 for explosion-hazardous areas (Endress+Hauser) (connectable to FMU90-\*\*\*\*\*B\*\*\*)


For explosion-hazardous areas, an Omnigrad S TR61 with ceramic terminal block (no head transmitter) can be used, which has appropriate approval for the corresponding area.

In connection with the FMU90, only those variants of the Omnigrad S TR61 can be used which do not rely on intrinsic safety. Depending on the conditions of the individual explosion-hazardous area, suitable types can be for instance the following:

- TR61-E\*\*\*\*\*
- TR61-H\*\*\*\*\*
- TR61-M\*\*\*\*\*
- TR61-N\*\*\*\*\*
- TR61-R\*\*\*\*\*
- TR61-S\*\*\*\*\*
- TR61-2\*\*\*\*\*
- TR61-3\*\*\*\*\*

**HINWEIS**

Devices for use in hazardous environments are accompanied by separate "Ex documentation" (XA), which is an integral part of the documentation. Strict compliance with the installation instructions and ratings as stated in this Additional documentation is mandatory.

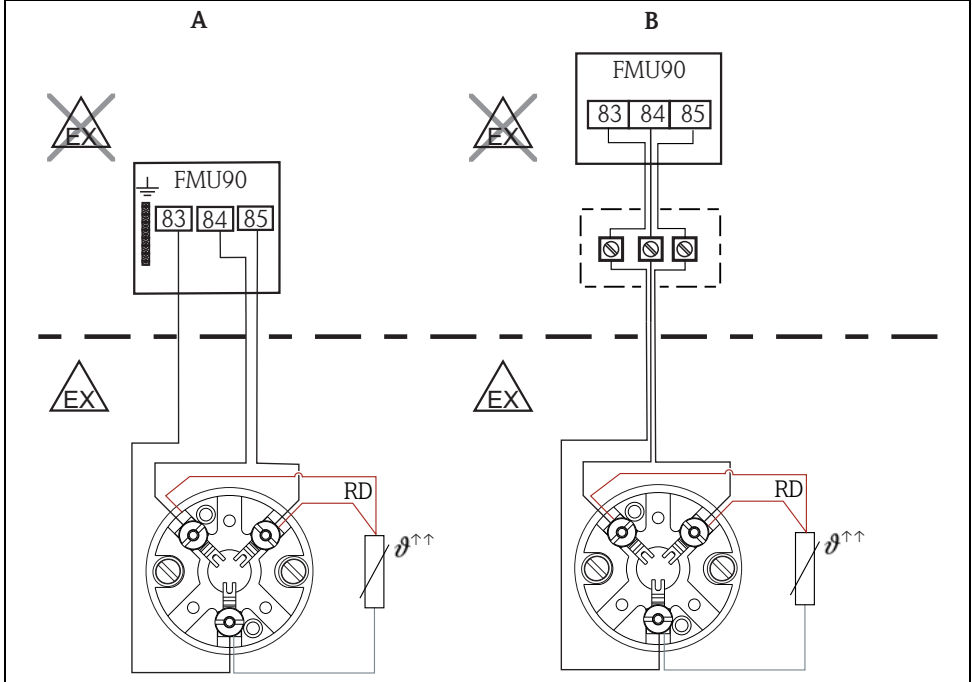


- A Ex area
- B Ex area, with connection via terminal box
- RD Cable color = Red

A0033403

More information can be found in the following documents:

- TI01029T

### 3.8.3 Pt100 (connectable to FMU90-\*\*\*\*\*B\*\*\*\*)

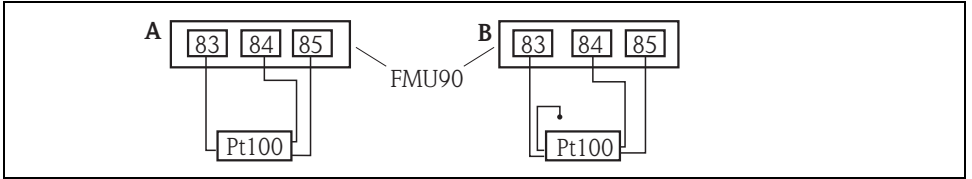

L00-FMU90xxx-04-00-00-xx-020

A Pt100 with 3-wire-connection

B Pt100 with 4-wire-connection (one connector remains unused)



A Pt100 with 2-wire-connection may not be used due to its insufficient measuring accuracy.

#### **⚠ WARNING**



#### **Explosion hazard!**

**A Pt100 may not be connected in explosion hazardous areas.**


- ▶ Use an Omnigrad S TR61 in explosion hazardous areas.

### 3.9 Synchronization line

- If wiring several Prosonic S (FMU90/FMU95) which are mounted in a common cabinet and if the sensor cables run in parallel, the synchronization terminals (39 and 40) must be interconnected.
- Up to 20 instruments can be synchronized in this way.
- The synchronization causes the evaluation units FMU9x to send the pulses simultaneously. Only after all sensors have received their signal, new simultaneous pulses are sent. This prevents pulses in the sensor cable of one sensor from influencing the received signal on the cable of a different sensor.
- If there are more than 20 instruments, groups must be formed, each containing a maximum of 20 instruments. For the instruments within each group, the sensor cables may run in parallel. The sensor cables of different groups must be separated from each other.
- Usual commercial screened cable can be used for synchronization
  - max. length: 10 m (33 ft) between the individual instruments
  - cross section: 2 x (0.75 to 2.5 mm<sup>2</sup> (18 to 14 AWG))
  - for lengths up to 1 m (3.3 ft), an unscreened cable can be used; for lengths exceeding 1 m (3.3 ft), screening is required. The screen must be connected to ground.
- Instruments of the Prosonic FMU86x family can be connected to the synchronization line as well. In this case a maximum of 10 instruments can be connected to each synchronisation line.

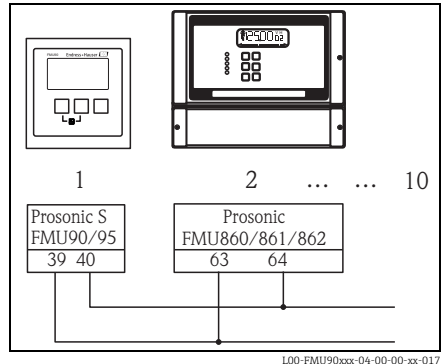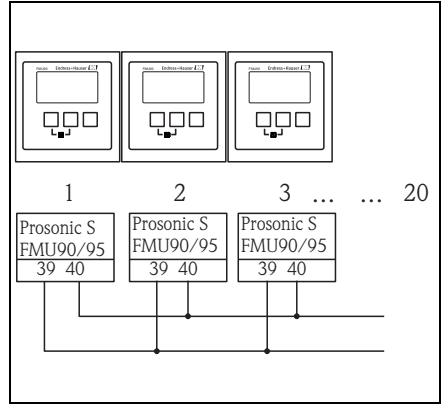

### 3.10 Connection of the separate display and operating module

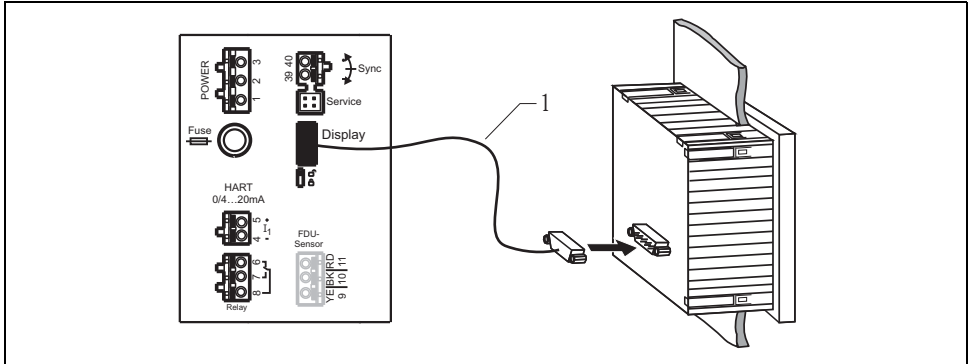

L00-FMU90xxx-04-00-00-xx-005

1 Connection of the display plug with the cable (3 m (9.8 ft))

For the version of the Prosonic S with a separate display for panel mounting, a pre-assembled connecting cable (3 m (9.8 ft)) is supplied. The cable must be connected to the display plug of the Prosonic S.

**i** Minimum diameter for cable bushing: 20 mm (0.79 in).


### 3.11 Potential equalization

#### 3.11.1 Potential equalization in the field housing polycarbonate

**⚠ WARNING**


**Limitation of electrical safety.**

- ▶ The protective conductor (GNYE) of the sensors FDU91F/93/95/96 and FDU83/84/85/86 must be connected to the local potential equalization system **after a maximum of 30 m (98 ft)**. The metallic terminal block (1) in the field housing can be used for this.

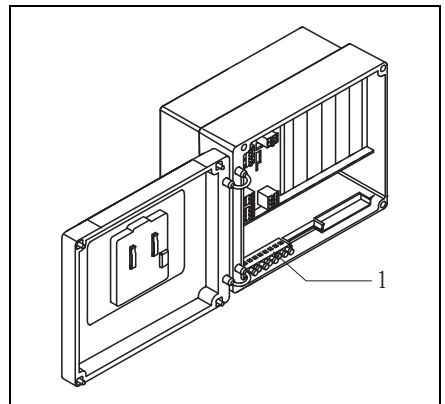

L00-FMU90xxx-04-00-00-xx-006

Example

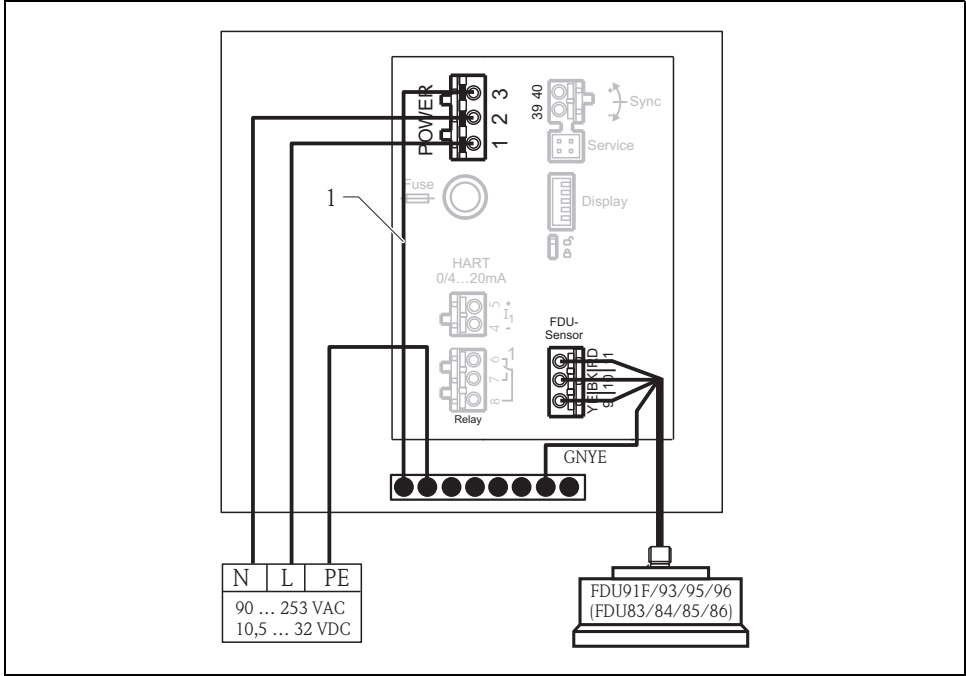




### 3.1.1.2 Potential equalization in the field housing aluminium

**⚠ WARNING**

**Hazard of electric shock and explosion!**

- ▶ It is imperative that the housing of the FMU90 for use in explosion-hazardous areas is earthed. Therefore, connect the housing with protective earth and/or local earth potential.

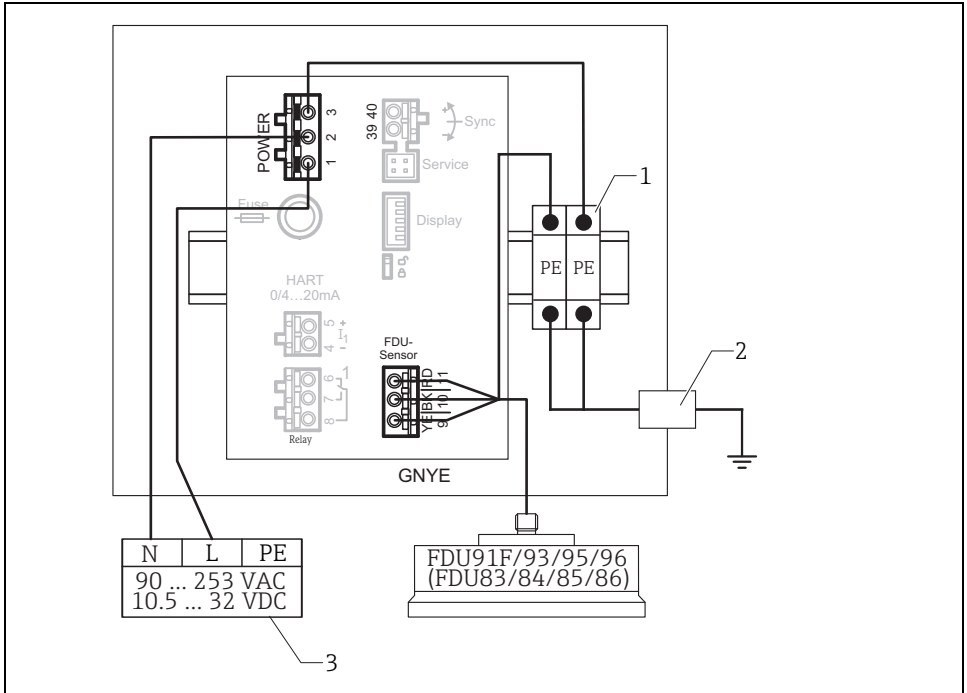


- 1 Protective earth terminal (with contact to the DIN rail)
- 2 Protective earth terminal, in wall of field housing aluminium
- 3 Power supply for FMU90

A0033335

### 3.11.3 Potential equalization for the DIN-rail housing

If the DIN-rail housing is used, the potential equalization must be connected in the cabinet, e.g. at a metallic DIN rail:

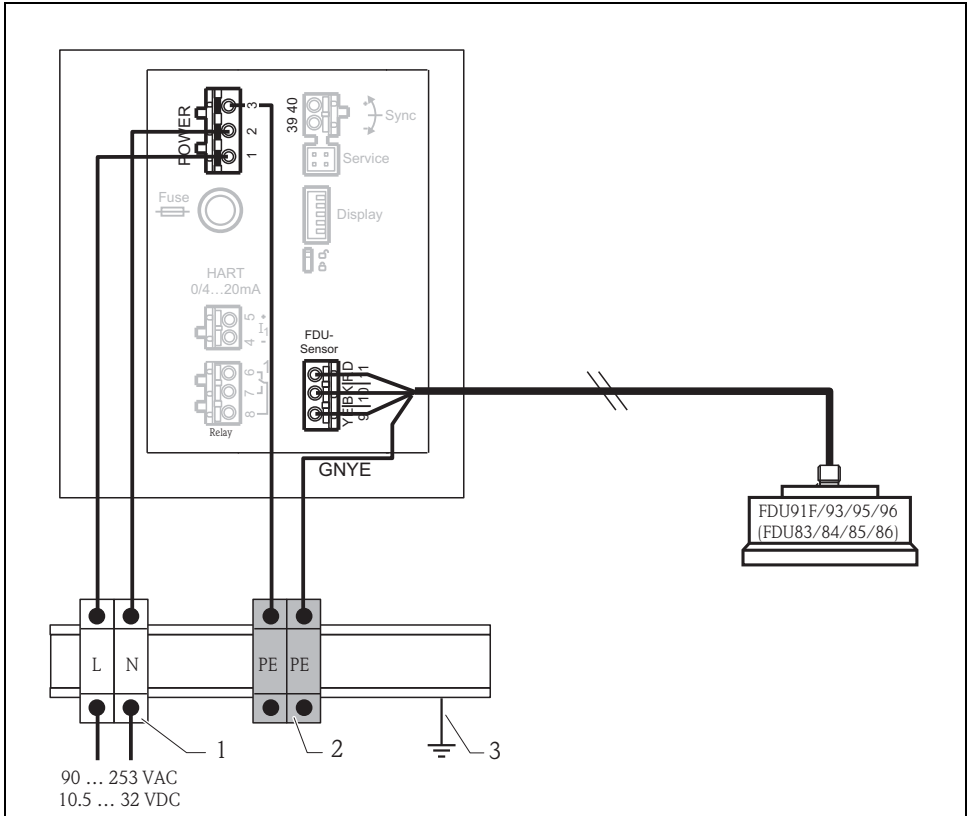

- 1 Terminal (isolated from the DIN rail)
- 2 Protective earth terminal (with contact to the DIN rail)
- 3 Protective ground via DIN rail

The signal evaluation electronics and its direct connections (display interface, service interface etc.) are galvanically isolated from the supply voltage and the communication signals. Their electric potential is identical to the potential of the sensor electronics.

#### **⚠ CAUTION**

##### **Limitation of electrical safety.**

- ▶ Pay attention to the potential difference if the sensors are connected to ground!
- ▶ Route the protective conductor (GNYE) in such a manner that the protective conductor will be the last to get strained when the cable is being pulled.

## 3.12 Post-connection check

### **⚠ WARNING**

#### **Risk of electric shock!**

Voltage at the terminals.

- ▶ Switch off the supply voltage before you check the terminal assignment.
- ▶ In a wet environment, do not open the cover if voltage is present.

After wiring the transmitter, carry out the following checks:

- Is the terminal assignment correct?
- For the field housing: Are the cable glands tight and is the cover of the terminal compartment securely closed?
- If auxiliary energy is switched on: Does a display appear on the display module (if available) and does the green LED light up?


## 4 Operation

### 4.1 Operating options

- Via the operating and display module at the Prosonic S (if present)
- Via the service interface of the Prosonic S with the Commubox FXA291 and the operating program "FieldCare"
- Via the HART protocol, e.g. with the Commubox FXA195 and the operating program "FieldCare"
- Via the Field Communicator 375, 475

### 4.2 Operation via the display and operating module



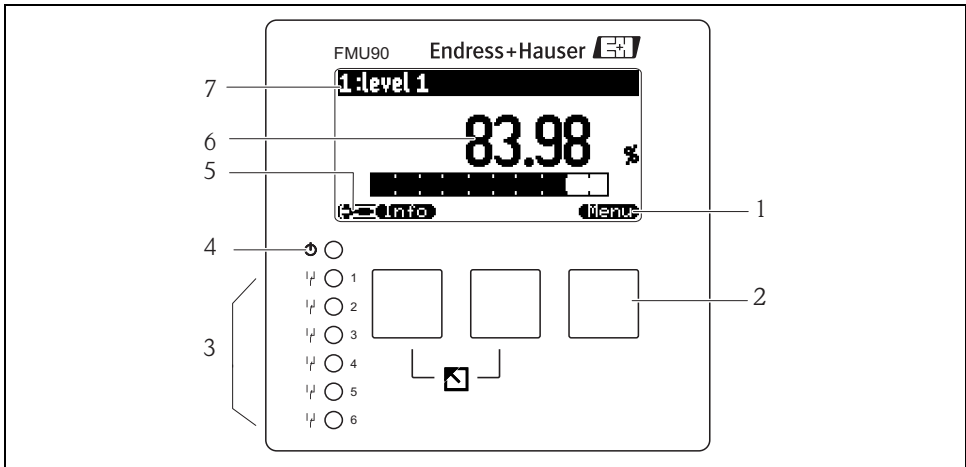








#### 4.2.1 Display and operating elements



L00-FMU90xxx-07-00-00-xx-002













- 1 Softkey symbol
- 2 Key
- 3 LEDs indicating the switching states of the relays
- 4 LED indicating the operating state
- 5 Display symbols
- 6 Value of the parameter, including unit
- 7 Name of the parameter

## Display symbols

Symbol	Meaning
<b>Operating mode of the instrument</b>	
	<b>User</b> User parameters can be edited. Service parameters are locked.
	<b>Diagnosis</b> The service interface is connected.
	<b>Service</b> User and service parameters can be edited.
	<b>Locked</b> All parameters are locked.
<b>Locking state of the currently displayed parameter</b>	
	<b>Display parameter</b> The parameter can <b>not</b> be edited in the current operating mode of the instrument.
	<b>Editable parameter</b> The parameter can be edited.
<b>Scroll-Symbole</b>	
	<b>Scroll list available</b> Indicates that the list contains more parameters than can be represented on the display. By pressing $\uparrow$ or $\downarrow$ repeatedly, all parameters of the list can be accessed.
<b>Navigation in the envelope curve display (select plot setting "cyclic")</b>	
	<b>Move left</b>
	<b>Move right</b>
	<b>Zoom in</b>
	<b>Zoom out</b>





## Keys (softkey operation)

The function of the keys depends on the current position within the operating menu (softkey functionality). The key functions are indicated by softkey symbols in the bottom line of the display.

Symbol	Meaning
	<b>Move downwards</b> Moves the marking bar downwards within a selection list.
	<b>Move upwards</b> Moves the marking bar upwards within a selection list.
	<b>Enter</b> <ul style="list-style-type: none"> <li>▪ Opens the marked submenu, the marked parameter set or the marked parameter</li> <li>▪ Confirms the edited parameter value</li> </ul>
	<b>Previous parameter set</b> Reopens the previous parameter set within the submenu.
	<b>Next parameter set</b> Opens the next parameter set within the submenu.
	<b>Confirm selection</b> Selects the option of a selection list which is currently marked by the bar.
	<b>Increase value</b> Increases the active digit of an alphanumeric parameter.
	<b>Decrease value</b> Decreases the active digit of an alphanumeric parameter
	<b>Error list</b> Opens the list of all errors which are currently detected. If a warning is present, this symbol flashes. If an alarm is present, the symbol is displayed continuously.
	<b>Change Display</b> Change to the next page of measured values (only available if more than one pages of measured values have been defined; see "display" menu)
	<b>Info</b> Opens the Shortcut Menu, which contains the most important information about the current state of the instrument
	<b>Menu</b> Opens the Main Menu, which contains <b>all</b> parameters of the Prosonic S

## General key combinations

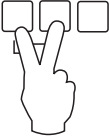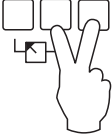
The following key combinations do not depend on the menu position:

Key combination	Meaning
	<p><b>Escape</b></p> <ul style="list-style-type: none"> <li>■ While editing a parameter: Exit the editing mode without accepting the changes.</li> <li>■ Within the navigation: Move upwards to the previous layer of the menu.</li> </ul>
	<p><b>Increase contrast</b> Increases the contrast of the display module.</p>
	<p><b>Decrease contrast</b> Decreases the contrast of the display module.</p>
	<p><b>Locking</b> Locks the instrument against parameter changes. The instrument can only be unlocked again by the keys.</p>

## 4.2.2 The operating menu

### Structure of the menu

The parameters of the Prosonic S are organized in an operating menu (consisting of a main menu and several submenus). Parameters which are related to each other are comprised in a common parameter set. To simplify the navigation within the menu, a five-digit position code is displayed with each parameter set.

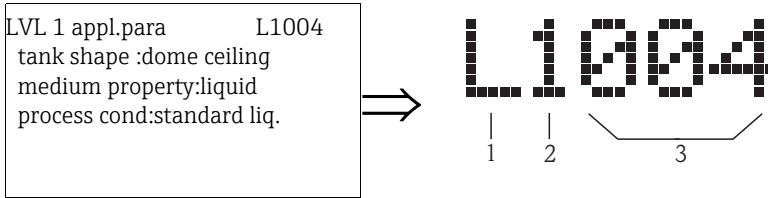

*Identification of the parameter sets:*

- 1 Submenu
- 2 Number of the associated input or output
- 3 Number of the parameter set within the submenus



Further information: Operating Instructions for Prosonic S FMU90, document number BA00289F.



## 5 Commissioning

For the version with field housing polycarbonate:

### WARNING

#### Risk of electric shock!

Voltage at the terminals.

- ▶ Do not operate the instrument if the field housing polycarbonate is open.
- ▶ First close the device, then switch on the supply voltage.


### 5.1 First setup

After switching on the power supply for the first time, the instrument asks for a number of operating parameters:

- Select by ↓ or ↑
- Confirm by ↵

Step	Parameter	Remarks
1	→ Language	Select the display language.
2	→ Distance unit	Select the unit for distance measurements.
3	→ Temperature unit	Select the temperature unit
4	→ Operating mode	Select the operating mode, e.g. level+flow The available options depend on the instrument version and the installation environment.  If you want to configure a backwater detection, you must select the option "flow+backwater". See also the Operating Instructions BA00289F.
5	→ Controls	Select the control functions, which you are going to use. See also the Operating Instructions BA00289F. This selection is not required for the "flow" and "flow+backwater" operating modes.



By pressing  you can return to the previous parameter (e.g. in order to correct the value). All these parameters can also be changed at a later point of time in the "device properties/operating parameters" and "device properties/language" parameter sets.

## 5.2 Basic setup

After the first setup the main screen appears (flow or level).

However, the displayed values do not yet correspond to the real flows or level before you have performed the basic setup. To do so, enter the main menu by pressing "Menu" (right key). Select the "flow" or the "level" submenu.

The "flow" submenu is used for the calibration for the following tasks:

- Flow measurements (1 or 2 channels)
- Back water alarm
- Flow counters

The structure of the submenu depends on the selected operating mode<sup>4)</sup>:

Main menu	Submenu		
<b>Operating modes "level+flow", "flow"</b>			
Main menu → flow	→ Flow	→ Flow 1 → Flow 2	→ Basic setup
	→ Flow counter		
<b>Operating mode "flow+backwater"</b>			
Main menu → flow	→ Flow 1+backwater	→ Flow → Backwater	→ Basic setup
	→ Flow counter		

Always start by calibrating the first flow channel ("flow 1" submenu). Thereafter, you can calibrate the following as required:

- Second flow channel ("flow 2" submenu)
- Backwater detection ("backwater" submenu)
- Flow counters ("flow counter" submenu)

4) The operating mode is selected during the first setup. Nevertheless, it can be changed at any time if required ("device properties" menu, "operating params" submenu, "operating mode" parameter set).




The "level" submenu is used for the calibration of level measurement (1 or 2 channels)


Step	Parameter Set	Parameter	Remarks
1	Main menu → level	→ Level (LVL)1 → Level (LVL)2 <sup>1)</sup>	Select the "level" submenu. In the following submenu select the level channel you are going to calibrate.
2	Main menu → level → level (LVL)1	→ Basic setup	In the following submenu select "basic setup". This submenu contains all parameters needed for the basic setup.


1) The selection "Level (LVL) 2" is only available for instruments with 2 sensor inputs or 2 current outputs.

### 5.3 Overview basic setup for a flow measurement

The following table gives an overview of the basic setup for a flow measurements. Detailed information on the parameters can be found in the Operating Instructions BA00289F.

Step	Parameter Set	Parameter	Remarks
1			Open the "flow 1" or "flow 2" submenu
2			Open the "basic setup" submenu.
3	→ Sensor selection (N = 1 or 2)	→ Input	Allocate a sensor to the channel.
		→ Sensor selection	Specify the type of sensor ("automatic" for FDU9x).
		→ Detected	Only available for "sensor selection" = "automatic"; indicates the detected type of sensor
4	→ Flow N linearization (N = 1 or 2)	→ Type	Select type of linearization <sup>1)</sup> : <ul style="list-style-type: none"> <li>■ "Flume/weir" (for the pre-programmed flumes and weirs)</li> <li>■ "Table" (to enter a linearization table manually)</li> <li>■ "Formula" (for the flow formula <math>Q = C (h^\alpha + \gamma h^\beta)</math>)</li> </ul> (Details →  46 "type")
		→ Flow unit	Select the flow unit (Details →  46 "flow unit")
		→ Curve	Select the type of flume or weir; (only present for "type" = "Flume/weir"); A second page appears in which the size of the respective flume and weir must be selected (Details → Operating Instructions BA00289F)
		→ Edit	Used to enter, change or delete a linearization table. (only available for "type" = "table"), (Details →  47 "edit")
		→ Status table	Enables or disables the linearization table, (only available for "type" = "table")
		→ Alpha	Specify the value of the parameter $\alpha$ , (only available for "type" = "formula")

Step	Parameter Set	Parameter	Remarks
4		→ Beta	Specify the value of the parameter $\beta$ , (only available for "type" = "formula")
		→ Gamma	Specify the value of the parameter $\gamma$ , (only available for "type" = "formula")
		→ C	Specify the value of the parameter C, (only available for "type" = "formula")
		→ Max. flow	Specify the maximum flow of the flume or weir, (not available for "type" = "table") Details →  47 "max flow"
5	→ Flow N empty calibration (N = 1 or 2)	→ Empty E	Specify the distance E between the reference point of the sensor and the zero of the measurement. The zero is <ul style="list-style-type: none"> <li>■ the bottom of the weir or</li> <li>■ the lowest point of the weir crest</li> </ul>
		→ Blocking distance	Indicates the blocking distance of the respective sensor; the maximum level may not project into the blocking distance.
6	→ Flow N (N = 1 or 2)	→ Flow N (N = 1 or 2)	Displays the currently measured flow (for checking purposes)
		→ Level	Displays the currently measured level (for checking purposes)
		→ Distance	Displays the currently measured distance between the reference point of the sensor and the liquid surface (for checking purposes)
7	→ Flow N check value (N = 1 or 2)	→ Distance	Displays the currently measured distance between the reference point of the sensor and the liquid surface.
		→ Check distance	Compare the displayed distance with the real value: <ul style="list-style-type: none"> <li>■ "Distance = ok" → "flow N mapping"</li> <li>■ "Distance too small" → "flow N mapping"</li> <li>■ "Distance too big" → basic setup completed</li> <li>■ "Distance unknown" → basic setup completed</li> <li>■ "Manual" → "flow N mapping"</li> </ul>
8	→ Flow N mapping (N = 1 or 2)	→ Distance	Displays the currently measured distance between the reference point of the sensor and the liquid surface
		→ Range of mapping	Determines the range over which the mapping is recorded; confirm the predefined value or enter your own value.
		→ Start mapping	Select: <ul style="list-style-type: none"> <li>■ No: the mapping is not recorded</li> <li>■ Yes: the mapping is recorded; after completion, the "flow N state" function appears (see below)</li> </ul>

Step	Parameter Set	Parameter	Remarks
9	→ Flow N state (N = 1 or 2)	→ Level	Displays the currently measured level
		→ Distance	Displays the currently measured distance between the reference point of the sensor and the liquid surface. Check the value: <ul style="list-style-type: none"> <li>Value correct: → Basic calibration completed. Press  several times to return to the measured value display.</li> <li>Value incorrect: → go back to step 7 ("flow N check value")</li> </ul>
		Flow N (N = 1 or 2)	Displays the currently measured flow
		Status	Used to enable, disable or delete a mapping
10			Parametrization of the counters (in the operating menu: "flow/flowcounter")

- 1) The type of linearization determines the relationship between the measured level and the flow.

### 5.3.1 Flow N linearization



The selected linearization type determines which parameters are present. Only the parameters "type" and "flow unit" are always present.

The "linearization" parameter set is used to calculate the flow from the measured level. The Prosonic S provides the following linearization types:

- Pre-programmed flow curves for commonly used flumes and weirs
- A freely editable linearization table (up to 32 points)
- A flow formula  $Q = C(h^\alpha + \gamma h^\beta)$  with freely selectable parameters



Flow measurement **always** requires a linearization.

Parameter	Selection/Remarks
"type"	<p>Use this parameter to select the type of linearization.</p> <p><b>Selection</b></p> <ul style="list-style-type: none"> <li>■ none No flow linearization is performed.</li> </ul> <p>Note! If this option has been selected, no further parameters are available. A flow measurement is only possible with one of the other options.</p> <ul style="list-style-type: none"> <li>■ <b>flume/weir</b> In this type, the linearization is performed according to a preprogrammed linearization curve. The type of curve is selected in the "<b>curve</b>" parameter. Additionally, the "<b>flow unit</b>" has to be specified. The "<b>max. flow</b>" parameter displays the max. flow of the respective flume or weir. If required, this value can be adjusted (as well as the "<b>width</b>" of the weir).</li> <li>■ <b>table</b> In this type, a linearization table consisting of up to 32 pairs of values "level - flow" is used. Additionally, the "<b>flow unit</b>" has to be specified. To enter and activate the table use the "<b>edit</b>" and "<b>status table</b>" parameters.</li> <li>■ <b>formula</b> In this type, the linearization is performed according to the formula <math>Q = C(h^\alpha + \gamma h^\beta)</math>. The "<b>alpha</b>", "<b>beta</b>", "<b>gamma</b>" and "<b>C</b>" parameters appear, which are used to specify the details of the curve. Additionally, the "<b>flow unit</b>" and the "<b>max. flow</b>" of the weir or flume have to be specified.</li> </ul>
"flow unit"	<p>Use this parameter to select the desired flow unit.</p> <p>Note! After a change of the flow unit, the switching points of the limit relays have to be checked and adjusted if required.</p>
"curve"	<p>This parameter is available for the "<b>flume/weir</b>" linearization type.</p> <p>It is used to select the type of flume or weir. After the selection, a second list appears with different sizes of the flume or weir<sup>1)</sup>. When you have confirmed your selection, the Prosonic S returns to the "<b>linearization</b>" function.</p>
"twidth"	<p>This parameter appears for the curves "<b>rectangular weir</b>", "<b>NFX</b>" and "<b>trapezoidal weir</b>". It is used to specify the width of the respective weir.</p>


Parameter	Selection/Remarks																														
"edit"	<p>This parameter is used to enter or to view the linearization table. You have got the following options:</p> <p><b>Selection</b></p> <ul style="list-style-type: none"> <li>read The table editor appears. An existing table can be viewed but not changed.</li> <li>manual The table editor appears. Table values can be entered and changed (→ 47 "status").</li> <li>delete The linearization table is deleted.</li> </ul>																														
<b>The table editor</b>																															
<div style="display: flex; justify-content: space-around;"> <table border="1" style="border-collapse: collapse; text-align: center;"> <thead> <tr><th>No.</th><th>Level</th><th>Value</th></tr> </thead> <tbody> <tr><td>1</td><td>0,0000</td><td>0,0000</td></tr> <tr><td>2</td><td>0,0000</td><td>0,0000</td></tr> <tr><td>3</td><td>0,0000</td><td>0,0000</td></tr> <tr><td>...</td><td>0,0000</td><td>0,0000</td></tr> </tbody> </table> <table border="1" style="border-collapse: collapse; text-align: center;"> <thead> <tr><th>No.</th><th>Level</th><th>Value</th></tr> </thead> <tbody> <tr><td>1</td><td>0,0000</td><td>0,0000</td></tr> <tr><td>2</td><td>0,0000</td><td>0,0000</td></tr> <tr><td>3</td><td>0,0000</td><td>0,0000</td></tr> <tr><td>...</td><td>0,0000</td><td>0,0000</td></tr> </tbody> </table> </div> <p> <input type="button" value="↓"/> : go to next row  <input type="button" value="↑"/> : go to previous row  <input type="button" value="↔"/> : open marked row for editing         </p> <p> <input type="button" value="↩"/> Return to the previous step by this key combination.         </p> <p> <input type="button" value="↓"/> <input type="button" value="↔"/> : navigate within the table  <input type="button" value="↔"/> : (for "Level" und "Value") open marked number for editing  <input type="button" value="↔"/> : (for "No.") open row editor         </p> <div style="border: 1px solid black; padding: 5px; width: fit-content;"> <p>Row function</p> <ul style="list-style-type: none"> <li>- Delete row</li> <li>- Insert row → (before current row)</li> <li>- Move row → Query: new position</li> </ul> </div>		No.	Level	Value	1	0,0000	0,0000	2	0,0000	0,0000	3	0,0000	0,0000	...	0,0000	0,0000	No.	Level	Value	1	0,0000	0,0000	2	0,0000	0,0000	3	0,0000	0,0000	...	0,0000	0,0000
No.	Level	Value																													
1	0,0000	0,0000																													
2	0,0000	0,0000																													
3	0,0000	0,0000																													
...	0,0000	0,0000																													
No.	Level	Value																													
1	0,0000	0,0000																													
2	0,0000	0,0000																													
3	0,0000	0,0000																													
...	0,0000	0,0000																													
"status"	<p>Use this parameter to specify if the linearization table is to be used or not.</p> <p><b>Selection</b></p> <ul style="list-style-type: none"> <li>enabled The table is used.</li> <li>disabled The table is <b>not</b> used. A flow value is not calculated</li> </ul>																														
"alpha", "beta", "gamma", "C"	<p>These parameters are available for the <b>"formula"</b> linearization type. They are used to specify the parameters of the flow formula:  <math>Q = C(h^{\alpha} + \gamma h^{\beta})</math></p>																														
"max flow"	<p>This parameter is available for the linearization types <b>"flume/weir"</b> and <b>"formula"</b>. It is used to specify the maximum flow of the respective weir or flume. For each of the preprogrammed curves, a default value is preset. However, this value can be adjusted, e.g. if the weir/flume is applied for lower flows. The maximum flow corresponds to an output current of 20 mA.</p>																														

L00-FMU90xxx-19-00-00-de-006

1) Tables of the flume and weir parameters can be found in the Appendix.


## Blocking distance


Parameter	Remarks
"blocking distance"	Indicates the blocking distance of the respective sensor. The blocking distance is measured from the reference point of the respective sensor.

 Further information: Technical Information for Prosonic S FDU9x, document number TI00396F.

### 5.3.2 Interference echo suppression: Basic principles

Parameter	Remarks
"check value" "distance mapping"	The " <b>flow N check value</b> " and " <b>flow N mapping</b> " parameter sets are used to configure the interference echo suppression of the Prosonic S. The following picture shows the operating principle of the interference echo suppression:

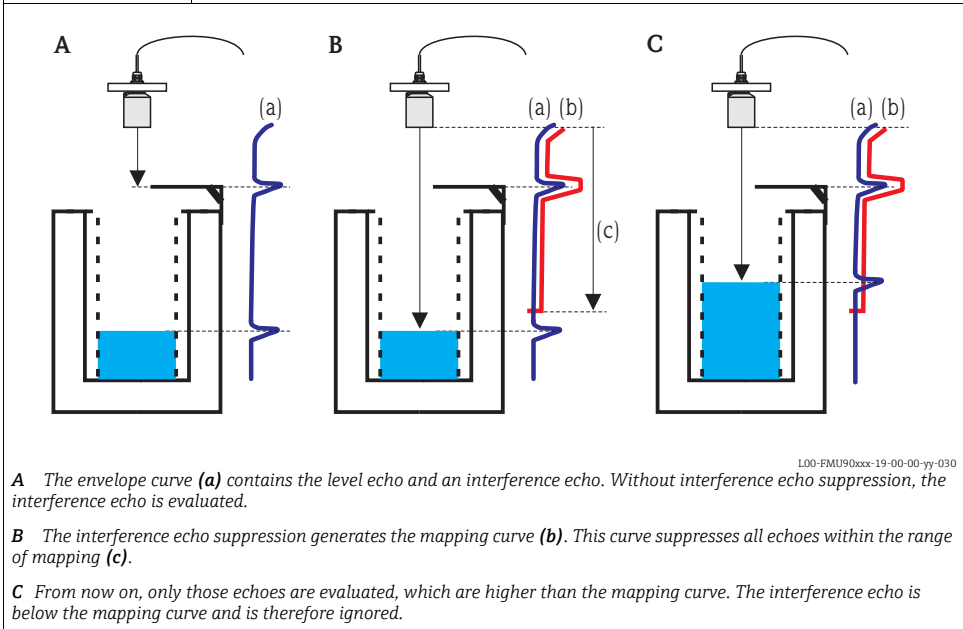



 In order to include all interference echoes, the interference echo suppression should be performed with the level as low as possible. If during commissioning the vessel can not be sufficiently emptied, it is advisable to repeat the interference echo suppression at a later point of time (as soon as the level reaches nearly 0%)



## 5.4 Overview basic setup for level measurement


The following table gives an overview of the basic setup for level measurement. Detailed information on the parameters can be found in the Operating Instructions BA00288F.






Step	Parameter set	Parameter	Remarks
<b>Configuring the sensor</b> (Details Section 5.4.1)			
1	→ Sensor selection	→ Input	Allocate a sensor to the channel.
		→ Sensor selection	Specify the type of sensor ("automatic" for FDU9x)
		→ Detected	Only available for "sensor selection" = "automatic"; indicates the detected type of sensor
2	→ Application parameter	→ Tank shape	Select the appropriate values for your application.
		→ Medium property	
		→ Process conditions	
<b>Empty and full calibration</b> (Details Section 5.4.2)			
3	→ Empty calibration	→ Empty E	Specify the distance between the reference point of the sensor and the minimum level (0%).
4	→ Full calibration	→ Full F	Specify the distance between the minimum (0%) and maximum (100%) level.
		→ Blocking distance BD	Display parameter; the maximum value for the full calibration is: $F_{\max} = E - BD$
5	→ Unit level	→ Unit level	Select the unit for the level measurement.
		→ Level	Displays the currently measured level.
		→ Distance	Displays the currently measured distance between the reference point of the sensor and the product level.
<b>Linearization</b> (Details Section 5.4.3) <b>If no linearization is required: continue by step 7: "distance correction"</b>			
6	→ Linearization	→ Type	Select type of linearization (Details → "type")
		→ Mode	Specify, to which value the measurement refers: "level" or "ullage"
		→ Customer unit	Specify the unit for the linearized value; (not available for "type" = "none") (Details → "customer unit")
		→ Max. scale	Specify the maximum contents of the vessel (in customer units); (not available for "type" = "none")


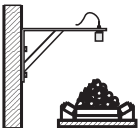
Step	Parameter set	Parameter	Remarks
6		→ Diameter	Specify the diameter of the tank; (only available for "type" = "horizontal cylinder" or "sphere")
		→ Intermediate height	Specify the intermediate height of the tank or silo; (only available for "type" = "pyramid bottom", "conical bottom" oder "angled bottom")
		→ Edit	Used to enter, change or delete a linearization table; (only available for "type" = "table") Details → "edit"
		→ Status table	Enables or disables the linearization table; (only available for "type" = "table") Details → "status table"
<b>Interference echo suppression</b> (Details →  60)			
7	→ distance correction	→ Act. distance 1 → Act. distance 2	Indicates the currently measured distance between the reference point of the sensor and the product surface.
		→ Check distance	Compare the indicated distance with the real value: <ul style="list-style-type: none"> <li>■ "Distance = ok" → "distance mapping"</li> <li>■ "Distance too small" → "distance mapping"</li> <li>■ "Distance too big" → Basic setup completed</li> <li>■ "Distance unknown" → Basic setup completed</li> <li>■ "Manual" → "distance mapping"</li> </ul>
8	→ distance mapping (Details ∅ Chap. 5.4.4)	→ Act. distance 1 → Act. distance 2	Indicates the currently measured distance between the reference point of the sensor and the product surface.
		→ Range of mapping	Determines the range over which the mapping is recorded; confirm the predefined value or enter your own value.
		→ Start mapping	Select: <ul style="list-style-type: none"> <li>■ No: the mapping is not recorded</li> <li>■ Yes: the mapping is recorded; after completion the "LVL 1(2) state" function appears (see below)</li> </ul>
9	→ LVL 1(2) state	→ Level 1(2)	Indicates the currently measured level.
		→ Act. distance	Indicates the currently measured distance between the reference point of the sensor and the product surface. Check the value: <ul style="list-style-type: none"> <li>■ Value correct: → Basic setup completed. Return to the measured value display by pressing  several times</li> <li>■ Value not incorrect: → go back to step 7 ("distance correction")</li> </ul>
		→ Status	Used to enable, disable or delete a mapping

Step	Parameter set	Parameter	Remarks
<b>When using FDU90 with flooding protection tube: Parametrization of the flooding detection</b> → Details, see "Description of Instrument Functions" BA00290F			
10	Menu: → safety settings -> safety distance	→ Safety dist. sensor 1 → Safety dist. sensor 2	In order to detect flooding reliably when using the FDU90 sensor with a flooding protection tube, a safety distance must be defined slightly below the lower edge of the flooding protection tube.
11	Menu: → relay/controls -> relay allocation		Select the relay you want to use to indicate flooding.
12	→ Relay N	→ Function	1. Select "alarm diagnostics" 2. Select "diagnostics"
		→ Allocation	Select "safety distance channel 1/2". The relay is de-energized as soon as the level rises into the safety distance.

## 5.4.1 Application parameters

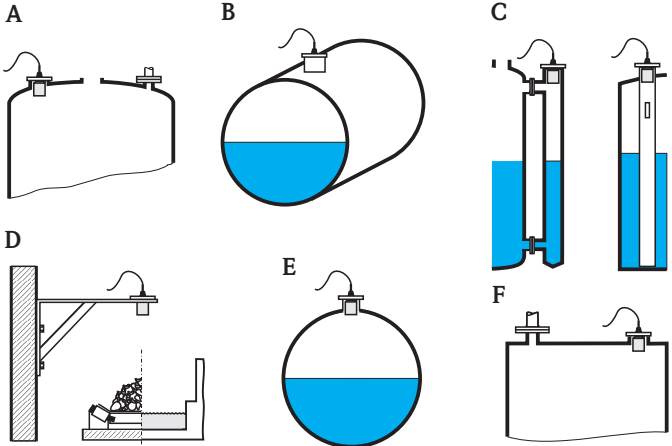Parameter	Selection/Remarks
"tank shape"	<p>Use this parameter to specify the tank shape of your application:</p> <p><b>Selection:</b></p> <ul style="list-style-type: none"> <li>■ dome ceiling (→ A)</li> <li>■ horizontal cyl. (→ B)</li> <li>■ bypass (→ C)</li> <li>■ stilling well (ultrasonic guide pipe) (→ D)</li> <li>■ no ceiling (→ D)</li> <li>■ sphere (→ E)</li> <li>■ flat ceiling (→ F)</li> </ul>  <p style="text-align: right; font-size: small;">L00-FMU30KAs-14-00-06-xx-001</p>
"medium property"	<p>Use this parameter to specify the type of medium. You have the following options:</p> <ul style="list-style-type: none"> <li>■ <b>Unknown (e.g. pasty media such as greases, creams, gels etc.)</b></li> <li>■ Liquid</li> <li>■ Solid, grain size &lt; 4 mm (fine)</li> <li>■ Solid, grain size &gt; 4 mm (coarse)</li> </ul> <p>If the medium does not fit into one of the groups, select "Unknown".</p>
"process conditions"	<p>Use this parameter to specify the process conditions of your application. The filters of the signal evaluation are automatically adjusted to the selected conditions. For this function, you have the following options → see the table:</p>

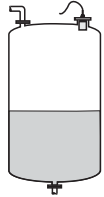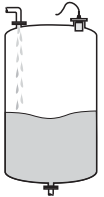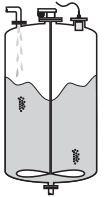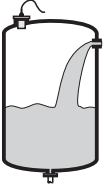
"process conditions"	for the following situations	Example	filter settings
standard liquid	for all fluid applications which do not fit in any of the following groups		The filters and output damping are set to average values.
calm surface	Storage tanks with immersion tube or bottom filling		The averaging filters and output damping are set to large values. -> stable measured value -> accurate measurement -> slow reaction time
turbulent surface	Storage/accumulation tanks with uneven surface due to free filling, mixing nozzles or small bottom stirrers		Special filters for stabilizing the input signal are activated. -> stable measured value -> medium reaction time
additional agitator	Moving surfaces (possibly with vortex formation) due to agitators		Special filters for stabilizing the input signal are set to large values. -> stable measured value -> medium reaction time
fast change	Rapid level change, particularly in small tanks		The averaging filters are set to small values. -> rapid reaction time -> possibly unstable measured value
standard solid	For all bulk solid applications which do not fit in any of the following groups.		The filter and output damping are set to average values.

"process conditions"	for the following situations	Example	filter settings
solid dusty	Dusty bulk solids		The averaging filters are set to detect even relatively weak signals.
conveyor belt	Bulk solids with rapid level change		The averaging filters are set to small values. -> rapid reaction time -> possibly unstable measured value
test: no filter	For service and diagnosis only		All filters are switched off.



## 5.4.2 Empty and full calibration



Parameter	Remarks
"empty calibration"	<p>Use this parameter to specify the empty distance E, i.e. the distance between the reference point of the sensor and the minimum level (zero point).</p> <p><b>Notice!</b> Value of zero will not be displayed, if zero point is set too low. If the zero point is set below the tank bottom, a level value greater than zero is displayed even when the tank is empty. The zero point should not be deeper than the point at which the ultrasonic wave impinges on the tank bottom.</p> <p>BD Blocking distance D Distance from reference point of the sensor to fluid surface E Empty distance F Span (full distance) L Level V Volume (or mass)</p>
"full calibration"	<p>Use this parameter to specify the span F, i.e. the distance from the minimum level to the maximum level. The maximum level may not project into the blocking distance.</p>
"blocking distance"	<p>Indicates the blocking distance of the respective sensor. The blocking distance is measured from the reference point of the respective sensor.</p> <p>Further information: Technical Information for Prosonic S FDU9x, document number TI00396F.</p>

### 5.4.3 Level N linearization

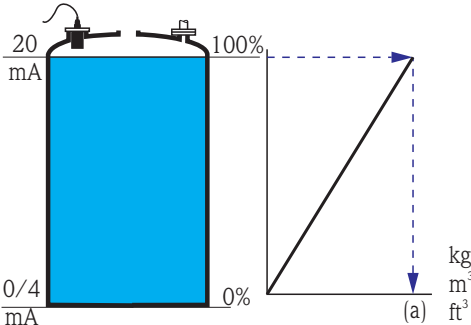Parameter	Selection/Remarks
"type"	<p>Number and type of the parameters in this set depend on the selected linearization type. Only the parameters "type" and "mode" are always present.</p> <p><b>Selection</b></p> <ul style="list-style-type: none"> <li>▪ None</li> </ul> <p>In this linearization type the measured level is not converted but displayed in the selected level unit (see <b>"unit level"</b>).</p> <hr/> <p><b>Selection</b></p> <ul style="list-style-type: none"> <li>▪ Linear</li> </ul> <p>In this linearization type the displayed level is linear to the measured level. The following additional parameters have to be specified.</p> <ul style="list-style-type: none"> <li>▪ Unit for the linearized value, e.g. kg, m<sup>3</sup>, ft<sup>3</sup>, ... ("<b>customer unit</b>")</li> <li>▪ Maximum capacity (a) of the vessel, measured in the customer unit ("<b>maximum scale</b>").</li> </ul> 

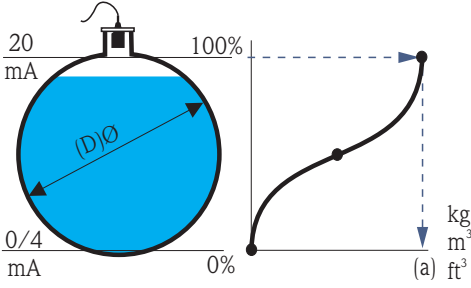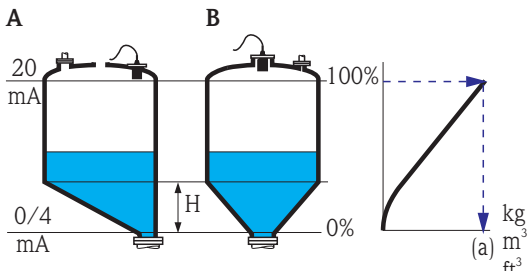

Parameter	Selection/Remarks
"type"	<p>In these linearization types the measured level is converted to the volume in a horizontal cylinder or a spherical tank.</p> <p><b>Selection</b></p> <ul style="list-style-type: none"> <li>▪ Horizontal cylinder <sup>1)</sup></li> <li>▪ Sphere</li> </ul> <p>The following additional parameters have to be specified:</p> <ul style="list-style-type: none"> <li>▪ Unit of the linearized value, e.g. kg, m<sup>3</sup>, ft<sup>3</sup>, ... ("<b>customer unit</b>")</li> <li>▪ Diameter (D) of the tank ("<b>diameter</b>")</li> <li>▪ Maximum capacity (a) of the tank, measured in the customer unit ("<b>maximum scale</b>")</li> </ul> 
	<p>In these linearization modes the measured level is converted to the volume in the respective type of vessel.</p> <p><b>Selection</b></p> <ul style="list-style-type: none"> <li>▪ Angled bottom (A)</li> <li>▪ Pyramid bottom (B)</li> <li>▪ Conical bottom (B)</li> </ul> <p>The following additional parameters have to be specified:</p> <ul style="list-style-type: none"> <li>▪ Unit for the linearized value, e.g. kg, m<sup>3</sup>, ft<sup>3</sup>, ... ("<b>customer unit</b>")</li> <li>▪ Intermediate height H according to the diagram ("<b>intermediate height</b>")</li> <li>▪ Maximum capacity (a) of the tank, measured in the customer unit ("<b>maximum scale</b>").</li> </ul> 

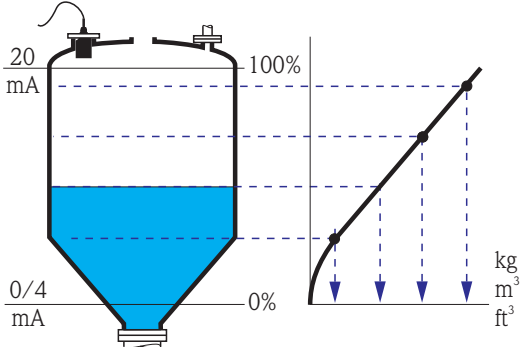Parameter	Selection/Remarks
"type"	<p>In this linearization mode the measured value is calculated from a linearization table. The table may consist of up to 32 pairs of values (level - volume). The table must be monotonically increasing or decreasing.</p> <p><b>Selection</b></p> <ul style="list-style-type: none"> <li>■ Table</li> </ul> <p>The following additional parameters have to be specified:</p> <ul style="list-style-type: none"> <li>■ Unit of the linearized value, e.g. kg, m<sup>3</sup>, ft<sup>3</sup>, ... ("<b>customer unit</b>")</li> <li>■ Linearization table ("<b>edit</b>")</li> </ul> 
"customer unit"	<p>Use this parameter to select the desired unit for the linearized values (e.g. kg, m<sup>3</sup>, ft<sup>3</sup>, ...). This unit is only indicated on the display. It does not cause a conversion of the measured value.</p> <p>If you want to type in a unit, select the option "customer specific".</p> <p>The parameter "customized text" appears, where you can enter an arbitrary unit (consisting of up to 5 alphanumeric characters).</p>
"edit"	<p>Use this parameter to enter, change or read a linearization table. There are the following options:</p> <p><b>Selection</b></p> <ul style="list-style-type: none"> <li>■ Read The table editor is opened. The existing table can be read but not changed.</li> <li>■ Manual The table editor is opened. Table values can be entered and changed. (→  59, "status table").</li> <li>■ Semi automatic The table editor is opened. The level is automatically read by the ProsonicS. The measured value (volume, weight or flow) must be entered by the user.</li> <li>■ Delete The linearization table is deleted.</li> </ul>

Parameter	Selection/Remarks																														
The table editor																															
<table border="1" style="width: 100%; border-collapse: collapse; margin-bottom: 10px;"> <thead> <tr> <th>No.</th> <th>Level</th> <th>Value</th> </tr> </thead> <tbody> <tr style="background-color: #cccccc;"> <td>1</td> <td>0,0000</td> <td>0,0000</td> </tr> <tr> <td>2</td> <td>0,0000</td> <td>0,0000</td> </tr> <tr> <td>3</td> <td>0,0000</td> <td>0,0000</td> </tr> <tr> <td>...</td> <td>0,0000</td> <td>0,0000</td> </tr> </tbody> </table> <p> <input type="checkbox"/> : go to next row  <input type="checkbox"/> : go to previous row  <input type="checkbox"/> : open marked row for editing                 </p> <p> <input type="checkbox"/> <input type="checkbox"/> Return to the previous step by this key combination.                 </p>	No.	Level	Value	1	0,0000	0,0000	2	0,0000	0,0000	3	0,0000	0,0000	...	0,0000	0,0000	<table border="1" style="width: 100%; border-collapse: collapse; margin-bottom: 10px;"> <thead> <tr> <th>No.</th> <th>Level</th> <th>Value</th> </tr> </thead> <tbody> <tr style="background-color: #cccccc;"> <td>1</td> <td>0,0000</td> <td>0,0000</td> </tr> <tr> <td>2</td> <td>0,0000</td> <td>0,0000</td> </tr> <tr> <td>3</td> <td>0,0000</td> <td>0,0000</td> </tr> <tr> <td>...</td> <td>0,0000</td> <td>0,0000</td> </tr> </tbody> </table> <p> <input type="checkbox"/> : navigate within the table  <input type="checkbox"/> : (for "Level" und "Value") open marked number for editing  <input type="checkbox"/> : (for "No.") open row editor                 </p> <div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"> <p><b>Row function</b></p> <ul style="list-style-type: none"> <li>- Delete row</li> <li>- Insert row → (before current row)</li> <li>- Move row → Query: new position</li> </ul> </div>	No.	Level	Value	1	0,0000	0,0000	2	0,0000	0,0000	3	0,0000	0,0000	...	0,0000	0,0000
No.	Level	Value																													
1	0,0000	0,0000																													
2	0,0000	0,0000																													
3	0,0000	0,0000																													
...	0,0000	0,0000																													
No.	Level	Value																													
1	0,0000	0,0000																													
2	0,0000	0,0000																													
3	0,0000	0,0000																													
...	0,0000	0,0000																													
"status table"	<p>Use this parameter to enable or disable the linearization table.</p> <p><b>Selection</b></p> <ul style="list-style-type: none"> <li>■ Enabled The table is used.</li> <li>■ Disabled The table is <b>not</b> used. The measured value is transferred to the output without linearization.</li> </ul>																														

L00-FMU90xxx-19-00-00-en-006

- 1) This option is only valid for horizontal cylinders without dome ceiling. For tanks with dome ceiling FieldCare can be used to calculate a linearization table and to upload it into the instrument.

### 5.4.4 Interference echo suppression: Basic principles

Parameter	Remarks
"check value" "distance mapping"	The "check value" and "distance mapping" parameters are used to configure the interference echo suppression of the Prosonic S. The following picture shows the operating principle of the interference echo suppression:
<p style="text-align: right; font-size: small;">L00-FMU90xxx-19-00-00-yy-017</p> <p><b>A</b> The envelope curve (a) contains the level echo and an interference echo. Without interference echo suppression, the interference echo is evaluated.</p> <p><b>B</b> The interference echo suppression generates the mapping curve (b). This curve suppresses all echoes within the range of mapping (c).</p> <p><b>C</b> From now on, only those echoes are evaluated, which are higher than the mapping curve. The interference echo is below the mapping curve and is therefore ignored.</p>	

**i** In order to include all interference echoes, the interference echo suppression should be performed with the level as low as possible. If during commissioning the vessel can not be sufficiently emptied, it is advisable to repeat the interference echo suppression at a later point of time (as soon as the level reaches nearly 0%)









71364921

[www.addresses.endress.com](http://www.addresses.endress.com)

---