



Operating Instructions

Micropilot FMR67

HART

Free space radar

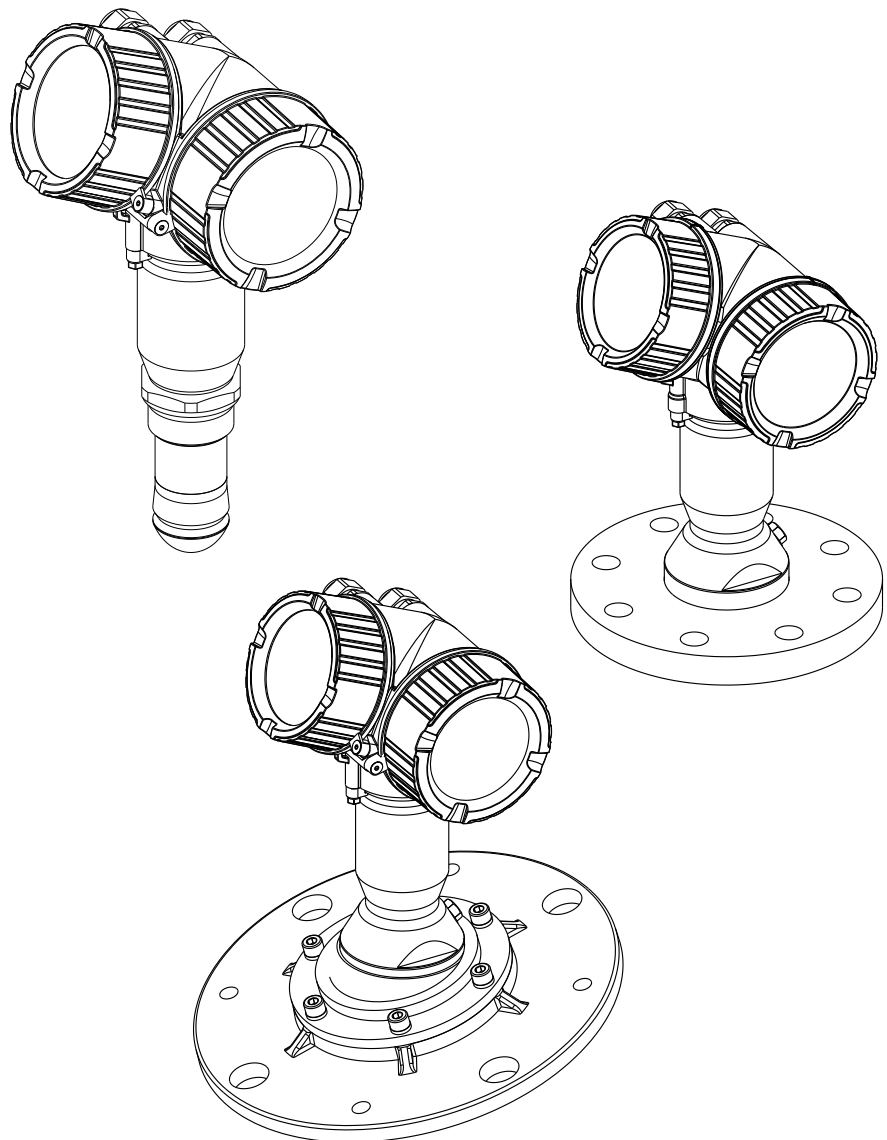

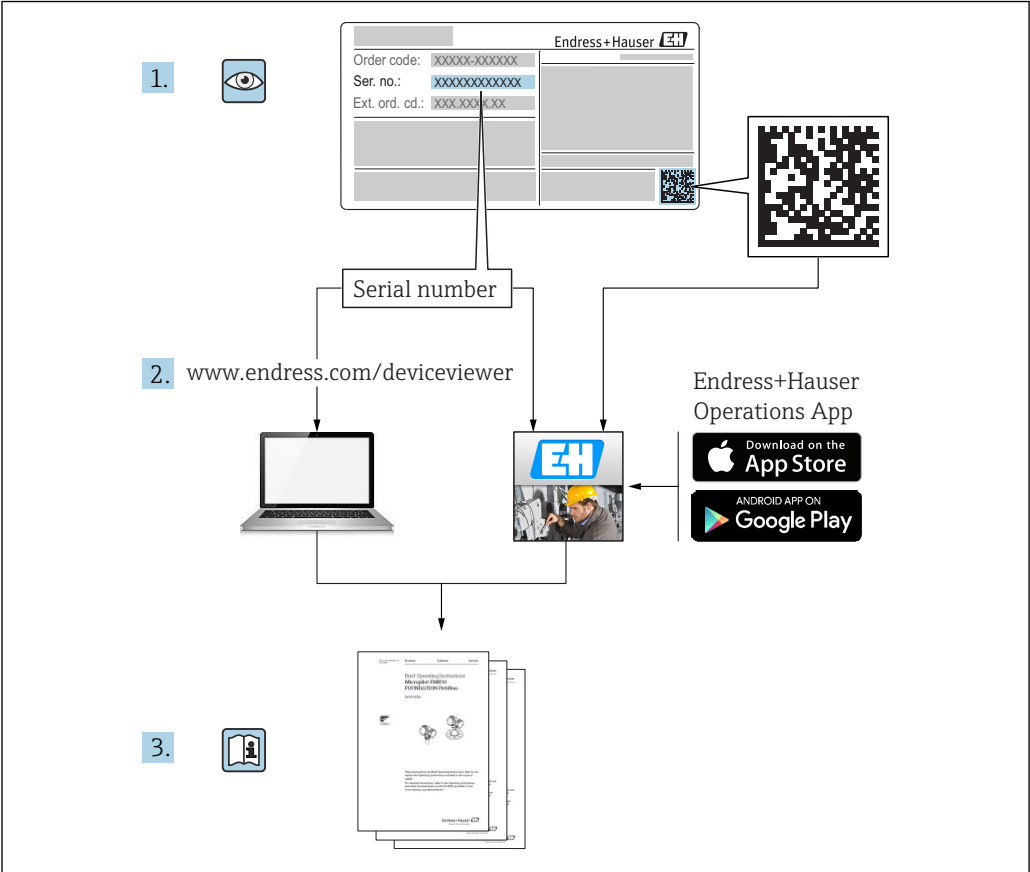

A0023555

Table of contents

1	Important document information	5		
1.1	Document function	5		
1.2	Symbols	5		
1.2.1	Safety symbols	5		
1.2.2	Electrical symbols	5		
1.2.3	Tool symbols	6		
1.2.4	Symbols for certain types of information	6		
1.2.5	Symbols in graphics	6		
1.2.6	Symbols at the device	7		
1.3	Documentation	7		
1.4	Terms and abbreviations	8		
1.5	Registered trademarks	9		
2	Basic safety instructions	10		
2.1	Requirements for the personnel	10		
2.2	Designated use	10		
2.3	Workplace safety	11		
2.4	Operational safety	11		
2.5	Product safety	11		
2.5.1	CE mark	11		
2.5.2	EAC conformity	11		
2.6	Safety Instructions (XA)	12		
3	Product description	14		
3.1	Product design	14		
3.1.1	Micropilot FMR67	14		
3.1.2	Electronics housing	15		
4	Incoming acceptance and product identification	16		
4.1	Incoming acceptance	16		
4.2	Product identification	16		
4.2.1	Nameplate	17		
5	Storage, Transport	18		
5.1	Storage conditions	18		
5.2	Transporting the product to the measuring point	18		
6	Installation	19		
6.1	Installation conditions	19		
6.1.1	Mounting position	19		
6.1.2	Internal container fittings	20		
6.1.3	Avoiding interference echoes	21		
6.1.4	Optimization options	21		
6.1.5	Beam angle	22		
6.2	Installation: Drip-off antenna PTFE 50 mm / 2"	23		
6.2.1	Aligning the antenna axis	23		
6.2.2	Radial alignment of the antenna	23		
6.2.3	Information concerning nozzles	24		
6.2.4	Information concerning threaded connections	24		
6.3	Installation: flush mount antenna	24		
6.3.1	Aligning the antenna axis	24		
6.3.2	Radial alignment of the antenna	25		
6.3.3	Information concerning nozzles	25		
6.4	Purge air connection for FMR67	26		
6.4.1	Purge air adapter for Drip-off antennas	26		
6.4.2	Integrated purge air connection for flush-mounted antennas	26		
6.4.3	Use	27		
6.5	Container with heat insulation	27		
6.6	Turning the transmitter housing	28		
6.7	Turning the display module	28		
6.8	Post-installation check	29		
7	Electrical connection	30		
7.1	Connection conditions	30		
7.1.1	Terminal assignment	30		
7.1.2	Cable specification	35		
7.1.3	Device plug connectors	36		
7.1.4	Supply voltage	37		
7.1.5	Overvoltage protection	38		
7.1.6	Connecting the measuring device	39		
7.1.7	Post-connection check	40		
8	Operation options	42		
8.1	Overview	42		
8.1.1	Local operation	42		
8.1.2	Operation with remote display and operating module FHX50	43		
8.1.3	Remote operation	43		
8.2	Structure and function of the operating menu	45		
8.2.1	Structure of the operating menu	45		
8.2.2	User roles and related access authorization	47		
8.2.3	Write protection via access code	48		
8.2.4	Disabling write protection via access code	49		
8.2.5	Deactivation of the write protection via access code	49		
8.2.6	Write protection via write protection switch	49		
8.2.7	Enabling and disabling the keypad lock	52		
8.3	Display and operating module	53		
8.3.1	Display appearance	53		
8.3.2	Operating elements	56		
8.3.3	Entering numbers and text	57		
8.3.4	Opening the context menu	59		

8.3.5	Envelope curve on the display and operating module	60	14.1.3	Replacement of an electronics module	81
9	System integration via HART protocol	61	14.1.4	Replacement of a device	81
9.1	Overview of the Device Description files (DD)	61	14.2	Spare parts	82
9.2	Measured values via HART protocol	61	14.3	Return	82
10	Commissioning via wizard	62	14.4	Disposal	82
11	Commissioning via operating menu	63	15	Accessories	83
11.1	Installation and function check	63	15.1	Device-specific accessories	83
11.2	Setting the operating language	63	15.1.1	Weather protection cover	83
11.3	Configuration of a level measurement	64	15.1.2	Adjustable flange seal	84
11.4	Recording the reference curve	66	15.1.3	Mounting bracket adjustable	86
11.5	Configuration of the on-site display	67	15.1.4	Remote display FHX50	87
11.5.1	Factory settings of the on-site display	67	15.1.5	Overvoltage protection	88
11.5.2	Adjustment of the on-site display	67	15.2	Communication-specific accessories	89
11.6	Configuration of the current outputs	67	15.3	Service-specific accessories	90
11.6.1	Factory setting of the current outputs	67	15.4	System components	90
11.6.2	Adjustment of the current outputs	67	16	Operating menu	91
11.7	Configuration management	68	16.1	Overview of the operating menu (display module)	91
11.8	Protection of the settings against unauthorized changes	69	16.2	Overview of the operating menu (operating tool)	98
12	Diagnostics and troubleshooting ...	70	16.3	"Setup" menu	104
12.1	General trouble shooting	70	16.3.1	"Mapping" wizard	111
12.1.1	General errors	70	16.3.2	"Advanced setup" submenu	113
12.1.2	Parametrization errors	70	16.4	"Diagnostics" menu	156
12.2	Diagnostic information on local display	72	16.4.1	"Diagnostic list" submenu	158
12.2.1	Diagnostic message	72	16.4.2	"Event logbook" submenu	159
12.2.2	Calling up remedial measures	74	16.4.3	"Device information" submenu	160
12.3	Diagnostic event in the operating tool	75	16.4.4	"Measured values" submenu	163
12.4	Diagnostic list	75	16.4.5	"Data logging" submenu	165
12.5	Overview of diagnostic events	76	16.4.6	"Simulation" submenu	168
12.6	Event logbook	77	16.4.7	"Device check" submenu	174
12.6.1	Event history	77	16.4.8	"Heartbeat" submenu	175
12.6.2	Filtering the event logbook	78	Index	176	
12.6.3	Overview of information events	78			
12.7	Firmware history	79			
13	Maintenance	80			
13.1	Exterior cleaning	80			
13.2	Replacing seals	80			
14	Repairs	81			
14.1	General information on repairs	81			
14.1.1	Repair concept	81			
14.1.2	Repairs to Ex-approved devices	81			





1 Important document information

1.1 Document function







These Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.

1.2 Symbols






1.2.1 Safety symbols

Symbol	Meaning
	DANGER! This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.
	WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.
	CAUTION! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.
	NOTE! This symbol contains information on procedures and other facts which do not result in personal injury.













1.2.2 Electrical symbols

Symbol	Meaning
	Direct current
	Alternating current
	Direct current and alternating current
	Ground connection A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
	Protective ground connection A terminal which must be connected to ground prior to establishing any other connections.
	Equipotential connection A connection that has to be connected to the plant grounding system: This may be a potential equalization line or a star grounding system depending on national or company codes of practice.


1.2.3 Tool symbols



Symbol	Meaning
 A0013442	Torx screwdriver
 A0011220	Flat blade screwdriver
 A0011219	Cross-head screwdriver
 A0011221	Allen key
 A0011222	Hexagon wrench

1.2.4 Symbols for certain types of information



Symbol	Meaning
	Permitted Procedures, processes or actions that are permitted.
	Preferred Procedures, processes or actions that are preferred.
	Forbidden Procedures, processes or actions that are forbidden.
	Tip Indicates additional information.
	Reference to documentation
	Reference to page
	Reference to graphic
	Notice or individual step to be observed
	Series of steps
	Result of a step
	Help in the event of a problem
	Visual inspection

1.2.5 Symbols in graphics

Symbol	Meaning
1, 2, 3 ...	Item numbers
	Series of steps
A, B, C, ...	Views
A-A, B-B, C-C, ...	Sections


Symbol	Meaning
	Hazardous area Indicates a hazardous area.
	Safe area (non-hazardous area) Indicates the non-hazardous area.

1.2.6 Symbols at the device

Symbol	Meaning
	Safety instructions Observe the safety instructions contained in the associated Operating Instructions.
	Temperature resistance of the connection cables Specifies the minimum value of the temperature resistance of the connection cables.

1.3 Documentation

Document	Purpose and content of the document
Technical Information TI01304F	Planning aid for your device The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.
Brief Operating Instructions KA01253F	Guide that takes you quickly to the 1st measured value The Brief Operating Instructions contain all the essential information from incoming acceptance to initial commissioning.
Description of Device Parameters GP01101F	Reference for your parameters The document provides a detailed explanation of each individual parameter in the operating menu. The description is aimed at those who work with the device over the entire life cycle and perform specific configurations.
Special Documentation SD01087F	Functional Safety Manual The document is part of the Operating Instructions and serves as a reference for application-specific parameters and notes.
Special Documentation SD01870F	Manual for Heartbeat Verification and Heartbeat Monitoring The document contains a description of the additional parameters and technical data that are available with the Heartbeat Verification and Heartbeat Monitoring application packages.

 For an overview of the scope of the associated Technical Documentation, refer to the following:

- The *W@M Device Viewer*: enter the serial number from the nameplate (www.endress.com/deviceviewer)
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

1.4 Terms and abbreviations

Term/abbreviation	Explanation
BA	Document type "Operating Instructions"
KA	Document type "Brief Operating Instructions"
TI	Document type "Technical Information"
SD	Document type "Special Documentation"
XA	Document type "Safety Instructions"
PN	Nominal pressure
MWP	Maximum Working Pressure The MWP can also be found on the nameplate.
ToF	Time of Flight
FieldCare	Scalable software tool for device configuration and integrated plant asset management solutions
DeviceCare	Universal configuration software for Endress+Hauser HART, PROFIBUS, FOUNDATION Fieldbus and Ethernet field devices
DTM	Device Type Manager
DD	Device Description for HART communication protocol
DC	Relative dielectric constant ϵ_r
Operating tool	The term "operating tool" is used in place of the following operating software: FieldCare / DeviceCare, for operation via HART communication and PC
BD	Blocking Distance; no signals are analyzed within the BD.

1.5 Registered trademarks

HART®

Registered trademark of the HART Communication Foundation, Austin, USA

KALREZ®, VITON®

Registered trademark of DuPont Performance Elastomers L.L.C., Wilmington, USA

TEFLON®

Registered trademark of E.I. DuPont de Nemours & Co., Wilmington, USA

2 Basic safety instructions

2.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- ▶ Trained, qualified specialists must have a relevant qualification for this specific function and task.
- ▶ Are authorized by the plant owner/operator.
- ▶ Are familiar with federal/national regulations.
- ▶ Before starting work, read and understand the instructions in the manual and supplementary documentation as well as the certificates (depending on the application).
- ▶ Follow instructions and comply with basic conditions.

The operating personnel must fulfill the following requirements:

- ▶ Are instructed and authorized according to the requirements of the task by the facility's owner-operator.
- ▶ Follow the instructions in this manual.

2.2 Designated use

Application and media

The measuring device described in these Operating Instructions is intended for continuous, non-contact level measurement primarily in bulk solids. Because of its operating frequency of approx. 80 GHz, a maximum radiated peak power of 6.3 mW and an average power output of 63 μ W, unrestricted use outside of closed, metallic vessels is also permitted (for example over heaps). Operation does not pose any danger whatsoever to humans and animals.

If the limit values specified in the "Technical data" and the conditions listed in the instructions and additional documentation are observed, the measuring device may be used for the following measurements only:

- ▶ Measured process variables: level, distance, signal strength
- ▶ Calculable process variables: volume or mass in any shape of vessel

To ensure that the measuring device remains in proper condition for the operation time:

- ▶ Use the measuring device only for media against which the process-wetted materials are adequately resistant.
- ▶ Observe the limit values in "Technical data".

Incorrect use

The manufacturer is not liable for damage caused by improper or non-designated use.

Verification for borderline cases:

- ▶ For special fluids and fluids for cleaning, Endress+Hauser is glad to provide assistance in verifying the corrosion resistance of fluid-wetted materials, but does not accept any warranty or liability.

Residual risks

Due to heat transfer from the process as well as power loss in the electronics, the temperature of the electronics housing and the assemblies it contains (e.g. display module, main electronics module and I/O electronics module) may rise to 80 °C (176 °F). When in operation, the sensor may reach a temperature close to the medium temperature.

Danger of burns from contact with surfaces!

- ▶ For elevated fluid temperature, ensure protection against contact to prevent burns.

2.3 Workplace safety

For work on and with the device:

- ▶ Wear the required personal protective equipment according to federal/national regulations.

2.4 Operational safety

Risk of injury.

- ▶ Operate the device in proper technical condition and fail-safe condition only.
- ▶ The operator is responsible for interference-free operation of the device.

Conversions to the device

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers.

- ▶ If, despite this, modifications are required, consult with the manufacturer.

Repair

To ensure continued operational safety and reliability,

- ▶ Carry out repairs on the device only if they are expressly permitted.
- ▶ Observe federal/national regulations pertaining to repair of an electrical device.
- ▶ Use original spare parts and accessories from the manufacturer only.

Hazardous area

To eliminate a danger for persons or for the facility when the device is used in the hazardous area (e.g. explosion protection, pressure vessel safety):

- ▶ Based on the nameplate, check whether the ordered device is permitted for the intended use in the hazardous area.
- ▶ Observe the specifications in the separate supplementary documentation that is an integral part of these Instructions.

2.5 Product safety

This measuring device is designed in accordance with good engineering practice to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate. It meets general safety standards and legal requirements.

2.5.1 CE mark

The measuring system meets the legal requirements of the applicable EC guidelines. These are listed in the corresponding EC Declaration of Conformity together with the standards applied.

Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.

2.5.2 EAC conformity

The measuring system meets the legal requirements of the applicable EAC guidelines. These are listed in the corresponding EAC Declaration of Conformity together with the standards applied.

Endress+Hauser confirms successful testing of the device by affixing to it the EAC mark.

2.6 Safety Instructions (XA)

Depending on the approval, the following Safety Instructions (XA) are supplied with the device. They are an integral part of the Operating Instructions.

Feature 010	Approval	Feature 020 "Power Supply; Output"				
		A ¹⁾	B ²⁾	C ³⁾	E ^{4)/G⁵⁾}	K ^{6)/L⁷⁾}
BA	ATEX II 1G Ex ia IIC T6 Ga	XA01549F	XA01549F	XA01549F	XA01557F	-
BB	ATEX II 1/2G Ex ia IIC T6 Ga/Gb	XA01549F	XA01549F	XA01549F	XA01557F	-
BC	ATEX II 1/2G Ex ia/db [ia Ga] IIC T6 Ga/Gb	XA01552F	XA01552F	XA01552F	XA01560F	XA01552F
BD	ATEX II 1/2/3G Ex ia/ic [ia Ga] IIC T6 Ga/Gb/Gc	XA01550F	XA01550F	XA01550F	XA01558F	-
BE	ATEX II 1D Ex ta IIIC Da	* 8)	* 8)	* 8)	XA01562F	* 8)
BF	ATEX II 1/2D Ex ta/tb IIIC T85°C Da/Db	XA01554F	XA01554F	XA01554F	XA01562F	XA01554F
BG	ATEX II 3G Ex ec IIC T6 Gc	XA01551F	XA01551F	XA01551F	XA01559F	-
BH	ATEX II 3G Ex ic IIC T6 Gc	XA01551F	XA01551F	XA01551F	XA01559F	-
BL	ATEX II 1/2/3G Ex ia/ec [ia Ga] IIC T6 Ga/Gb/Gc	XA01550F	XA01550F	XA01550F	XA01558F	XA01550F
B2	ATEX II 1/2G Ex ia IIC T6 Ga/Gb, 1/2D Ex ia IIIC T85°C Da/Db	XA01555F	XA01555F	XA01555F	XA01563F	-
B3	ATEX II 1/2G Ex ia/db [ia Ga] IIC T6, Ga/Gb 1/2D Ex ta/tb IIIC T85°C Da/Db	XA01556F	XA01556F	XA01556F	XA01564F	XA01556F
CB	CSA C/US IS Cl.I Div.1 Gr.A-D	* 8)	* 8)	* 8)	* 8)	-
CD	CSA C/US DIP Cl.II,III Div.1 Gr.E-G	* 8)	* 8)	* 8)	* 8)	* 8)
C2	CSA C/US IS Cl.I,II,III Div.1 Gr.A-G, NI Cl.1 Div.2, Ex ia	* 8)	* 8)	* 8)	* 8)	-
C3	CSA C/US XP Cl.I,II,III Div.1 Gr.A-G, NI Cl.1 Div.2, Ex db	* 8)	* 8)	* 8)	* 8)	* 8)
FA	FM IS Cl.I Div.1 Gr.A-D	* 8)	* 8)	* 8)	* 8)	-
FB	FM IS Cl.I,II,III Div.1 Gr.A-G, AEx ia, NI Cl.1 Div.2	* 8)	* 8)	* 8)	* 8)	-
FC	FM XP Cl.I Div.1 Gr.A-D	* 8)	* 8)	* 8)	* 8)	* 8)
FD	FM XP Cl.I,II,III Div.1 Gr.A-G, AEx db, NI Cl.1 Div.2	* 8)	* 8)	* 8)	* 8)	* 8)
FE	FM DIP Cl.II,III Div.1 Gr.E-G	* 8)	* 8)	* 8)	* 8)	* 8)
GA	EAC Ex ia IIC T6 Ga	* 8)	* 8)	* 8)	* 8)	-
GB	EAC Ex ia IIC T6 Ga/Gb	* 8)	* 8)	* 8)	* 8)	-
GC	EAC Ex ia/db [ia Ga] IIC T6 Ga/Gb	* 8)	* 8)	* 8)	* 8)	* 8)
GE	EAC Ex ta IIIC Da	* 8)	* 8)	* 8)	* 8)	* 8)
GF	EAC Ex ta/tb IIIC T85°C Da/Db	* 8)	* 8)	* 8)	* 8)	* 8)
GR	Non-hazardous area + EAC marking	* 8)	* 8)	* 8)	* 8)	* 8)
IA	IEC Ex ia IIC T6 Ga	XA01549F	XA01549F	XA01549F	XA01557F	-
IB	IEC Ex ia IIC T6 Ga/Gb	XA01549F	XA01549F	XA01549F	XA01557F	-
IC	IEC Ex ia/db [ia Ga] IIC T6 Ga/Gb	XA01552F	XA01552F	XA01552F	XA01560F	XA01552F
ID	IEC Ex ia/ic [ia Ga] IIC T6 Ga/Gb/Gc	XA01550F	XA01550F	XA01550F	XA01558F	-
IE	IEC Ex ta IIIC Da	* 8)	* 8)	* 8)	XA01562F	* 8)
IF	IEC Ex ta/tb IIIC T85°C Da/Db	XA01554F	XA01554F	XA01554F	XA01562F	XA01554F
IG	IEC Ex ec IIC T6 Gc	XA01551F	XA01551F	XA01551F	XA01559F	XA01551F
IH	IEC Ex ic IIC T6 Gc	XA01551F	XA01551F	XA01551F	XA01559F	-
IL	IEC Ex ia/ec [ia Ga] IIC T6 Ga/Gb/Gc	XA01550F	XA01550F	XA01550F	XA01558F	-
I2	IEC Ex ia IIC T6 Ga/Gb, Ex ia IIIC T85°C Da/Db	XA01555F	XA01555F	XA01555F	XA01563F	-
I3	IEC Ex ia/db [ia Ga] IIC T6 Ga/Gb, Ex ta/tb IIIC T85°C Da/Db	XA01556F	XA01556F	XA01556F	XA01564F	XA01556F

Feature 010	Approval	Feature 020 "Power Supply; Output"				
		A ¹⁾	B ²⁾	C ³⁾	E ⁴⁾ /G ⁵⁾	K ⁶⁾ /L ⁷⁾
KA	KC Ex ia IIC T6 Ga	* 8)	* 8)	* 8)	* 8)	-
KB	KC Ex ia IIC T6 Ga/Gb	* 8)	* 8)	* 8)	* 8)	-
KC	KC Ex ia/db [ia Ga] IIC T6 Ga/Gb	* 8)	* 8)	* 8)	* 8)	* 8)
MA	INMETRO Ex ia IIC T6 Ga	* 8)	* 8)	* 8)	* 8)	-
ME	INMETRO Ex ta IIIC Da	* 8)	* 8)	* 8)	* 8)	* 8)
MH	INMETRO Ex ic IIC T6 Gc	* 8)	* 8)	* 8)	* 8)	-
NA	NEPSI Ex ia IIC T6 Ga	* 8)	* 8)	* 8)	* 8)	-
NB	NEPSI Ex ia IIC T6 Ga/Gb	* 8)	* 8)	* 8)	* 8)	-
NC	NEPSI Ex ia/db [ia Ga] IIC T6 Ga/Gb	* 8)	* 8)	* 8)	* 8)	* 8)
NF	NEPSI DIP A20/21 T85...90°C IP66	* 8)	* 8)	* 8)	* 8)	* 8)
NG	NEPSI Ex ec IIC T6 Gc	* 8)	* 8)	* 8)	* 8)	* 8)
NH	NEPSI Ex ic IIC T6 Gc	* 8)	* 8)	* 8)	* 8)	-
N2	NEPSI Ex ia IIC T6 Ga/Gb, Ex iaD 20/21 T85...90°C	* 8)	* 8)	* 8)	* 8)	-
N3	NEPSI Ex d[ia] IIC T6 Ga/Gb, DIP A20/21 T85...90°C IP66	* 8)	* 8)	* 8)	* 8)	* 8)
8A	FM/CSA IS+XP Cl.I,II,III Div.1 Gr.A-G	* 8)	* 8)	* 8)	* 8)	-

- 1) 2-wire; 4-20mA HART
- 2) 2-wire; 4-20mA HART, switch output
- 3) 2-wire; 4-20mA HART, 4-20mA
- 4) 2-wire; FOUNDATION Fieldbus, switch output
- 5) 2-wire; PROFIBUS PA, switch output
- 6) 4-wire 90-253VAC; 4-20mA HART
- 7) 4-wire 10.4-48VDC; 4-20mA HART
- 8) in preparation



The nameplate indicates the Safety Instructions (XA) that are relevant to the device.

If the device is prepared for the remote display FHX50 (product structure: feature 030: Display, Operation", option L or M), the Ex marking of some certificates changes according to the following table¹⁾:

Feature 010 ("Approval")	Feature 030 ("Display, Operation")	Ex marking
B3	L ¹⁾	II 1/2 G Ex db [ia] IIC T6 Ga/Gb, II 1/2 D Ex ta [ia Db] IIIC Txx°C Da/Db
I3	L ²⁾	Ex db [ia] IIC T6 Ga/Gb, Ex ta [ia Db] IIIC Txx°C Da/Db


- 1) 4-wire 10.4-48VDC; 4-20mA HART
- 2) 4-wire 10.4-48VDC; 4-20mA HART

1) The marking of certificates not mentioned in this table are not affected by the FHX50.

3 Product description

3.1 Product design


3.1.1 Micropilot FMR67

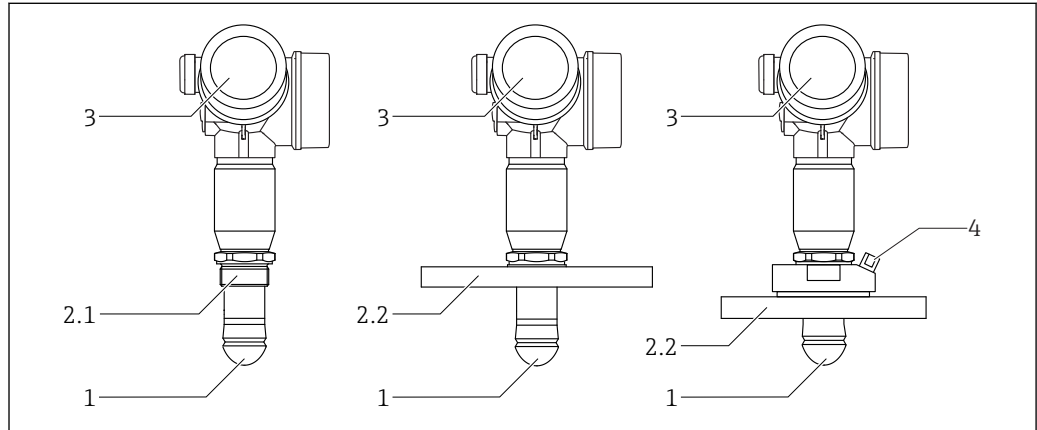

A0032714

1 Design of the Micropilot FMR67

- 1 Drip-off antenna PTFE
- 2.1 Process connection (Thread)
- 2.2 Process connection (Flange)
- 3 Electronics housing
- 4 Purge air connection

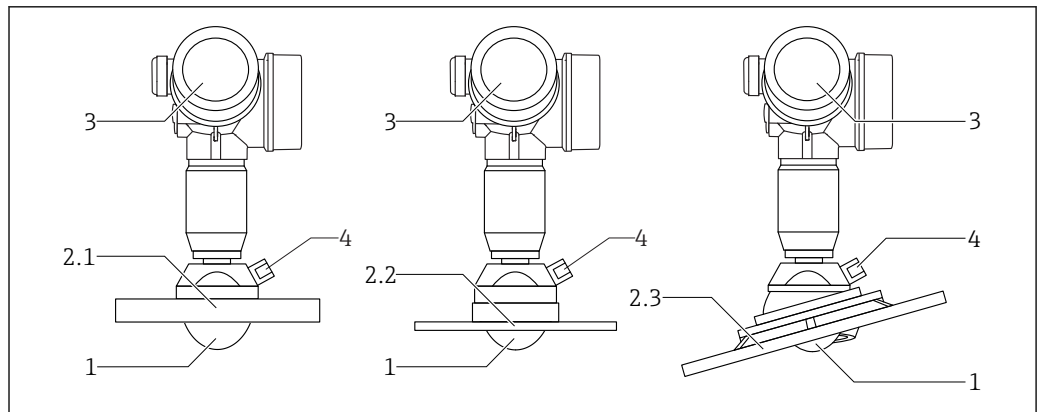


A0032782

2 Design of the Micropilot FMR67

- 1 PTFE antenna
- 2.1 Process connection (Flange)
- 2.2 Process connection (UNI-Flange)
- 2.3 Process connection (Flange with alignment device)
- 3 Electronics housing
- 4 Purge air connection

3.1.2 Electronics housing

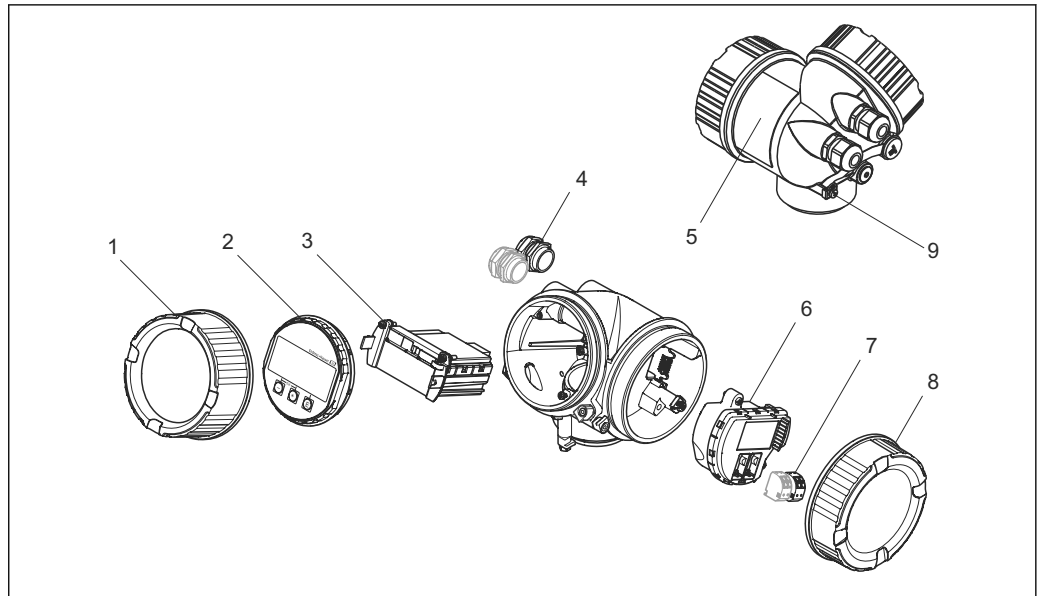

A0012422

3 Design of the electronics housing

- 1 Electronics compartment cover
- 2 Display module
- 3 Main electronics module
- 4 Cable glands (1 or 2, depending on instrument version)
- 5 Nameplate
- 6 I/O electronics module
- 7 Terminals (pluggable spring terminals)
- 8 Connection compartment cover
- 9 Grounding terminal

4 Incoming acceptance and product identification

4.1 Incoming acceptance

Check the following during incoming acceptance:

- Are the order codes on the delivery note and the product sticker identical?
- Are the goods undamaged?
- Do the nameplate data match the ordering information on the delivery note?
- Is the DVD with the operating tool present?
If required (see nameplate): Are the safety instructions (XA) present?



If one of these conditions does not apply, please contact your Endress+Hauser sales office.

4.2 Product identification


The following options are available for identification of the measuring device:

- Nameplate specifications
- Extended order code with breakdown of the device features on the delivery note
- Enter the serial number on the nameplate into *W@M Device Viewer* (www.endress.com/deviceviewer): all the information about the measuring device is displayed.
- Enter the serial number on the nameplate into the *Endress+Hauser Operations App* or scan the 2-D matrix code (QR code) on the nameplate with the *Endress+Hauser Operations App*: all the information about the measuring device is displayed.

For an overview of the scope of the associated Technical Documentation, refer to the following:

- The *W@M Device Viewer*: enter the serial number from the nameplate (www.endress.com/deviceviewer)
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

4.2.1 Nameplate

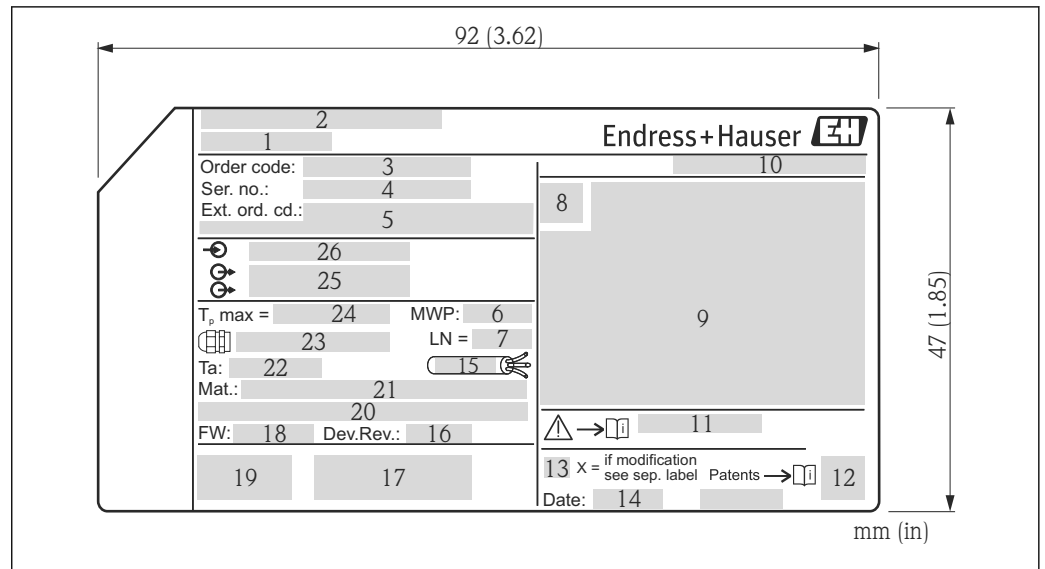

4 Nameplate of the Micropilot

- 1 Device name
- 2 Manufacturer's address
- 3 Order code
- 4 Serial number (ser. no.)
- 5 Extended order code (Ext. ord. cd.)
- 6 Process pressure
- 7 Antenna length (for FMR51 with variable antenna extension) reference length
- 8 Certificate symbol
- 9 Certificate and approval relevant data
- 10 Degree of protection: e.g. IP, NEMA
- 11 Document number of the Safety Instructions: e.g. XA, ZD, ZE
- 12 2-D matrix code (QR code)
- 13 Modification mark
- 14 Manufacturing date: year-month
- 15 Temperature resistance of cable
- 16 Device revision (Dev.Rev.)
- 17 Additional information about the device version (certificates, approvals, communication protocol)
- 18 Firmware version (FW)
- 19 CE mark, C-Tick
- 20 Profibus PA: Profile Version; FOUNDATION Fieldbus: Device ID
- 21 Materials in contact with process
- 22 Permitted ambient temperature (T_a)
- 23 Size of the cable gland thread
- 24 Maximum process temperature
- 25 Signal outputs
- 26 Supply voltage

i Up to 33 characters of the extended order code are indicated on the nameplate. If the extended order code contains additional characters, these cannot be displayed.

However, the complete extended order code can also be displayed via the device operating menu: **Extended order code 1 to 3** parameter

5 Storage, Transport

5.1 Storage conditions

- Permitted storage temperature: -40 to +80 °C (-40 to +176 °F)
- Use original packaging.


5.2 Transporting the product to the measuring point

NOTICE

Housing or sensor may become damaged or pull off.

Risk of injury!

- ▶ Transport the measuring device to the measuring point in its original packaging or by the process connection.
- ▶ Always secure lifting equipment (slings, eyes, etc.) at the process connection and never lift the device by the electronic housing or sensor. Pay attention to the center of gravity of the device so that it does not tilt or slip unintentionally.
- ▶ Follow the safety instructions and transport conditions for devices over 18 kg (39.6 lbs), (IEC61010).

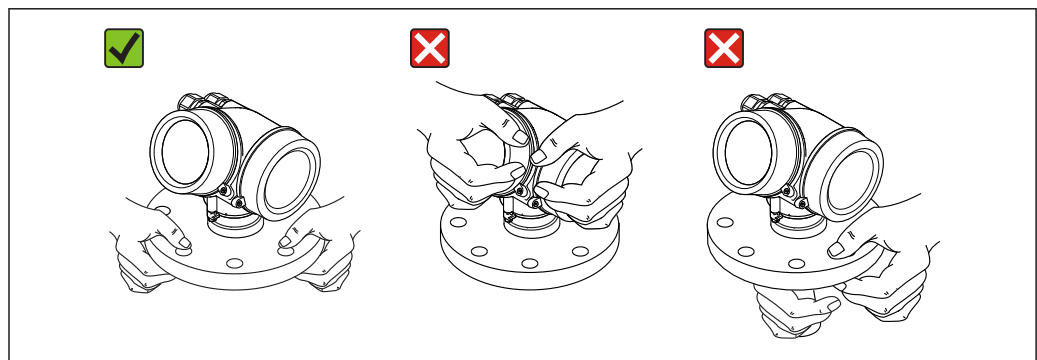


A0032300

6 Installation

6.1 Installation conditions


6.1.1 Mounting position

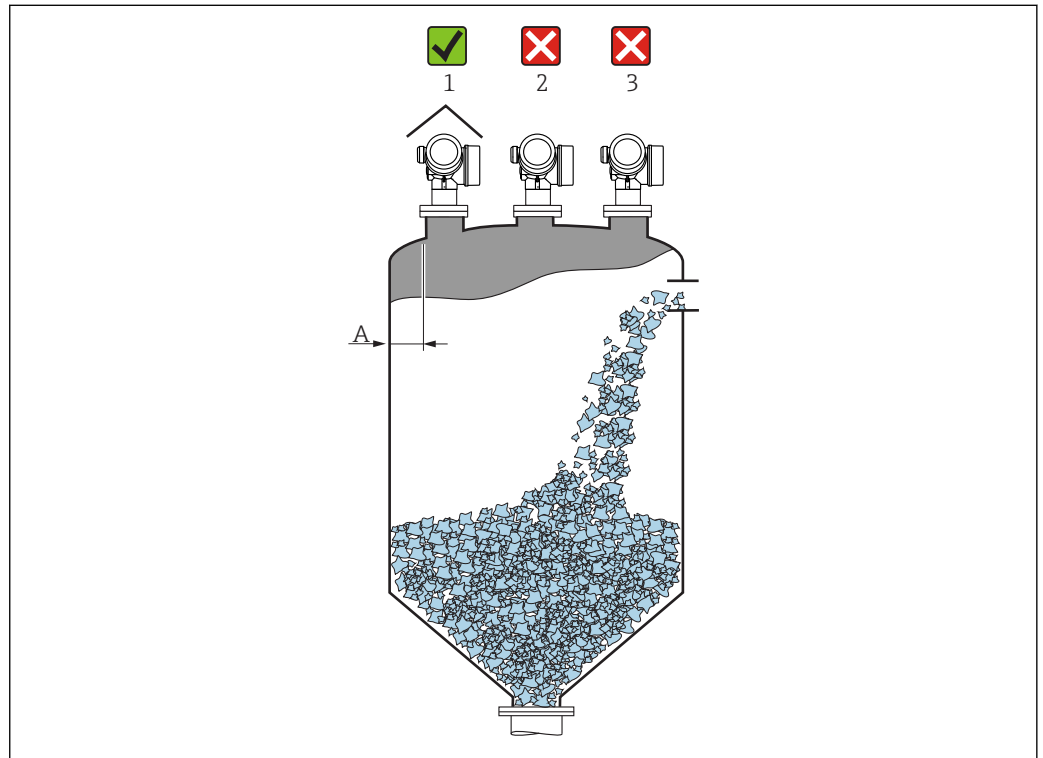

A0016883

- Recommended distance **A** wall - nozzle outer edge: ~ 1/6 of the container diameter. However, the device must not under any circumstances be mounted closer than 20 cm (7.87 in) to the container wall.
If the container wall is not smooth (corrugated iron, welding seams, joints, etc.) it is recommended to maintain the largest possible distance from the wall. Where necessary use an alignment unit to avoid interference reflections from the container wall. → 23
- Not in the center (2) as interference can cause signal loss.
- Not above the filling curtain (3).
- The use of a weather protection cover (1) is recommended to protect the transmitter from direct sunlight or rain.
- In applications with strong dust emissions, the integrated purge air connection can prevent the antenna from becoming clogged .


6.1.2 Internal container fittings

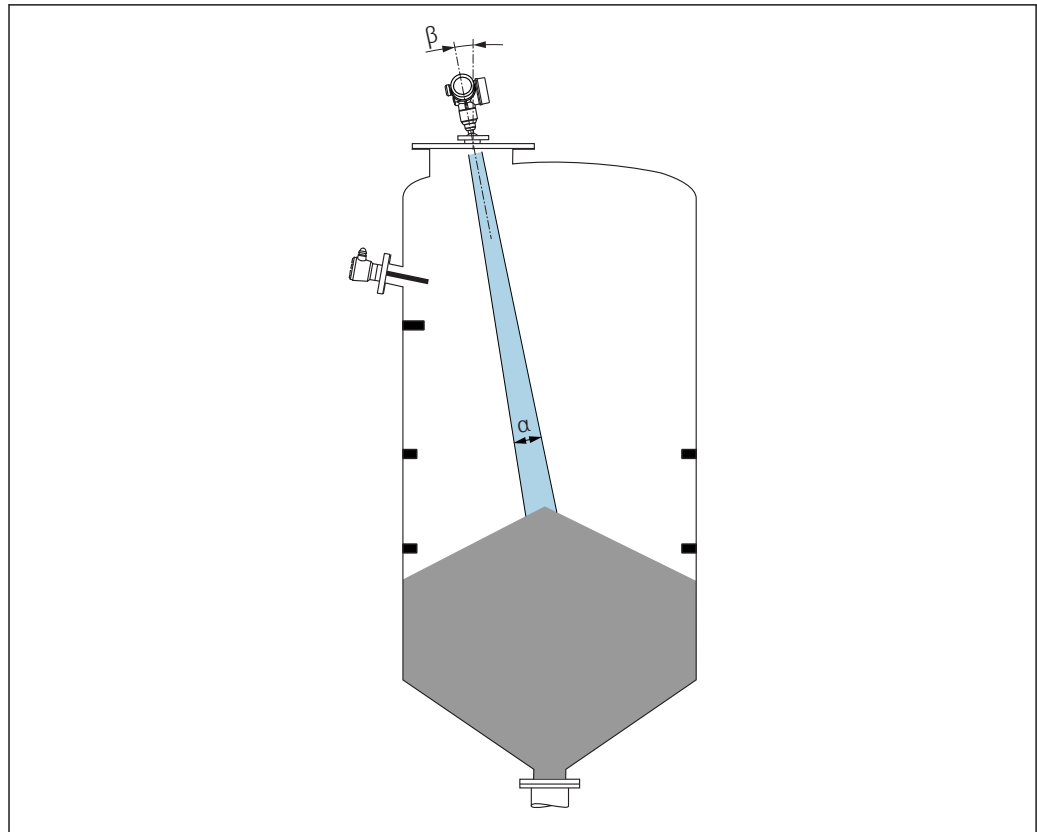

A0031814

Avoid the location of internal fittings (limit switches, temperature sensors, struts etc.) inside the signal beam. Pay attention to the beam angle .

6.1.3 Avoiding interference echoes

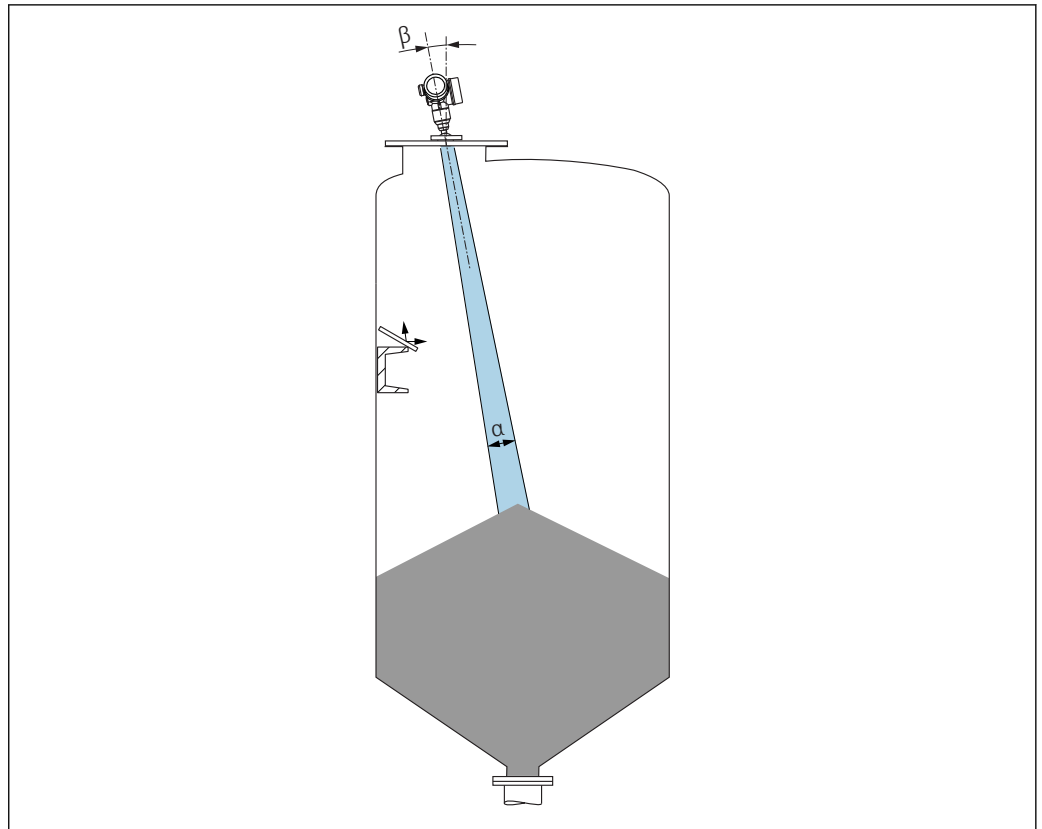

A0031817

Metal deflection plates installed at an angle to scatter the radar signals help prevent interference echoes.

6.1.4 Optimization options


- **Antenna size**
The larger the antenna the smaller the beam angle α , resulting in fewer interference echoes.
- **Mapping**
Measurement can be optimized by electronically suppressing interference echoes. See also **Confirm distance** parameter.
- **Variable flange seal for FMR67**
Variable flange seals of sizes DN80 to DN150 (3" to 6") are available for the FMR67 with Drip-off antenna²⁾. They can be used to align the device to the product surface. Maximum angle of alignment: 8°.
How to order:
 - Order with the device³⁾
 - Order as an accessory: → 📄 84
- **Alignment unit for FMR67**
Flanges sized 4" / DN100 and higher are optionally available with an alignment unit⁴⁾. They allow the sensor to be optimally aligned to suit conditions in the container in order to prevent interference reflections. The maximum angle is $\pm 15^\circ$.
The purpose of sensor alignment is primarily to:
 - Prevent interference reflections
 - Increase the maximum possible measuring range in conical outlets

2) Feature 070 in the product structure "Antenna", option GA

3) Feature 100 in the product structure "Process connection", options PL, PM, PN, PO, PQ, PR



4) see feature 100 in the product structure "Process connection".

6.1.5 Beam angle

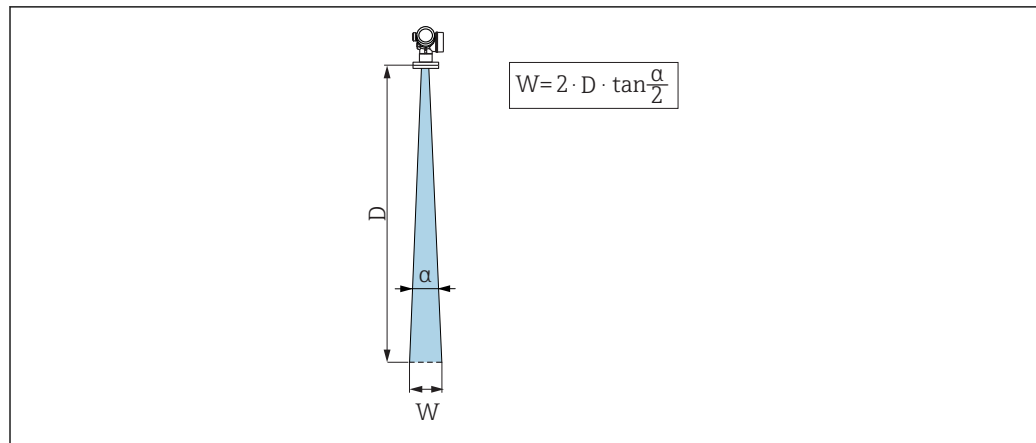

5 Relationship between beam angle α , distance D and beamwidth diameter W

The beam angle is defined as the angle α where the energy density of the radar waves reaches half the value of the maximum energy density (3dB width). Microwaves are also emitted outside the signal beam and can be reflected off interfering installations.

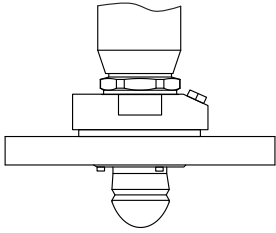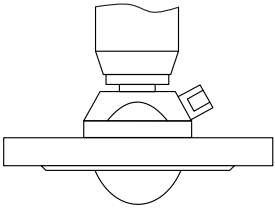FMR67		
		
Antenna ¹⁾	Drip-off, PTFE 50 mm / 2"	PTFE flush mount 80 mm / 3"
Beam angle α	6°	4°
Distance (D)	Beamwidth diameter W	
5 m (16 ft)	0.52 m (1.70 ft)	0.35 m (1.15 ft)
10 m (33 ft)	1.05 m (3.44 ft)	0.70 m (2.30 ft)
15 m (49 ft)	1.57 m (5.15 ft)	1.05 m (3.44 ft)
20 m (66 ft)	2.10 m (6.89 ft)	1.40 m (4.59 ft)
25 m (82 ft)	2.62 m (8.60 ft)	1.75 m (5.74 ft)
30 m (98 ft)	3.14 m (10.30 ft)	2.10 m (6.89 ft)
35 m (115 ft)	3.67 m (12.04 ft)	2.44 m (8.00 ft)
40 m (131 ft)	4.19 m (13.75 ft)	2.79 m (9.15 ft)
45 m (148 ft)	4.72 m (15.49 ft)	3.14 m (10.30 ft)
50 m (164 ft)	5.24 m (17.19 ft)	3.49 m (11.45 ft)
60 m (197 ft)	-	4.19 m (13.75 ft)
70 m (230 ft)	-	4.89 m (16.04 ft)
80 m (262 ft)	-	5.59 m (18.34 ft)
90 m (295 ft)	-	6.29 m (20.64 ft)
100 m (328 ft)	-	6.98 m (22.90 ft)
110 m (361 ft)	-	7.68 m (25.20 ft)
120 m (394 ft)	-	8.38 m (27.49 ft)
125 m (410 ft)	-	8.73 m (28.64 ft)

1) Feature 070 in the product structure

6.2 Installation: Drip-off antenna PTFE 50 mm / 2"

6.2.1 Aligning the antenna axis

Align the antenna vertically to the product surface.

Optionally, a variable flange seal (available as an accessory) can be used for alignment

 Attention:


The maximum reach of the antenna can be reduced if it is not installed perpendicular to the product.

6.2.2 Radial alignment of the antenna

Radial alignment of the antenna is not necessary because the effect of polarization is negligible due to the narrow beam angle.

6.2.3 Information concerning nozzles

The maximum nozzle length H_{max} depends on the nozzle diameter D :

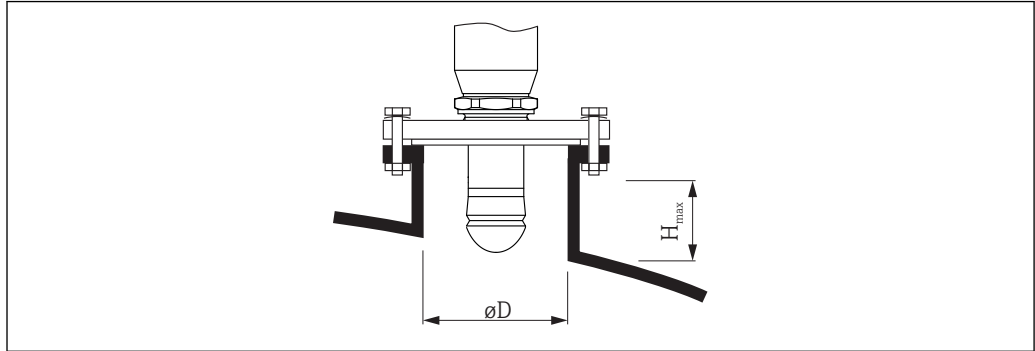

A0032209

Inner nozzle diameter D	Maximum nozzle height H_{max}
min. 50 mm (2 in)	≤150 mm (6 in)
80 mm (3 in)	≤200 mm (8 in)
100 mm (4 in)	≤300 mm (12 in)
150 mm (6 in)	≤500 mm (20 in)

- i** Note the following if the antenna does not project out of the nozzle:
- The end of the nozzle must be smooth and free from burrs. The edge of the nozzle should be rounded if possible.
 - Mapping must be performed.
 - Please contact Endress+Hauser for applications with nozzles that are higher than indicated in the table.

6.2.4 Information concerning threaded connections

- When screwing in, turn by the hex bolt only.
- Tool: open-ended wrench 55 mm
- Maximum permissible torque: 50 Nm (36 lbf ft)

6.3 Installation: flush mount antenna


6.3.1 Aligning the antenna axis

UNI flanges with an integrated alignment unit are available for FMR67 devices with a flush mount antenna. An angle of inclination of up to 15° in all directions can be set for the antenna axis using the alignment unit. The alignment unit is used to optimally align the radar beam to the bulk solid.

Process connection with alignment unit ¹⁾	UNI flange	Material	Pressure rating	Suitable for
XCA	UNI 4" / DN100 / 100A	Aluminum	max. 14.5lbs / PN1 / 1K	<ul style="list-style-type: none"> ▪ 4" 150lbs ▪ DN100 PN16 ▪ 10K 100A
XDA	UNI 6" / DN150 / 150A	Aluminum	max. 14.5lbs / PN1 / 1K	<ul style="list-style-type: none"> ▪ 6" 150lbs ▪ DN150 PN16 ▪ 10K 150A

Process connection with alignment unit ¹⁾	UNI flange	Material	Pressure rating	Suitable for
XEA	UNI 8" / DN200 / 200A	Aluminum	max. 14.5lbs / PN1 / 1K	<ul style="list-style-type: none"> ■ 8" 150lbs ■ DN200 PN16 ■ 10K 200A
XFA	UNI 10" / DN250 / 250A	Aluminum	max. 14.5lbs / PN1 / 1K	<ul style="list-style-type: none"> ■ 10" 150lbs ■ DN250 PN16 ■ 10K 250A

1) Feature 100 in the product structure

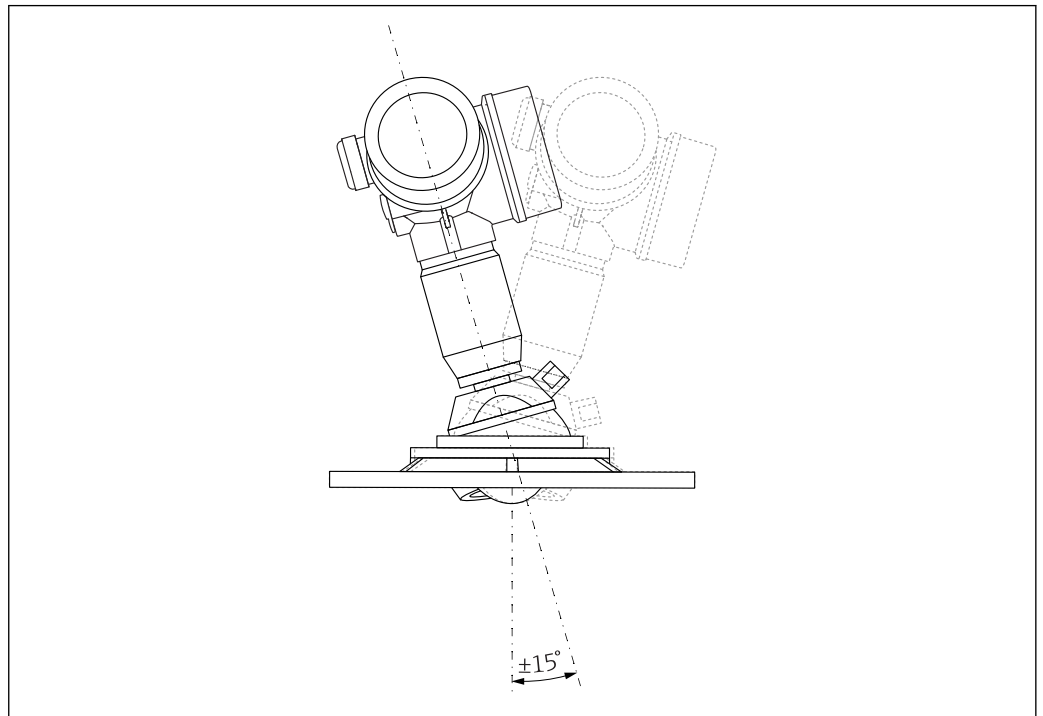

A0032097

6 Micropilot FMR67 with alignment unit


Aligning the antenna axis

1. Release the screws
2. Align the antenna axis (up to max. $\pm 15^\circ$ possible in all directions)
3. Tighten the screws with 10 Nm (7.4 lbf ft)

6.3.2 Radial alignment of the antenna

Radial alignment of the antenna is not necessary because the effect of polarization is negligible due to the narrow beam angle.

6.3.3 Information concerning nozzles

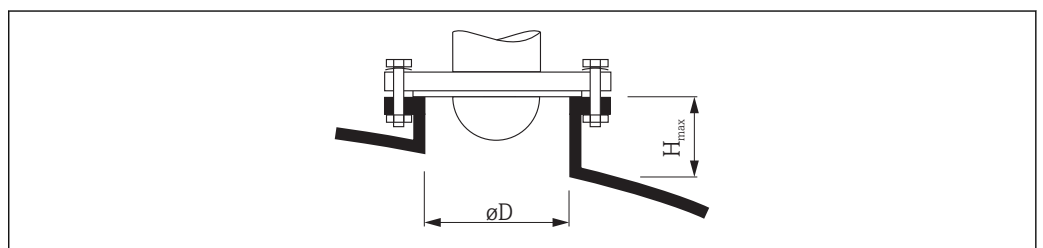

A0032206

Inner nozzle diameter D	Maximum nozzle height H_{max}
min. 80 mm (3 in)	≤200 mm (8 in)
100 mm (4 in)	≤300 mm (12 in)
150 mm (6 in)	≤500 mm (20 in)


- i** Note the following if the antenna does not project out of the nozzle:
- The end of the nozzle must be smooth and free from burrs. The edge of the nozzle should be rounded if possible.
 - Mapping must be performed.
 - Please contact Endress+Hauser for applications with nozzles that are higher than indicated in the table.

6.4 Purge air connection for FMR67

6.4.1 Purge air adapter for Drip-off antennas

Purge air connection ¹⁾	Meaning
A	without
3	Purge air adapter G 1/4"
4	Purge air adapter NPT 1/4"

1) Feature 110 in the product structure

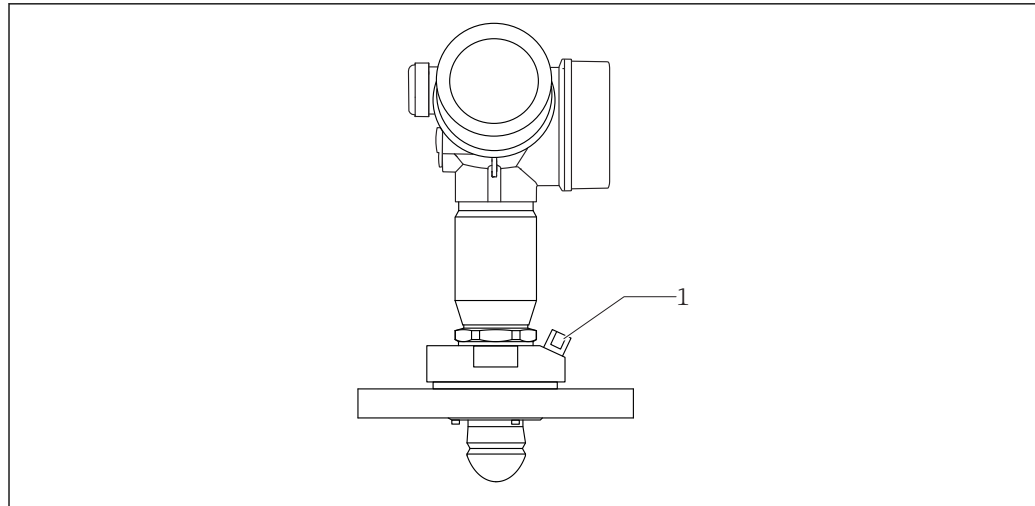


A0032098

1 Purge air connection NPT 1/4" or G 1/4"

6.4.2 Integrated purge air connection for flush-mounted antennas

Purge air connection ¹⁾	Meaning
1	Purge air connection G 1/4"
2	Purge air connection NPT 1/4"

1) Feature 110 in the product structure

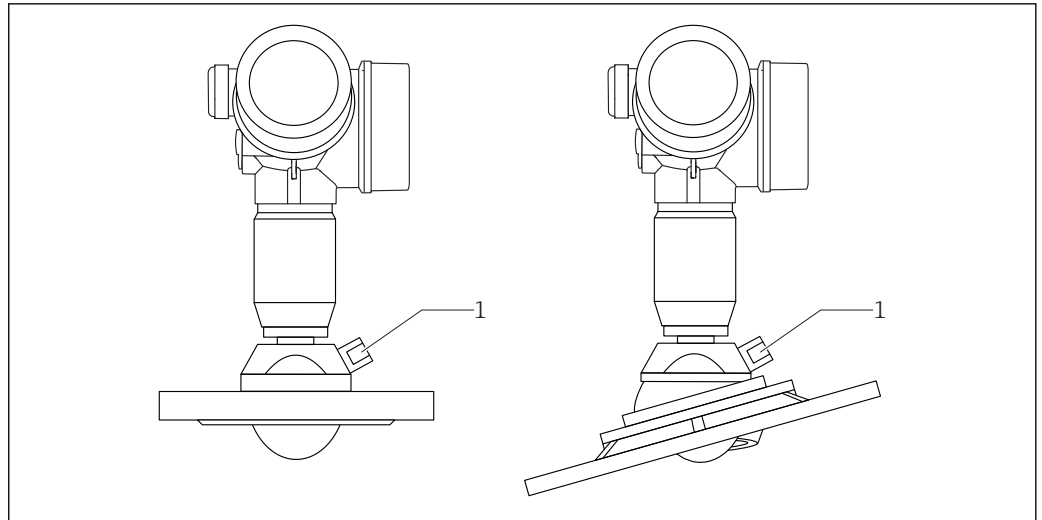

A0032099

1 Purge air connection NPT 1/4" or G 1/4"

6.4.3 Use

In applications with strong dust emissions, the integrated purge air connection can prevent the antenna from becoming clogged. Pulse operation is recommended.

Purge air pressure range

- **Pulse operation :**
Max. 6 bar (87 psi)
- **Continuous operation:**
200 to 500 mbar (3 to 7.25 psi)


Purge air connection

- **Tool:**
 - Open-ended wrench 13 mm (G 1/4)
 - Open-ended wrench 14 mm (NPT)
 - Open-ended wrench 17 mm (NPT "adapter")
- **Min. torque:** 6 Nm (4.4 lbf ft)
- **Max. torque:** 7 Nm

i Always use dry purge air.

i In general, purging should only be performed to the extent necessary as excess purging can cause mechanical damage (abrasion).

6.5 Container with heat insulation

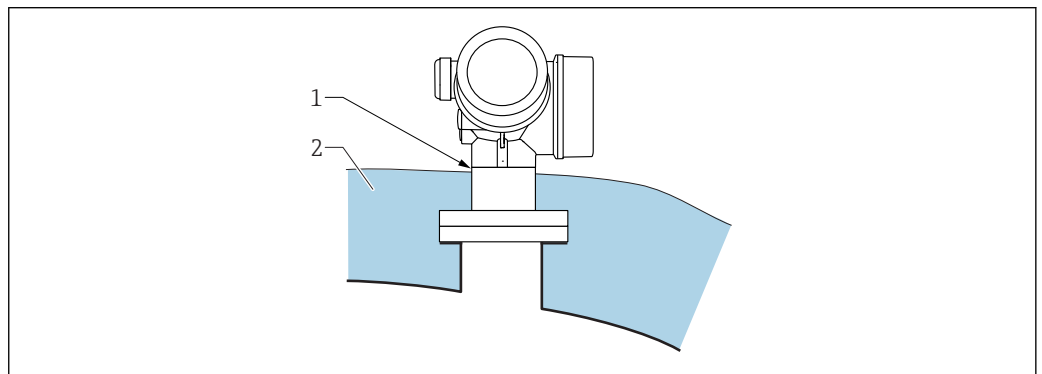


A0032207

If process temperatures are high, the device should be included in the usual container insulation system (2) to prevent the electronics from heating as a result of thermal radiation or convection. The insulation should not be higher than the neck of the device (1).

6.6 Turning the transmitter housing


To provide easier access to the connection compartment or display module, the transmitter housing can be turned:

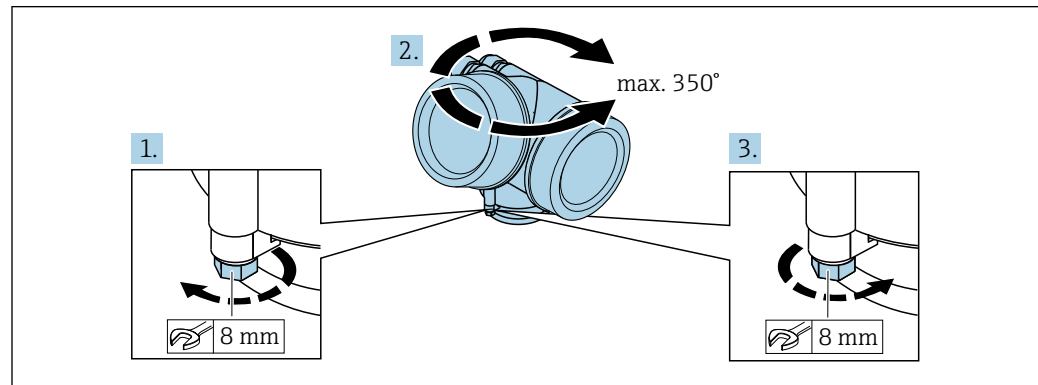

A0032242

1. Unscrew the securing screw using an open-ended wrench.
2. Rotate the housing in the desired direction.
3. Tighten the securing screw (1.5 Nm for plastic housing; 2.5 Nm for aluminum or stainless steel housing).

6.7 Turning the display module

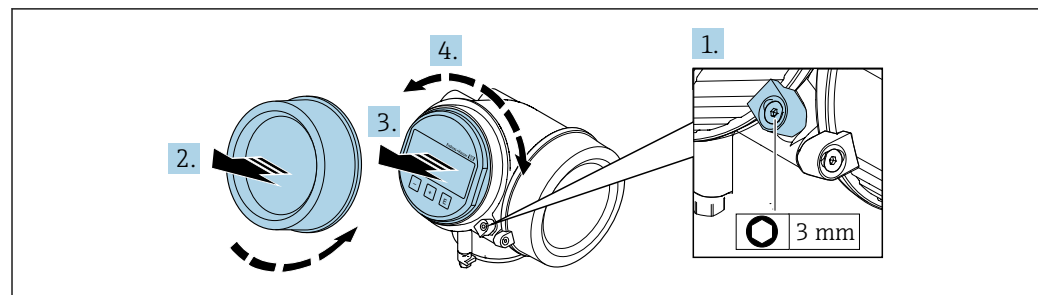

A0032238

1. If present: Loosen the screw of the securing clamp of the electronics compartment cover using an Allen screw and turn the clamp 90° counterclockwise.
2. Unscrew cover of the electronics compartment from the transmitter housing.
3. Pull out the display module with a gentle rotational movement.
4. Rotate the display module to the desired position: max. $8 \times 45^\circ$ in each direction.
5. Feed the coiled cable into the gap between the housing and main electronics module and plug the display module into the electronics compartment until it engages.
6. Screw the electronics compartment cover back onto the transmitter housing.
7. Tighten the securing clamp with an Allen screw (torque: 2.5 Nm).

6.8 Post-installation check


<input type="checkbox"/>	Is the device undamaged (visual inspection)?
<input type="checkbox"/>	Does the device conform to the measuring point specifications? For example: <ul style="list-style-type: none">■ Process temperature■ Process pressure (refer to the chapter on "Material load curves" of the "Technical Information" document)■ Ambient temperature range■ Measuring range
<input type="checkbox"/>	Are the measuring point identification and labeling correct (visual inspection)?
<input type="checkbox"/>	Is the device adequately protected from precipitation and direct sunlight?
<input type="checkbox"/>	Are the securing screw and securing clamp tightened securely?

7 Electrical connection

7.1 Connection conditions

7.1.1 Terminal assignment

2-wire: 4-20mA HART

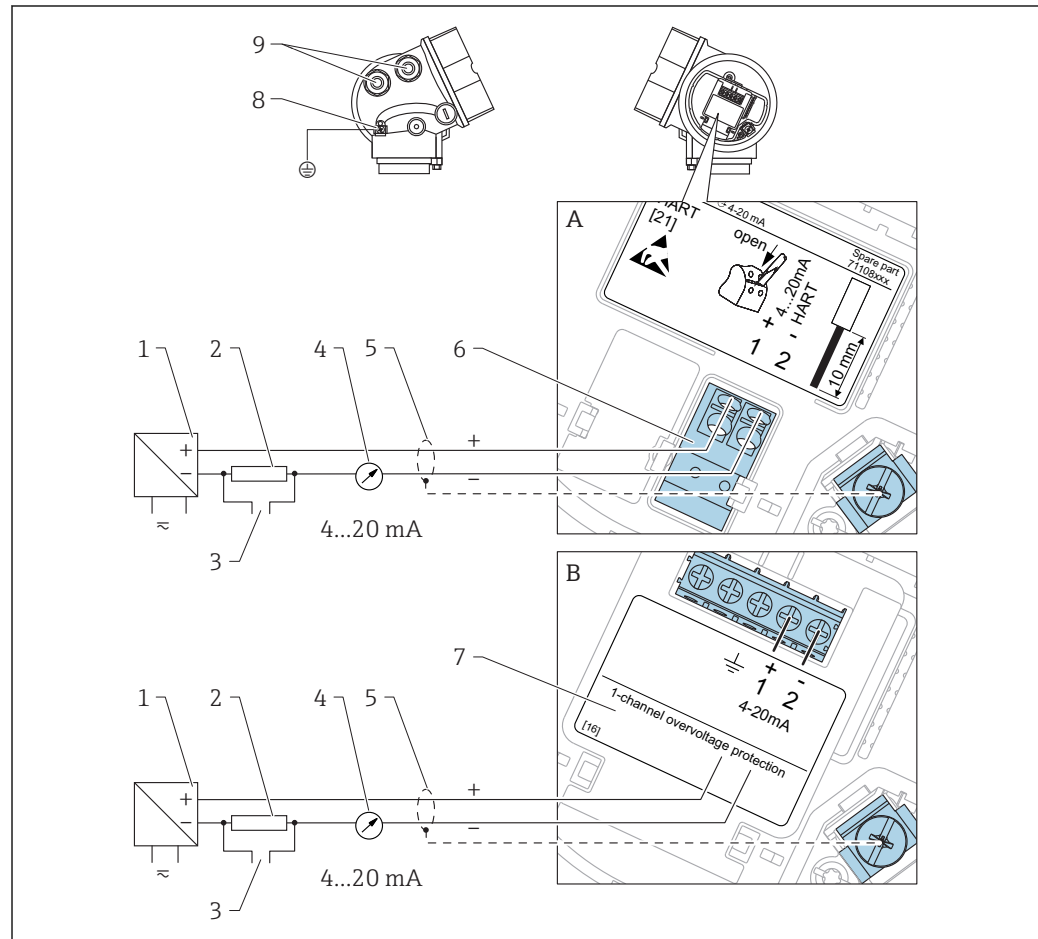


A0011294

7 Terminal assignment 2-wire; 4-20mA HART

- A Without integrated overvoltage protection
- B With integrated overvoltage protection
- 1 Active barrier with power supply (e.g. RN22 1N): Observe terminal voltage
- 2 HART communication resistor ($\geq 250 \Omega$): Observe maximum load
- 3 Connection for Commubox FXA195 or FieldXpert SFX350/SFX370 (via VIATOR Bluetooth modem)
- 4 Analog display device: Observe maximum load
- 5 Cable screen; observe cable specification
- 6 4-20mA HART (passive): Terminals 1 and 2
- 7 Overvoltage protection module
- 8 Terminal for potential equalization line
- 9 Cable entry

2-wire: 4-20mA HART, switch output

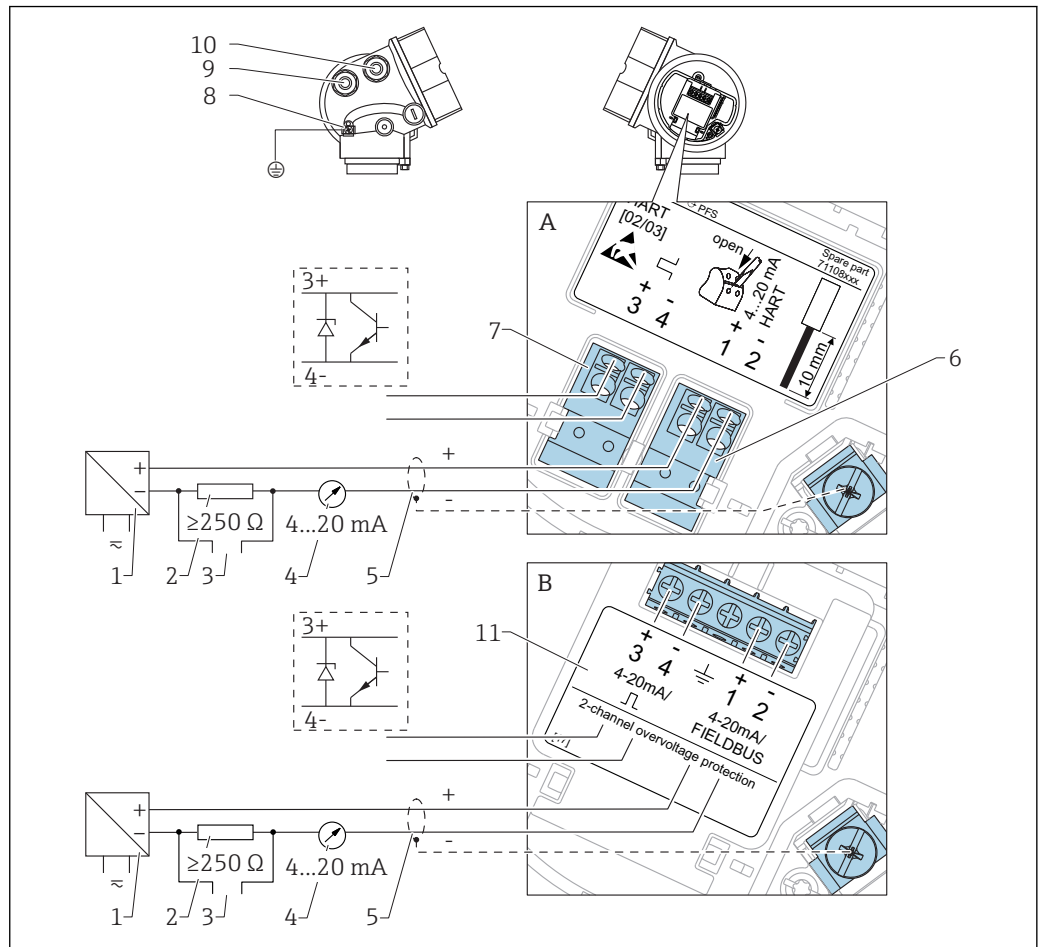


A0013759

8 Terminal assignment 2-wire; 4-20mA HART, switch output

- A Without integrated overvoltage protection
- B With integrated overvoltage protection
- 1 Active barrier with power supply (e.g. RN221N): Observe terminal voltage
- 2 HART communication resistor ($\geq 250 \Omega$): Observe maximum load
- 3 Connection for Commubox FXA195 or FieldXpert SFX350/SFX370 (via VIATOR Bluetooth modem)
- 4 Analog display device: Observe maximum load
- 5 Cable screen; observe cable specification
- 6 4-20mA HART (passive): Terminals 1 and 2
- 7 Switch output (open collector): Terminals 3 and 4
- 8 Terminal for potential equalization line
- 9 Cable entry for 4-20mA HART line
- 10 Cable entry for switch output line
- 11 Overvoltage protection module

2-wire: 4-20mA HART, 4-20mA

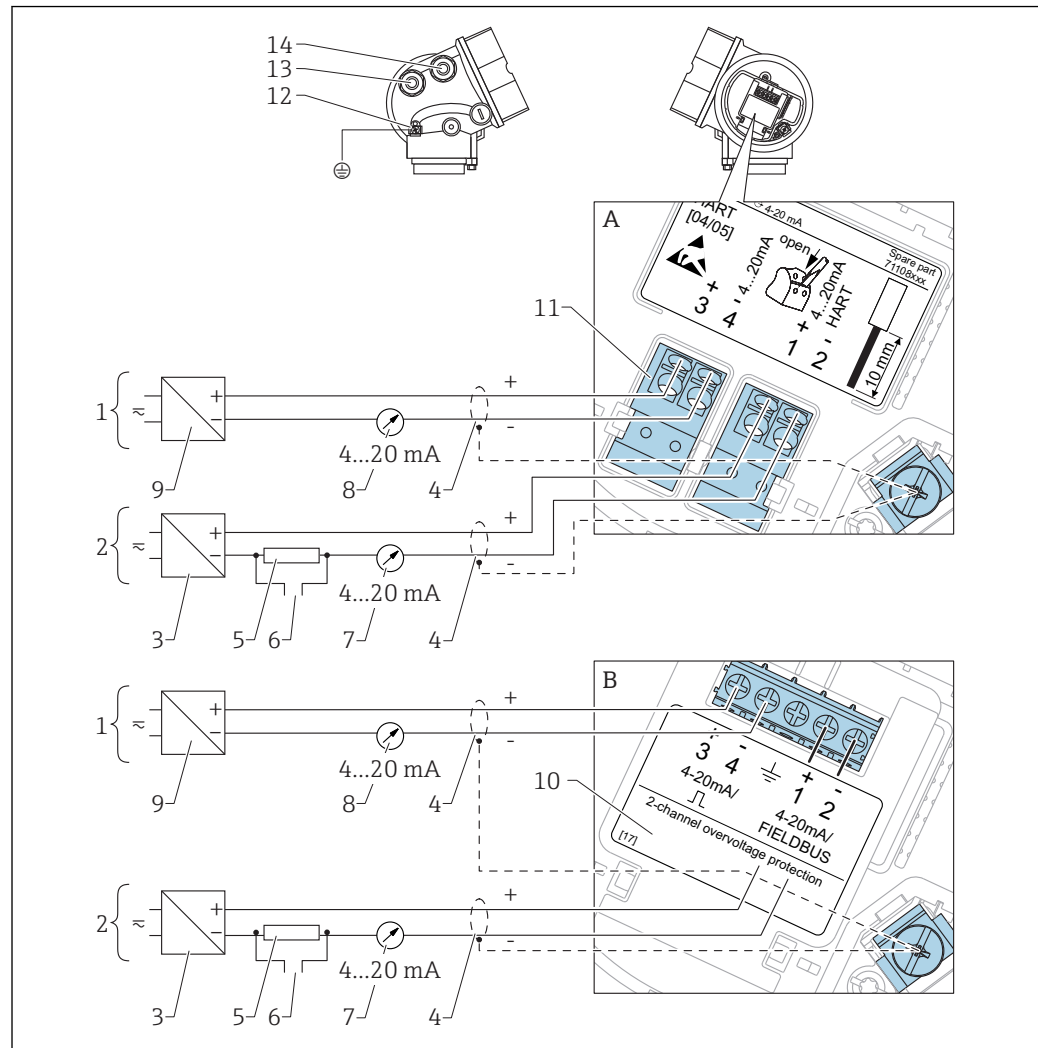


A0013923

9 Terminal assignment 2-wire, 4-20 mA HART, 4...20mA

- A Without integrated overvoltage protection
- B With integrated overvoltage protection
- 1 Connection current output 2
- 2 Connection current output 1
- 3 Supply voltage for current output 1 (e.g. RN221N); Observe terminal voltage
- 4 Cable screen; observe cable specification
- 5 HART communication resistor ($\geq 250 \Omega$); Observe maximum load
- 6 Connection for Commubox FXA195 or FieldXpert SFX350/SFX370 (via VIATOR Bluetooth modem)
- 7 Analog display device ; observe maximum load
- 8 Analog display device ; observe maximum load
- 9 Supply voltage for current output 2 (e.g. RN221N); Observe terminal voltage
- 10 Overvoltage protection module
- 11 Current output 2: Terminals 3 and 4
- 12 Terminal for the potential equalization line
- 13 Cable entry for current output 1
- 14 Cable entry for current output 2

i This version is also suited for single-channel operation. In this case, current output 1 (terminals 1 and 2) must be used.


4-wire: 4-20mA HART (10.4 to 48 V_{DC})

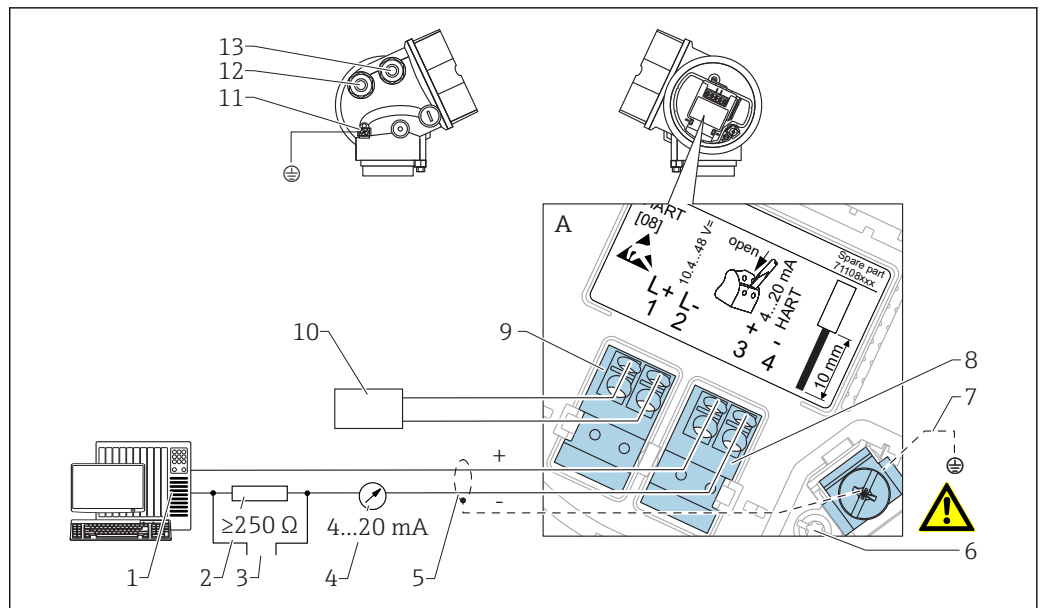

A0011340

10 Terminal assignment 4-wire; 4-20mA HART (10.4 to 48 V_{DC})

- 1 Evaluation unit, e.g. PLC
- 2 HART communication resistor ($\geq 250 \Omega$): Observe maximum load
- 3 Connection for Commubox FXA195 or FieldXpert SFX350/SFX370 (via VIATOR Bluetooth modem)
- 4 Analog display device: Observe maximum load
- 5 Signal cable including screening (if required), observe cable specification
- 6 Protective connection; do not disconnect!
- 7 Protective earth, observe cable specification
- 8 4...20mA HART (active): Terminals 3 and 4
- 9 Supply voltage: Terminals 1 and 2
- 10 Supply voltage: Observe terminal voltage, observe cable specification
- 11 Terminal for potential equalization
- 12 Cable entry for signal line
- 13 Cable entry for power supply

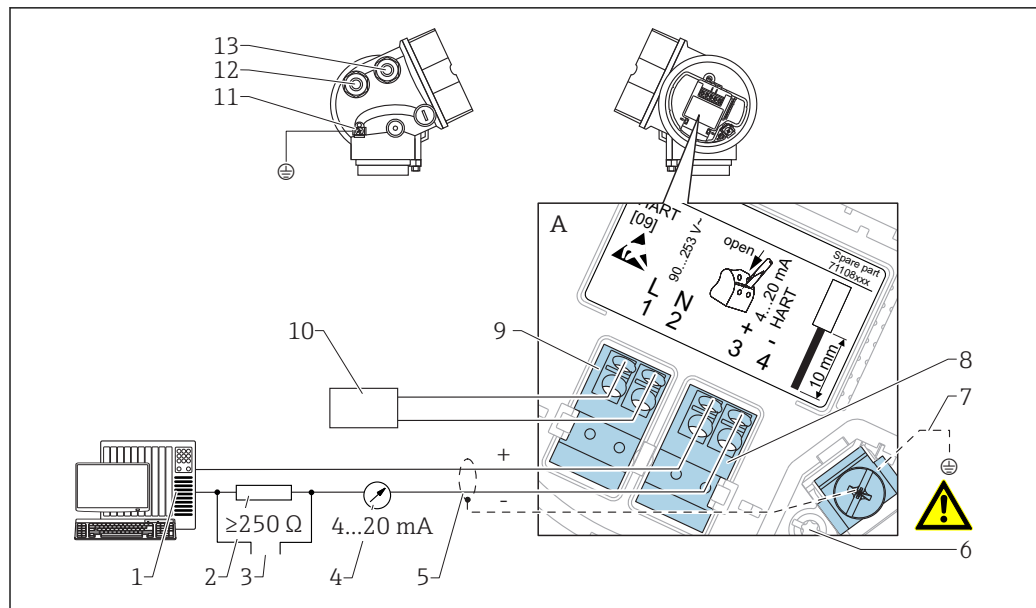4-wire: 4-20mA HART (90 to 253 V_{AC})

11 Terminal assignment 4-wire; 4-20mA HART (90 to 253 V_{AC})


- 1 Evaluation unit, e.g. PLC
- 2 HART communication resistor ($\geq 250 \Omega$): Observe maximum load
- 3 Connection for Commubox FXA195 or FieldXpert SFX350/SFX370 (via VIATOR Bluetooth modem)
- 4 Analog display device: Observe maximum load
- 5 Signal cable including screening (if required), observe cable specification
- 6 Protective connection; do not disconnect!
- 7 Protective earth, observe cable specification
- 8 4...20mA HART (active): Terminals 3 and 4
- 9 Supply voltage: Terminals 1 and 2
- 10 Supply voltage: Observe terminal voltage, observe cable specification
- 11 Terminal for potential equalization
- 12 Cable entry for signal line
- 13 Cable entry for power supply

CAUTION

To ensure electrical safety:

- ▶ Do not disconnect the protective connection (6).
 - ▶ Disconnect the supply voltage before disconnecting the protective earth (7).
- i** Connect protective earth to the internal ground terminal (7) before connecting the supply voltage. If necessary, connect the potential matching line to the external ground terminal (11).
- i** In order to ensure electromagnetic compatibility (EMC): Do not only ground the device via the protective earth conductor of the supply cable. Instead, the functional grounding must also be connected to the process connection (flange or threaded connection) or to the external ground terminal.
- i** An easily accessible power switch must be installed in the proximity of the device. The power switch must be marked as a disconnecter for the device (IEC/EN61010).

Connection examples for the switch output

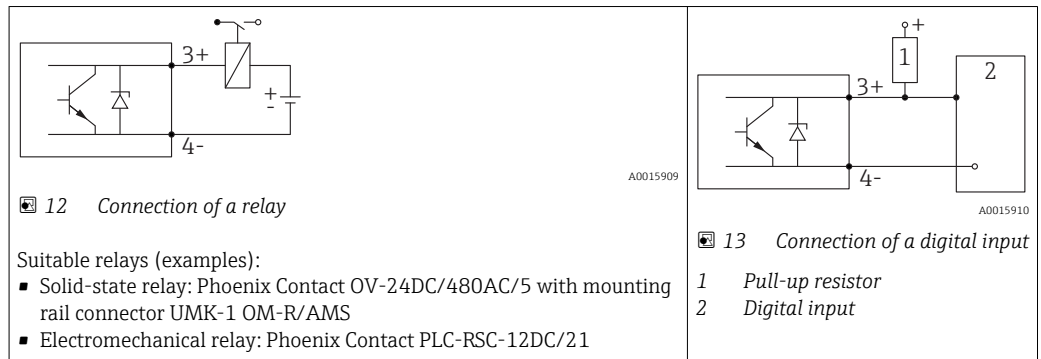

i For optimum interference immunity we recommend to connect an external resistor (internal resistance of the relay or Pull-up resistor) of $< 1\,000\ \Omega$.

7.1.2 Cable specification

▪ Devices without integrated overvoltage protection

Pluggable spring-force terminals for wire cross-sections 0.5 to $2.5\ \text{mm}^2$ (20 to 14 AWG)

▪ Devices with integrated overvoltage protection

Screw terminals for wire cross-sections 0.2 to $2.5\ \text{mm}^2$ (24 to 14 AWG)

- For ambient temperature $T_U \geq 60\ \text{°C}$ ($140\ \text{°F}$): use cable for temperature $T_U + 20\ \text{K}$.


HART

- A normal device cable suffices if only the analog signal is used.
- A shielded cable is recommended if using the HART protocol. Observe grounding concept of the plant.
- For 4-wire devices: Standard device cable is sufficient for the power line.


7.1.3 Device plug connectors

i For the versions with fieldbus plug connector (M12 or 7/8"), the signal line can be connected without opening the housing.

Pin assignment of the M12 plug connector

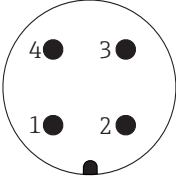 <small>A0011175</small>	Pin	Meaning
	1	Signal +
	2	not connected
	3	Signal -
	4	Ground

Pin assignment of the 7/8" plug connector

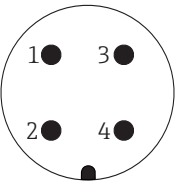 <small>A0011176</small>	Pin	Meaning
	1	Signal -
	2	Signal +
	3	Not connected
	4	Screen

7.1.4 Supply voltage

2-wire, 4-20mA HART, passive

"Power supply, output" ¹⁾	"Approval" ²⁾	Terminal voltage U at device	Maximum load R, depending on the supply voltage U ₀ of the power supply unit
A: 2-wire; 4-20mA HART	<ul style="list-style-type: none"> ▪ Non-hazardous ▪ Ex nA ▪ Ex ic ▪ CSA GP 	14 to 35 V	<p style="text-align: right; font-size: small;">A0031745</p>
	Ex ia / IS	14 to 30 V	
	<ul style="list-style-type: none"> ▪ Ex d(ia) / XP ▪ Ex ic(ia) ▪ Ex nA(ia) ▪ Ex ta / DIP 	14 to 35 V ³⁾	
	Ex ia + Ex d(ia) / IS + XP	14 to 30 V	

- 1) Feature 020 in the product structure
- 2) Feature 010 in the product structure
- 3) At ambient temperatures $T_a \leq -20\text{ °C}$, a terminal voltage $U \geq 16\text{ V}$ is required to start the device with the min. error current (3.6 mA).

"Power supply, output" ¹⁾	"Approval" ²⁾	Terminal voltage U at device	Maximum load R, depending on the supply voltage U ₀ of the power supply unit
B: 2-wire; 4-20 mA HART, switch output	<ul style="list-style-type: none"> ▪ Non-hazardous ▪ Ex nA ▪ Ex nA(ia) ▪ Ex ic ▪ Ex ic(ia) ▪ Ex d(ia) / XP ▪ Ex ta / DIP ▪ CSA GP 	16 to 35 V	<p style="text-align: right; font-size: small;">A0031746</p>
	<ul style="list-style-type: none"> ▪ Ex ia / IS ▪ Ex ia + Ex d(ia) / IS + XP 	16 to 30 V	

- 1) Feature 020 in the product structure
- 2) Feature 010 in the product structure

"Power supply, output" ¹⁾	"Approval" ²⁾	Terminal voltage U at device	Maximum load R, depending on the supply voltage U ₀ of the power supply unit
C: 2-wire; 4-20mA HART, 4-20mA	All	16 to 30 V	<p style="text-align: right; font-size: small;">A0031746</p>

- 1) Feature 020 in the product structure
- 2) Feature 010 in the product structure

Integrated polarity reversal protection	Yes
Permitted residual ripple with f = 0 to 100 Hz	U _{SS} < 1 V
Permitted residual ripple with f = 100 to 10000 Hz	U _{SS} < 10 mV

4-wire, 4-20mA HART, active

"Power supply; output" ¹⁾	Terminal voltage U	Maximum load R _{max}
K: 4-wire 90-253VAC; 4-20mA HART	90 to 253 V _{AC} (50 to 60 Hz), overvoltage category II	500 Ω
L: 4-wire 10.4-48VDC; 4-20mA HART	10.4 to 48 V _{DC}	

- 1) Feature 020 in the product structure

7.1.5 Overvoltage protection

If the measuring device is used for level measurement in flammable liquids which requires the use of overvoltage protection according to DIN EN 60079-14, standard for test procedures 60060-1 (10 kA, pulse 8/20 μs), overvoltage protection has to be ensured by an integrated or external overvoltage protection module.

Integrated overvoltage protection

An integrated overvoltage protection module is available for 2-wire HART as well as PROFIBUS PA and FOUNDATION Fieldbus devices.

Product structure: Feature 610 "Accessory mounted", option NA "Overvoltage protection".

Technical data	
Resistance per channel	2 × 0.5 Ω max.
Threshold DC voltage	400 to 700 V
Threshold impulse voltage	< 800 V
Capacitance at 1 MHz	< 1.5 pF
Nominal arrest impulse voltage (8/20 μs)	10 kA

External overvoltage protection

HAW562 or HAW569 from Endress+Hauser are suited as external overvoltage protection.



For detailed information please refer to the following documents:

- HAW562: TI01012K
- HAW569: TI01013K

7.1.6 Connecting the measuring device


⚠ WARNING

Risk of explosion!

- ▶ Observe applicable national standards.
- ▶ Comply with the specifications in the Safety Instructions (XA).
- ▶ Use specified cable glands only.
- ▶ Check to ensure that the power supply matches the information on the nameplate.
- ▶ Switch off the power supply before connecting the device.
- ▶ Connect the potential matching line to the outer ground terminal before applying the power supply.

Required tools/accessories:


- For devices with a cover lock: Allen key AF3
- Wire stripper
- When using stranded cables: One ferrule for every wire to be connected.

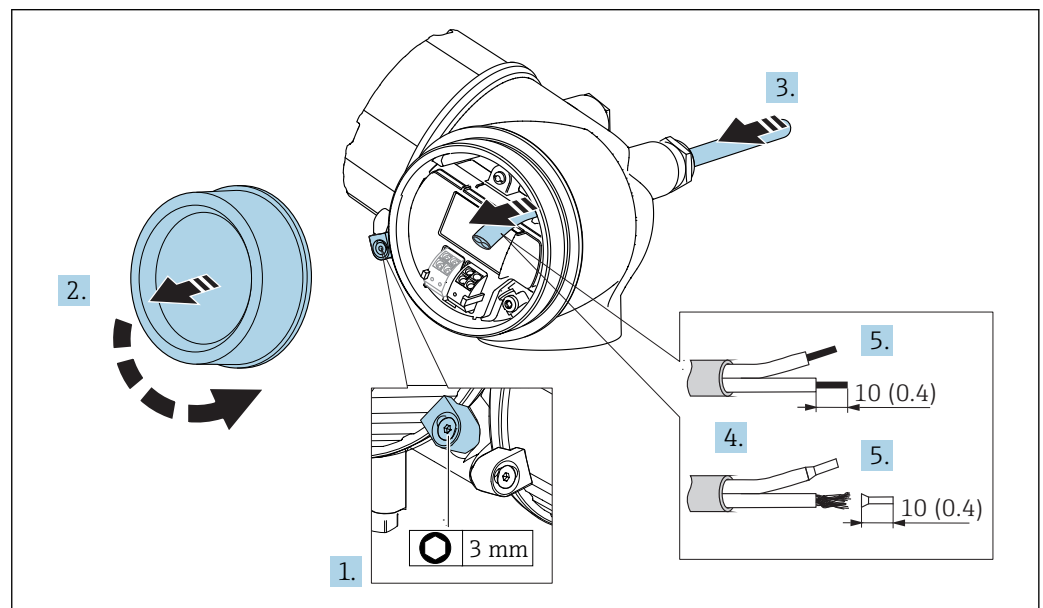

14 Dimensions: mm (in)

A0012619

1. Loosen the screw of the securing clamp on the connection compartment cover and turn the securing clamp 90° counterclockwise.
2. Unscrew the connection compartment cover.
3. Push the cable through the cable entry. To ensure tight sealing, do not remove the sealing ring from the cable entry.
4. Remove the cable sheath.
5. Strip the cable ends over a length of 10 mm (0.4 in). In the case of stranded cables, also fit ferrules.
6. Firmly tighten the cable glands.

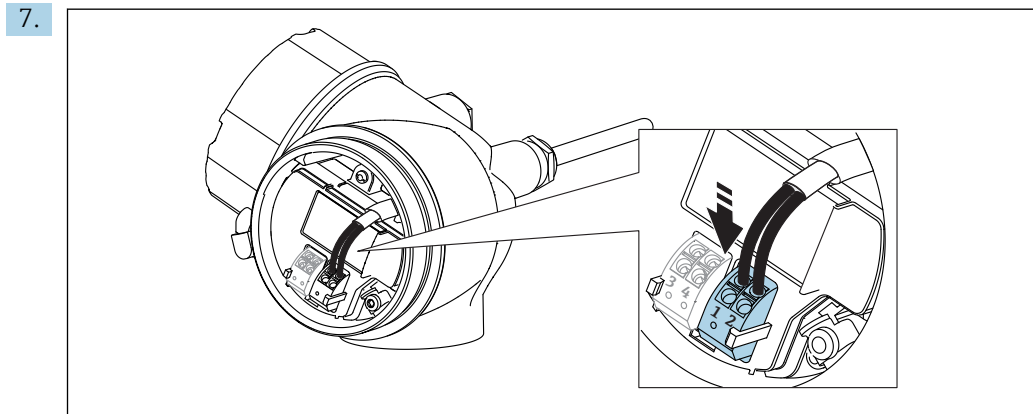


A0032468

Connect the cable in accordance with the terminal assignment → 30.

8. If using shielded cables: Connect the cable shield to the ground terminal.
9. Fit the cover of the connection compartment back on.
10. If present, turn the cover lock so that it is located over the edge of the cover and then tighten.

Plug-in spring-force terminals

In the case of devices without integrated overvoltage protection, electrical connection is via plug-in spring-force terminals. Rigid conductors or flexible conductors with ferrules can be inserted directly into the terminal without using the lever, and create a contact automatically.

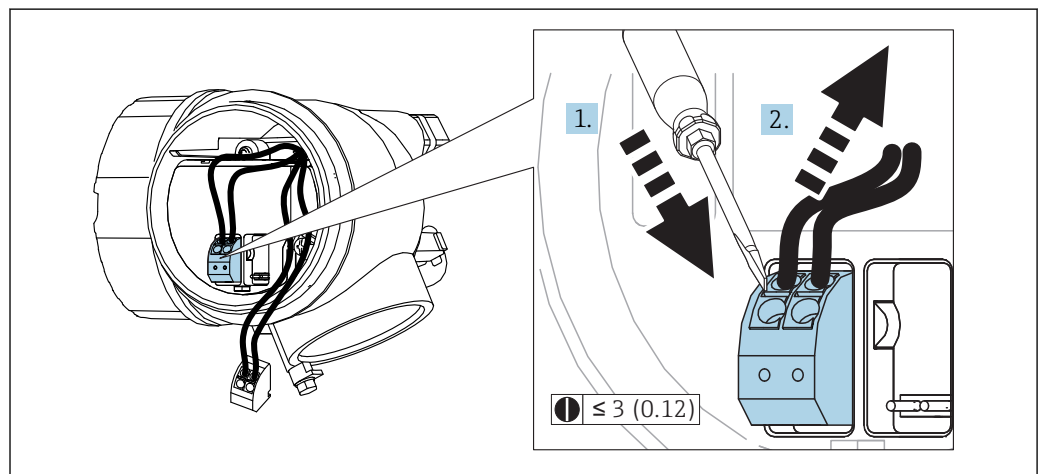

A0013661

15 Dimensions: mm (in)

To remove cables from the terminal:

1. Using a flat-blade screwdriver ≤ 3 mm, press down on the slot between the two terminal holes
2. while simultaneously pulling the cable end out of the terminal.

7.1.7 Post-connection check



<input type="checkbox"/>	Is the device or cable undamaged (visual check)?
<input type="checkbox"/>	Do the cables comply with the requirements ?
<input type="checkbox"/>	Do the cables have adequate strain relief?

<input type="checkbox"/>	Are all cable glands installed, securely tightened and leak-tight?
<input type="checkbox"/>	Does the supply voltage match the specifications on the nameplate?
<input type="checkbox"/>	Is the terminal assignment correct → 30?
<input type="checkbox"/>	If required: Has protective ground connection been established ?
<input type="checkbox"/>	If supply voltage is present, is the device ready for operation and do values appear on the display module?
<input type="checkbox"/>	Are all housing covers installed and securely tightened?
<input type="checkbox"/>	Is the securing clamp tightened correctly?


8 Operation options

8.1 Overview

8.1.1 Local operation

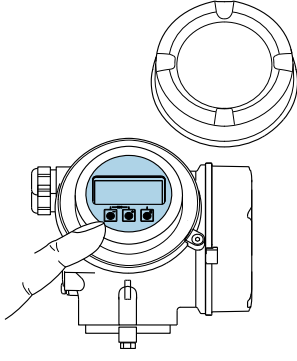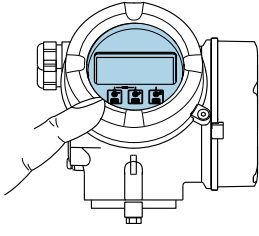Operation with	Pushbuttons	Touch Control
Order code for "Display; Operation"	Option C "SD02"	Option E "SD03"
		
Display elements	4-line display	4-line display white background lighting; switches to red in event of device error
	Format for displaying measured variables and status variables can be individually configured	
	Permitted ambient temperature for the display: -20 to +70 °C (-4 to +158 °F) The readability of the display may be impaired at temperatures outside the temperature range.	
Operating elements	local operation with 3 push buttons (⊕, ⊖, ⊞)	external operation via touch control; 3 optical keys: ⊕, ⊖, ⊞
	Operating elements also accessible in various hazardous areas	
Additional functionality	Data backup function The device configuration can be saved in the display module.	
	Data comparison function The device configuration saved in the display module can be compared to the current device configuration.	
	Data transfer function The transmitter configuration can be transmitted to another device using the display module.	

8.1.2 Operation with remote display and operating module FHX50

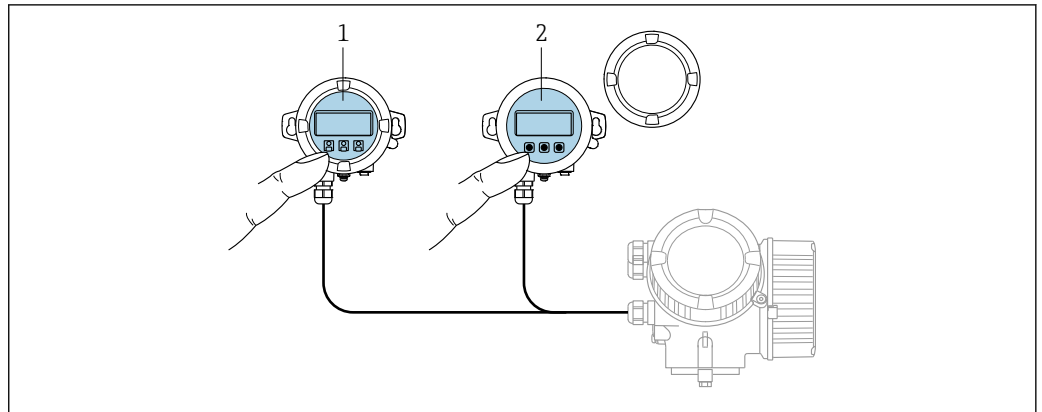


A0032215

16 FHX50 operating options

- 1 Housing of the remote display and operating module FHX50
- 2 Display and operating module SD02, push buttons; cover must be removed
- 3 Display and operating module SD03, optical keys; can be operated through the glass of the cover

8.1.3 Remote operation

Via HART protocol

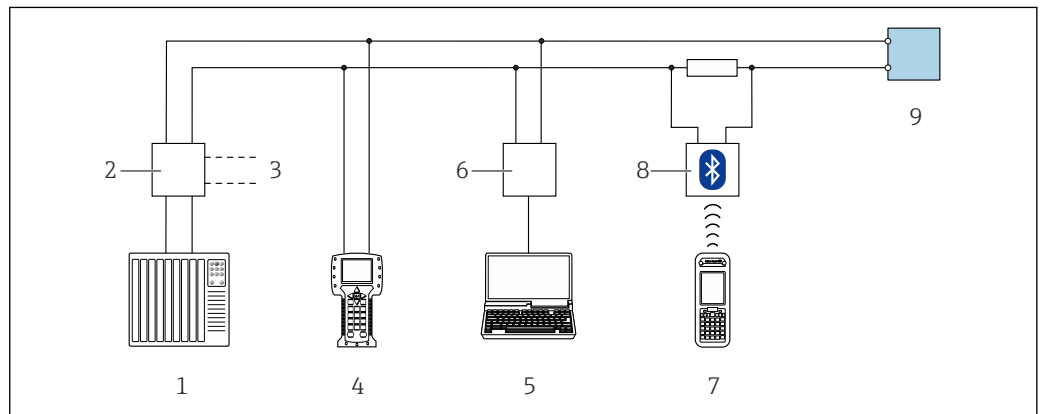


A0028746

17 Options for remote operation via HART protocol

- 1 PLC (programmable logic controller)
- 2 Transmitter power supply unit, e.g. RN221N (with communication resistor)
- 3 Connection for Commubox FXA191, FXA195 and Field Communicator 375, 475
- 4 Field Communicator 475
- 5 Computer with operating tool (e.g. FieldCare, AMS Device Manager, SIMATIC PDM)
- 6 Commubox FXA191 (RS232) or FXA195 (USB)
- 7 Field Xpert SFX350/SFX370
- 8 VIATOR Bluetooth modem with connecting cable
- 9 Transmitter

Via service interface (CDI)

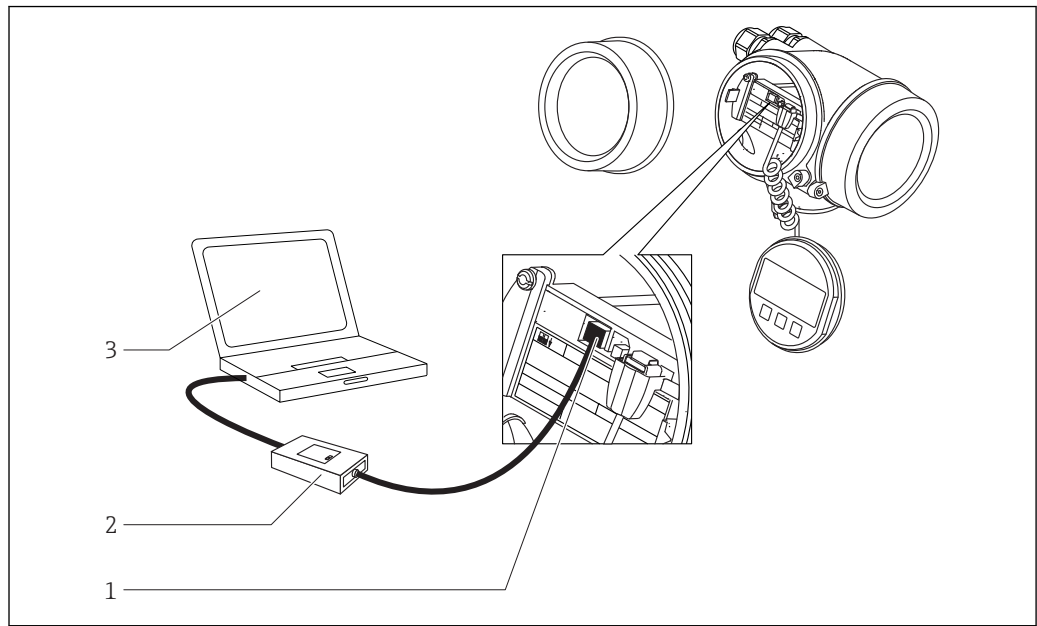

A0032466

- 1 Service interface (CDI) of the measuring device (= Endress+Hauser Common Data Interface)
- 2 Commubox FXA291
- 3 Computer with "FieldCare" operating tool

8.2 Structure and function of the operating menu


8.2.1 Structure of the operating menu

Menu	Submenu / parameter	Meaning
	Language ¹⁾	Defines the operating language of the on-site display
Commissioning ²⁾		Launches the interactive wizard for guided commissioning. Additional settings generally do not need to be made in the other menus when the wizard is finished.
Setup	Parameter 1 ... Parameter N	Once values have been set for these parameters, the measurement should generally be completely configured.
	Advanced setup	Contains additional submenus and parameters: <ul style="list-style-type: none"> ▪ to adapt the device to special measuring conditions. ▪ to process the measured value (scaling, linearization). ▪ to configure the signal output.
Diagnostics	Diagnostic list	Contains up to 5 currently active error messages.
	Event logbook ³⁾	Contains the last 20 messages (which are no longer active).
	Device information	Contains information for identifying the device.
	Measured values	Contains all current measured values.
	Data logging	Contains the history of the individual measuring values.
	Simulation	Is used to simulate measured values or output values.
	Device check	Contains all parameters needed to check the measurement capability of the device.
Expert ⁵⁾ Contains all parameters of the device (including those that are already in one of the other menus). This menu is organized according to the function blocks of the device. The parameters of the Expert menu are described in: GPO1101F (HART)	System	Contains all higher-order device parameters that do not concern the measurement or measured value communication.
	Sensor	Contains all parameters needed to configure the measurement.
	Output	<ul style="list-style-type: none"> ▪ Contains all parameters needed to configure the current output. ▪ Contains all parameters needed to configure the switch output (PFS).

Menu	Submenu / parameter	Meaning
	Communication	Contains all parameters needed to configure the digital communication interface.
	Diagnostics	Contains all parameters needed to detect and analyze operational errors.

- 1) If operating via operating tools (e.g. FieldCare), the "Language" parameter is located under "Setup → Advanced setup → Display"
- 2) Only if operating via an FDT/DTM system
- 3) only available with local operation
- 4) only available if operating via DeviceCare or FieldCare
- 5) On entering the "Expert" menu, an access code is always requested. If a customer specific access code has not been defined, "0000" has to be entered.


8.2.2 User roles and related access authorization

The two user roles **Operator** and **Maintenance** have different write access to the parameters if a device-specific access code has been defined. This protects the device configuration via the local display from unauthorized access →  48.

Access authorization to parameters

User role	Read access		Write access	
	Without access code (from the factory)	With access code	Without access code (from the factory)	With access code
Operator	✓	✓	✓	--
Maintenance	✓	✓	✓	✓


If an incorrect access code is entered, the user obtains the access rights of the **Operator** role.

 The user role with which the user is currently logged on is indicated by the **Access status display** parameter (for display operation) or **Access status tooling** parameter (for tool operation).

8.2.3 Write protection via access code

Using the device-specific access code, the parameters for the measuring device configuration are write-protected and their values can no longer be changed via local operation.

Define access code via local display

1. Navigate to: Setup → Advanced setup → Administration → Define access code → Define access code
2. Define a max. 4-digit numeric code as an access code.
3. Repeat the same code in **Confirm access code** parameter.
 - ↳ The -symbol appears in front of all write-protected parameters.




Define access code via operating tool (e.g. FieldCare)

1. Navigate to: Setup → Advanced setup → Administration → Define access code
2. Define a max. 4-digit numeric code as an access code.
 - ↳ Write protection is active.



Parameters that can always be changed

The write protection does not include certain parameters that do not affect the measurement. Despite the defined access code, they can always be modified, even if the other parameters are locked.



The device automatically locks the write-protected parameters again if a key is not pressed for 10 minutes in the navigation and editing view. The device locks the write-protected parameters automatically after 60 s if the user skips back to the measured value display mode from the navigation and editing view.

-  If write access is activated via access code, it can be also be deactivated only via the access code →  49.
- In the "Description of Device Parameters" documents, each write-protected parameter is identified with the -symbol.

8.2.4 Disabling write protection via access code

If the -symbol appears on the local display in front of a parameter, the parameter is write-protected by a device-specific access code and its value cannot be changed at the moment using the local display →  48.

The locking of the write access via local operation can be disabled by entering the device-specific access code.

1. After you press , the input prompt for the access code appears.
2. Enter the access code.
 - ↳ The -symbol in front of the parameters disappears; all previously write-protected parameters are now re-enabled.

8.2.5 Deactivation of the write protection via access code

Via local display

1. Navigate to: Setup → Advanced setup → Administration → Define access code → Define access code
2. **0000**.
3. Repeat **0000** in **Confirm access code** parameter.
 - ↳ The write protection is deactivated. Parameters can be changed without entering an access code.

Via an operating tool (e.g. FieldCare)


1. Navigate to: Setup → Advanced setup → Administration → Define access code
2. **0000**.
 - ↳ The write protection is deactivated. Parameters can be changed without entering an access code.

8.2.6 Write protection via write protection switch

Unlike parameter write protection via a user-specific access code, this allows write access to the entire operating menu - except for the **"Contrast display" parameter** - to be locked.


The parameter values are now read only and cannot be edited any more (exception **"Contrast display" parameter**):

- Via local display
- Via service interface (CDI)
- Via service interface (CDI-RJ45)
- Via HART protocol

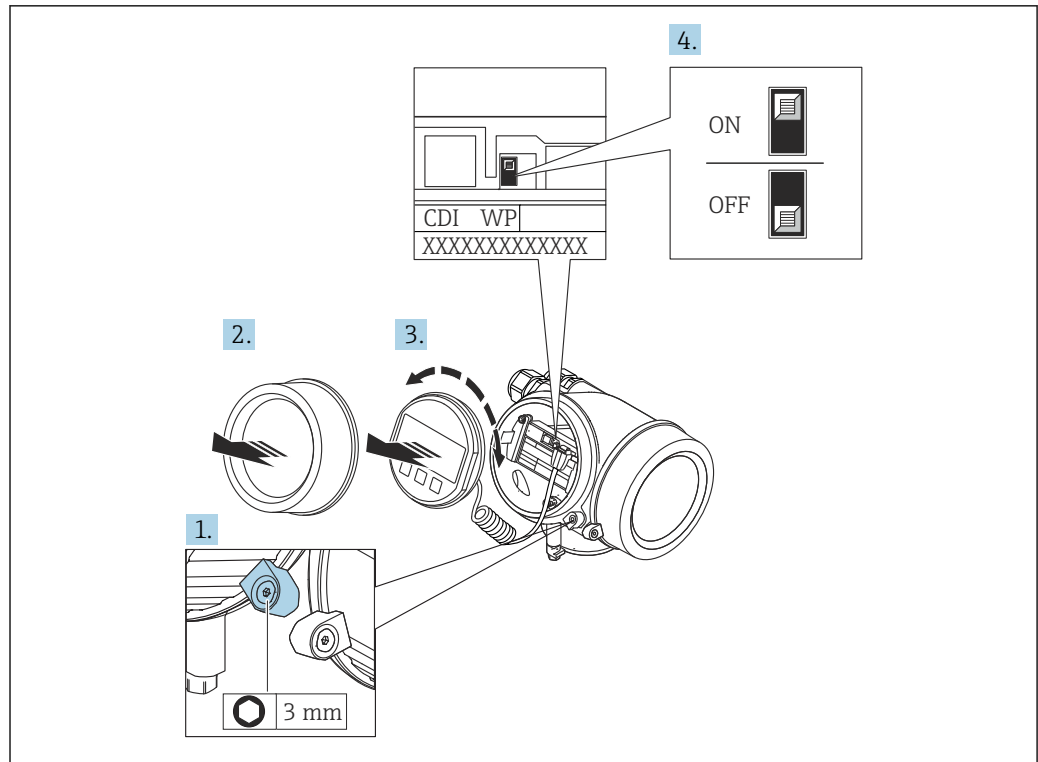


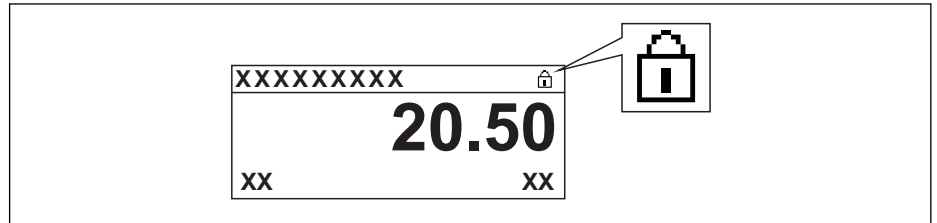
A0026157

1. Loosen the securing clamp.
2. Unscrew the electronics compartment cover.
3. Pull out the display module with a gentle rotational movement. To make it easier to access the lock switch, attach the display module to the edge of the electronics compartment.
 - ↳ Display module is attached to the edge of the electronics compartment.

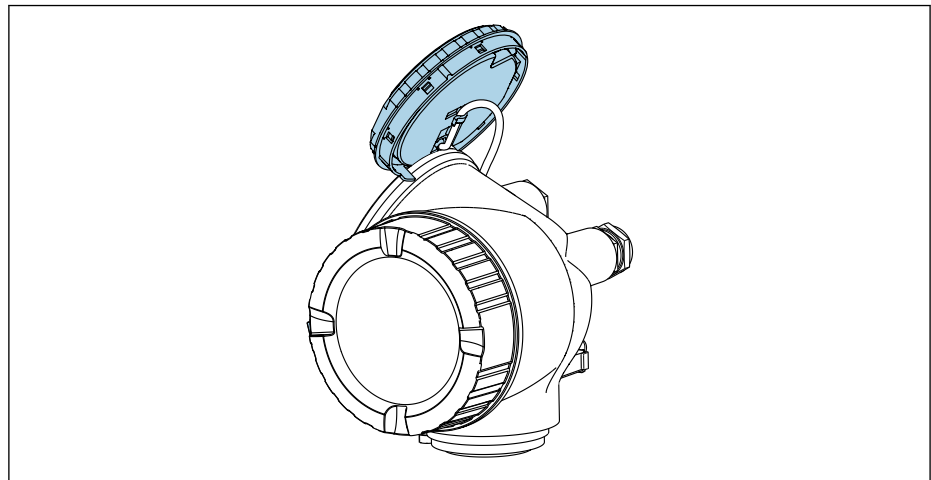


A0032236

4. Setting the write protection switch (WP) on the main electronics module to the **ON** position enables hardware write protection. Setting the write protection switch (WP) on the main electronics module to the **OFF** position (factory setting) disables hardware write protection.
 - ↳ If the hardware write protection is enabled: The **Hardware locked** option is displayed in the **Locking status** parameter . In addition, on the local display the -symbol appears in front of the parameters in the header of the operational display and in the navigation view.



A0015870

If the hardware write protection is disabled: No option is displayed in the **Locking status** parameter . On the local display, the -symbol disappears from in front of the parameters in the header of the operational display and in the navigation view.

5. Feed the cable into the gap between the housing and main electronics module and plug the display module into the electronics compartment in the desired direction until it engages.
6. Reverse the removal procedure to reassemble the transmitter.

8.2.7 Enabling and disabling the keypad lock

The keypad lock makes it possible to block access to the entire operating menu via local operation. As a result, it is no longer possible to navigate through the operating menu or change the values of individual parameters. Users can only read the measured values on the operational display.

The keypad lock is switched on and off via the context menu.

Switching on the keypad lock



For the SD03 display only

The keypad lock is switched on automatically:

- If the device has not been operated via the display for > 1 minute.
- Each time the device is restarted.

To activate the keylock manually:

1. The device is in the measured value display.
Press for at least 2 seconds.
↳ A context menu appears.
2. In the context menu select the **Keylock on** option.
↳ The keypad lock is switched on.




If the user attempts to access the operating menu while the keypad lock is active, the message **Keylock on** appears.

Switching off the keypad lock

1. The keypad lock is switched on.
Press for at least 2 seconds.
↳ A context menu appears.
2. In the context menu select the **Keylock off** option.
↳ The keypad lock is switched off.

8.3 Display and operating module

8.3.1 Display appearance

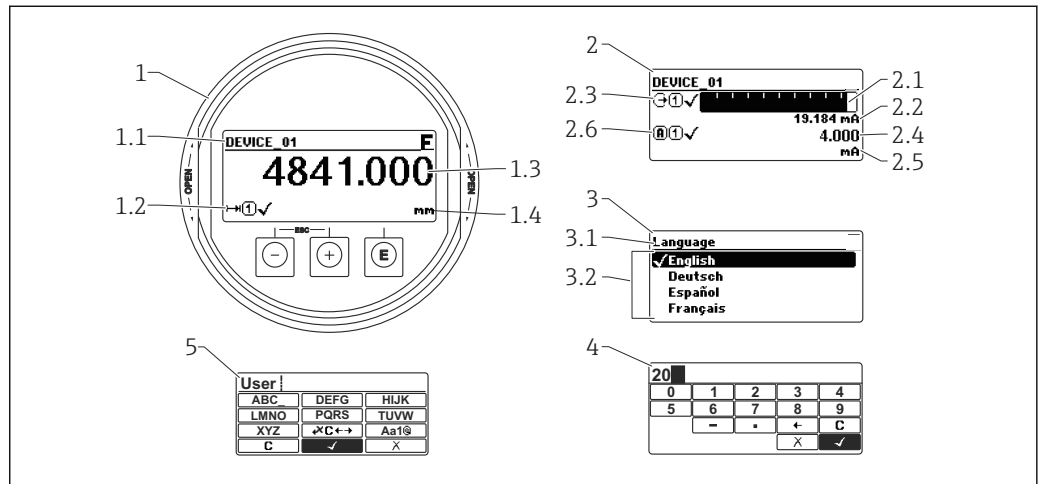





A0012635

18 Appearance of the display and operation module for on-site operation

- 1 Measured value display (1 value max. size)
- 1.1 Header containing tag and error symbol (if an error is active)
- 1.2 Measured value symbols
- 1.3 Measured value
- 1.4 Unit
- 2 Measured value display (1 bargraph + 1 value)
- 2.1 Bargraph for measured value 1
- 2.2 Measured value 1 (including unit)
- 2.3 Measured value symbols for measured value 1
- 2.4 Measured value 2
- 2.5 Unit for measured value 2
- 2.6 Measured value symbols for measured value 2
- 3 Representation of a parameter (here: a parameter with selection list)
- 3.1 Header containing parameter name and error symbol (if an error is active)
- 3.2 Selection list; marks the current parameter value.
- 4 Input matrix for numbers
- 5 Input matrix for alphanumeric and special characters



Display symbols for the submenus

Symbol	Meaning
 <small>A0018367</small>	Display/operation Is displayed: <ul style="list-style-type: none"> in the main menu next to the selection "Display/operation" in the header, if you are in the "Display/operation" menu
 <small>A0018364</small>	Setup Is displayed: <ul style="list-style-type: none"> in the main menu next to the selection "Setup" in the header, if you are in the "Setup" menu
 <small>A0018365</small>	Expert Is displayed: <ul style="list-style-type: none"> in the main menu next to the selection "Expert" in the header, if you are in the "Expert" menu
 <small>A0018366</small>	Diagnostics Is displayed: <ul style="list-style-type: none"> in the main menu next to the selection "Diagnostics" in the header, if you are in the "Diagnostics" menu











Status signals

F <small>A0032902</small>	"Failure" A device error is present. The measured value is no longer valid.
C <small>A0032903</small>	"Function check" The device is in service mode (e.g. during a simulation).
S <small>A0032904</small>	"Out of specification" The device is operated: <ul style="list-style-type: none"> Outside of its technical specifications (e.g. during startup or a cleaning) Outside of the configuration carried out by the user (e.g. level outside configured span)
M <small>A0032905</small>	"Maintenance required" Maintenance is required. The measured value is still valid.







Display symbols for the locking state

Symbol	Meaning
 <small>A0013148</small>	Display parameter Marks display-only parameters which can not be edited.
 <small>A0013150</small>	Device locked <ul style="list-style-type: none"> In front of a parameter name: The device is locked via software and/or hardware. In the header of the measured value screen: The device is locked via hardware.


Measured value symbols

Symbol	Meaning
Measured values	
 A0032892	Level
 A0032893	Distance
 A0032908	Current output
 A0032894	Measured current
 A0032895	Terminal voltage
 A0032896	Temperature of the electronics or the sensor
Measuring channels	
 A0032897	Measuring channel 1
 A0032898	Measuring channel 2
Status of the measured value	
 A0018361	Status "Alarm" The measurement is interrupted. The output assumes the defined alarm value. A diagnostic message is generated.
 A0018360	Status "Warning" The device continues measuring. A diagnostic message is generated.

8.3.2 Operating elements

Key	Meaning
 <small>A0018330</small>	<p>Minus key</p> <p><i>For menu, submenu</i> Moves the selection bar upwards in a picklist.</p> <p><i>For text and numeric editor</i> In the input mask, moves the selection bar to the left (backwards).</p>
 <small>A0018329</small>	<p>Plus key</p> <p><i>For menu, submenu</i> Moves the selection bar downwards in a picklist.</p> <p><i>For text and numeric editor</i> In the input mask, moves the selection bar to the right (forwards).</p>
 <small>A0018328</small>	<p>Enter key</p> <p><i>For measured value display</i></p> <ul style="list-style-type: none"> ▪ Pressing the key briefly opens the operating menu. ▪ Pressing the key for 2 s opens the context menu. <p><i>For menu, submenu</i></p> <ul style="list-style-type: none"> ▪ Pressing the key briefly Opens the selected menu, submenu or parameter. ▪ Pressing the key for 2 s for parameter: If present, opens the help text for the function of the parameter. <p><i>For text and numeric editor</i></p> <ul style="list-style-type: none"> ▪ Pressing the key briefly <ul style="list-style-type: none"> – Opens the selected group. – Carries out the selected action. ▪ Pressing the key for 2 s confirms the edited parameter value.
 <small>A0032909</small>	<p>Escape key combination (press keys simultaneously)</p> <p><i>For menu, submenu</i></p> <ul style="list-style-type: none"> ▪ Pressing the key briefly <ul style="list-style-type: none"> – Exits the current menu level and takes you to the next higher level. – If help text is open, closes the help text of the parameter. ▪ Pressing the key for 2 s returns you to the measured value display ("home position"). <p><i>For text and numeric editor</i> Closes the text or numeric editor without applying changes.</p>
 <small>A0032910</small>	<p>Minus/Enter key combination (press and hold down the keys simultaneously)</p> <p>Reduces the contrast (brighter setting).</p>
 <small>A0032911</small>	<p>Plus/Enter key combination (press and hold down the keys simultaneously)</p> <p>Increases the contrast (darker setting).</p>



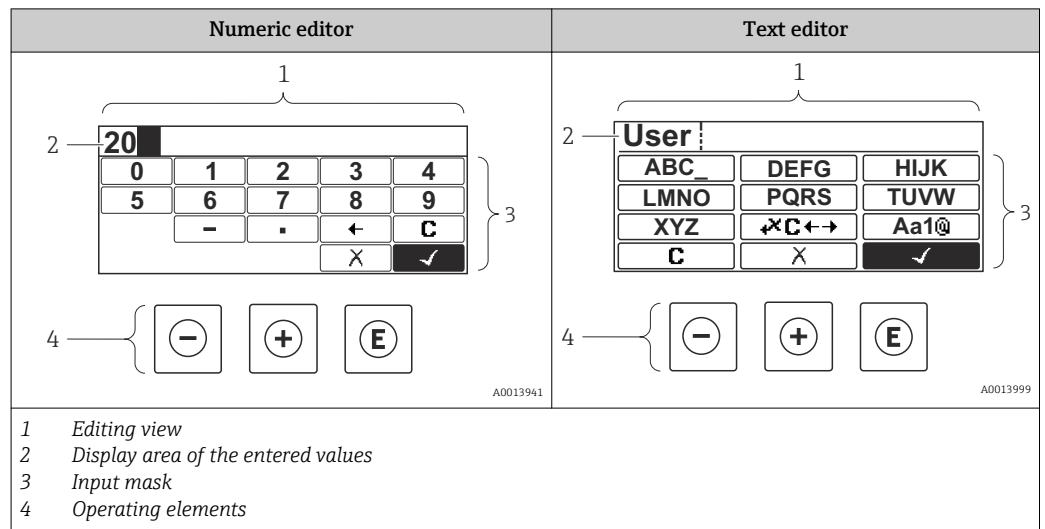




8.3.3 Entering numbers and text





Input mask





The following input symbols are available in the input mask of the numeric and text editor:


Numeric editor symbols





Symbol	Meaning
 <small>A0013998</small>	Selection of numbers from 0 to 9.
 <small>A0016619</small>	Inserts decimal separator at the input position.
 <small>A0016620</small>	Inserts minus sign at the input position.
 <small>A0013985</small>	Confirms selection.
 <small>A0016621</small>	Moves the input position one position to the left.
 <small>A0013986</small>	Exits the input without applying the changes.
 <small>A0014040</small>	Clears all entered characters.

Text editor symbols

Symbol	Meaning
 <small>A0013997</small>	Selection of letters from A to Z
 <small>A0013981</small>	Toggle <ul style="list-style-type: none"> Between upper-case and lower-case letters For entering numbers For entering special characters

 <small>A0013985</small>	Confirms selection.
 <small>A0013987</small>	Switches to the selection of the correction tools.
 <small>A0013986</small>	Exits the input without applying the changes.
 <small>A0014040</small>	Clears all entered characters.

Correction symbols under 

Symbol	Meaning
 <small>A0032907</small>	Clears all entered characters.
 <small>A0018324</small>	Moves the input position one position to the right.
 <small>A0018326</small>	Moves the input position one position to the left.
 <small>A0032906</small>	Deletes one character immediately to the left of the input position.


8.3.4 Opening the context menu


Using the context menu, the user can call up the following menus quickly and directly from the operational display:

- Setup
- Conf. backup disp.
- Env. curve
- Keylock on



Kontextmenü aufrufen und schließen

The user is in the operational display.

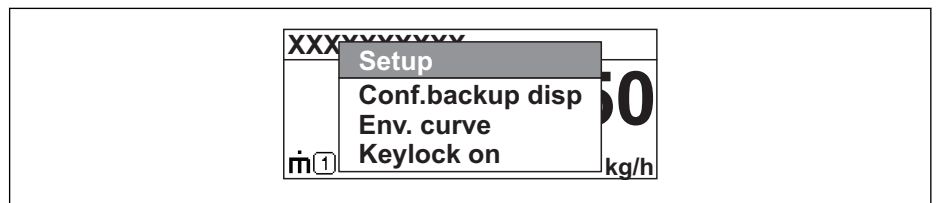

1. Press  for 2 s.
 - ↳ The context menu opens.



A0033110-EN


2. Press  +  simultaneously.
 - ↳ The context menu is closed and the operational display appears.

Calling up the menu via the context menu

1. Open the context menu.
2. Press  to navigate to the desired menu.
3. Press  to confirm the selection.
 - ↳ The selected menu opens.

8.3.5 Envelope curve on the display and operating module

In order to assess the measuring signal, the envelope curve and - if a mapping has been recorded - the mapping curve can be displayed:

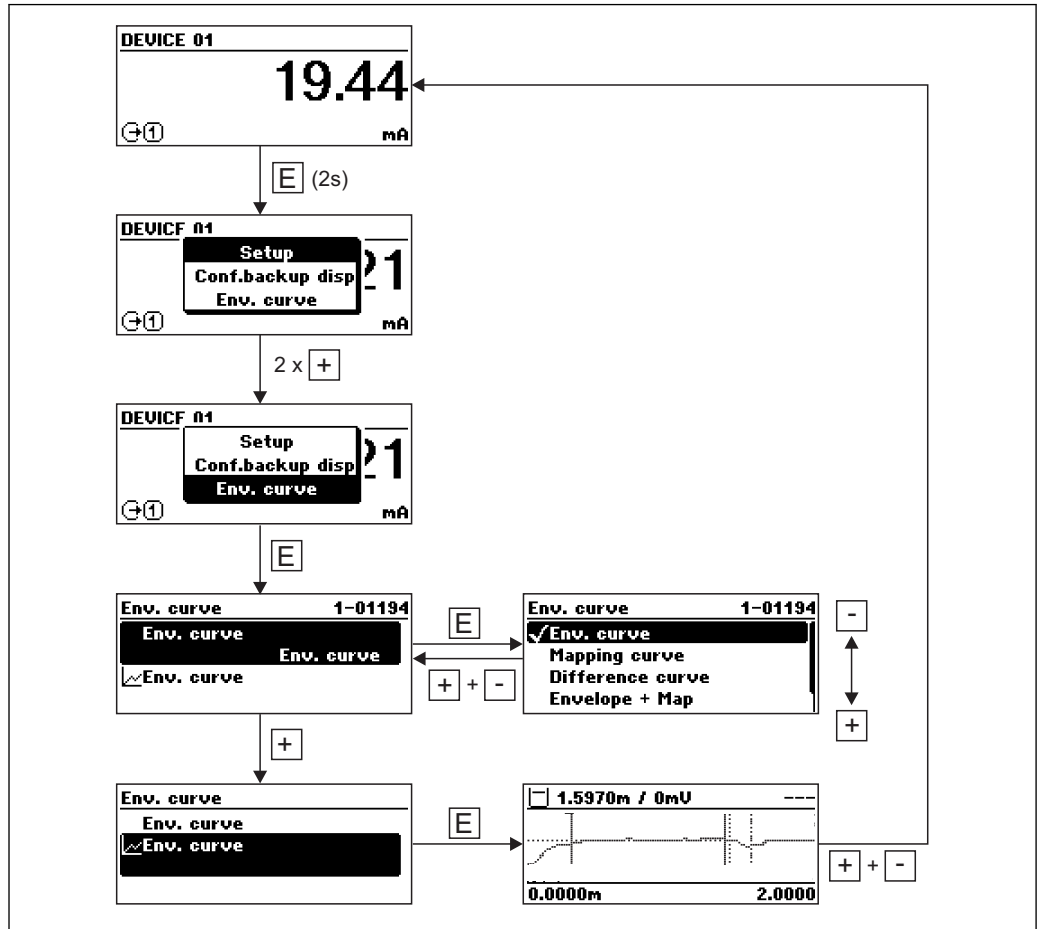

A0014277

9 System integration via HART protocol



9.1 Overview of the Device Description files (DD)

Manufacturer ID	17 (0x11)
Device type	0x112B
HART specification	7.0
DD files	For information and files see: <ul style="list-style-type: none"> ▪ www.endress.com ▪ www.hartcomm.org

9.2 Measured values via HART protocol

On delivery the following measuring values are assigned to the HART device variables:


Device variable	Measuring value
Primary variable (PV)	Level linearized
Secondary variable (SV)	Distance
Tertiary variable (TV)	Absolute echo amplitude
Quaternary variable (QV)	Relative echo amplitude

-  The allocation of the device variables can be changed in the operating menu:
Expert → Communication → Output
-  In a HART multidrop loop only one device may use the output current for signal transmission. For all other devices the following must be set:
 - **"Current span" parameter = "Fixed current" option**
 - **"Fixed current" parameter = 4 mA**

10 Commissioning via wizard

A wizard guiding the user through the initial setup is available in FieldCare and DeviceCare.

1. Connect the device to FieldCare or DeviceCare → 43.
2. Open the device in FieldCare or DeviceCare.
 - ↳ The dashboard (home page) of the device appears:

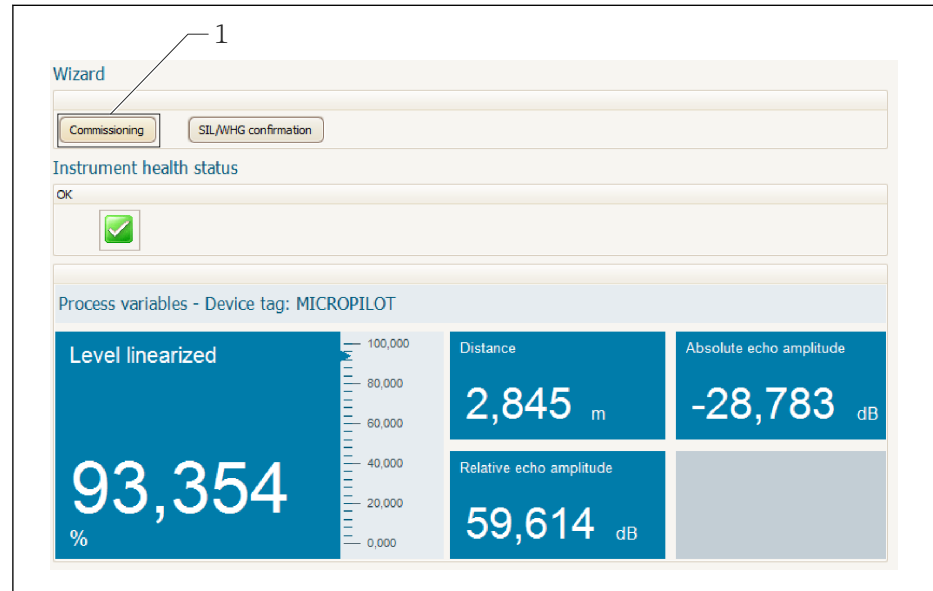

A0027720

1 "Commissioning" button calls up the wizard.

3. Click on "Commissioning" to call up the wizard.
 4. Enter or select the appropriate value for each parameter. These values are immediately written to the device.
 5. Click "Next" to switch to the next page.
 6. After finishing the last page, click "End of sequence" to close the wizard.
- i** If the wizard is cancelled before all necessary parameters have been set, the device may be in an undefined state. A reset to the default settings is recommended in this case.

11 Commissioning via operating menu


11.1 Installation and function check

Make sure that all final checks have been completed before you start up your measuring point:

- Checklist "Post-installation check" → 29
- Checklist "Post-connection check" → 40

11.2 Setting the operating language


Factory setting: English or ordered local language

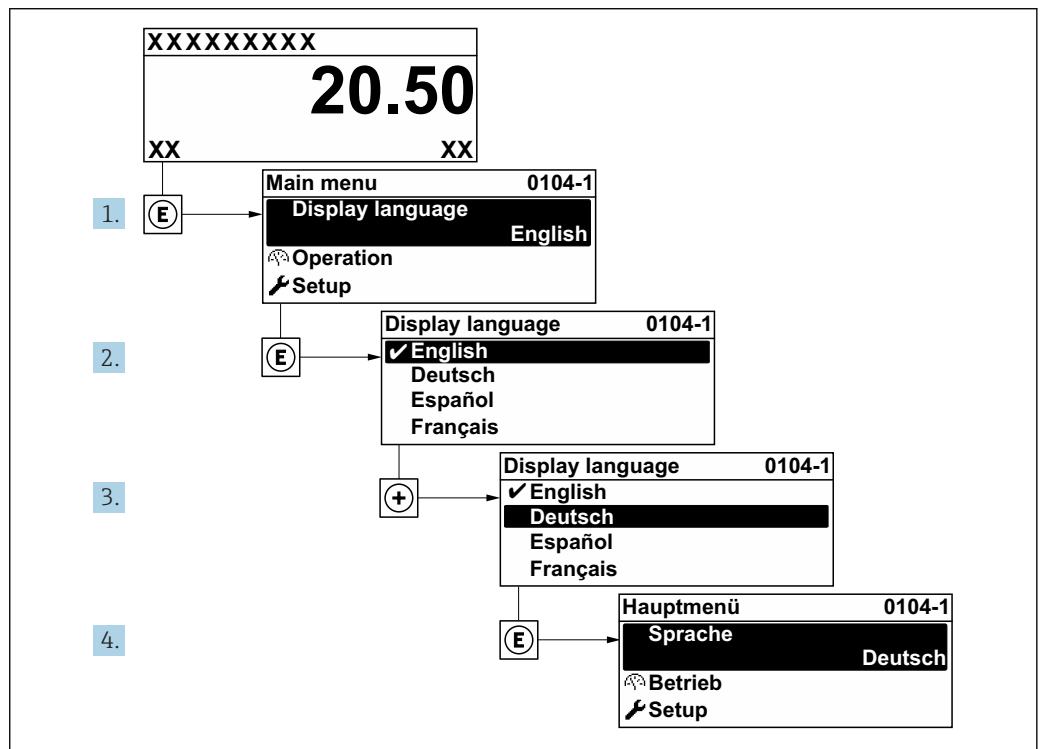

19 Using the example of the local display


A0029420

11.3 Configuration of a level measurement

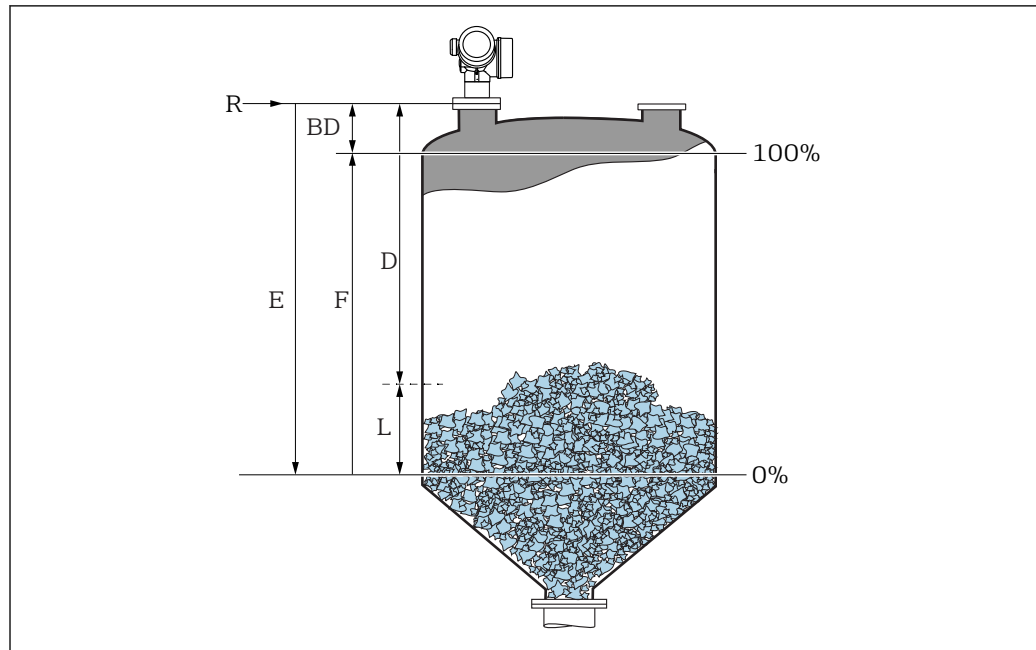

1. Setup → Device tag
 - ↳ Enter device tag.
2. Setup → Distance unit
 - ↳ Select distance unit.
3. Setup → Bin type
 - ↳ Select bin type.
4. Setup → Max. filling speed solid
 - ↳ Enter maximum expected filling speed.
5. Setup → Max. draining speed solid
 - ↳ Enter maximum expected draining speed.
6. Setup → Empty calibration
 - ↳ Enter empty distance E (Distance from reference point R to the 0% level)
7. If the measuring range covers only an upper part of the tank or silo (E is much less-than the tank/silo height), it is mandatory to enter the actual tank or silo height into the parameter. If there is an outlet cone, the tank or silo height should not be adjusted as usually E is not much less-than the tank/silo height in these applications.
 - Setup → Advanced setup → Level → Tank/silo height
8. Setup → Full calibration
 - ↳ Enter full distance F (Distance from the 0% to the 100% level).
9. Setup → Level
 - ↳ Indicates the measured level L.
10. Setup → Distance
 - ↳ Indicates the measured distance from the reference point R to the level L.
11. Setup → Signal quality
 - ↳ Indicates the quality of the evaluated level echo.
12. Setup → Mapping → Confirm distance
 - ↳ Compare distance indicated on the display to real distance in order to start the recording of an interference echo map.

13. Setup → Advanced setup → Level → Level unit
 - ↳ Select level unit: %, m, mm, ft, in (Factory setting: %)

 It is strongly recommended to adjust the maximum filling and draining speed to the actual process.

11.4 Recording the reference curve


After the configuration of the measurement it is recommended to record the current envelope curve as a reference curve. The reference curve can be used later on in the process for diagnostic purposes. To record the reference curve use the **Save reference curve** parameter.

Navigation in the menu

Expert → Diagnostics → Envelope diagnostics → Save reference curve

Meaning of the options

- No
No action
- Yes
The current envelope curve is saved as reference curve.

 The reference curve can only be displayed in the envelope curve diagram of FieldCare after it has been loaded from the device into FieldCare. This is performed by the "Load Reference Curve" function in FieldCare.



 20 The "Load Reference Curve" function

11.5 Configuration of the on-site display

11.5.1 Factory settings of the on-site display

Parameter	Factory setting
Language	English
Value 1 display	Level linearized
Value 2 display	None
Value 3 display	None
Value 4 display	None

11.5.2 Adjustment of the on-site display

The on-site display can be adjusted in the following submenu:
Setup → Advanced setup → Display

11.6 Configuration of the current outputs

11.6.1 Factory setting of the current outputs

Current output	Allocated measuring value	4 mA value	20 mA value
1	Level linearized	0% or the corresponding linearized value	100% or the corresponding linearized value
2 ¹⁾	Distance	0	Empty calibration

1) for devices with 2 current outputs

11.6.2 Adjustment of the current outputs

The current outputs can be adjusted in the following menus:

Basic settings

Setup → Advanced setup → Current output 1 to 2

Advanced settings

Expert → Output → Current output 1

See "Description of Device Parameters", GP01101F

11.7 Configuration management

After commissioning, you can save the current device configuration, copy it to another measuring point or restore the previous device configuration. You can do so using the **Configuration management** parameter and its options.

Navigation path in the operating menu

Setup → Advanced setup → Configuration backup display → Configuration management

Meaning of the options

- **Cancel**

No action is executed and the user exits the parameter.

- **Execute backup**

A backup copy of the current device configuration in the HistoROM (built-in in the device) is saved to the display module of the device. The backup copy comprises the transmitter and sensor data of the device.

- **Restore**

The last backup copy of the device configuration is copied from the display module to the HistoROM of the device. The backup copy comprises the transmitter and sensor data of the device.

- **Duplicate**

The transmitter configuration is duplicated to another device using the transmitter display module. The following parameters, which characterize the individual measuring point are **not** included in the transmitted configuration:

- HART date code
- HART short tag
- HART message
- HART descriptor
- HART address
- Device tag
- Medium type


- **Compare**



The device configuration saved in the display module is compared to the current device configuration of the HistoROM. The result of this comparison is displayed in the

Comparison result parameter angezeigt.

- **Clear backup data**

The backup copy of the device configuration is deleted from the display module of the device.



 While this action is in progress, the configuration cannot be edited via the local display and a message on the processing status appears on the display.

 If an existing backup is restored to a different device using the **Restore** option, it may occur that some device functionalities are no longer available. In some cases even a device reset →  153 will not restore the original status.

In order to transmit a configuration to a different device, the **Duplicate** option should always be used.

11.8 Protection of the settings against unauthorized changes







There are two ways to protect the settings against unauthorized changes:

- Via parameter settings (software locking) →  48
- Via locking switch (hardware locking) →  49

12 Diagnostics and troubleshooting

12.1 General trouble shooting

12.1.1 General errors

Error	Possible cause	Remedial action
Device does not respond.	Supply voltage does not match the value indicated on the nameplate.	Connect the correct voltage.
	The polarity of the supply voltage is wrong.	Correct the polarity.
	The cables do not contact the terminals properly.	Ensure electrical contact between the cable and the terminal.
Values on the display invisible	Contrast setting is too weak or too strong.	<ul style="list-style-type: none"> ▪ Increase contrast by pressing  and  simultaneously. ▪ Decrease contrast by pressing  and  simultaneously.
	The plug of the display cable is not connected correctly.	Connect the plug correctly.
	Display is defective.	Replace display.
"Communication error" is indicated on the display when starting the device or connecting the display	Electromagnetic interference	Check grounding of the device.
	Broken display cable or display plug.	Replace display.
Output current <3.6 mA	Signal cable connection incorrect.	Check connection.
	Electronics is defective.	Replace electronics.
HART communication does not function.	Communication resistor missing or incorrectly installed.	Install the communication resistor(250 Ω) correctly →  30.
	Commubox connected incorrectly.	Connect Commubox correctly →  44.
	Commubox not switched to HART mode.	Set the selection switch of the Commubox to the HART position.
CDI communication does not work.	Wrong setting of the COM port on the computer.	Check the setting of the COM port on the computer and change it if necessary.
Device measures incorrectly.	Parametrization error	Check and adjust parameterization.

12.1.2 Parametrization errors


Error	Possible cause	Remedy
Measured value incorrect	If measured distance (Setup → Distance) matches the real distance: Calibration error	<ul style="list-style-type: none"> ▪ Check and adjust Empty calibration parameter if necessary. ▪ Check and adjust Full calibration parameter if necessary. ▪ Check and adjust linearization if necessary (Linearization submenu).
	Level correction set incorrectly	Enter correct value in Level correction parameter.
	If measured distance (Setup → Distance) does not match the real distance: Interference echo	Carry out tank mapping (Confirm distance parameter).

Error	Possible cause	Remedy
No change of measured value on filling / emptying	Interference echo from installations, nozzle or build-up on the antenna.	<ul style="list-style-type: none"> ■ Carry out tank mapping (Confirm distance parameter). ■ If possible, align antenna in the direction of the solid surface in order to prevent interference echoes. ■ If necessary, clean antenna (purge air). ■ If necessary, select a better mounting position and/or larger antenna.
During filling/emptying or measurement, the measured value jumps sporadically to a higher level.	Signal is weakened (e.g. by fluidisation of the surface, extreme dust formation) - the interference echoes are sometimes stronger. Strong build-up, filling stream in path of beam.	<ul style="list-style-type: none"> ■ Carry out tank mapping (Confirm distance parameter). ■ Increase integration time (Expert → Sensor → Distance → Integration time) ■ Optimize alignment of antenna ■ If necessary, select a better mounting position and/or larger antenna. ■ If necessary, clean antenna (purge air).
Error message F941 or S941 "Echo lost"	Level echo is too weak. Possible causes: <ul style="list-style-type: none"> ■ Fluidisation of the surface ■ Extreme dust formation ■ Angle or repose 	<ul style="list-style-type: none"> ■ Optimize alignment of antenna ■ If necessary, select a better mounting position and/or larger antenna.
Measured values jumps to higher levels and remains there.	<ul style="list-style-type: none"> ■ Build-up at container ■ Build-up at antenna ■ Strong condensate formation at antenna 	<ul style="list-style-type: none"> ■ Periodic cleaning ■ Carry out tank mapping (Confirm distance parameter). ■ Increase integration time (Expert → Sensor → Distance → Integration time) ■ Optimize alignment of antenna ■ If necessary, select a better mounting position and/or larger antenna.
Device displays a level when the tank is empty.	Interference echo	Carry out mapping over entire measuring range when the silo is empty (Confirm distance parameter).
Wrong slope of the level throughout the complete measuring range	Bin property or process properties incorrect	<ul style="list-style-type: none"> ■ Select the correct option in Bin type parameter. ■ Enter the actual values in "Max. filling speed solid" parameter and "Max. draining speed solid" parameter.

12.2 Diagnostic information on local display

12.2.1 Diagnostic message

Faults detected by the self-monitoring system of the measuring device are displayed as a diagnostic message in alternation with the measured value display.

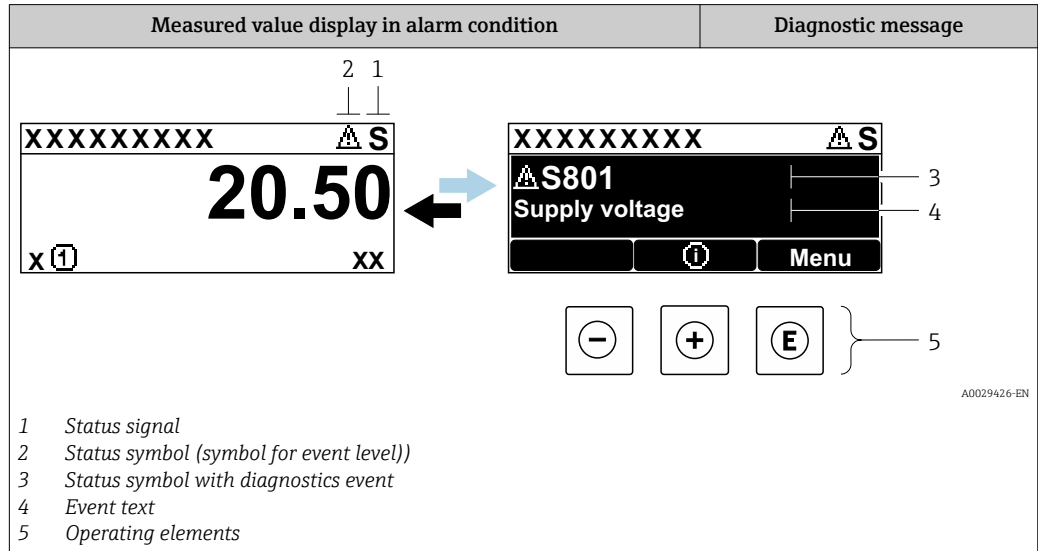

Status signals


F <small>A0032902</small>	"Failure (F)" option A device error is present. The measured value is no longer valid.
C <small>A0032903</small>	"Function check (C)" option The device is in service mode (e.g. during a simulation).
S <small>A0032904</small>	"Out of specification (S)" option The device is operated: <ul style="list-style-type: none"> ▪ Outside of its technical specifications (e.g. during startup or a cleaning) ▪ Outside of the configuration carried out by the user (e.g. level outside configured span)
M <small>A0032905</small>	"Maintenance required (M)" option Maintenance is required. The measured value is still valid.

Status symbol (symbol for event level)


⊗	"Alarm" status The measurement is interrupted. The signal outputs take on the defined alarm condition. A diagnostic message is generated.
⚠	"Warning" status The device continues to measure. A diagnostic message is generated.

Diagnostics event and event text

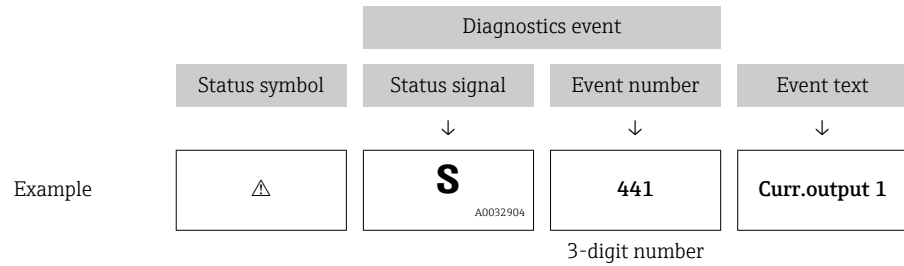

The fault can be identified using the diagnostics event. The event text helps you by providing information about the fault. In addition, the corresponding symbol is displayed before the diagnostics event.




If two or more diagnostic messages are pending simultaneously, only the message with the highest priority is shown. Additional pending diagnostic messages can be shown in the **Diagnostic list** submenu.

-  Past diagnostic messages that are no longer pending are shown as follows:
 - On the local display:
in the **Event logbook** submenu
 - In FieldCare:
via the "Event List /HistoROM" function.

Operating elements

Operating functions in menu, submenu	
	Plus key Opens the message about the remedial measures.
	Enter key Opens the operating menu.

12.2.2 Calling up remedial measures

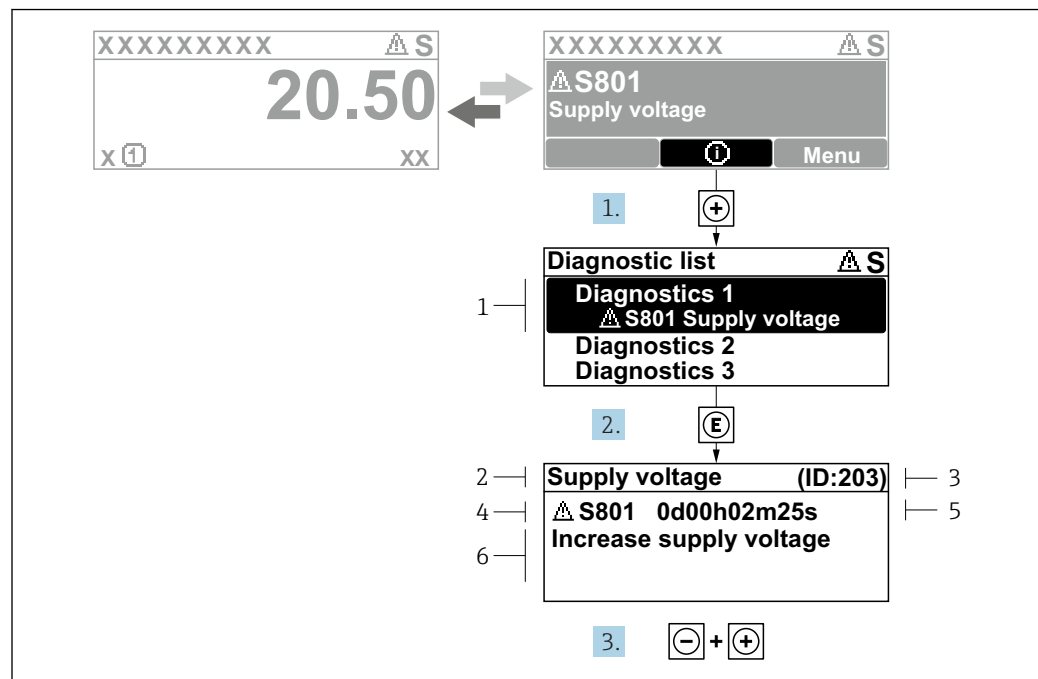

21 Message for remedial measures

- 1 Diagnostic information
- 2 Short text
- 3 Service ID
- 4 Diagnostic behavior with diagnostic code
- 5 Operation time of occurrence
- 6 Remedial measures

The user is in the diagnostic message.

1. Press **+** (Ⓢ-Symbol).
 - ↳ **Diagnostic list** submenu opens.
2. Select the desired diagnostic event with **+** or **-** and press **E**.
 - ↳ The message for the remedial measures for the selected diagnostic event opens.
3. Press **-** + **+** simultaneously.
 - ↳ The message for the remedial measures closes.

The user is in the **Diagnostics** menu at an entry for a diagnostics event, e.g. in **Diagnostic list** submenu or in **Previous diagnostics**.

1. Press **E**.
 - ↳ The message for the remedial measures for the selected diagnostic event opens.
2. Press **-** + **+** simultaneously.
 - ↳ The message for the remedial measures closes.

12.3 Diagnostic event in the operating tool

If a diagnostic event is present in the device, the status signal appears in the top left status in the operating tool along with the corresponding symbol for event level in accordance with NAMUR NE 107:

- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)

Calling up remedial measures

1. Navigate to the **Diagnostics** menu.
 - ↳ In the **Actual diagnostics** parameter, the diagnostic event is shown with event text.
2. On the right in the display range, hover the cursor over the **Actual diagnostics** parameter.
 - ↳ A tool tip with remedial measures for the diagnostic event appears.




12.4 Diagnostic list

In the **Diagnostic list** submenu submenu, up to 5 currently pending diagnostic messages can be displayed. If more than 5 messages are pending, the messages with the highest priority are shown on the display.

Navigation path

Diagnostics → Diagnostic list

Calling up and closing the remedial measures

1. Press .
- ↳ The message for the remedial measures for the selected diagnostic event opens.
2. Press  +  simultaneously.
- ↳ The message about the remedial measures closes.

12.5 Overview of diagnostic events

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
Diagnostic of sensor				
046	Build-up detected	Clean sensor	F	Alarm ¹⁾
102	Sensor incompatible error	1. Restart device 2. Contact service	F	Alarm
151	Sensor electronic failure	Replace sensor electronic module	F	Alarm
Diagnostic of electronic				
242	Software incompatible	1. Check software 2. Flash or change main electronics module	F	Alarm
252	Modules incompatible	1. Check electronic modules 2. Change I/O or main electronic module	F	Alarm
261	Electronic modules	1. Restart device 2. Check electronic modules 3. Change I/O Modul or main electronics	F	Alarm
262	Module connection	1. Check module connections 2. Change electronic modules	F	Alarm
270	Main electronic failure	Change main electronic module	F	Alarm
271	Main electronic failure	1. Restart device 2. Change main electronic module	F	Alarm
272	Main electronic failure	1. Restart device 2. Contact service	F	Alarm
273	Main electronic failure	1. Emergency operation via display 2. Change main electronics	F	Alarm
275	I/O module defective	Change I/O module	F	Alarm
276	I/O module faulty	1. Restart device	F	Alarm
276	I/O module failure	2. Change I/O module	F	Alarm
282	Data storage	1. Restart device 2. Contact service	F	Alarm
283	Memory content	1. Transfer data or reset device 2. Contact service	F	Alarm
311	Electronic failure	Maintenance required! 1. Do not perform reset 2. Contact service	M	Warning
Diagnostic of configuration				
410	Data transfer	1. Check connection 2. Retry data transfer	F	Alarm
411	Up-/download active	Up-/download active, please wait	C	Warning
412	Processing download	Download active, please wait	C	Warning
431	Trim 1 to 2	Carry out trim	C	Warning
435	Linearization	Check linearization table	F	Alarm
437	Configuration incompatible	1. Restart device 2. Contact service	F	Alarm

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
438	Dataset	1. Check data set file 2. Check device configuration 3. Up- and download new configuration	M	Warning
441	Current output 1 to 2	1. Check process 2. Check current output settings	S	Warning
484	Failure mode simulation	Deactivate simulation	C	Alarm
485	Simulation measured value	Deactivate simulation	C	Warning
491	Current output 1 to 2 simulation	Deactivate simulation	C	Warning
494	Switch output simulation	Deactivate simulation switch output	C	Warning
495	Diagnostic event simulation	Deactivate simulation	C	Warning
585	Simulation distance	Deactivate simulation	C	Warning
586	Record map	Recording of mapping please wait	C	Warning
Diagnostic of process				
801	Energy too low	Increase supply voltage	S	Warning
803	Current loop	1. Check wiring 2. Change I/O module	F	Alarm
825	Operating temperature	1. Check ambient temperature 2. Check process temperature	S	Warning
825	Operating temperature		F	Alarm
921	Change of reference	1. Check reference configuration 2. Check pressure 3. Check sensor	S	Warning
941	Echo lost	Check parameter 'DC value'	S	Warning ¹⁾
942	In safety distance	1. Check level 2. Check safety distance 3. Reset self holding	S	Alarm ¹⁾
943	In blocking distance	Reduced accuracy Check level	S	Warning
950	Advanced diagnostic 1 to 4 occurred	Maintain your diagnostic event	M	Warning ¹⁾
952	Foam detected	Check process conditions	F	Alarm ¹⁾

1) Diagnostic behavior can be changed.

12.6 Event logbook

12.6.1 Event history

A chronological overview of the event messages that have occurred is provided in the **Event list** submenu ⁵⁾.

5) This submenu is only available for operation via local display. In the case of operation via FieldCare, the event list can be displayed with the "Event List / HistoROM" functionality of FieldCare.

Navigation path

Diagnostics → Event logbook → Event list

A maximum of 100 event messages can be displayed in chronological order.




Die Ereignishistorie umfasst Einträge zu:

- Diagnostic events
- Information events

In addition to the operation time of its occurrence, each event is also assigned a symbol that indicates whether the event has occurred or is ended:

- Diagnostic event
 - ☹: Event has occurred
 - ☺: Event has ended
- Information event
 - ☹: Event has occurred

Calling up and closing the remedial measures

1. Press 
 - ↳ The message for the remedial measures for the selected diagnostic event opens.
2. Press  +  simultaneously.
 - ↳ The message about the remedial measures closes.

12.6.2 Filtering the event logbookUsing the **Filter options** parameter, you can define which category of event messages is displayed in the **Event list** submenu.**Navigation path**

Diagnostics → Event logbook → Filter options

Filter categories

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information

12.6.3 Overview of information events


Info number	Info name
I1000	----- (Device ok)
I1089	Power on
I1090	Configuration reset
I1091	Configuration changed
I1092	Embedded HistoROM deleted
I1110	Write protection switch changed
I1137	Electronic changed
I1151	History reset
I1154	Reset terminal voltage min/max
I1155	Reset electronic temperature
I1156	Memory error trend
I1157	Memory error event list

Info number	Info name
I1184	Display connected
I1185	Display backup done
I1186	Restore via display done
I1187	Settings downloaded with display
I1188	Display data cleared
I1189	Backup compared
I1256	Display: access status changed
I1264	Safety sequence aborted
I1335	Firmware changed
I1397	Fieldbus: access status changed
I1398	CDI: access status changed
I1512	Download started
I1513	Download finished
I1514	Upload started
I1515	Upload finished
I1554	Safety sequence started
I1555	Safety sequence confirmed
I1556	Safety mode off

12.7 Firmware history

Date	Firmware version	Modifications	Documentation (FMR67, HART)	
			Operating Instructions	Description of Parameters
01.2017	01.00.zz	Original software	BA01620F/00/EN/01.17 ¹⁾	GP01101F/00/EN/01.17

- 1) contains information on the Heartbeat wizards which are available in the latest DTM version for DeviceCare and FieldCare.

 The firmware version can explicitly be ordered via the product structure. In this way it is possible to ensure compatibility of the firmware version with an existing or planned system integration.

13 Maintenance

The measuring device requires no special maintenance.

13.1 Exterior cleaning

When exterior-cleaning the device, always use cleaning agents that do not attack the surface of the housing and the seals.

13.2 Replacing seals

The process seals of the sensors (at the process connection) must be replaced periodically, particularly if molded seals (aseptic construction) are used. The period between changes depends on the frequency of cleaning cycles and on the temperature of the measured substance and the cleaning temperature.

14 Repairs

14.1 General information on repairs

14.1.1 Repair concept

The Endress+Hauser repair concept assumes that the devices have a modular design and that repairs can be done by the Endress+Hauser service or specially trained customers.

Spare parts are contained in suitable kits. They contain the related replacement instructions.

For more information on service and spare parts, contact the Service Department at Endress+Hauser.

14.1.2 Repairs to Ex-approved devices

When carrying out repairs to Ex-approved devices, please note the following:


- Repairs to Ex-approved devices may only be carried out by trained personnel or by the Endress+Hauser Service.
- Comply with the prevailing standards, national Ex-area regulations, safety instructions (XA) and certificates.
- Only use original spare parts from Endress+Hauser.
- When ordering a spare part, please note the device designation on the nameplate. Only replace parts with identical parts.
- Carry out repairs according to the instructions. On completion of repairs, carry out the specified routine test on the device.
- Only Endress+Hauser Service may convert a certified device into a different certified variant.
- Document all repair work and conversions.

14.1.3 Replacement of an electronics module

If an electronics module has been replaced, it is not necessary to perform a new basic setup as the calibration parameters are stored in the HistoROM which is located in the housing. However, after exchanging the main electronics module it may be necessary to record a new mapping (interference echo suppression).

14.1.4 Replacement of a device


After a complete device or electronic module has been replaced, the parameters can be downloaded into the instrument again in one of the following ways:

- Via the display module
Condition: The configuration of the old device has been saved in the display module
→  150.
- Via FieldCare
Condition: The configuration of the old device has been saved to the computer via FieldCare.

You can continue to measure without carrying out a new setup. Only a linearization and a tank map (interference echo suppression) have to be recorded again.

14.2 Spare parts

- A few interchangeable measuring device components are identified by a spare part nameplate. This contains information about the spare part.
- The connection compartment cover of the device contains a spare part nameplate that includes the following information:
 - A list of the most important spare parts for the measuring device, including their ordering information.
 - The URL for the *W@M Device Viewer* (www.endress.com/deviceviewer): There, all spare parts for the measuring device are listed, including the order code, and can be ordered. If available, the corresponding Installation Instructions can also be downloaded there.

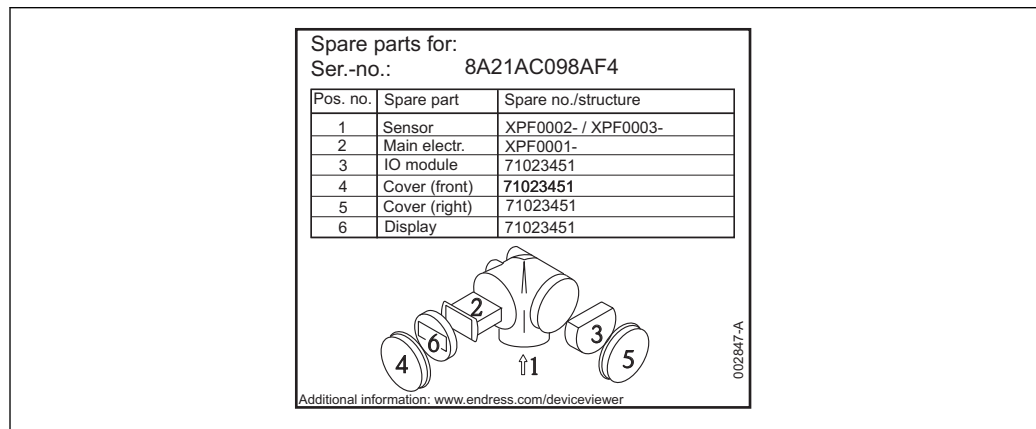

22 Example for spare part nameplate in connection compartment cover

- i** Measuring device serial number:
 - Is located on the device and spare part nameplate.
 - Can be read out via the "Serial number" parameter in the "Device information" submenu.

14.3 Return

The measuring device must be returned if it is need of repair or a factory calibration, or if the wrong measuring device has been delivered or ordered. Legal specifications require Endress+Hauser, as an ISO-certified company, to follow certain procedures when handling products that are in contact with the medium.

To ensure safe, swift and professional device returns, please refer to the procedure and conditions for returning devices provided on the Endress+Hauser website at <http://www.endress.com/support/return-material>

14.4 Disposal



Observe the following notes during disposal:

- Observe valid federal/national regulations.
- Ensure proper separation and reuse of the device components.

15 Accessories

15.1 Device-specific accessories

15.1.1 Weather protection cover

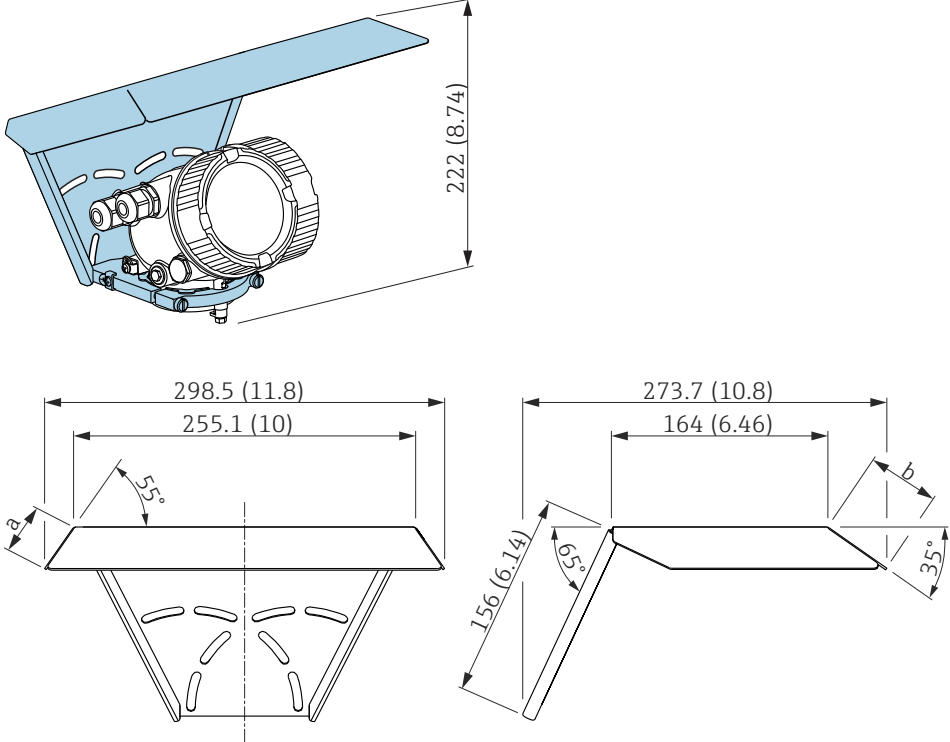

Accessory	Description
Weather protection cover	 <p data-bbox="1476 869 1528 882">A0015466</p> <p data-bbox="1476 1283 1528 1296">A0015472</p> <p data-bbox="416 1310 925 1339">☒ 23 Weather protection cover; Dimensions: mm (in)</p> <p data-bbox="416 1350 622 1379">a 37,8 mm (1,5 in)</p> <p data-bbox="416 1379 606 1408">b 54 mm (2,1 in)</p> <p data-bbox="416 1431 1492 1507">  The weather protection cover can be ordered together with the device (product structure, feature 620 "Accessory Enclosed", option PB "Weather Protection Cover"). Alternatively, it can be separately ordered as an accessory; order code 71162242. </p>

15.1.2 Adjustable flange seal

Accessories	Description			
Adjustable flange seal				
	<p>1 UNI slip-on flange 2 Adjustable flange seal 3 Nozzle</p>			
	<p>i The material properties and process conditions of the adjustable flange seal must be compatible with the properties (temperature, pressure, resistance) of the process.</p>			
	<p>i The adjustable flange seal can also be ordered directly with the device (product structure: feature 620 "Accessories enclosed", options PL, PM, PN, PO, PQ, PR).</p>			
	Technical data: version DN/JIS			
	Order number	71074263	71074264	71074265
	Compatible with	DN80 PN10/40	DN100 PN10/16	<ul style="list-style-type: none"> ■ DN150 PN10/16 ■ JIS 10K 150A
	Recommended screw length	100 mm (3.9 in)	100 mm (3.9 in)	110 mm (4.3 in)
	Recommended screw size	M14	M14	M18
	Material	EPDM		
Process pressure	-0.1 to 0.1 bar (-1.45 to 1.45 psi)			
Process temperature	-40 to +80 °C (-40 to +176 °F)			
D	142 mm (5.59 in)	162 mm (6.38 in)	218 mm (8.58 in)	
d	89 mm (3.5 in)	115 mm (4.53 in)	169 mm (6.65 in)	
h	22 mm (0.87 in)	23.5 mm (0.93 in)	26.5 mm (1.04 in)	
h _{min}	14 mm (0.55 in)	14 mm (0.55 in)	14 mm (0.55 in)	
h _{max}	30 mm (1.18 in)	33 mm (1.3 in)	39 mm (1.45 in)	

Accessories	Description			
	Technical data: version ASME/JIS			
Order number	71249070	71249072	71249073	
Compatible with	<ul style="list-style-type: none"> ■ ASME 3" 150lbs ■ JIS 80A 10K 	ASME 4" 150lbs	ASME 6" 150lbs	
Recommended screw length	100 mm (3.9 in)	100 mm (3.9 in)	110 mm (4.3 in)	
Recommended screw size	M14	M14	M18	
Material	EPDM			
Process pressure	-0.1 to 0.1 bar (-1.45 to 1.45 psi)			
Process temperature	-40 to +80 °C (-40 to +176 °F)			
D	133 mm (5.2 in)	171 mm (6.7 in)	219 mm (8.6 in)	
d	89 mm (3.5 in)	115 mm (4.53 in)	168 mm (6.6 in)	
h	22 mm (0.87 in)	23.5 mm (0.93 in)	26.5 mm (1.04 in)	
h _{min}	14 mm (0.55 in)	14 mm (0.55 in)	14 mm (0.55 in)	
h _{max}	30 mm (1.18 in)	33 mm (1.3 in)	39 mm (1.45 in)	


15.1.3 Mounting bracket adjustable

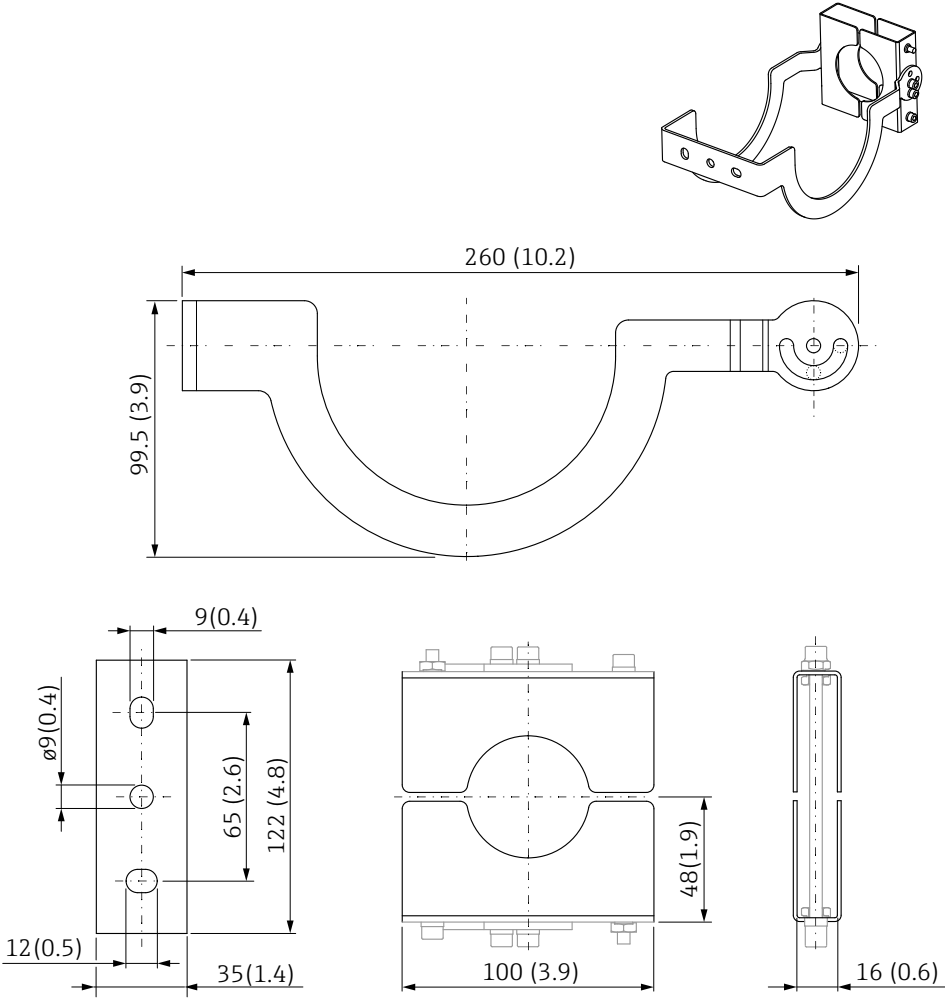Accessories	Description
Mounting bracket adjustable	 <p>Material: 304 (1.4301)</p> <p>Suitable for housing ¹⁾:</p> <ul style="list-style-type: none"> - A: GT19 dual compartment, plastic PBT - C: GT20 dual compartment, Alu, coated <p>Suitable for antenna ²⁾:</p> <p>GA: Drip-off, PTFE DN50</p> <p>Suitable for process connection ³⁾:</p> <ul style="list-style-type: none"> - GGJ: thread ISO228 G1-1/2, 316L - RGJ: thread ANSI MNPT1-1/2, 316L <p>Order number: 71336522</p> <p> There is no conductive connection between the mounting bracket and the transmitter housing.</p> <ul style="list-style-type: none"> ▪ Risk of electrostatic charge. ▪ Integrate the mounting bracket in the local potential equalization system. ▪ Only to be fastened at stable materials (e.g. metal, brick, concrete) using suitable fastening material (to be supplied by customer).

A0032295

- 1) Feature 040 in the product structure
 2) Feature 070 in the product structure
 3) Feature 100 in the product structure


15.1.4 Remote display FHX50

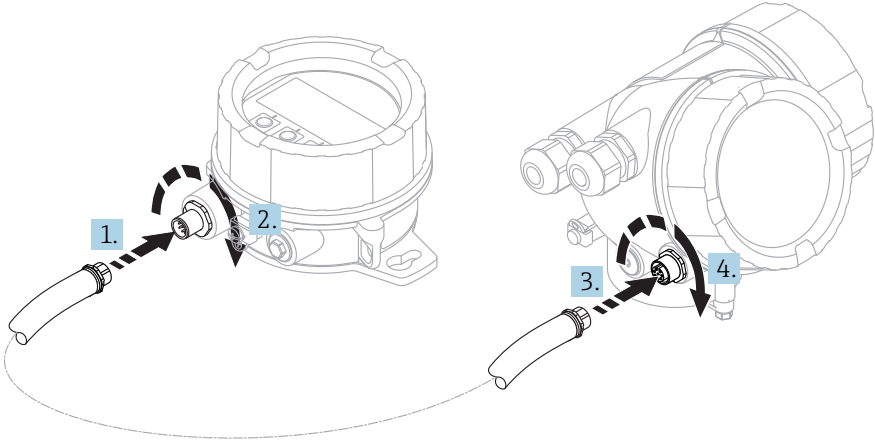
Accessories	Description
Remote display FHX50	<div style="text-align: center;">  </div> <p style="text-align: right; font-size: small;">A0019128</p> <ul style="list-style-type: none"> ▪ Material: <ul style="list-style-type: none"> - Plastic PBT - 316L/1.4404 ▪ Degree of protection: IP68 / NEMA 6P and IP66 / NEMA 4x ▪ Suitable for display modules: <ul style="list-style-type: none"> - SD02 (push buttons) - SD03 (touch control) ▪ Connecting cable: <ul style="list-style-type: none"> - Cable supplied with device up to 30 m (98 ft) - Standard cable supplied by customer up to 60 m (196 ft) ▪ Ambient temperature range: -40 to 80 °C (-40 to 176 °F) <p> i ▪ If the remote display should be used, order the device version "Prepared for display FHX50" (feature 030, version L or M). For the FHX50, you must select option A: "Prepared for display FHX50" under feature 050 "Measuring device version". </p> <p> i ▪ If the device version "Prepared for display FHX50" was not originally ordered and a FHX50 display is to be retrofitted, you must select version B "Not prepared for display FHX50" under feature 050: "Measuring device version" when ordering the FHX50. In this case, a retrofit kit for the device is supplied with the FHX50. The kit can be used to prepare the device so that the FHX50 can be used. </p> <p> i Use of the FHX50 may be restricted for transmitters with an approval. A device can only be retrofitted with the FHX50 if the option L or M ("Prepared for FHX50") is listed under <i>Basic specifications</i>, item 4 "Display, operation" in the Safety Instructions (XA) for the device. Also pay attention to the Safety Instructions (XA) of the FHX50. </p> <p> i Retrofitting is not possible on transmitters with: <ul style="list-style-type: none"> ▪ An approval for use in areas with flammable dust (dust ignition-proof approval) ▪ Ex nA type of protection </p> <p> i For details, see document SD01007F. </p>


15.1.5 Overvoltage protection


Accessory	Description
Overvoltage protection for 2-wire-devices OVP10 (1 channel) OVP20 (2 channel)	<div data-bbox="327 324 715 660" style="text-align: center;"> </div> <div data-bbox="1380 667 1437 683" style="text-align: right; font-size: small;">A0021734</div> <p>Technical data</p> <ul style="list-style-type: none"> ▪ Resistance per channel: $2 * 0.5 \Omega_{max}$ ▪ Threshold DC voltage: 400 to 700 V ▪ Threshold impulse voltage: < 800 V ▪ Capacitance at 1 MHz: < 1.5 pF ▪ Nominal arrest impulse voltage (8/20 μs): 10 kA ▪ Suited for wire cross-sections: 0.2 to 2.5 mm² (24 to 14 AWG) <p>i Ordering with device The overvoltage protection module is preferably ordered with the device. See product structure, feature 610 "Accessory mounted", option NA "Overvoltage protection". Separate ordering of the module is only necessary if a device is to be retrofitted with the overvoltage protection.</p> <p>i Order code for retrofitting</p> <ul style="list-style-type: none"> ▪ For 1-channel devices (feature 020, option A) OVP10: 71128617 ▪ For 2-channel devices (feature 020, option B, C, E or G) OVP20 : 71128619 <p>Housing lid for retrofitting In order to keep the necessary safety distances, the housing lid needs to be replaced if the device is retrofitted with the overvoltage protection. Depending on the housing type, the order code of the suitable lid is as follows:</p> <ul style="list-style-type: none"> ▪ GT18 housing: Lid 71185516 ▪ GT19 housing: Lid 71185518 ▪ GT20 housing: Lid 71185516 <p>i Restrictions for retrofitting Depending on the approval of the transmitter the usage of the OVP module may be restricted. A device may only be retrofitted with an OVP module if the option NA (overvoltage protection) is quoted under <i>Optional Specifications</i> in the Safety Instructions (XA) pertaining to the device.</p> <p>i For details refer to SD01090F.</p>


15.2 Communication-specific accessories


Accessory	Description
Commubox FXA195 HART	For intrinsically safe HART communication with FieldCare via the USB interface.  For details refer to Technical Information TI00404F


Accessory	Description
Commubox FXA291	Connects Endress+Hauser field devices with CDI interface (= Endress+Hauser Common Data Interface) to the USB interface of a computer. Order code: 51516983  For details refer to Technical Information TI00405C


Accessory	Description
HART Loop Converter HMX50	Evaluates the dynamic HART variables and converts them to analog current signals or limit values. Order code: 71063562  For details refer to Technical Information TI00429F and Operating Instructions BA00371F


Accessory	Description
WirelessHART Adapter SWA70	Connects field devices to a WirelessHART network. The WirelessHART adapter can be mounted directly at a HART device and is easily integrated into an existing HART network. It ensures safe data transmission and can be operated in parallel with other wireless networks.  For details refer to Operating Instructions BA00061S

Accessory	Description
Fieldgate FXA320	Gateway for remote monitoring of connected 4-20mA measuring devices via web browser.  For details refer to Technical Information TI00025S and Operating Instructions BA00053S


Accessory	Description
Fieldgate FXA520	Gateway for remote diagnosis and parametrization of connected HART measuring devices via web browser.  For details refer to Technical Information TI00025S and Operating Instructions BA00051S

Zubehör	Beschreibung
Fieldgate FXA42	Programmable Ethernet, 2G/3G and WLAN gateway for data transmission between digital and analog measuring devices and inventory management software  For details refer to Technical Information TI01297S and Brief Operating Instructions KA01246S




Accessory	Description
Field Xpert SFX350	Field Xpert SFX350 is a mobile computer for commissioning and maintenance. It enables efficient device configuration and diagnostics for HART and FOUNDATION fieldbus devices in the non-Ex area .  For details, see Operating Instructions BA01202S

Accessory	Description
Field Xpert SFX370	Field Xpert SFX370 is a mobile computer for commissioning and maintenance. It enables efficient device configuration and diagnostics for HART and FOUNDATION fieldbus devices in the non-Ex area and the Ex area .  For details, see Operating Instructions BA01202S

15.3 Service-specific accessories

Accessory	Description
FieldCare / DeviceCare	Endress+Hauser's FDT-based Plant Asset Management tool. Helps to configure and maintain all field devices of your plant. By supplying status information it also supports the diagnosis of the devices.  For details refer to Operating Instructions BA00027S and BA00059S.






















15.4 System components
























Accessory	Description
Graphic Data Manager Memograph M	The graphic data manager Memograph M provides information on all the relevant process variables. Measured values are recorded correctly, limit values are monitored and measuring points analyzed. The data are stored in the 256 MB internal memory and also on an SD card or USB stick.  For details refer to Technical Information TI00133R and Operating Instructions BA00247R
RN221N	Active barrier with power supply for safe separation of 4 to 20 mA current circuits. Provides bi-directional HART transmission.  For details refer to Technical Information TI00073R and Operating Instructions BA00202R
RNS221	Transmitter supply for 2-wire sensors or transmitters exclusively for non-Ex areas. Provides bi-directional communication using the HART communication sockets.  For details refer to Technical Information TI00081R and Operating Instructions KA00110R

16 Operating menu





















16.1 Overview of the operating menu (display module)

Navigation  Operating menu
























Language	→  144
Setup	→  104
Device tag	→  104
Distance unit	→  104
Bin type	→  104
Max. draining speed solid	→  105
Max. filling speed solid	→  105
Empty calibration	→  106
Full calibration	→  106
Level	→  107
Distance	→  107
Signal quality	→  108
Mapping	→  111
Confirm distance	→  111
Mapping end point	→  111
Present mapping	→  109
Record map	→  109
Distance	→  107
Prepare recording map	→  111
Advanced setup	→  113
Locking status	→  113

Access status display	→  114
Enter access code	→  114
► Level	→  115
Medium type	→  115
Medium property	→  115
Level unit	→  117
Blocking distance	→  117
Level correction	→  118
Tank/silo height	→  118
► Linearization	→  120
Linearization type	→  122
Unit after linearization	→  123
Free text	→  124
Maximum value	→  125
Diameter	→  125
Intermediate height	→  125
Table mode	→  126
► Edit table	
Level	→  127
Customer value	→  128
Activate table	→  128
► Safety settings	→  129
Output echo lost	→  129
Value echo lost	→  129

Ramp at echo lost	→ 130
Blocking distance	→ 117
▶ SIL/WHG confirmation	→ 132
▶ Deactivate SIL/WHG	→ 133
Reset write protection	→ 133
Code incorrect	→ 133
▶ Current output 1 to 2	→ 134
Assign current output	→ 134
Current span	→ 134
Fixed current	→ 135
Damping output	→ 135
Failure mode	→ 136
Failure current	→ 136
Output current 1 to 2	→ 137
▶ Switch output	→ 138
Switch output function	→ 138
Assign status	→ 138
Assign limit	→ 139
Assign diagnostic behavior	→ 139
Switch-on value	→ 140
Switch-on delay	→ 141
Switch-off value	→ 141
Switch-off delay	→ 142
Failure mode	→ 142

Switch status	→  142
Invert output signal	→  142
► Display	→  144
Language	→  144
Format display	→  144
Value 1 to 4 display	→  146
Decimal places 1 to 4	→  146
Display interval	→  146
Display damping	→  147
Header	→  147
Header text	→  148
Separator	→  148
Number format	→  148
Decimal places menu	→  148
Backlight	→  149
Contrast display	→  149
► Configuration backup display	→  150
Operating time	→  150
Last backup	→  150
Configuration management	→  150

Backup state	→ 151
Comparison result	→ 151
▶ Administration	→ 153
▶ Define access code	→ 155
Define access code	→ 155
Confirm access code	→ 155
Device reset	→ 153
🔍 Diagnostics	→ 156
Actual diagnostics	→ 156
Previous diagnostics	→ 156
Operating time from restart	→ 157
Operating time	→ 150
▶ Diagnostic list	→ 158
Diagnostics 1 to 5	→ 158
▶ Event logbook	→ 159
Filter options	→ 159
▶ Event list	→ 159
▶ Device information	→ 160
Device tag	→ 160
Serial number	→ 160
Firmware version	→ 160
Device name	→ 160
Order code	→ 161
Extended order code 1 to 3	→ 161
Device revision	→ 161

Device ID	→  161
Device type	→  162
Manufacturer ID	→  162
▶ Measured values	→  163
Distance	→  163
Level linearized	→  124
Output current 1 to 2	→  137
Measured current 1	→  163
Terminal voltage 1	→  163
Sensor temperature	→  164
▶ Data logging	→  165
Assign channel 1 to 4	→  165
Logging interval	→  165
Clear logging data	→  166
▶ Display channel 1 to 4	→  167
▶ Simulation	→  169
Assign measurement variable	→  170
Process variable value	→  170
Current output 1 to 2 simulation	→  170
Value current output 1 to 2	→  171
Switch output simulation	→  171
Switch status	→  171
Device alarm simulation	→  172

Diagnostic event category	→ 📄 172
Diagnostic event simulation	→ 📄 172
▶ Device check	→ 📄 174
Start device check	→ 📄 174
Result device check	→ 📄 174
Last check time	→ 📄 174


























16.2 Overview of the operating menu (operating tool)

Navigation





















































Operating menu



















Setup	→ 104
Device tag	→ 104
Distance unit	→ 104
Bin type	→ 104
Max. draining speed solid	→ 105
Max. filling speed solid	→ 105
Empty calibration	→ 106
Full calibration	→ 106
Level	→ 107
Distance	→ 107
Signal quality	→ 108
Confirm distance	→ 108
Present mapping	→ 109
Mapping end point	→ 109
Record map	→ 109
▶ Advanced setup	→ 113
Locking status	→ 113
Access status tooling	→ 113
Enter access code	→ 114
▶ Level	→ 115
Medium type	→ 115
Medium property	→ 115
Max. filling speed liquid	→ 116

Max. draining speed liquid	→  116
Level unit	→  117
Blocking distance	→  117
Level correction	→  118
Tank/silo height	→  118
► Linearization	→  120
Linearization type	→  122
Unit after linearization	→  123
Free text	→  124
Level linearized	→  124
Maximum value	→  125
Diameter	→  125
Intermediate height	→  125
Table mode	→  126
Table number	→  127
Level	→  127
Level	→  128
Customer value	→  128
Activate table	→  128
► Safety settings	→  129
Output echo lost	→  129
Value echo lost	→  129
Ramp at echo lost	→  130
Blocking distance	→  117
► SIL/WHG confirmation	→  132






▶ Deactivate SIL/WHG	→ 133
Reset write protection	→ 133
Code incorrect	→ 133
▶ Current output 1 to 2	→ 134
Assign current output	→ 134
Current span	→ 134
Fixed current	→ 135
Damping output	→ 135
Failure mode	→ 136
Failure current	→ 136
Output current 1 to 2	→ 137
▶ Switch output	→ 138
Switch output function	→ 138
Assign status	→ 138
Assign limit	→ 139
Assign diagnostic behavior	→ 139
Switch-on value	→ 140
Switch-on delay	→ 141
Switch-off value	→ 141
Switch-off delay	→ 142
Failure mode	→ 142
Switch status	→ 142
Invert output signal	→ 142
▶ Display	→ 144
Language	→ 144

Format display	→  144
Value 1 to 4 display	→  146
Decimal places 1 to 4	→  146
Display interval	→  146
Display damping	→  147
Header	→  147
Header text	→  148
Separator	→  148
Number format	→  148
Decimal places menu	→  148
Backlight	→  149
Contrast display	→  149
► Configuration backup display	→  150
Operating time	→  150
Last backup	→  150
Configuration management	→  150
Backup state	→  151
Comparison result	→  151
► Administration	→  153
Define access code	→  153
Device reset	→  153
 Diagnostics	→  156
Actual diagnostics	→  156
Timestamp	→  156
Previous diagnostics	→  156

Timestamp	→  157
Operating time from restart	→  157
Operating time	→  150
▶ Diagnostic list	→  158
Diagnostics 1 to 5	→  158
Timestamp	→  158
▶ Device information	→  160
Device tag	→  160
Serial number	→  160
Firmware version	→  160
Device name	→  160
Order code	→  161
Extended order code 1 to 3	→  161
Device revision	→  161
Device ID	→  161
Device type	→  162
Manufacturer ID	→  162
▶ Measured values	→  163
Distance	→  163
Level linearized	→  124
Output current 1 to 2	→  137
Measured current 1	→  163
Terminal voltage 1	→  163
Sensor temperature	→  164


▶ Data logging	→  165
Assign channel 1 to 4	→  165
Logging interval	→  165
Clear logging data	→  166
▶ Simulation	→  169
Assign measurement variable	→  170
Process variable value	→  170
Current output 1 to 2 simulation	→  170
Value current output 1 to 2	→  171
Switch output simulation	→  171
Switch status	→  171
Device alarm simulation	→  172
Diagnostic event simulation	→  172
▶ Device check	→  174
Start device check	→  174
Result device check	→  174
Last check time	→  174
▶ Heartbeat	→  175

16.3 "Setup" menu

-   : Marks the navigation path to the parameter via the display and operating module.
-  : Marks the navigation path to the parameter via an operating tool (e.g. FieldCare).
-  : Marks parameters which can be locked via the software locking →  48.

Navigation   Setup

Device tag

Navigation   Setup → Device tag

Description Enter a unique name for the measuring point to identify the device quickly within the plant.

Factory setting FMR6x

Distance unit

Navigation   Setup → Distance unit


Description Select distance unit.

Selection

<i>SI units</i>	<i>US units</i>
▪ mm	▪ ft
▪ m	▪ in

Factory setting m

Bin type

Navigation   Setup → Bin type

Description Optimizes the signal filters for the respective bin type.

Selection

- Buffer silo (fast)
- Bin / Pile
- Crusher / belt
- Silo
- Workbench test

Factory setting Silo

Additional information  **Workbench test** deactivates all filters. This option is intended for tests only.

Max. draining speed solid


Navigation	Setup → Max. draining speed solid
Prerequisite	Medium type (→ 115) = Solid
Description	Select maximum expected draining speed.
Selection	<ul style="list-style-type: none"> ■ Very slow < 0.5m (1.6ft) /h ■ Slow < 1m (3.3ft) /h ■ Standard < 2m (6,5ft) /h ■ Medium < 4m (13ft) /h ■ Fast < 8m (26ft) /h ■ Very fast > 8m (26ft) /h ■ No filter / test
Factory setting	No filter / test
Additional information	<p>By specifying the maximum filling and draining speed the signal evaluation is automatically optimized for the process.</p> <p> The filling and draining speed can be set separately as filling and draining may be different processes.</p> <p> When selecting the No filter / test option all filters of the signal evaluation are deactivated. This option is intended for tests only.</p>

Max. filling speed solid


Navigation	Setup → Max. filling speed solid
Prerequisite	Medium type (→ 115) = Solid
Description	Select expected maximum filling speed.
Selection	<ul style="list-style-type: none"> ■ Very slow < 0.5m (1.6ft) /h ■ Slow < 1m (3.3ft) /h ■ Standard < 2m (6,5ft) /h ■ Medium < 4m (13ft) /h ■ Fast < 8m (26ft) /h ■ Very fast > 8m (26ft) /h ■ No filter / test
Factory setting	No filter / test
Additional information	<p>By specifying the maximum filling and draining speed the signal evaluation is automatically optimized for the process.</p> <p> The filling and draining speed can be set separately as filling and draining may be different processes.</p> <p> When selecting the No filter / test option all filters of the signal evaluation are deactivated. This option is intended for tests only.</p>

Empty calibration
**Navigation**

Setup → Empty calibration

Description


Specify the distance E between the process connection and the minimum level (0%). This defines the starting point of the measuring range.

User entry

Depending on the antenna

Factory setting

Depending on the antenna

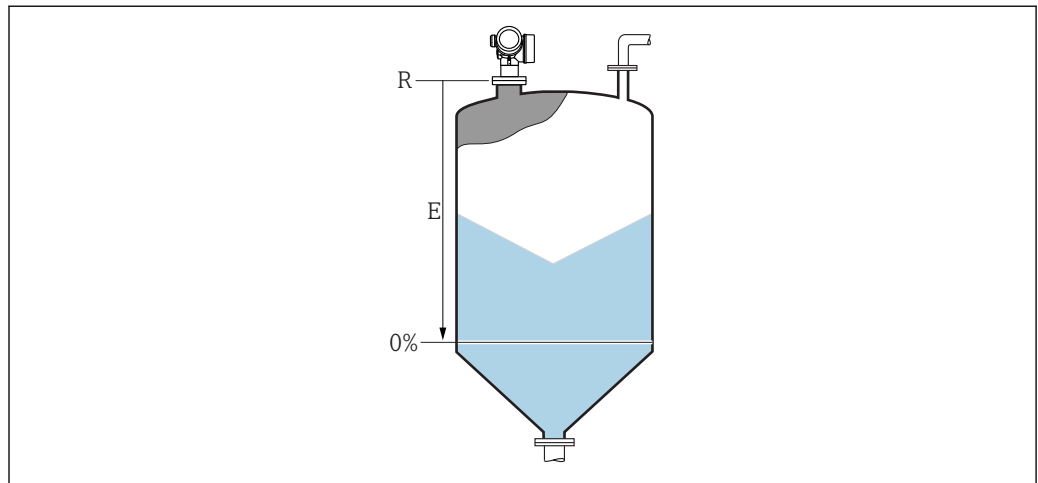Additional information

A0019488

24 Empty calibration (E) for level measurements in bulk solids.

The measuring range starts at the point at which the radar beam hits the tank or silo bottom. In the case of dished boiler ends or conical outlets levels below this point can not be measured.

Full calibration
**Navigation**

Setup → Full calibration

Description

Specify the distance F between the minimum level (0%) and maximum level (100%).


User entry

Depending on the antenna

Factory setting

Depending on the antenna

Additional information

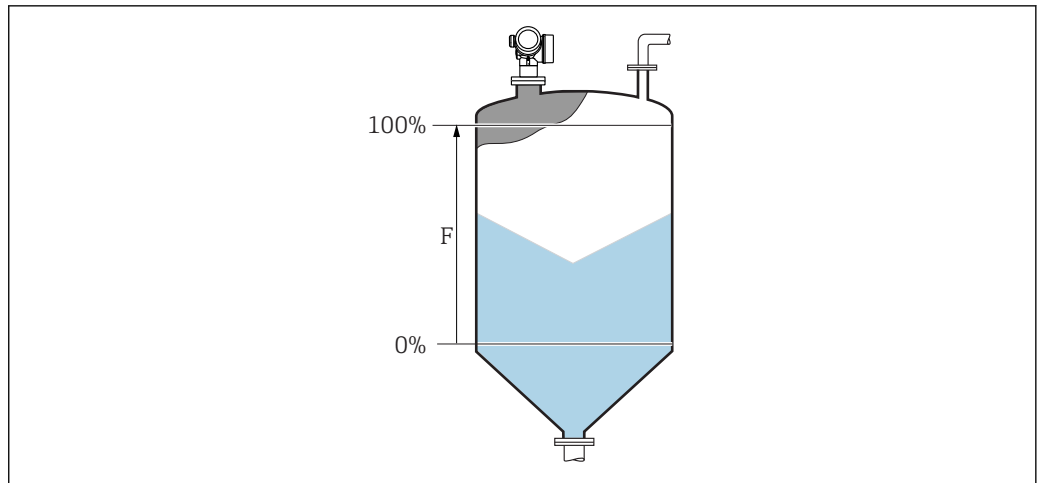

A0019489

25 Full calibration (F) for level measurements in bulk solids

Level


Navigation

Setup → Level

Description

Displays measured level L (before linearization).

Additional information

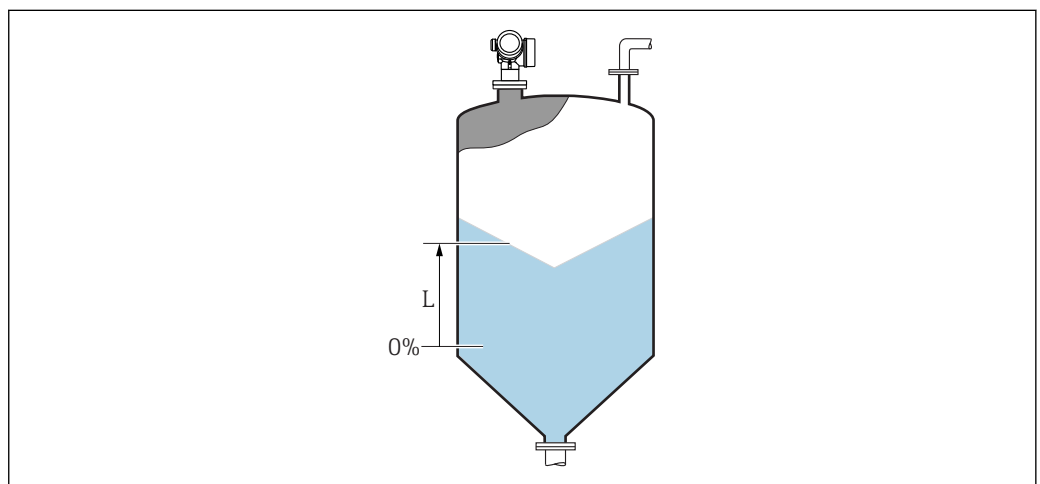

A0019484

26 Level in case of bulk solid measurements

i The unit is defined in the **Level unit** parameter (→ 117).

Distance


Navigation

Setup → Distance

Description


Distance between lower edge of flange or thread and medium surface.

Signal quality

Navigation	 Setup → Signal quality
Description	Shows the quality of the evaluated level signal.




Confirm distance



Navigation	 Setup → Confirm distance
Description	Specify, whether the measured distance matches the real distance. Depending on the selection the device automatically sets the range of mapping.
Selection	<ul style="list-style-type: none"> ▪ Manual map ▪ Distance ok ▪ Distance unknown ▪ Distance too small * ▪ Distance too big * ▪ Tank empty ▪ Factory map
Factory setting	Distance unknown
Additional information	<p>Meaning of the options</p> <ul style="list-style-type: none"> ▪ Manual map To be selected if the range of mapping is to be defined manually in the Mapping end point parameter. In this case it is not necessary to confirm the distance. ▪ Distance ok To be selected if the measured distance matches the actual distance. The device performs a mapping. ▪ Distance unknown To be selected if the actual distance is unknown. A mapping can not be performed in this case. ▪ Distance too small ⁶⁾ To be selected if the measured distance is smaller than the actual distance. The device searches for the next echo and returns to the Confirm distance parameter. The distance is recalculated and displayed. The comparison must be repeated until the displayed distance matches the actual distance. After this, the recording of the map can be started by selecting Distance ok.

* Visibility depends on order options or device settings


6) Only available for "Expert → Sensor → Echo tracking → **Evaluation mode** parameter" ≠ "**History off** option"


- **Distance too big** ⁶⁾
 To be selected if the measured distance exceeds the actual distance. The device adjusts the signal evaluation and returns to the **Confirm distance** parameter. The distance is recalculated and displayed. The comparison must be repeated until the displayed distance matches the actual distance. After this, the recording of the map can be started by selecting **Distance ok**.
 - **Tank empty**
 To be selected if the tank is completely empty. The device records a mapping covering the complete measuring range as defined by the **Tank/silo height** parameter. By default, **Tank/silo height** = **Empty calibration**.
 Take into account that in case of conical outlets, for example, a measurement is only possible up to the point at which the radar hits the bottom of the tank or silo. If the **Tank empty** option is used, **Empty calibration** (→  **106**) and **Tank/silo height** may not reach below this point as otherwise the empty signal is suppressed.
 - **Factory map**
 The factory map permanently stored in the device is used.
-  When operating via the display module, the measured distance is displayed together with this parameter for reference purposes.
 -  If the teaching procedure with the **Distance too small** option or **Distance too big** option is quit before the distance has been confirmed, a map is **not** recorded and the teaching procedure is reset after 60 s.


Present mapping

Navigation  Setup → Present mapping

Description Present end of mapping.

Mapping end point 

Navigation  Setup → Mapping end point


Prerequisite **Confirm distance** (→  **108**) = **Manual map** or **Distance too small**

Description Defines the new end point of the mapping.

User entry 0.0001 to 999 999.9 m

Factory setting 0.1 m

Record map

Navigation  Setup → Record map

Prerequisite **Confirm distance** = **Manual map** or **Distance too small**




Description Starts the recording of the map.

Selection

- No
- Record map
- Overlay map
- Factory map
- Delete partial map

Factory setting No

16.3.1 "Mapping" wizard

-  The **Mapping** wizard is only available when operating via the local display. When operating via an operating tool, all parameters concerning the mapping are located directly in the **Setup** menu (→  104)
-  In the **Mapping** wizard two parameters are displayed simultaneously on the display module at any one time. The upper parameter can be edited, whereas the lower parameter is displayed for reference purposes only.

Navigation  Setup → Mapping


Confirm distance

Navigation  Setup → Mapping → Confirm distance


Description →  108


Mapping end point

Navigation  Setup → Mapping → Mapping end point

Description →  109


Record map

Navigation  Setup → Mapping → Record map

Description →  109

Distance

Navigation  Setup → Mapping → Distance

Description →  107

Prepare recording map

Navigation  Setup → Mapping → Prepare recording map

Description Indicates the status of the recording procedure.





User interface

- Init. recording
- In progress
- Finished






16.3.2 "Advanced setup" submenu

Navigation  Setup → Advanced setup








Locking status

Navigation	  Setup → Advanced setup → Locking status
Description	Indicates the write protection with the highest priority that is currently active.
User interface	<ul style="list-style-type: none"> ▪ Hardware locked ▪ SIL locked ▪ WHG locked ▪ Temporarily locked
Additional information	<p>Meaning and priorities of the types of write protection</p> <ul style="list-style-type: none"> ▪ Hardware locked (priority 1) The DIP switch for hardware locking is activated on the main electronics module. This locks write access to the parameters. ▪ SIL locked (priority 2) The SIL mode is activated. Writing access to the relevant parameters is denied. ▪ WHG locked (priority 3) The WHG mode is activated. Writing access to the relevant parameters is denied. ▪ Temporarily locked (priority 4) Write access to the parameters is temporarily locked on account of internal processes in progress in the device (e.g. data upload/download, reset etc.). The parameters can be modified as soon as the processes are complete. <p> On the display module, the -symbol appears in front of parameters that cannot be modified since they are write-protected.</p>







Access status tooling

Navigation	 Setup → Advanced setup → Access status tooling
Description	Indicates access authorization to parameters via operating tool (e.g. FieldCare).
User interface	<ul style="list-style-type: none"> ▪ Operator ▪ Maintenance ▪ Service
Additional information	<p> The access authorization can be changed via the Enter access code parameter (→  114).</p> <p> If additional write protection is active, this restricts the current access authorization even further. The write protection status can be viewed via the Locking status parameter (→  113).</p>

Access status display


Navigation	 Setup → Advanced setup → Access status display
Prerequisite	The device has a local display.
Description	Indicates access authorization to parameters via local display.
User interface	<ul style="list-style-type: none"> ▪ Operator ▪ Maintenance ▪ Service
Additional information	<p> If a  symbol appears in front of a parameter, the parameter cannot be changed via the local display with the current access authorization.</p> <p> The access authorization can be changed via the Enter access code parameter (→  114).</p> <p> If additional write protection is active, this restricts the current access authorization even further. The write protection status can be viewed via the Locking status parameter (→  113).</p>



Enter access code

Navigation	  Setup → Advanced setup → Enter access code
Description	Enter access code to disable write protection of parameters.
User entry	0 to 9 999
Additional information	<ul style="list-style-type: none"> ▪ For local operation, the customer-specific access code, which has been defined in the Define access code parameter (→  153), has to be entered. ▪ If an incorrect access code is entered, the user retains his current access authorization. ▪ The write protection affects all parameters marked with the -symbol in this document. On the local display, the -symbol in front of a parameter indicates that the parameter is write-protected. ▪ If no key is pressed for 10 min, or the user switches from the navigation and editing mode back to the measured value display mode, the device automatically locks the write-protected parameters after another 60 s. <p> Please contact your Endress+Hauser Sales Center if you lose your access code.</p>



"Level" submenu



Navigation  Setup → Advanced setup → Level


Medium type 

- Navigation**  Setup → Advanced setup → Level → Medium type
- Description** Specify medium type.
- User interface**
 - Liquid
 - Solid
- Factory setting** Solid
- Additional information**  This parameter determines the value of several other parameters and strongly influences the complete signal evaluation. Therefore, it is strongly recommended **not to change** the factory setting.

Medium property 

- Navigation**  Setup → Advanced setup → Level → Medium property
- Description** Specify relative dielectric constant ϵ_r of the medium.
- Selection**
 - Unknown
 - DC 1.4 ... 1.6
 - DC 1.6 ... 1.9
 - DC 1.9 ... 2.5
 - DC 2.5 ... 4
 - DC 4 ... 7
 - DC 7 ... 15
 - DC > 15
- Factory setting** Depending on the **Medium type** (→  115) and **Medium group** parameters.
- Additional information** *Dependence on "Medium type" and "Medium group"*

Medium type (→  115)	Medium group	Medium property (→  115)
Solid		Unknown
Liquid	Water based (DC >= 4)	DC 4 ... 7
	Others	Unknown

-  For dielectric constants (DC values) of many media commonly used in various industries refer to:
 - the Endress+Hauser DC manual (CP01076F)
 - the Endress+Hauser "DC Values App" (available for Android and iOS)

Max. filling speed liquid





Navigation	Setup → Advanced setup → Level → Max. filling speed liquid
Prerequisite	Medium type (→ 115) = Liquid
Description	Select expected maximum filling speed.
Selection	<ul style="list-style-type: none"> ▪ Slow < 1cm (0.4in) /min ▪ Medium < 10cm (4in) /min ▪ Standard < 1m (40in) /min ▪ Fast < 2m (80in) /min ▪ Very fast > 2m (80in) /min ▪ No filter / test
Factory setting	Depending on the Tank type parameter
Additional information	<p>By selecting the maximum expected filling and draining speed the signal evaluation is automatically optimized for the process.</p> <p> The filling and draining speeds can be set separately as the filling and draining procedures may be different.</p> <p> With the No filter / test option all signal evaluation filters are deactivated. This option should exclusively be used for tests.</p> <p> Max. filling speed liquid is preset by Tank type. It can, however, be adjusted to the process in the vessel at any time. If Tank type is changed again, it may be necessary to repeat the fine adjustment.</p>


Max. draining speed liquid


Navigation	Setup → Advanced setup → Level → Max. draining speed liquid
Prerequisite	Tank type = Liquid
Description	Select expected maximum draining speed.
Selection	<ul style="list-style-type: none"> ▪ Slow < 1cm (0.4in) /min ▪ Medium < 10cm (4in) /min ▪ Standard < 1m (40in) /min ▪ Fast < 2m (80in) /min ▪ Very fast > 2m (80in) /min ▪ No filter / test
Factory setting	Depending on the Tank type parameter



Additional information

By selecting the maximum expected filling and draining speed the signal evaluation is automatically optimized for the process.

-  The filling and draining speeds can be set separately as the filling and draining procedures may be different.
-  With the **No filter / test** option all signal evaluation filters are deactivated. This option should exclusively be used for tests.
-  **Max. draining speed liquid** is preset by **Tank type**. It can, however, be adjusted to the process in the vessel at any time. If **Tank type** is changed again, it may be necessary to repeat the fine adjustment.

Level unit 

Navigation

  Setup → Advanced setup → Level → Level unit

Description

Select level unit.


Selection



- | | |
|-----------------|-----------------|
| <i>SI units</i> | <i>US units</i> |
| ▪ % | ▪ ft |
| ▪ m | ▪ in |
| ▪ mm | |


Factory setting

%

Additional information

The level unit may differ from the distance unit defined in the **Distance unit** parameter (→  104):

- The unit defined in the **Distance unit** parameter is used for the basic calibration (**Empty calibration** (→  106) and **Full calibration** (→  106)).
- The unit defined in the **Level unit** parameter is used to display the (nonlinearized) level.

Blocking distance 

Navigation

  Setup → Advanced setup → Level → Blocking distance

Description

Dead band in front of the process connection.

User entry

0 to 200 m

Factory setting

0 m

Additional information

Read access	Operator
Write access	Maintenance


No echos are evaluated within the blocking distance BD. Therefore, BD can be used to suppress interference echos in the vicinity of the antenna.

Level correction 🔒

Navigation	🏠📄 Setup → Advanced setup → Level → Level correction
Description	Specify level correction (if required).
User entry	-200 000.0 to 200 000.0 %
Factory setting	0.0 %
Additional information	The value specified in this parameter is added to the measured level (before linearization).

Tank/silo height 🔒

Navigation	🏠📄 Setup → Advanced setup → Level → Tank/silo height
Description	Specify total height of the tank or silo as measured from the process connection.
User entry	-999.9999 to 999.9999 m
Factory setting	Empty calibration (→ 📄 106)
Additional information	If the parametrized measuring range differs significantly from the tank or silo height, it is recommended to enter the tank or silo height. Example: Continuous level monitoring in the upper third of a tank or silo.

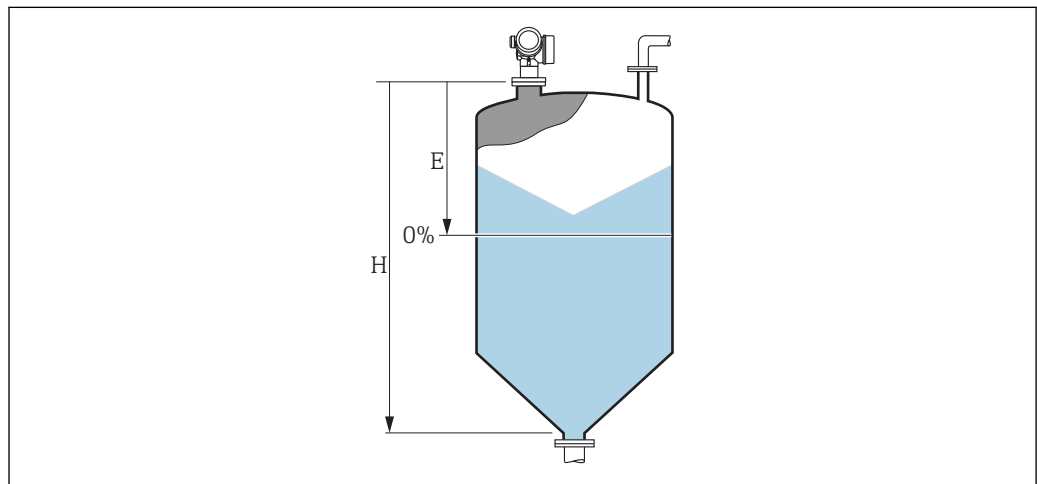

A0019868


🔒 27 "Tank/silo height" parameter for measurements in bulk solids

E Empty calibration (→ 📄 106)

H Empty distance

i For tanks with conical outlet, **Empty distance** should not be changed as in this type of applications **Empty calibration** (→ 📄 106) is usually **not** much less than the tank or silo height.

"Linearization" submenu

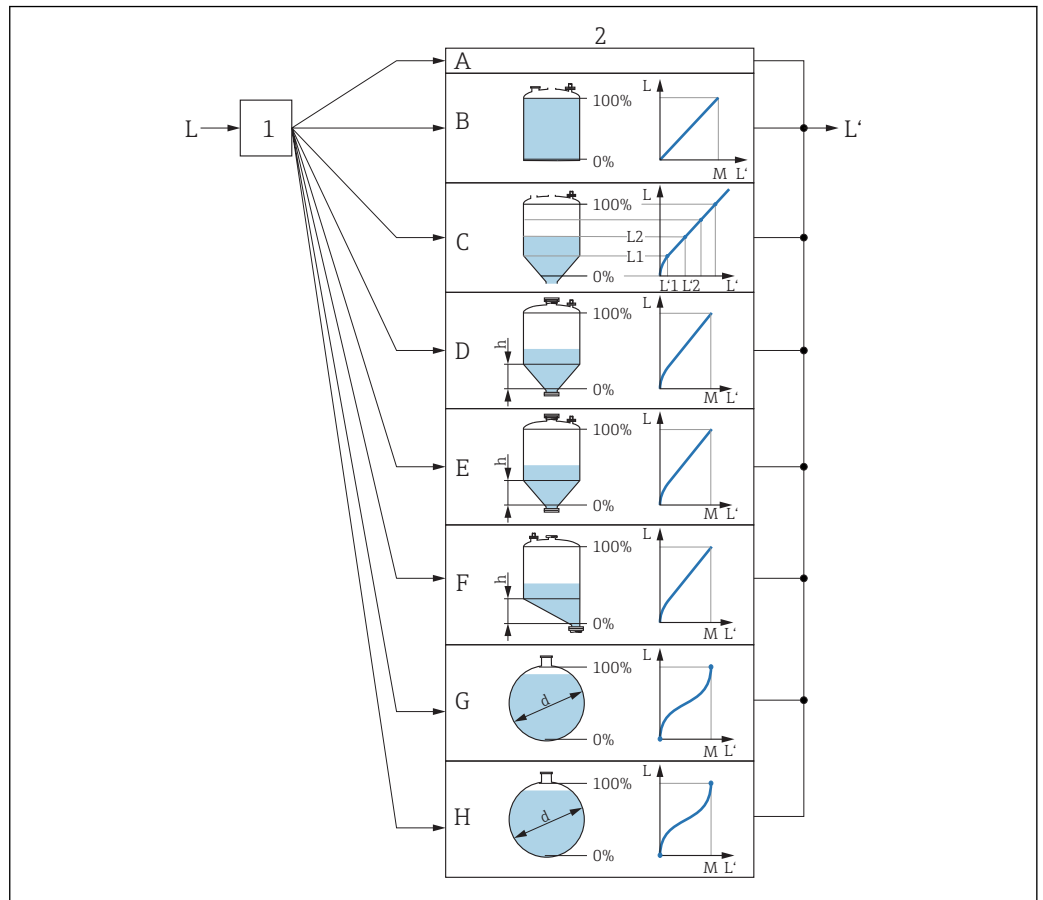












A0019648

28 Linearization: Transformation of the level and (if relevant) the interface height into a volume or weight; the transformation is dependent on the shape of the vessel.


- 1 Selection of linearization type and unit
- 2 Configuration of the linearization
- A Linearization type (→ 122) = None
- B Linearization type (→ 122) = Linear
- C Linearization type (→ 122) = Table
- D Linearization type (→ 122) = Pyramid bottom
- E Linearization type (→ 122) = Conical bottom
- F Linearization type (→ 122) = Angled bottom
- G Linearization type (→ 122) = Horizontal cylinder
- H Linearization type (→ 122) = Sphere
- L Level before linearization (measured in distance units)
- L' Level linearized (→ 124) (corresponds to volume or weight)
- M Maximum value (→ 125)
- d Diameter (→ 125)
- h Intermediate height (→ 125)














Structure of the submenu on the display module

Navigation  Setup → Advanced setup → Linearization


► Linearization	
Linearization type	→  122
Unit after linearization	→  123
Free text	→  124
Maximum value	→  125
Diameter	→  125
Intermediate height	→  125
Table mode	→  126
► Edit table	
Level	→  127
Customer value	→  128
Activate table	→  128

Structure of the submenu in an operating tool (e.g. FieldCare)


Navigation  Setup → Advanced setup → Linearization

► Linearization	
Linearization type	→  122
Unit after linearization	→  123
Free text	→  124
Level linearized	→  124
Maximum value	→  125
Diameter	→  125
Intermediate height	→  125
Table mode	→  126
Table number	→  127
Level	→  127
Level	→  128
Customer value	→  128
Activate table	→  128

Description of parameters

Navigation  Setup → Advanced setup → Linearization

Linearization type 


Navigation  Setup → Advanced setup → Linearization → Linearization type

Description Select linearization type.


- Selection**
- None
 - Linear
 - Table
 - Pyramid bottom
 - Conical bottom
 - Angled bottom
 - Horizontal cylinder
 - Sphere

Factory setting None

Additional information

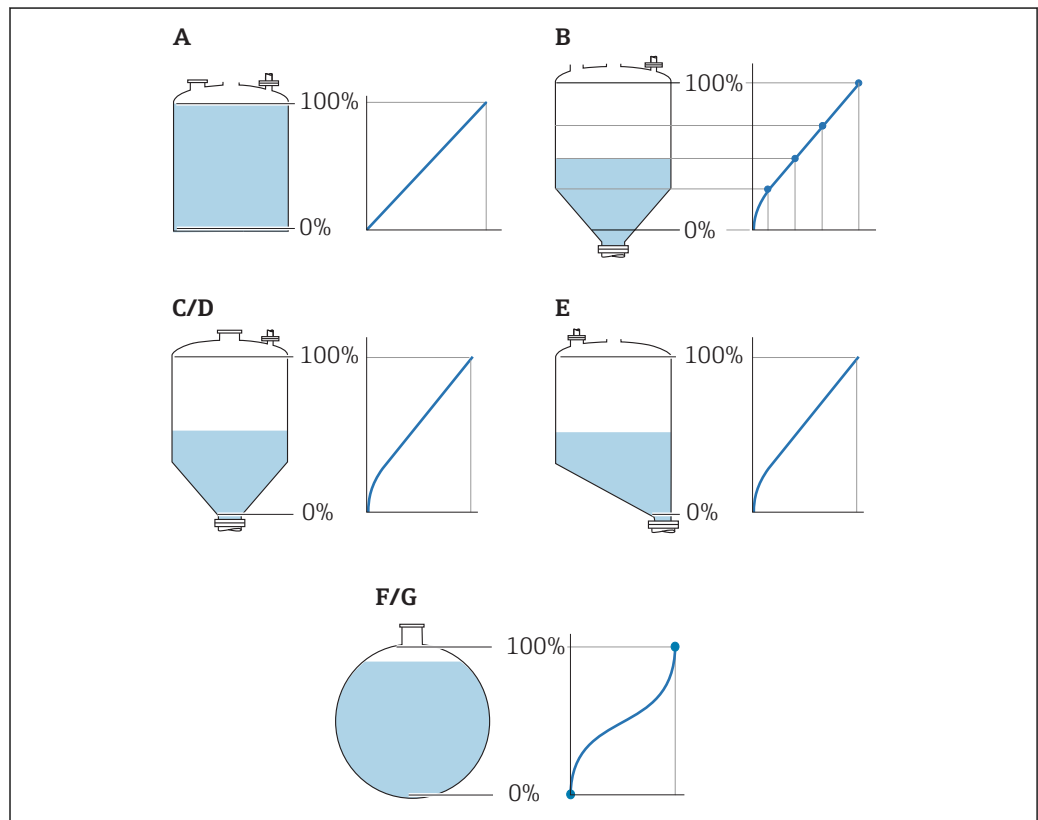

A0021476

 29 Linearization types



- A None
- B Table
- C Pyramid bottom
- D Conical bottom
- E Angled bottom
- F Sphere
- G Horizontal cylinder

Meaning of the options**■ None**

The level is transmitted in the level unit without linearization.






■ Linear

The output value (volume/weight) is directly proportional to the level L. This is valid, for example, for vertical cylinders. The following additional parameters have to be specified:

- **Unit after linearization** (→  123)
- **Maximum value** (→  125): Maximum volume or weight




■ Table

The relationship between the measured level L and the output value (volume/weight) is given by a linearization table consisting of up to 32 pairs of values "level - volume" or "level - weight", respectively. The following additional parameters have to be specified:

- **Unit after linearization** (→  123)
- **Table mode** (→  126)
- For each table point: **Level** (→  127)
- For each table point: **Customer value** (→  128)
- **Activate table** (→  128)




■ Pyramid bottom

The output value corresponds to the volume or weight in a silo with pyramid bottom. The following additional parameters have to be specified:

- **Unit after linearization** (→  123)
- **Maximum value** (→  125): Maximum volume or weight
- **Intermediate height** (→  125): The height of the pyramid




■ Conical bottom

The output value corresponds to the volume or weight in a tank with conical bottom. The following additional parameters have to be specified:

- **Unit after linearization** (→  123)
- **Maximum value** (→  125): Maximum volume or weight
- **Intermediate height** (→  125): The height of the conical part of the tank




■ Angled bottom

The output value corresponds to the volume or weight in a silo with an angled bottom. The following additional parameters have to be specified:

- **Unit after linearization** (→  123)
- **Maximum value** (→  125): Maximum volume or weight
- **Intermediate height** (→  125): Height of the angled bottom




■ Horizontal cylinder

The output value corresponds to the volume or weight in a horizontal cylinder. The following additional parameters have to be specified:

- **Unit after linearization** (→  123)
- **Maximum value** (→  125): Maximum volume or weight
- **Diameter** (→  125)

■ Sphere


The output value corresponds to the volume or weight in a spherical tank. The following additional parameters have to be specified:

- **Unit after linearization** (→  123)
- **Maximum value** (→  125): Maximum volume or weight
- **Diameter** (→  125)

Unit after linearization**Navigation**

  Setup → Advanced setup → Linearization → Unit after linearization

Prerequisite

Linearization type (→  122) ≠ None

Description

Select unit of the linearized value.



Selection	<i>SI units</i>	<i>US units</i>	<i>Imperial units</i>
	<ul style="list-style-type: none"> ■ STon ■ t ■ kg ■ cm³ ■ dm³ ■ m³ ■ hl ■ l ■ % ■ mm ■ m 	<ul style="list-style-type: none"> ■ lb ■ UsGal ■ ft³ ■ ft ■ in 	<ul style="list-style-type: none"> impGal

Custom-specific units



Free text

Factory setting %

Additional information The selected unit is only used to be indicated on the display. The measured value is **not** transformed according to the selected unit.

 It is also possible to configure a distance-to-distance linearization, i.e. a transformation from the level unit to a different distance unit. To do so, select the **Linear** linearization mode. In order to define the new level unit, select the **Free text** option in the **Unit after linearization** parameter and enter the required unit into the **Free text** parameter (→  124).

Free text 

Navigation   Setup → Advanced setup → Linearization → Free text

Prerequisite **Unit after linearization** (→  123) = **Free text**

Description Enter unit symbol.



User entry Up to 32 alphanumerical characters (letters, numbers, special characters)

Factory setting Free text



Level linearized

Navigation  Setup → Advanced setup → Linearization → Level linearized

Description Displays linearized level.

Additional information  The unit is defined by the **Unit after linearization** parameter →  123.

Maximum value

**Navigation** Setup → Advanced setup → Linearization → Maximum value**Prerequisite****Linearization type** (→  122) has one of the following values:

- Linear
- Pyramid bottom
- Conical bottom
- Angled bottom
- Horizontal cylinder
- Sphere

Description

Specify the maximum content of the vessel (100%) measured in the units after linearization.


User entry

-50 000.0 to 50 000.0 %

Factory setting

100.0 %

Diameter

**Navigation** Setup → Advanced setup → Linearization → Diameter**Prerequisite****Linearization type** (→  122) has one of the following values:

- Horizontal cylinder
- Sphere

Description

Specify tank diameter.

User entry


0 to 9 999.999 m

Factory setting

2 m

Additional informationThe unit is defined in the **Distance unit** parameter (→  104).

Intermediate height

**Navigation** Setup → Advanced setup → Linearization → Intermediate height**Prerequisite****Linearization type** (→  122) has one of the following values:

- Pyramid bottom
- Conical bottom
- Angled bottom

Description

Specify intermediate height H.


User entry

0 to 200 m

Factory setting

0 m

Additional information

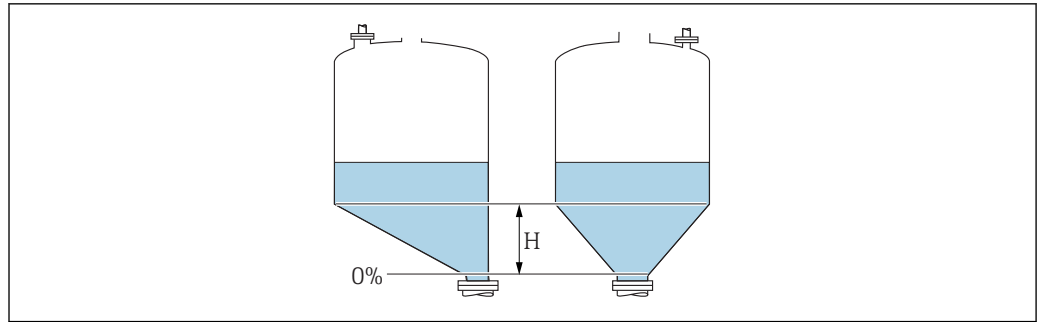

A0013264

H Intermediate height

The unit is defined in the **Distance unit** parameter (→ [104](#)).

Table mode



Navigation

Setup → Advanced setup → Linearization → Table mode

Prerequisite

Linearization type (→ [122](#)) = **Table**

Description

Select editing mode of the linearization table.

Selection

- Manual
- Semiautomatic
- Clear table
- Sort table

Factory setting

Manual

Additional information

Meaning of the options

- **Manual**
The level and the associated linearized value are entered manually for each linearization point.
- **Semiautomatic**
The level is measured by the device for each linearization point. The associated linearized value is entered manually.
- **Clear table**
Deletes the existing linearization table.
- **Sort table**
Rearranges the linearization points into an ascending order.




Conditions the linearization table must meet:



- The table may consist of up to 32 pairs of values "Level - Linearized Value".
- The table must be monotonic (monotonically increasing or decreasing).
- The first linearization point must refer to the minimum level.
- The last linearization point must refer to the maximum level.

Before entering a linearization table, the values for **Empty calibration** (→ [106](#)) and **Full calibration** (→ [106](#)) must be set correctly.

If values of the table need to be changed after the full or empty calibration have been changed, a correct evaluation is only ensured if the existing table is deleted and the complete table is entered again. To do so delete the existing table (**Table mode** (→ [126](#)) = **Clear table**). Then enter a new table.

How to enter the table

- Via FieldCare
The table points can be entered via the **Table number** (→  127), **Level** (→  127) and **Customer value** (→  128) parameters. As an alternative, the graphic table editor may be used: Device Operation → Device Functions → Additional Functions → Linearization (Online/Offline)
- Via local display
Select the **Edit table** submenu to call up the graphic table editor. The table is displayed and can be edited line by line.

 The factory setting for the level unit is "%". If you want to enter the linearization table in physical units, you must select the appropriate unit in the **Level unit** parameter (→  117) beforehand.












 If a decreasing table is entered, the values for 20 mA and 4 mA of the current output are interchanged. That means: 20 mA refers to the lowest level, whereas 4 mA refers to the highest level. If required, the current output can be inverted in the **Measuring mode** parameter.

Table number	
<hr/>	
Navigation	 Setup → Advanced setup → Linearization → Table number
Prerequisite	Linearization type (→  122) = Table
Description	Select table point you are going to enter or change.
User entry	1 to 32
Factory setting	1



Level (Manual)	
<hr/>	
Navigation	 Setup → Advanced setup → Linearization → Level
Prerequisite	<ul style="list-style-type: none"> ▪ Linearization type (→  122) = Table ▪ Table mode (→  126) = Manual
Description	Enter level value of the table point (value before linearization).
User entry	Signed floating-point number
Factory setting	0 %

Level (Semiautomatic)

Navigation	 Setup → Advanced setup → Linearization → Level
Prerequisite	<ul style="list-style-type: none"> ▪ Linearization type (→  122) = Table ▪ Table mode (→  126) = Semiautomatic
Description	Displays measured level (value before linearization). This value is transmitted to the table.






Customer value




Navigation	 Setup → Advanced setup → Linearization → Customer value
Prerequisite	Linearization type (→  122) = Table
Description	Enter linearized value for the table point.
User entry	Signed floating-point number
Factory setting	0 %


Activate table




Navigation	  Setup → Advanced setup → Linearization → Activate table
Prerequisite	Linearization type (→  122) = Table
Description	Activate (enable) or deactivate (disable) the linearization table.
Selection	<ul style="list-style-type: none"> ▪ Disable ▪ Enable
Factory setting	Disable
Additional information	<p>Meaning of the options</p> <ul style="list-style-type: none"> ▪ Disable The measured level is not linearized. If Linearization type (→  122) = Table at the same time, the device issues error message F435. ▪ Enable The measured level is linearized according to the table. <p> When editing the table, the Activate table parameter is automatically reset to Disable and must be reset to Enable after the table has been entered.</p>

"Safety settings" submenu

Navigation  Setup → Advanced setup → Safety settings

Output echo lost 




Navigation  Setup → Advanced setup → Safety settings → Output echo lost

Description Define the behavior of the output signal in case of a lost echo.

- Selection**
- Last valid value
 - Ramp at echo lost
 - Value echo lost
 - Alarm


Factory setting Last valid value

Additional information **Meaning of the options**

- **Last valid value**
The last valid value is kept in the case of a lost echo.
- **Ramp at echo lost**⁷⁾
In the case of a lost echo the output value is continuously shifted towards 0% or 100%. The slope of the ramp is defined in the **Ramp at echo lost** parameter (→  130).
- **Value echo lost**⁷⁾
In the case of a lost echo the output assumes the value defined in the **Value echo lost** parameter (→  129).
- **Alarm**
In the case of a lost echo the device generates an alarm; see the **Failure mode** parameter (→  136)

Value echo lost 

Navigation  Setup → Advanced setup → Safety settings → Value echo lost



Prerequisite **Output echo lost** (→  129) = **Value echo lost**

Description Define output value in case of a lost echo.

User entry 0 to 200 000.0 %

Factory setting 0.0 %

Additional information Use the unit which has been defined for the measured value output:

- without linearization: **Level unit** (→  117)
- with linearization: **Unit after linearization** (→  123)

7) Only visible if "Linearization type (→  122)" = "None"

Ramp at echo lost



Navigation Setup → Advanced setup → Safety settings → Ramp at echo lost


Prerequisite **Output echo lost (→ 129) = Ramp at echo lost**

Description Define the slope of the ramp in the case of a lost echo.

User entry Signed floating-point number

Factory setting 0.0 %/min

Additional information

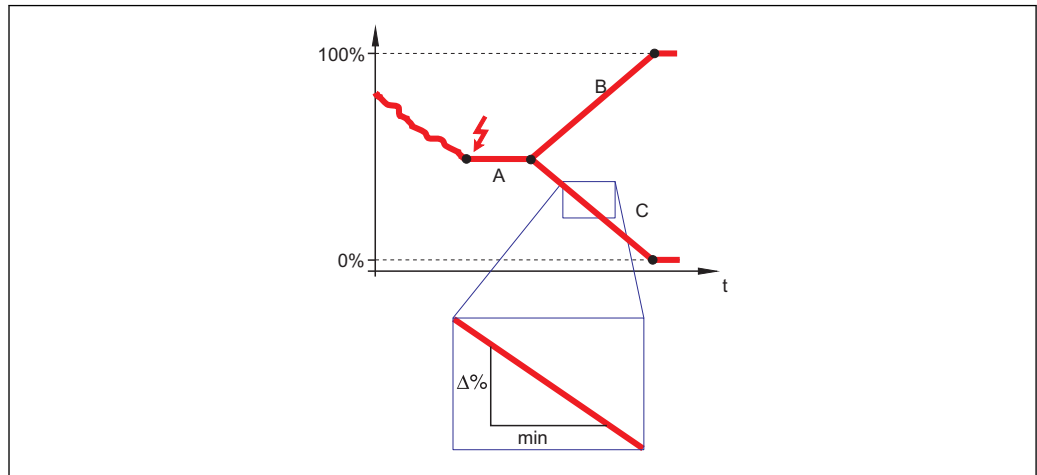

A0013269

- A Delay time echo lost
- B Ramp at echo lost (→ 130) (positive value)
- C Ramp at echo lost (→ 130) (negative value)

- The unit for the slope of the ramp is "percentage of the measuring range per minute" (%/min).
- For a negative slope of the ramp: The measured value is continuously decreased until it reaches 0%.
- For a positive slope of the ramp: The measured value is continuously increased until it reaches 100%.

Blocking distance



Navigation Setup → Advanced setup → Safety settings → Blocking distance

Description Specify blocking distance BD.


User entry 0 to 200 m


Factory setting 0 mm (0 in)

Additional information Signals in the blocking distance are only evaluated if they have been outside the blocking distance when the device was switched on and move into the blocking distance due to a

level change during operation. Signals which are already in the blocking distance when the device is switched on, are ignored.


 If required, a different behavior for signals in the blocking distance can be defined by the Endress+Hauser service.

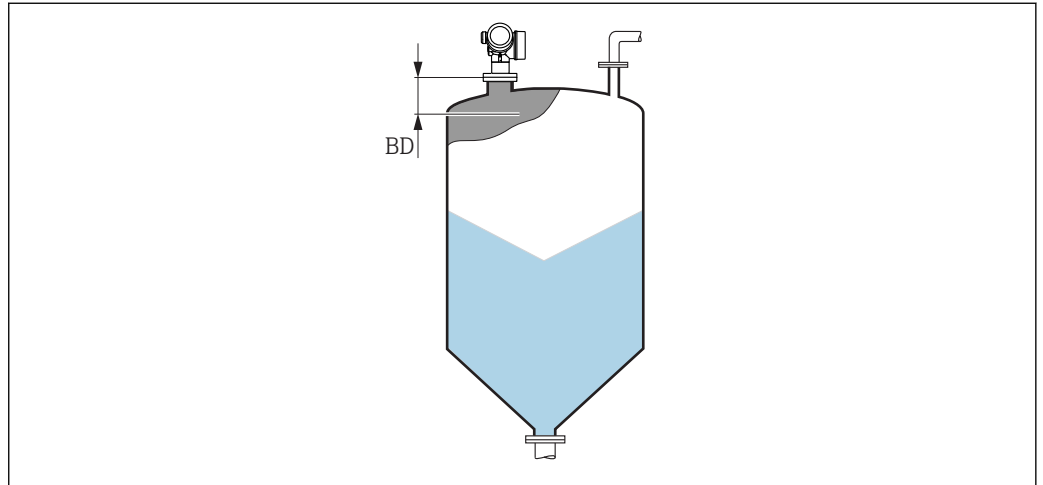

 30 Blocking distance (BD) for bulk solid measurements

A0023041



"SIL/WHG confirmation" wizard

 The **SIL/WHG confirmation** wizard is only available for devices with SIL or WHG approval (Feature 590: "Additional Approval", option LA: "SIL" or LC: "WHG overflow prevention") which are currently **not** in the SIL- or WHG-locked state.

The **SIL/WHG confirmation** wizard is required to lock the device according to SIL or WHG. For details refer to the "Functional Safety Manual" of the respective device, which describes the locking procedure and the parameters of the sequence.



Navigation  Setup → Advanced setup → SIL/WHG confirmation

"Deactivate SIL/WHG" wizard



 The **Deactivate SIL/WHG** wizard (→  133) is only visible if the device is SIL-locked or WHG-locked. For details refer to the "Functional Safety Manual" of the respective device.

Navigation   Setup → Advanced setup → Deactivate SIL/WHG



Reset write protection

Navigation	  Setup → Advanced setup → Deactivate SIL/WHG → Reset write protection
Description	Enter unlocking code.
User entry	0 to 65 535
Factory setting	0


Code incorrect


Navigation	  Setup → Advanced setup → Deactivate SIL/WHG → Code incorrect
Description	Indicates that a wrong unlocking code has been entered. Select procedure.
Selection	<ul style="list-style-type: none"> ■ Reenter code ■ Abort sequence
Factory setting	Reenter code

"Current output 1 to 2" submenu

 The **Current output 2** submenu (→  134) is only available for devices with two current outputs.

Navigation  Setup → Advanced setup → Current output 1 to 2


Assign current output 1 to 2 



Navigation  Setup → Advanced setup → Current output 1 to 2 → Assign current output


Description Select process variable for current output.

- Selection**
- Level linearized
 - Distance
 - Electronic temperature
 - Relative echo amplitude
 - Analog output adv. diagnostics 1
 - Analog output adv. diagnostics 2

Additional information *Definition of the current range for the process variables*

Process variable	4 mA value	20 mA value
Level linearized	0 % ¹⁾ or the associated linearized value	100 % ²⁾ or the associated linearized value
Distance	0 (i.e. level is at the reference point)	Empty calibration (→  106) (i.e. level is at 0 %)
Electronic temperature	-50 °C (-58 °F)	100 °C (212 °F)
Analog output adv. diagnostics 1/2	depending on the parametrization of the Advanced Diagnostics	

- 1) the 0% level is defined by **Empty calibration** parameter (→  106)
- 2) The 100% level is defined by **Full calibration** parameter (→  106)

-  This can be done by the following parameters:
- Expert → Output → Current output 1 to 2 → Turn down
 - Expert → Output → Current output 1 to 2 → 4 mA value
 - Expert → Output → Current output 1 to 2 → 20 mA value

Current span 

Navigation  Setup → Advanced setup → Current output 1 to 2 → Current span


Description Select current range for process variable and alarm signal.





- Selection**
- 4...20 mA
 - 4...20 mA NAMUR
 - 4...20 mA US
 - Fixed current


Factory setting 4...20 mA NAMUR




Additional information


Meaning of the options



Option	Current range for process variable	Lower alarm signal level	Upper alarm signal level
4...20 mA	4 to 20.5 mA	< 3.6 mA	> 21.95 mA
4...20 mA NAMUR	3.8 to 20.5 mA	< 3.6 mA	> 21.95 mA
4...20 mA US	3.9 to 20.8 mA	< 3.6 mA	> 21.95 mA
Fixed current	Constant current, defined in the Fixed current parameter (→  135).		

-  In the case of an error, the output current assumes the value defined in the **Failure mode** parameter (→  136).
 - If the measured value is out of the measuring range, diagnostic message **Current output** is issued.
-  In a HART multidrop loop only one device can use the analog current to transmit a signal. For all other devices one must set:
 - **Current span** = **Fixed current**
 - **Fixed current** (→  135) = **4 mA**

Fixed current 

- Navigation**   Setup → Advanced setup → Current output 1 to 2 → Fixed current
- Prerequisite** **Current span** (→  134) = **Fixed current**
- Description** Define constant value of the current.
- User entry** 4 to 22.5 mA
- Factory setting** 4 mA

Damping output 

- Navigation**   Setup → Advanced setup → Current output 1 to 2 → Damping output
- Description** Define time constant τ for the damping of the output current.
- User entry** 0.0 to 999.9 s
- Factory setting** 0.0 s
- Additional information** Fluctuations of the measured value affect the output current with an exponential delay, the time constant τ of which is defined in this parameter. With a small time constant the output reacts immediately to changes of the measured value. With a big time constant the reaction of the output is more delayed. For $\tau = 0$ (factory setting) there is no damping.

Failure mode


Navigation	Setup → Advanced setup → Current output 1 to 2 → Failure mode
Prerequisite	Current span (→ 134) ≠ Fixed current
Description	Select behavior of the output current in case of an error.
Selection	<ul style="list-style-type: none"> ▪ Min. ▪ Max. ▪ Last valid value ▪ Actual value ▪ Defined value
Factory setting	Max.
Additional information	<p>Meaning of the options</p> <ul style="list-style-type: none"> ▪ Min. The current output adopts the value of the lower alarm level according to the Current span parameter (→ 134). ▪ Max. The current output adopts the value of the upper alarm level according to the Current span parameter (→ 134). ▪ Last valid value The current remains constant at the last value it had before the error occurred. ▪ Actual value The output current follows the actual measured value; the error is ignored. ▪ Defined value The output current assumes the value defined in the Failure current parameter (→ 136). <p> The error behavior of other output channels is not influenced by these settings but is defined in separate parameters.</p>

Failure current


Navigation	Setup → Advanced setup → Current output 1 to 2 → Failure current
Prerequisite	Failure mode (→ 136) = Defined value
Description	Enter current output value in alarm condition.
User entry	3.59 to 22.5 mA
Factory setting	22.5 mA

Output current 1 to 2



Navigation


 Setup → Advanced setup → Current output 1 to 2 → Output current 1 to 2


Description


Displays calculated output current.

"Switch output" submenu

 The **Switch output** submenu (→  138) is only visible for devices with switch output.⁸⁾

Navigation  Setup → Advanced setup → Switch output

Switch output function **Navigation**

 Setup → Advanced setup → Switch output → Switch output function

Description

Select function for switch output.






Selection


- Off
- On
- Diagnostic behavior
- Limit
- Digital Output


Factory setting


Off

Additional information**Meaning of the options**


- **Off**
The output is always open (non-conductive).
- **On**
The output is always closed (conductive).
- **Diagnostic behavior**
The output is normally closed and is only opened if a diagnostic event is present. The **Assign diagnostic behavior** parameter (→  139) determines for which type of event the output is opened.
- **Limit**
The output is normally closed and is only opened if a measured variable exceeds or falls below a defined limit. The limit values are defined by the following parameters:
 - **Assign limit** (→  139)
 - **Switch-on value** (→  140)
 - **Switch-off value** (→  141)
- **Digital Output**
The switching state of the output tracks the output value of a DI function block. The function block is selected in the **Assign status** parameter (→  138).

 The **Off** and **On** options can be used to simulate the switch output.

Assign status **Navigation**

 Setup → Advanced setup → Switch output → Assign status

Prerequisite

Switch output function (→  138) = **Digital Output**

Description

Select device status for switch output.

8) Ordering feature 020 "Power supply; Output", option B, E or G

Selection	<ul style="list-style-type: none"> ■ Off ■ Digital output AD 1 ■ Digital output AD 2 ■ Digital output AD 3 ■ Digital output AD 4
Factory setting	Off
Additional information	The Digital output AD 1 and Digital output AD 2 options refer to the Advanced Diagnostic Blocks. A switch signal generated in these blocks can be transmitted via the switch output.

Assign limit


Navigation	Setup → Advanced setup → Switch output → Assign limit
Prerequisite	Switch output function (→ 138) = Limit
Description	Select process variable for limit monitoring.
Selection	<ul style="list-style-type: none"> ■ Off ■ Level linearized ■ Distance ■ Terminal voltage ■ Electronic temperature ■ Relative echo amplitude ■ Area of incoupling
Factory setting	Off

Assign diagnostic behavior


Navigation	Setup → Advanced setup → Switch output → Assign diagnostic behavior
Prerequisite	Switch output function (→ 138) = Diagnostic behavior
Description	Select diagnostic behavior for switch output.
Selection	<ul style="list-style-type: none"> ■ Alarm ■ Alarm or warning ■ Warning
Factory setting	Alarm

Switch-on value



Navigation

Setup → Advanced setup → Switch output → Switch-on value

Prerequisite

Switch output function (→ 138) = **Limit**

Description

Enter measured value for the switch-on point.

User entry

Signed floating-point number

Factory setting


0

Additional information

The switching behavior depends on the relative position of the **Switch-on value** and **Switch-off value** parameters:

Switch-on value > Switch-off value

- The output is closed if the measured value is larger than **Switch-on value**.
- The output is opened if the measured value is smaller than **Switch-off value**.

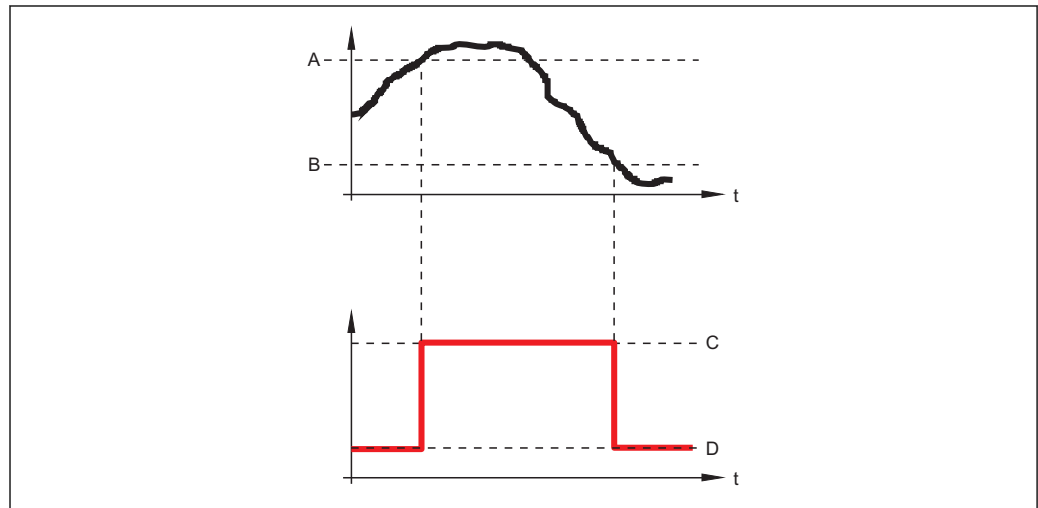


A0015585

- A *Switch-on value*
- B *Switch-off value*
- C *Output closed (conductive)*
- D *Output opened (non-conductive)*

Switch-on value < Switch-off value

- The output is closed if the measured value is smaller than **Switch-on value**.
- The output is opened if the measured value is larger than **Switch-off value**.

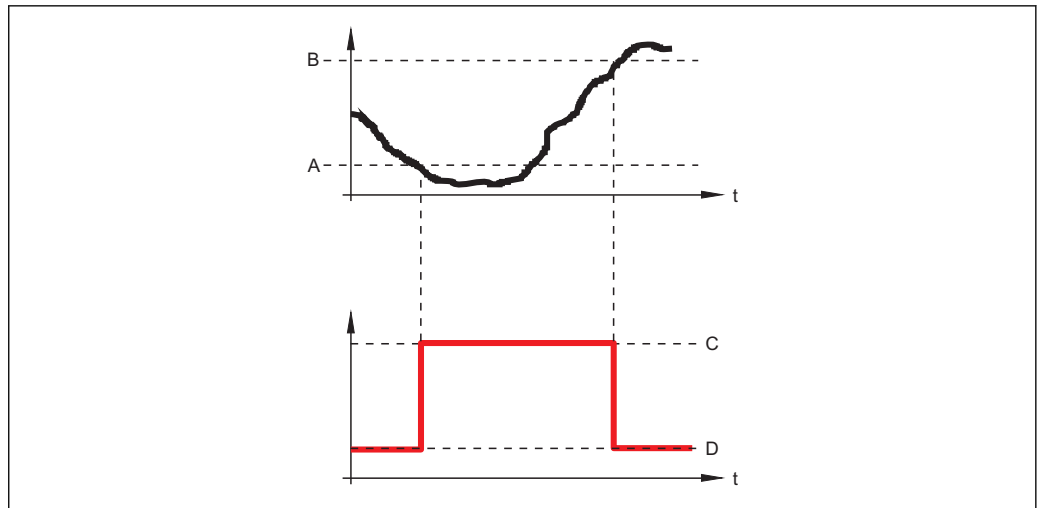

A0015586

- A Switch-on value
- B Switch-off value
- C Output closed (conductive)
- D Output opened (non-conductive)

Switch-on delay



Navigation Setup → Advanced setup → Switch output → Switch-on delay

Prerequisite **▪ Switch output function (→ 138) = Limit**
▪ Assign limit (→ 139) ≠ Off

Description Define switch-on delay.

User entry 0.0 to 100.0 s

Factory setting 0.0 s

Switch-off value



Navigation Setup → Advanced setup → Switch output → Switch-off value

Prerequisite **Switch output function (→ 138) = Limit**


Description Enter measured value for the switch-off point.





User entry Signed floating-point number

Factory setting 0


Additional information The switching behavior depends on the relative position of the **Switch-on value** and **Switch-off value** parameters; description: see the **Switch-on value** parameter (→ 140).



Switch-off delay





Navigation	  Setup → Advanced setup → Switch output → Switch-off delay
Prerequisite	<ul style="list-style-type: none"> ▪ Switch output function (→  138) = Limit ▪ Assign limit (→  139) ≠ Off
Description	Define switch-off delay.
User entry	0.0 to 100.0 s
Factory setting	0.0 s

Failure mode





Navigation	  Setup → Advanced setup → Switch output → Failure mode
Description	Define output behavior in alarm condition.
Selection	<ul style="list-style-type: none"> ▪ Actual status ▪ Open ▪ Closed
Factory setting	Open

Switch status

Navigation	  Setup → Advanced setup → Switch output → Switch status
Description	Displays the current state of the switch output.

Invert output signal



Navigation	  Setup → Advanced setup → Switch output → Invert output signal
Description	Specify whether the output signal is to be inverted.
Selection	<ul style="list-style-type: none"> ▪ No ▪ Yes
Factory setting	No


Additional information**Meaning of the options**■ **No**


The behavior of the switch output is as described above.

■ **Yes**


The states **Open** and **Closed** are inverted as compared to the description above.

"Display" submenu

 The **Display** submenu is only visible if a display module is connected to the device.

Navigation  Setup → Advanced setup → Display

Language**Navigation**

 Setup → Advanced setup → Display → Language

Description

Set display language.

Selection

- English
- Deutsch *
- Français *
- Español *
- Italiano *
- Nederlands *
- Portuguesa *
- Polski *
- русский язык (Russian) *
- Svenska *
- Türkçe *
- 中文 (Chinese) *
- 日本語 (Japanese) *
- 한국어 (Korean) *
- Bahasa Indonesia *
- tiếng Việt (Vietnamese) *
- čeština (Czech) *

Factory setting

The language selected in feature 500 of the product structure.
If no language has been selected: **English**

Format display**Navigation**

 Setup → Advanced setup → Display → Format display

Description

Select how measured values are shown on the display.

Selection


- 1 value, max. size
- 1 bargraph + 1 value
- 2 values
- 1 value large + 2 values
- 4 values

Factory setting

1 value, max. size


* Visibility depends on order options or device settings

Additional information

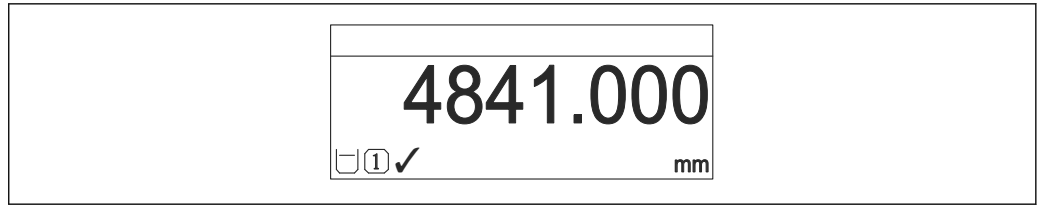


A0019963

31 "Format display" = "1 value, max. size"

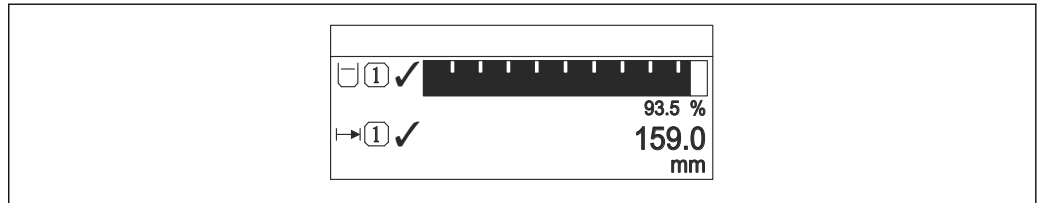


A0019964

32 "Format display" = "1 bargraph + 1 value"

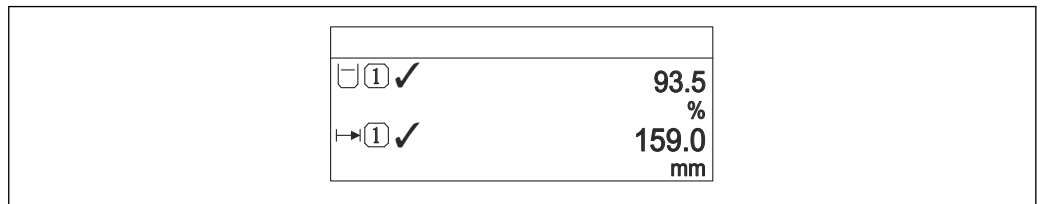


A0019965

33 "Format display" = "2 values"

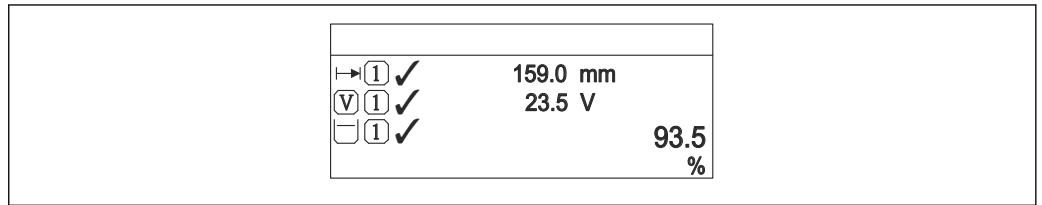

A0019966

34 "Format display" = "1 value large + 2 values"

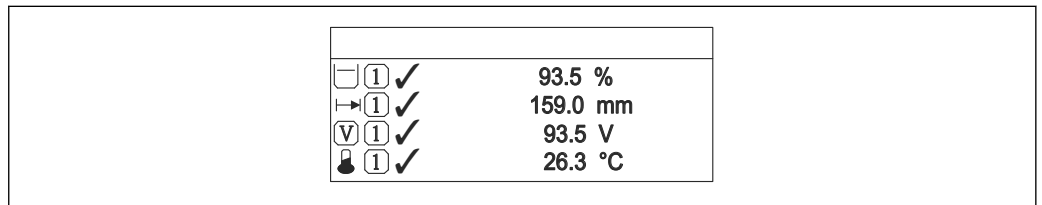

A0019968

35 "Format display" = "4 values"

- i
■
 The **Value 1 to 4 display** → 146 parameters specify which measured values are shown on the display and in which order.
- If more measured values are specified than the current display mode permits, the values alternate on the device display. The display time until the next change is configured in the **Display interval** parameter (→ 146).

Value 1 to 4 display


Navigation Setup → Advanced setup → Display → Value 1 display

Description Select the measured value that is shown on the local display.

Selection

- Level linearized
- Distance
- Absolute echo amplitude
- Relative echo amplitude
- Area of incoupling
- Current output 1
- Measured current
- Current output 2 *
- Terminal voltage
- Electronic temperature
- Analog output adv. diagnostics 1
- Analog output adv. diagnostics 2
- Analog output adv. diagnostics 3
- Analog output adv. diagnostics 4

Factory setting

- Value 1 display: Level linearized
- Value 2 display: None
- Value 3 display: None
- Value 4 display: None

Decimal places 1 to 4


Navigation Setup → Advanced setup → Display → Decimal places 1

Description Select the number of decimal places for the display value.

Selection

- x
- x.x
- x.xx
- x.xxx
- x.xxxx

Factory setting x.xx

Additional information The setting does not affect the measuring or computational accuracy of the device.

Display interval

Navigation Setup → Advanced setup → Display → Display interval

Description Set time measured values are shown on display if display alternates between values.

* Visibility depends on order options or device settings

User entry	1 to 10 s
Factory setting	5 s
Additional information	This parameter is only relevant if the number of selected measuring values exceeds the number of values the selected display format can display simultaneously.

Display damping




Navigation	Setup → Advanced setup → Display → Display damping
Description	Define display reaction time to fluctuations in the measured value.
User entry	0.0 to 999.9 s
Factory setting	0.0 s

Header



Navigation	Setup → Advanced setup → Display → Header
Description	Select header contents on local display.
Selection	<ul style="list-style-type: none"> ■ Device tag ■ Free text
Factory setting	Device tag

Additional information

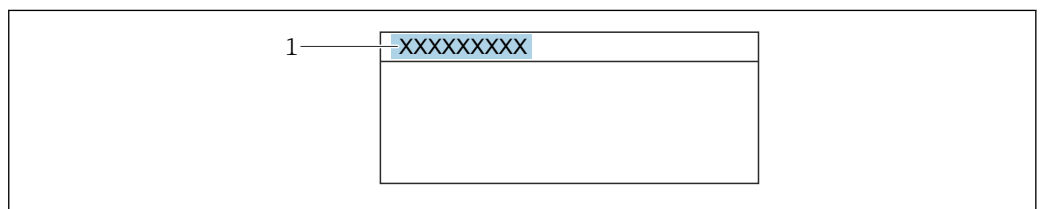



A0029422


1 Position of the header text on the display

Meaning of the options

- **Device tag**
Is defined in the **Device tag** parameter (→ 104)
- **Free text**
Is defined in the **Header text** parameter (→ 148)

Header text 

Navigation   Setup → Advanced setup → Display → Header text



Prerequisite Header (→  147) = Free text

Description Enter display header text.

Factory setting -----

Additional information The number of characters which can be displayed depends on the characters used.

Separator 

Navigation   Setup → Advanced setup → Display → Separator



Description Select decimal separator for displaying numerical values.

Selection

- .
- ,

Factory setting .

Number format 

Navigation   Setup → Advanced setup → Display → Number format

Description Choose number format for the display.

Selection

- Decimal
- ft-in-1/16"


Factory setting Decimal

Additional information The **ft-in-1/16"** option is only valid for distance units.




Decimal places menu 

Navigation   Setup → Advanced setup → Display → Decimal places menu








Description Select number of decimal places for the representation of numbers within the operating menu.

Selection	<ul style="list-style-type: none"> ■ X ■ X.X ■ X.XX ■ X.XXX ■ X.XXXX
Factory setting	x.xxx
Additional information	<ul style="list-style-type: none"> ■ Is only valid for numbers in the operating menu (e.g. Empty calibration, Full calibration), but not for the measured value display. The number of decimal places for the measured value display is defined in the Decimal places 1 to 4 →  146 parameters. ■ The setting does not affect the accuracy of the measurement or the calculations.


Backlight

Navigation	  Setup → Advanced setup → Display → Backlight
Prerequisite	The device has the SD03 local display (with optical keys).
Description	Switch the local display backlight on and off.
Selection	<ul style="list-style-type: none"> ■ Disable ■ Enable
Factory setting	Disable
Additional information	<p>Meaning of the options</p> <ul style="list-style-type: none"> ■ Disable Switches the backlight off. ■ Enable Switches the backlight on. <p> Regardless of the setting in this parameter the backlight may be automatically switched off by the device if the supply voltage is too low.</p>


Contrast display

Navigation	  Setup → Advanced setup → Display → Contrast display
Description	Adjust local display contrast setting to ambient conditions (e.g. lighting or reading angle).
User entry	20 to 80 %
Factory setting	Dependent on the display.
Additional information	<p> Setting the contrast via push-buttons:</p> <ul style="list-style-type: none"> ■ Darker: press the  and  buttons simultaneously. ■ Brighter: press the  and  buttons simultaneously.


"Configuration backup display" submenu

 This submenu is only visible if a display module is connected to the device.


The configuration of the device can be saved to the display module at a certain point of time (backup). The saved configuration can be restored to the device if required, e.g. in order to bring the device back into a defined state. The configuration can also be transferred to a different device of the same type using the display module.

Navigation  Setup → Advanced setup → Configuration backup display


Operating time

Navigation	 Setup → Advanced setup → Configuration backup display → Operating time
Description	Indicates how long the device has been in operation.
User interface	Days (d), hours (h), minutes (m), seconds (s)
Additional information	<i>Maximum time</i> 9999 d (≈ 27 years)

Last backup

Navigation	 Setup → Advanced setup → Configuration backup display → Last backup
Description	Indicates when the last data backup was saved to the display module.
User interface	Days (d), hours (h), minutes (m), seconds (s)

Configuration management

Navigation	 Setup → Advanced setup → Configuration backup display → Configuration management
Description	Select action for managing the device data in the display module.
Selection	<ul style="list-style-type: none"> ■ Cancel ■ Execute backup ■ Restore ■ Duplicate ■ Compare ■ Clear backup data
Factory setting	Cancel

Additional information**Meaning of the options**■ **Cancel**

No action is executed and the user exits the parameter.

■ **Execute backup**

A backup copy of the current device configuration in the HistoROM (built-in in the device) is saved to the display module of the device.

■ **Restore**


The last backup copy of the device configuration is copied from the display module to the HistoROM of the device.

■ **Duplicate**

The transmitter configuration is duplicated to another device using the transmitter display module. The following parameters, which characterize the individual measuring point are **not** included in the transmitted configuration:

- HART date code
- HART short tag
- HART message
- HART descriptor
- HART address
- Device tag
- Medium type

■ **Compare**

The device configuration saved in the display module is compared to the current device configuration of the HistoROM. The result of this comparison is displayed in the **Comparison result** parameter (→  151).

■ **Clear backup data**

The backup copy of the device configuration is deleted from the display module of the device.



While this action is in progress, the configuration cannot be edited via the local display and a message on the processing status appears on the display.





If an existing backup is restored to a different device using the **Restore** option, it may occur that some device functionalities are no longer available. In some cases even a device reset will not restore the original status.

In order to transmit a configuration to a different device, the **Duplicate** option should always be used.

Backup state

Navigation

  Setup → Advanced setup → Configuration backup display → Backup state

Description

Displays which backup action is currently in progress.

Comparison result

Navigation

  Setup → Advanced setup → Configuration backup display → Comparison result

Description

Displays the comparison result between the device and the display.

Additional information**Meaning of the display options****■ Settings identical**

The current device configuration of the HistoROM is identical to the backup copy in the display module.

■ Settings not identical

The current device configuration of the HistoROM is not identical to the backup copy in the display module.

■ No backup available

There is no backup copy of the device configuration of the HistoROM in the display module.

■ Backup settings corrupt

The current configuration of the HistoROM is corrupt or not compatible with the backup copy in the display module.


■ Check not done

The device configuration of the HistoROM has not yet been compared to the backup copy in the display module.


■ Dataset incompatible

The data sets are incompatible and can not be compared.





To start the comparison, set **Configuration management** (→  150) = **Compare**.



If the transmitter configuration has been duplicated from a different device by **Configuration management** (→  150) = **Duplicate**, the new device configuration in the HistoROM is only partially identical to the configuration stored in the display module: Sensor specific properties (e.g. the mapping curve) are not duplicated. Thus, the result of the comparison will be **Settings not identical**.

"Administration" submenu

Navigation  Setup → Advanced setup → Administration

Define access code 










Navigation  Setup → Advanced setup → Administration → Define access code

Description Define release code for write access to parameters.

User entry 0 to 9999

Factory setting 0

Additional information

-  If the factory setting is not changed or 0 is defined as the access code, the parameters are not write-protected and the configuration data of the device can then always be modified. The user is logged on in the *Maintenance* role.
-  The write protection affects all parameters marked with the  symbol in this document. On the local display, the  symbol in front of a parameter indicates that the parameter is write-protected.
-  Once the access code has been defined, write-protected parameters can only be modified if the access code is entered in the **Enter access code** parameter (→  114).
-  Please contact your Endress+Hauser Sales Center if you lose your access code.
-  For display operation: The new access code is only valid after it has been confirmed in the **Confirm access code** parameter (→  155).

Device reset 

Navigation   Setup → Advanced setup → Administration → Device reset

Description Select to which state the device is to be reset.

Selection

- Cancel
- To factory defaults
- To delivery settings
- Of customer settings
- To transducer defaults
- Restart device

Factory setting Cancel

Additional information**Meaning of the options****■ Cancel**

No action

■ To factory defaults

All parameters are reset to the order-code specific factory setting.

■ To delivery settings

All parameters are reset to the delivery setting. The delivery setting may differ from the factory default if customer specific settings have been ordered.

This option is only visible if customer specific settings have been ordered.

■ Of customer settings

All customer parameters are reset to their factory setting. Service parameters, however, remain unchanged.


■ To transducer defaults


Every measurement-related parameter is reset to its factory setting. Service parameters and communication-related parameters, however, remain unchanged.


■ Restart device

The restart resets every parameter which is stored in the volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.

"Define access code" wizard


 The **Define access code** wizard is only available when operating via the local display. When operating via an operating tool, the **Define access code** parameter is located directly in the **Administration** submenu. The **Confirm access code** parameter is not available for operation via operating tool.

Navigation  Setup → Advanced setup → Administration → Define access code

Define access code 

Navigation  Setup → Advanced setup → Administration → Define access code → Define access code

Description →  153

Confirm access code 

Navigation  Setup → Advanced setup → Administration → Define access code → Confirm access code

Description Confirm the entered access code.

User entry 0 to 9999

Factory setting 0

16.4 "Diagnostics" menu

Navigation  Diagnostics


Actual diagnostics



Navigation  Diagnostics → Actual diagnostics

Description Displays current diagnostic message.

Additional information The display consists of:


- Symbol for event behavior
- Code for diagnostic behavior
- Operating time of occurrence
- Event text

 If several messages are active at the same time, the messages with the highest priority is displayed.

 Information on what is causing the message, and remedy measures, can be viewed via the  symbol on the display.

Timestamp

Navigation  Diagnostics → Timestamp

Description Displays timestamp for the **Actual diagnostics** parameter (→  156).

User interface Days (d), hours (h), minutes (m), seconds (s)



Previous diagnostics

Navigation  Diagnostics → Previous diagnostics



Description Displays the last diagnostic message which has been active before the current message.

Additional information The display consists of:



- Symbol for event behavior
- Code for diagnostic behavior
- Operating time of occurrence
- Event text

 The condition displayed may still apply. Information on what is causing the message, and remedy measures, can be viewed via the  symbol on the display.



Timestamp

Navigation	 Diagnostics → Timestamp
Description	Displays timestamp for the Previous diagnostics parameter (→  156).
User interface	Days (d), hours (h), minutes (m), seconds (s)

Operating time from restart

Navigation	  Diagnostics → Operating time from restart
Description	Displays the time the device has been in operation since the last device restart.
User interface	Days (d), hours (h), minutes (m), seconds (s)

Operating time

Navigation	  Diagnostics → Operating time
Description	Indicates how long the device has been in operation.
User interface	Days (d), hours (h), minutes (m), seconds (s)
Additional information	<i>Maximum time</i> 9 999 d (≈ 27 years)

16.4.1 "Diagnostic list" submenu

Navigation  Diagnostics → Diagnostic list

Diagnostics 1 to 5


Navigation  Diagnostics → Diagnostic list → Diagnostics 1 to 5


Description Display the current diagnostics messages with the highest to fifth-highest priority.

Additional information The display consists of:

- Symbol for event behavior
- Code for diagnostic behavior
- Operating time of occurrence
- Event text


Timestamp 1 to 5

Navigation  Diagnostics → Diagnostic list → Timestamp

Description Displays timestamp for the **Diagnostics 1 to 5** parameter (→  158).



User interface Days (d), hours (h), minutes (m), seconds (s)

16.4.2 "Event logbook" submenu


 The **Event logbook** submenu is only available when operating via the local display. When operating via FieldCare, the event list can be displayed in the FieldCare function "Event List / HistoROM".

Navigation  Diagnostics → Event logbook



Filter options



Navigation	 Diagnostics → Event logbook → Filter options
Description	Select category (status signal) whose event messages are displayed in the events list.
Selection	<ul style="list-style-type: none"> ▪ All ▪ Failure (F) ▪ Function check (C) ▪ Out of specification (S) ▪ Maintenance required (M) ▪ Information (I)
Factory setting	All
Additional information	 <ul style="list-style-type: none"> ▪ This parameter is only used for operation via the local display. ▪ The status signals are categorized according to NAMUR NE 107.

"Event list" submenu

The **Event list** submenu displays the history of past events of the category selected in the **Filter options** parameter (→  159). A maximum of 100 events are displayed in chronological order.


The following symbols indicate whether an event has occurred or has ended:

- : Event has occurred
- : Event has ended

 Information on what is causing the message, and remedy instructions, can be viewed via the -button.

Display format


- For event messages in category I: information event, event text, "recording event" symbol and time the event occurred
- For event messages in category F, M, C, S (status signal): diagnostics event, event text, "recording event" symbol and time the event occurred

Navigation  Diagnostics → Event logbook → Event list




16.4.3 "Device information" submenu

Navigation  Diagnostics → Device information



Device tag

Navigation	 Diagnostics → Device information → Device tag
Description	Enter the name for the measuring point.
Factory setting	FMR6x


Serial number











Navigation	 Diagnostics → Device information → Serial number
Description	Displays serial number of the device.
Additional information	<p> Uses of the serial number</p> <ul style="list-style-type: none"> ▪ To identify the device quickly, e.g. when contacting Endress+Hauser. ▪ To obtain specific information on the device using the Device Viewer: www.endress.com/deviceviewer <p> The serial number is also indicated on the nameplate.</p>

Firmware version


Navigation	 Diagnostics → Device information → Firmware version
Description	Indicates the installed Firmware version.
User interface	xx.yy.zz
Additional information	<p> For firmware versions differing only in the last two digits ("zz") there is no difference concerning functionality or operation.</p>

Device name

Navigation	 Diagnostics → Device information → Device name
Description	Displays device name.


Order code		
Navigation	  Diagnostics → Device information → Order code	
Description	Displays order code of the device.	
Additional information	The order code is generated from the extended order code, which defines all device features of the product structure. In contrast, the device features can not be read directly from the order code.	
Extended order code 1 to 3		
Navigation	  Diagnostics → Device information → Extended order code 1 to 3	
Description	Displays the three parts of the extended order code.	
Additional information	The extended order code indicates the version of all the features of the product structure and thus uniquely identifies the device.	
Device revision		
Navigation	  Diagnostics → Device information → Device revision	
Description	Displays the device revision registered for this device at the HART Communication Foundation.	
Additional information	The device revision is used to allocate the correct Device Description file (DD) to the device.	
Device ID		
Navigation	  Diagnostics → Device information → Device ID	
Description	Displays Device ID.	
Additional information	In addition to the Device type and Manufacturer ID, the Device ID is part of the unique device identification (Unique ID) which characterizes each HART device unambiguously.	

Device type

Navigation Diagnostics → Device information → Device type**Description**

Shows the device type with which the measuring device is registered with the HART Communication Foundation.

Manufacturer ID

Navigation Diagnostics → Device information → Manufacturer ID**Description**

Use this function to view the manufacturer ID with which the measuring device is registered with the HART Communication Foundation.

User interface

2-digit hexadecimal number

Factory setting

0x11 (for Endress+Hauser)

16.4.4 "Measured values" submenu



Navigation   Diagnostics → Measured values

Distance



Navigation   Diagnostics → Measured values → Distance

Description Distance between the lower edge of the flange or threaded connection and the level.



Level linearized

Navigation   Diagnostics → Measured values → Level linearized

Description Displays linearized level.

Additional information  The unit is defined by the **Unit after linearization** parameter →  123.

Output current 1 to 2

Navigation   Diagnostics → Measured values → Output current 1 to 2

Description Displays calculated output current.

Measured current 1

Navigation   Diagnostics → Measured values → Measured current 1

Prerequisite Only available for current output 1

Description Displays the measured value of the output current.

Terminal voltage 1

Navigation   Diagnostics → Measured values → Terminal voltage 1

Description Displays terminal voltage at the current output.

Sensor temperature


Navigation Diagnostics → Measured values → Sensor temperature**Description**

Indicates the current sensor temperature.

16.4.5 "Data logging" submenu

Navigation  Diagnostics → Data logging

Assign channel 1 to 4

Navigation  Diagnostics → Data logging → Assign channel 1 to 4

Description Allocate a process variable to the respective data logging channel.

Selection

- Off
- Level linearized
- Distance
- Current output 1
- Measured current
- Current output 2 *
- Terminal voltage
- Electronic temperature
- Analog output adv. diagnostics 1
- Analog output adv. diagnostics 2
- Analog output adv. diagnostics 3
- Analog output adv. diagnostics 4

Factory setting Off


Additional information A total of 1000 measured values can be logged. This means:

- 1000 data points if 1 logging channel is used
- 500 data points if 2 logging channels are used
- 333 data points if 3 logging channels are used
- 250 data points if 4 logging channels are used

If the maximum number of data points is reached, the oldest data points in the data log are cyclically overwritten in such a way that the last 1000, 500, 333 or 250 measured values are always in the log (ring memory principle).

 The logged data are deleted if a new option is selected in this parameter.

Logging interval

Navigation  Diagnostics → Data logging → Logging interval

Description Define logging interval t_{log} .

User entry 1.0 to 3 600.0 s

Factory setting 30.0 s

* Visibility depends on order options or device settings

Additional information

This parameter defines the interval between the individual data points in the data log, and thus the maximum loggable process time T_{\log} :

- If 1 logging channel is used: $T_{\log} = 1000 \cdot t_{\log}$
- If 2 logging channels are used: $T_{\log} = 500 \cdot t_{\log}$
- If 3 logging channels are used: $T_{\log} = 333 \cdot t_{\log}$
- If 4 logging channels are used: $T_{\log} = 250 \cdot t_{\log}$

Once this time elapses, the oldest data points in the data log are cyclically overwritten such that a time of T_{\log} always remains in the memory (ring memory principle).



The logged data are deleted if this parameter is changed.

*Example***When using 1 logging channel**

- $T_{\log} = 1000 \cdot 1 \text{ s} = 1000 \text{ s} \approx 16.5 \text{ min}$
- $T_{\log} = 1000 \cdot 10 \text{ s} = 10000 \text{ s} \approx 2.75 \text{ h}$
- $T_{\log} = 1000 \cdot 80 \text{ s} = 80000 \text{ s} \approx 22 \text{ h}$
- $T_{\log} = 1000 \cdot 3600 \text{ s} = 3600000 \text{ s} \approx 41 \text{ d}$

Clear logging data**Navigation**

Diagnostics → Data logging → Clear logging data

Description

Initiate a deletion of the complete logging memory.

Selection

- Cancel
- Clear data


Factory setting

Cancel

"Display channel 1 to 4" submenu



i The **Display channel 1 to 4** submenus are only available for operation via the local display. When operating via FieldCare, the logging diagram can be displayed in the FieldCare function "Event List / HistoROM" .

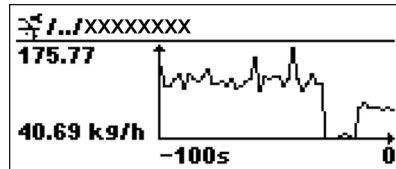The **Display channel 1 to 4** submenus invoke a diagram of the logging history of the respective channel.



- x-axis: depending on the number of selected channels, 250 to 1000 measured values of a process variable are displayed.
- y-axis: covers the approximate measured value span and constantly adapts this to the measurement.








i To return to the operating menu, press \oplus and \ominus simultaneously.

Navigation   Diagnostics → Data logging → Display channel 1 to 4

16.4.6 "Simulation" submenu








The **Simulation** submenu is used to simulate specific measuring values or other conditions. This helps to check the correct configuration of the device and connected control units.

Conditions which can be simulated

Condition to be simulated	Associated parameters
Specific value of a process variable	<ul style="list-style-type: none"> ▪ Assign measurement variable (→  170) ▪ Process variable value (→  170)
Specific value of the output current	<ul style="list-style-type: none"> ▪ Current output simulation (→  170) ▪ Value current output (→  171)
Specific state of the switch output	<ul style="list-style-type: none"> ▪ Switch output simulation (→  171) ▪ Switch status (→  171)
Existence of an alarm	Device alarm simulation (→  172)

Structure of the submenu



Navigation  Diagnostics → Simulation

► Simulation	
Assign measurement variable	→  170
Process variable value	→  170
Current output 1 to 2 simulation	→  170
Value current output 1 to 2	→  171
Switch output simulation	→  171
Switch status	→  171
Device alarm simulation	→  172



Description of parameters

Navigation  Diagnostics → Simulation


Assign measurement variable

Navigation	 Diagnostics → Simulation → Assign measurement variable
Description	Select process variable to be simulated.
Selection	<ul style="list-style-type: none"> ▪ Off ▪ Level ▪ Level linearized
Factory setting	Off
Additional information	<ul style="list-style-type: none"> ▪ The value of the variable to be simulated is defined in the Process variable value parameter (→  170). ▪ If Assign measurement variable ≠ Off, a simulation is active. This is indicated by a diagnostic message of the <i>Function check (C)</i> category.

Process variable value



Navigation	 Diagnostics → Simulation → Process variable value
Prerequisite	Assign measurement variable (→  170) ≠ Off
Description	Specify value of the process value being simulated.
User entry	Signed floating-point number
Factory setting	0
Additional information	Downstream measured value processing and the signal output use this simulation value. In this way, users can verify whether the measuring device has been configured correctly.


Current output 1 to 2 simulation

Navigation	 Diagnostics → Simulation → Current output 1 to 2 simulation
Description	Switch the simulation of the current output on or off.
Selection	<ul style="list-style-type: none"> ▪ Off ▪ On
Factory setting	Off

Additional information An active simulation is indicated by a diagnostic message of the *Function check (C)* category.

Value current output 1 to 2

Navigation   Diagnostics → Simulation → Value current output 1 to 2

Prerequisite **Current output simulation (→  170) = On**



Description Enter current value for the simulation

User entry 3.59 to 22.5 mA

Factory setting 3.59 mA

Additional information The current output assumes the value specified in this parameter. In this way, users can verify the correct adjustment of the current output and the correct function of connected control units.

Switch output simulation

Navigation   Diagnostics → Simulation → Switch output simulation

Description Switch the simulation of the switch output on or off.


Selection

- Off
- On

Factory setting Off

Switch status

Navigation   Diagnostics → Simulation → Switch status

Prerequisite **Switch output simulation (→  171) = On**

Description Define the switch state to be simulated.



Selection


- Open
- Closed




Factory setting Open

Additional information The switch status assumes the value defined in this parameter. This helps to check correct operation of connected control units.





Device alarm simulation


Navigation	  Diagnostics → Simulation → Device alarm simulation
Description	Switch alarm simulation on or off.
Selection	<ul style="list-style-type: none"> ■ Off ■ On
Factory setting	Off
Additional information	<p>When selecting the On option, the device generates an alarm. This helps to check the correct output behavior of the device in the case of an alarm.</p> <p>An active simulation is indicated by the diagnostic message ⊗ C484 Failure mode simulation.</p>

Diagnostic event category


Navigation	 Diagnostics → Simulation → Diagnostic event category
Description	Select event category for the simulation.
Selection	<ul style="list-style-type: none"> ■ Sensor ■ Electronics ■ Configuration ■ Process
Factory setting	Process
Additional information	<p>Only events of the selected category are available in the selection list of the Diagnostic event simulation parameter (→  172).</p> <p> When operated via tool, all diagnostic messages are always available in Diagnostic event simulation. Therefore, Diagnostic event category appears only on the local display.</p>

Diagnostic event simulation


Navigation	  Diagnostics → Simulation → Diagnostic event simulation
Prerequisite	Access status display (→  114)/ Access status tooling (→  113) = Service
Description	Select diagnostic event to be simulated.
Factory setting	Off


Additional information

When operated via the local display, the selection list can be filtered according to the event categories (**Diagnostic event category** parameter (→  172)).

16.4.7 "Device check" submenu

Navigation  Diagnostics → Device check


Start device check

Navigation  Diagnostics → Device check → Start device check


Selection No
 Yes

Factory setting No

Result device check


Navigation  Diagnostics → Device check → Result device check

Last check time

Navigation  Diagnostics → Device check → Last check time

Description Indicates the operating time at which the last device check has been performed.

16.4.8 "Heartbeat" submenu

 The **Heartbeat** submenu is only available via **FieldCare** or **DeviceCare**. It contains the wizards which are part of the **Heartbeat Verification** and **Heartbeat Monitoring** application packages.

Detailed description

SD01870F

Navigation  Diagnostics → Heartbeat

Index

A

Access authorization to parameters	
Read access	47
Write access	47
Access code	47
Incorrect input	47
Access status display (Parameter)	114
Access status tooling (Parameter)	113
Accessories	
Communication specific	89
Device-specific	83
Service specific	90
Activate table (Parameter)	128
Actual diagnostics (Parameter)	156
Administration (Submenu)	153
Advanced setup (Submenu)	113
Application	10
Assign channel 1 to 4 (Parameter)	165
Assign current output (Parameter)	134
Assign diagnostic behavior (Parameter)	139
Assign limit (Parameter)	139
Assign measurement variable (Parameter)	170
Assign status (Parameter)	138

B

Backlight (Parameter)	149
Backup state (Parameter)	151
Bin type (Parameter)	104
Blocking distance (Parameter)	117, 130

C

CE mark	11
Cleaning	80
Clear logging data (Parameter)	166
Code incorrect (Parameter)	133
Comparison result (Parameter)	151
Configuration backup display (Submenu)	150
Configuration management (Parameter)	150
Configuration of a level measurement	64
Confirm access code (Parameter)	155
Confirm distance (Parameter)	108, 111
Context menu	59
Contrast display (Parameter)	149
Current output 1 to 2 (Submenu)	134
Current output 1 to 2 simulation (Parameter)	170
Current span (Parameter)	134
Customer value (Parameter)	128

D

Damping output (Parameter)	135
Data logging (Submenu)	165
DD	61
Deactivate SIL/WHG (Wizard)	133
Decimal places 1 (Parameter)	146
Decimal places menu (Parameter)	148
Declaration of Conformity	11

Define access code	48
Define access code (Parameter)	153, 155
Define access code (Wizard)	155
Designated use	10
Device alarm simulation (Parameter)	172
Device check (Submenu)	174
Device Descriptions	61
Device ID (Parameter)	161
Device information (Submenu)	160
Device name (Parameter)	160
Device replacement	81
Device reset (Parameter)	153
Device revision (Parameter)	161
Device tag (Parameter)	104, 160
Device type (Parameter)	162
Diagnostic event	
In the operating tool	75
Diagnostic event category (Parameter)	172
Diagnostic event simulation (Parameter)	172
Diagnostic events	72
Diagnostic list	75
Diagnostic list (Submenu)	158
Diagnostic message	72
Diagnostics	
Symbols	72
Diagnostics (Menu)	156
Diagnostics 1 to 5 (Parameter)	158
Diagnostics event	73
Diameter (Parameter)	125
DIP switch	
see Write protection switch	
Display (Submenu)	144
Display and operating module FHX50	43
Display channel 1 to 4 (Submenu)	167
Display damping (Parameter)	147
Display interval (Parameter)	146
Display module	53
Display symbols for submenus	54
Display symbols for the locking state	54
Disposal	82
Distance (Parameter)	107, 111, 163
Distance unit (Parameter)	104
Document	
Function	5
Document function	5
E	
Electrical connection	
Commubox FXA291	44
Operating tools	
Via service interface (CDI)	44
Electronics housing	
Design	15
Empty calibration (Parameter)	106
Enter access code (Parameter)	114
Envelope curve display	60

Event history 77

Event level

- Explanation 72
- Symbols 72

Event list (Submenu) 159

Event logbook (Submenu) 159

Event text 73

Events list 77

Extended order code 1 to 3 (Parameter) 161

Exterior cleaning 80

F

Failure current (Parameter) 136

Failure mode (Parameter) 136, 142

FHX50 43

Field of application

- Residual risks 10

Filter options (Parameter) 159

Filtering the event logbook 78

Firmware version (Parameter) 160

Fixed current (Parameter) 135

Format display (Parameter) 144

Free text (Parameter) 124

Full calibration (Parameter) 106

FV (HART device variable) 61

H

Hardware write protection 49

HART device variables 61

HART integration 61

HART protocol 43

Header (Parameter) 147

Header text (Parameter) 148

Heartbeat (Submenu) 175

Housing

- Design 15
- Turning 28

I

Input mask 57

Intermediate height (Parameter) 125

Invert output signal (Parameter) 142

K

Keypad lock

- Disabling 52
- Switching on 52

L

Language (Parameter) 144

Last backup (Parameter) 150

Last check time (Parameter) 174

Level (Parameter) 107, 127, 128

Level (Submenu) 115

Level correction (Parameter) 118

Level linearized (Parameter) 124, 163

Level measurement configuration 64

Level unit (Parameter) 117

Linearization (Submenu) 120, 121, 122

Linearization type (Parameter) 122

Local display 42

- see Diagnostics message
- see In alarm condition

Locking status (Parameter) 113

Logging interval (Parameter) 165

M

Maintenance 80

Manage device configuration 68

Manufacturer ID (Parameter) 162

Mapping (Wizard) 111

Mapping end point (Parameter) 109, 111

Max. draining speed liquid (Parameter) 116

Max. draining speed solid (Parameter) 105

Max. filling speed liquid (Parameter) 116

Max. filling speed solid (Parameter) 105

Maximum value (Parameter) 125

Measured current 1 (Parameter) 163

Measured value symbols 55

Measured values (Submenu) 163

Media 10

Medium property (Parameter) 115

Medium type (Parameter) 115

Menu

- Diagnostics 156
- Setup 104

N

Number format (Parameter) 148

O

Operating elements

- Diagnostics message 73

Operating module 53

Operating time (Parameter) 150, 157

Operating time from restart (Parameter) 157

Operational safety 11

Order code (Parameter) 161

Output current 1 to 2 (Parameter) 137, 163

Output echo lost (Parameter) 129

Overvoltage protection

- General information 38

P

Prepare recording map (Parameter) 111

Present mapping (Parameter) 109

Previous diagnostics (Parameter) 156

Process variable value (Parameter) 170

Product safety 11

PV (HART device variable) 61

R

Ramp at echo lost (Parameter) 130

Read access 47

Record map (Parameter) 109, 111

Registered trademarks 9

Remedial measures

- Calling up 74
- Closing 74

Remote operation 43

- Repair concept 81
- Replacing a device 81
- Requirements for personnel 10
- Reset write protection (Parameter) 133
- Result device check (Parameter) 174
- Return 82
- S**
- Safety instructions
 - Basic 10
- Safety Instructions (XA) 12
- Safety settings (Submenu) 129
- Sensor temperature (Parameter) 164
- Separator (Parameter) 148
- Serial number (Parameter) 160
- Setting the operating language 63
- Settings
 - Manage device configuration 68
 - Operating language 63
- Setup (Menu) 104
- Signal quality (Parameter) 108
- SIL/WHG confirmation (Wizard) 132
- Simulation (Submenu) 169, 170
- Spare parts 82
 - Nameplate 82
- Start device check (Parameter) 174
- Status signals 54, 72
- Störungsbehebung 70
- Submenu
 - Administration 153
 - Advanced setup 113
 - Configuration backup display 150
 - Current output 1 to 2 134
 - Data logging 165
 - Device check 174
 - Device information 160
 - Diagnostic list 158
 - Display 144
 - Display channel 1 to 4 167
 - Event list 159
 - Event logbook 159
 - Events list 77
 - Heartbeat 175
 - Level 115
 - Linearization 120, 121, 122
 - Measured values 163
 - Safety settings 129
 - Simulation 169, 170
 - Switch output 138
- SV (HART device variable) 61
- Switch output (Submenu) 138
- Switch output function (Parameter) 138
- Switch output simulation (Parameter) 171
- Switch status (Parameter) 142, 171
- Switch-off delay (Parameter) 142
- Switch-off value (Parameter) 141
- Switch-on delay (Parameter) 141
- Switch-on value (Parameter) 140
- Symbols
 - For correction 57
 - In the text and numeric editor 57
- System components 90
- T**
- Table mode (Parameter) 126
- Table number (Parameter) 127
- Tank/silo height (Parameter) 118
- Terminal voltage 1 (Parameter) 163
- Timestamp (Parameter) 156, 157, 158
- Transmitter
 - Turning the display module 28
- Transmitter housing
 - Turning 28
- Turning the display module 28
- TV (HART device variable) 61
- U**
- Unit after linearization (Parameter) 123
- Use of the measuring device
 - see Designated use
- Use of the measuring devices
 - Borderline cases 10
 - Incorrect use 10
- V**
- Value 1 display (Parameter) 146
- Value current output 1 to 2 (Parameter) 171
- Value echo lost (Parameter) 129
- W**
- W@M Device Viewer 82
- Wizard
 - Deactivate SIL/WHG 133
 - Define access code 155
 - Mapping 111
 - SIL/WHG confirmation 132
- Workplace safety 11
- Write access 47
- Write protection
 - Via access code 48
 - Via write protection switch 49
- Write protection switch 49



71347823

www.addresses.endress.com
