

Brief Operating Instructions

Gammapiilot M FMG50

Radiometric measurement



These Instructions are Brief Operating Instructions; they are not a substitute for the Operating Instructions pertaining to the device.

For detailed information, refer to the Operating Instructions and other documentation.

Available for all device versions via:

- Internet: www.endress.com/deviceviewer
- Smart phone/Tablet: Endress+Hauser Operations App



A0023555

Table of contents

1	About this document	4
1.1	Symbols used	4
1.2	Documentation	5
1.3	Registered trademarks	6
2	Basic safety instructions	6
2.1	Requirements for personnel	6
2.2	Designated use	7
2.3	Installation, commissioning and operation	7
2.4	Hazardous area	7
2.5	Radiation protection	8
2.6	Workplace safety	9
2.7	Operational safety	9
2.8	Product safety	10
3	Mounting	10
3.1	Incoming acceptance, product identification, transport, storage	10
3.2	Installation conditions	12
3.3	Post-installation check	20
4	Electrical connection	20
4.1	Connection compartment	20
4.2	4 to 20 mA HART connection	20
4.3	Terminal assignment	21
4.4	Cable entries	22
4.5	Potential equalization	22
4.6	Rated cross-section	23
4.7	Wiring	23
4.8	Post-connection check	23
5	Operation	24
5.1	Overview of the HART operating options	24
5.2	Alternative operation options	25
5.3	Locking/unlocking configuration	28
5.4	Resetting to the default configuration	28
6	Commissioning	29
6.1	Post-installation and post-connection check	29
6.2	Commissioning using the Commissioning Wizard	30
6.3	Commissioning via SmartBlue (App)	30
6.4	Commissioning via on-site operation	31
6.5	Operation and settings via RIA15	33
6.6	Data access - Security	33
6.7	Overview of the operating menu	33
7	Maintenance and repair	34
7.1	Cleaning	34
7.2	Repair	34
7.3	Replacement	34
7.4	Spare parts	35
7.5	Return	35
7.6	Disposal	35
7.7	Contact addresses at Endress+Hauser	36
8	Certificates and approvals	36
8.1	Safety Manual (SIL 2/3)	36
8.2	Ex approval	36
8.3	Other standards and guidelines	36

8.4	Certificates	36
8.5	CE mark	37
8.6	EAC	37
8.7	Overfill protection	37

1 About this document

1.1 Symbols used

1.1.1 Safety symbols

 **CAUTION**

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.

 **DANGER**

This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.


 **NOTICE**


This symbol contains information on procedures and other facts which do not result in personal injury.


 **WARNING**


This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.

1.1.2 Symbols for certain types of information and graphics


 Warns against radioactive substances or ionizing radiation

 **Permitted**
Procedures, processes or actions that are permitted

 **Preferred**
Procedures, processes or actions that are preferred

 **Forbidden**
Procedures, processes or actions that are forbidden

 **Tip**
Indicates additional information

 Reference to documentation



Reference to page



Reference to graphic



Notice or individual step to be observed



Series of steps



Result of a step



Operation via local display



Operation via operating tool



Write-protected parameter

1, 2, 3, ...

Item numbers

A, B, C, ...

Views



Safety instructions

Observe the safety instructions contained in the associated Operating Instructions

1.2 Documentation

The following documentation types are available in the Downloads of the Endress+Hauser website (www.endress.com/downloads):



For an overview of the scope of the associated Technical Documentation, refer to the following:

- *W@M Device Viewer* (www.endress.com/deviceviewer): Enter the serial number from nameplate
- *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2D matrix code (QR code) on the nameplate

1.2.1 Technical Information (TI)

Planning aid

The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.

1.2.2 Operating Instructions (BA)

Your reference guide

These Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.

1.2.3 Safety Instructions (XA)

Depending on the approval, the following Safety Instructions (XA) are supplied with the device. They are an integral part of the Operating Instructions.



The nameplate indicates the Safety Instructions (XA) that are relevant to the device.

1.3 Registered trademarks

HART®

Registered trademark of the FieldComm Group, Austin, Texas, USA

Apple®

Apple, the Apple logo, iPhone, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.

Android®

Android, Google Play and the Google Play logo are trademarks of Google Inc.

Bluetooth®

The *Bluetooth*® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Endress+Hauser is under license. Other trademarks and trade names are those of their respective owners.

2 Basic safety instructions

2.1 Requirements for personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- Trained, qualified specialists must have a relevant qualification for this specific function and task
- Are authorized by the plant owner/operator
- Are familiar with federal/national regulations
- Before beginning work, the specialist staff must have read and understood the instructions in the Operating Instructions and supplementary documentation as well as in the certificates (depending on the application)
- Following instructions and basic conditions

The operating personnel must fulfill the following requirements:

- Being instructed and authorized according to the requirements of the task by the facility's owner-operator
- Following the instructions in these Operating Instructions

2.2 Designated use


The Gammapilot FMG50 is a compact transmitter for non-contact level, point level, density and concentration measurement. The measuring range is up to 3 m (9.8 ft). The Gammapilot FMG50 is certified according to IEC 61508 for safety-related operation up to SIL 2/3.

2.3 Installation, commissioning and operation

The Gammapilot FMG50 is designed to meet state-of-the-art safety requirements and complies with applicable standards and EU regulations. However, if it is used improperly or for applications for which it is not intended, application-related hazards may arise, e.g. product overflow due to incorrect installation or configuration. Installation, electrical connection, commissioning, operation and maintenance of the measuring system must therefore be carried out exclusively by trained specialists authorized to perform such work by the system operator. Technical personnel must have read and understood these Operating Instructions and must adhere to them. Modifications and repairs to the device may only be carried out if they are expressly permitted in the Operating Instructions.

WARNING

- ▶ The four screws connecting the detector pipe to the terminal head may not be opened.

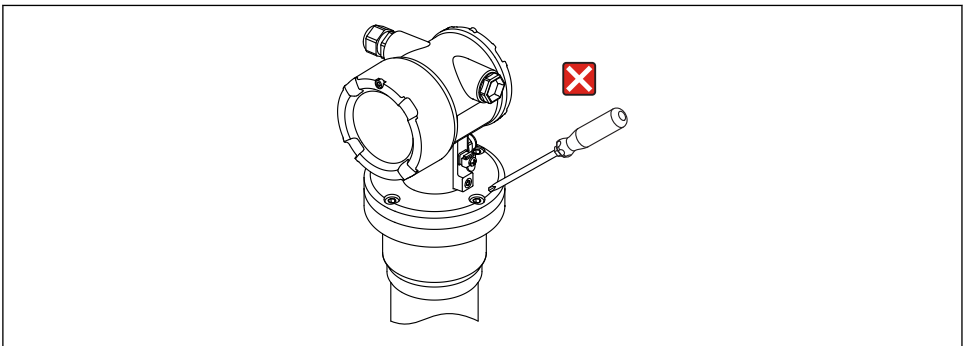

A0038007

2.4 Hazardous area

If the measuring system is used in hazardous areas, the corresponding national standards and regulations must be observed. The device is accompanied by separate "Ex documentation", which is an integral part of these Operating Instructions. The installation specifications, connection data and safety instructions listed in this supplementary documentation must be observed.

- Technical personnel must be qualified and trained for the hazardous area.
- Comply with the metrological and safety-related requirements for the measuring point.

⚠ WARNING


- ▶ Observe the safety instructions associated with the device. These instructions depend on the certificate ordered.

2.5 Radiation protection

The Gammapilot FMG50 is used in conjunction with a radiation source, contained in a source container. When handling radiation sources, the following instructions must be observed:

2.5.1 Basic radiation protection guidelines**⚠ WARNING**

- ▶ When working with radiation sources, avoid any unnecessary exposure to radiation. All unavoidable radiation exposure must be kept to a minimum. Three basic concepts apply to achieve this:

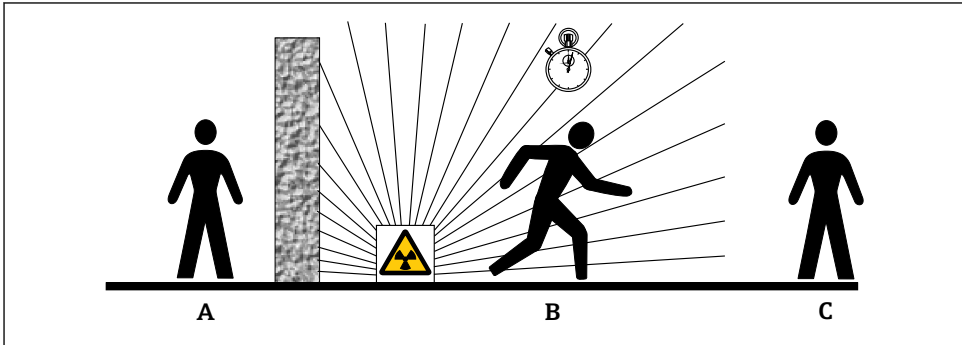

A0016373

- A *Shield*
- B *Time*
- C *Distance*

⚠ CAUTION

- ▶ When working with source containers, all the instructions for mounting and usage outlined in the following documents must be observed:

**Source container documentation**

- **FQG60:**
TI00445F
- **FQG61, FQG62:**
TI00435F
- **FQG63:**
TI00446F
- **FQG66:**
 - TI01171F
 - BA01327F

Shielding

Ensure the best possible shielding between the radiation source and yourself and all other persons. Effective shielding is provided by source containers (FQG60, FQG61/ FQG62, FQG63, FQG66) and all high-density materials (lead, iron, concrete etc.).

Time

Remain as short as possible in the area exposed to radiation.

Distance

Keep as far away from the radiation source as possible. The radiation intensity decreases in proportion to the square of the distance from the radiation source.

2.6 Workplace safety

For work on and with the device:

- ▶ Wear the required personal protective equipment according to federal/national regulations.
- ▶ Switch off the supply voltage before connecting the device.

2.7 Operational safety

Risk of injury.

- ▶ Operate the device in proper technical condition and fail-safe condition only.
- ▶ The operator is responsible for interference-free operation of the device.

Conversions to the device

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers.

- ▶ If, despite this, modifications are required, consult with the manufacturer.

Repair

To ensure continued operational safety and reliability,

- ▶ Carry out repairs on the device only if they are expressly permitted.
- ▶ Observe federal/national regulations pertaining to repair of an electrical device.
- ▶ Use original spare parts and accessories from the manufacturer only.

Hazardous area

To eliminate a danger for persons or for the facility when the device is used in the hazardous area (e.g. explosion protection, pressure vessel safety):

- ▶ Based on the nameplate, check whether the ordered device is permitted for the intended use in the hazardous area.
- ▶ Observe the specifications in the separate supplementary documentation that is an integral part of these Instructions.

2.8 Product safety

This measuring device is designed in accordance with good engineering practice to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate. It meets general safety standards and legal requirements.

2.8.1 CE mark

The measuring system meets the legal requirements of the applicable EU Directives. These are listed in the corresponding EU Declaration of Conformity along with the standards applied.

Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.

2.8.2 EAC conformity

The measuring system meets the legal requirements of the applicable EAC guidelines. These are listed in the corresponding EAC Declaration of Conformity together with the standards applied.

Endress+Hauser confirms successful testing of the device by affixing to it the EAC mark.

3 Mounting

3.1 Incoming acceptance, product identification, transport, storage

3.1.1 Incoming acceptance

Check the following during incoming acceptance:

- Are the order codes on the delivery note and the product sticker identical?
- Are the goods undamaged?
- Do the nameplate data match the ordering information on the delivery note?
- If required (see nameplate): Are the safety instructions (XA) provided?



If one of these conditions is not met, please contact the manufacturer's sales office.

3.1.2 Product identification

The following options are available for the identification of the measuring device:

- Nameplate specifications
- Extended order code with breakdown of the device features on the delivery note
- ▶ Enter the serial number from the nameplates into *W@M Device Viewer* (www.endress.com/deviceviewer)
 - ↳ All the information about the measuring device and the scope of the associated Technical Documentation are displayed.

- ▶ Enter the serial number from the nameplate into the *Endress+Hauser Operations App* or use the *Endress+Hauser Operations App* to scan the 2-D matrix code (QR Code) provided on the nameplate
 - ↳ All the information about the measuring device and the scope of the associated Technical Documentation are displayed.

3.1.3 Manufacturer address

Endress+Hauser SE+Co. KG
Hauptstraße 1
79689 Maulburg, Germany

Address of the manufacturing plant: See nameplate.

3.1.4 Transporting to the measuring point

CAUTION

Risk of injury

- ▶ Follow the safety instructions and transport conditions for devices weighing more than 18 kg (39.69 lb).

3.1.5 Storage

Pack the device so that it is protected against impact for storage and transport. The original packaging provides optimum protection. The permitted storage temperature is:

NaI (TI) crystal

-40 to +80 °C (-40 to +176 °F)

PVT scintillator (standard)

-40 to +60 °C (-40 to +140 °F)

PVT scintillator (high-temperature version)

-20 to +80 °C (-4 to +176 °F)




As the device contains a battery, it is recommended to store the device at room temperature in a location that does not receive direct sunlight

3.2 Installation conditions


3.2.1 General information

- The angle of emission of the source container must be exactly aligned to the measuring range of the Gammapilot FMG50. Observe the measuring range marks of the device.
- The source container and the Gammapilot FMG50 should be mounted as close to the vessel as possible. Any access to the beam must be blocked to ensure that it is not possible to reach into this area.
- The Gammapilot FMG50 should be protected against direct sunlight or process heat in order to increase its service life.
 - Option: "Weather protection cover"
 - Option: "Heat shield for the sensor"
- Clamps are optionally supplied with the device.
- The mounting device must be installed in such a way as to withstand the weight of the Gammapilot FMG50 under all anticipated operating conditions (e.g. vibrations).

 More information with regard to the safety-related use of the Gammapilot FMG50 can be found in the Functional Safety Manual.

3.2.2 Dimensions, weights

Gammapilot FMG50

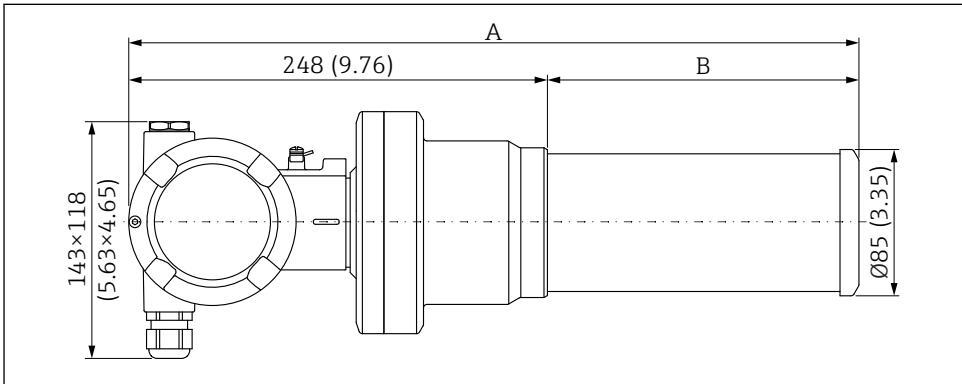

A0037984

- Version NaI (TI) 2" :
Total length A: 430 mm (16.93 in), weight: 11.60 kg (25.57 lb)
- Version NaI (TI) 4" :
Total length A: 480 mm (18.90 in), weight: 12.19 kg (26.87 lb)
- Version PVT 200 :
Total length A: 590 mm (23.23 in), weight: 12.10 kg (26.68 lb)
- Version PVT 400 :
Total length A: 790 mm (31.10 in), weight: 13.26 kg (29.23 lb)

- Version PVT 800 :
Total length A: 1 190 mm (46.85 in), weight: 15.54 kg (34.26 lb)
- Version PVT 1200 :
Total length A: 1 590 mm (62.60 in), weight: 17.94 kg (39.55 lb)
- Version PVT 1600 :
Total length A: 1 990 mm (78.35 in), weight: 20.14 kg (44.40 lb)
- Version PVT 2000 :
Total length A: 2 390 mm (94.09 in), weight: 22.44 kg (49.47 lb)
- Version PVT 2400 :
Total length A: 2 790 mm (109.84 in), weight: 24.74 kg (54.54 lb)
- Version PVT 3000 :
Total length A: 3 390 mm (133.46 in), weight: 28.14 kg (62.04 lb)



The weight data refer to the stainless steel housing versions. The aluminum housing versions are 2.5 kg (5.51 lb) lighter.




The additional weight for small parts is: 1 kg (2.20 lb)

3.2.3 Installation conditions for level measurement

Conditions

- The Gammapilot FMG50 is mounted vertically for level measurements.
- When the Gammapilot FMG50 is installed upside-down, it can be given additional support (retaining bracket) to prevent damage to the connecting cable or to the unit if it falls.

Examples

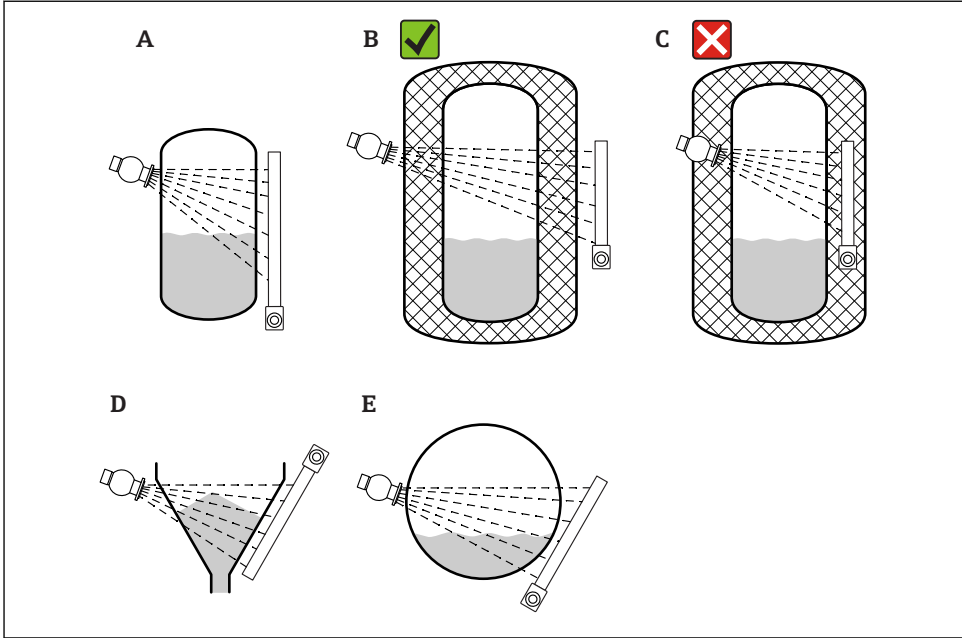

A0037715


- A Vertical cylinder; the Gammapiilot FMG50 is mounted vertically with the detector head pointing either downwards or upwards, the gamma ray is aligned to the measuring range.
- B Correct: Gammapiilot FMG50 mounted outside the tank insulation
- C Incorrect: Gammapiilot FMG50 mounted inside the tank insulation
- D Conical vessel outlet
- E Horizontal cylinder

3.2.4 Installation conditions for point level detection

Conditions

For point level detection, the Gammapiilot FMG50 is generally mounted horizontally at the height of the desired level limit.

Measuring system arrangement

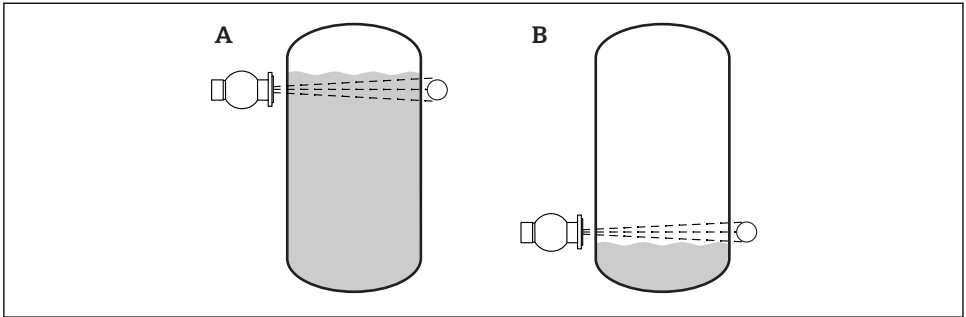

A0018075

A *Maximum point level detection*

B *Minimum point level detection*

3.2.5 Installation conditions for density measurement

Conditions


- If possible, density should be measured on vertical pipes with forward flow from bottom to top.
- If only horizontal pipes are accessible, the path of the beam should also be arranged horizontally to minimize the influence of air bubbles and deposits.
- The Endress+Hauser clamping device or an equivalent clamping device should be used to fasten the source container and the Gammapilot FMG50 to the measuring pipe.
The clamping device itself must be installed in such a way as to withstand the weight of the source container and the Gammapilot FMG50 under all anticipated operating conditions.
- The sample point may not be further than 20 m (66 ft) from the measuring point.
- The distance of the density measurement to pipe bends is $\geq 3 \times$ pipe diameter, and $\geq 10 \times$ pipe diameter in the case of pumps.

Measuring system arrangement

The arrangement of the source container and the Gammapilot FMG50 depends on the pipe diameter (or the radiated length) and the density measuring range. These two parameters determine the measuring effect (relative change in the pulse rate). The longer the radiated length, the greater the measuring effect. Therefore, it is advisable to use diagonal irradiation or a measurement section for small pipe diameters.


To select the measuring system arrangement please contact your Endress+Hauser sales organization or use the Applicator™¹⁾

1) configuration software. The Applicator™ is available from your Endress+Hauser sales organization.

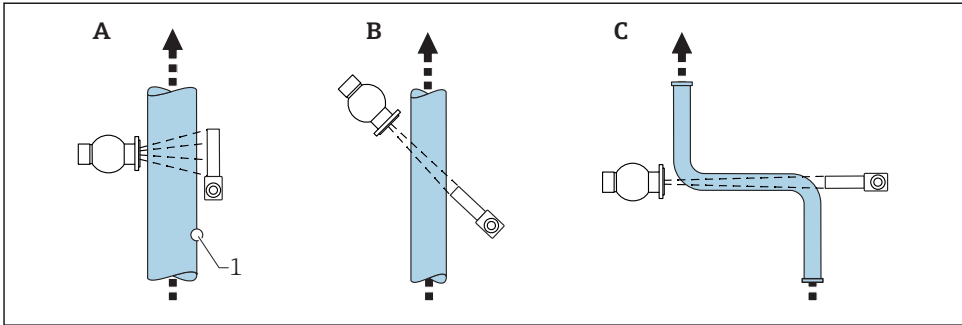

A0018076

- A Vertical beam (90°)
 B Diagonal beam (30°)
 C Measurement section
 1 Sample point

-  To increase the accuracy of density measurements, the use of a collimator is recommended. The collimator screens the detector against background radiation.
- When planning, the total weight of the measuring system must be taken into consideration.
- A clamping device is available as an accessory
- When the Gammapilot FMG50 is installed upside-down, it can be given additional support (retaining bracket) to prevent damage to the connecting cable or to the unit if it falls.

3.2.6 Installation conditions for interface measurement

Conditions

For interface measurement, the Gammapilot FMG50 is typically mounted horizontally at the upper or lower limit of the interface range. When introducing a radiation source into an immersion tube, it is important to ensure that the measuring range is already filled with medium in order to keep the radiation in the vicinity of the source as low as possible. When a radiation source is used in an immersion tube, the radiation can only be aligned with the measuring range of the Gammapilot FMG50 using a collimator on the immersion tube.

Description

The measuring principle is based on the fact that the radiation source emits radiation which is attenuated when it penetrates a material and the medium to be measured. In radiometric interface measurement, the radiation source is often introduced into a closed, double-wall immersion tube via a cable extension. This excludes the possibility of contact between the radiation source and the medium.

Depending on the measuring range and the application, one or several detectors are mounted on the outside of the vessel. The average density of the medium between the radiation source and the detector is calculated from the radiation received. A direct correlation to the position of the interface can then be derived from this density value.

For more information, see:

CP01205F/00/EN

3.2.7 Installation conditions for density profile measurement (DPS)**Conditions**

For density profile measurement, Gammapilot FMG50 devices are installed horizontally at defined distances, depending on the size of the measuring range. In the case of density profile measurement, the radiation source is normally inserted in an immersion tube, preferably one that is double-walled, and introduced into the vessel. When introducing a radiation source into an immersion tube, it is important to ensure that the measuring range is already filled with medium in order to keep the radiation in the vicinity of the source as low as possible.

Description

To obtain detailed information on the distribution of layers of different densities in a vessel, a density profile is measured using a multi-detector solution. Several FMG50 devices are installed next to one another on the outside of the vessel wall for this purpose. The measuring range is divided into zones and each compact transmitter measures the density value in its respective zone. A density profile is derived from these values.

This results in a high-resolution measurement of the distribution of medium layers (e.g. in separators)

For more information, see:

CP01205F/00/EN

3.2.8 Installation conditions for concentration measurement**Conditions**


- If possible, the concentration should be measured on vertical pipes with forward flow from bottom to top.
- If only horizontal pipes are accessible, the path of the beam should also be arranged horizontally to minimize the influence of air bubbles and deposits.
- The Endress+Hauser clamping device or an equivalent clamping device should be used to fasten the source container and the Gammapilot FMG50 to the measuring pipe.
The clamping device itself must be installed in such a way as to withstand the weight of the source container and the Gammapilot FMG50 under all anticipated operating conditions.
- When the Gammapilot FMG50 is installed upside-down, it can be given additional support (retaining bracket) to prevent damage to the connecting cable or to the unit if it falls.
- The sample point may not be further than 20 m (66 ft) from the measuring point.
- The distance of the density measurement to pipe bends is $\geq 3 \times$ pipe diameter, and $\geq 10 \times$ pipe diameter in the case of pumps.

Measuring system arrangement

The arrangement of the source container and the Gammapilot FMG50 depends on the pipe diameter (or the radiated length) and the density measuring range. These two parameters


determine the measuring effect (relative change in the pulse rate). The longer the radiated length, the greater the measuring effect. Therefore, it is advisable to use diagonal irradiation or a measurement section for small pipe diameters.

For the configuration of the measuring system, please contact your Endress+Hauser sales organization or use the Applicator™¹⁾ configuration program.

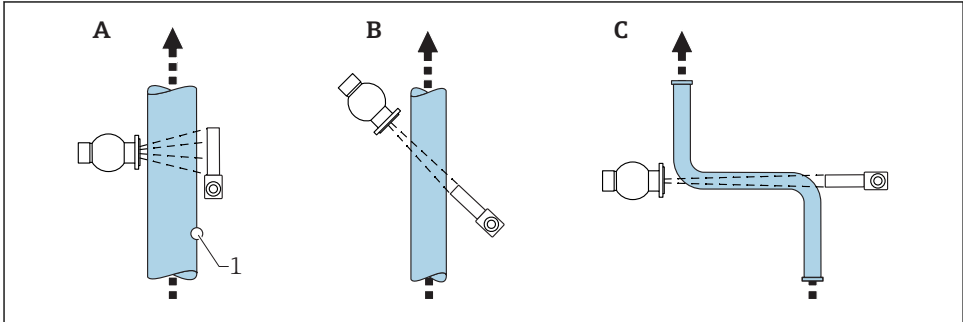

A0018076

- A Vertical beam (90°)
- B Diagonal beam (30°)
- C Measurement section
- 1 Sample point

-  When planning, the total weight of the measuring system must be taken into consideration.
 - The Gammapilot FMG50 can be given additional support (retaining bracket) to secure it against falling or to prevent damage to the connecting cable.
 - A clamping device is available as an accessory

3.2.9 Installation conditions for concentration measurement with radiating media

Measurement of the concentration of radiating media in vessels

The concentration of radiating media in vessels can be determined by taking a measurement at the vessel wall. The intensity of the radiation received is proportional to the concentration of the radiating medium in the vessel. It is important to note that the medium in the vessel also absorbs its own radiation. The detected radiation will not increase further with larger diameters and the signal is saturated. This saturation length depends on the half-value layer of the material.

The level in the vessel must be constant in the vicinity of the detector to ensure the measurement is correct.

Measurement of the mass flow of radiating media


In the case of belt scales and pipes, the concentration of the radiating medium can be measured in the sample. Here, the device is mounted above or below the conveyor belt so that it is parallel to the belt direction, or is mounted on the pipe. The intensity of the radiation

received is proportional to the concentration of the radiating medium in the conveyed material.

3.2.10 Installation conditions for flow measurement

Measurement of mass flow (liquids)

The density signal determined by the Gammapilot FMG50 is transmitted to the Promag 55S. The Promag 55S measures the volume flow; the Promag can determine a mass flow in connection with the calculated density value.

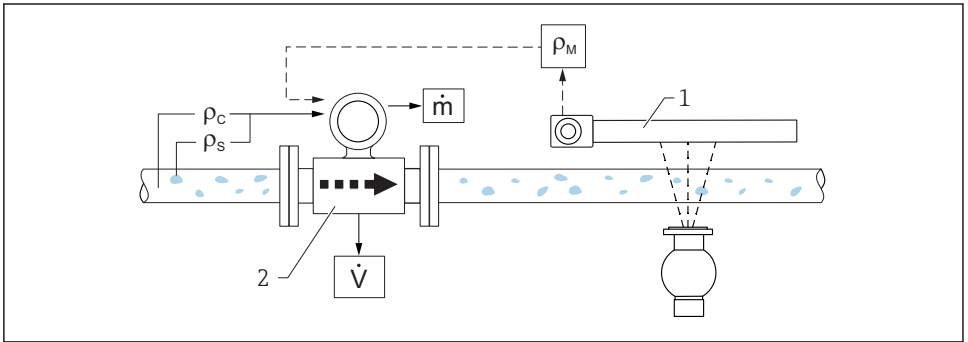

A0018093


1 Mass flow measurement (m) using a density meter and a flowmeter. If the density of the solids (ρ_s) and the density of the carrier liquid (ρ_c) are also known, the solids flow rate can be calculated.

- 1 Gammapilot FMG50 -> total density (ρ_m) consisting of the carrier liquid and solids
- 2 Flowmeter (Promag 55S) -> volume flow (V). The solids density (ρ_s) and the density of the carrier liquid (ρ_c) also have to be entered in the transmitter

Measurement of mass flow (solids)

Bulk solids applications on conveyor belts and conveyor screws.

The source container is positioned above the conveyor belt and the Gammapilot FMG50 below the conveyor belt. The radiation is attenuated by the medium on the conveyor belt. The intensity of the radiation received is proportional to the density of the medium. The mass flow is calculated from the belt speed and the radiation intensity.

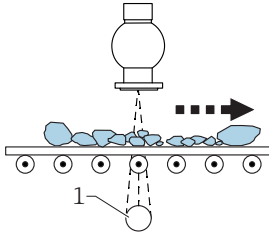

A0036637

1 Gammapilot FMG50


3.3 Post-installation check

After installing the measuring device, carry out the following checks:

- Is the device damaged (visual inspection)?
- Does the device match the measuring point specifications (ambient temperature, measuring range etc.)?
- If available: are the measuring point number and labeling correct (visual inspection)?
- Is the measuring device sufficiently protected against sunlight?
- Are the cable glands tightened correctly?

4 Electrical connection

4.1 Connection compartment

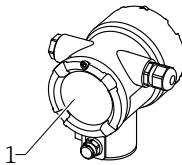


A0038877


1 Connection compartment

4.2 4 to 20 mA HART connection

Connection of the device with HART communication, power source and 4 to 20 mA display

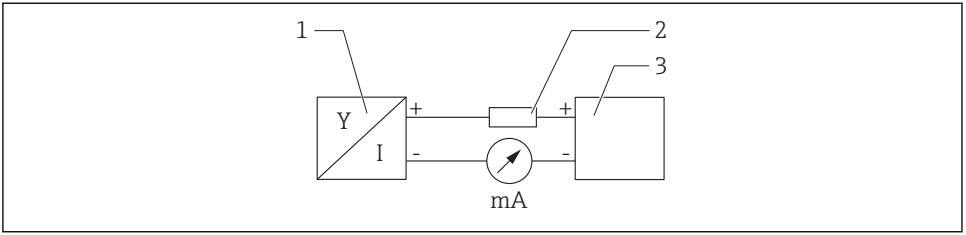

A0028908

 2 Block diagram of HART connection

- 1 Device with HART communication
- 2 HART resistor
- 3 Power supply




The HART communication resistor of 250 Ω in the signal line is always necessary in the case of a low-impedance power supply.


The voltage drop to be taken into account is:

Max. 6 V for 250 Ω communication resistor

4.3 Terminal assignment

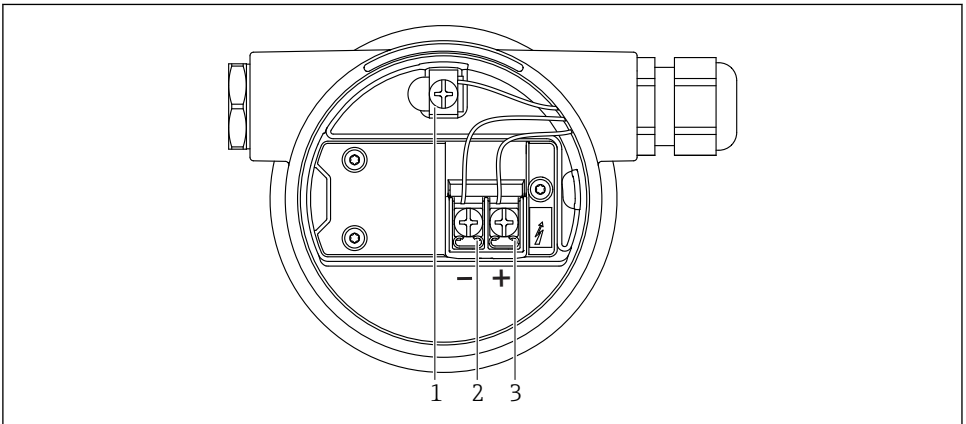


A0038895

 3 Connection terminals and ground terminal in the connection compartment

- 1 Internal ground terminal (to ground the cable shield)
- 2 Negative terminal
- 3 Positive terminal

- Non-Ex: supply voltage: 16 to 35 VDC
- Ex-i: supply voltage: 16 to 30 VDC

4.4 Cable entries

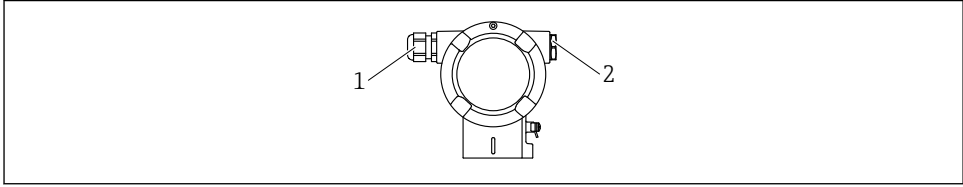

A0038156

- 1 Cable entry
- 2 Dummy plug

The number and type of cable entries depend on the device version ordered. The following are possible:


- M20 threaded joint, plastic, IP66/68 NEMA Type 4X/6P
- M20 threaded joint, nickel-plated brass, IP66/68 NEMA Type 4X/6P
- M20 threaded joint, 316L, IP66/68 NEMA Type 4X/6P
- M20 thread, IP66/68 NEMA Type 4X/6P
- G1/2 thread, IP66/68 NEMA Type 4X/6P, with enclosed M20 to G1/2 adapter
- NPT1/2 thread, IP66/68 NEMA Type 4X/6P
- M12 plug, IP66/68 NEMA Type 4X/6P
- HAN7D plug, 90 deg. IP65 NEMA Type 4x

i Connecting cables should be routed away from the housing from below to prevent moisture from penetrating the connection compartment. Otherwise, a drip loop should be provided or a weather protection cover should be used.

i Please follow the enclosed installation instructions if a G1/2 entry is used.

4.5 Potential equalization

Before wiring, connect the potential matching line to the ground terminal.

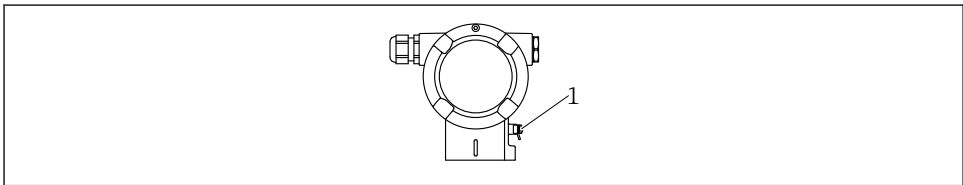

A0038024

- 1 Ground terminal for connecting the potential matching line

⚠ CAUTION

- ▶ Please refer to the separate documentation on applications in hazardous areas for the safety instructions



For optimum electromagnetic compatibility, the potential matching line should be as short as possible and at least 2.5 mm² (14 AWG) in cross-section.

4.6 Rated cross-section

Protective ground or grounding of the cable shield: rated cross-section > 1 mm² (17 AWG)

Rated cross-section of 0.5 mm² (AWG20) to 2.5 mm² (AWG13)

4.7 Wiring

⚠ CAUTION**Note the following before connecting:**

- ▶ If the device is used in hazardous areas, make sure to comply with national standards and the specifications in the Safety Instructions (XAs). The specified cable gland must be used.
- ▶ The supply voltage must match the specifications on the nameplate.
- ▶ Switch off the supply voltage before connecting the device.
- ▶ Connect the potential matching line to the external ground terminal of the transmitter before connecting the device.
- ▶ Connect the protective ground to the protective ground terminal.
- ▶ The cables must be adequately insulated, with due consideration given to the supply voltage and the overvoltage category.
- ▶ The connecting cables must offer adequate temperature stability, with due consideration given to the ambient temperature.

1. Release the cover lock
2. Unscrew the cover
3. Guide the cables into the cable glands or cable entries
4. Connect the cables
5. Tighten the cable glands or cable entries so that they are leak-tight
6. Screw the cover securely back onto the connection compartment
7. Tighten the cover lock

4.8 Post-connection check

After wiring the device, carry out the following checks:

- Is the potential matching line connected?
- Is the terminal assignment correct?
- Are the cable glands and dummy plugs screwed tight?
- Are the fieldbus connectors properly secured?
- Are the covers screwed down correctly?


⚠ WARNING

- ▶ Only operate the device with the covers closed

5 Operation

5.1 Overview of the HART operating options

5.1.1 Via HART protocol

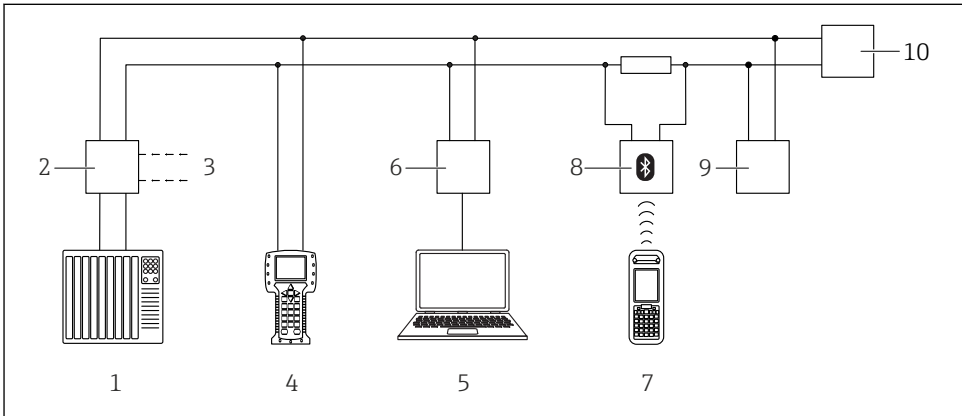

A0039185

📌 4 Options for remote operation via HART protocol

- 1 PLC (programmable logic control)
- 2 Transmitter power supply unit, e.g. RN221N (with communication resistor)
- 3 Connection for Commubox FXA191, FXA195 and Field Communicator 375, 475
- 4 Field Communicator 475
- 5 Computer with operating tool (e.g. DeviceCare/FieldCare, AMS Device Manager, SIMATIC PDM)
- 6 Commubox FXA191 (RS232) or FXA195 (USB)
- 7 Field Xpert SFX350/SFX370
- 8 VIATOR Bluetooth modem with connecting cable
- 9 RIA15
- 10 Transmitter

5.1.2 Operation via FieldCare/DeviceCare

FieldCare/DeviceCare is an Endress+Hauser asset management tool based on FDT technology. With FieldCare/DeviceCare you can configure all Endress+Hauser devices as well as devices from other manufacturers that support the FDT standard. Hardware and software requirements can be found on the Internet:

www.de.endress.com -> Search: FieldCare -> FieldCare -> Technical data

FieldCare supports the following functions:

- Configuration of transmitters in online mode
- Loading and saving device data (upload/download)
- Documentation of the measuring point

Connection options:

- HART via Commubox FXA195 and USB interface of a computer
- Commubox FXA291 via the service interface

5.1.3 Operation via RIA 15 (remote display)

Loop-powered process indicator to display HART or 4 to 20 mA signals

5.1.4 Operation via WirelessHART


SWA70 WirelessHART adapter with the Commubox FXA195 and the "FieldCare/DeviceCare" operating program

5.2 Alternative operation options

The measuring device can be configured and query measured values in a variety of ways.

5.2.1 Local operation

The device can also be operated on site using the keys. If operation is locked using the DIP switches on site, parameter entry via communication is not possible.

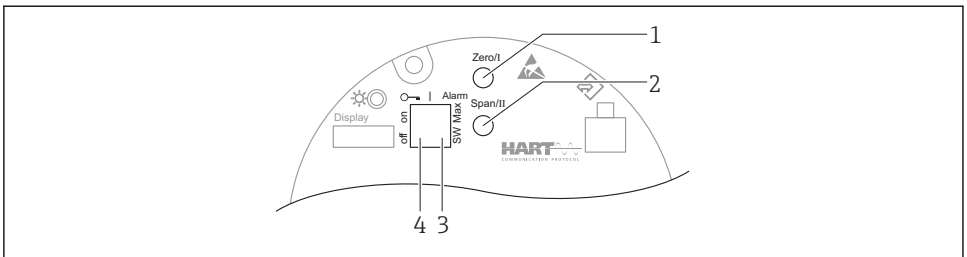

A0039285


- 1 Operating key for empty calibration (function I)
- 2 Operating key for full calibration (function II)
- 3 DIP switch for alarm current (SW-defined/Max. alarm)
- 4 DIP switch for locking and unlocking the measuring device



Operation via keys is only active if a display is not attached

5.2.2 Operation via the service interface

DeviceCare/FieldCare via service interface (CDI)

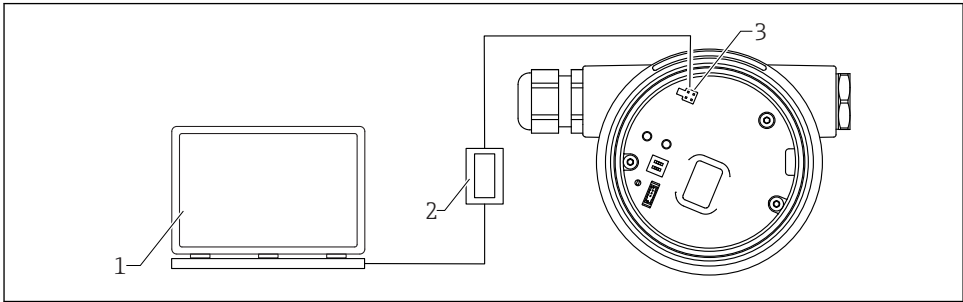


A0038834

5 DeviceCare/FieldCare via service interface (CDI)

- 1 Computer with DeviceCare/FieldCare operating tool
- 2 Commubox FXA291
- 3 Service interface (CDI) of the measuring device (= Endress+Hauser Common Data Interface)

5.2.3 Operation via RIA15

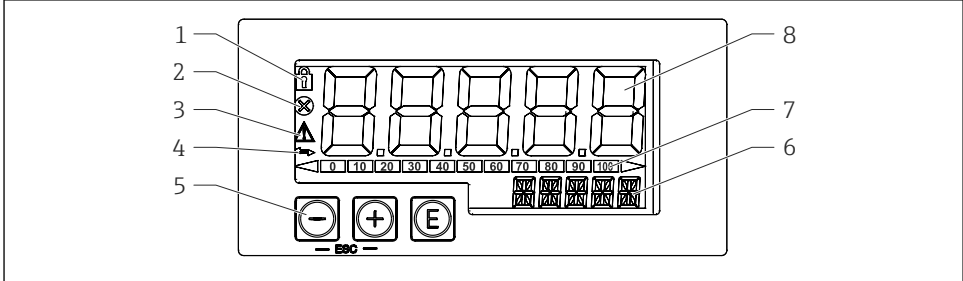

A0017719

6 Display and operating elements of the process indicator

- 1 Symbol: operating menu disabled
- 2 Symbol: error
- 3 Symbol: warning
- 4 Symbol: HART communication active
- 5 Operating keys
- 6 14-segment display for unit/TAG
- 7 Bar graph with indicators for under range and over range
- 8 5-digit 7-segment display for measured value, digit height 17 mm (0.67 in)

The device is operated using three operating keys on the front of the housing.



Enter key; for calling up the operating menu, confirming the selection/configuration of parameters in the operating menu



Selection and configuration/changing of values in the operating menu; pressing the '+' and '-' keys simultaneously takes the user back up a menu level. The configured value is not saved.




Additional information is available in the Operating Instructions for the RIA15

5.2.4 Operation via Bluetooth® wireless technology

Requirements

Optional, only for devices with a display with Bluetooth capability:

Feature 030 "Display, operation", option D "Basic display+Bluetooth"

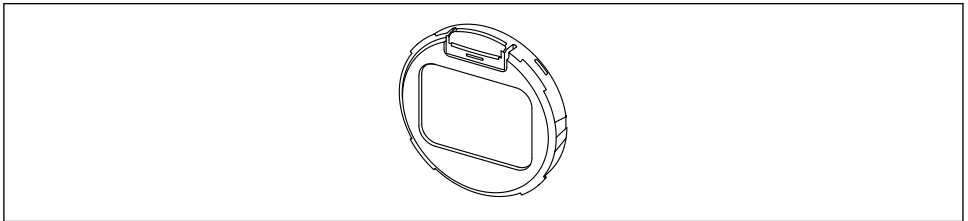


A0039243

7 *Display with Bluetooth module*



A flashing Bluetooth symbol indicates that a Bluetooth connection is available

Operation via SmartBlue (app)

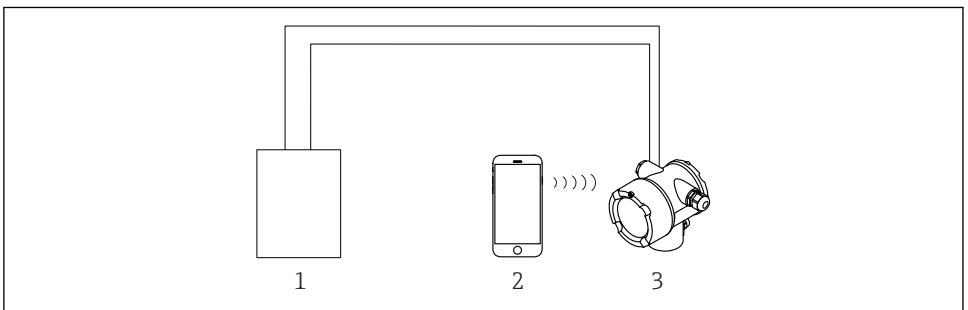

A0038833

8 *Operation via SmartBlue (app)*

- 1 *Transmitter power supply unit*
- 2 *Smartphone / tablet with SmartBlue (app)*
- 3 *Transmitter with Bluetooth module*

5.2.5 Heartbeat Verification/Monitoring



Heartbeat submenu is only available if operating via **FieldCare** or **DeviceCare**. It contains wizards that are available with the **Heartbeat Verification** and **Heartbeat Monitoring** application packages.



SD02414F

5.3 Locking/unlocking configuration

5.3.1 Software locking

Locking via password in FieldCare / DeviceCare / Smartblue

Access to the configuration of the FMG50 can be locked by assigning a password. The "User role" is set to "Maintainer" in the as-delivered state. The device can be fully configured in the "Maintainer" role. Afterwards, access to the configuration can be locked by assigning a password. The "User Role" is now set to "Operator". The configuration can be accessed by entering the password.

The password is defined under:

System -> User management -> Define password

You can switch from the "Maintainer" to "Operator" user role under:

System -> User management -> Logout

Deactivating the lock via FieldCare / DeviceCare / Smartblue

After entering the password, you can enable the configuration of the FMG50 as an "Operator" with the password. The "User role" then changes to "Maintainer"

Navigate to:

System -> User management -> Change user role

5.3.2 Hardware locking

Hardware locking can only be unlocked via the main unit (flip the switch). It is not possible to unlock the hardware by communication.


5.4 Resetting to the default configuration

CAUTION

- ▶ A reset may negatively impact the measurement. As a rule, a basic setup must be performed again after a reset. All calibration data are deleted after a reset. A complete recalibration is needed to put the measurement back into operation.

1. Connect the device with FieldCare or DeviceCare.

2. Open the device in FieldCare or DeviceCare.
 - ↳ The dashboard (homepage) of the device is displayed:
Click "System -> Device management"

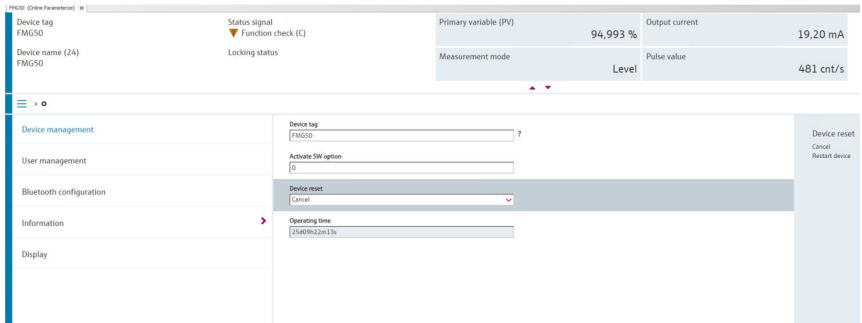

3. Reset the device in the "Device reset" parameter

The following types of reset can be selected:

- **Restart device**

A soft reset is performed here. The device software performs all the diagnostics that would also be performed by a hard reset by switching the device on/off.

- **Reset to factory default**

It is always advisable to reset the customer parameters if you want to use a device with an unknown history, or if the operating mode is changed. When a reset is performed, all customer parameters are reset to the factory default values

- **Optional: reset to customer settings**

If the device was ordered with a customized configuration, a reset restores these customer settings configured at the factory.



A reset can also be performed on site via the operating keys (see the "Commissioning via onsite operation" section).

6 Commissioning


6.1 Post-installation and post-connection check

Perform the post-installation check and the post-connection check for the FMG50 prior to commissioning the measuring point.

6.2 Commissioning using the Commissioning Wizard

A Wizard is provided in FieldCare or DeviceCare ²⁾ that guides the user through the initial commissioning process.


1. Connect the device with FieldCare or DeviceCare.
2. Open the device in FieldCare or DeviceCare.
 - ↳ The dashboard (homepage) of the device is displayed:

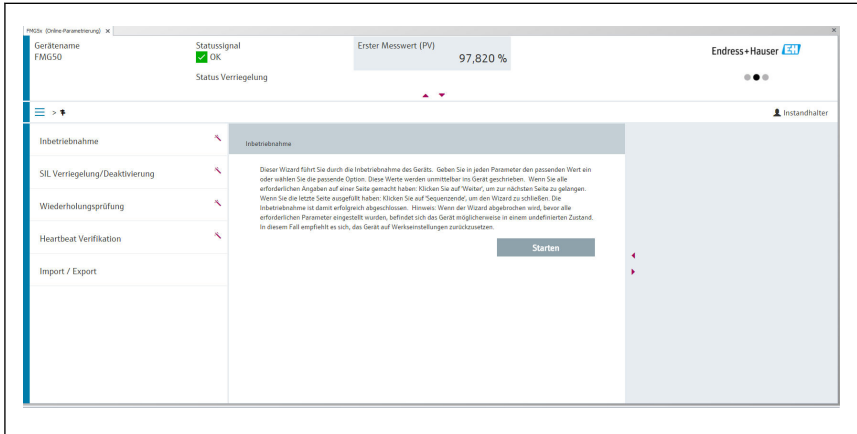

A0039359

 9 Screenshot: Commissioning Wizard

3. Click "Commissioning" to launch the Wizard.
4. Enter the appropriate value in each parameter or select the appropriate option. These values are written directly to the device.
5. Click "Next" to go to the next page.
6. Once all the pages have been completed, click "Finish" to close the Wizard.

 If you cancel the Wizard before all the necessary parameters have been entered, the device may be in an undefined state. In such situations, it is advisable to reset the device to the factory default settings.

6.3 Commissioning via SmartBlue (App)

6.3.1 Requirements

Device requirements

Commissioning via SmartBlue is only possible if the device has a Bluetooth module.

2) FieldCare and DeviceCare are available for download at www.software-products.endress.com. To download the software, it is necessary to register in the Endress+Hauser software portal.

SmartBlue system requirements

SmartBlue is available as download for Android devices from the Google Play Store and for iOS devices from the iTunes Store.


- Devices with iOS:
iPhone 4S or higher from iOS9.0; iPad2 or higher from iOS9.0; iPod touch 5th generation or higher from iOS9.0
- Devices with Android:
From Android 4.4 KitKat and *Bluetooth*® 4.0

Initial password

The serial number of the device is used as the initial password when establishing the connection for the first time. The serial number can be found on the nameplate.

6.3.2 SmartBlue app

1. Scan the QR code or enter "SmartBlue" in the search field of the App Store.

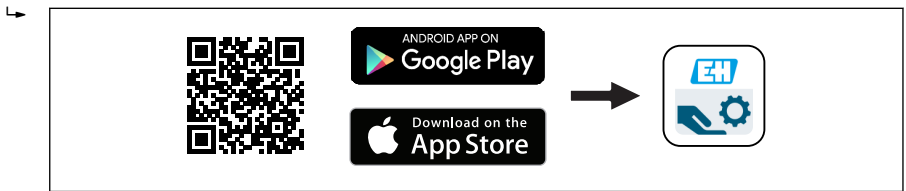

A0039186

 10 [Download link](#)


2. Start SmartBlue.
3. Select device from livelist displayed.
4. Enter the login data:
 - ↳ User name: admin
 - Password: serial number of the device
5. Tap the icons for more information.



After logging in for the first time, change the password!

6.4 Commissioning via on-site operation

The device can also be operated on site using the keys. If operation is locked using the DIP switch on site, parameter entry via communication is not possible.

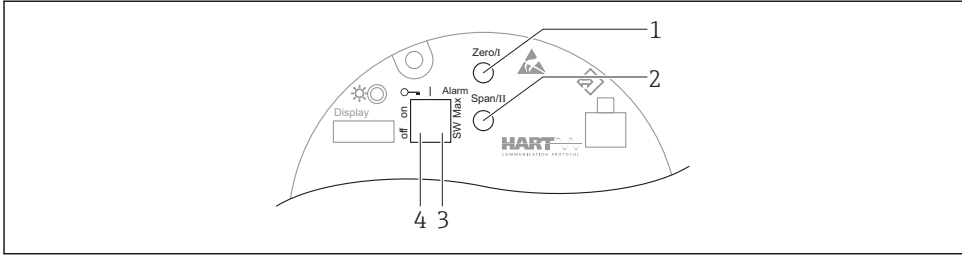

A0039285

- 1 Operating key for empty calibration (function I)
- 2 Operating key for full calibration (function II)
- 3 DIP switch for alarm current (SW-defined/Min. alarm)
- 4 DIP switch for locking and unlocking the measuring device

- **Empty calibration:** Press and hold the operating key for empty calibration (I) > 3 s
- **Full calibration:** Press and hold the operating key for full calibration (II) > 3 s
- **Background calibration:** Simultaneously press and hold the operating key for empty calibration (I) and the operating key for full calibration (II) > 3 s
- **Reset to factory defaults:** Simultaneously press and hold the operating key for empty calibration (I) and full calibration (II) > 12 s. The LED starts flashing. When the flashing stops, the device is reset to the factory default settings.



A reset deletes all calibrations!



Operation via keys is only active if a display is not attached

6.4.1 Status and power LEDs

A green LED that signals the supply, status and button activation feedback is provided on the electronic insert.

Behavior of the LED

- When the measuring device is started, the LED flashes slowly until the current output corresponds to the measured value
- After commissioning, the LED is lit constantly provided that the main device is switched on and a local display is not attached
- When a key is pressed, the LED flashes to confirm the key activation
- When a reset is performed, the LED flashes as long as both keys are pressed and the reset is not yet active (countdown). The LED stops flashing once the reset is active.
This LED is only active if a display is not attached

6.5 Operation and settings via RIA15



See the RIA15 Operating Instructions, BA01170K

6.6 Data access - Security

6.6.1 Locking via password in FieldCare / DeviceCare / Smartblue

The Gammapilot FMG50 can be locked and unlocked via a password (see the "Software locking" section)

6.6.2 Hardware locking

The Gammapilot FMG50 can be locked and unlocked via a switch on the main unit. Hardware locking can only be unlocked via the main unit (flip the switch). It is not possible to unlock the hardware by communication here.

6.6.3 Bluetooth® wireless technology (optional)

Signal transmission via Bluetooth® wireless technology uses a cryptographic technique tested by the Fraunhofer Institute

- The device is not visible via *Bluetooth*® wireless technology without the SmartBlue App.
- Only one point-to-point connection between **one** sensor and **one** smartphone or tablet is established.
- The *Bluetooth*® wireless technology interface can be deactivated via SmartBlue, FieldCare or DeviceCare.
- The *Bluetooth*® wireless technology interface can be reactivated via FieldCare or DeviceCare.
- It is not possible to reactivate the *Bluetooth*® wireless technology interface via the SmartBlue App.

6.6.4 RIA15 locking

The device setup can be locked with a 4-digit user code



Additional information is available in the Operating Instructions for the RIA15

6.7 Overview of the operating menu

A complete overview of the operating menu is provided in the "Description of Device Parameters" documentation.



GPO1141F

7 Maintenance and repair

7.1 Cleaning

When cleaning the exterior, always use cleaning agents that do not corrode the surface of the housing and the seals.

7.2 Repair

7.2.1 Repair concept

Under the Endress+Hauser repair concept, devices have a modular design and repairs are carried out by Endress+Hauser Service or by properly trained customers.

Spare parts are grouped into logical kits with the associated replacement instructions.

For more information on service and spare parts, please contact Endress+Hauser Service.

7.2.2 Repairs to Ex- or SIL-certified devices

The following information must also be taken into account when repairing devices with an Ex or SIL certificate:

- Only Endress+Hauser Service can repair devices with an Ex or SIL certificate.
- Comply with the prevailing standards, national Ex-area regulations, Safety Instructions (XA) and certificates.
- Only genuine Endress+Hauser spare parts may be used.
- A certified device may only be converted into a different certified device version by Endress+Hauser Service in Endress+Hauser workshops.
- All repairs and modifications must be documented.

7.3 Replacement

CAUTION

Data upload/download is not permitted if the device is used for safety-related applications.

- ▶ After an entire device or an electronics module has been replaced, the parameters can be downloaded to the device again via the communication interface. For this, the data must have been uploaded to the PC beforehand using the "FieldCare/DeviceCare" software.

7.3.1 Level measurement and point level detection

You can continue measuring without performing a new calibration. However, the calibration values should be checked as soon as possible since the mounting position may have changed slightly.

7.3.2 Density and concentration measurement

A new calibration must be performed after the replacement.

7.3.3 HistoROM

It is not necessary to perform a new device calibration after replacing the display or transmitter electronics. The parameters are saved in the HistoROM.



After replacing the transmitter electronics, remove the HistoROM and insert it into the new replacement part.

7.4 Spare parts

Enter the serial number into *W@M Device Viewer* (www.endress.com/deviceviewer).

All the spare parts for the measuring device, along with the order code, are listed here and can be ordered. If available, users can also download the associated Installation Instructions.



Serial number:

- Located on the device and spare part nameplate.
- Can be read out via the "Serial number" parameter in the "Device information" submenu.

7.5 Return

The measuring device must be returned if it is in need of repair or a factory calibration, or if the wrong measuring device has been delivered or ordered. Legal specifications require Endress+Hauser, as an ISO-certified company, to follow certain procedures when handling products that are in contact with the medium.

To ensure safe, swift and professional device returns, please refer to the procedure and conditions for returning devices provided on the Endress+Hauser website at <http://www.endress.com/support/return-material>

7.6 Disposal

Observe the following during disposal:

- Observe valid federal/national regulations.
- Ensure proper separation and reuse of the device components.



If required by the Directive 2012/19/EU on waste electrical and electronic equipment (WEEE), our products are marked with the depicted symbol in order to minimize the disposal of WEEE as unsorted municipal waste. Such products may not be disposed of as unsorted municipal waste and can be returned to Endress+Hauser for disposal at conditions stipulated in our General Terms and Conditions or as individually agreed.

7.6.1 Battery

The sensor contains a battery.



Batteries are hazardous goods and may be subject to customs duties, depending on the importing country to which the product is supplied

Battery disposal

Dispose of batteries according to local regulations. Recycle used batteries wherever possible.

7.7 Contact addresses at Endress+Hauser

Contact addresses are available at www.endress.com/worldwide or from your local Endress +Hauser branch office.

8 Certificates and approvals



The availability of approvals and certificates can be called up daily via the Product Configurator.

8.1 Safety Manual (SIL 2/3)

SIL 2/3 according to IEC 61508, see:
"Functional Safety Manual"



FY01007F

8.2 Ex approval

The Ex certificates available are listed in the ordering information. Observe the related Safety Instructions (XA) and Control Drawings (ZD).

8.2.1 Explosion-protected smartphones and tablets

Only mobile end devices with Ex approval may be used in hazardous areas.

8.3 Other standards and guidelines

- **IEC 60529**
Degrees of protection through housing (IP code)
- **IEC 61010**
Protection measures for electrical equipment for measurement, control, regulation and laboratory procedures
- **IEC 61326**
Interference emission (Class B equipment), interference immunity (Annex A – Industrial area)
- **IEC 61508**
Functional safety of safety-related electric/electronic/programmable electronic systems
- **NAMUR**
Association for Standards for Control and Regulation in the Chemical Industry

8.4 Certificates

The assignment of the versions and the availability of the approvals and certificates can be called up daily via the Product Configurator.

The Product Configurator can be accessed at: www.endress.com -> Select country -> Instruments -> Select device -> Advanced function: Product Configurator

8.5 CE mark

The measuring system meets the legal requirements of the EU Directives. Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.

8.6 EAC

Approval for EAC is pending

8.7 Overfill protection

WHG for point level detection is pending



71447251

www.addresses.endress.com
